 


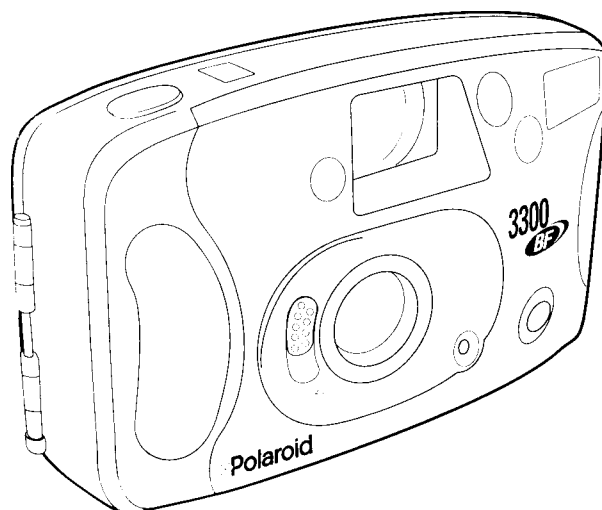

User Guide


3300*BF*

Contents


Attaching the Wrist Strap and Inserting the Batteries.....	1
Loading the Film.....	1
Setting the Date and Time Imprint.....	2
Holding the Camera.....	3
Using the Camera.....	3
Indoor and Outdoor Pictures.....	4
Backlighting.....	4
Rewinding and Removing the Film.....	5
Care and Storage.....	5

Attaching the Wrist Strap and Inserting the Batteries

 Page 1

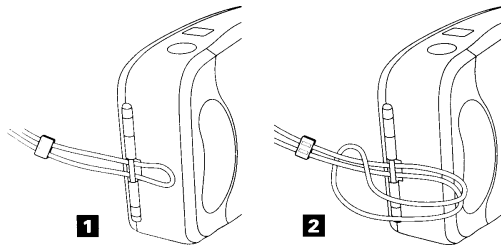


 To attach the wrist strap, insert the wrist strap through the ring on the side of the camera (1). Push the opposite end of the strap through the loop and pull (2).

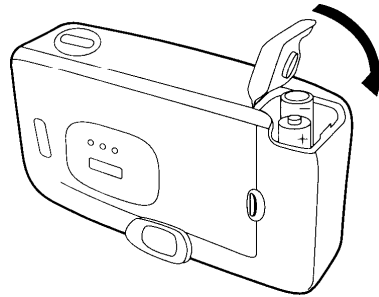


To insert the batteries, open the battery compartment on the bottom of the camera. Insert two AA-batteries (alkaline only) into the compartment as shown. Make sure the ends of the batteries are positioned according to the markings (+) and (-) inside the compartment cover.


Loading the Film

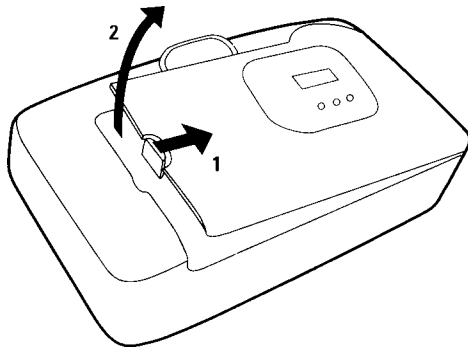

1. To open the film compartment, push the latch in the direction of the arrow (1) and lift open the door (2).

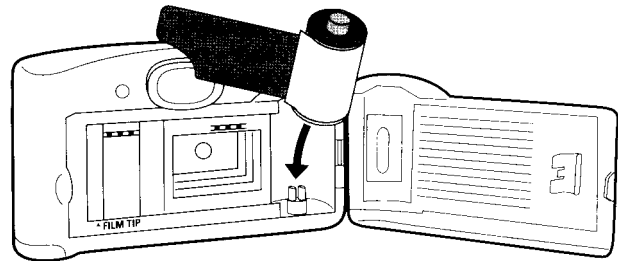


2. Insert a film cartridge into the chamber. Place the flat end of the cartridge over the white post in the chamber.

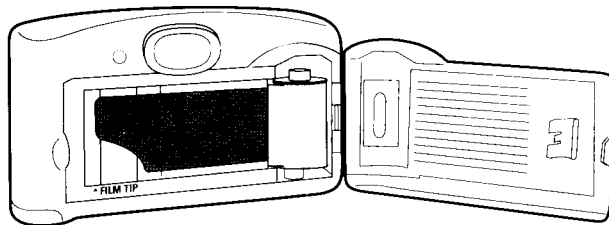

3. Pull the film leader until it reaches the film tip indicator (▲ **FILM TIP**). The best method is to hold the cartridge down with the right hand while pulling the film with the left.

Close the film compartment door until it clicks.

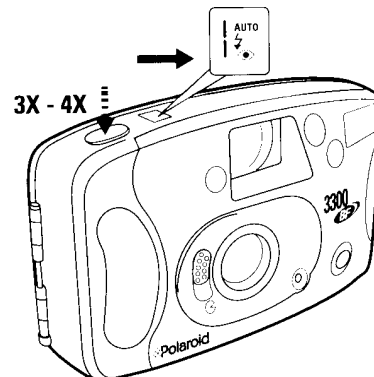


4. Press the shutter button three (3x) or four (4x) times until the number 1 appears in the status window.

Setting the Date and Time Imprint

Page 2


This feature allows you to include an imprint of the date and time in the picture. Do this by using the MODE, SELECT and SET buttons located on the film compartment cover. *Use the tip of a ballpoint pen to depress the buttons.*

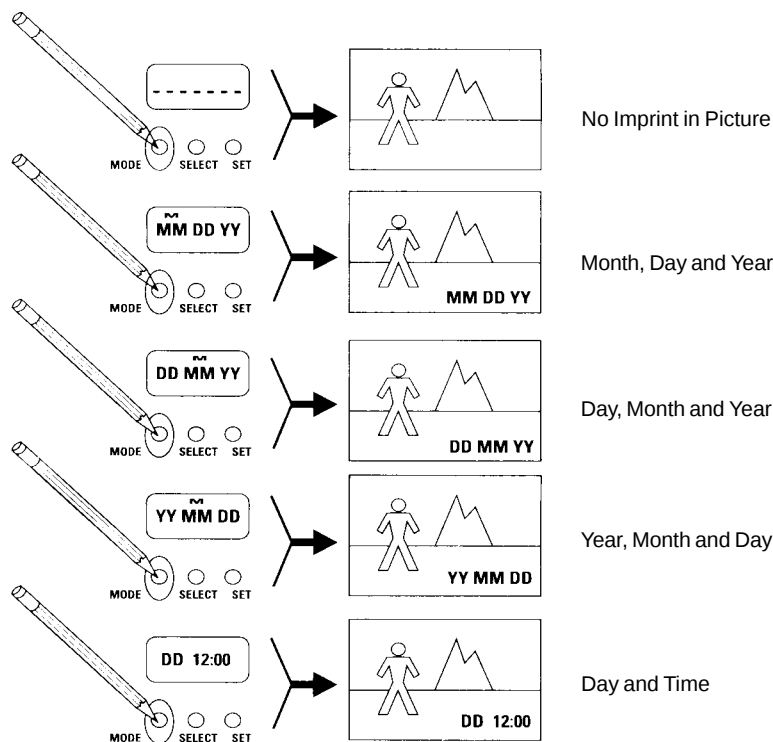

Choosing the mode

Choose the MODE by repeatedly pressing the MODE button until you reach the desired format. Each time this button is pressed, the format sequence will change as shown at left.

Example: Setting the Year, Month and Day

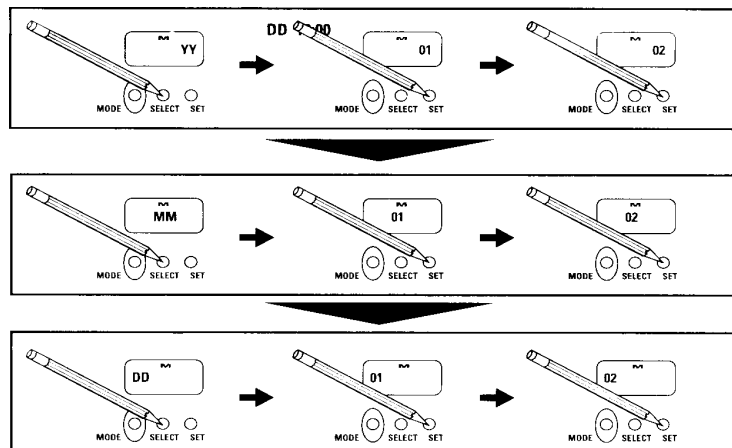

To set the Year:


1. Press the SELECT button until the Year (YY) blinks.
2. Press SET repeatedly until you reach the desired Year.

To set the Month:

1. Press the SELECT button until the Month (MM) blinks.
2. Press SET repeatedly until you reach the desired Month.

To set the Day:


1. Press the SELECT button until the Day (DD) blinks.
2. Press SET repeatedly until you reach the desired Day.

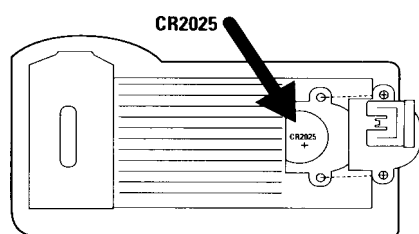


Note: One 3 V lithium battery (CR2025) powers the display. If the display becomes too dim to read, the battery should be replaced.

Holding the Camera


Page 3

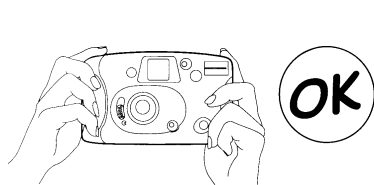

For horizontal pictures, grip the camera as shown.

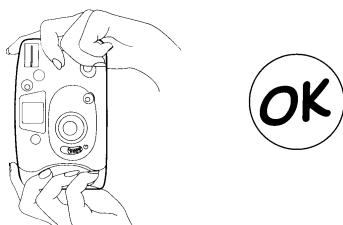


When positioning the camera for vertical pictures, make sure the flash is above the camera lens.

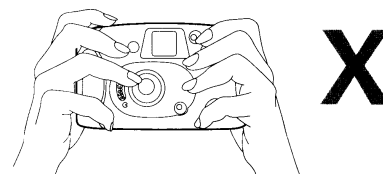


If your fingers block the flash, lens or sensing device, the pictures will be improperly exposed.


Using the Camera

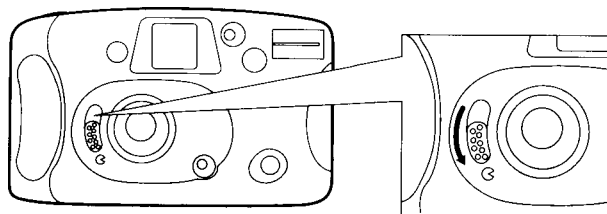


1. Slide the lens cover switch down. This will move the cover away from the lens and turn the camera ON.

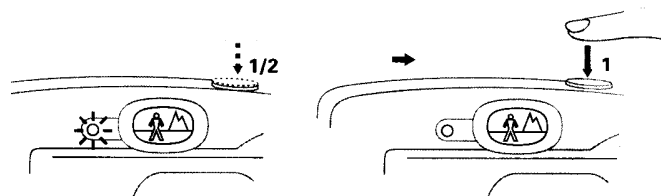


2. The green “flash-ready” light will come on. If the camera is inactive for period (about one minute), the green light will go out. To reactivate it, gently touch the shutter button (1/2). When the green light glows, push the shutter button all the way (1) to take the picture.

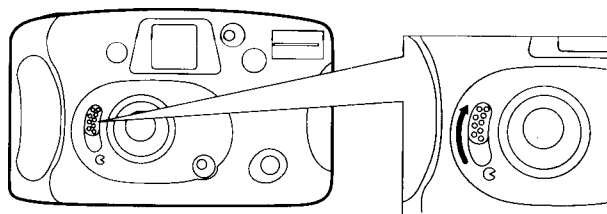

3. To close the lens cover and shut the camera OFF, slide the lens cover switch to the UP position.

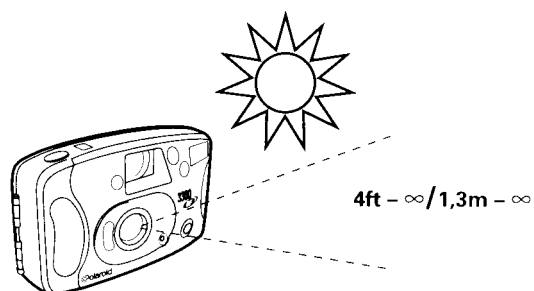


Outdoors, the camera will take sharp pictures from 4 feet (1.3m) to infinity.

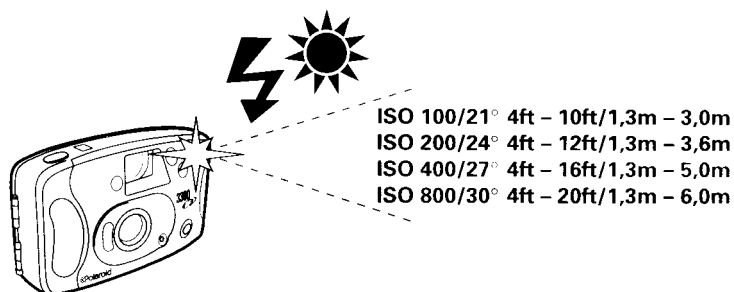


The indoor flash range will vary depending on the film type.

Backlighting

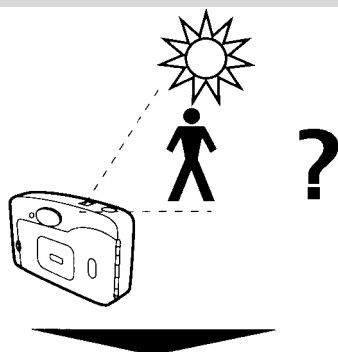


Backlighting

If bright sun is behind the subject (facing the camera lens) the exposure sensing device will be fooled and the picture will come out too dark.

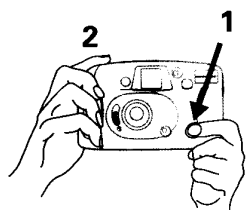

To compensate for this, press the "force flash" button (1), and while holding the "force flash" button (1) in, press the shutter button (2).

1 + 2 =

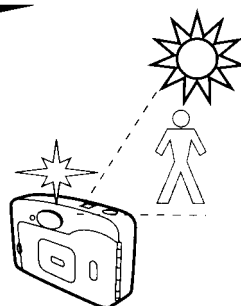


The flash will fire, providing sufficient illumination for proper exposure.




Rewinding and Removing the Film


Page 5

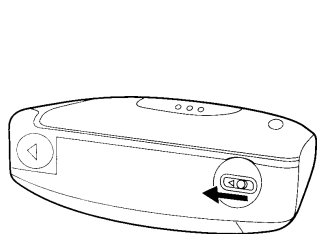

1. To activate the motorized rewind, slide the rewind switch (located at the bottom of the camera) in the direction shown.

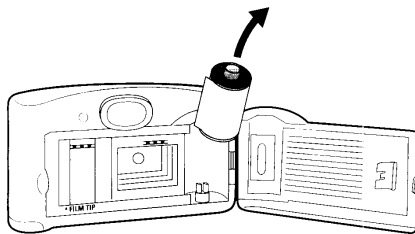


2. Open the film compartment door and remove the film.

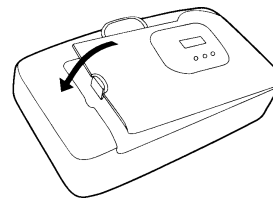


3. Close the film compartment door.


Care and Storage

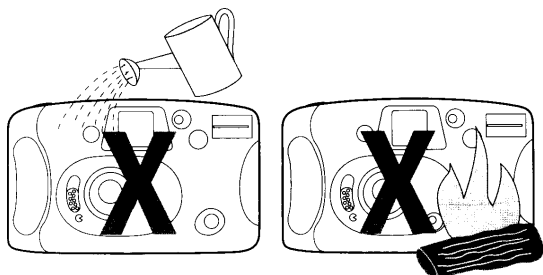


Avoid wet, damp conditions and extreme heat such as the trunk of the car.

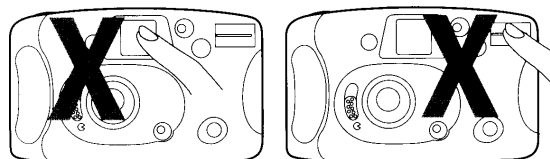

Do not touch the camera's viewfinder or flash.

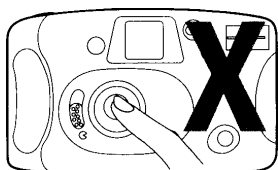

Do not touch the lens. This will cause smudges that may affect picture quality.

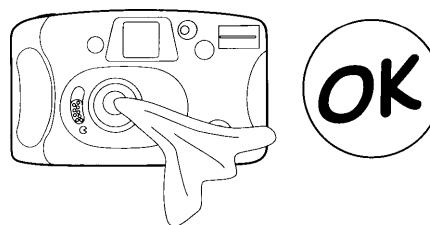

Use a clean, lint-free, non abrasive cloth to clean the lens. Never use soap or solvents.



For additional information on Polaroid Cameras & Film,
call us toll-free at 1-800-343-5000.

Or, visit our website - www.polaroid.com