

Fig. 98

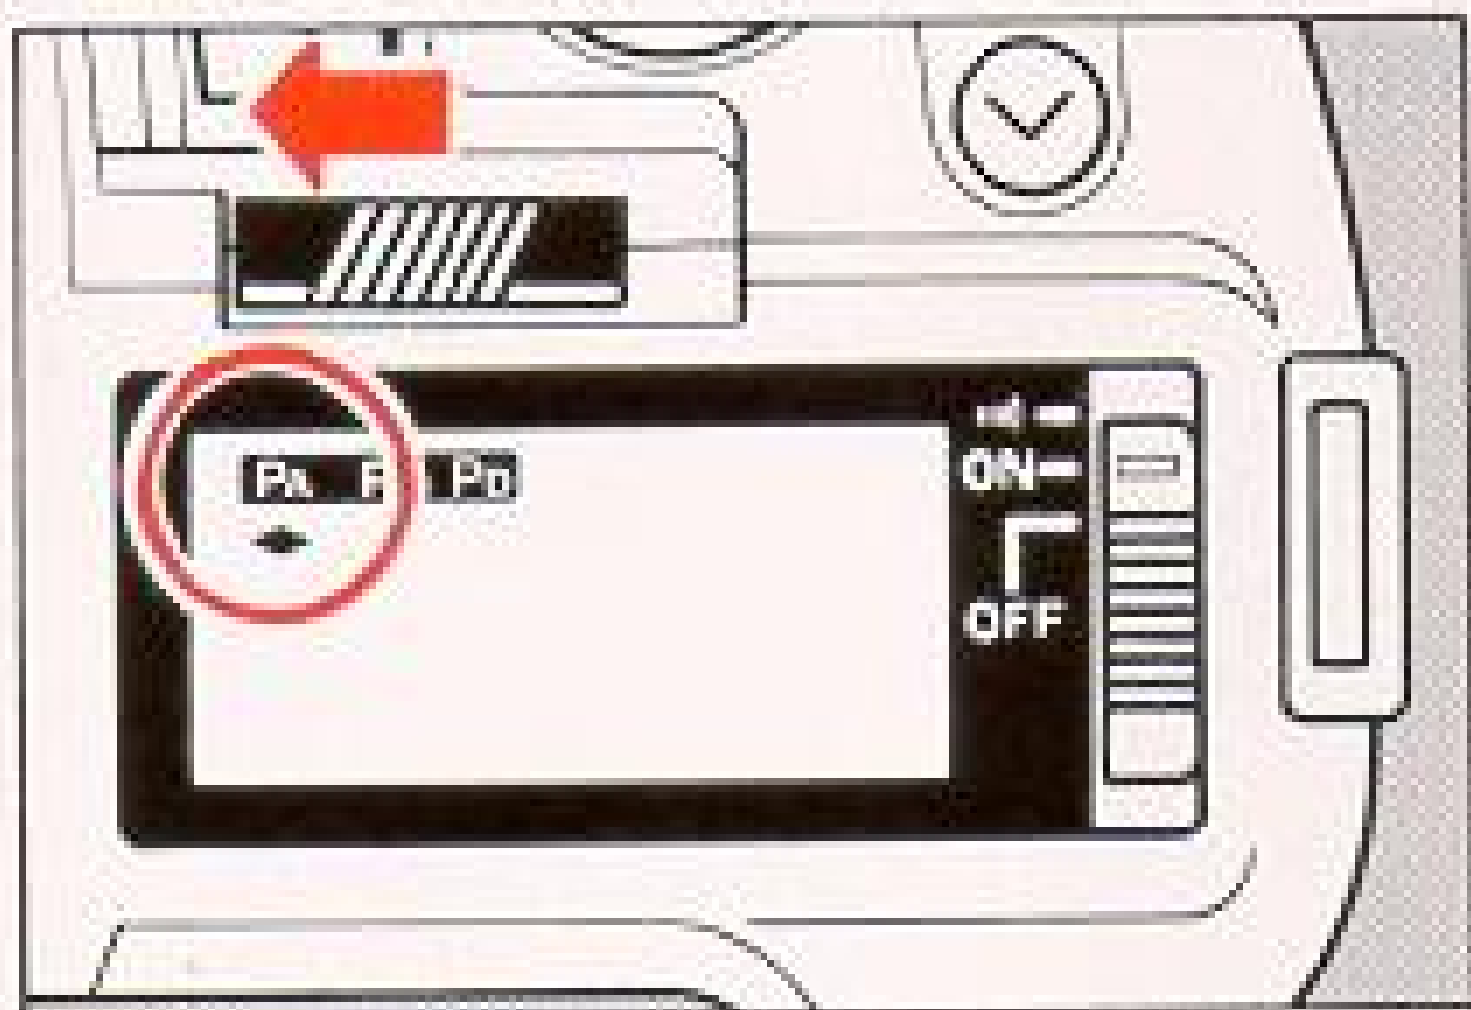


Fig. 99

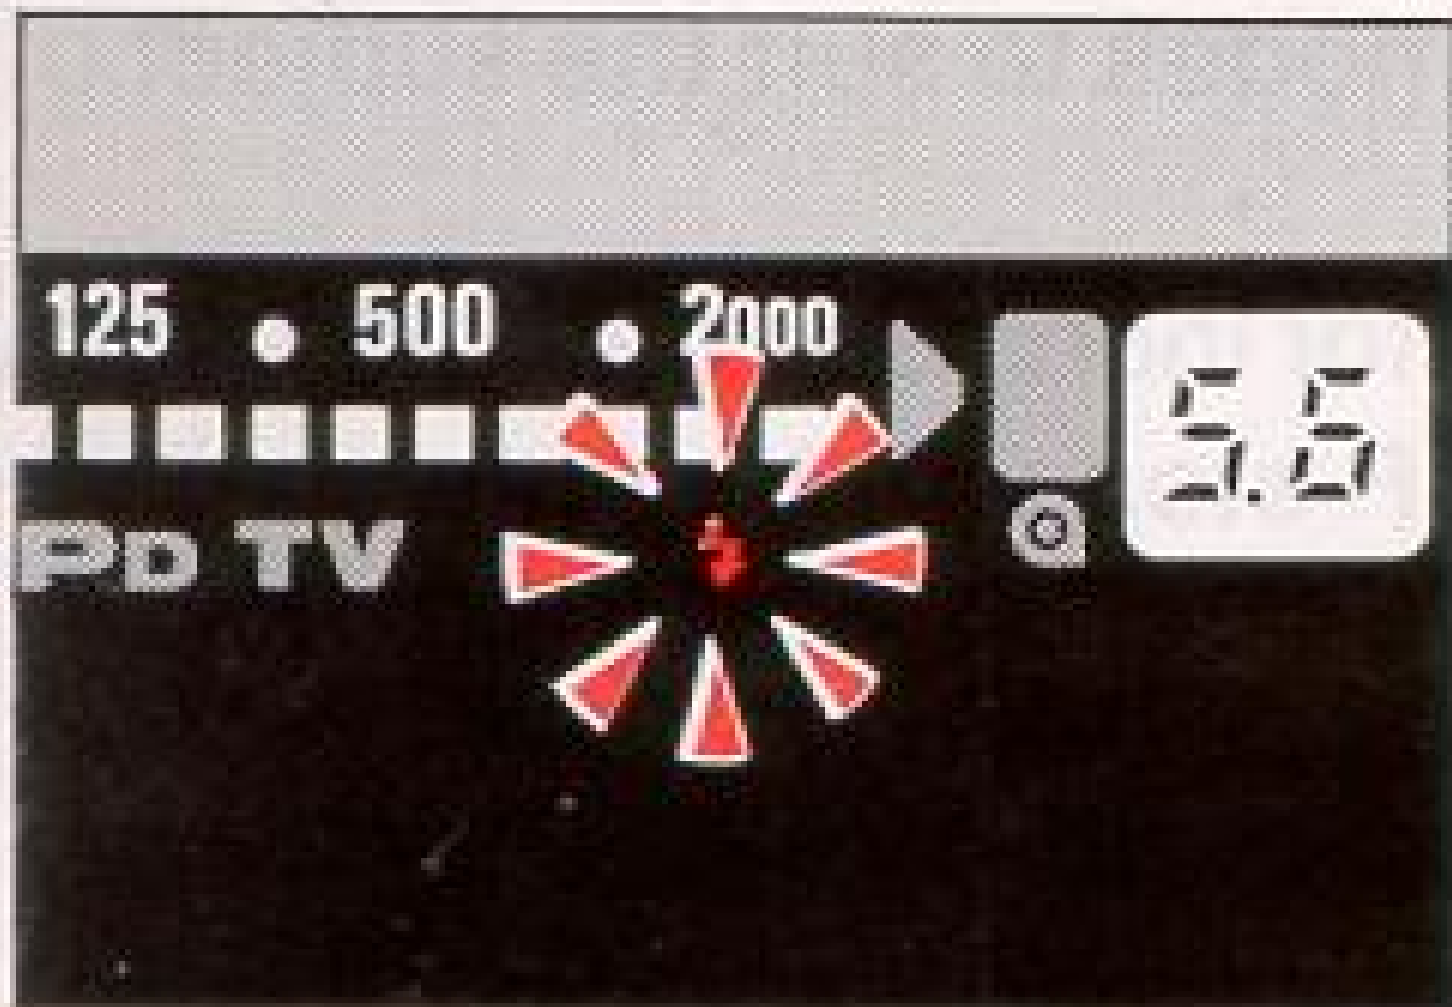


Fig. 100

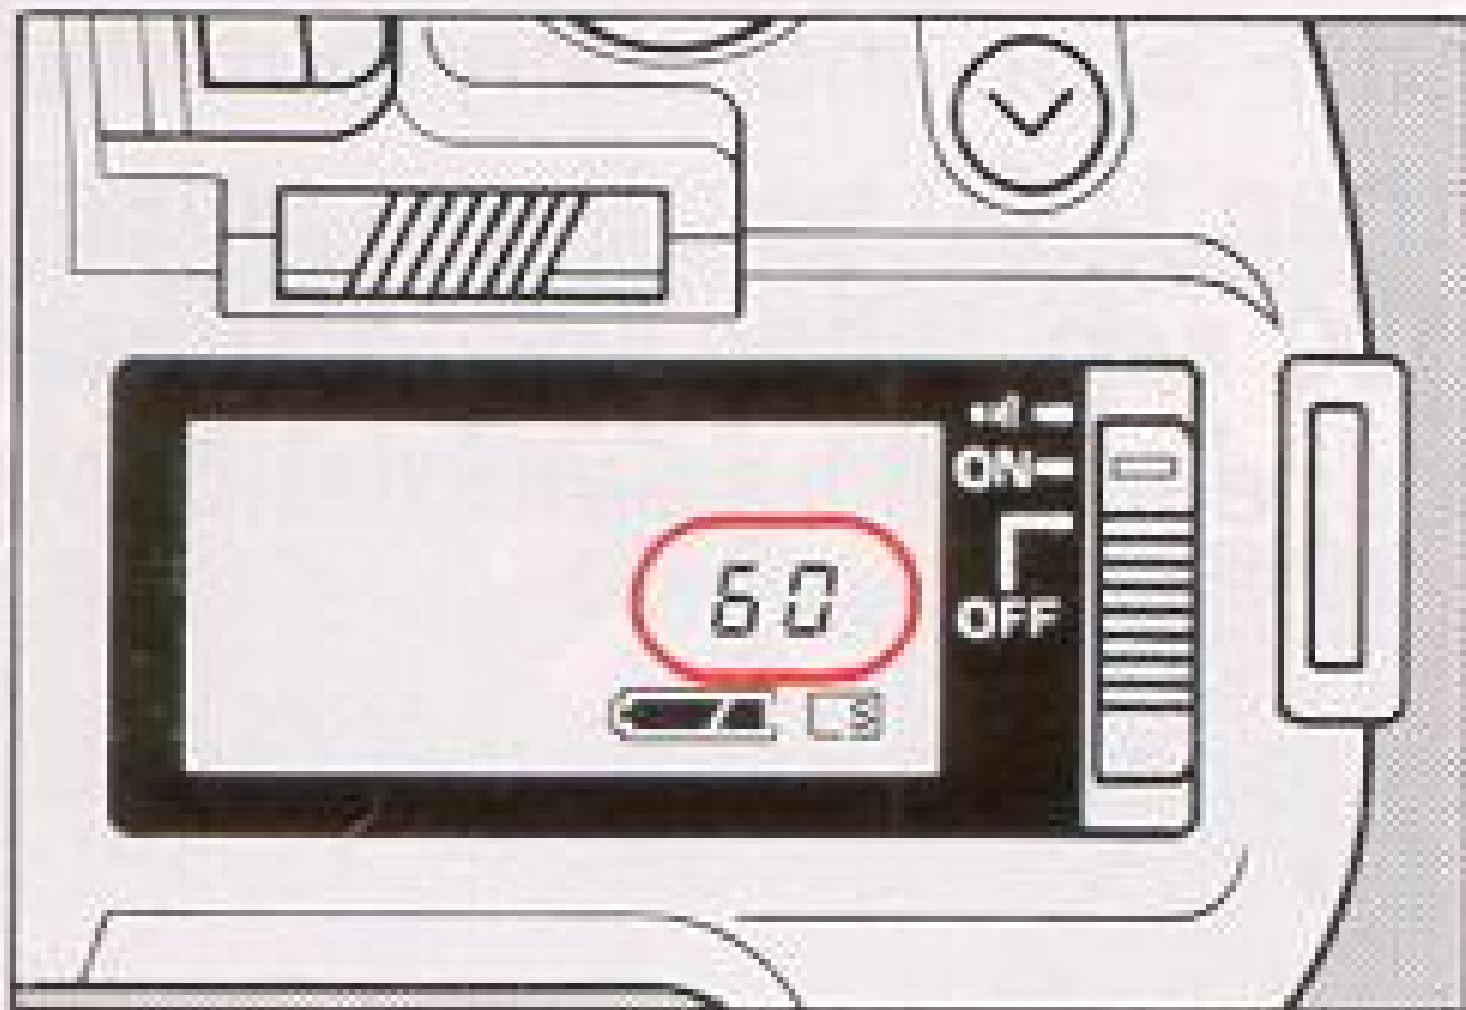


Fig. 102



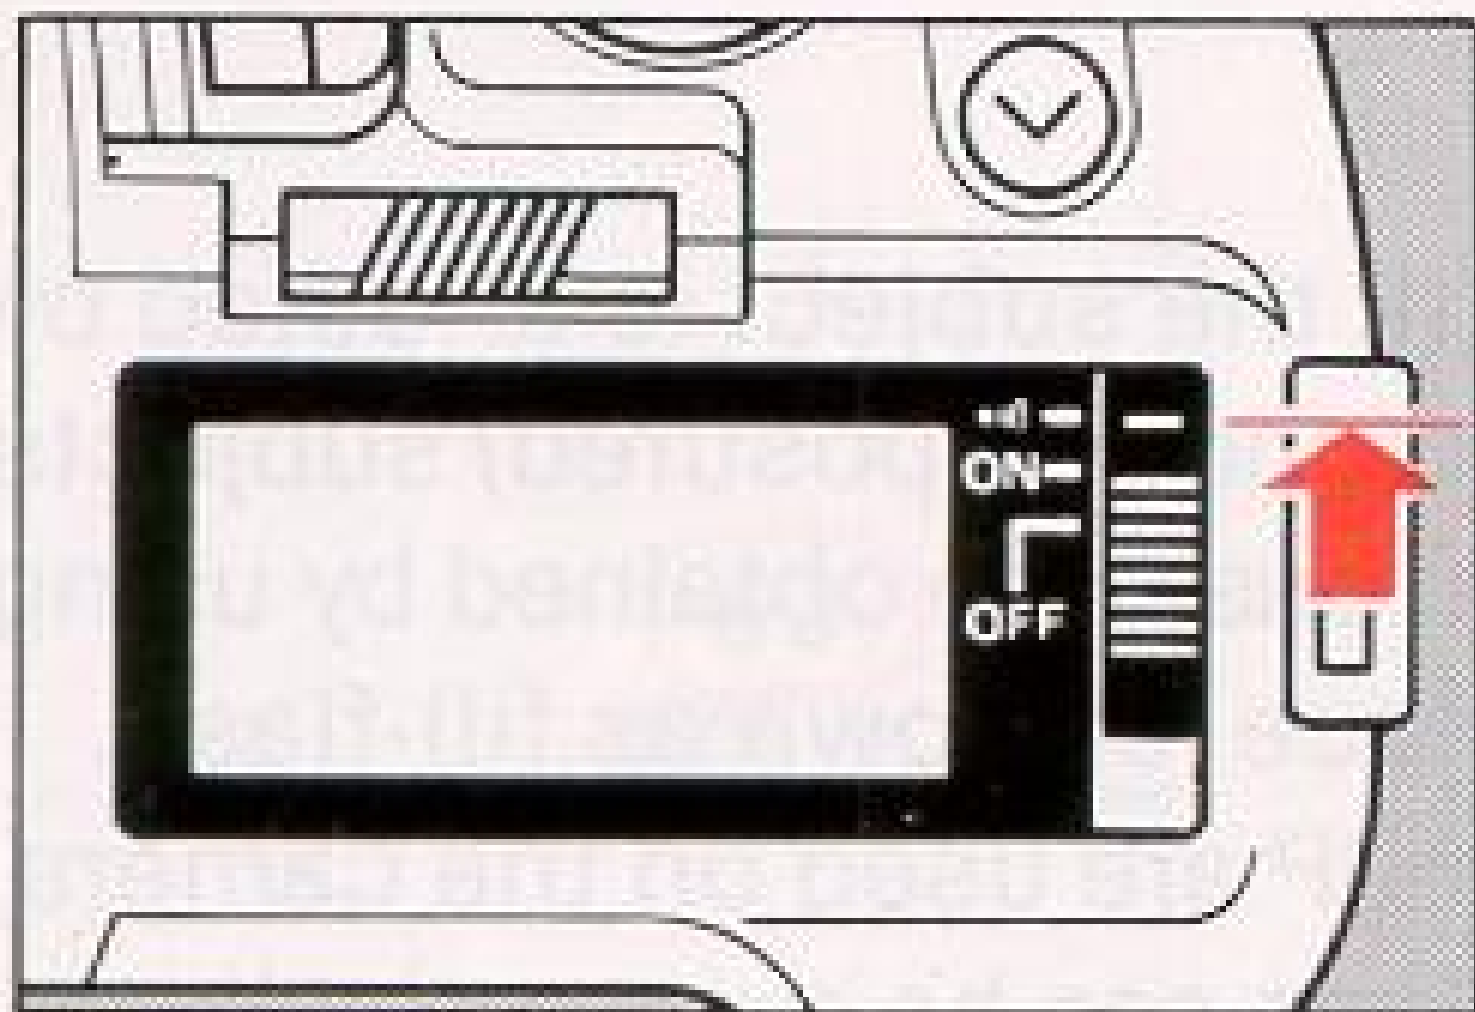


Fig. 105

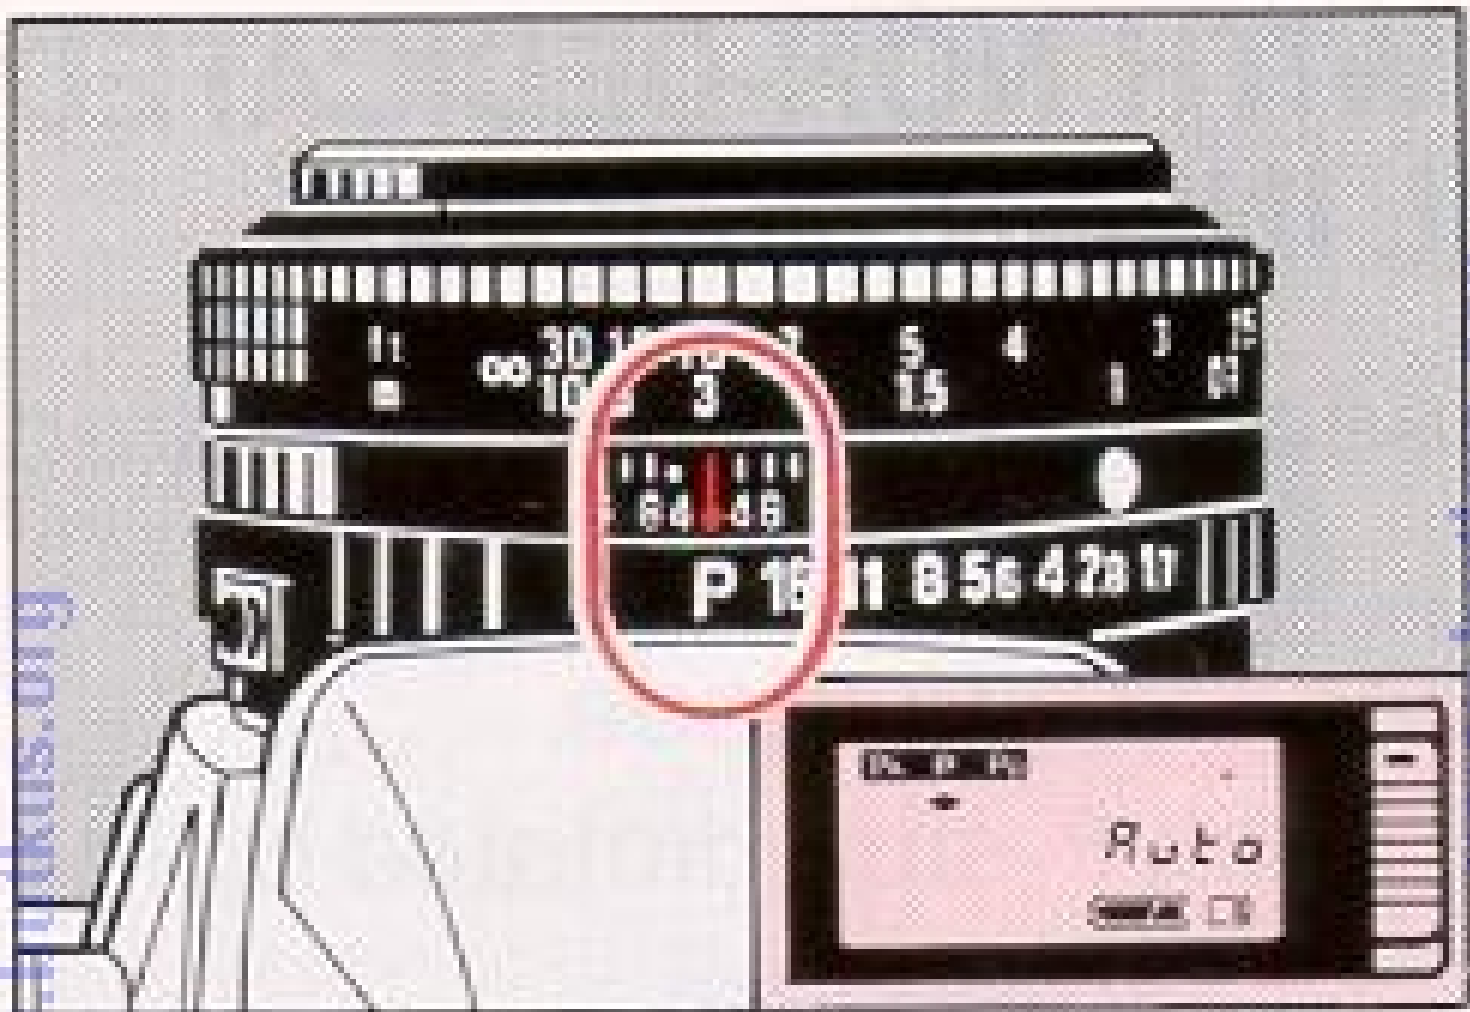


Fig. 101

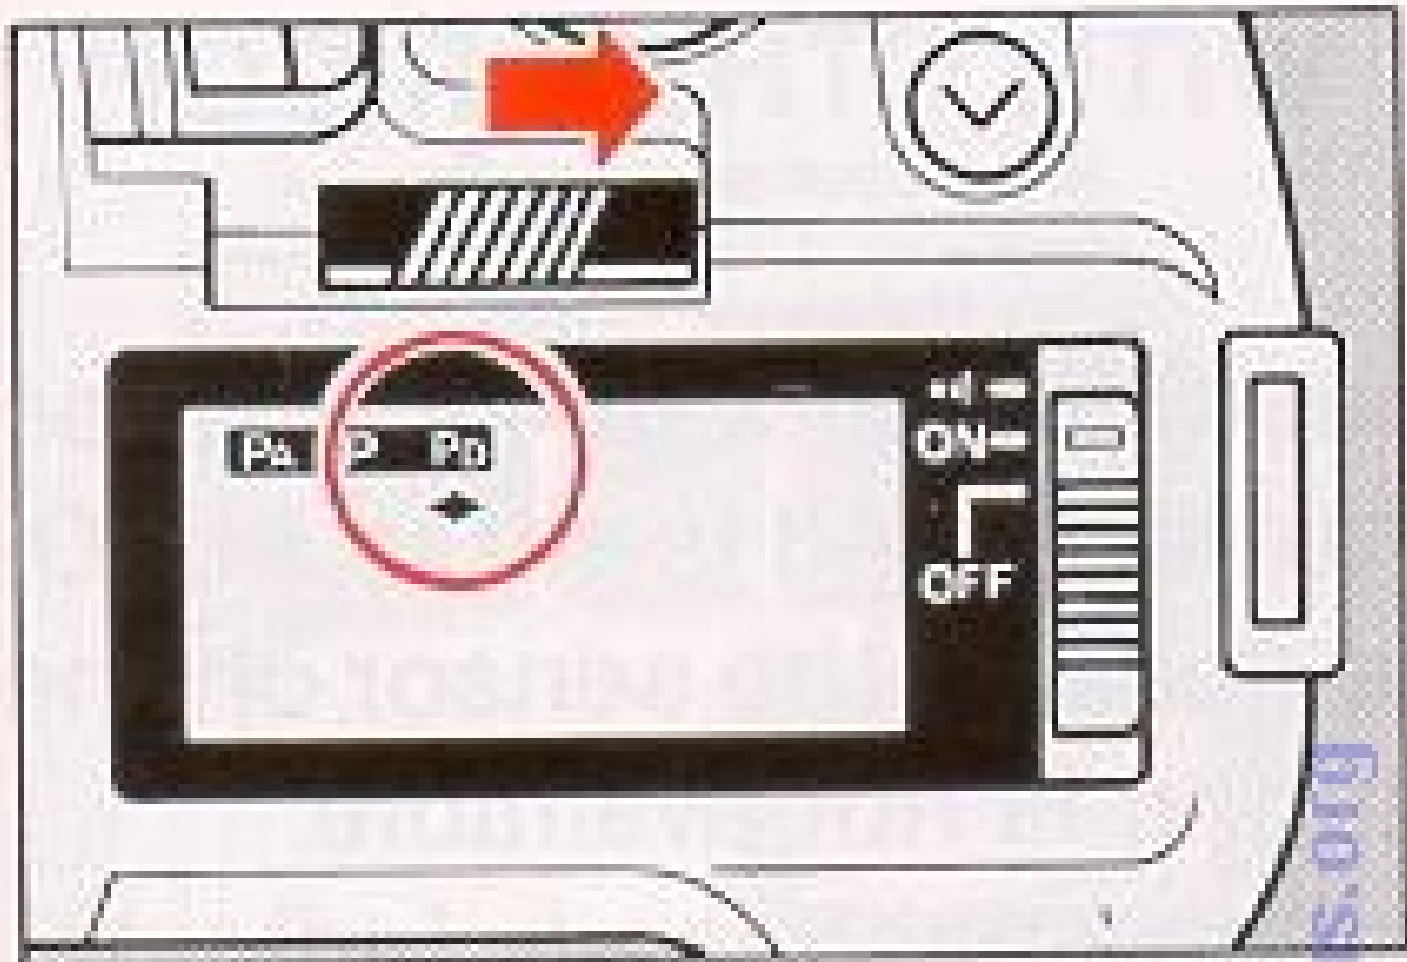


Fig. 97

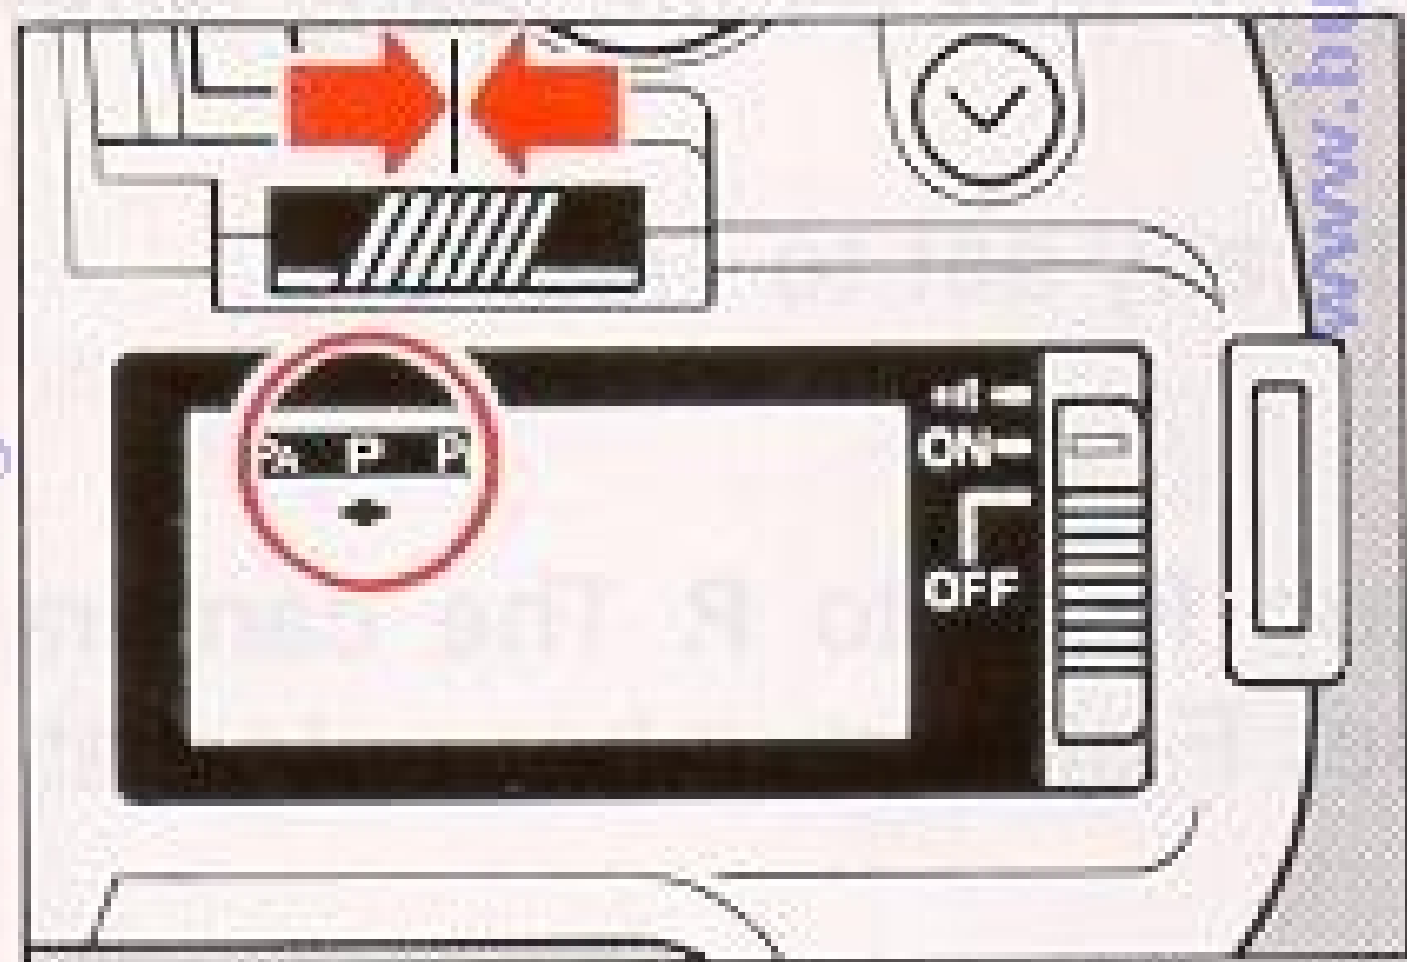


Fig. 98

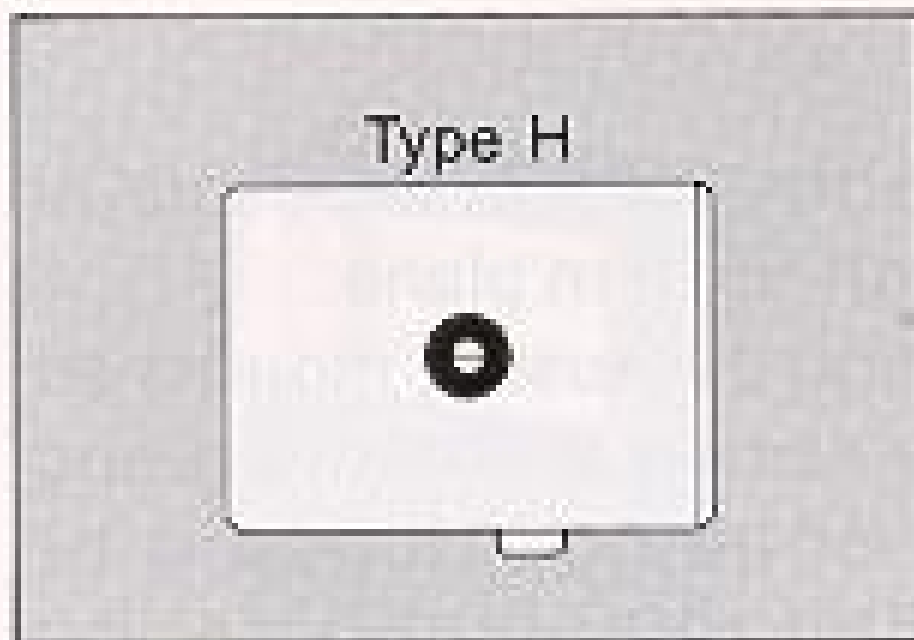


Fig. 110-A

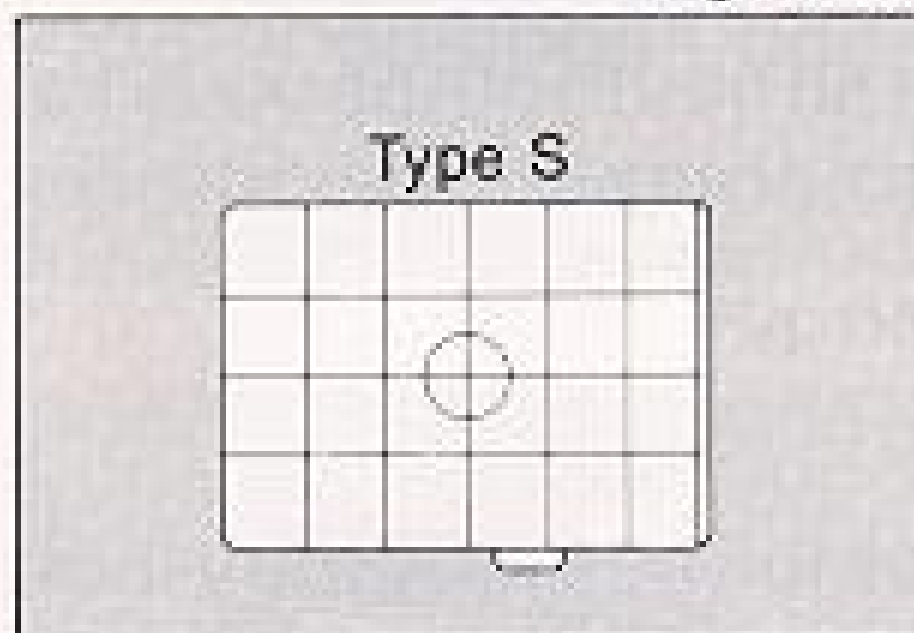


Fig. 110-B

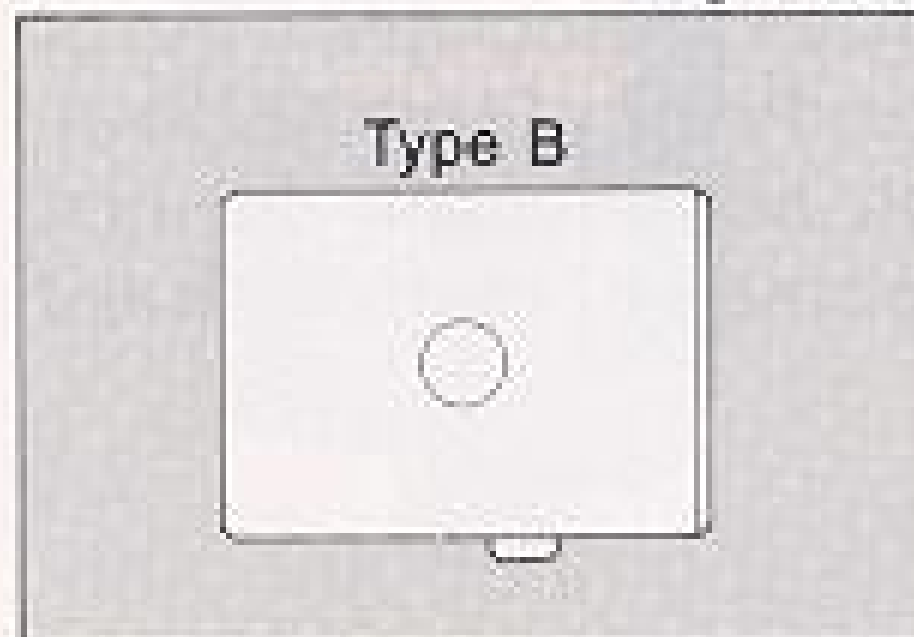


Fig. 110-C



Fig. 111



Fig. 112



Fig. 106

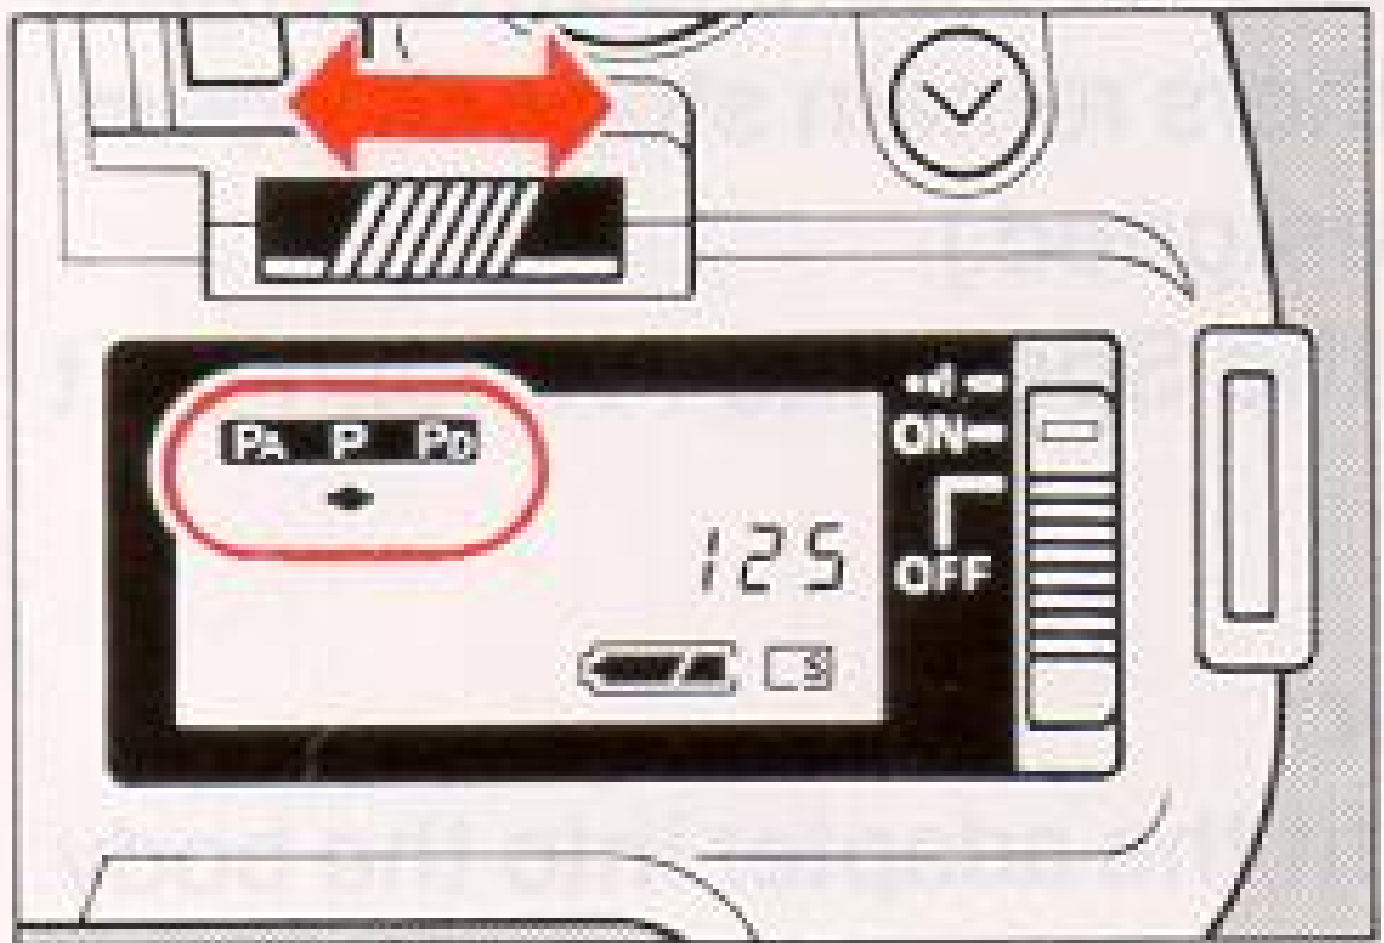


Fig. 107



Fig. 113



Fig. 114



Fig. 103



Fig. 104



Fig. 108



Fig. 109




Press the shutter release button lightly.



Press the shutter release button fully.




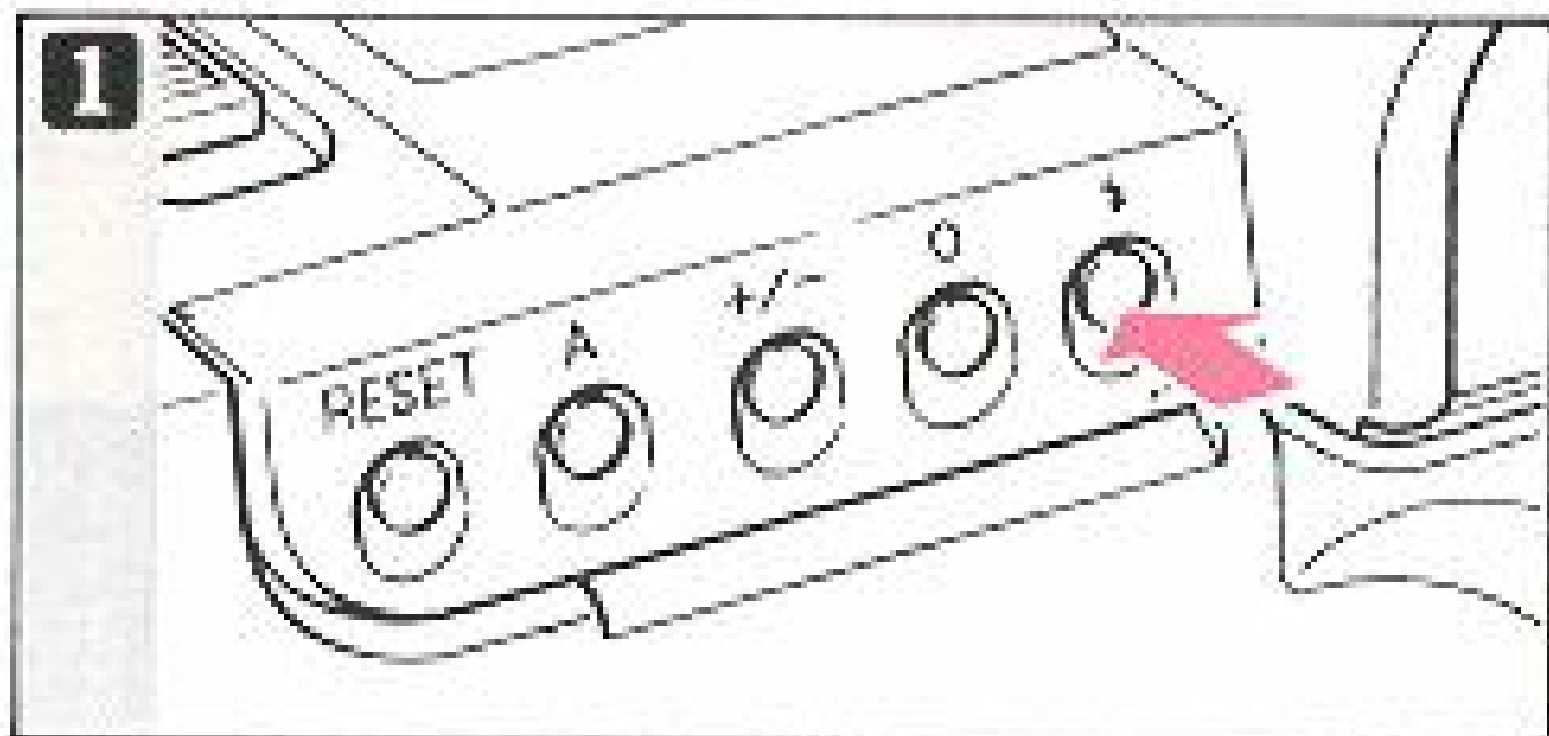


Press the FLASH button and set the flash mode to .

 blinks.




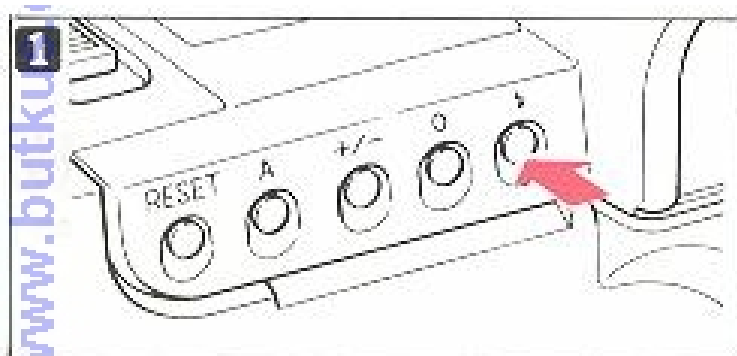


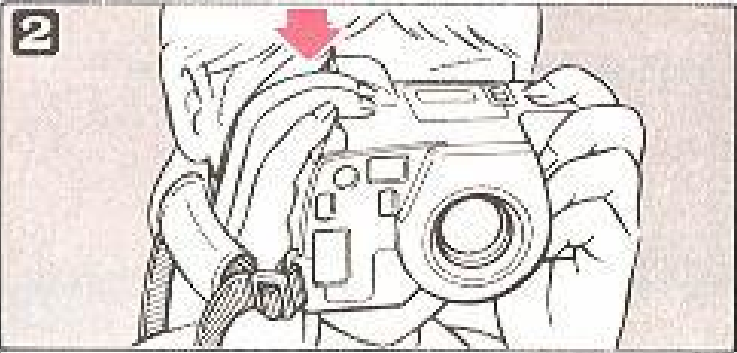






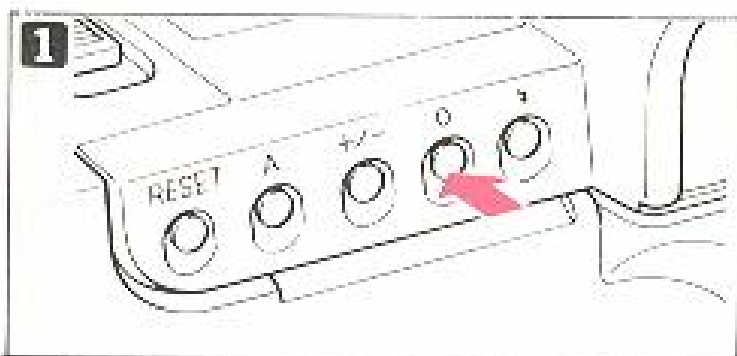



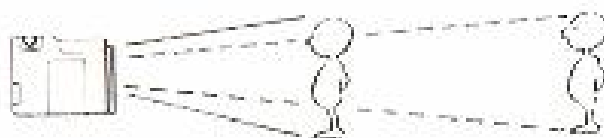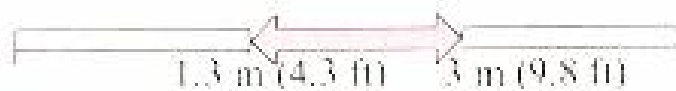

3




2






Press the shutter release button (for the first exposure).

The M.E. starts blinking faster, and the film will not be advanced to the next frame.

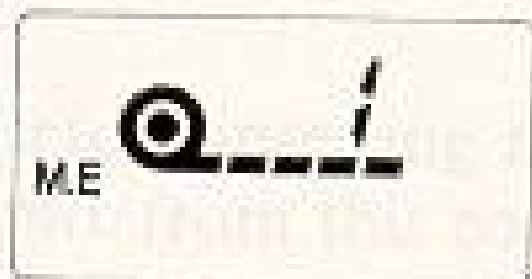




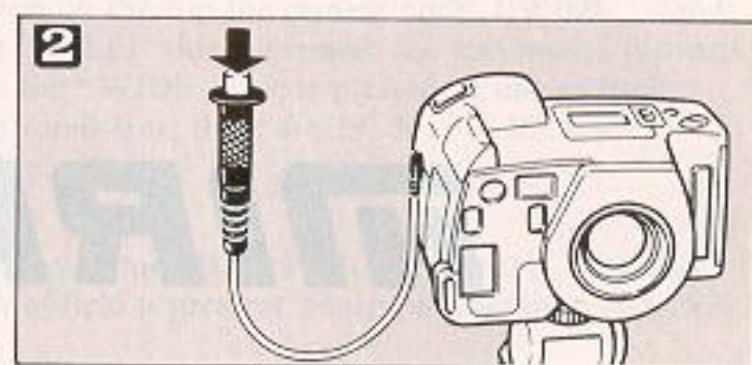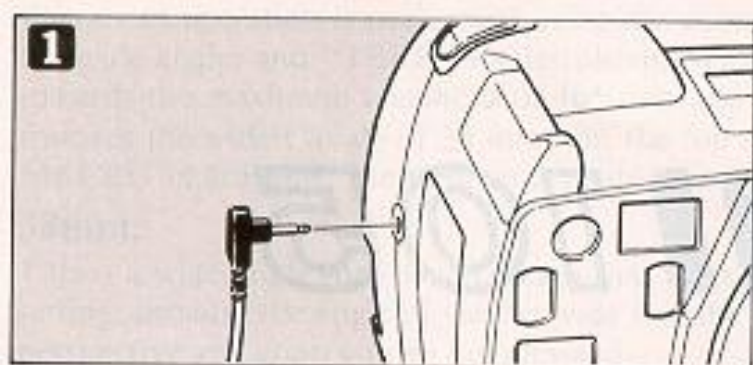



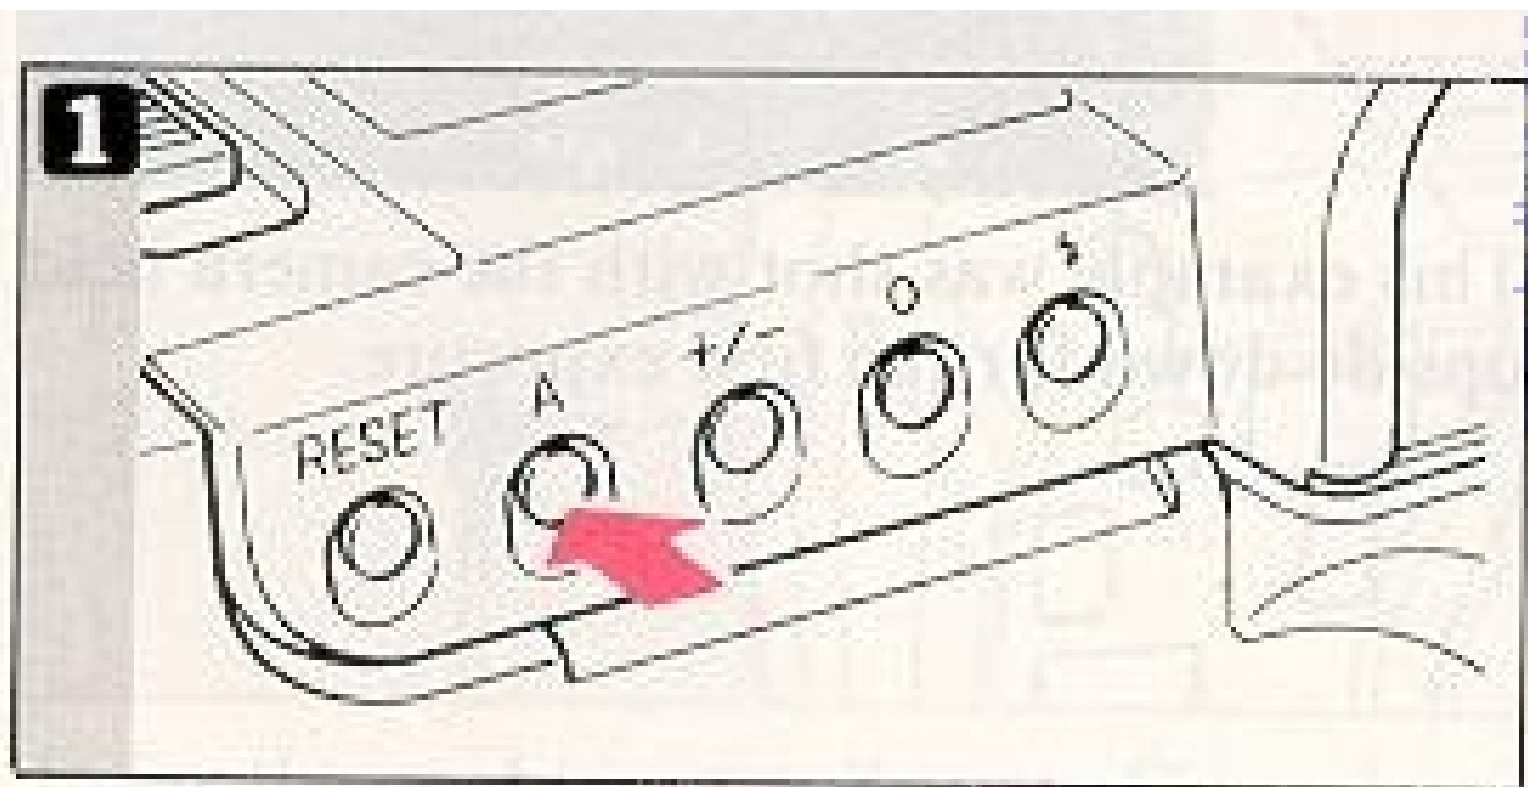


Press the ACTION button and set the mode to M.E.

M.E. blinks.

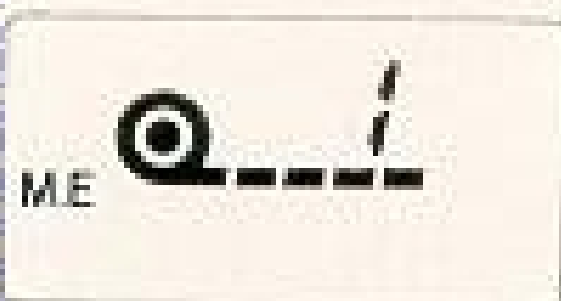

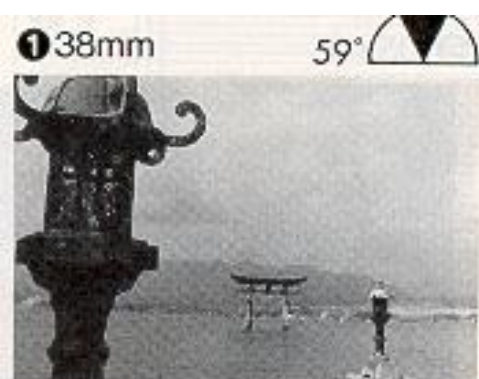

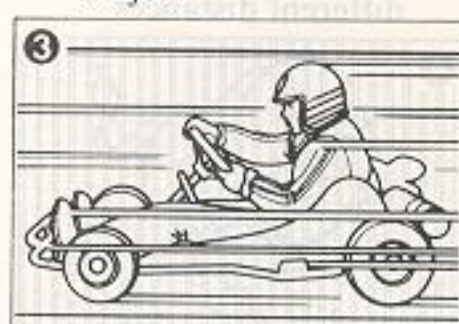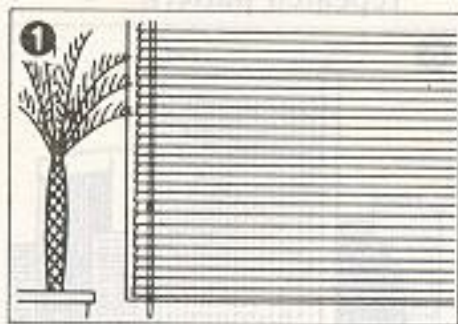

④ 38mm



⑤ 70mm



⑥ 105mm



(A) Autofocus frame



(B) Flash indicator

(C) AF indicator

(D) Green Mark

(ON/OFF Indicator : lights when
between On/Off settings.)

(E) Macro indicator

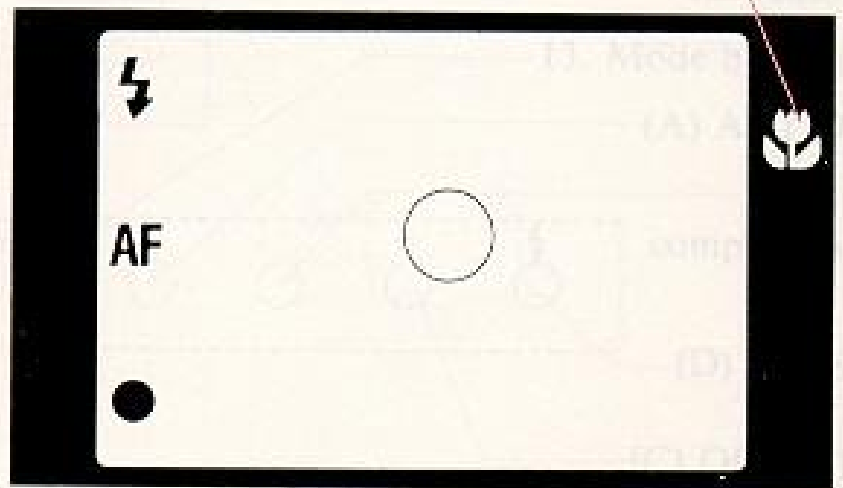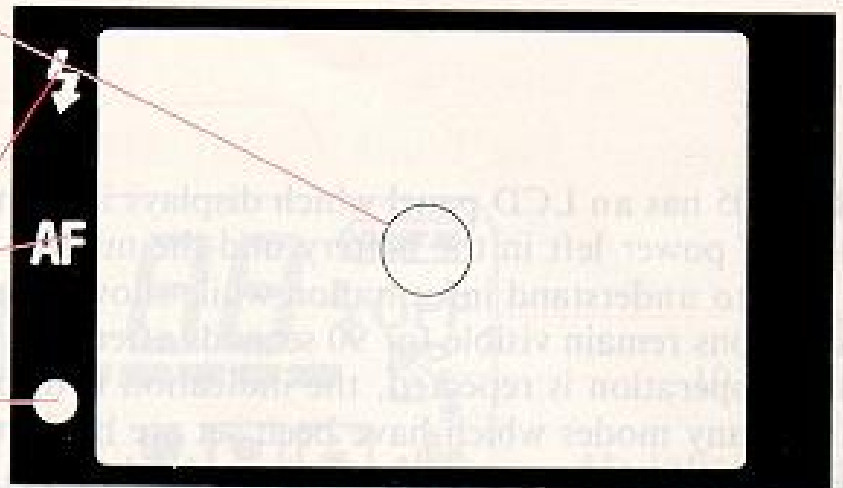



Do not drop the camera on the hard surfaces.




Do not use thinner, benzine or organic solvents to clean the camera.



Do not expose the camera to rain shower and water.



Do not put a heavy object on the camera.

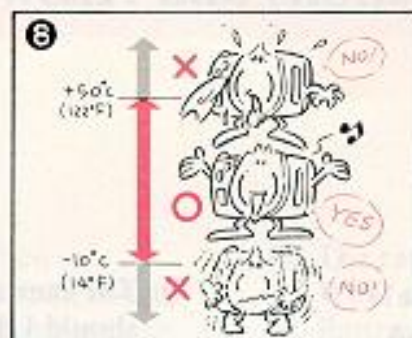

Do not put the camera in the extreme heat (over 50°C or 122°F) like inside of cars during hot summer weather or in the extreme cold (below -10°C or 14°F)




different distances



focusing frame



repeated pattern

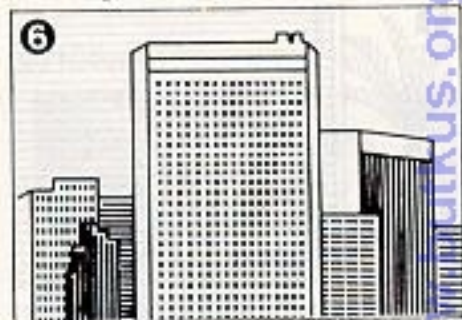


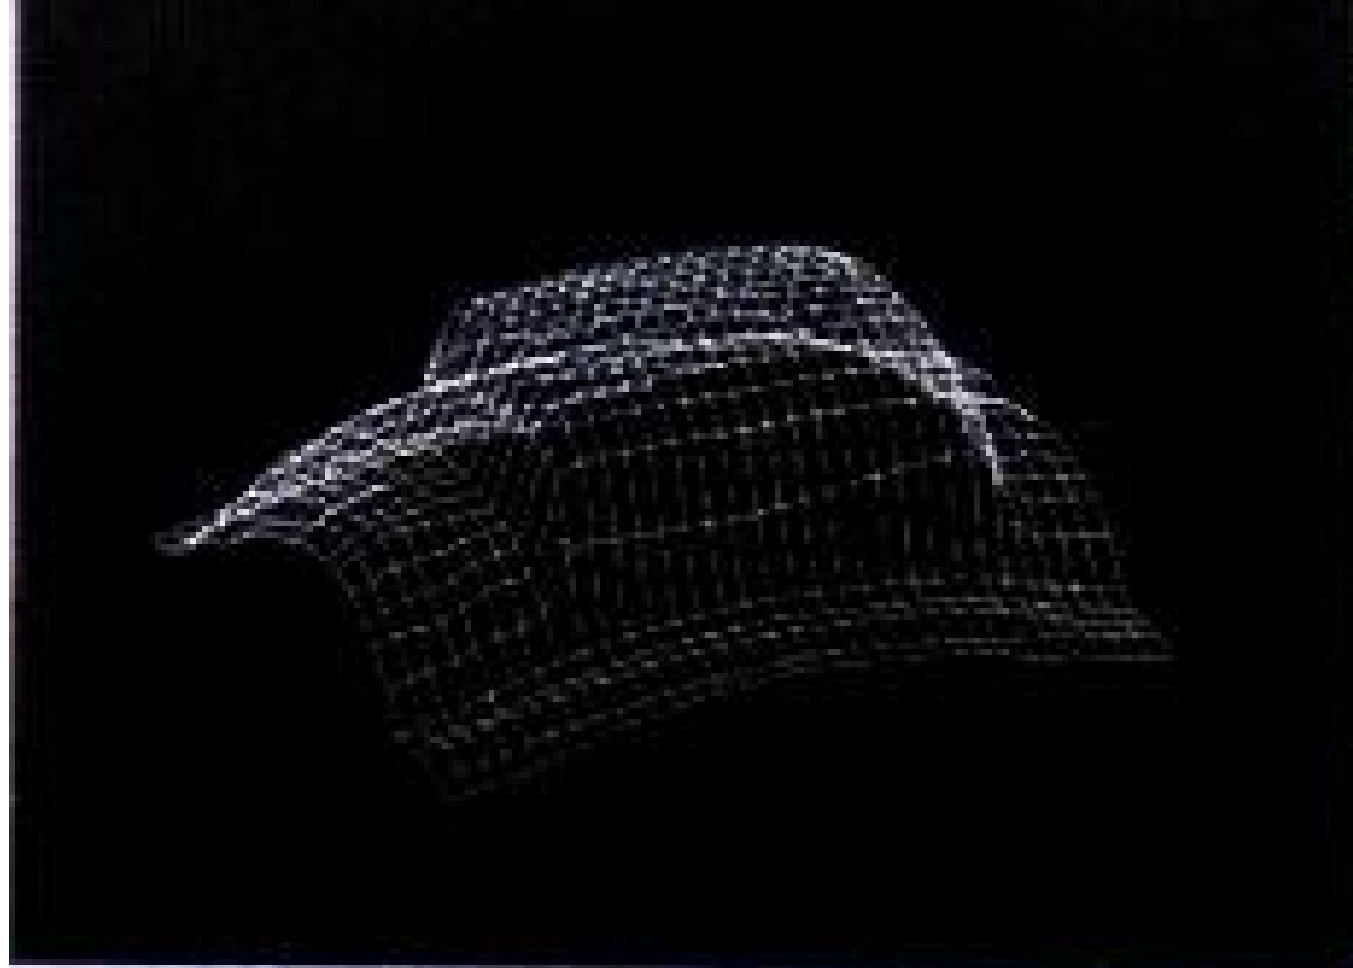


Fig. 76





Do not throw used batteries into fires, and do not heat, disassemble or attempt to short them.

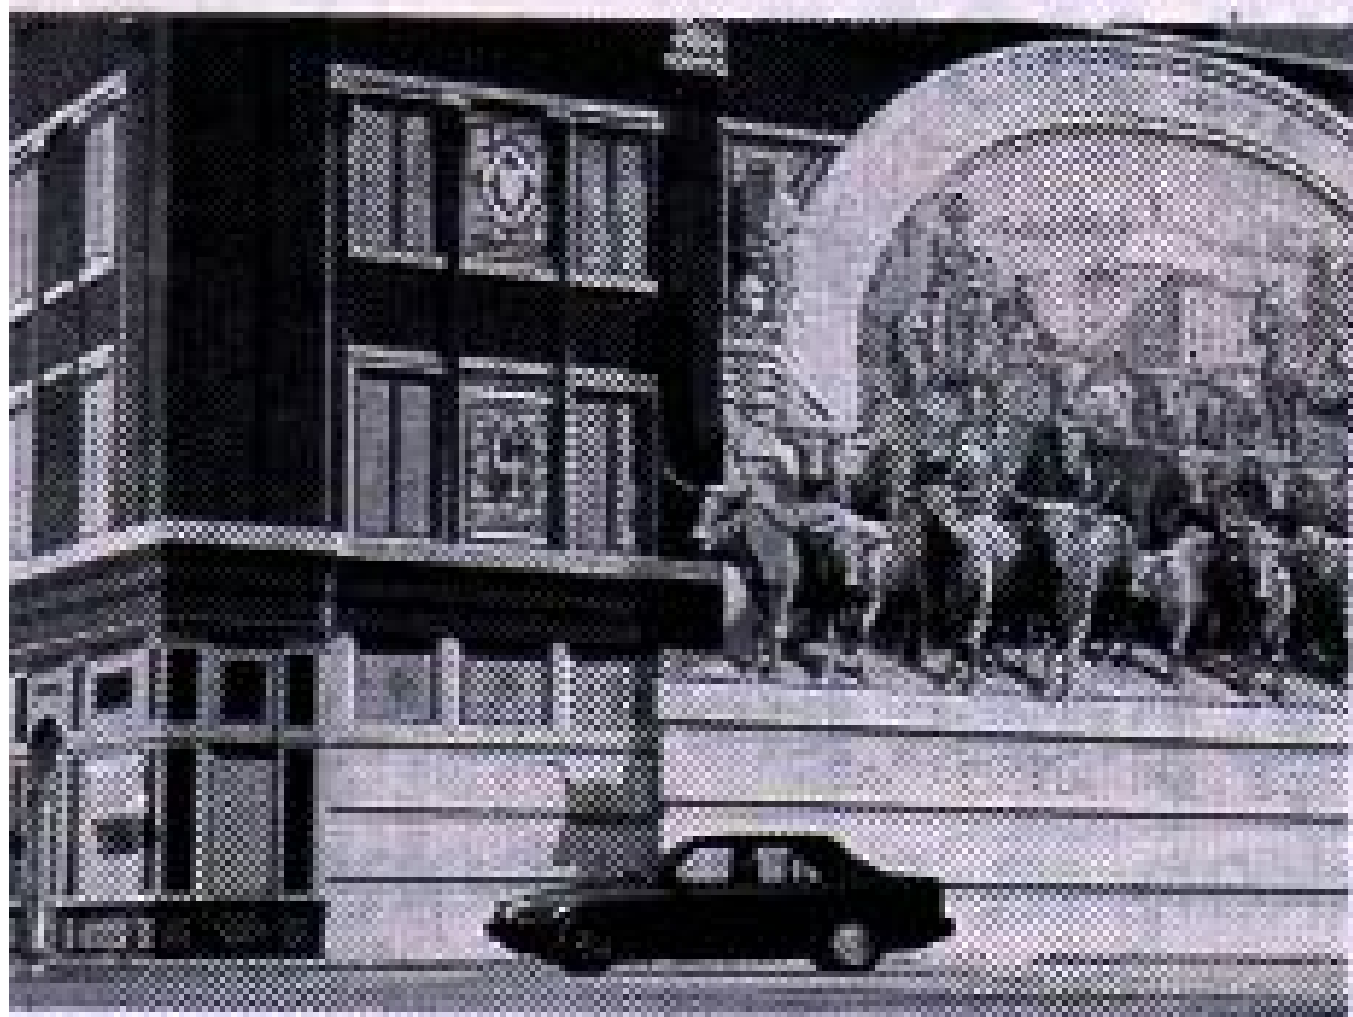

Do not tighten the tripod screw too much.



Do not apply excessive force to the camera.

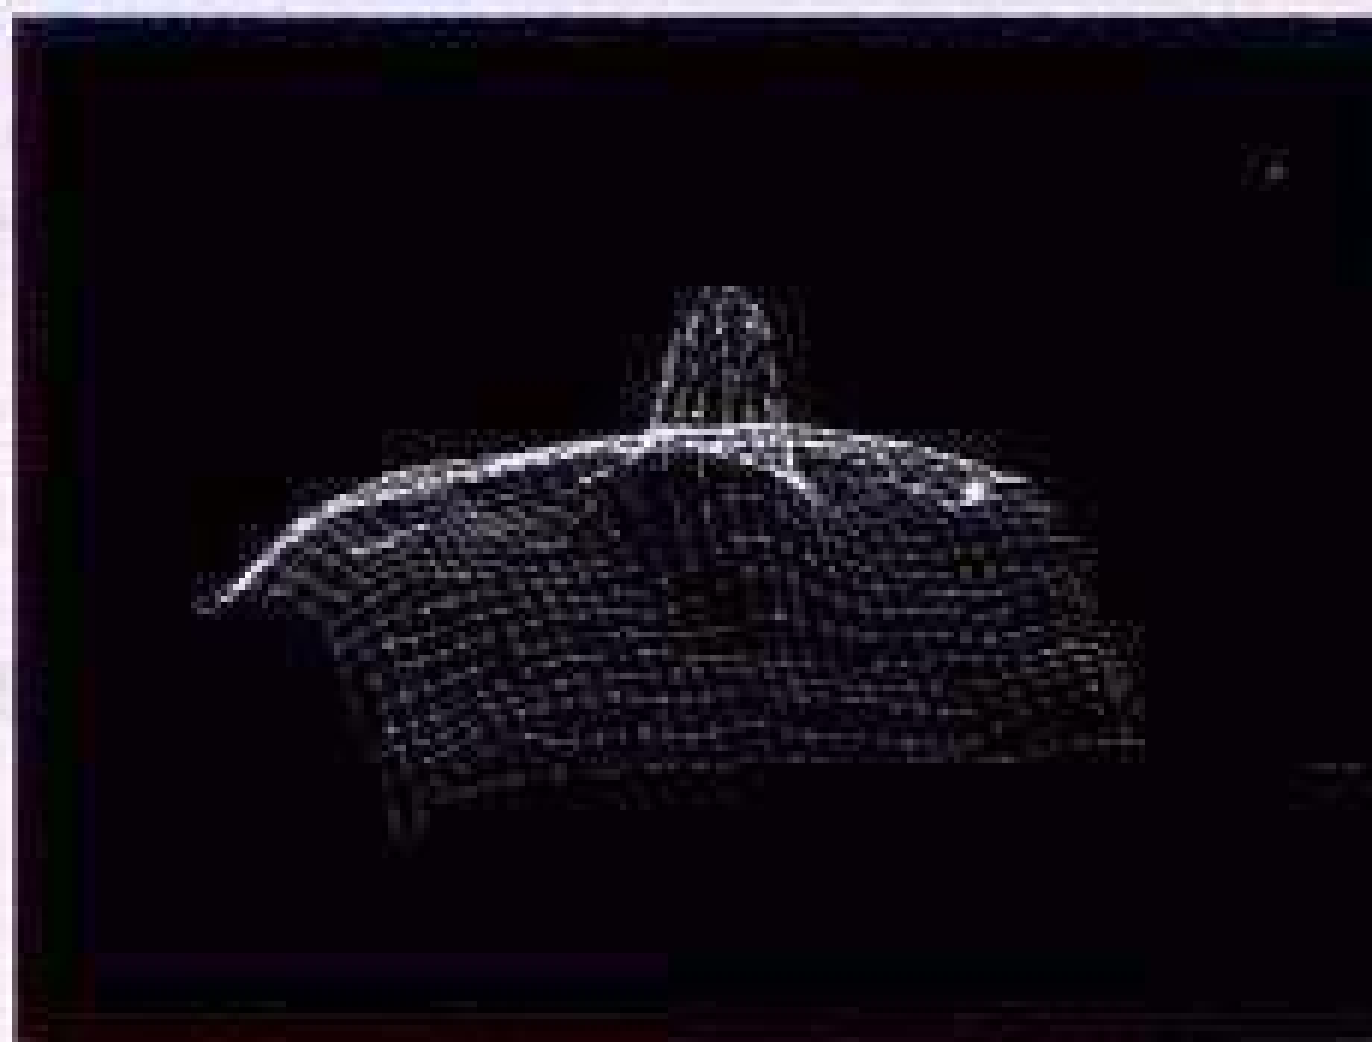


Fig. 77



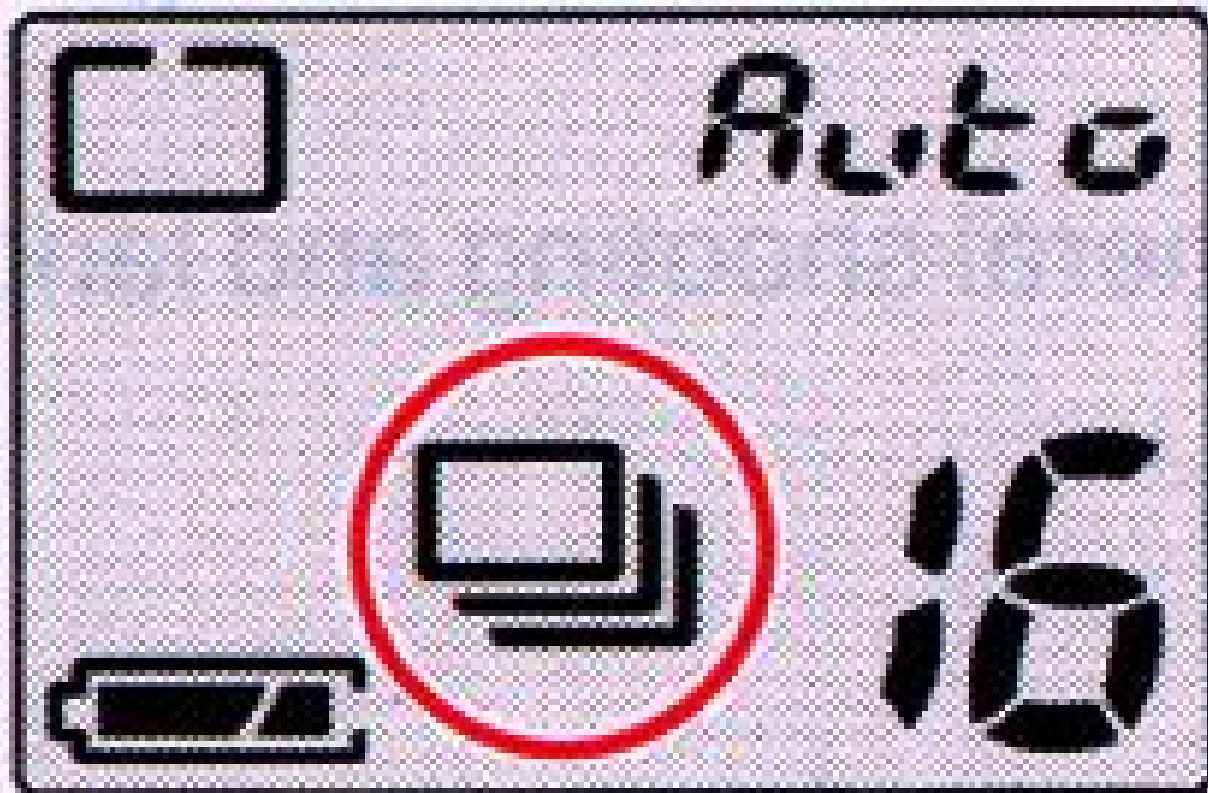


Fig. 80

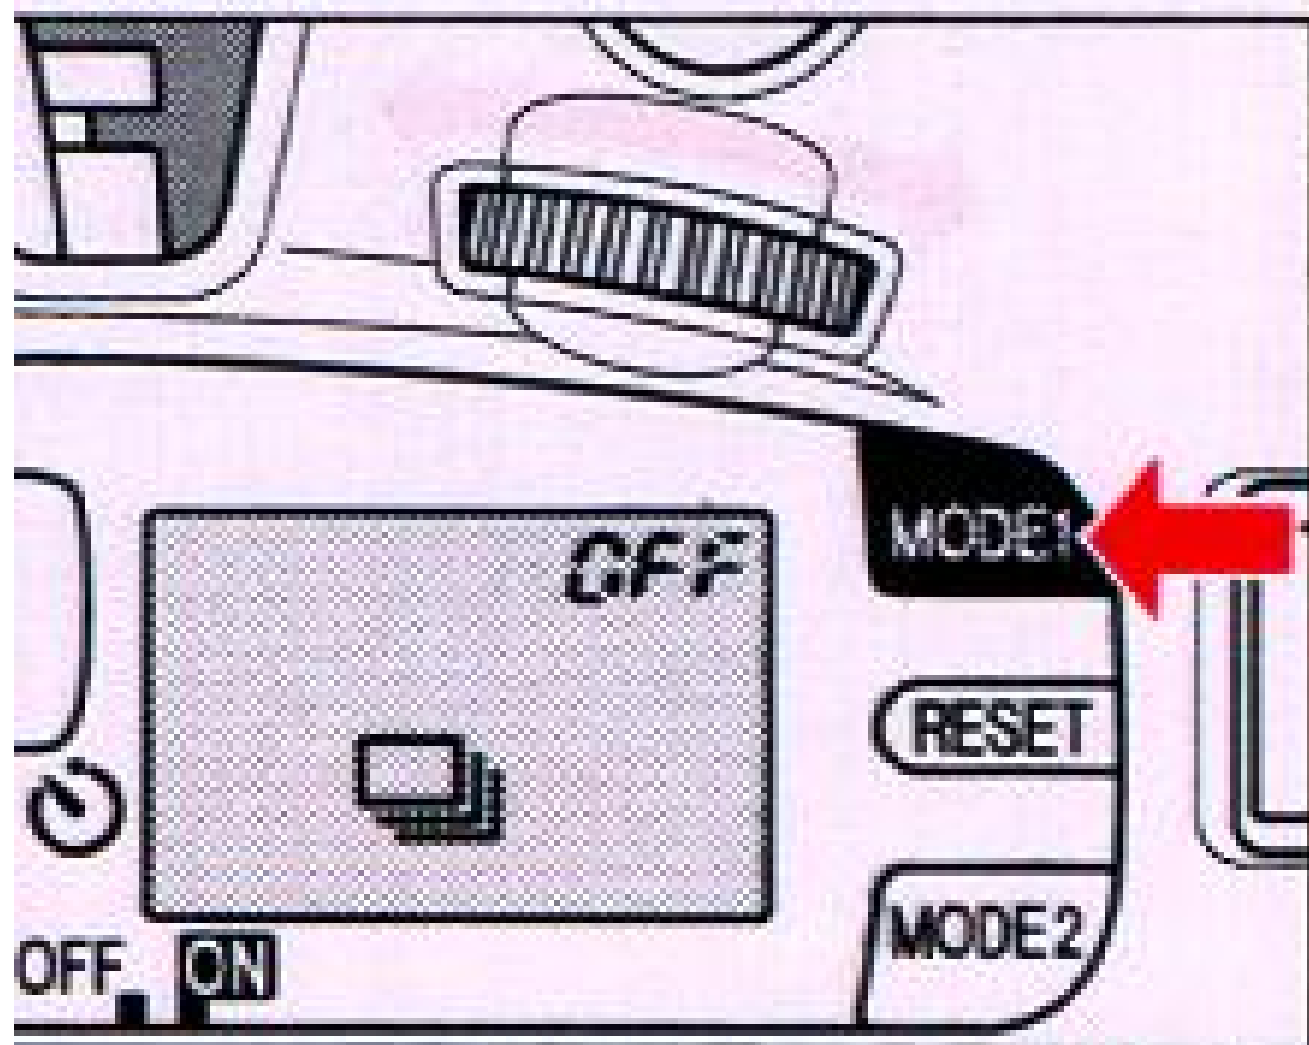


Fig. 81




Avoid sudden temperature changes.



Do not leave the camera near magnetic fields, like on the top of TV set, or radio.



In case of malfunction, take the camera to your nearest Ricoh service station.

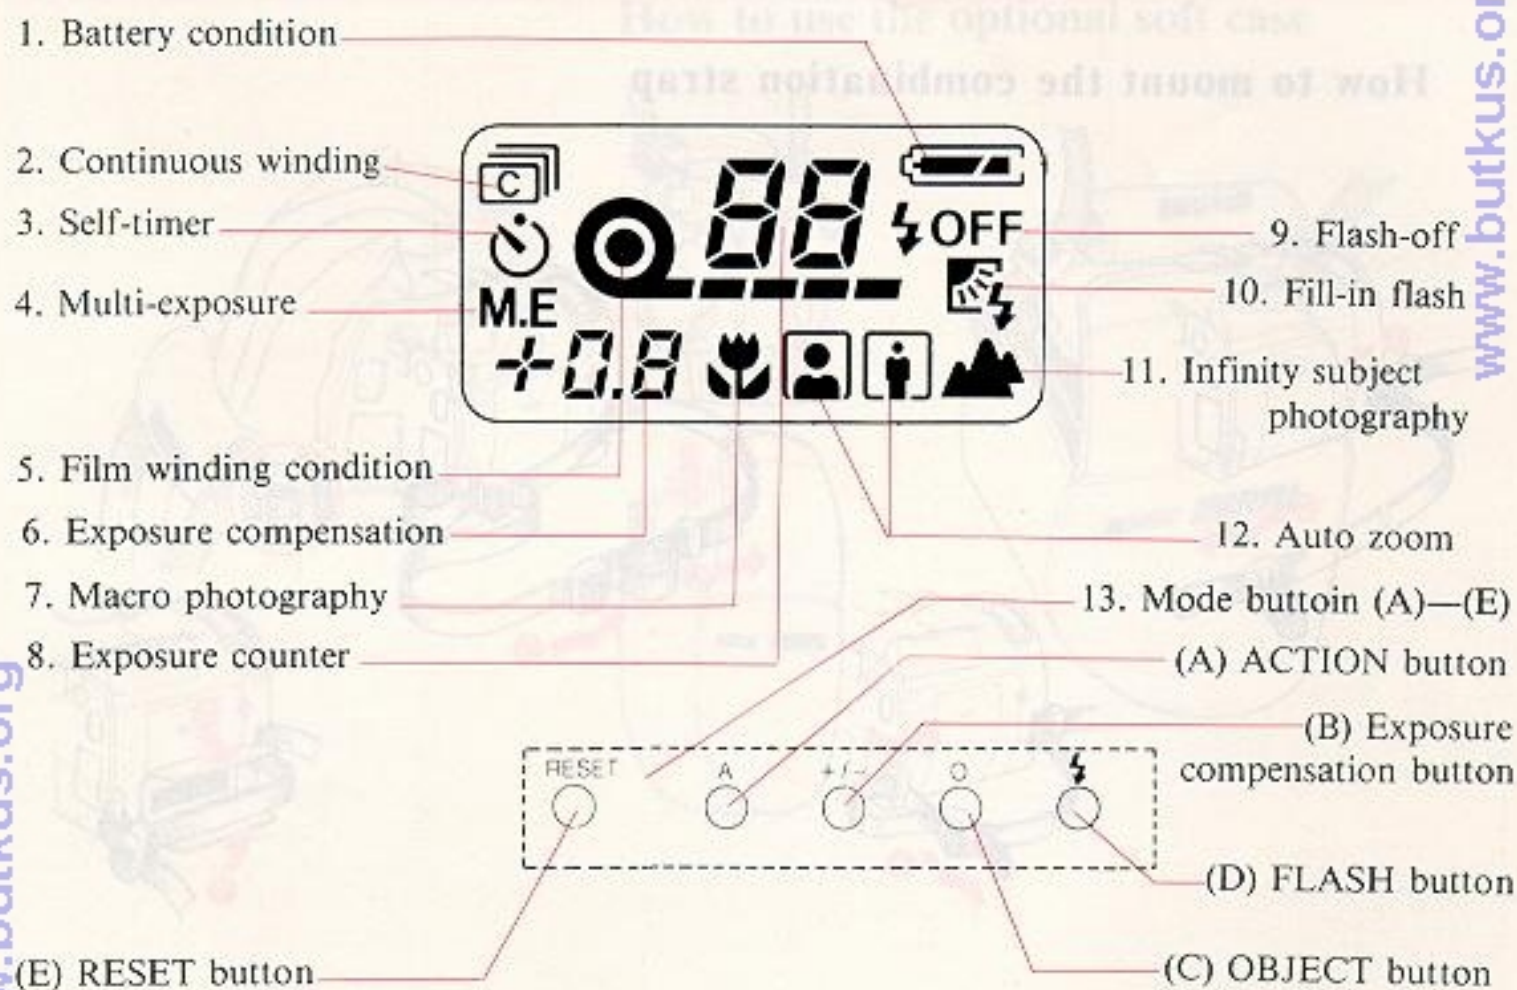

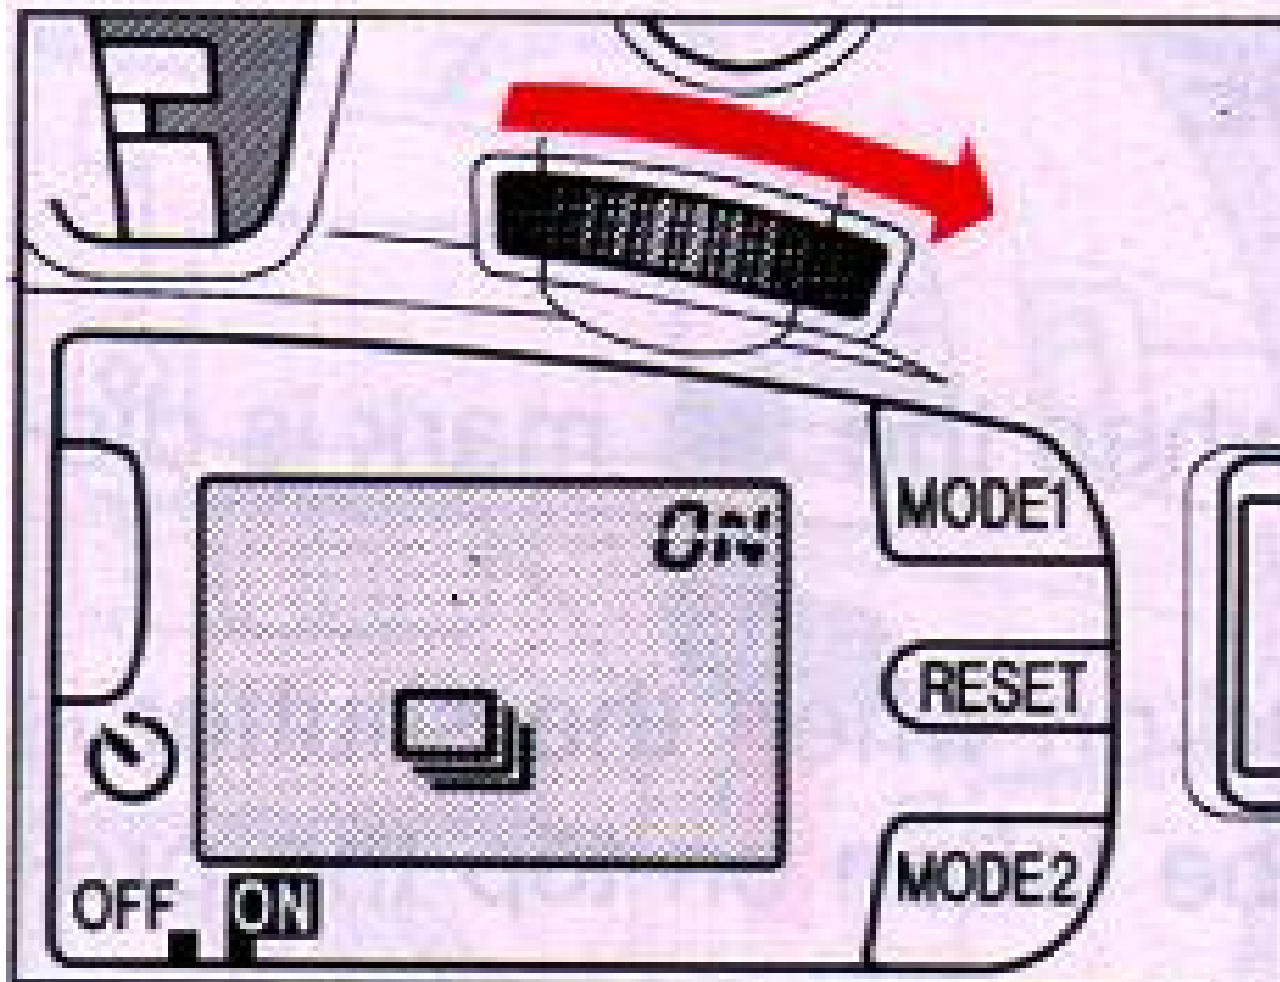


Fig. 82

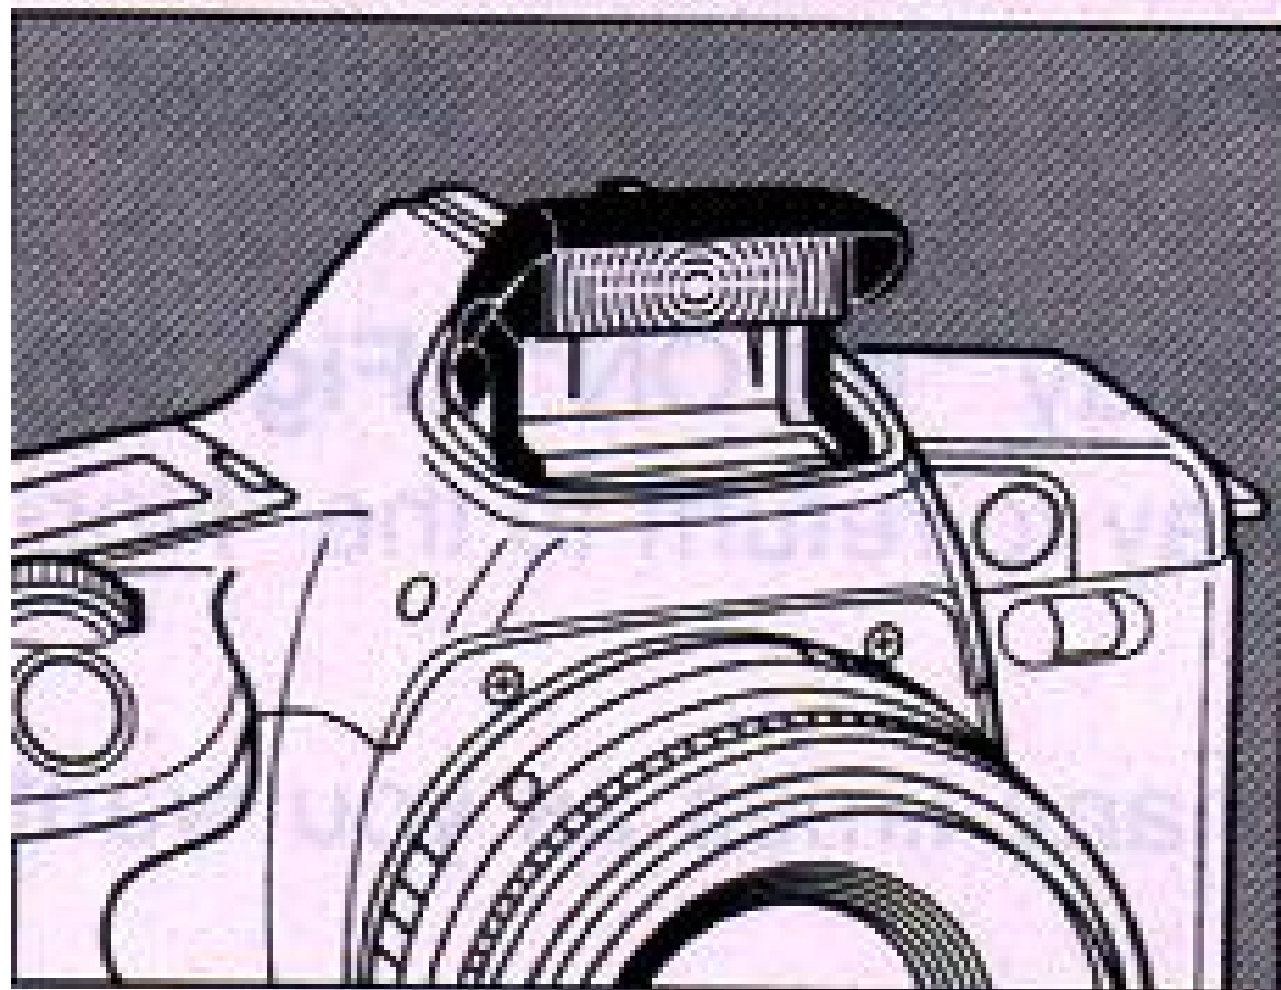


Fig. 83

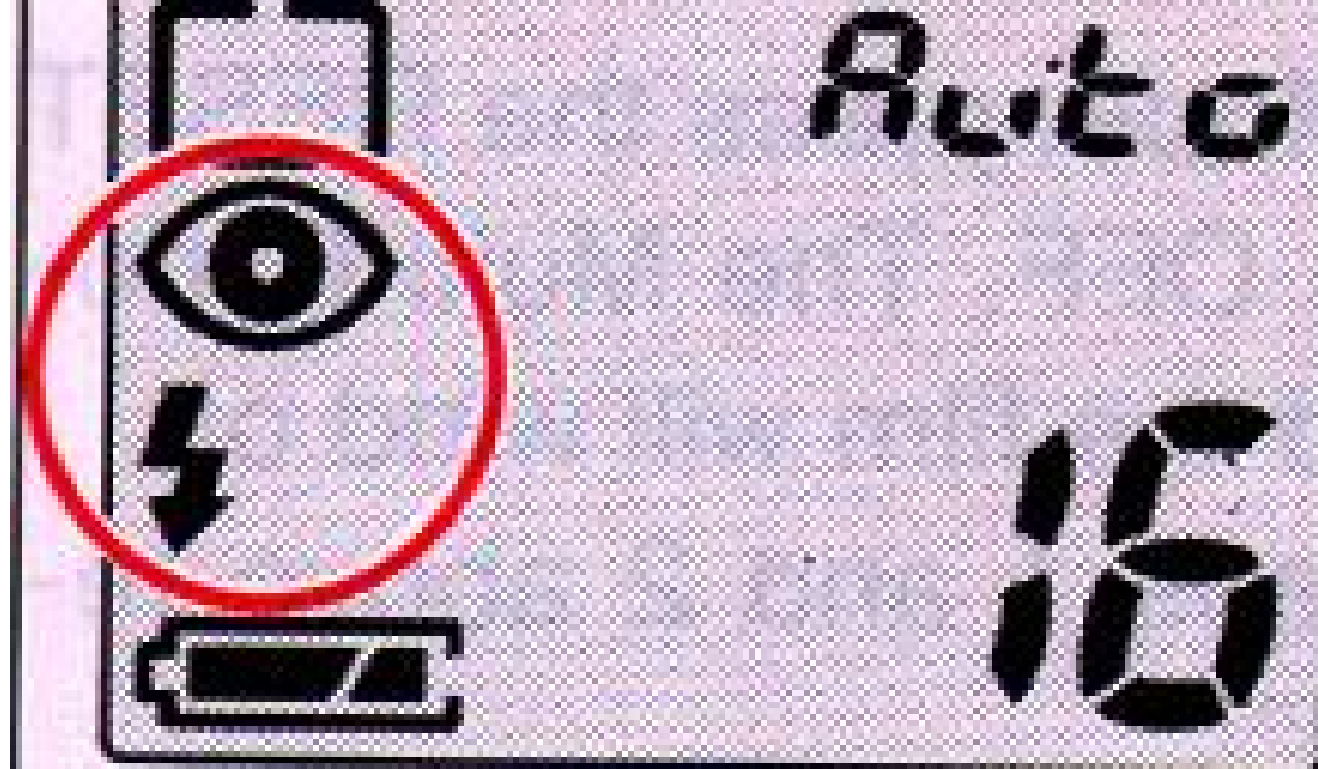


Fig. 84

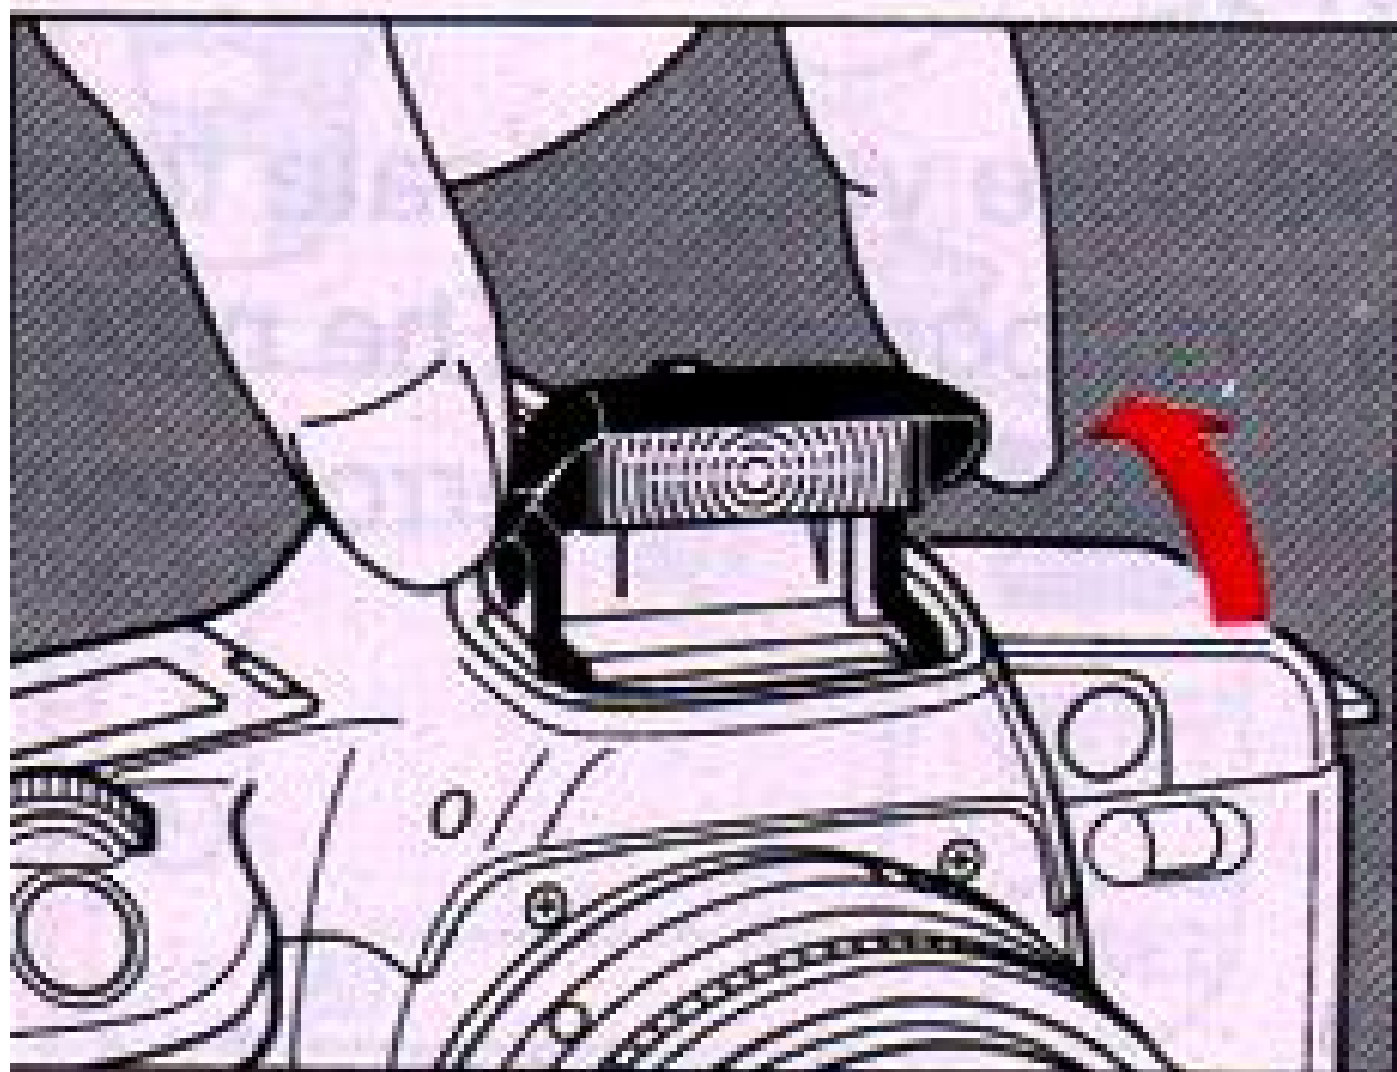


Fig. 85

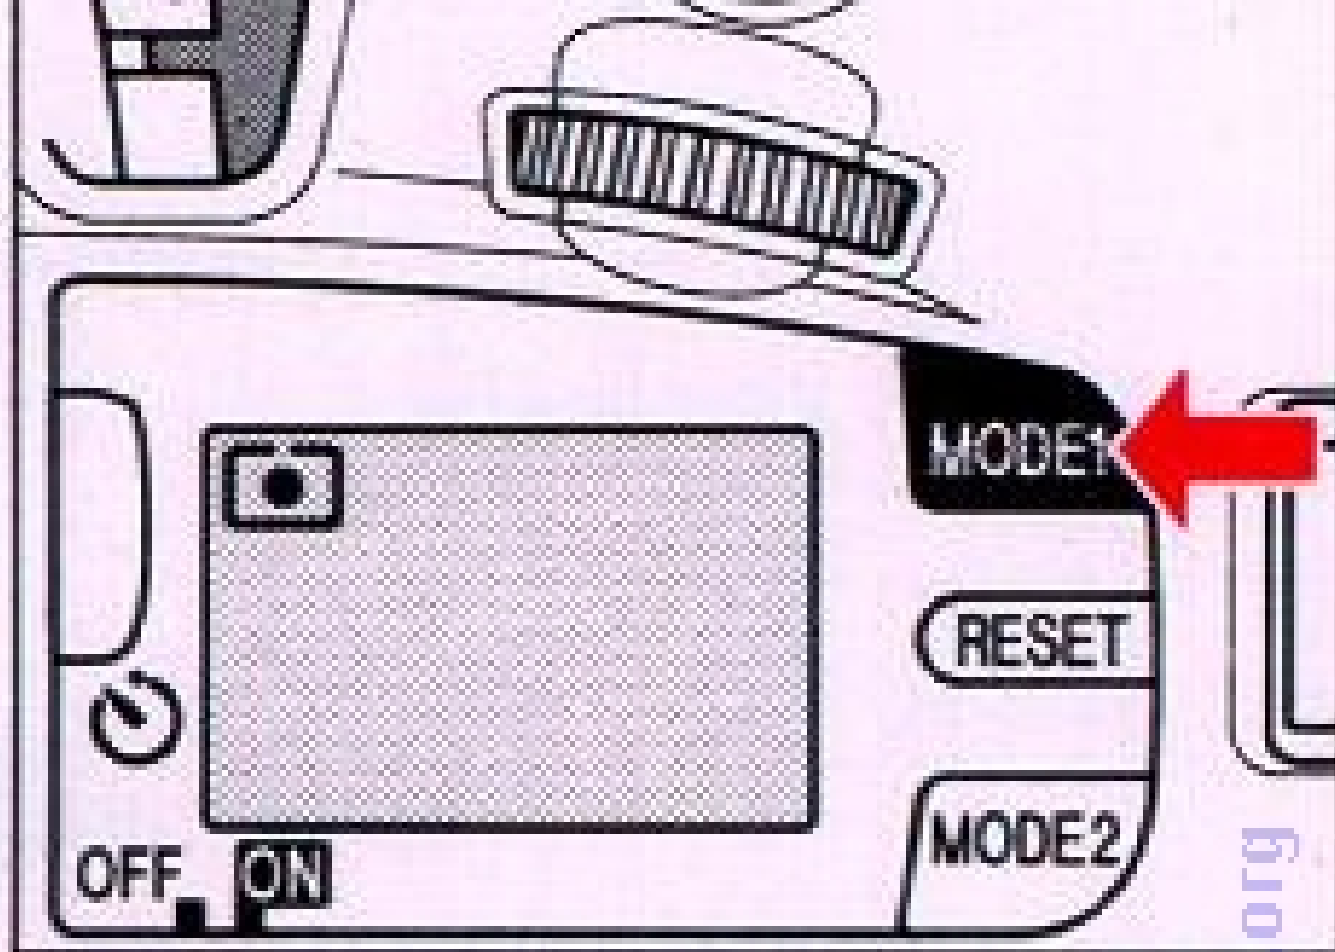


Fig. 78

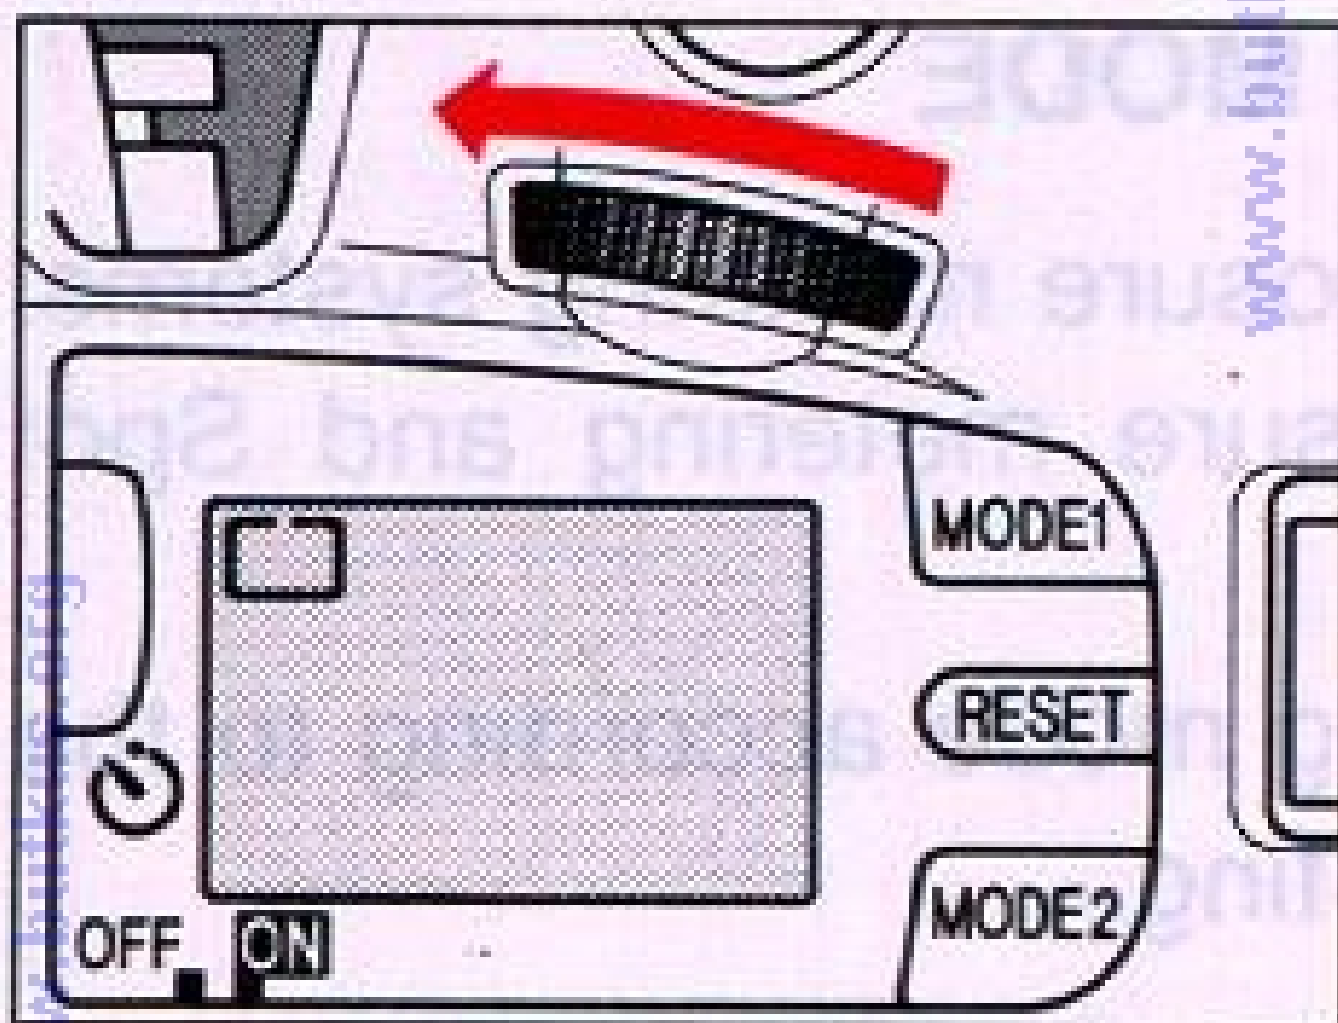


Fig. 79

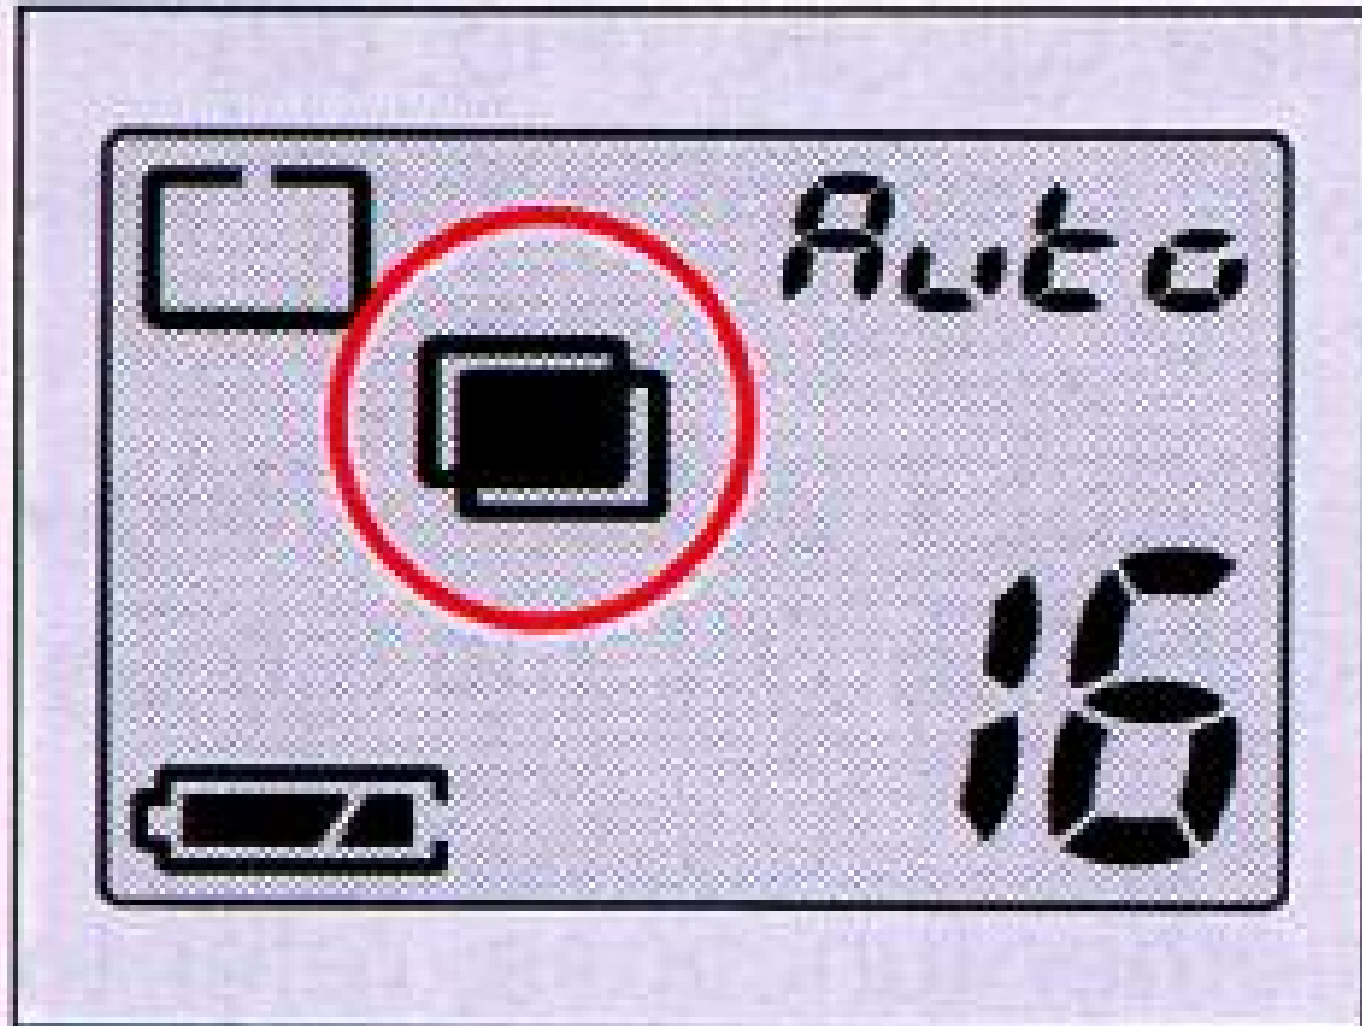


Fig. 88





Fig. 75



Fig. 75

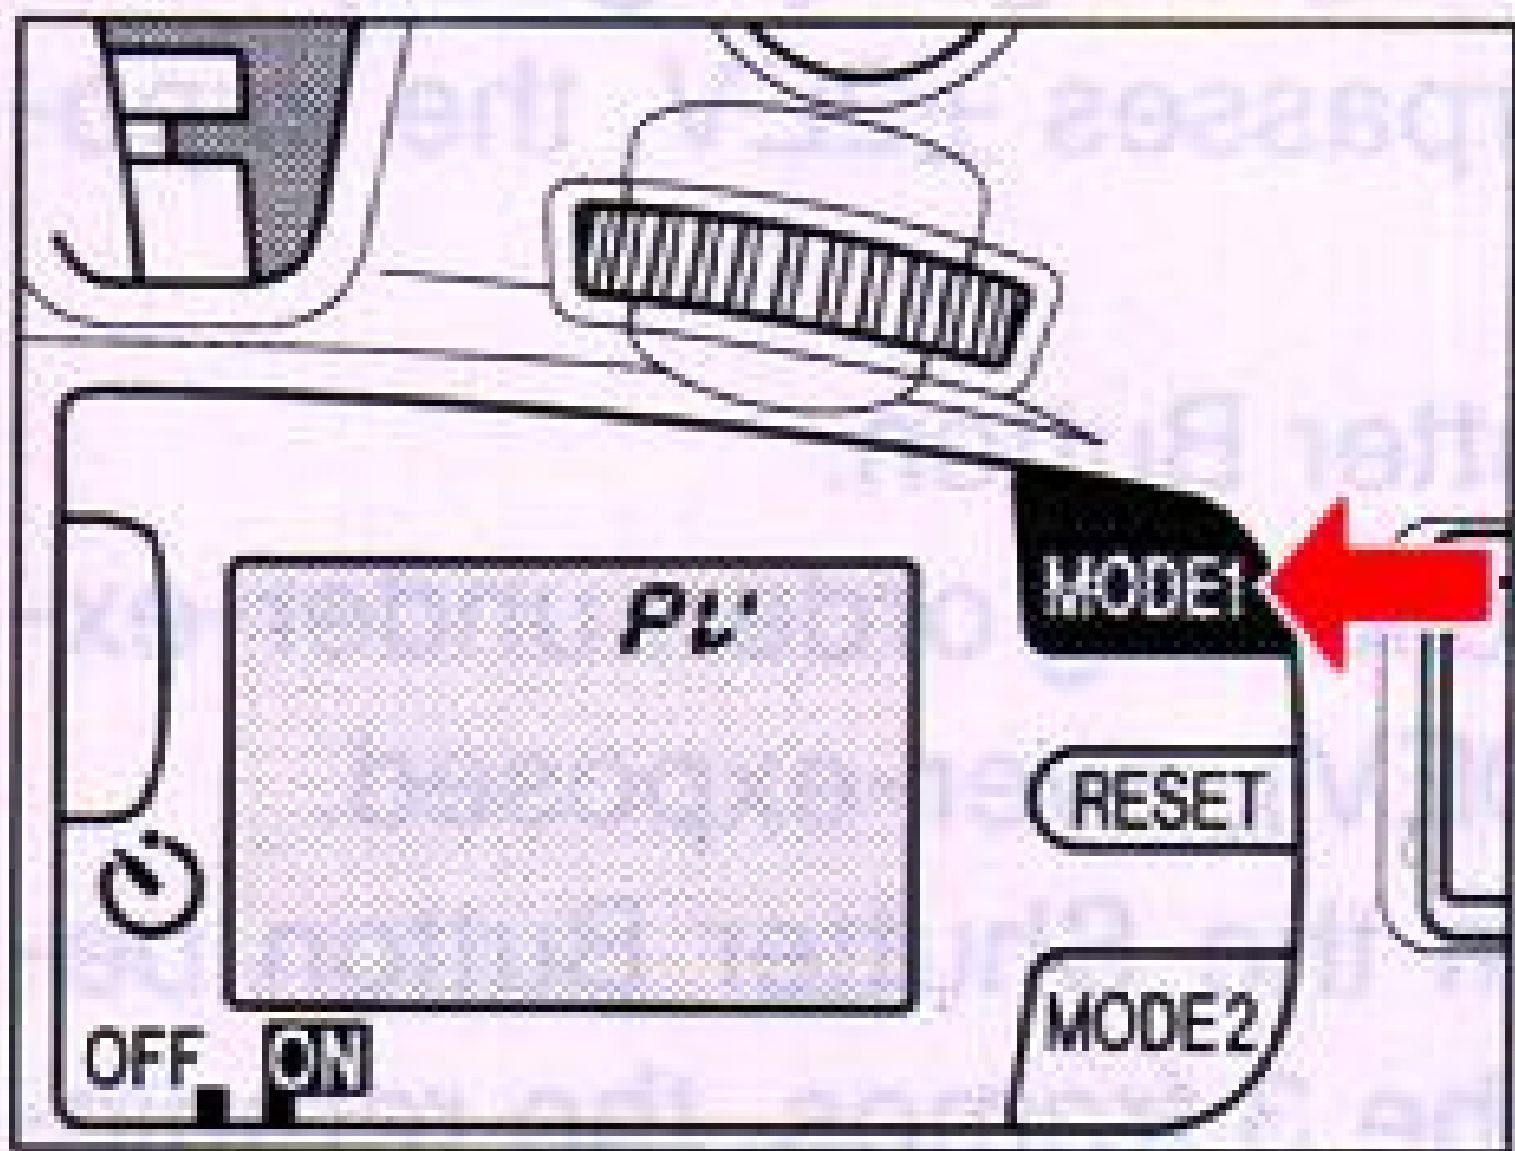


Fig. 92

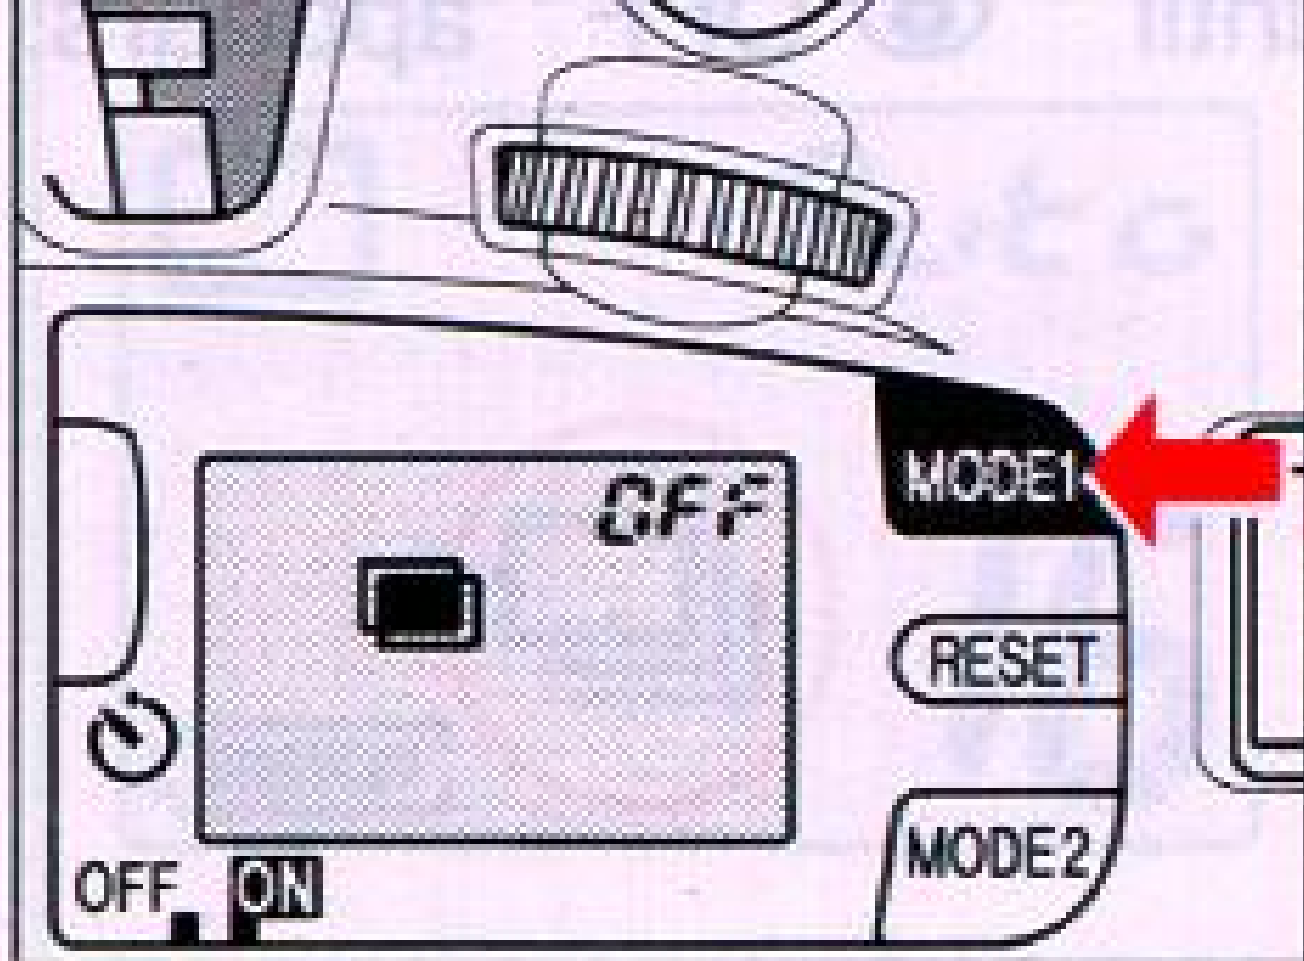


Fig. 89

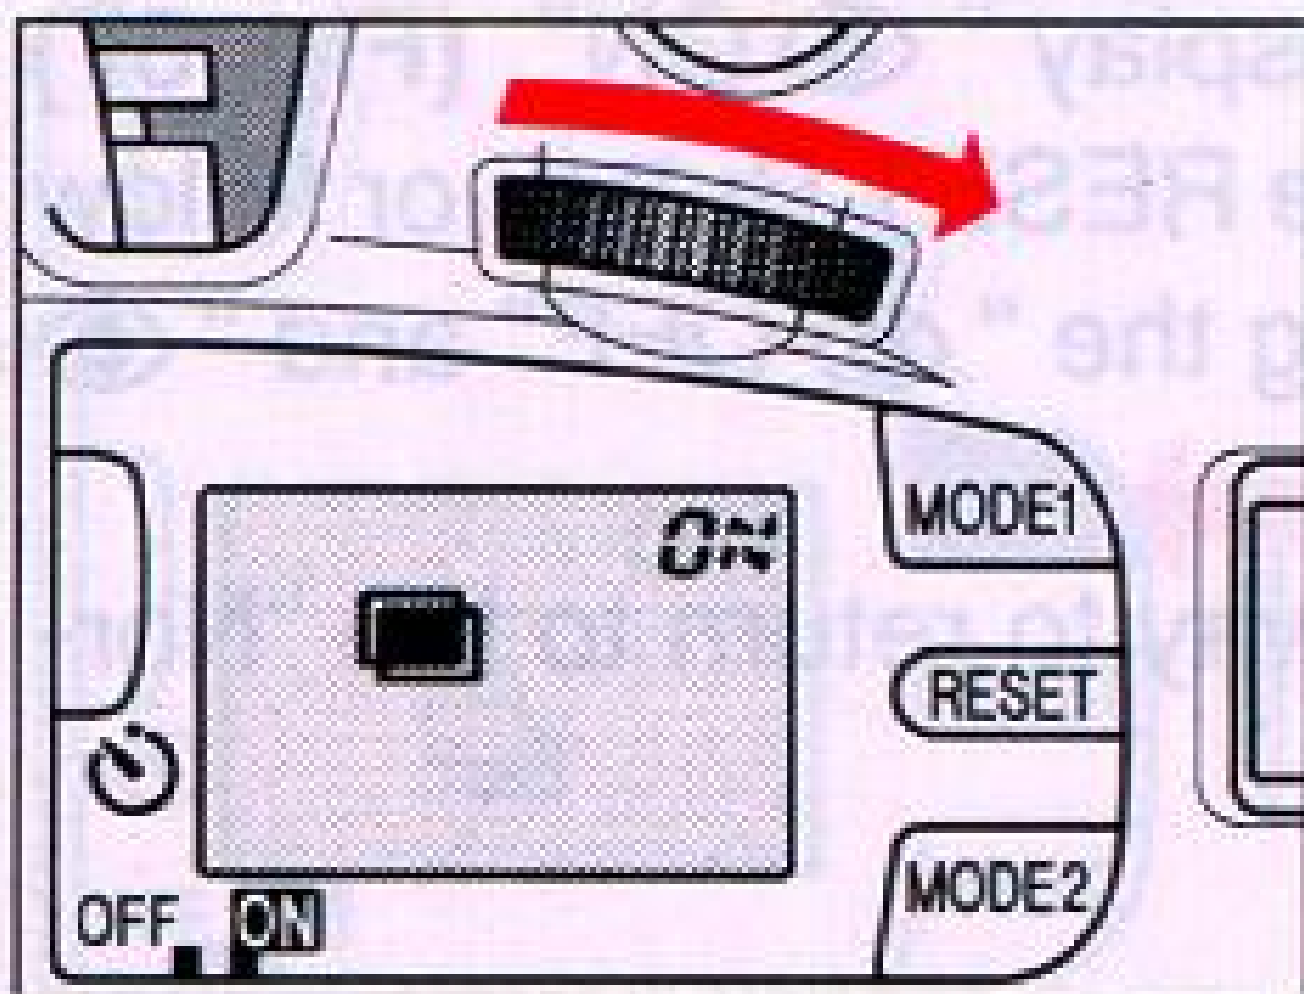


Fig. 90

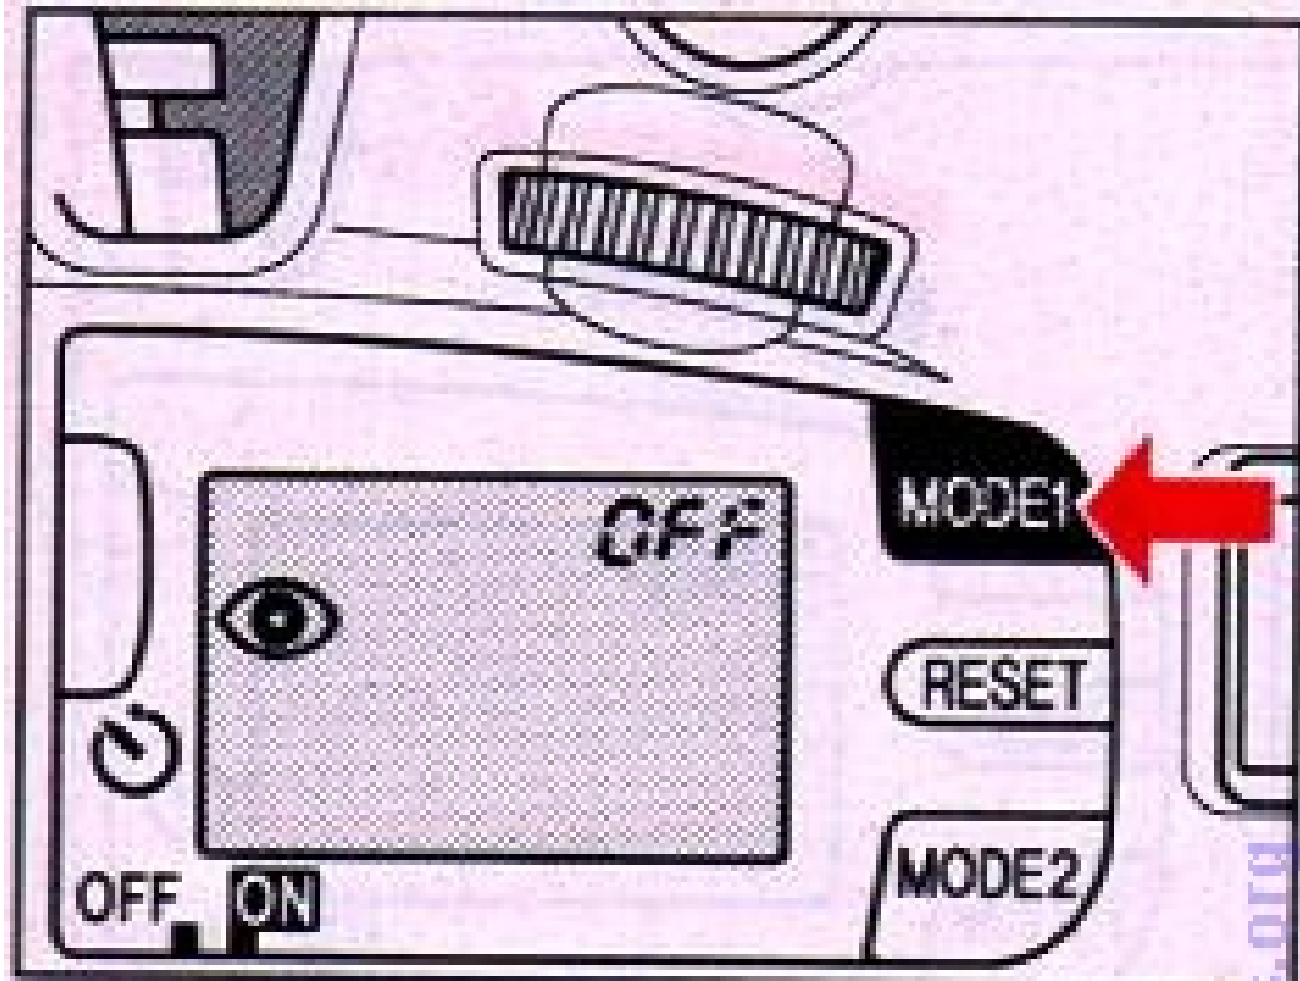


Fig. 86

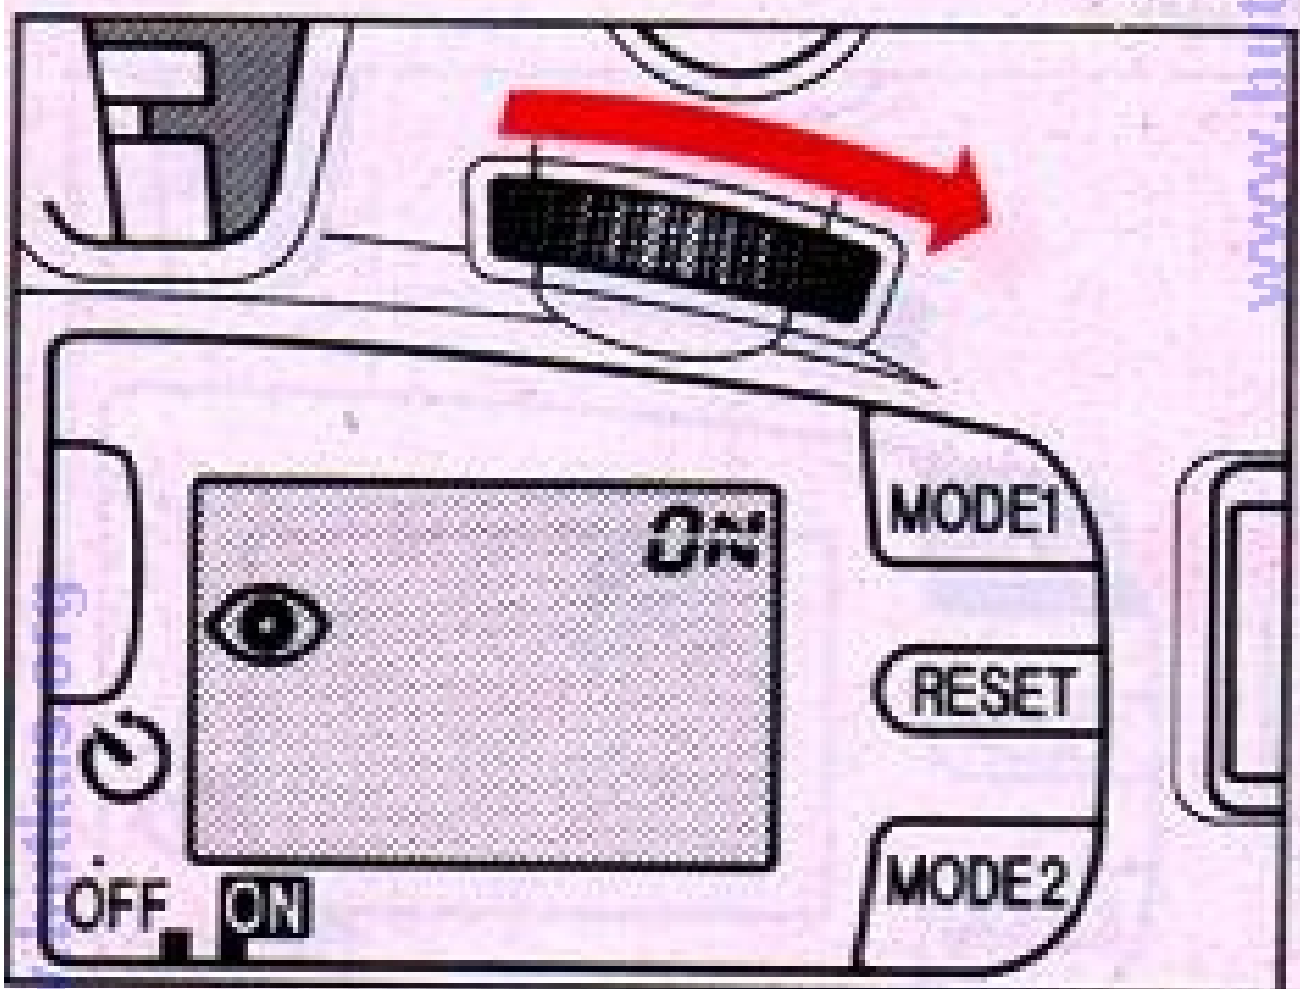


Fig. 87

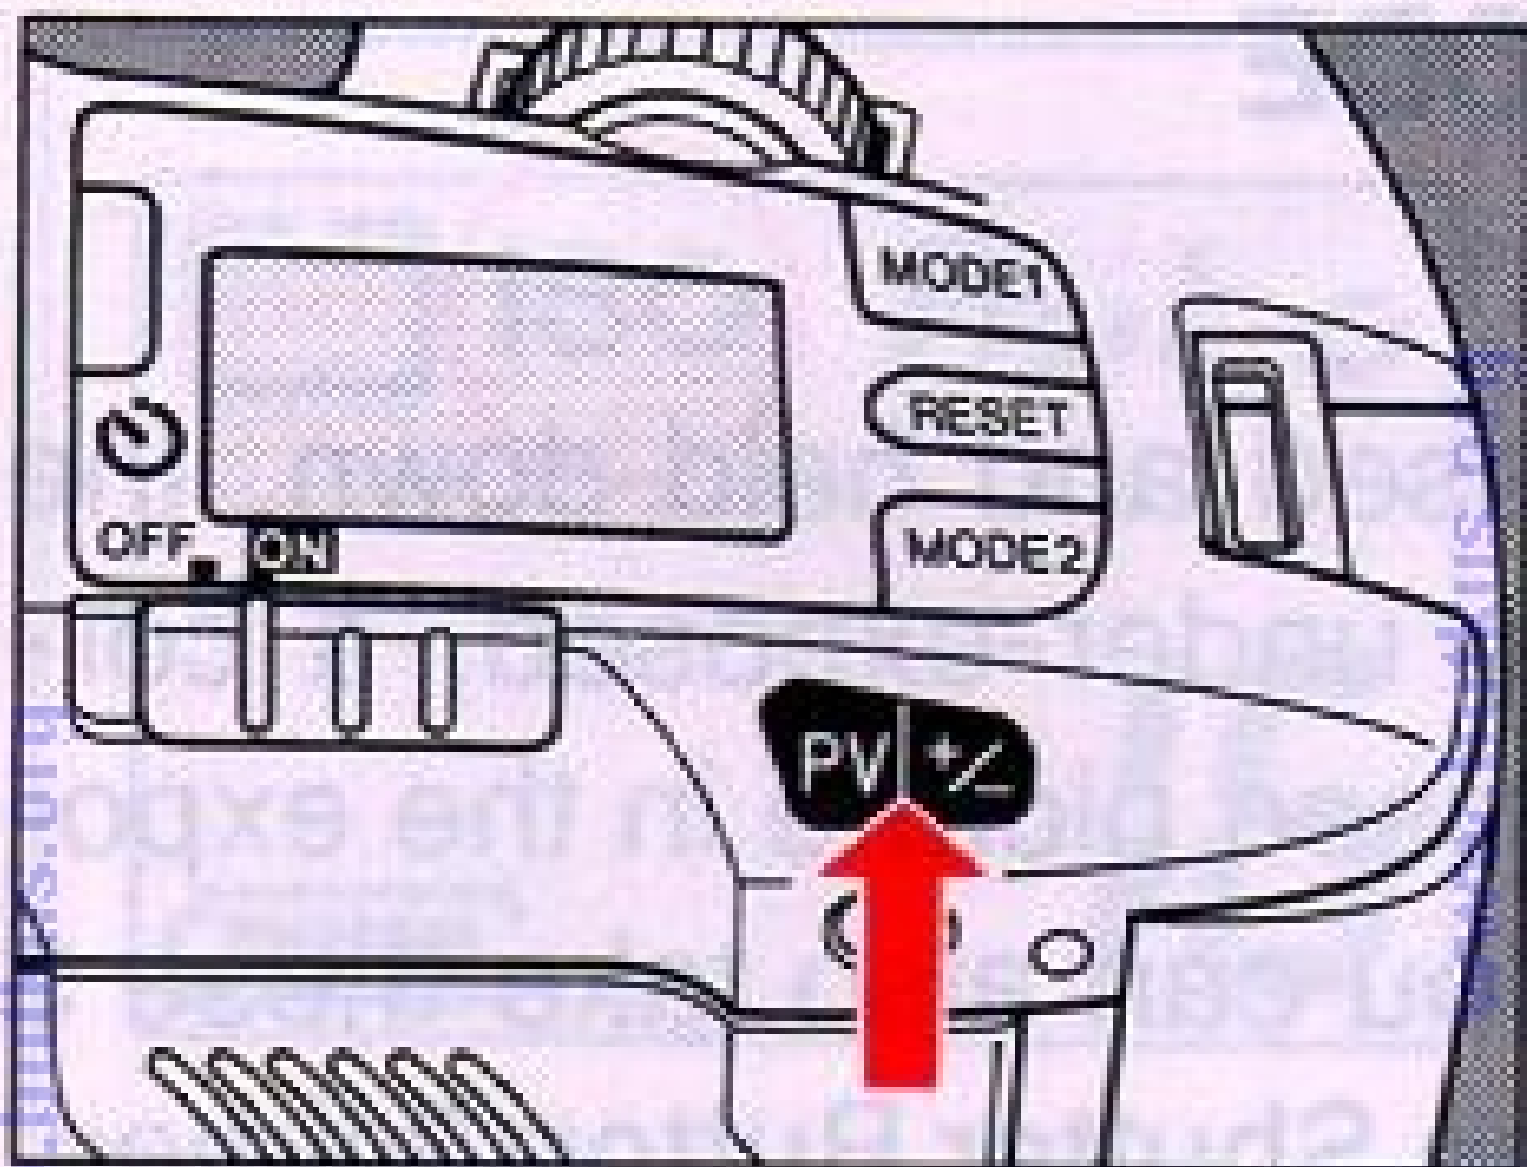


Fig. 91

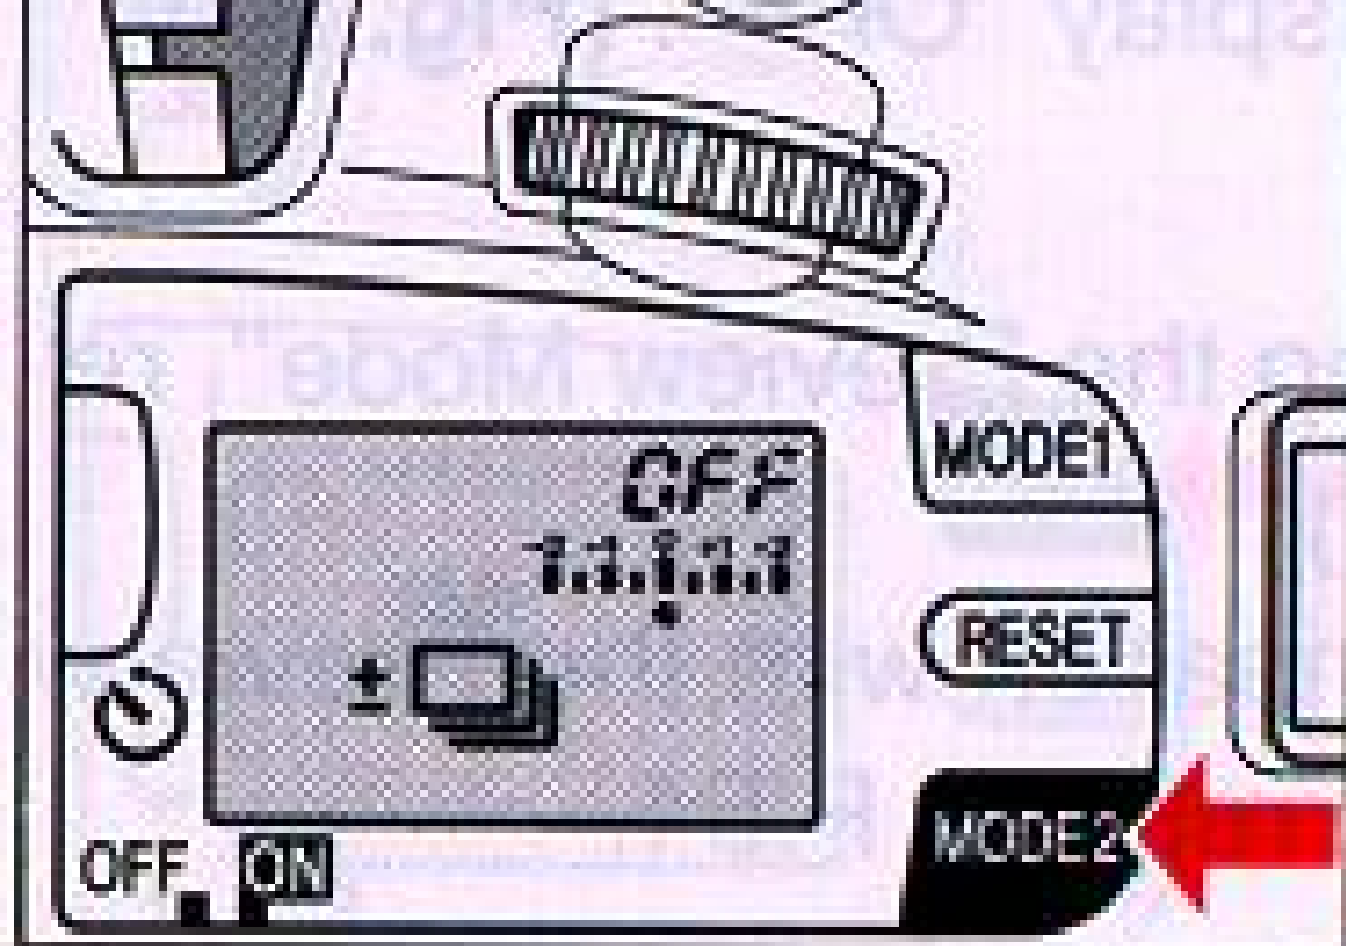


Fig. 95

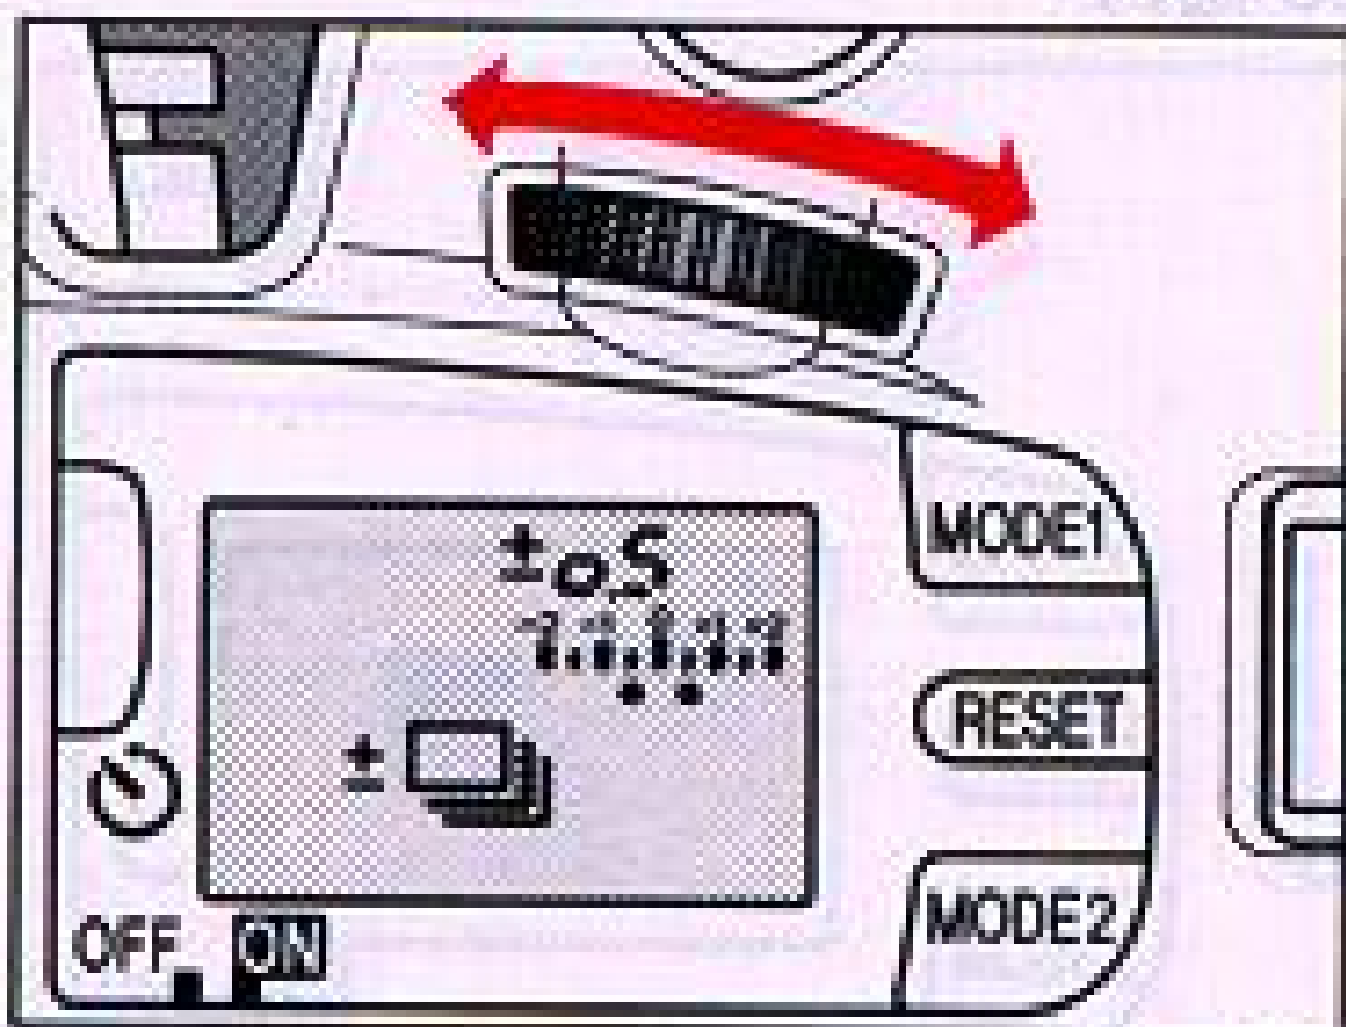


Fig. 96

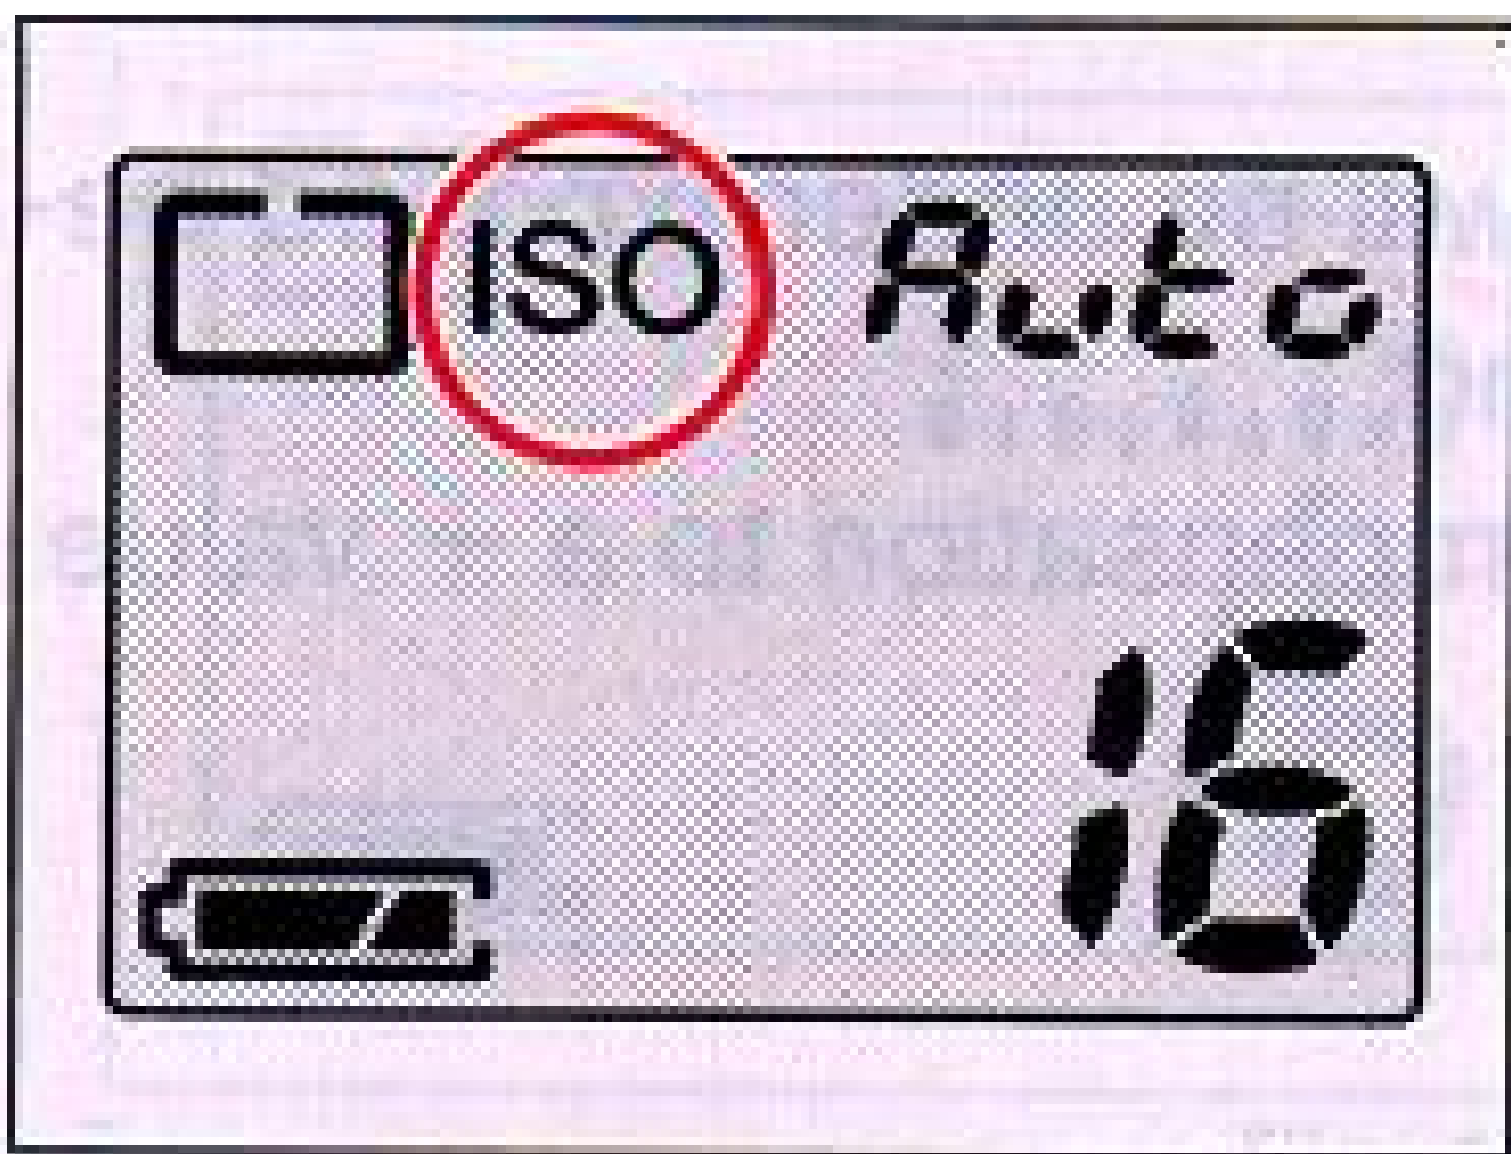


Fig. 97

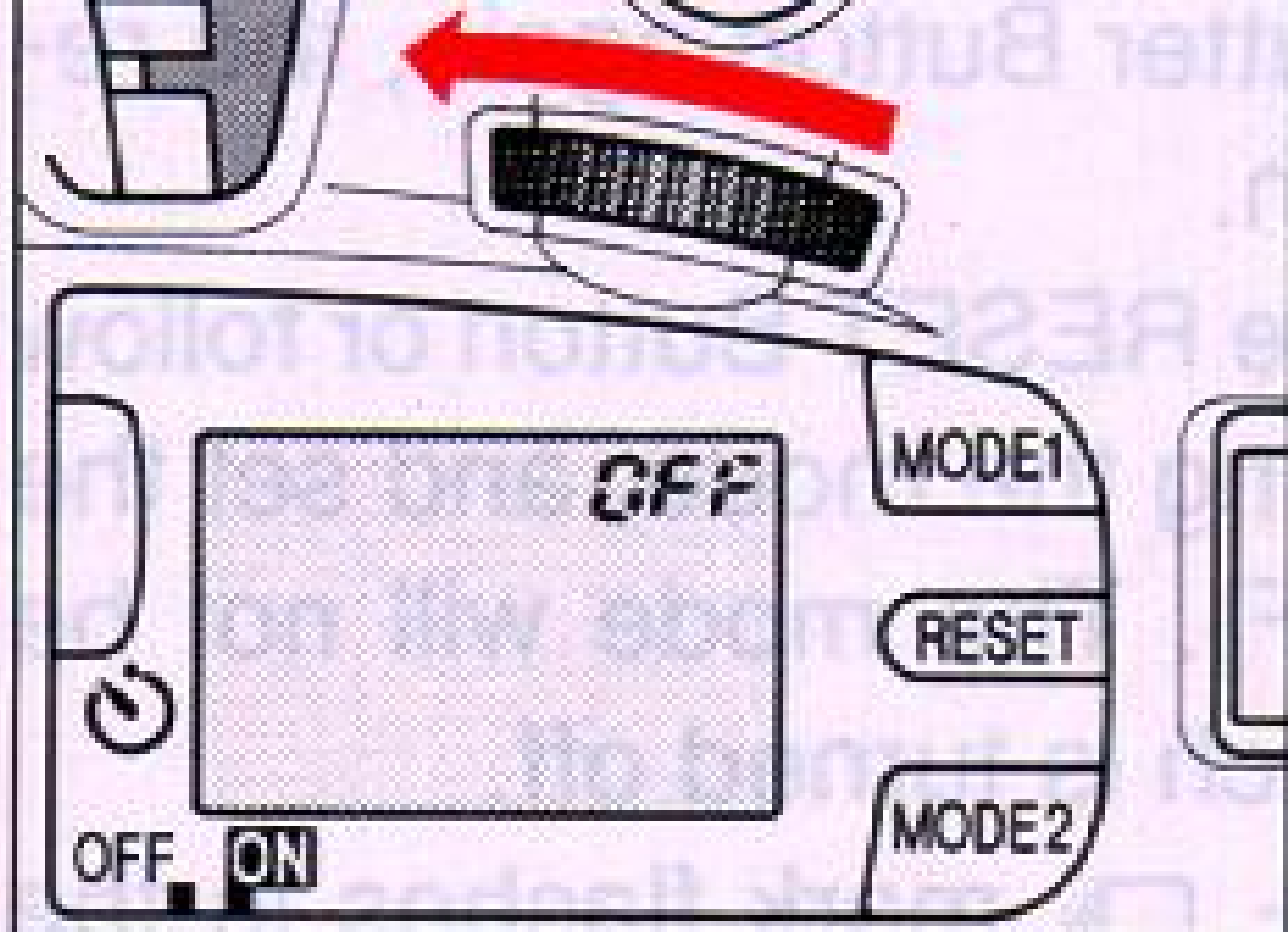


Fig. 93

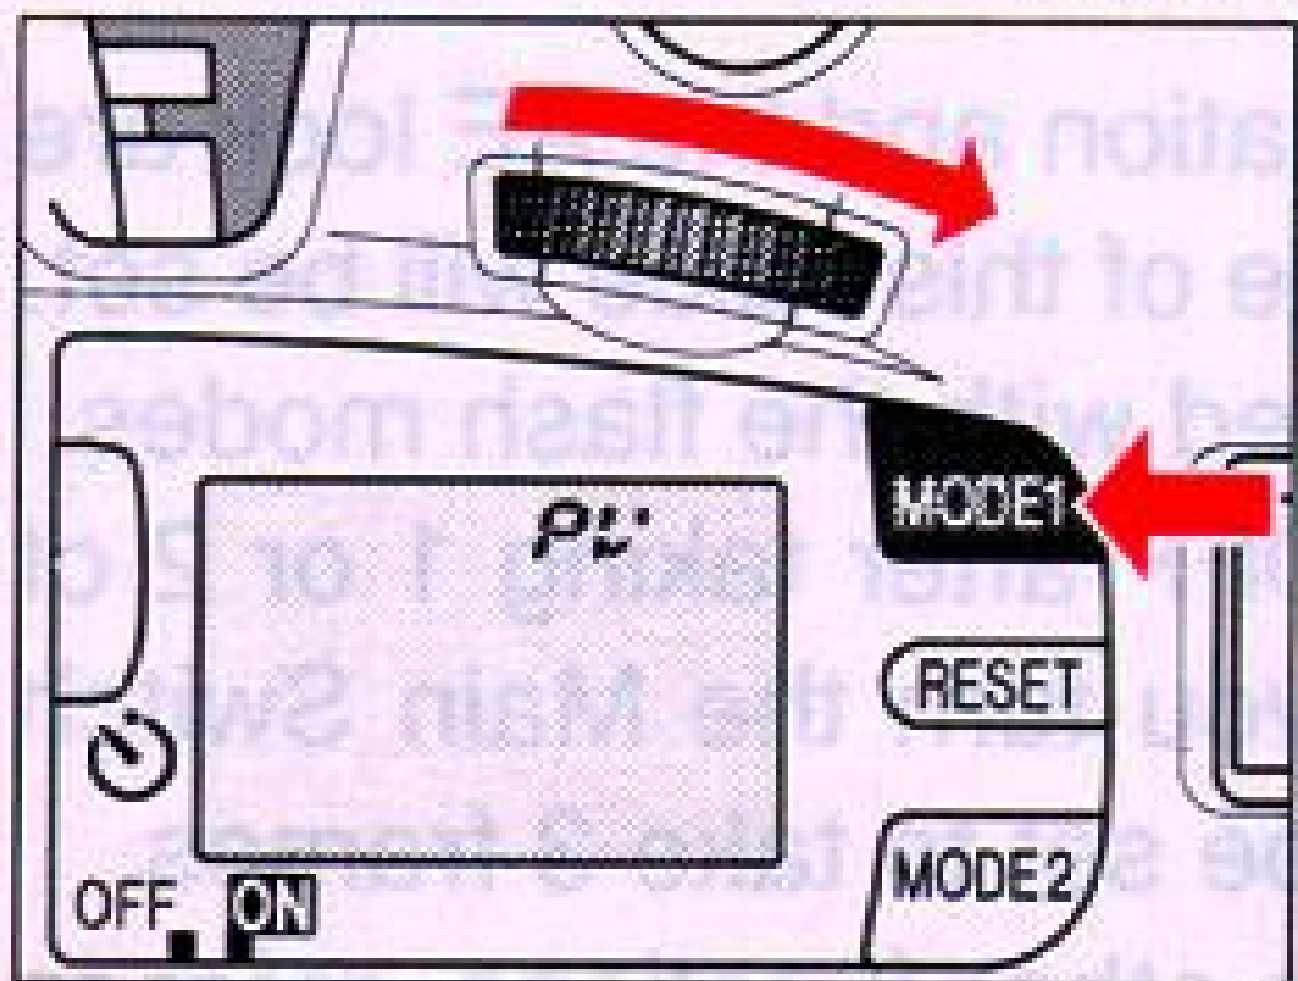


Fig. 94



-0.5 EV



0 EV



+0.5 EV

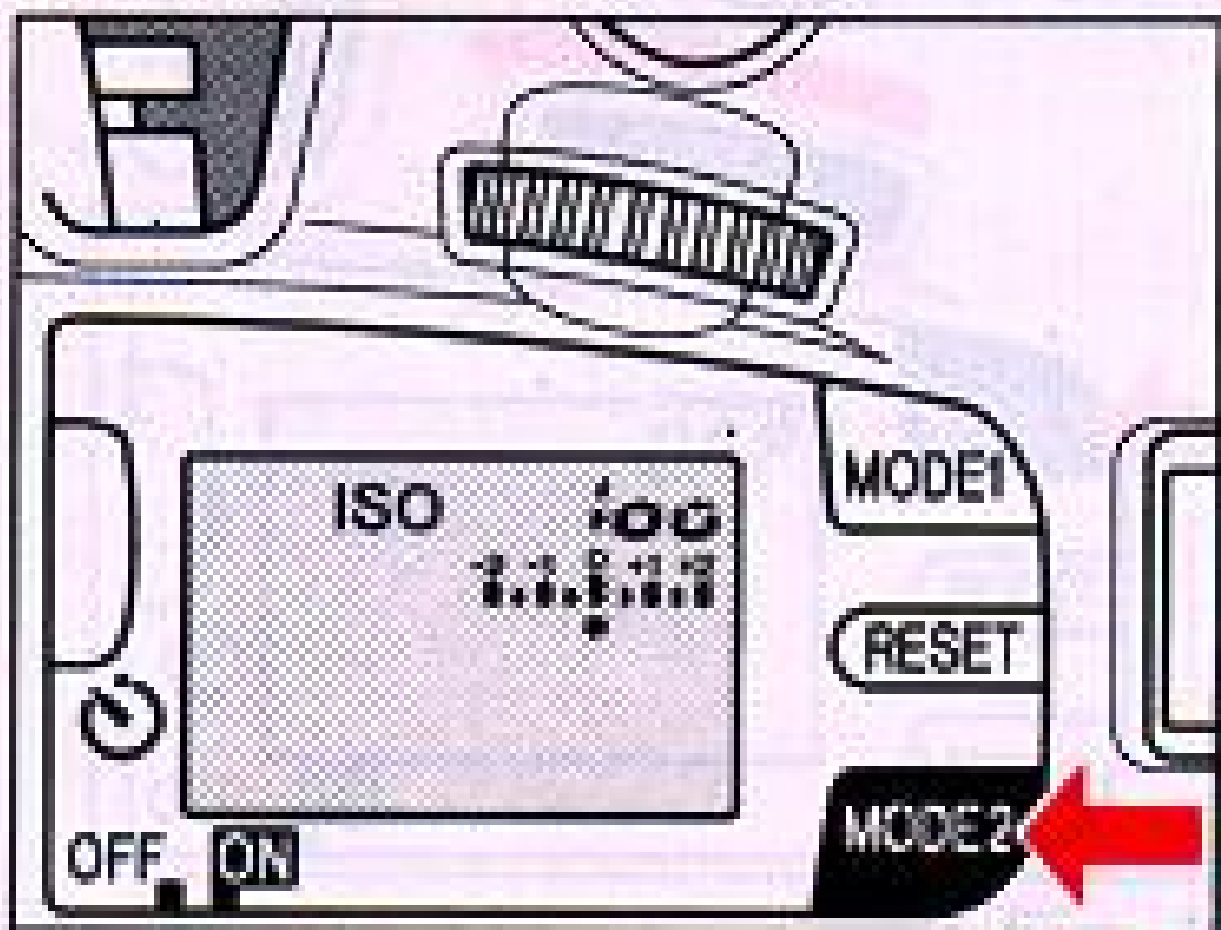


Fig. 98

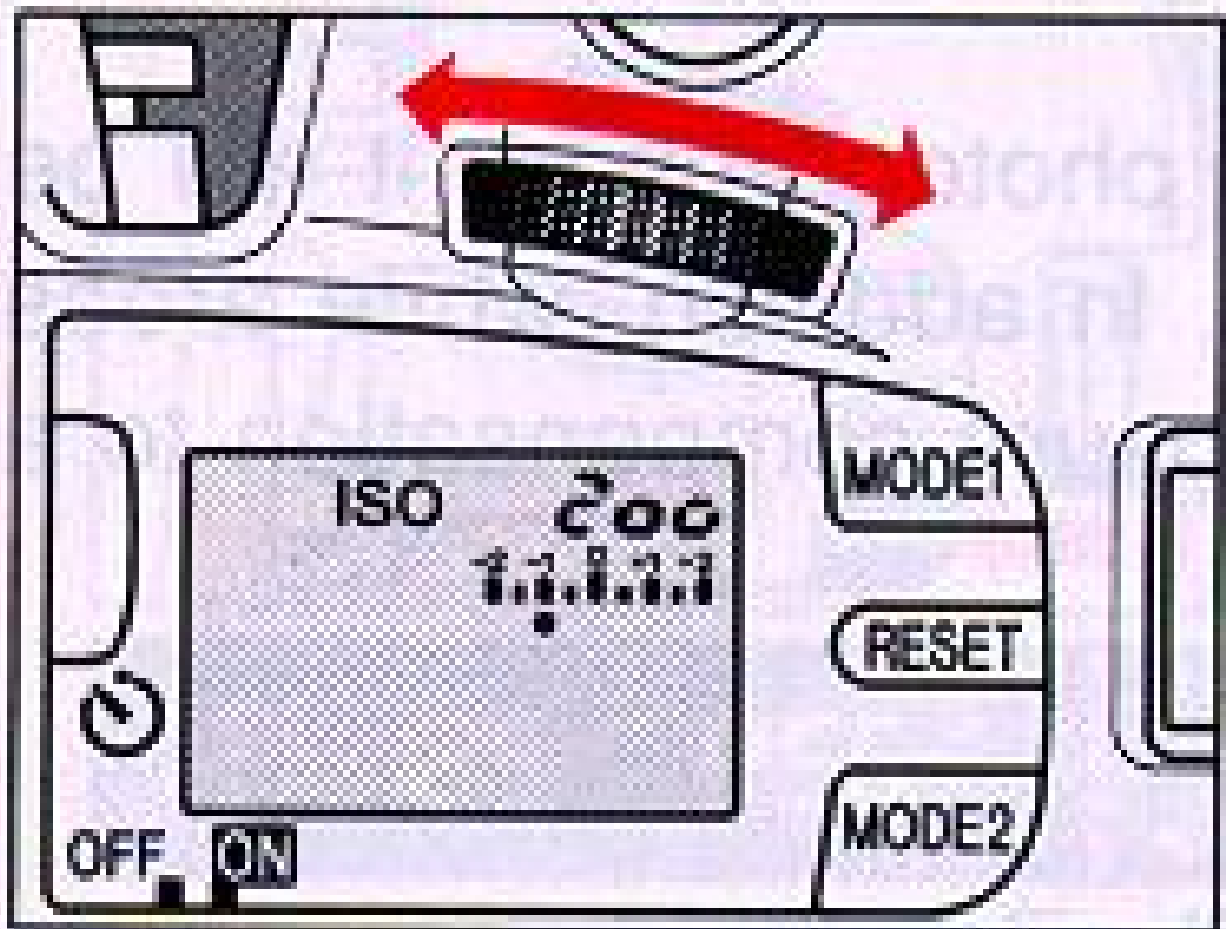


Fig. 99



By When White or Black is



-1.0 EV



+ 1.0 EV



When you shoot with the lens, the image is slightly out of focus.



+ 1.0 EV

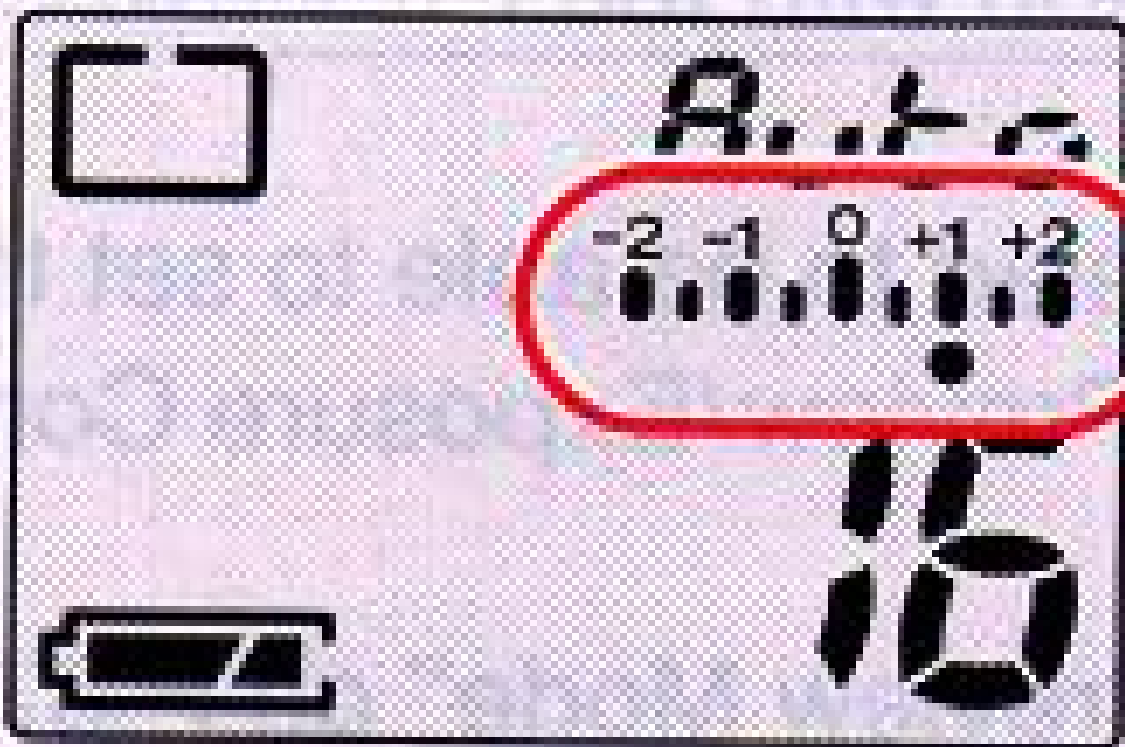


Fig. 100

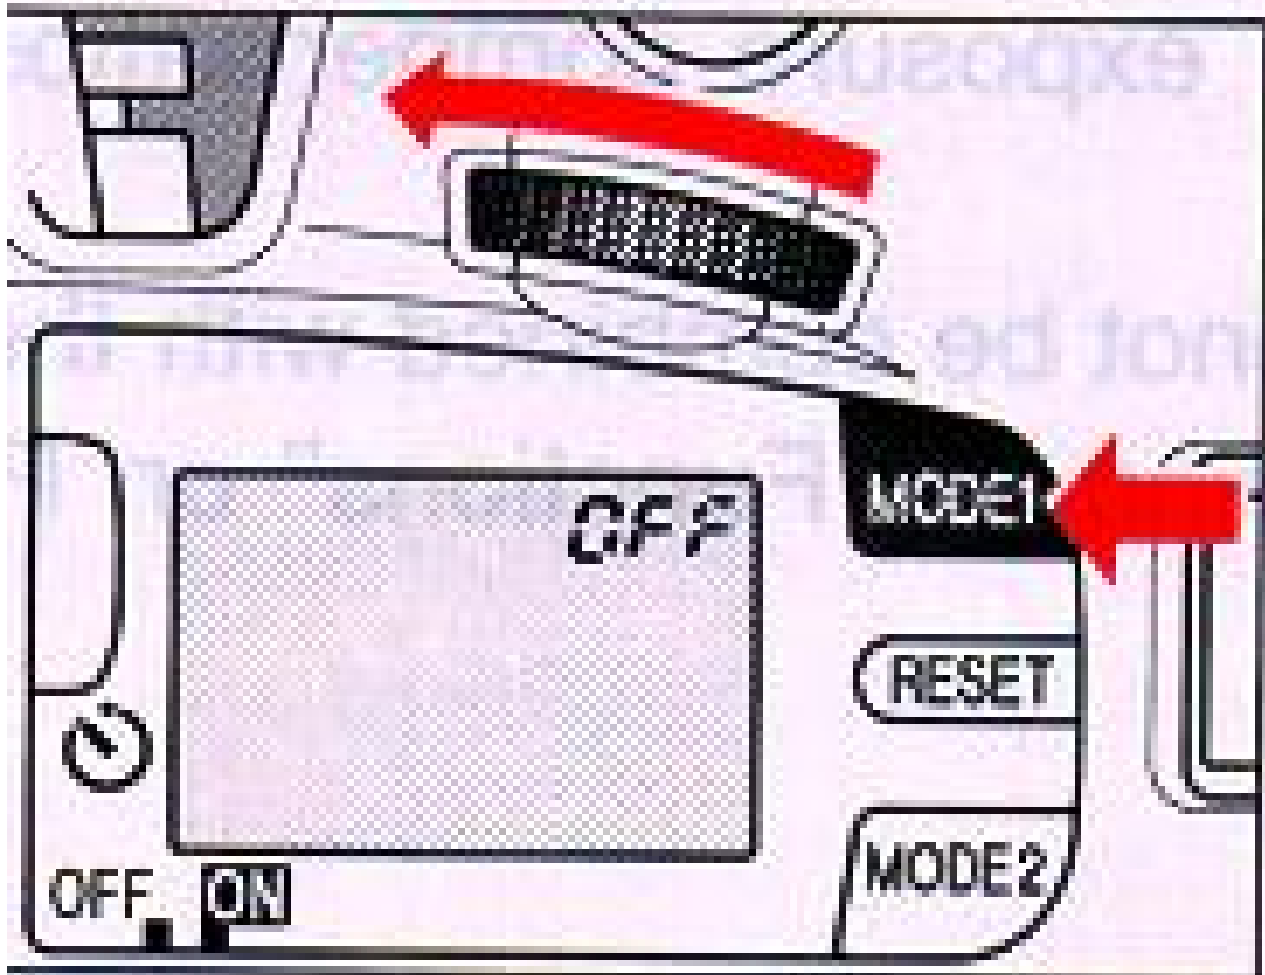


Fig. 101

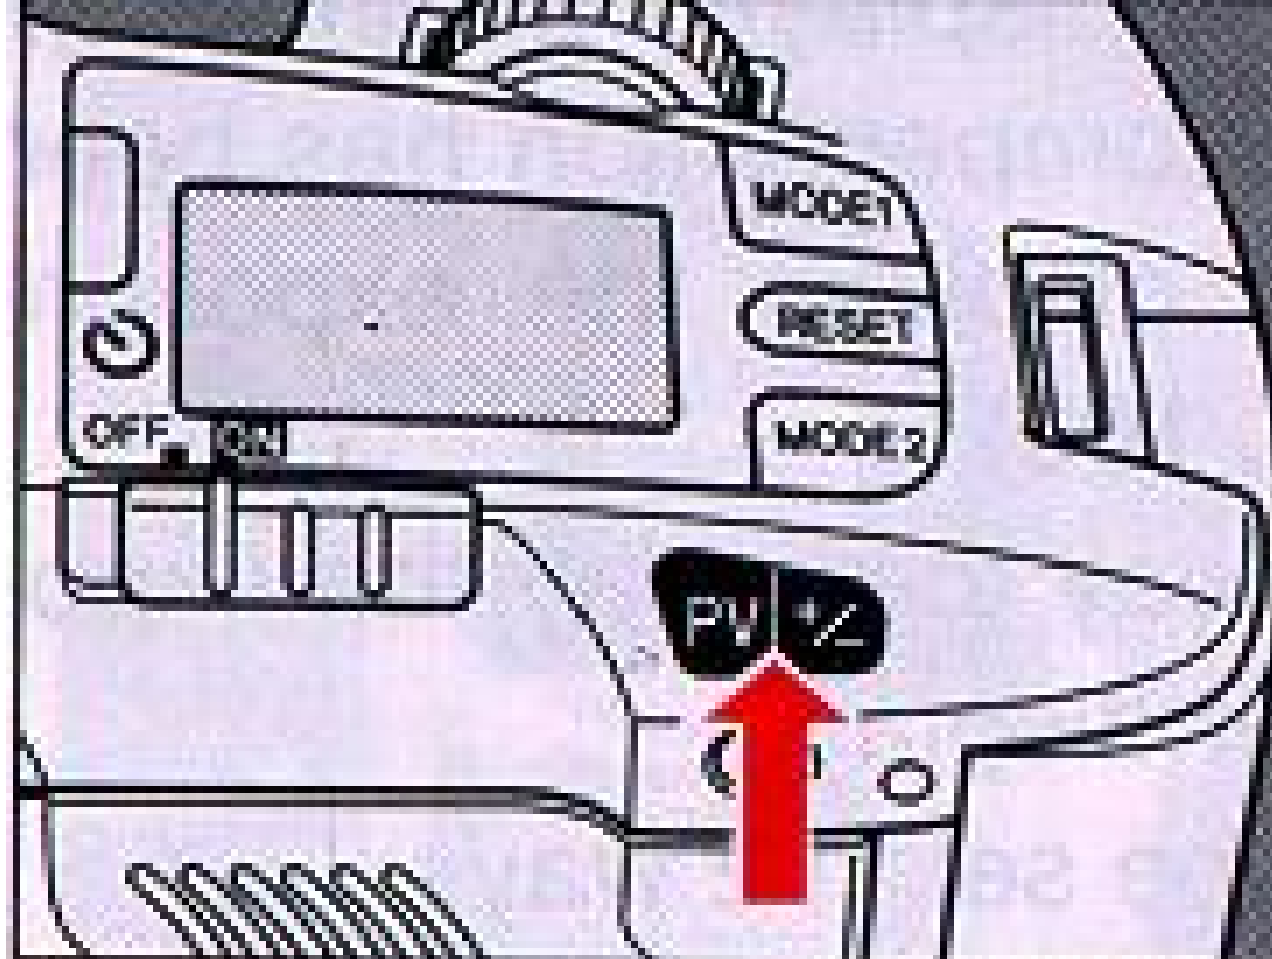


Fig. 104



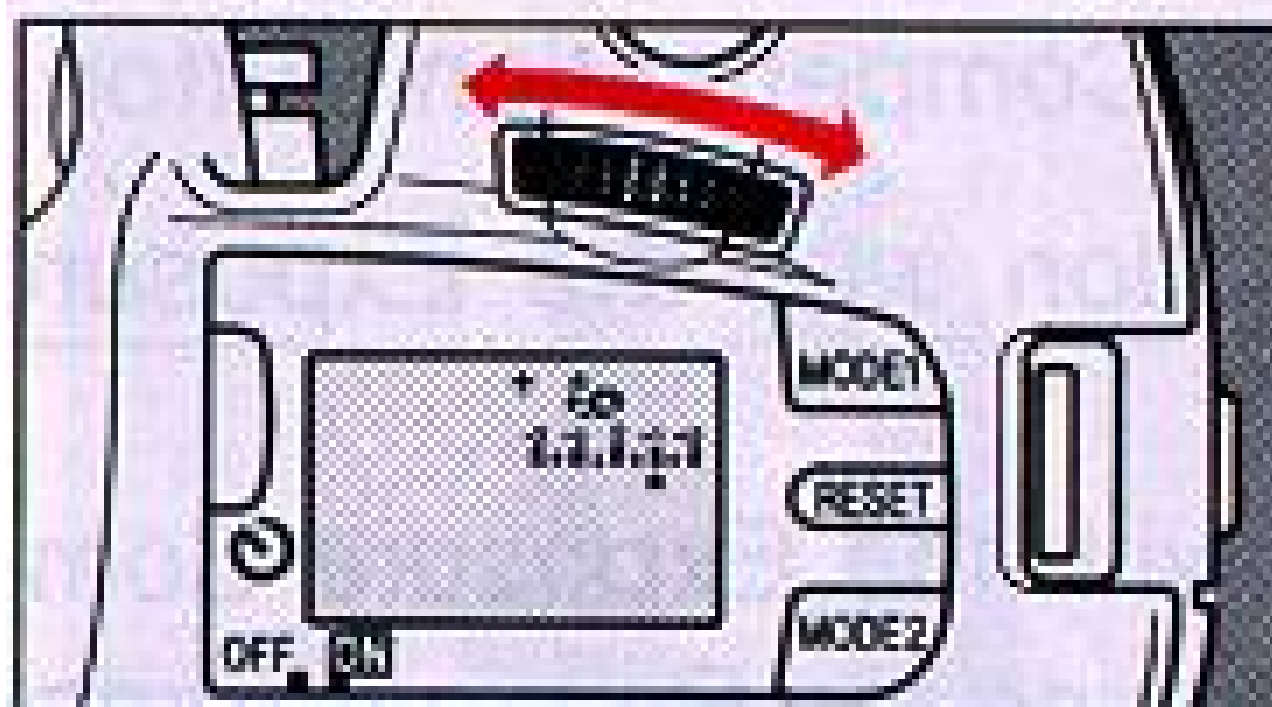


Fig. 105

4. QUICK GUIDE IN PROGRAM MODE

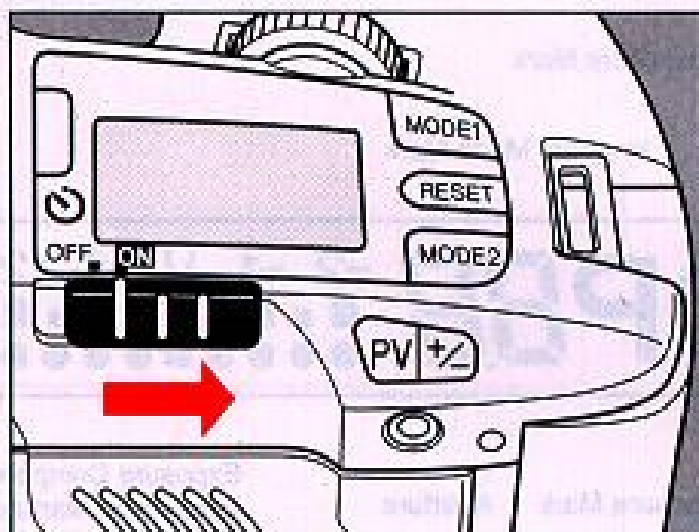

1. Turn the Main Switch ON.

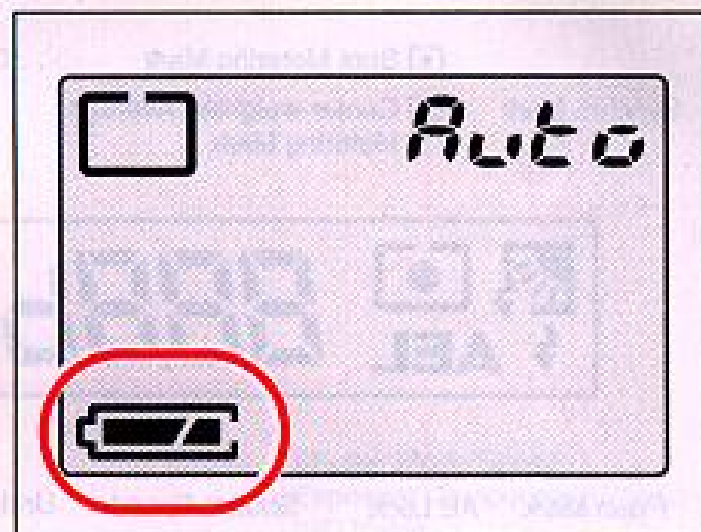

2. Check if the battery mark on the LCD Panel is in good condition.



Fig. 106



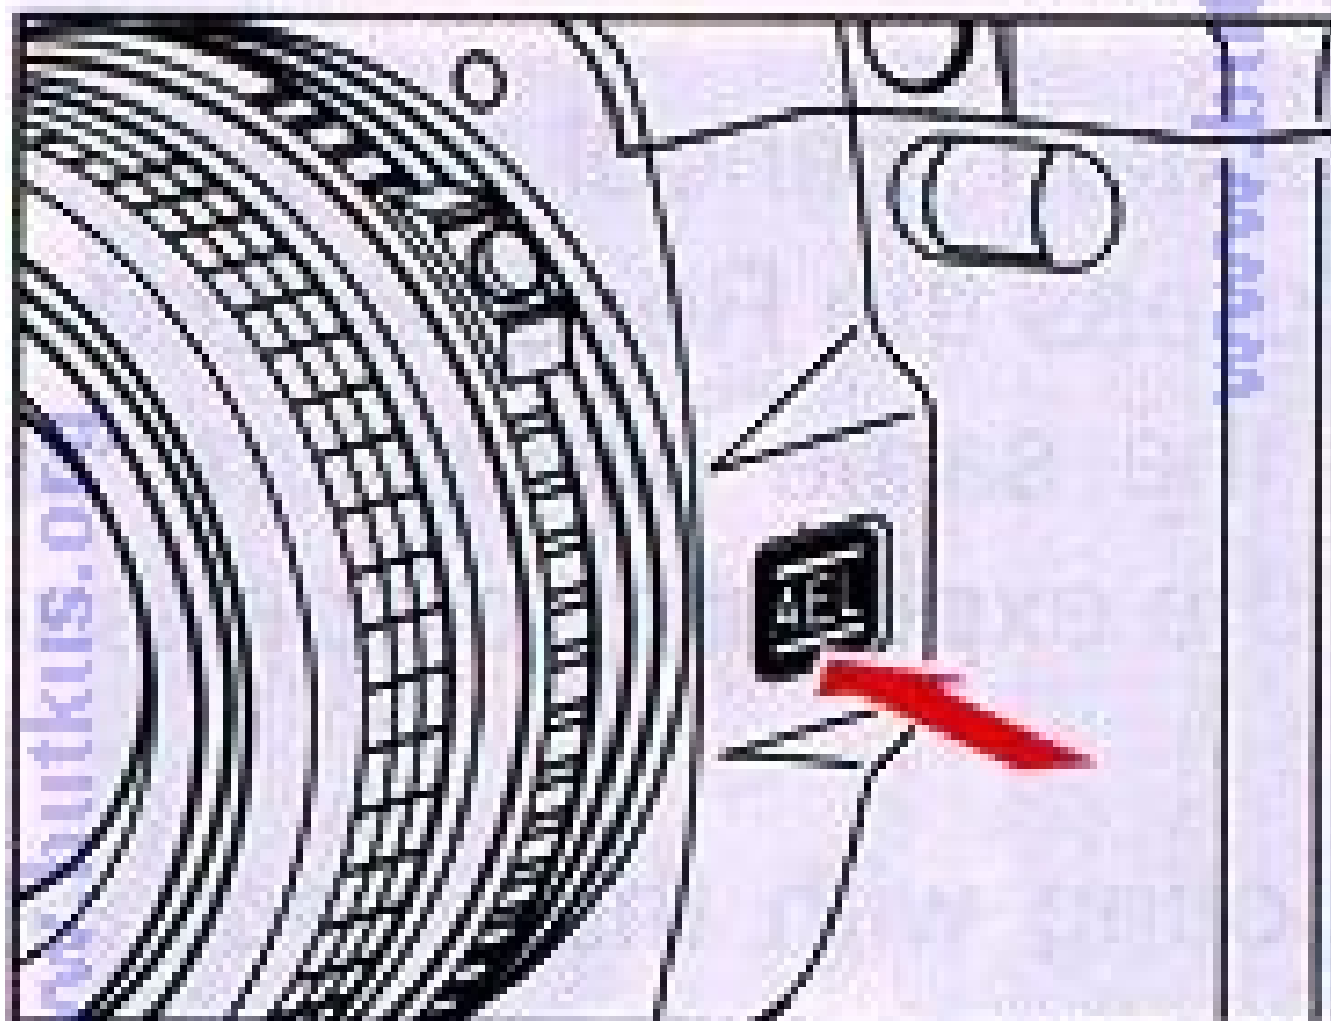


Fig. 107

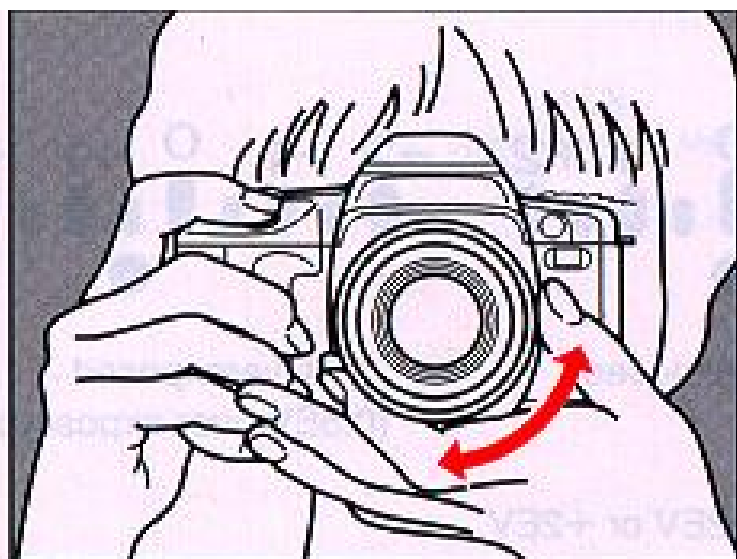

9. Hold the camera and focus on the subject.

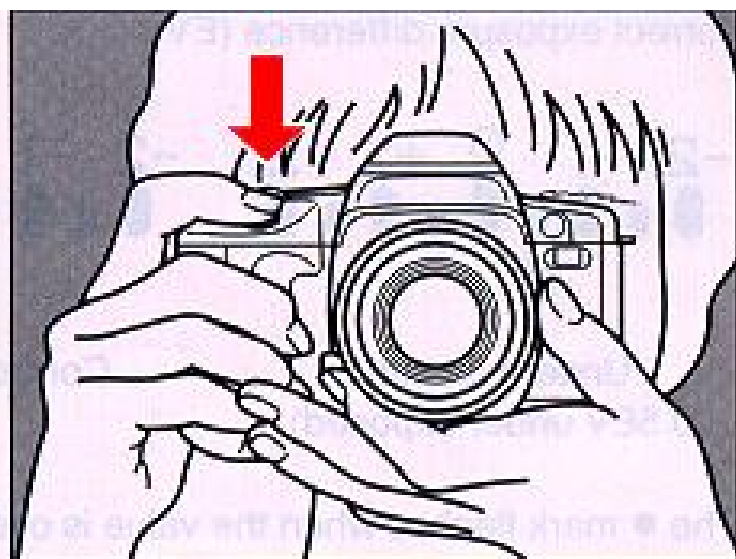


10. Press the Shutter Button to shoot.




Combination



+ 1.0 EV

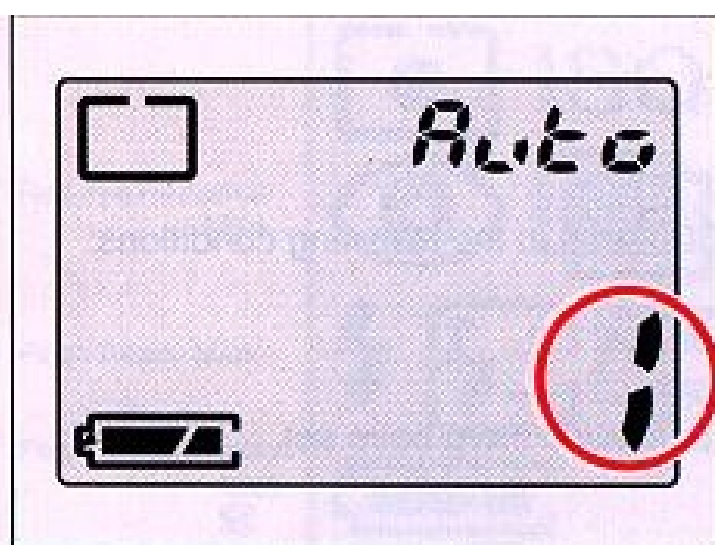

5. Check that "1" is displayed on the Exposure Counter.

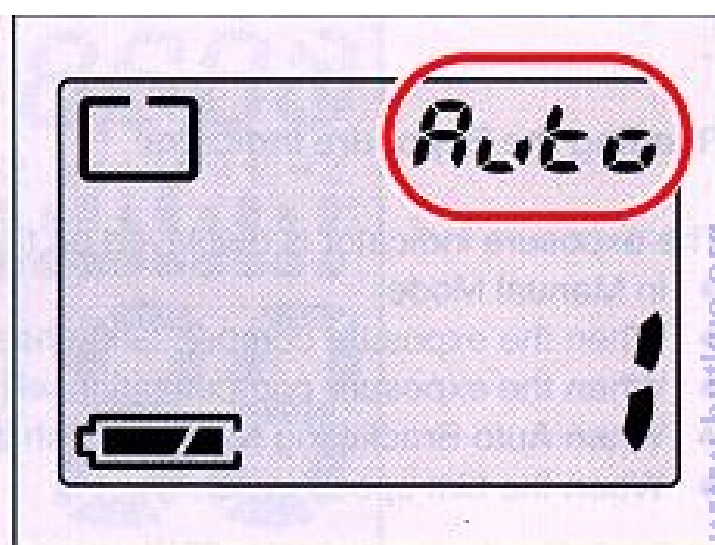

6. Check that "Auto" is displayed in the LCD Panel. If another mark is displayed, press the Reset Button.



Combinzlio



— 1.0 EV

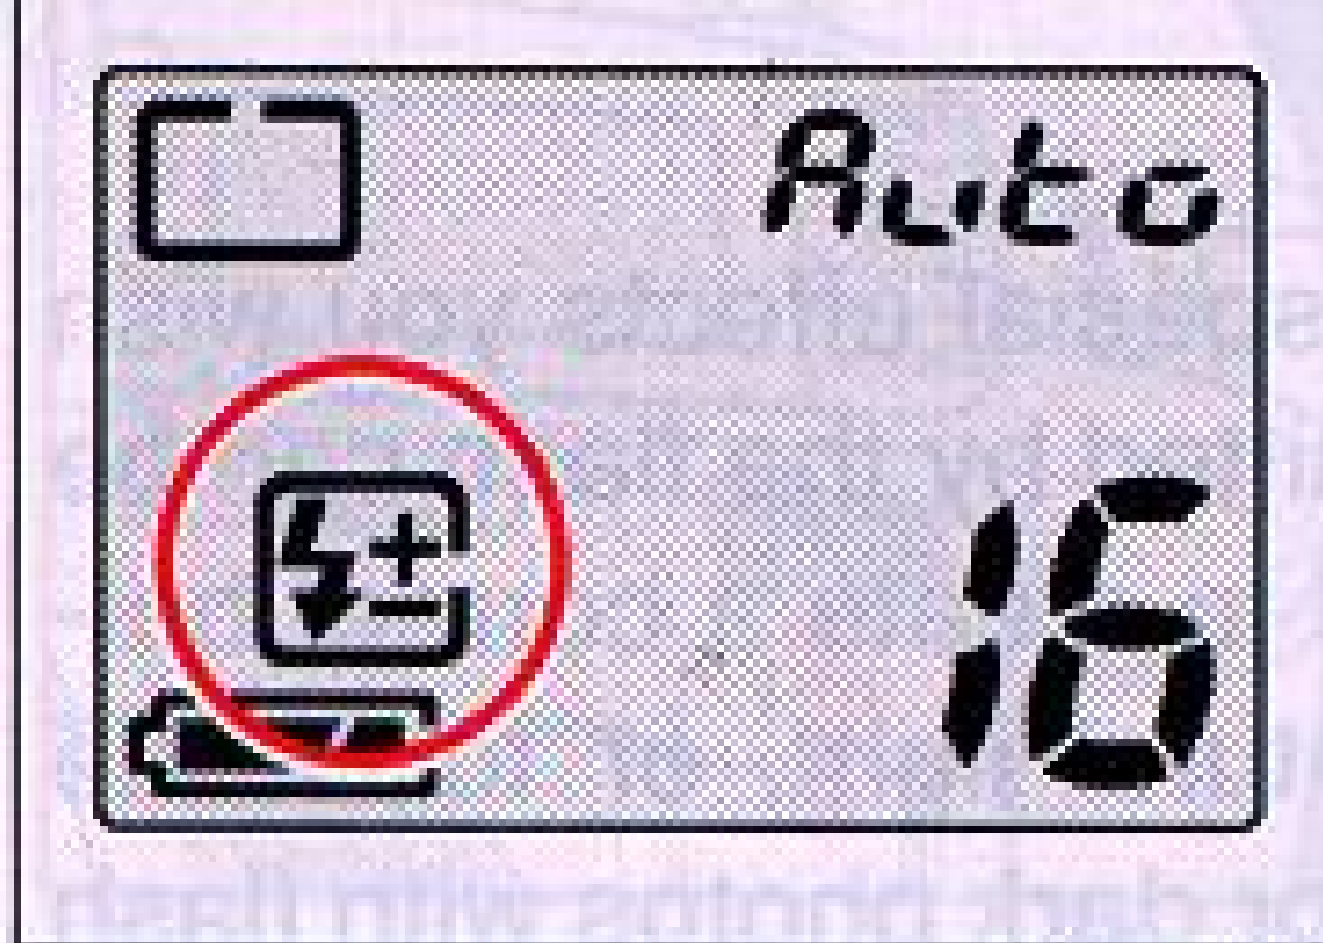


Fig. 108



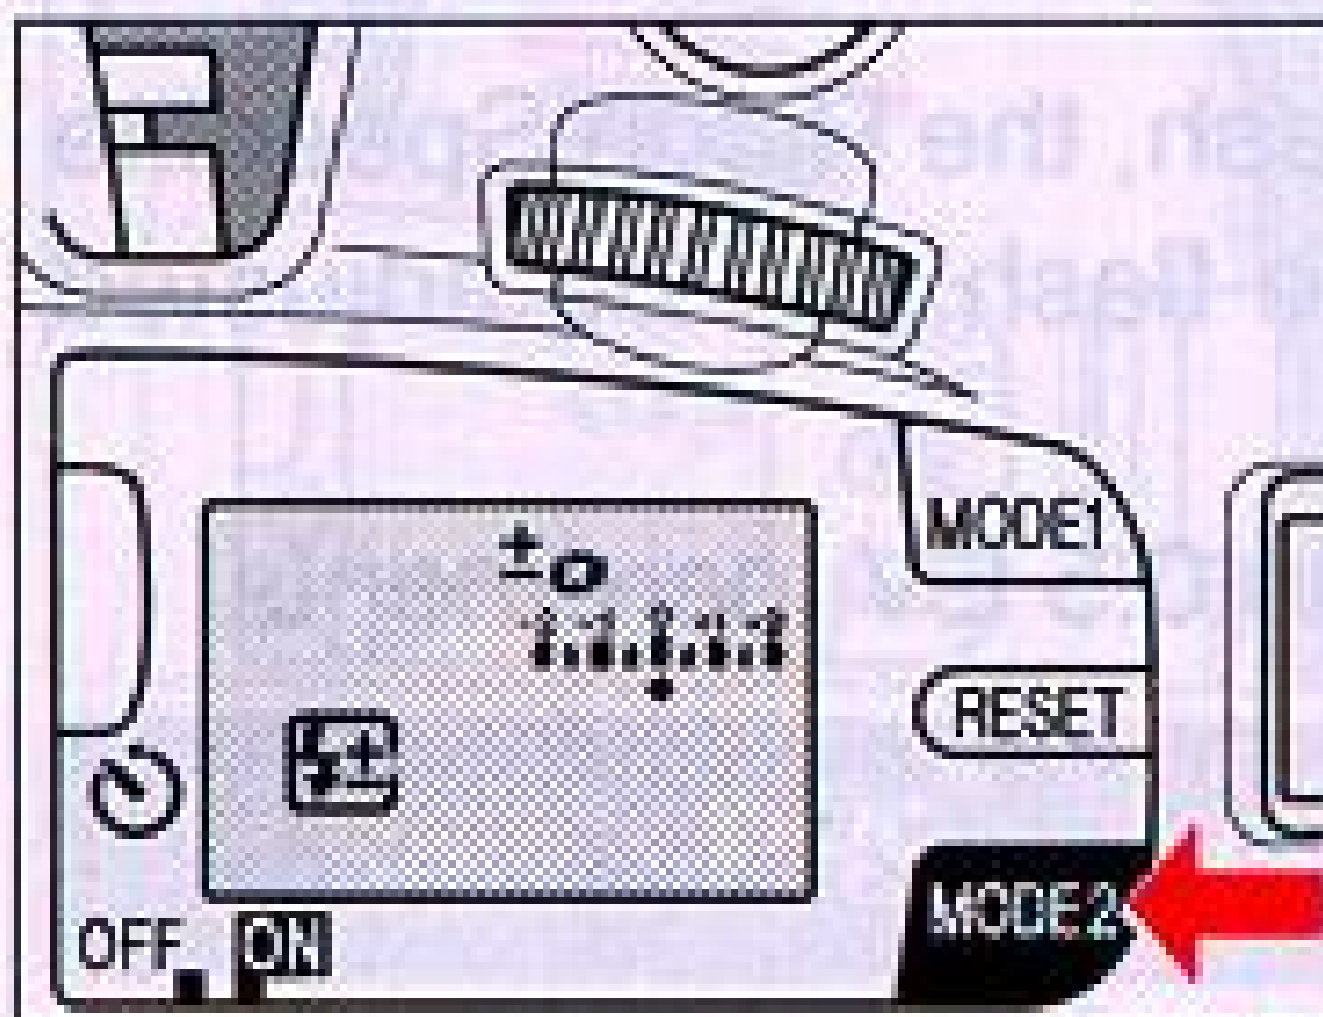



Fig. 109

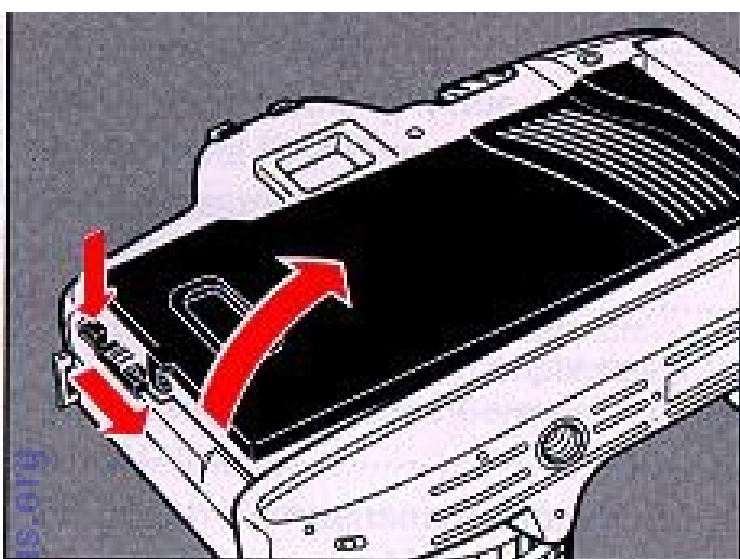


3. Open the back cover and load the film.

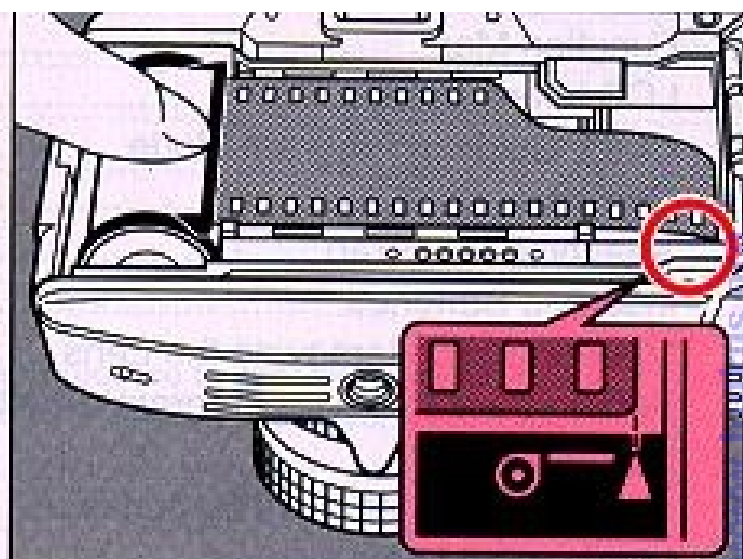

4. Align the film leader with the film leader position mark, and close the back cover. The film will automatically wind on.

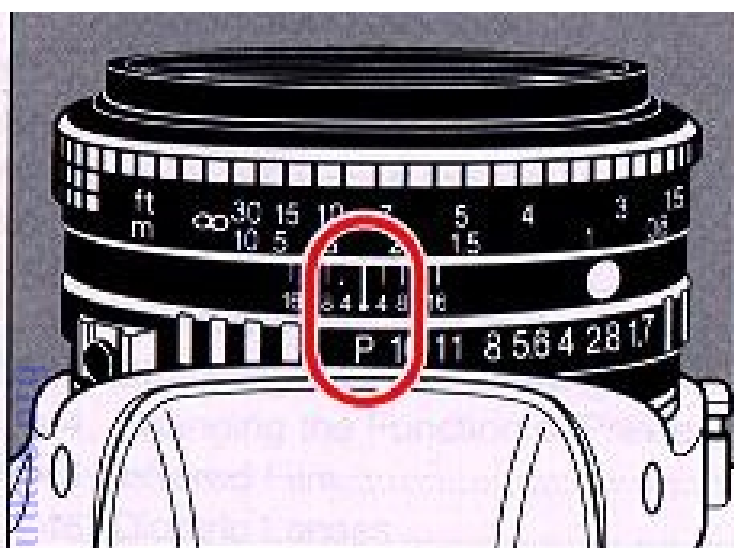

7. Set the lens aperture on "P".

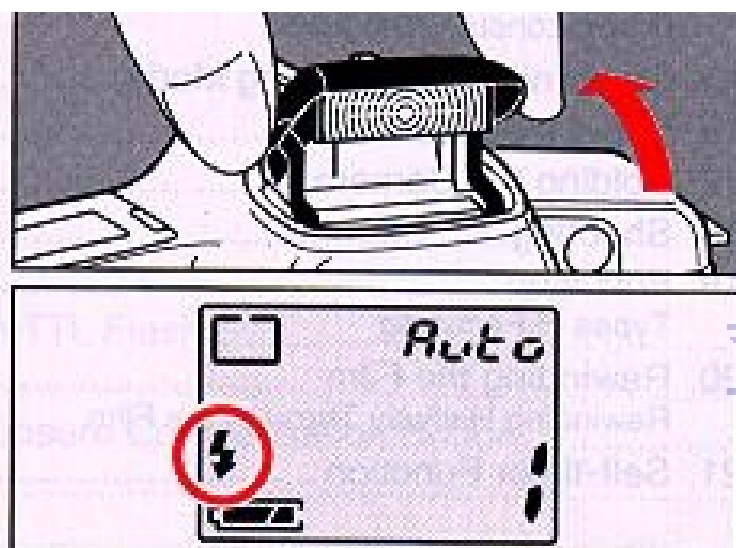

8. When the subject is poorly lit, lift the Built-in Flash. PF



Fig. 112



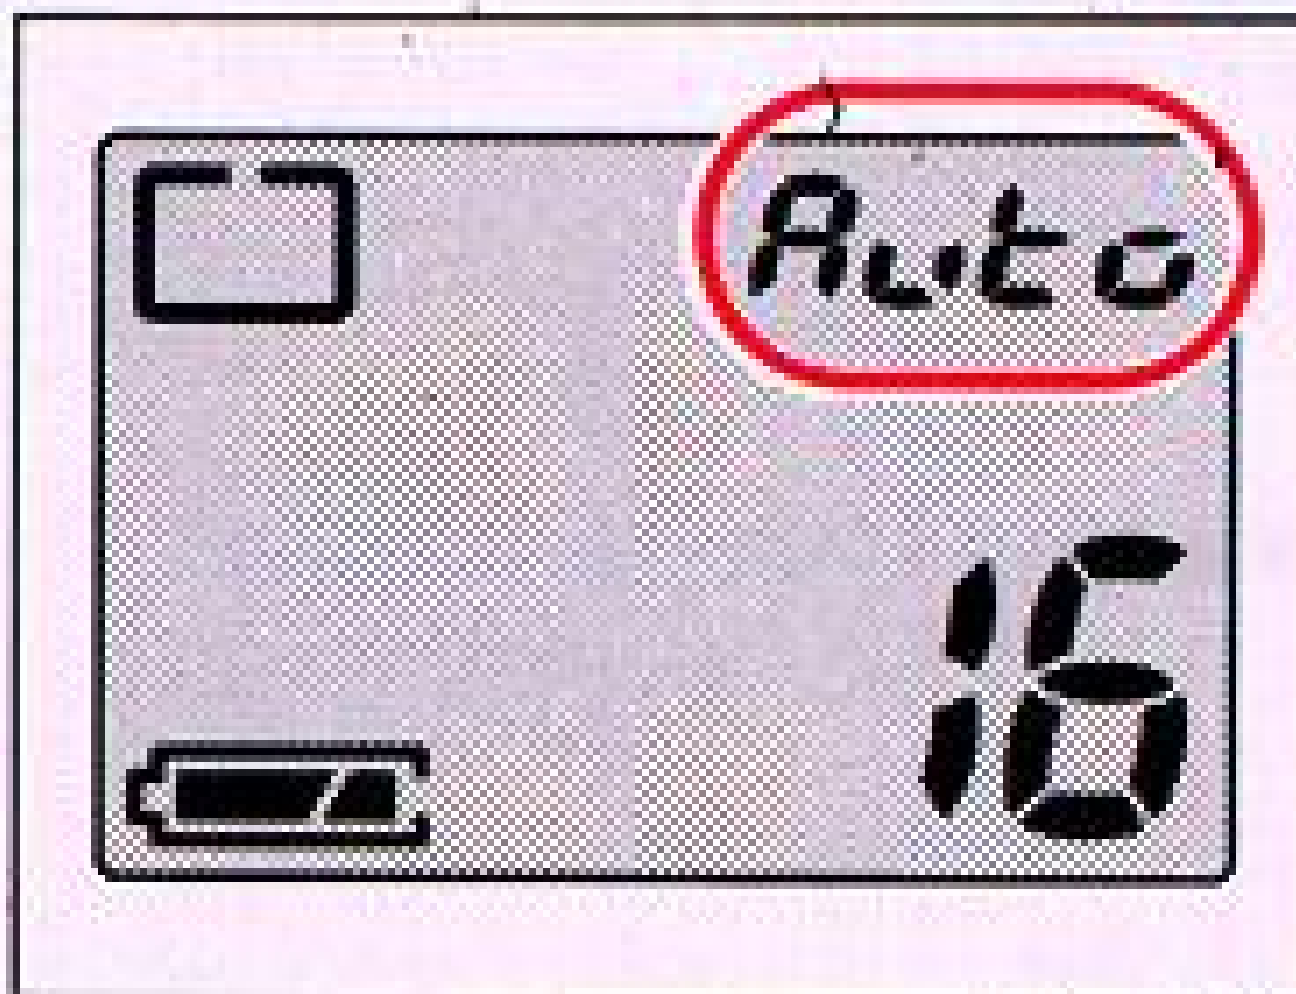


Fig. 113

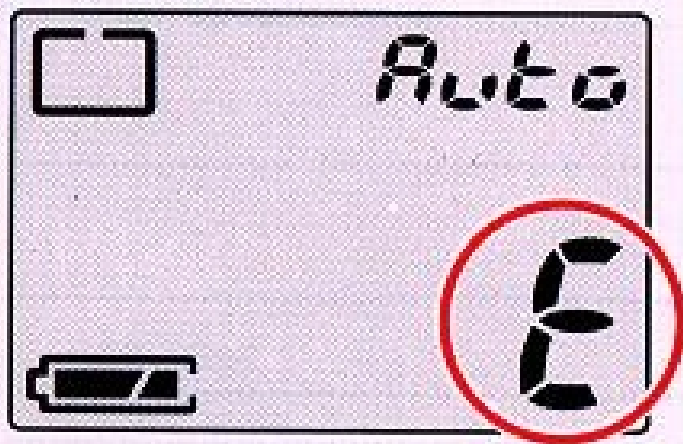

11. When the film reaches the end, it will automatically rewind and "E" is displayed in the Exposure Counter.

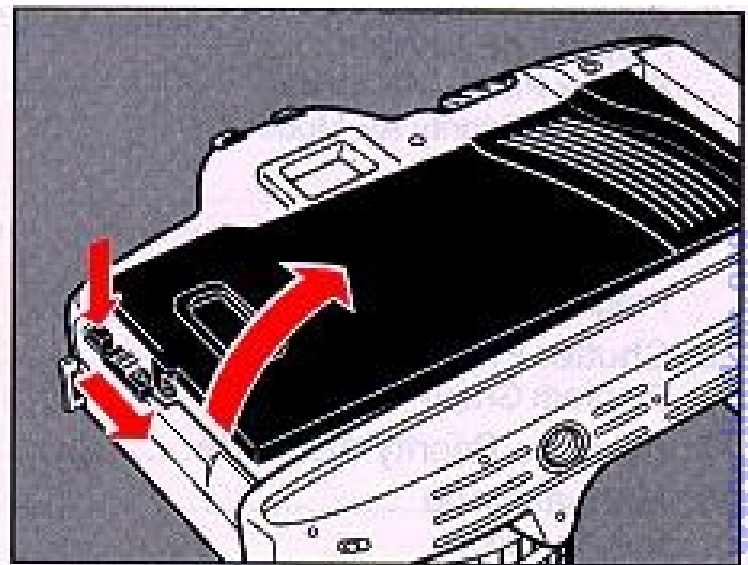

12. Open the back cover and remove the film.



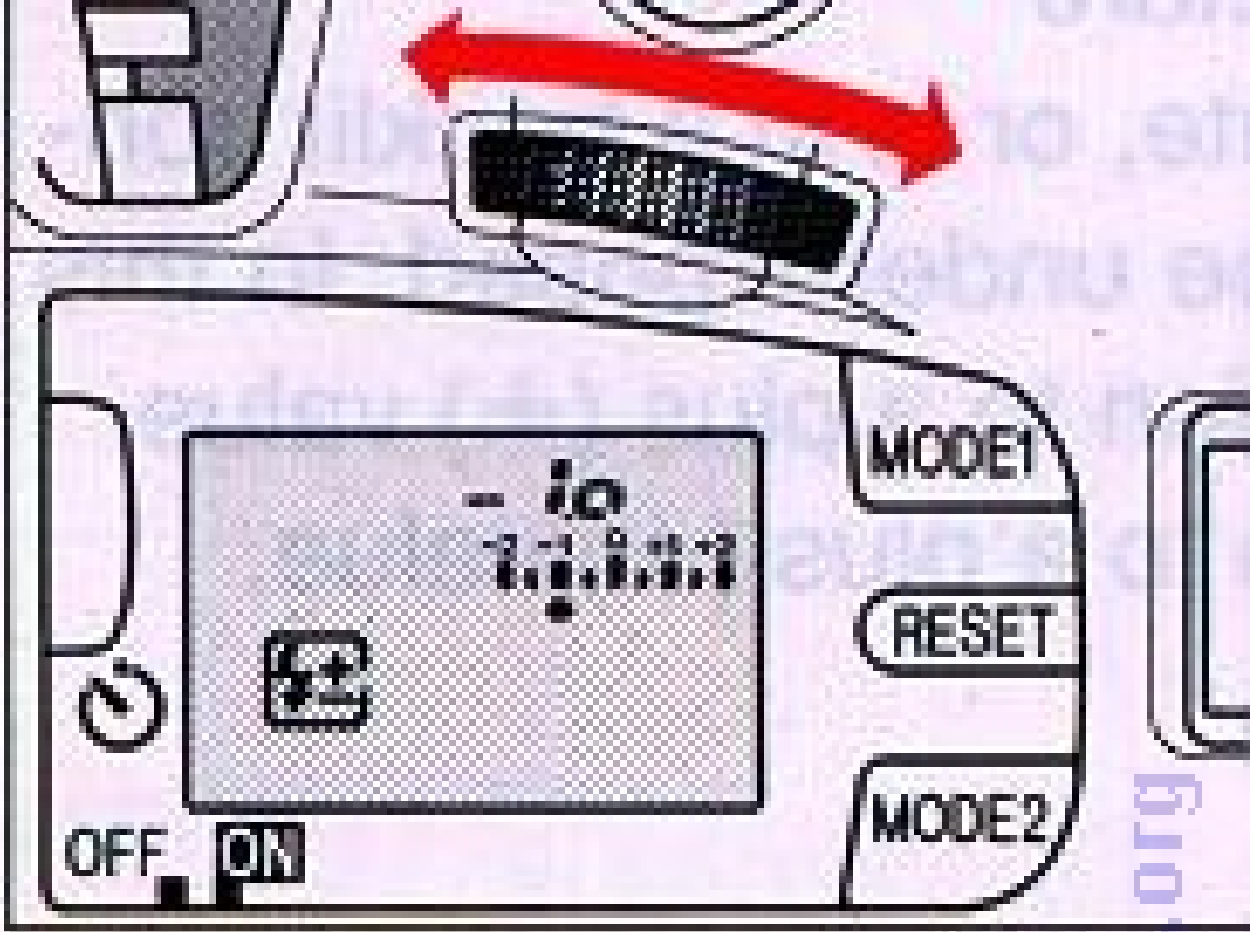


Fig. 110

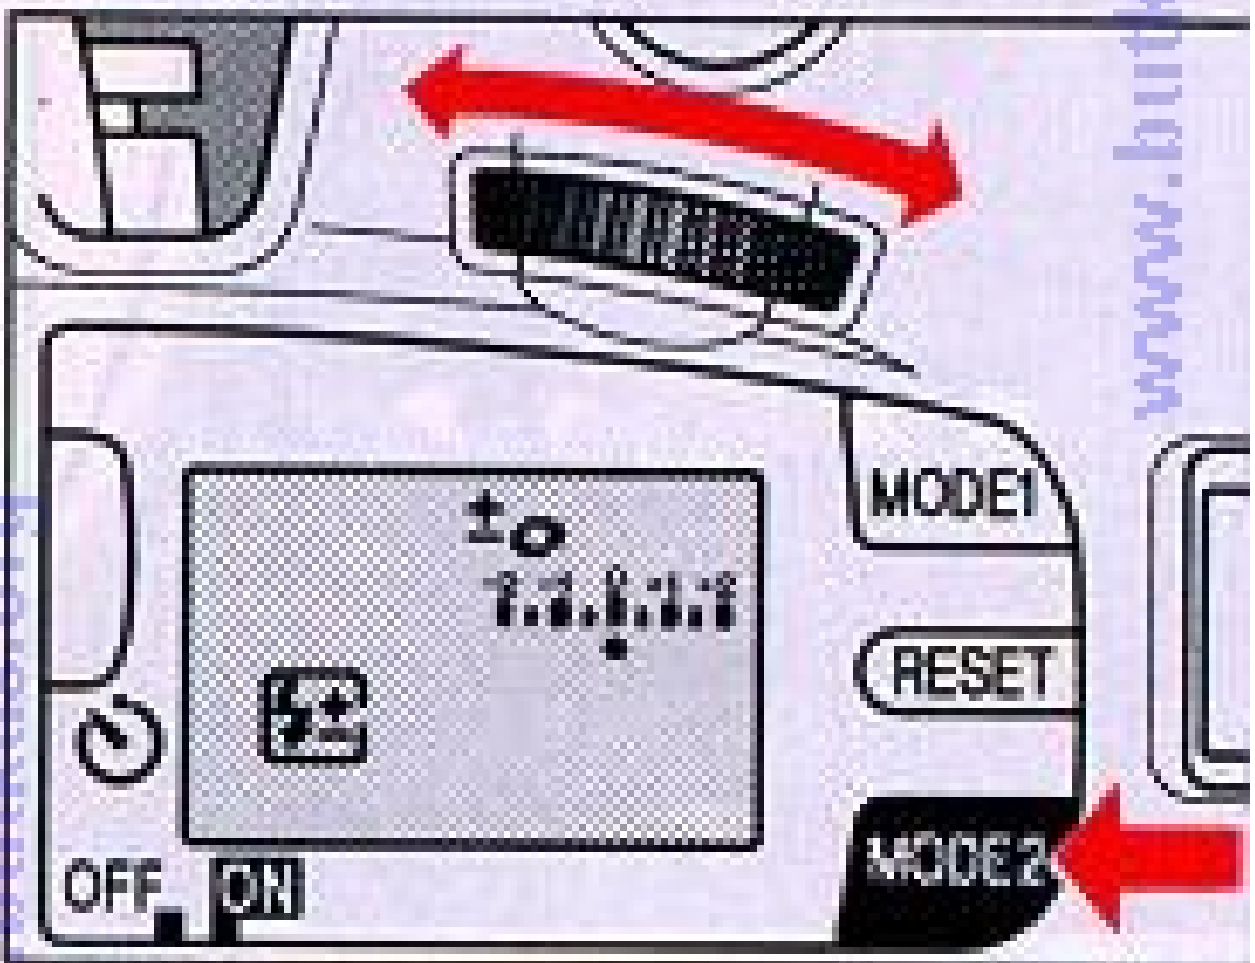


Fig. 111

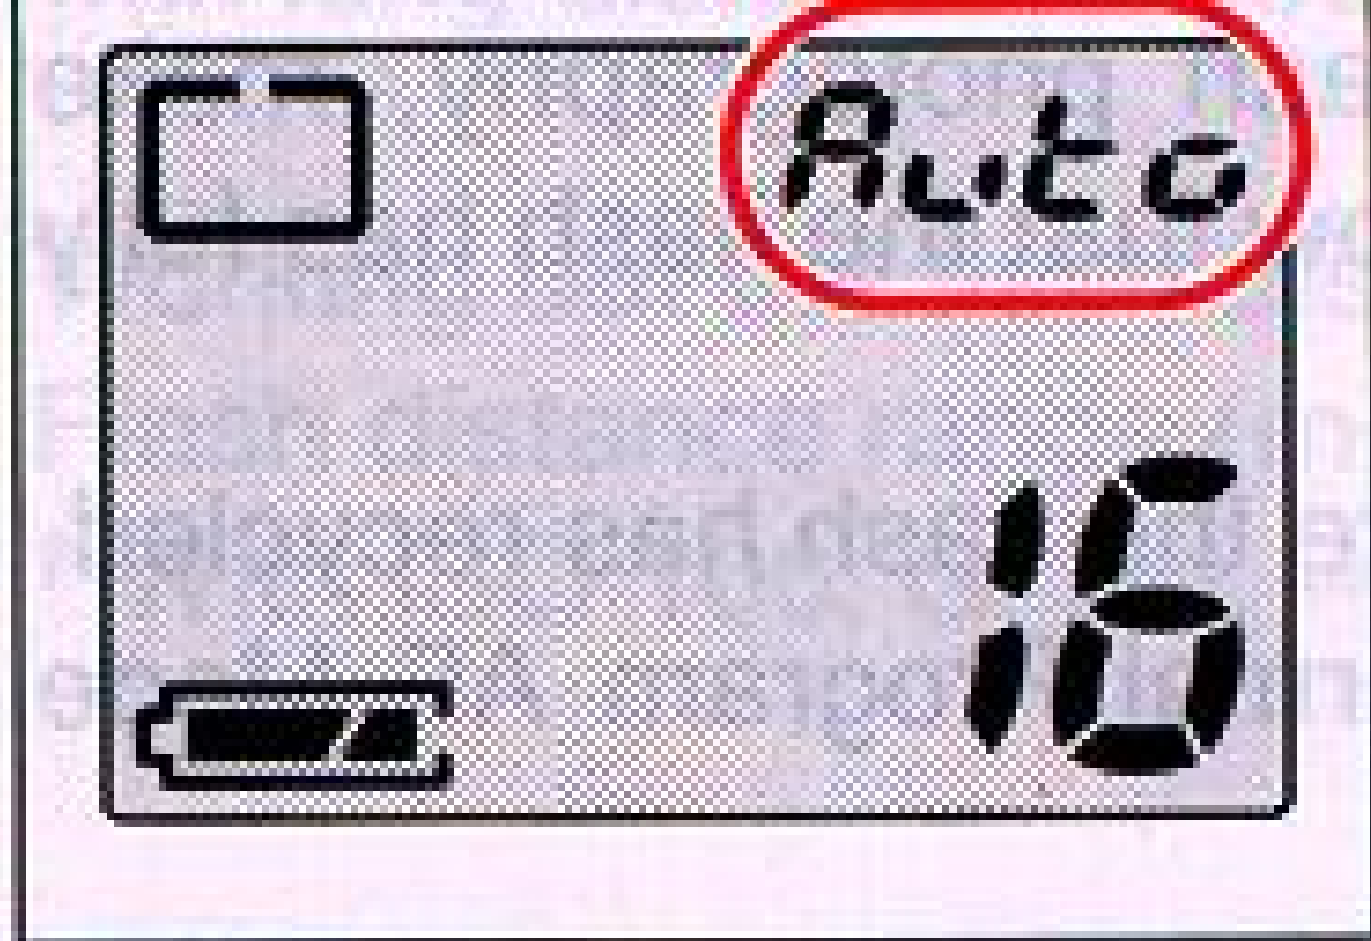


Fig. 118

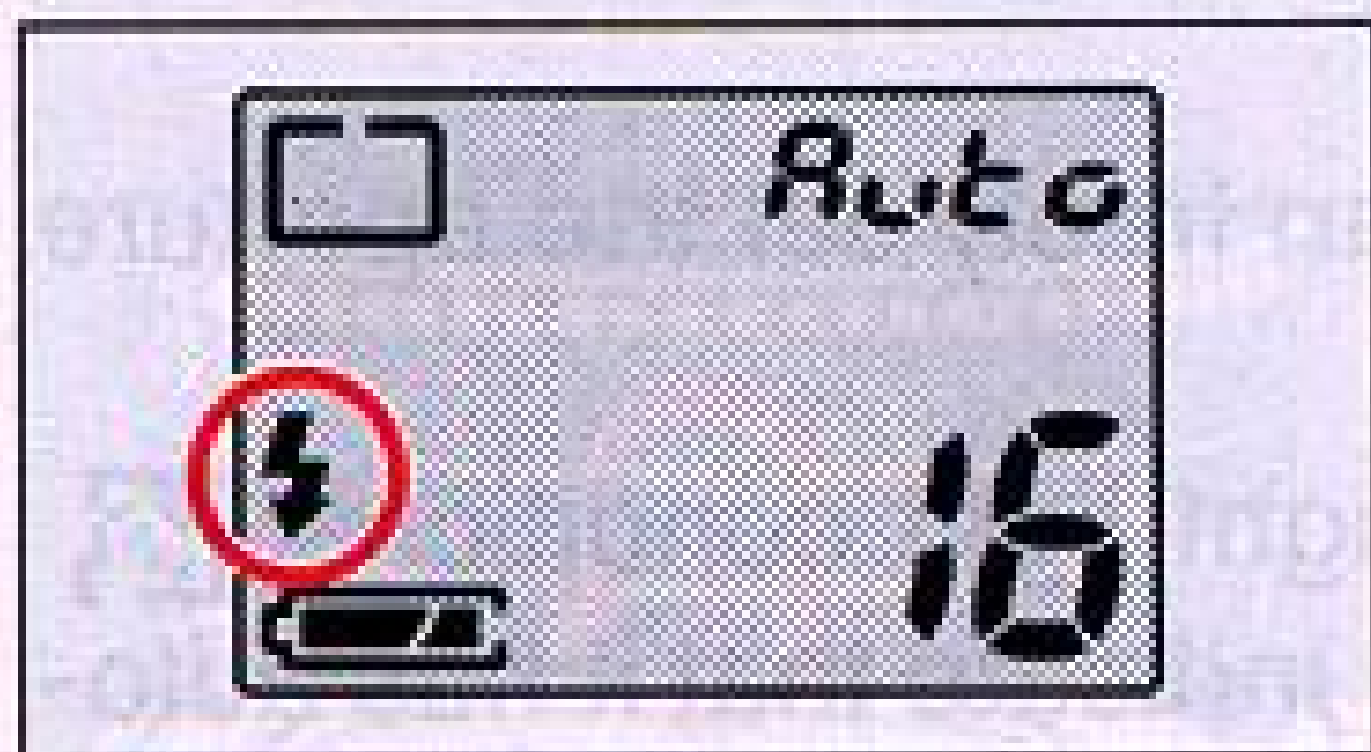


Fig. 119



ЛАВІЎСІІІ СЫНІІІ

Fig. 117

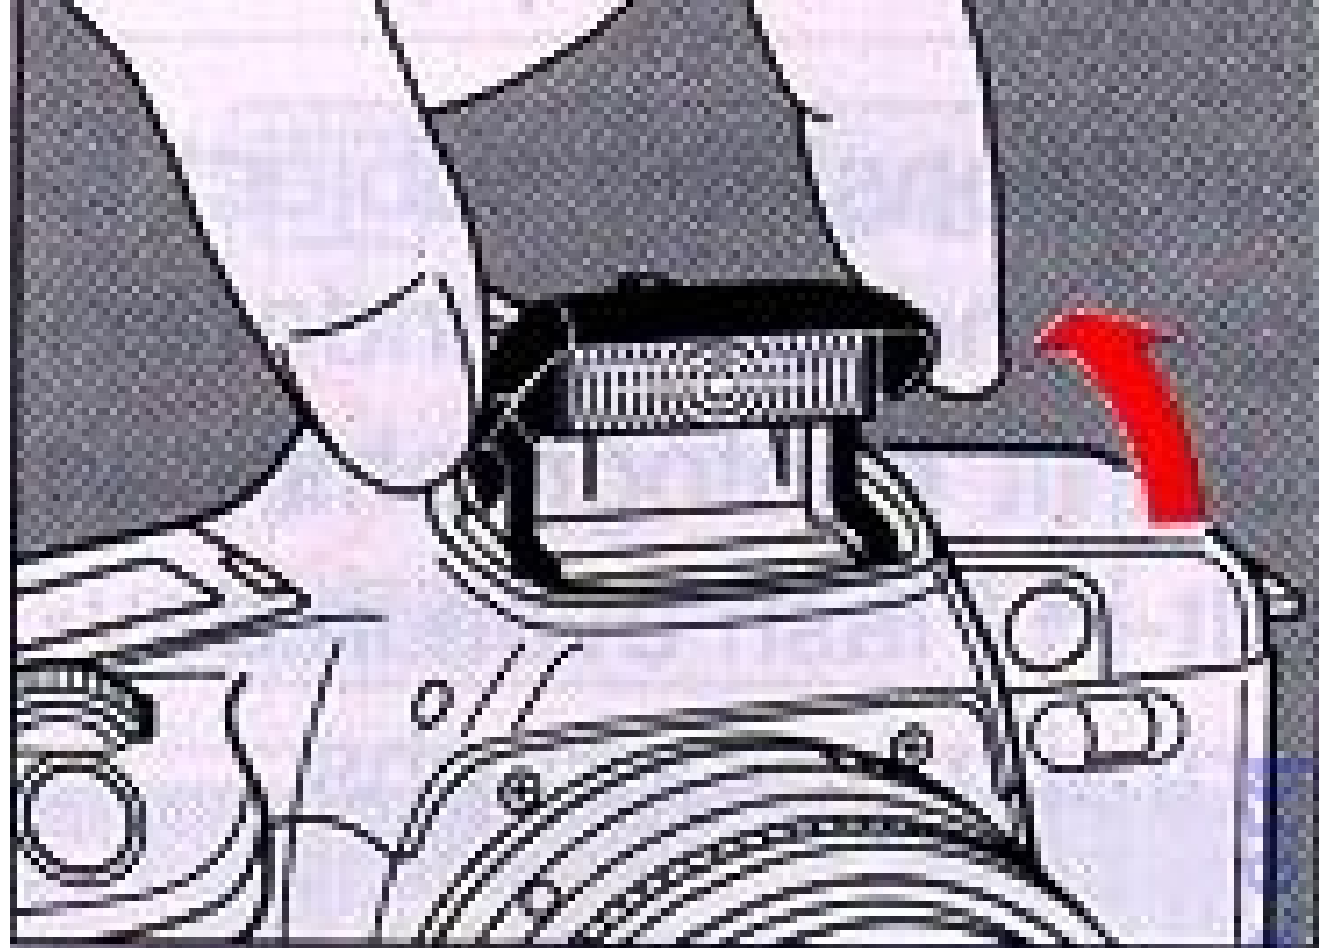


Fig. 114

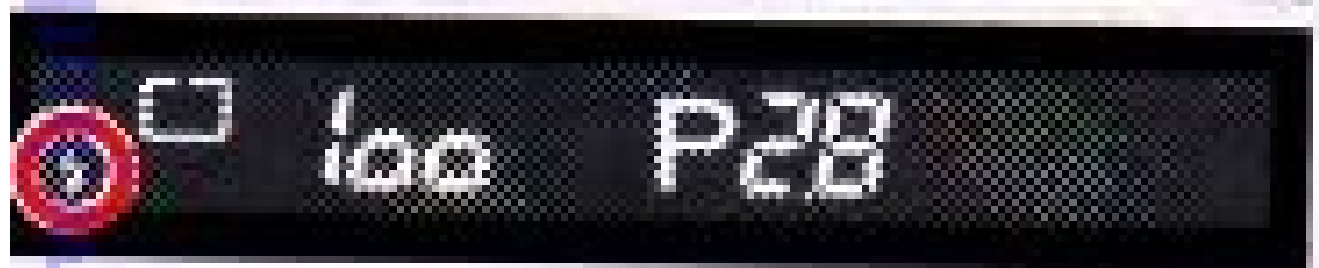
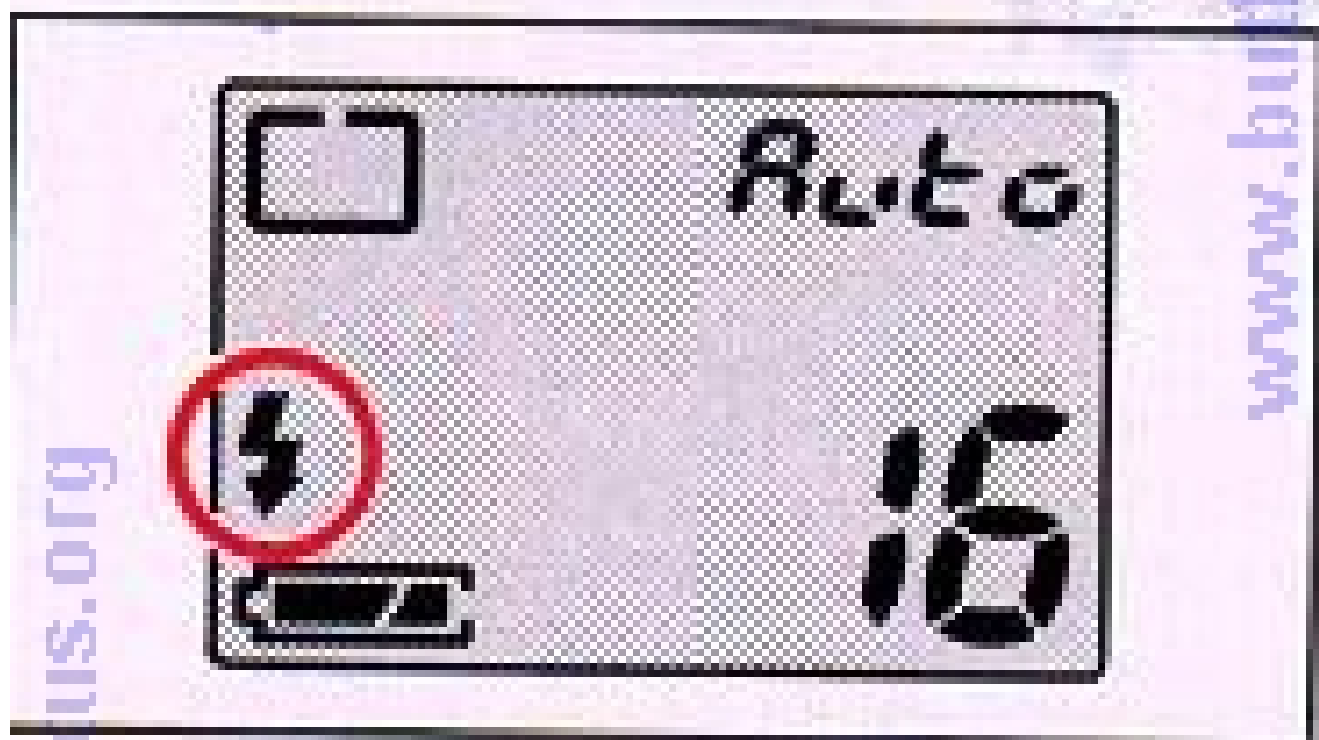


Fig. 115

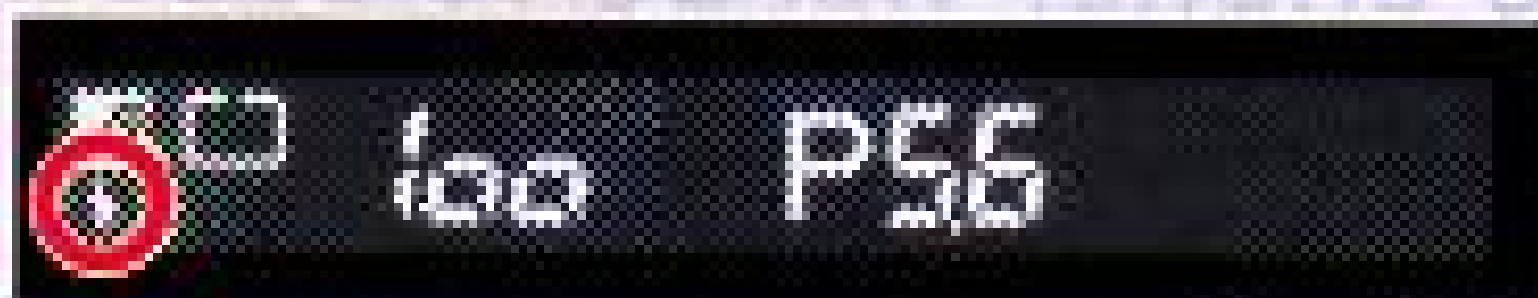
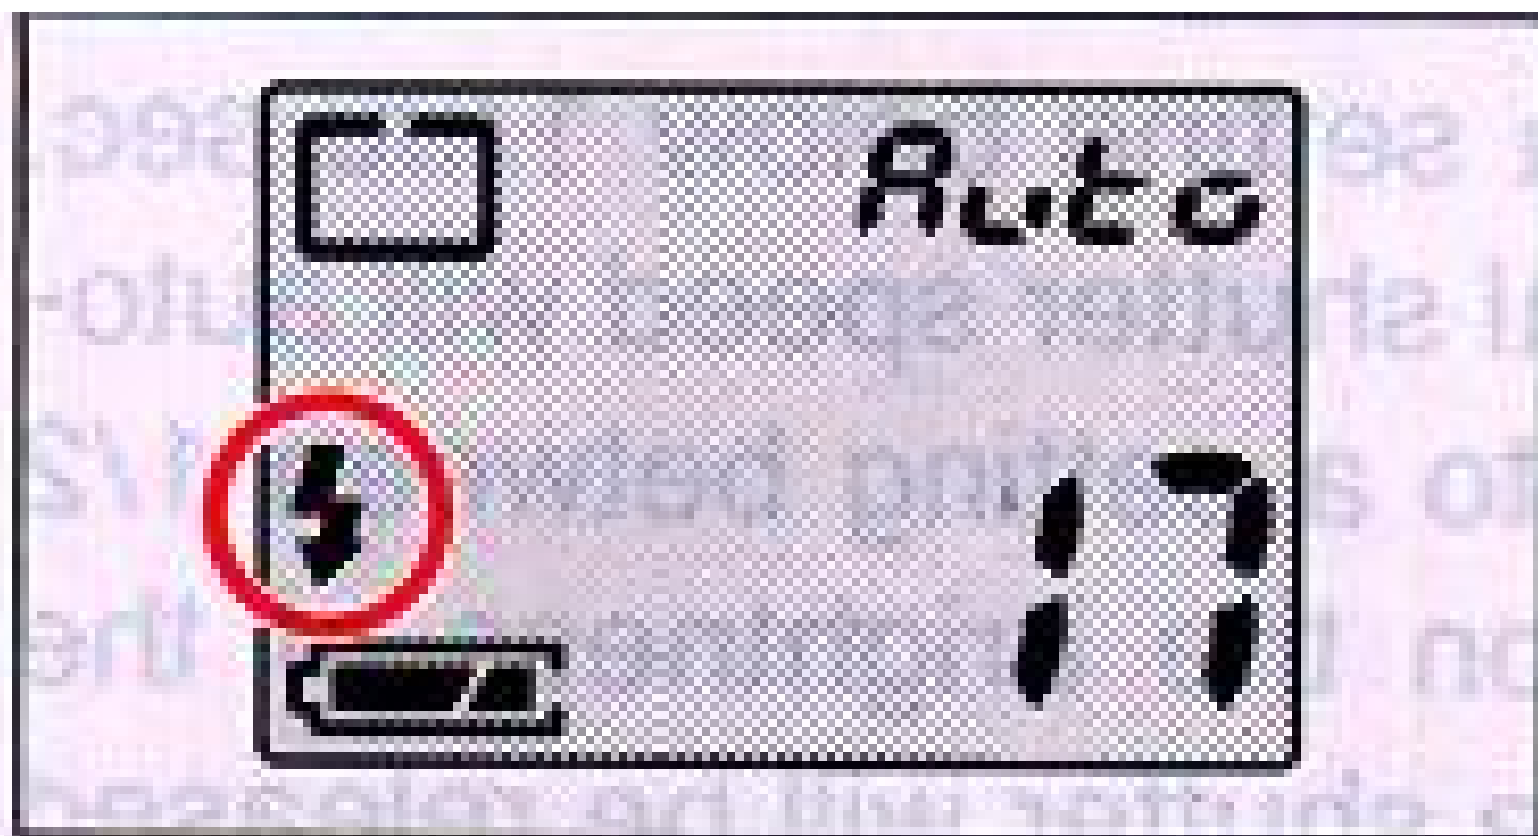
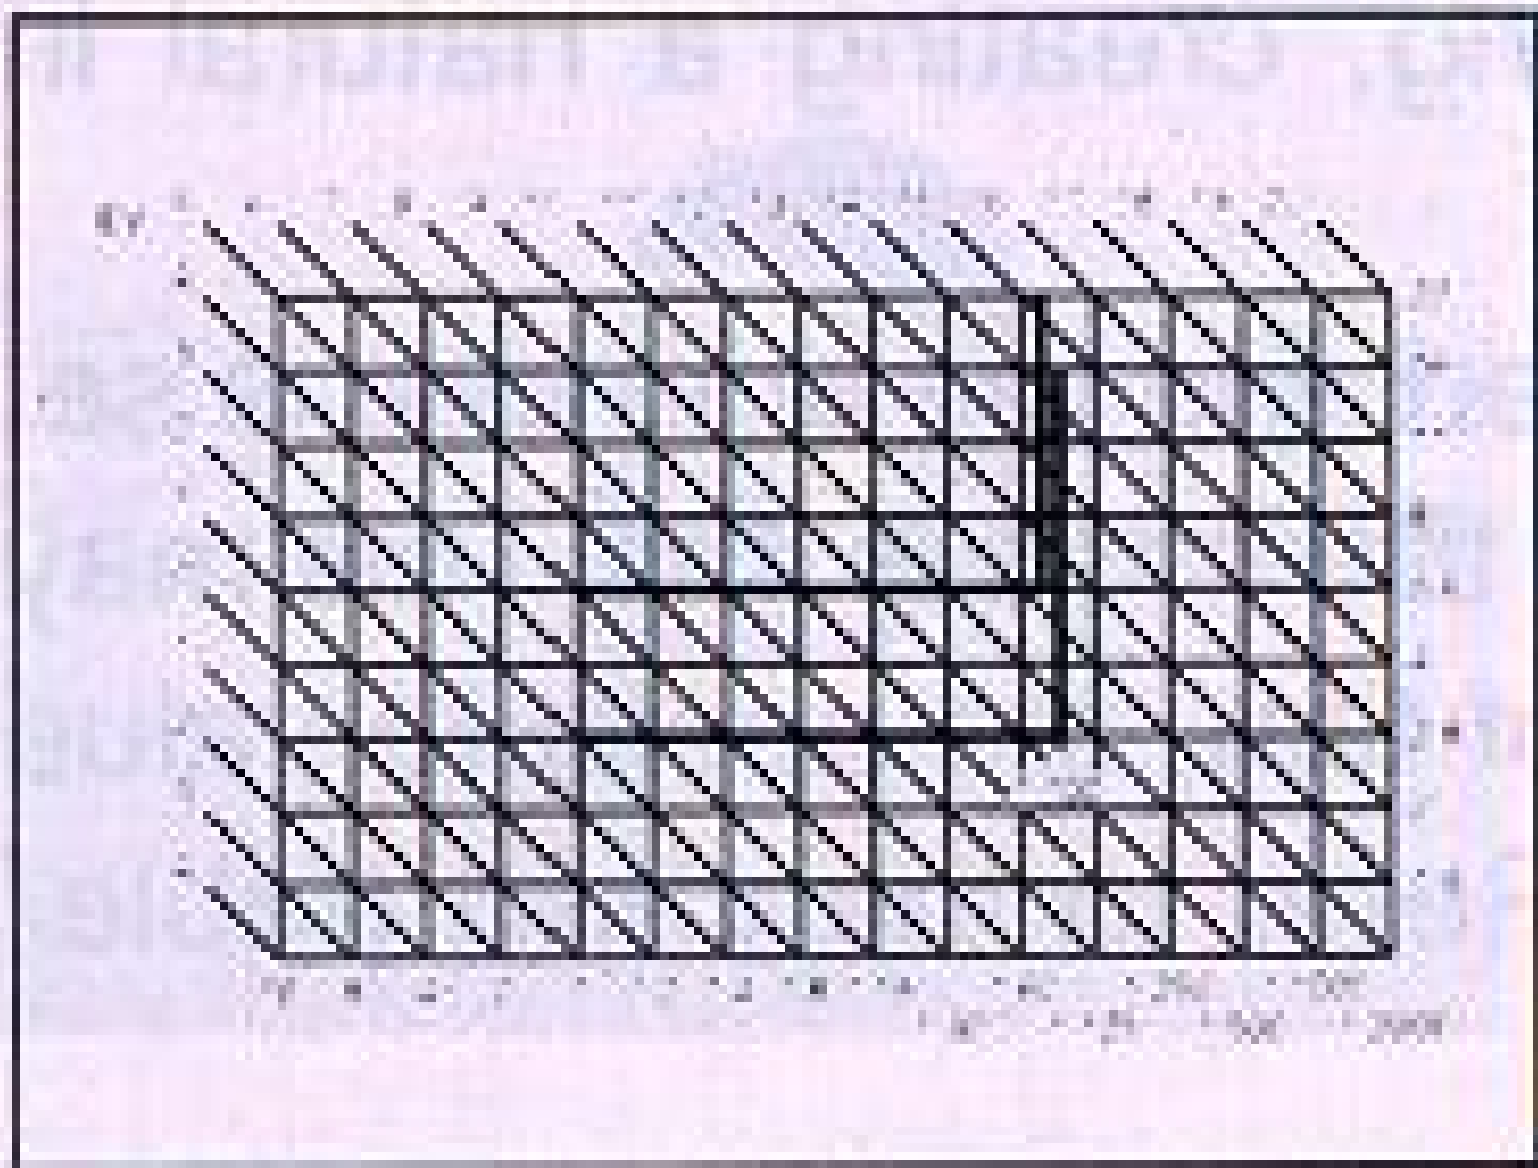


Fig. 120



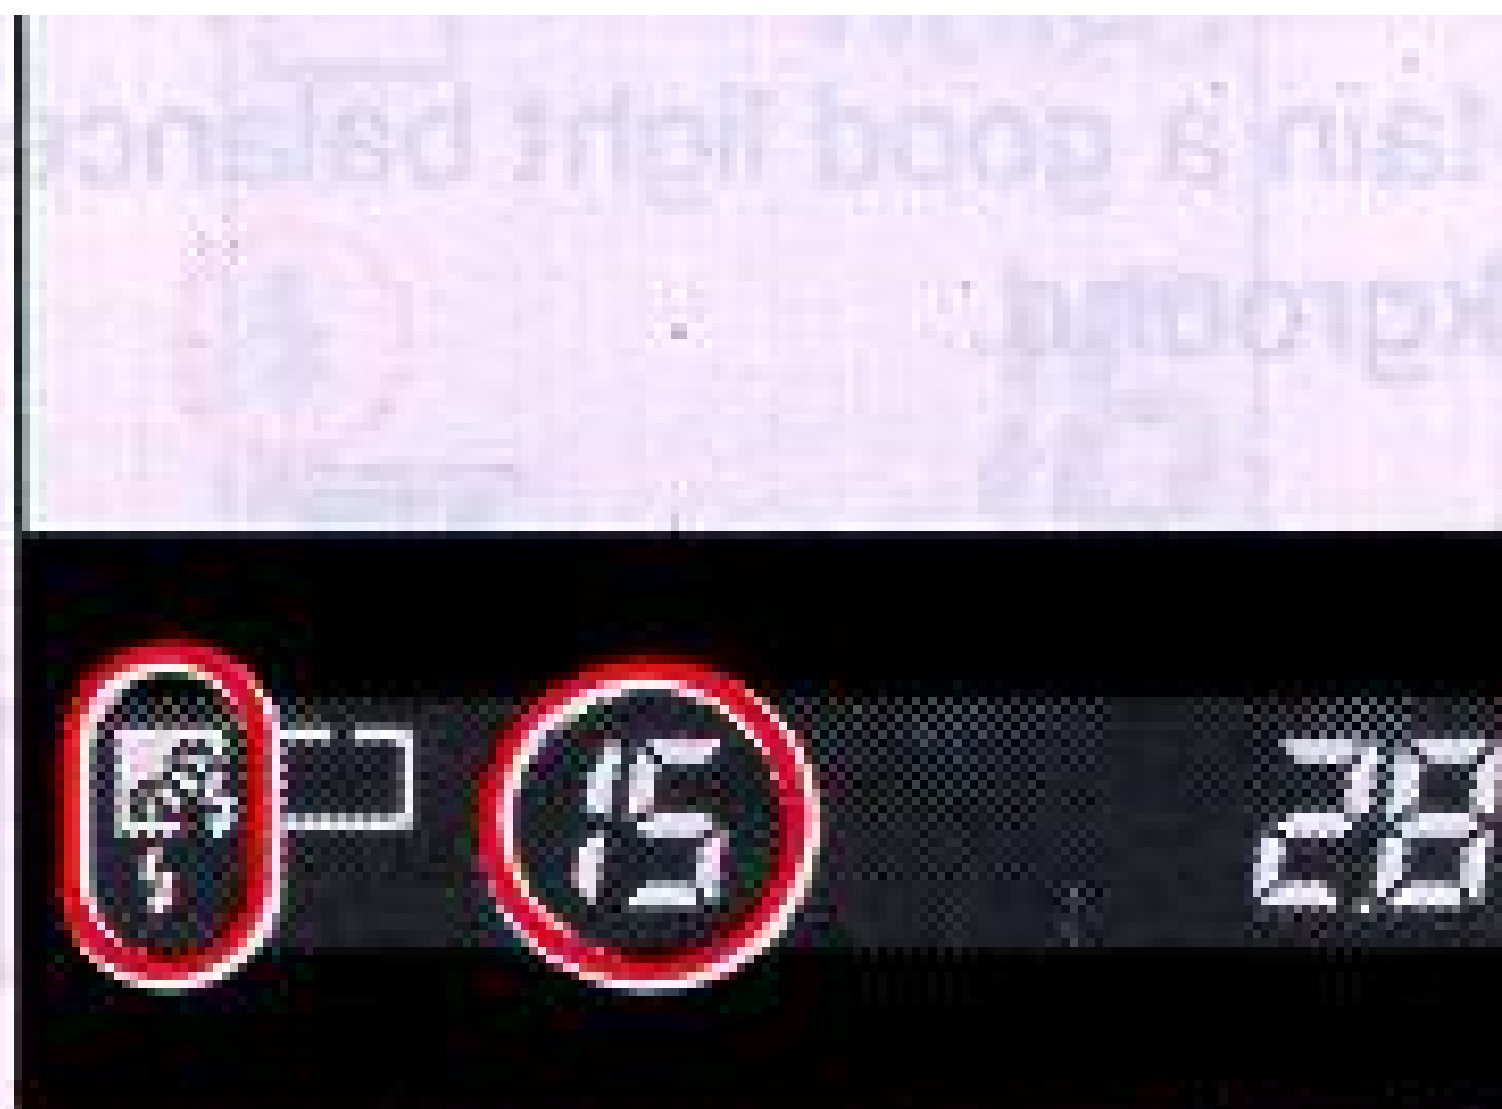


Fig. 12



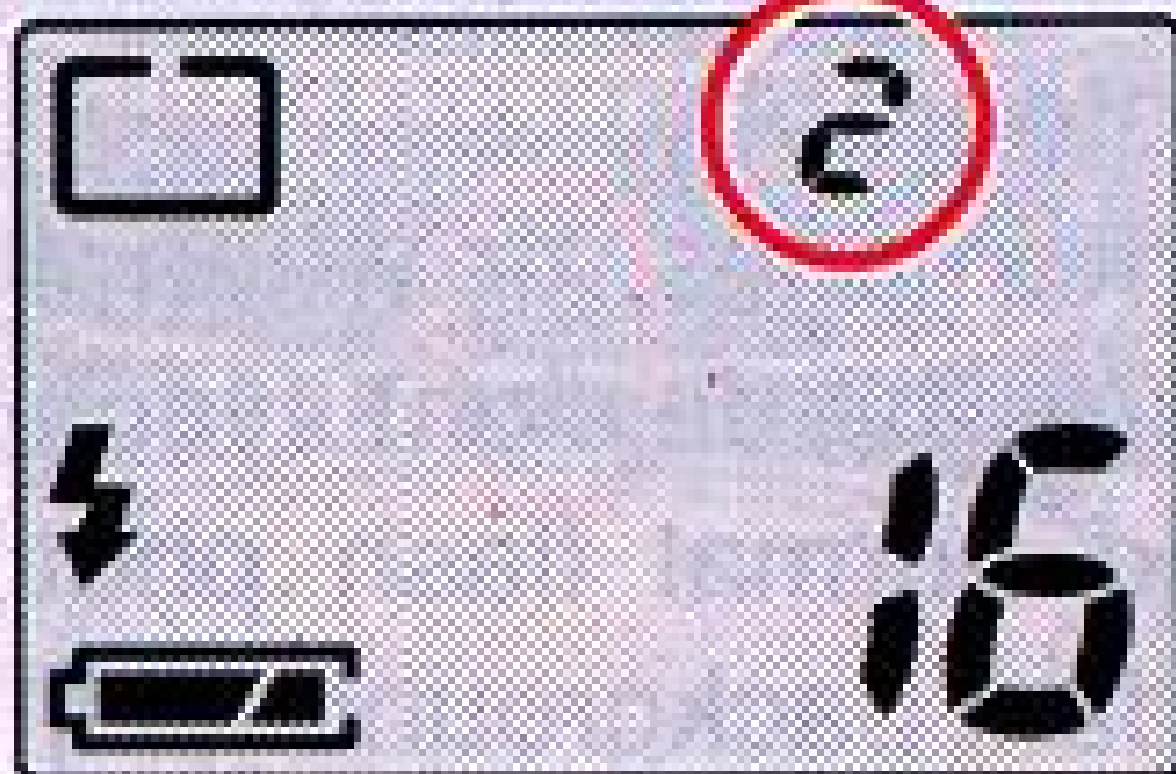


Fig. 121

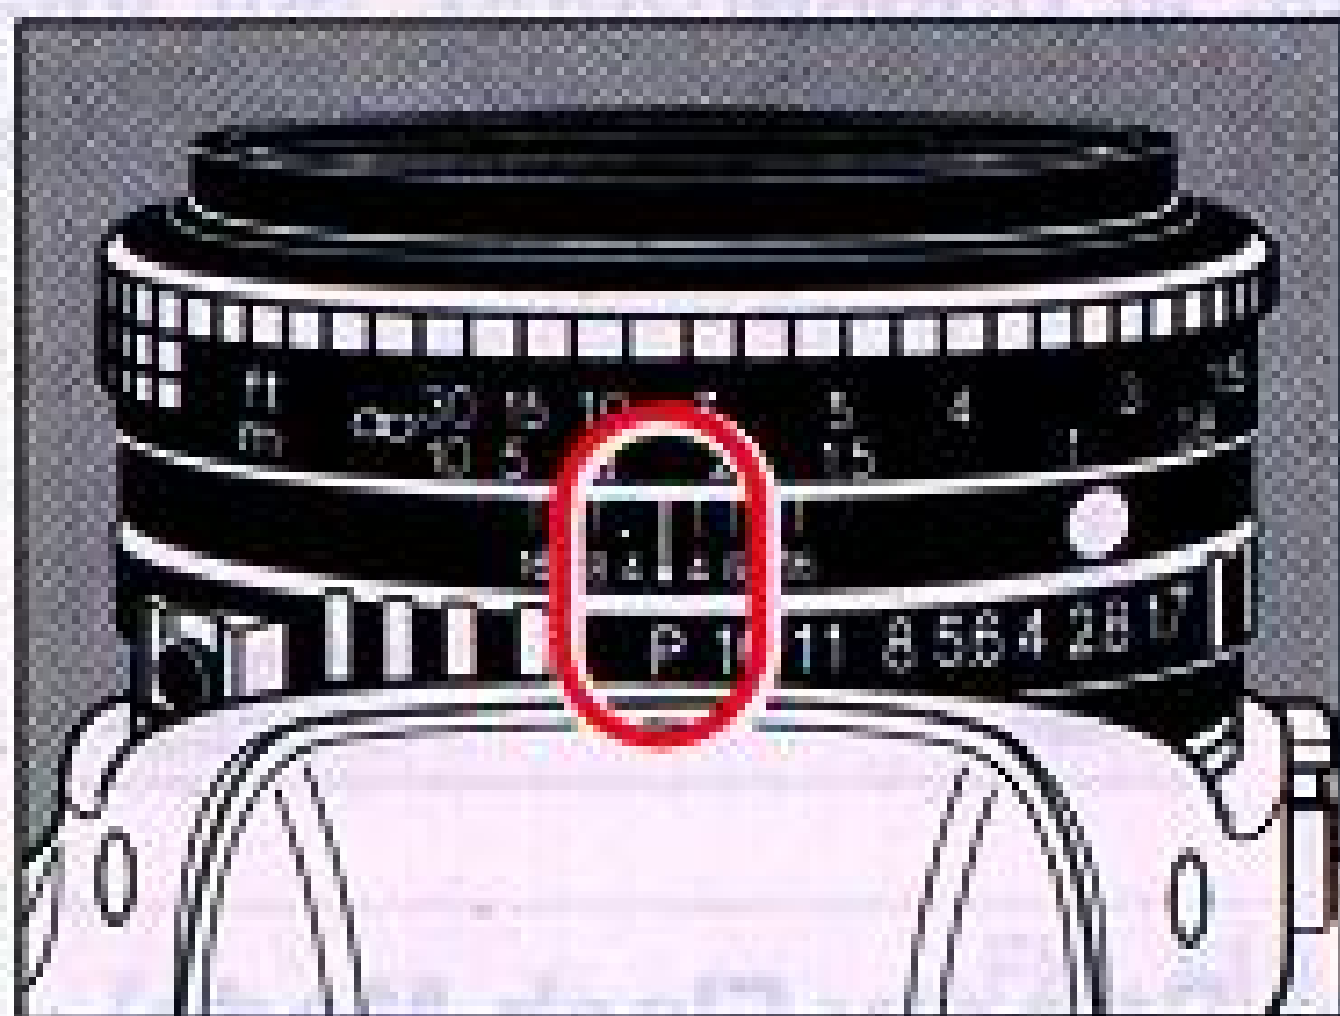


Fig. 122

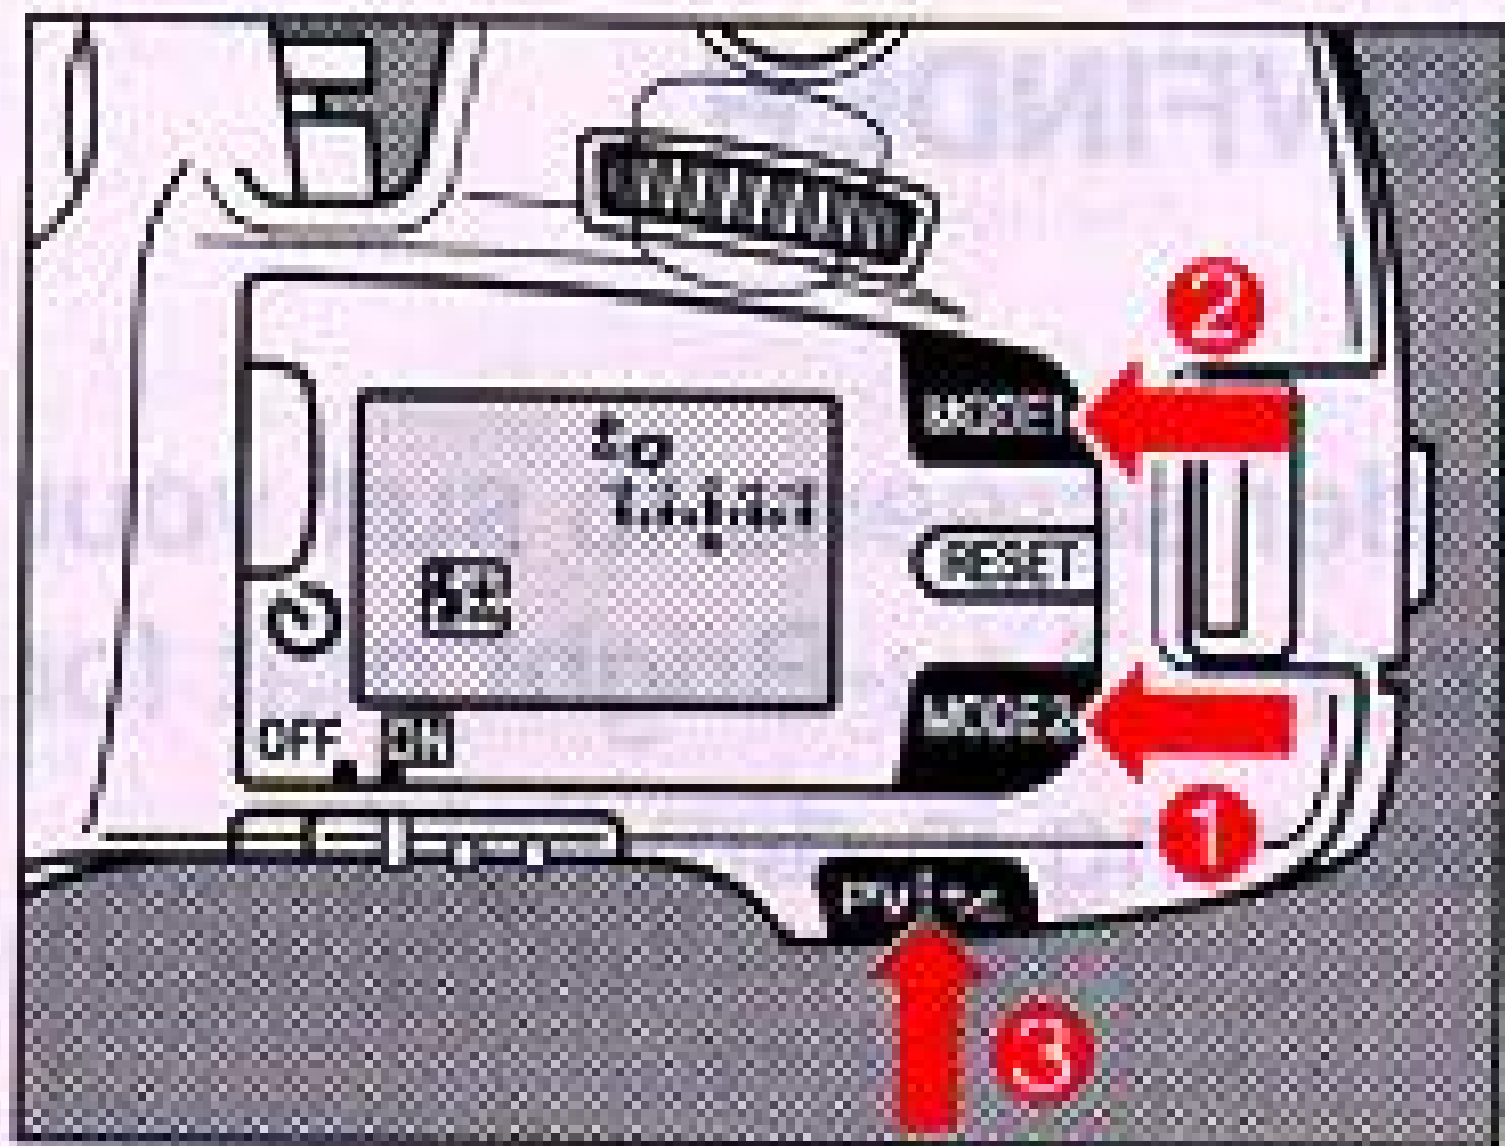


Fig. 127

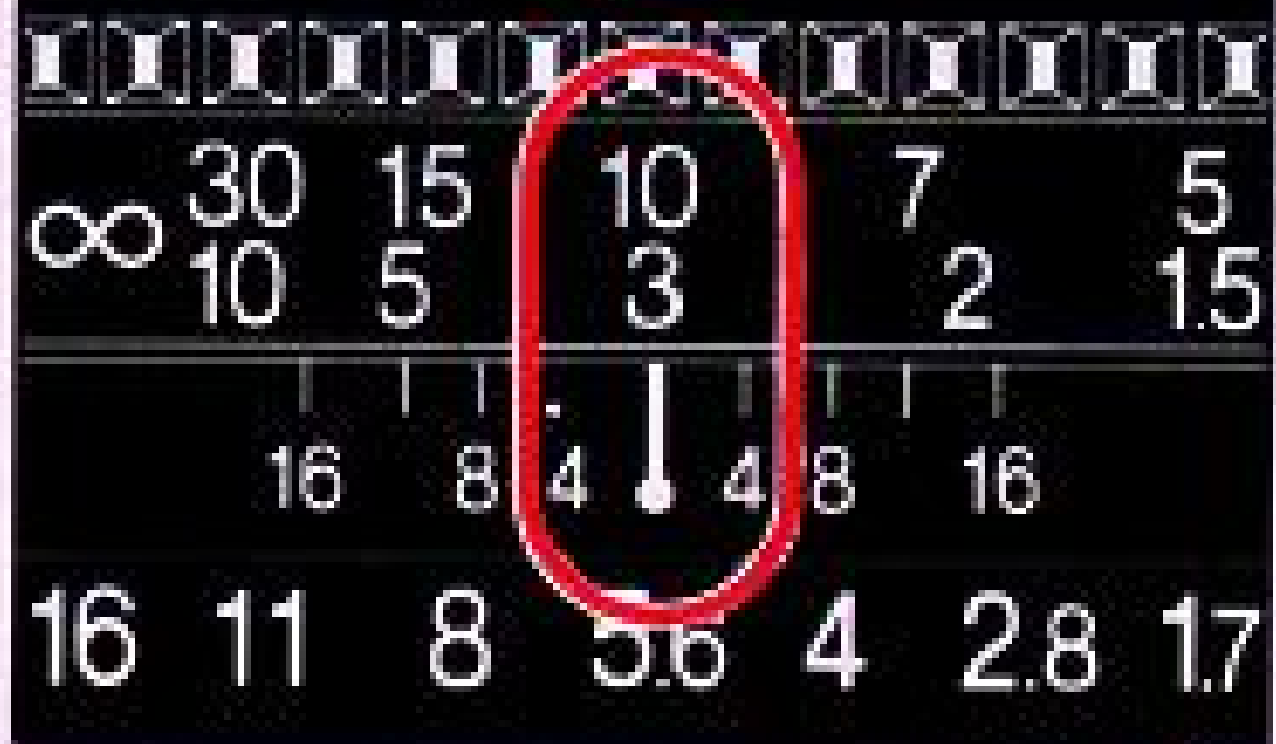


Fig. 128

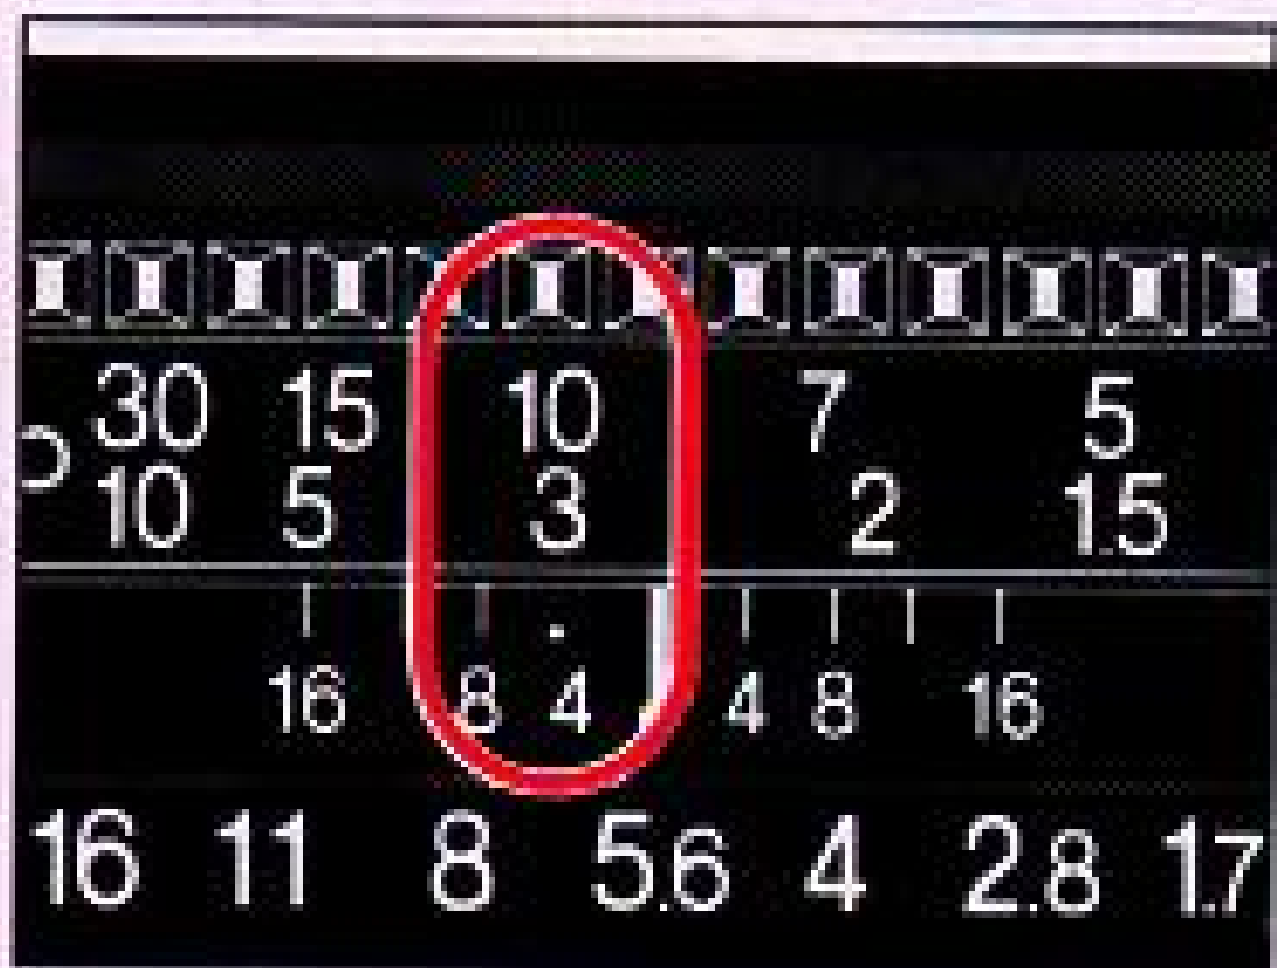


Fig. 129

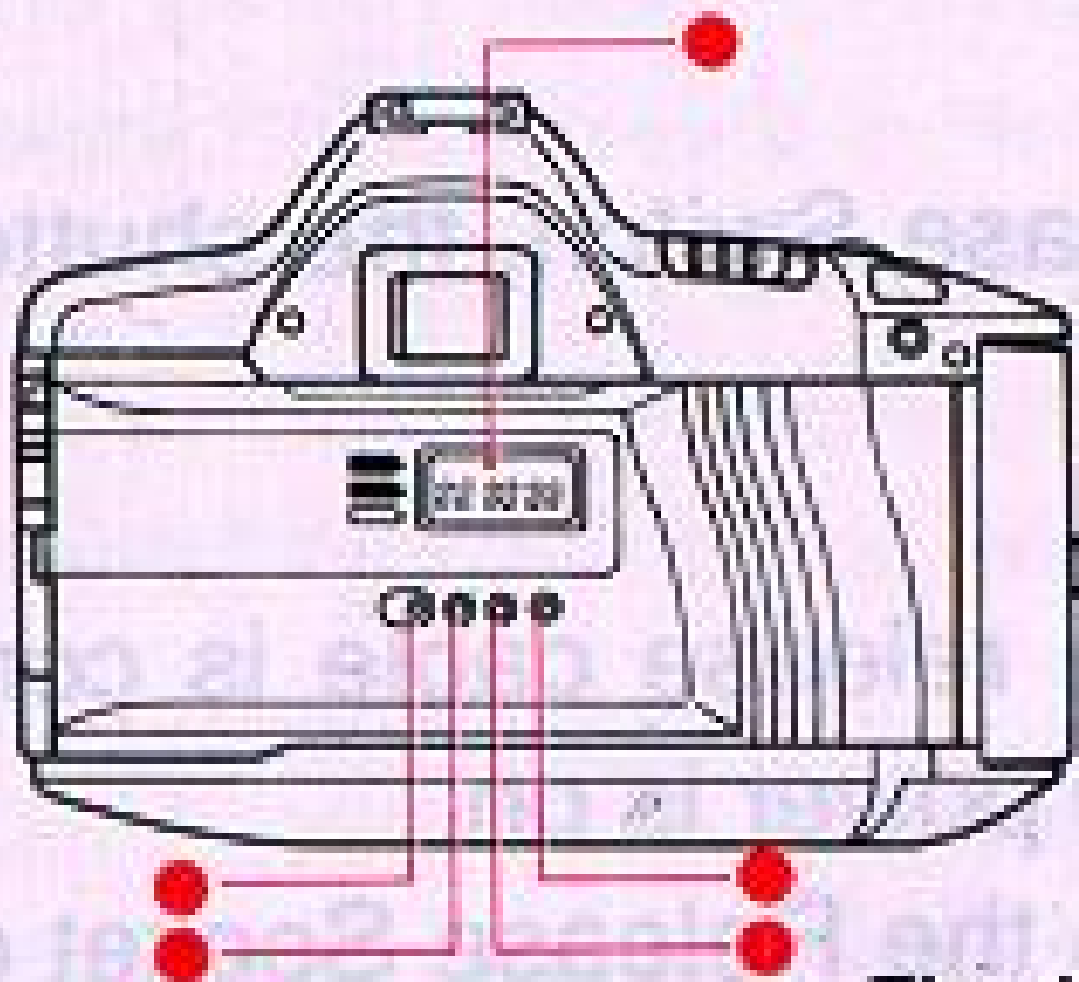


Fig. 133

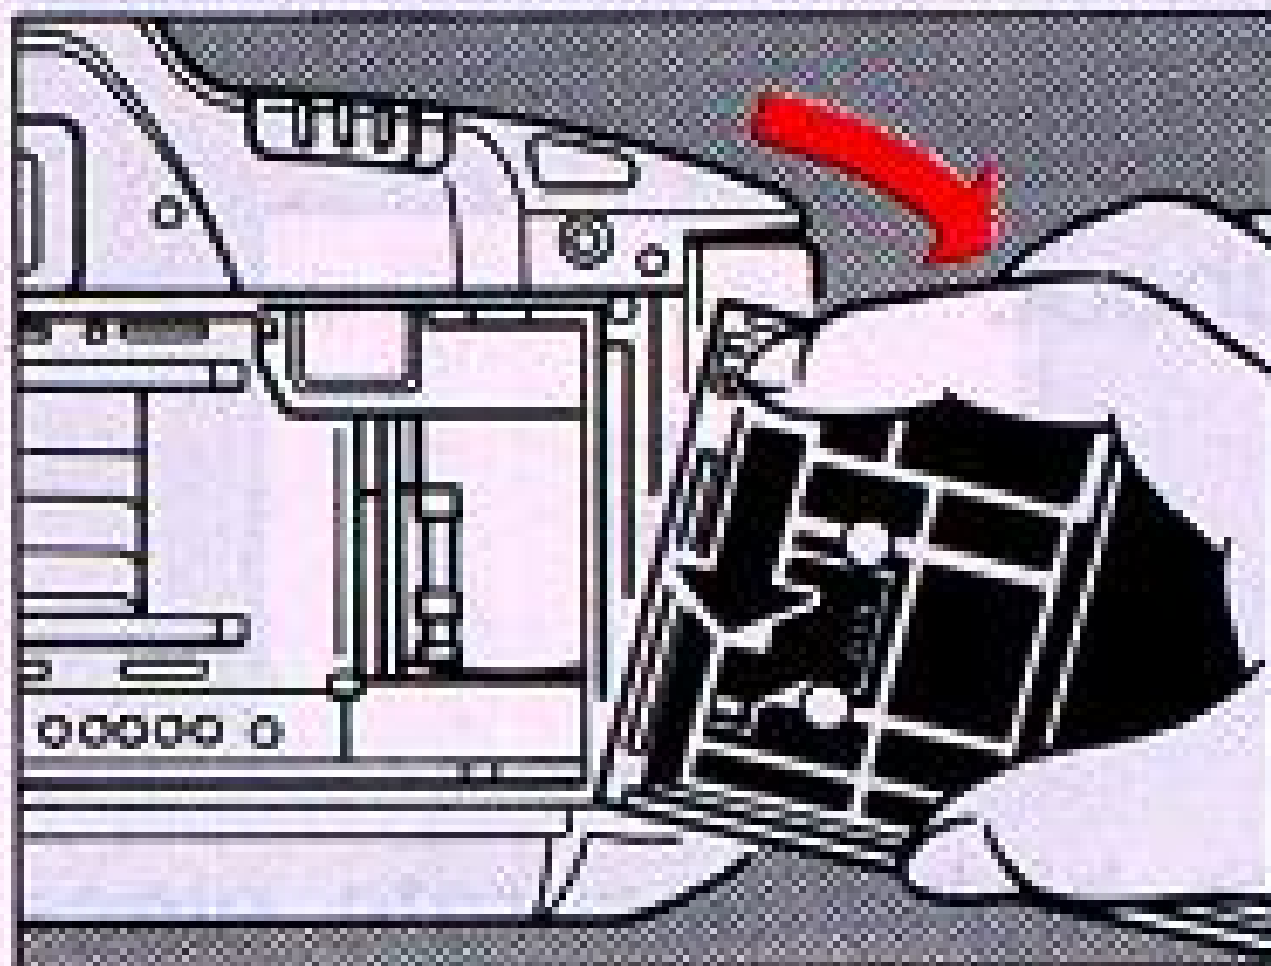


Fig. 134

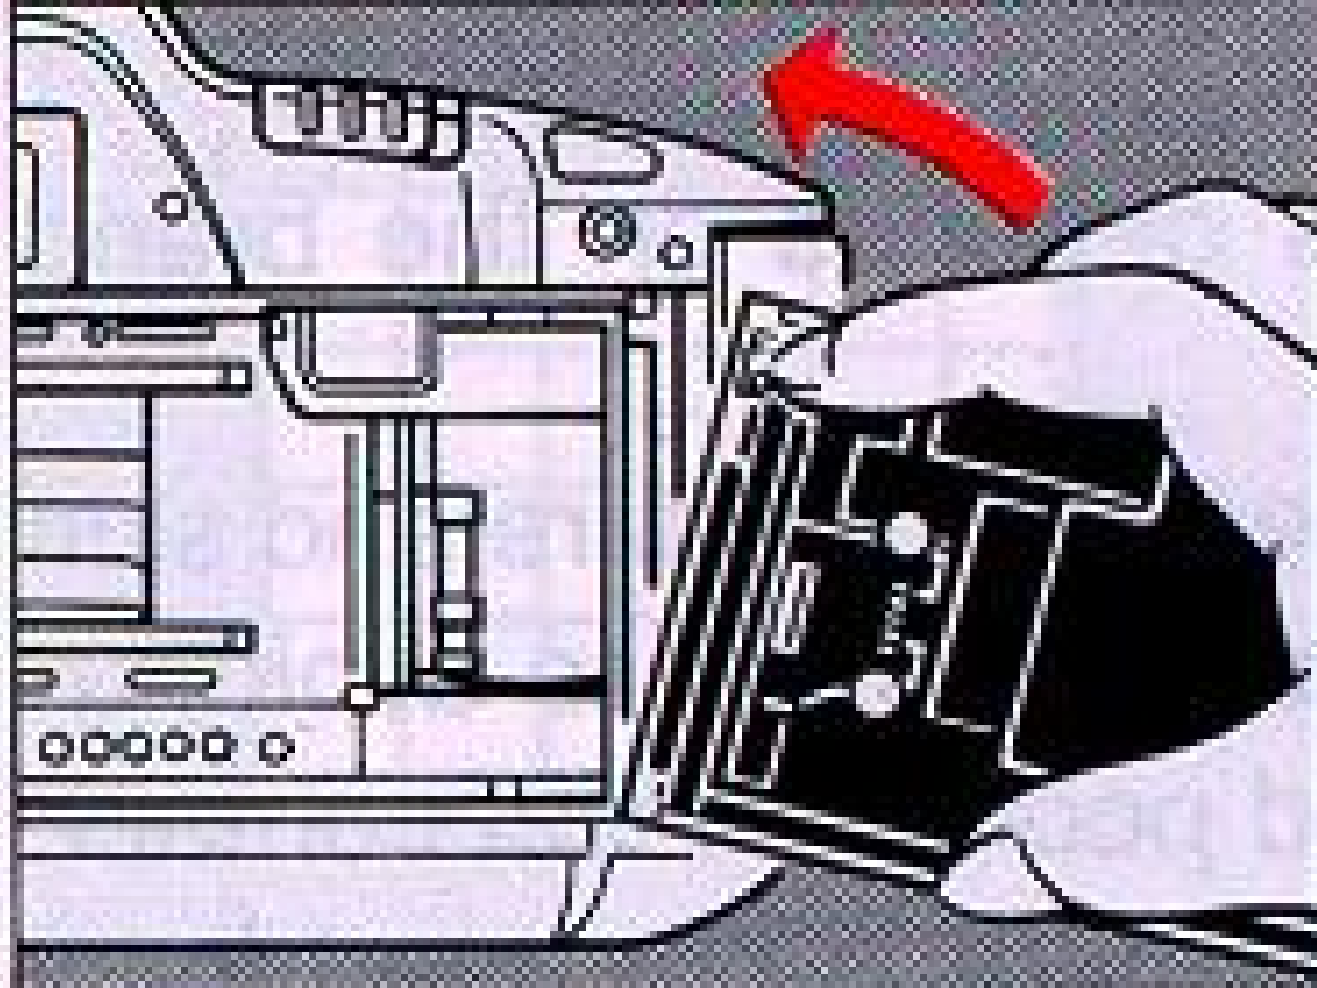


Fig. 135

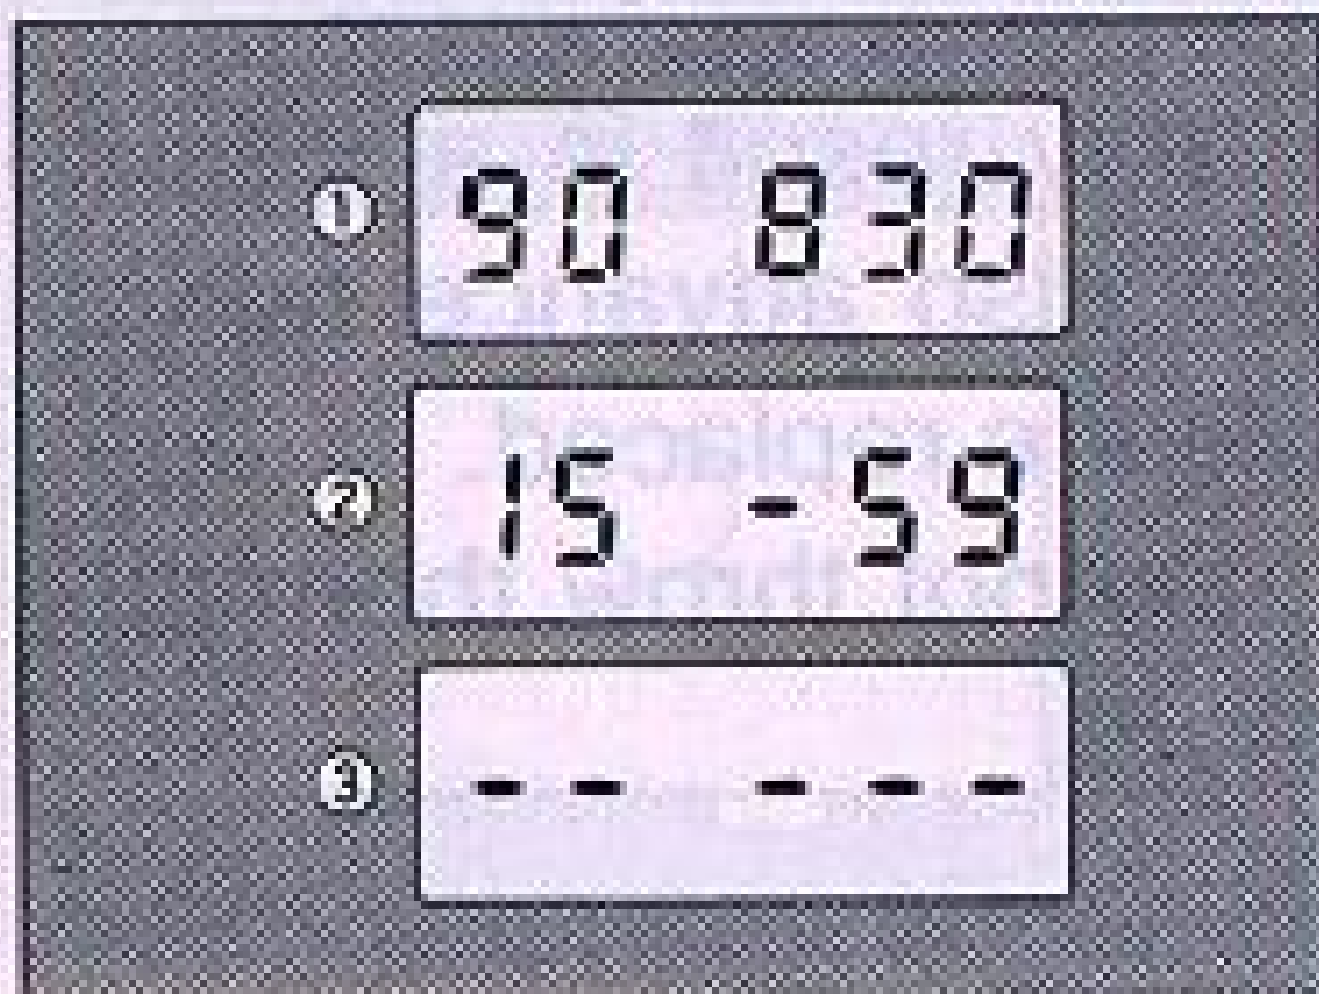


Fig. 136

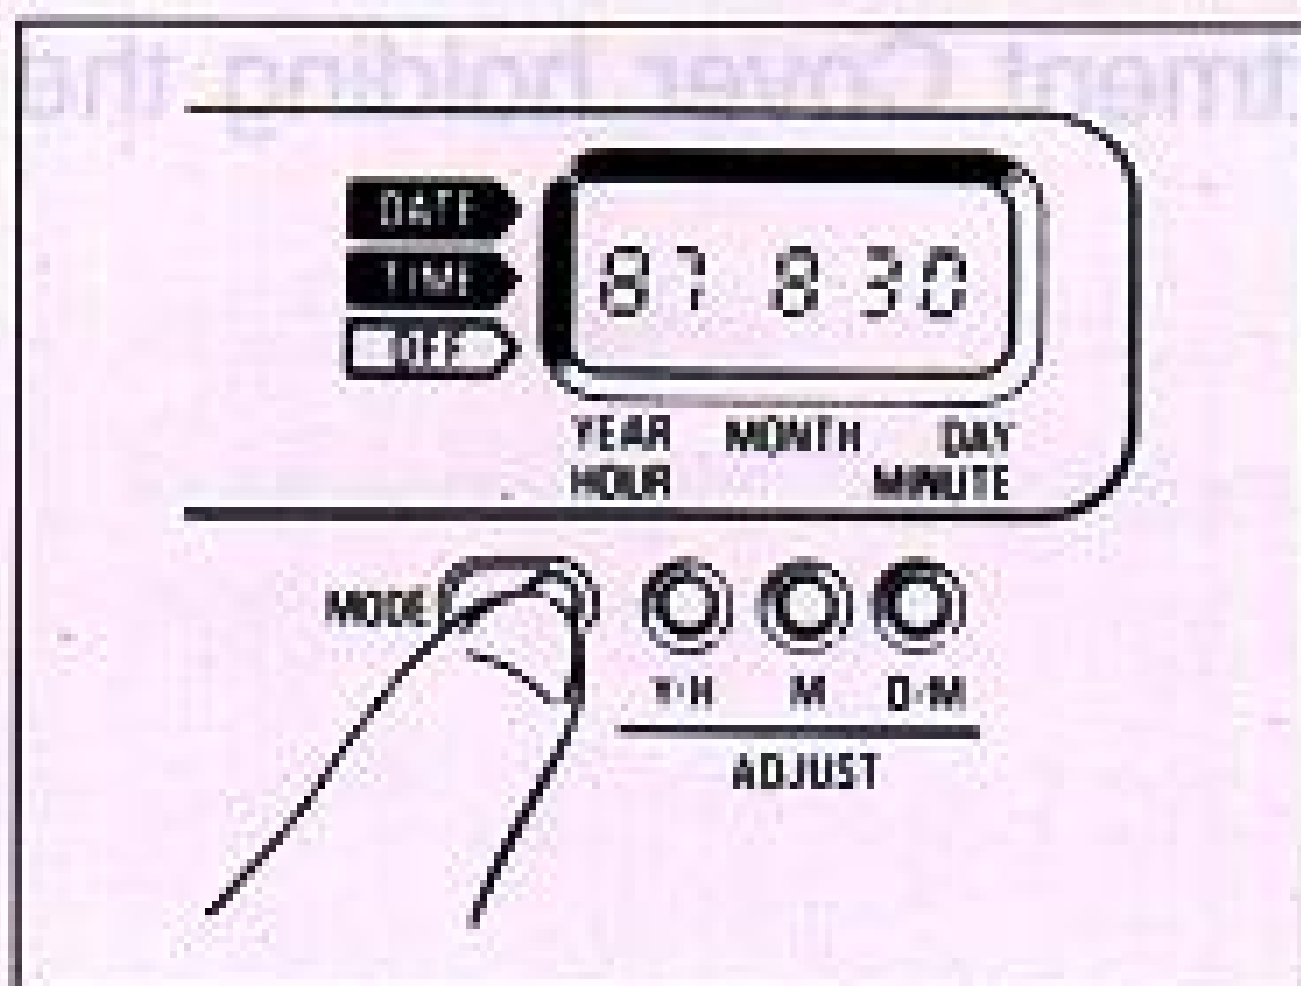


Fig. 139

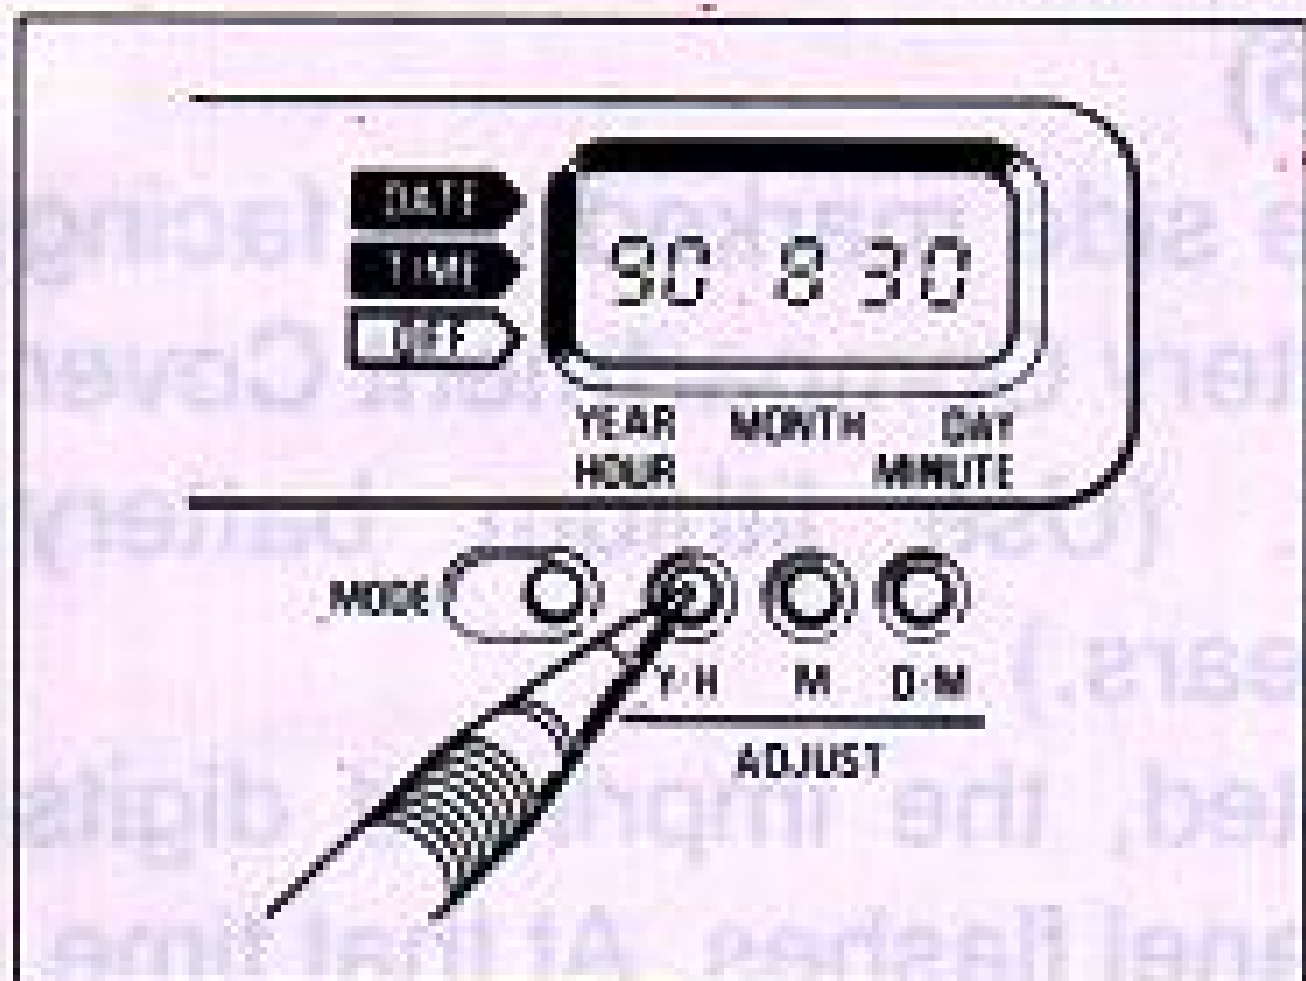


Fig. 140

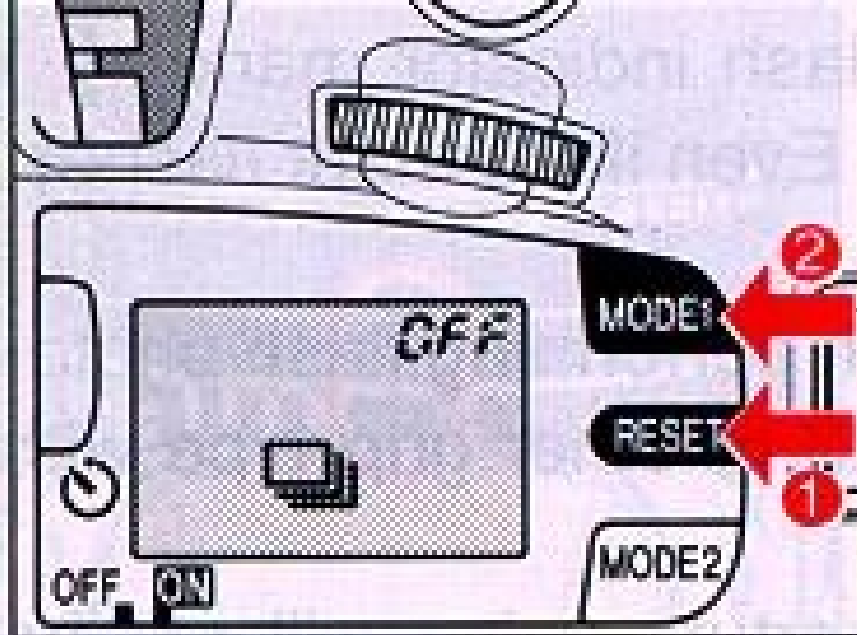


Fig. 124

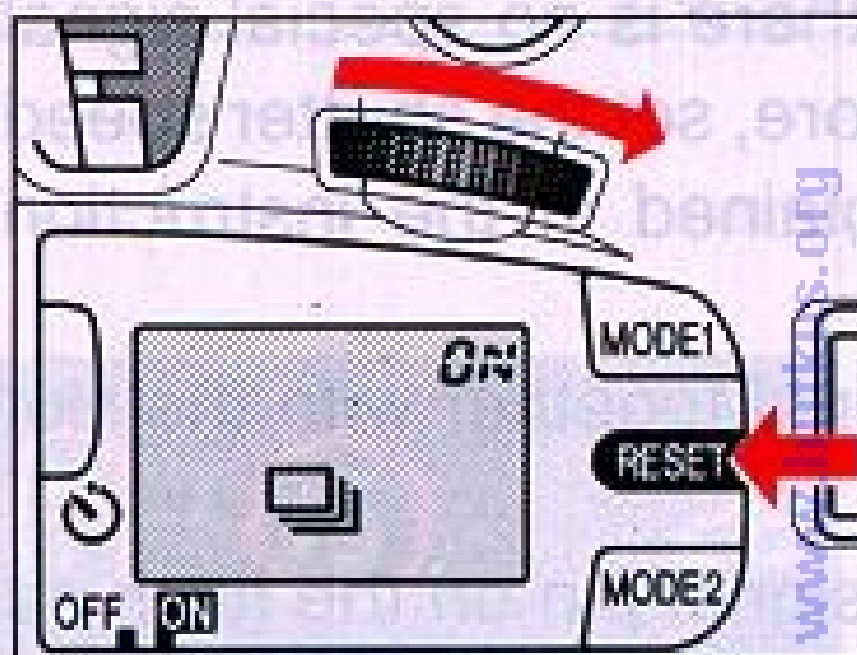


Fig. 125

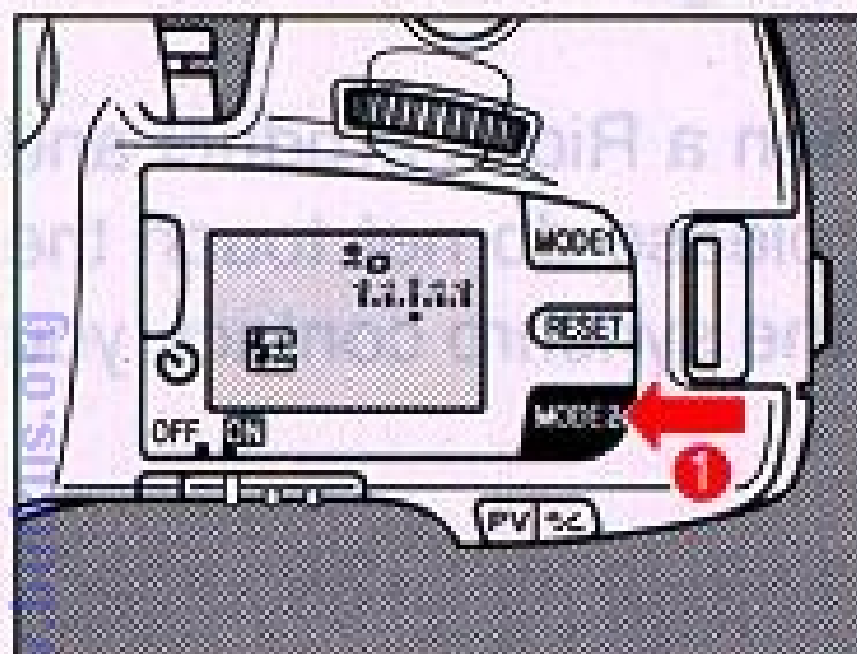


Fig. 126

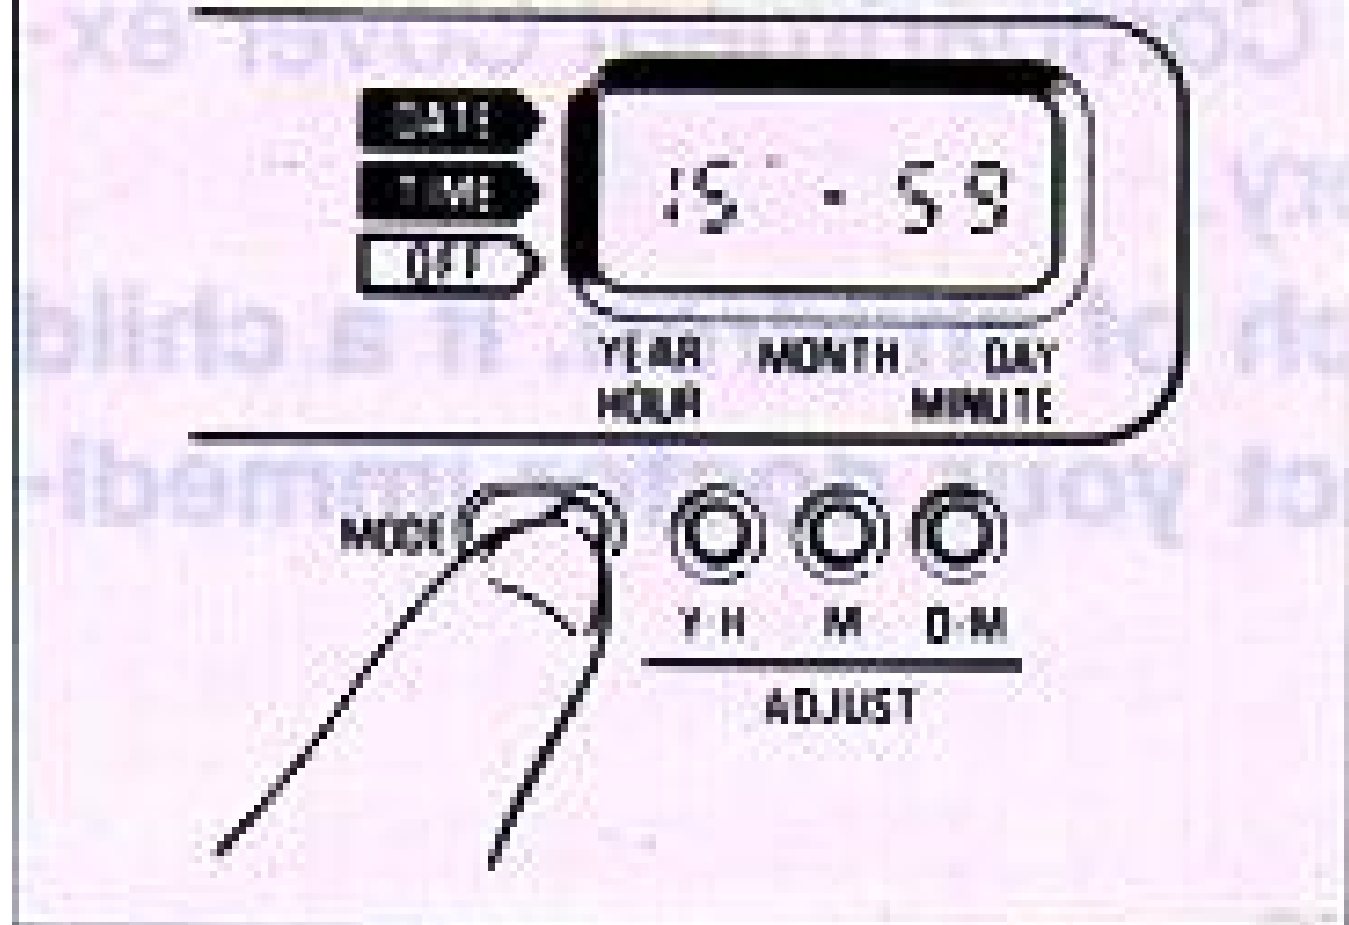


Fig. 141

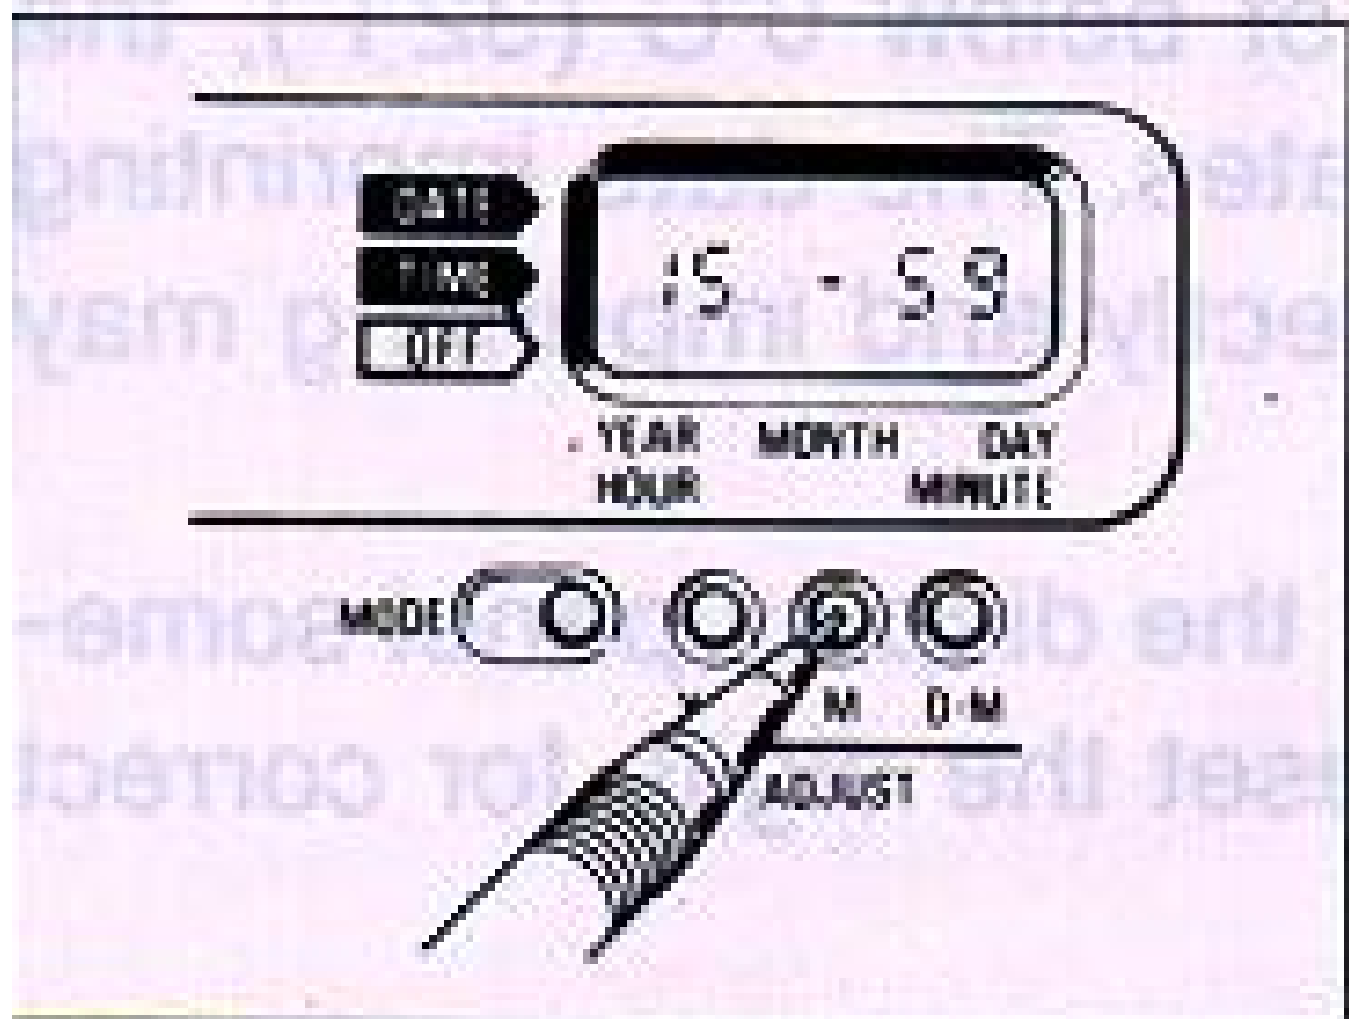


Fig. 142

Type H

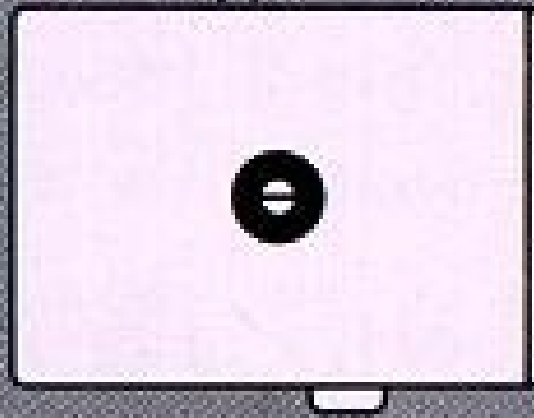


Fig. 130

Type S

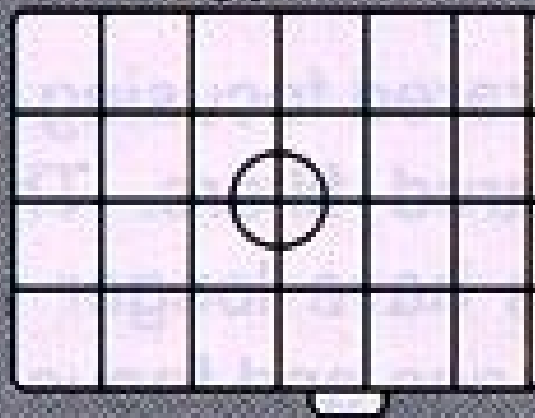 


Fig. 131

Type B

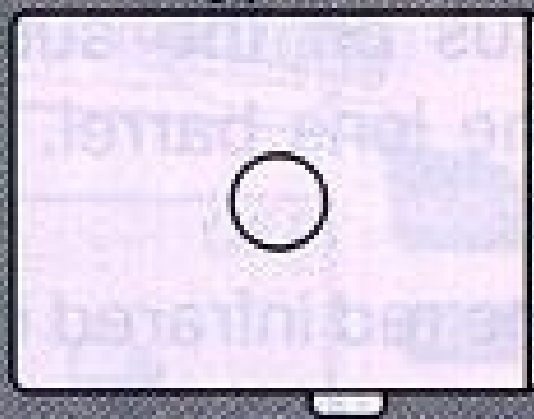 


Fig. 132

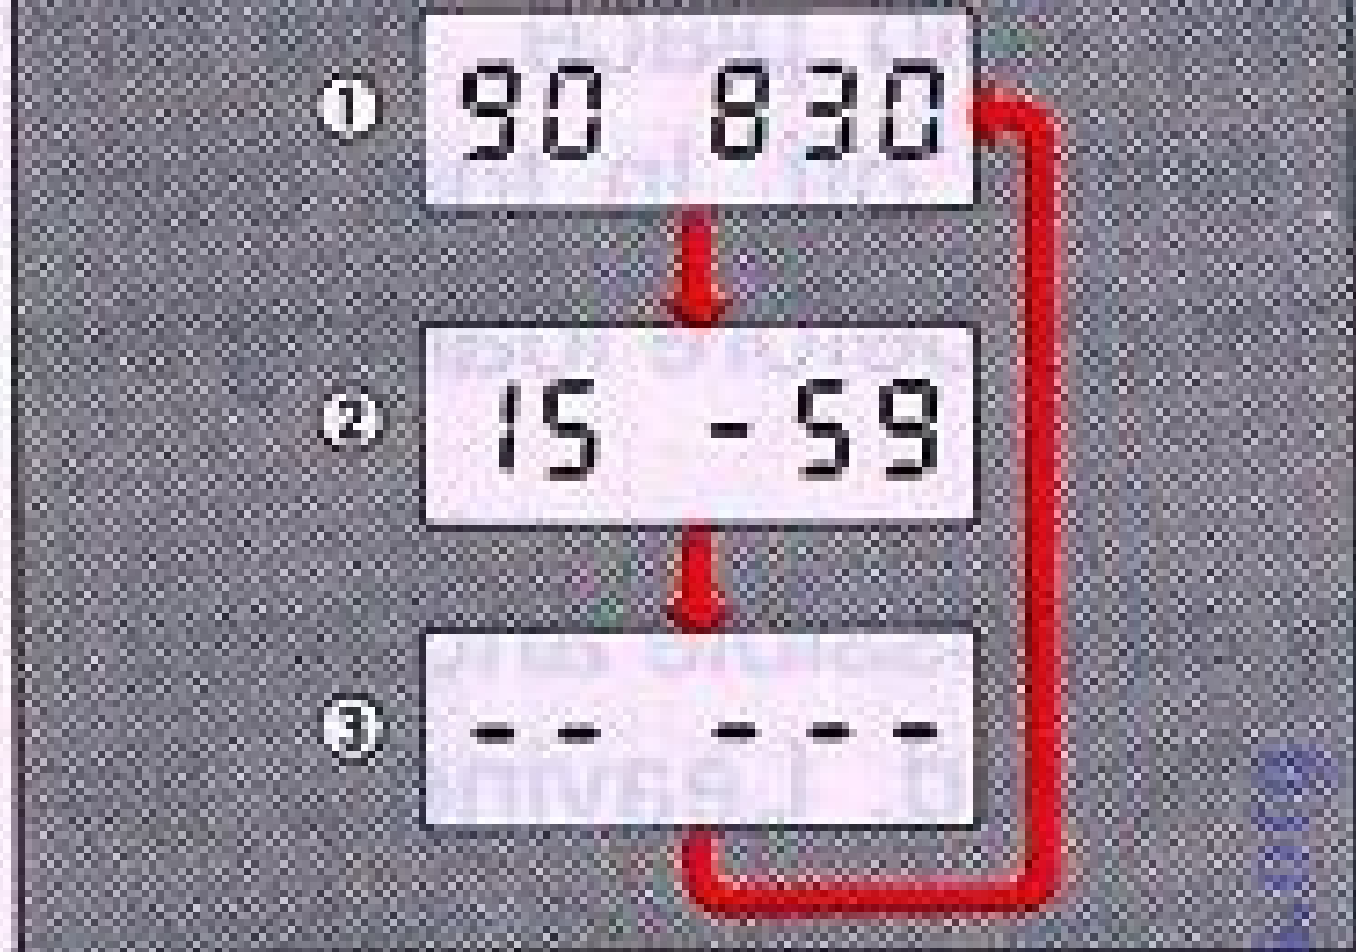 


Fig. 137

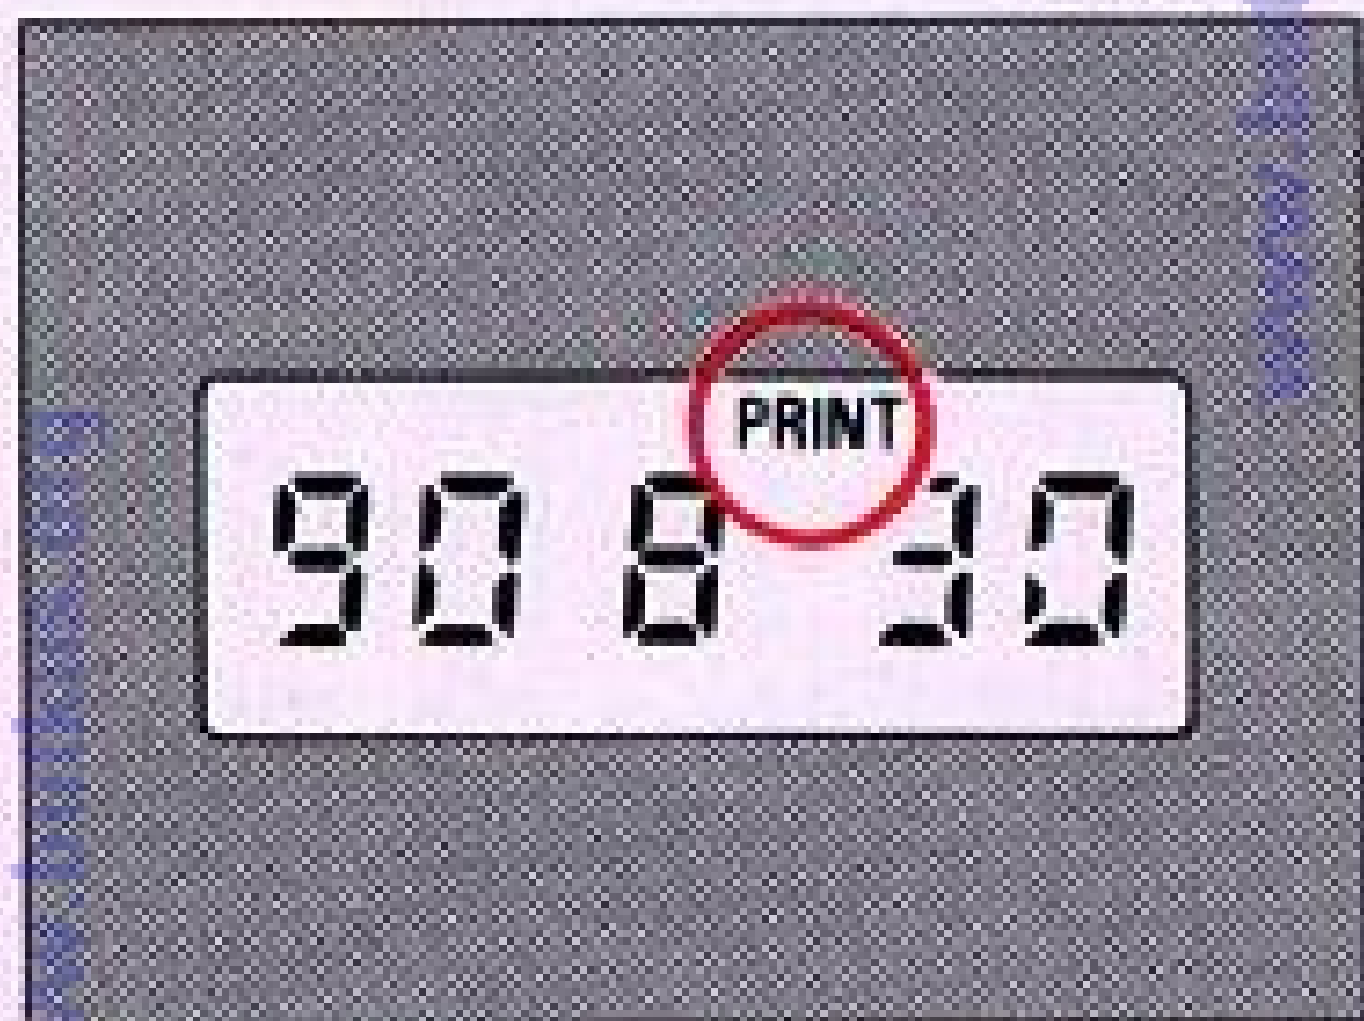 


Fig. 138

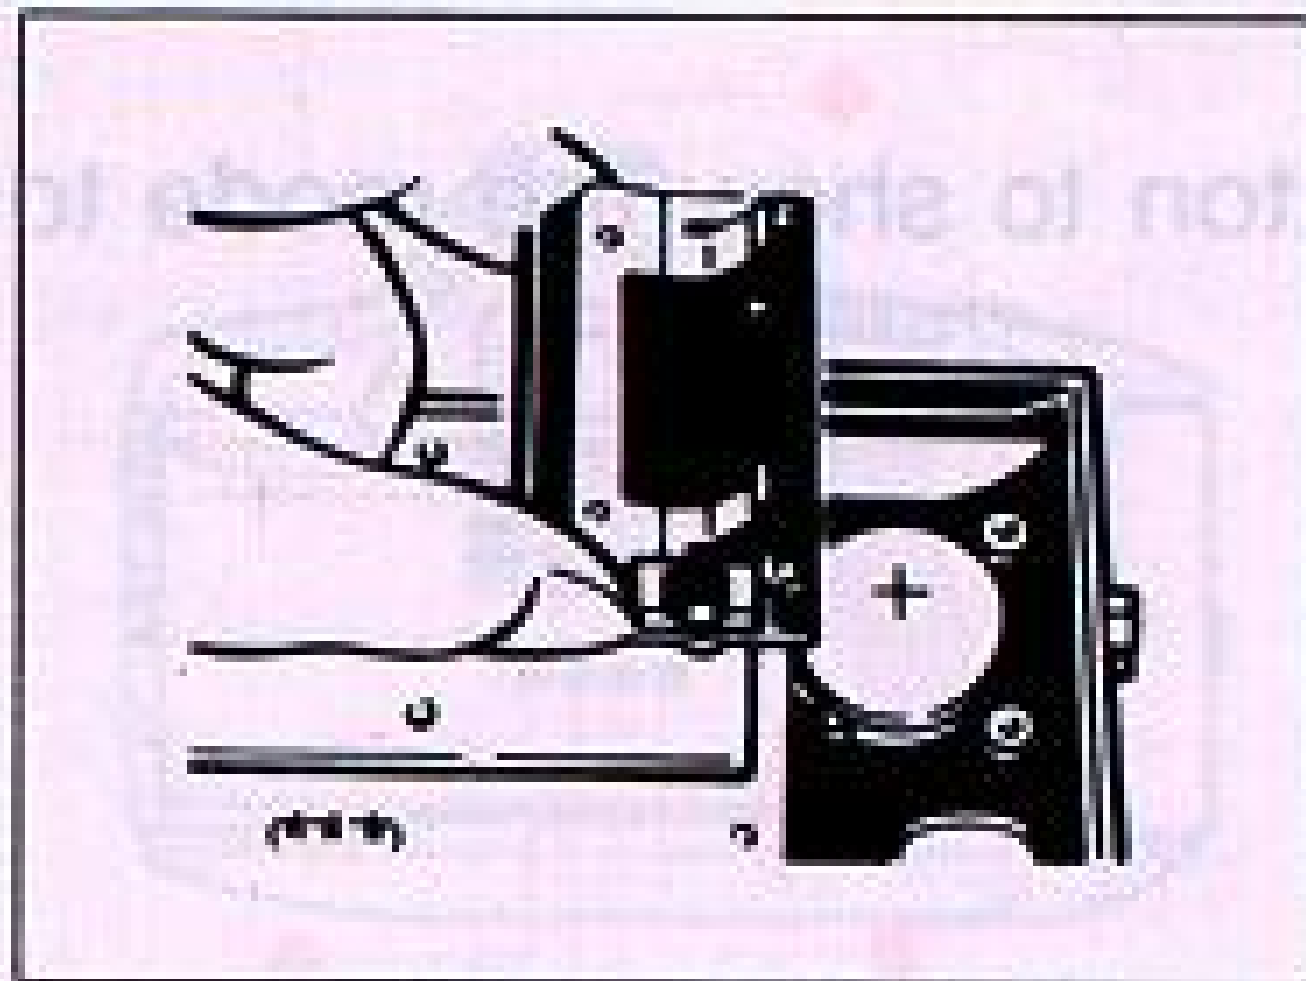 


Fig. 145

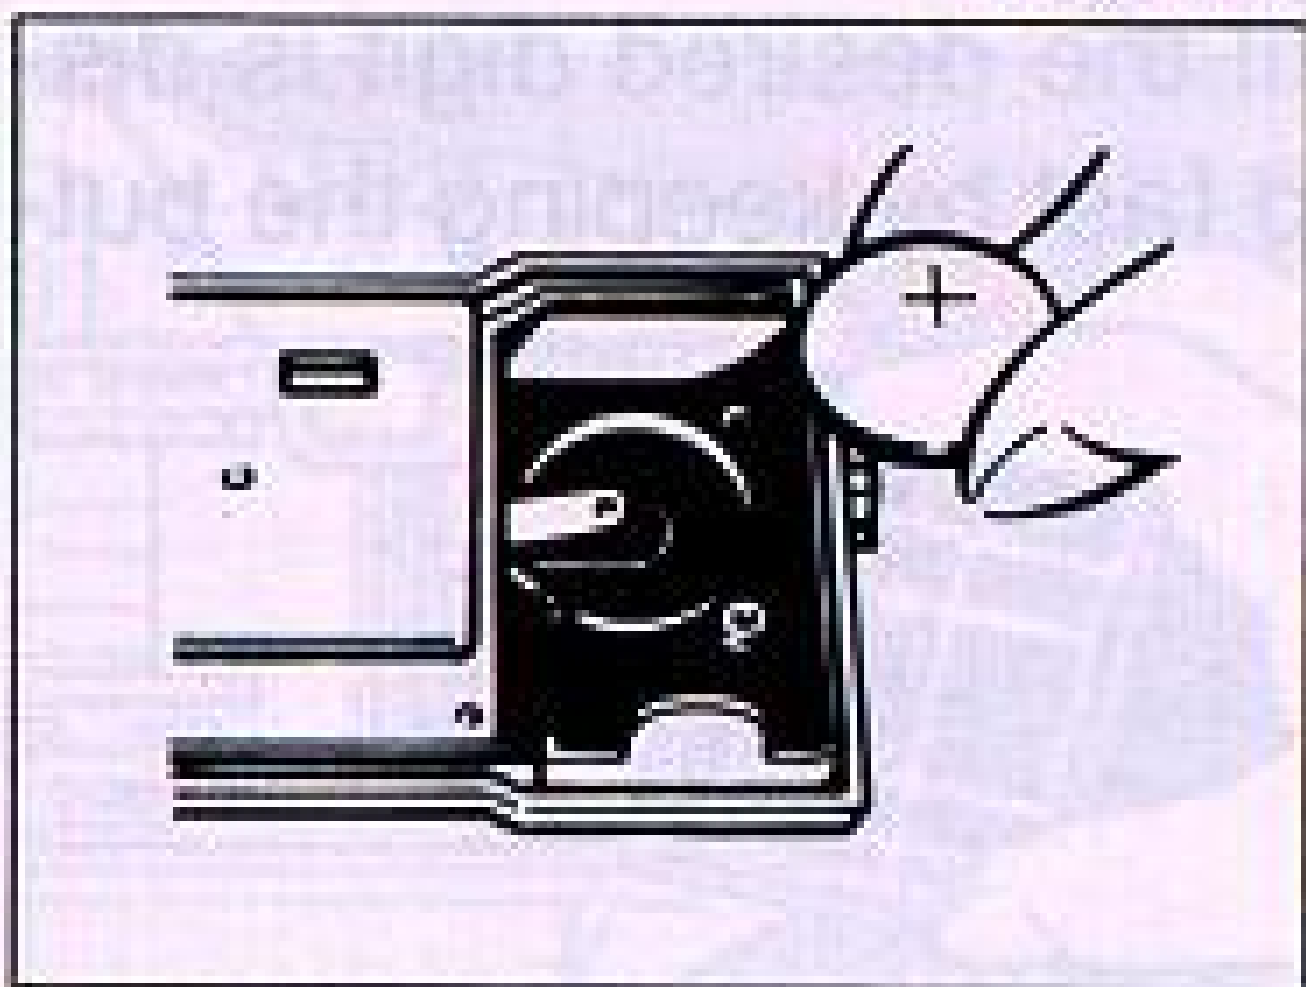 


Fig. 146

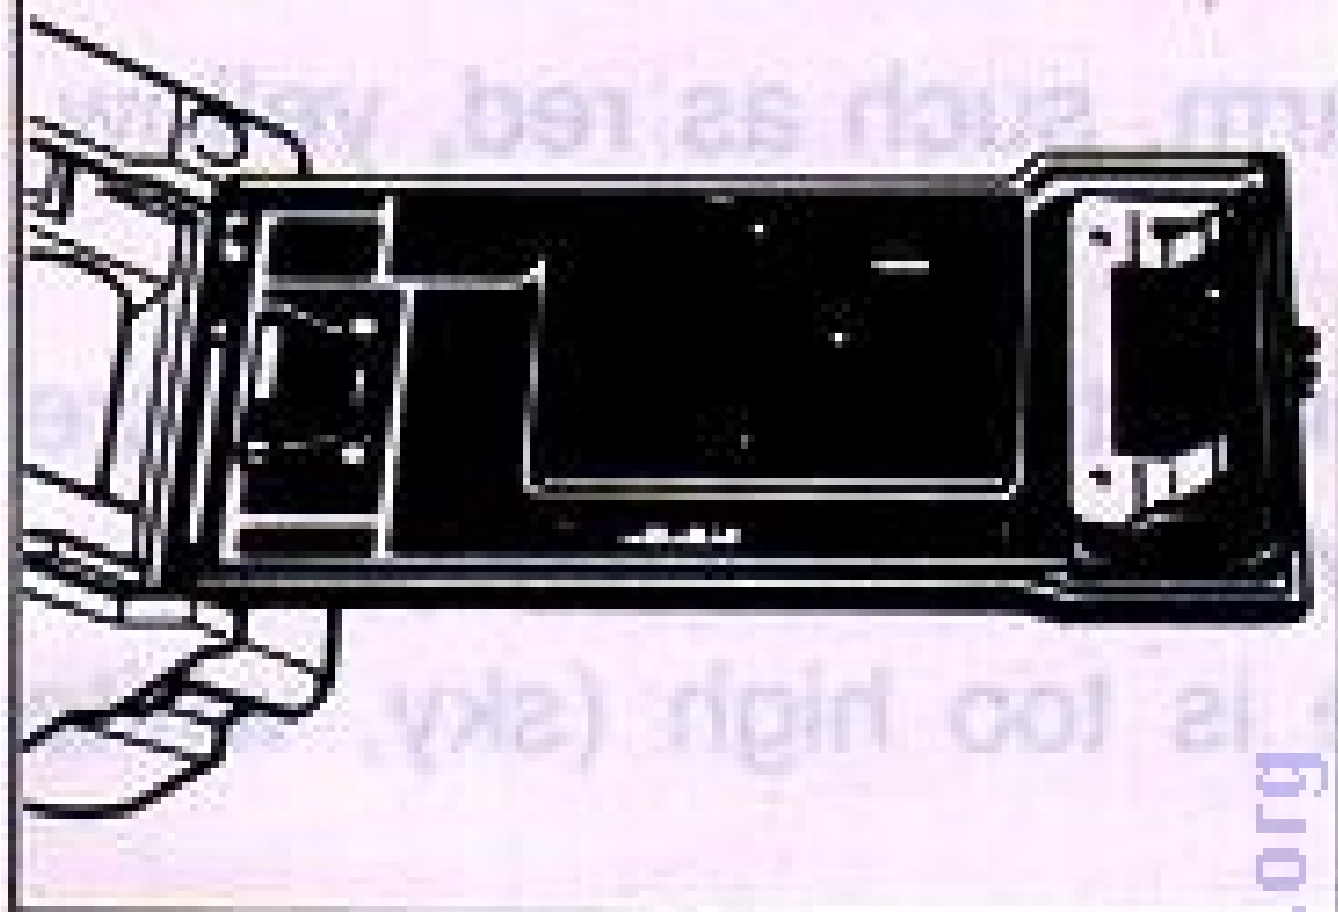 


Fig. 143

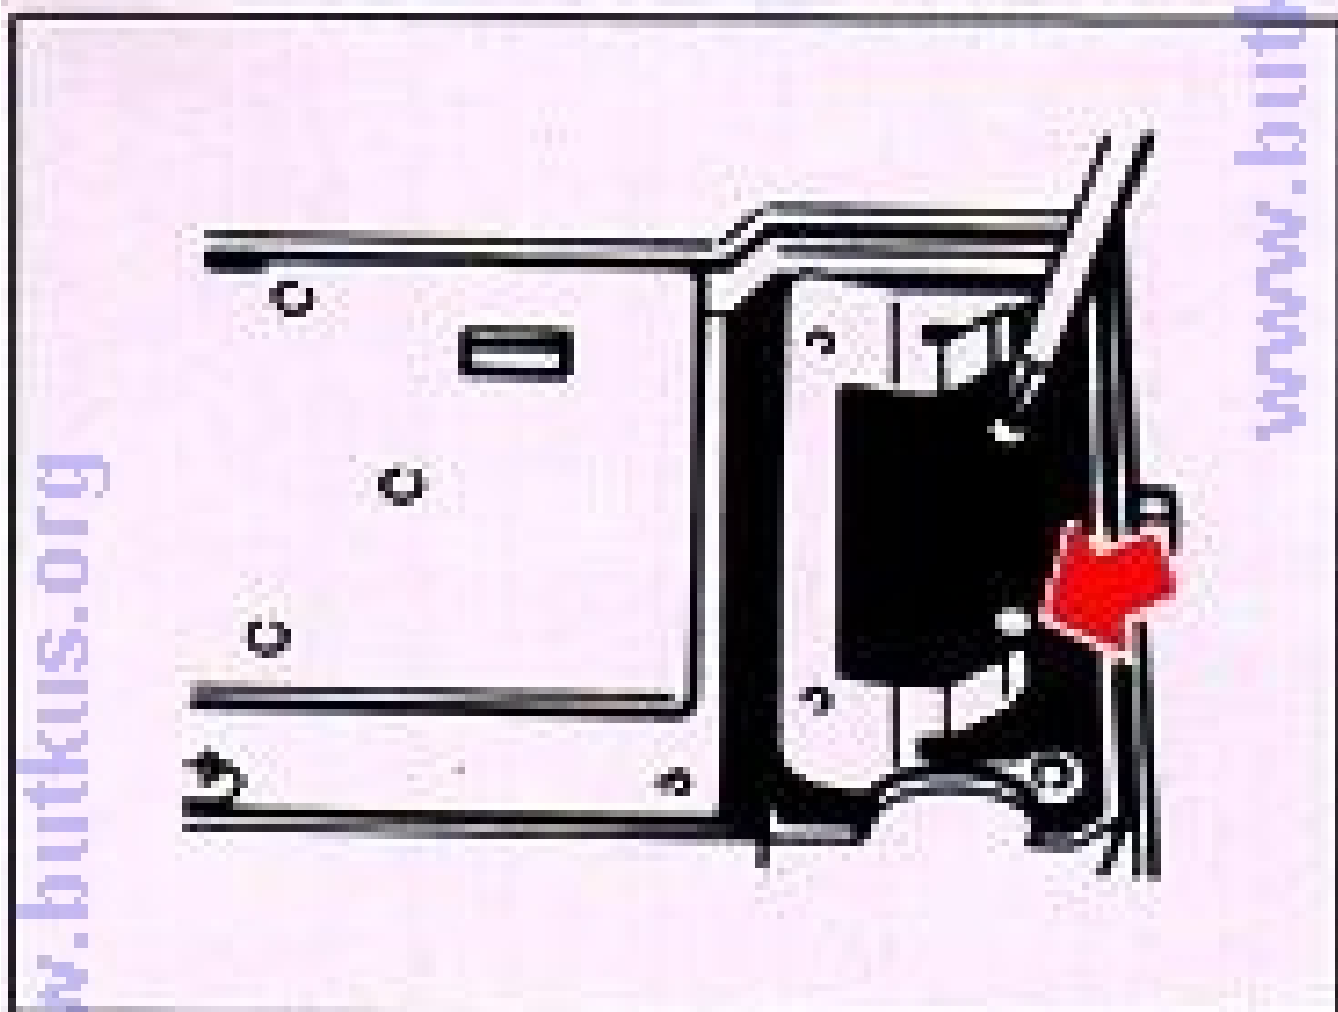 


Fig. 144

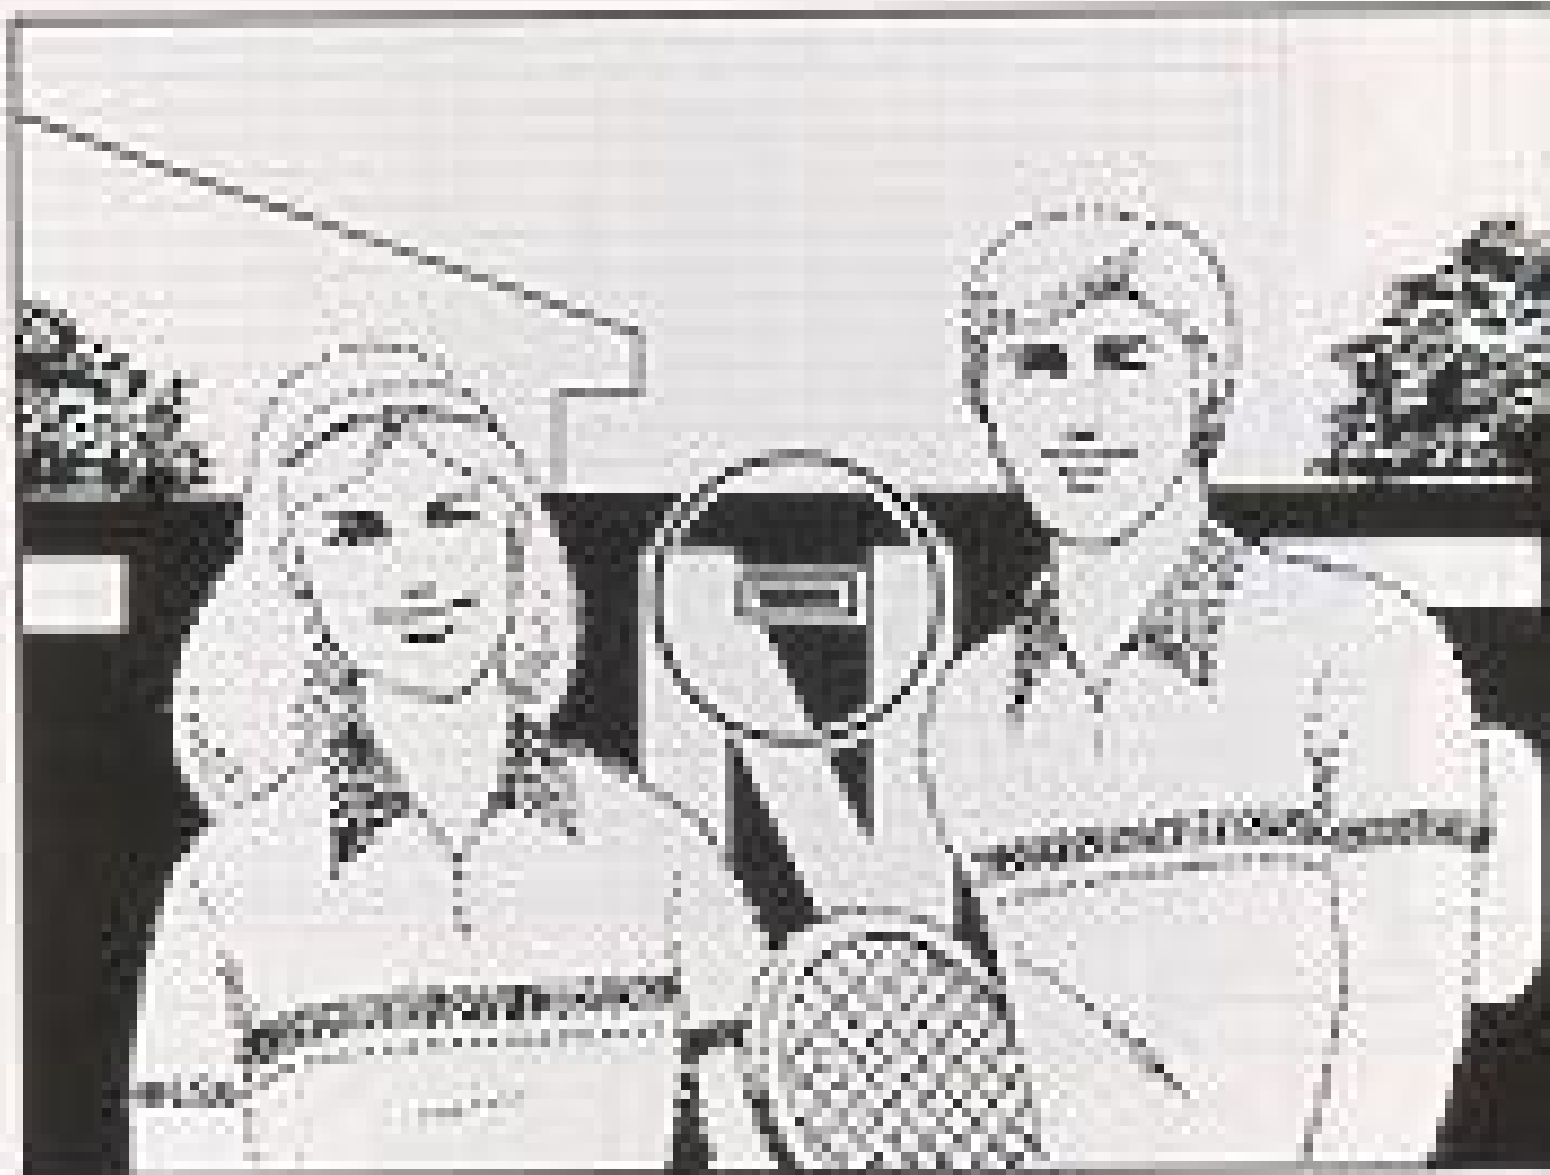 


Fig.

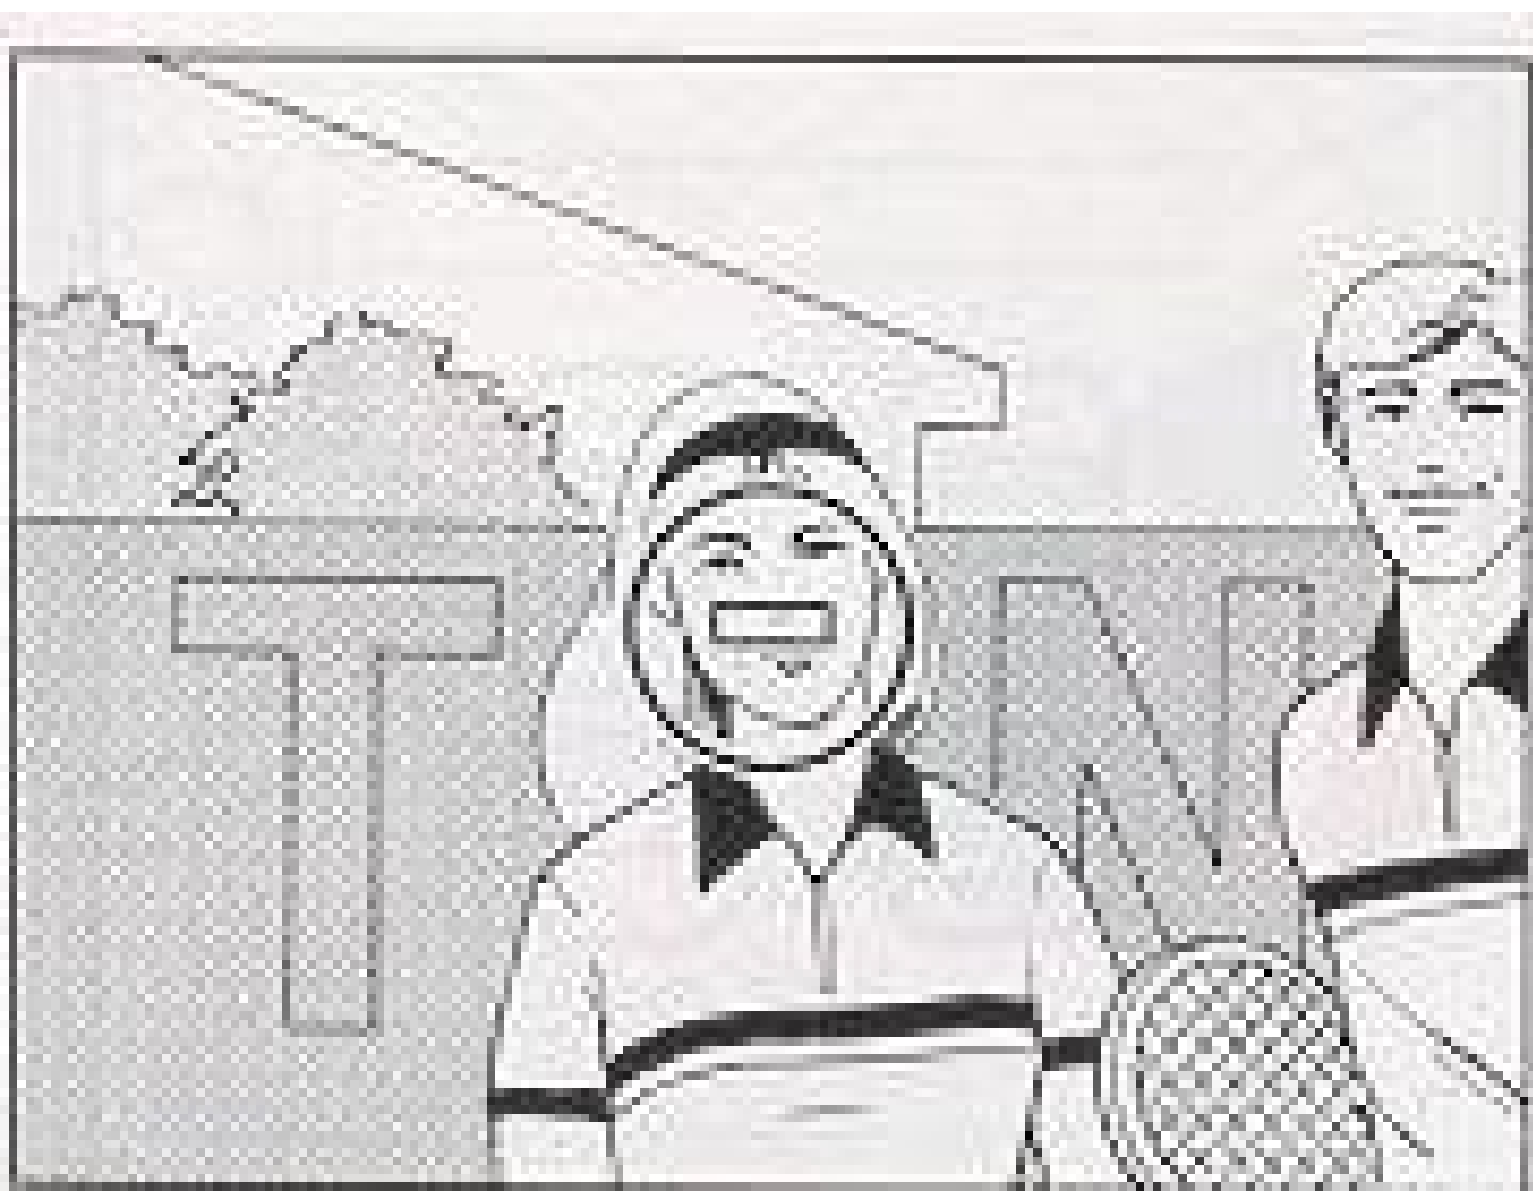 


Fig. 5

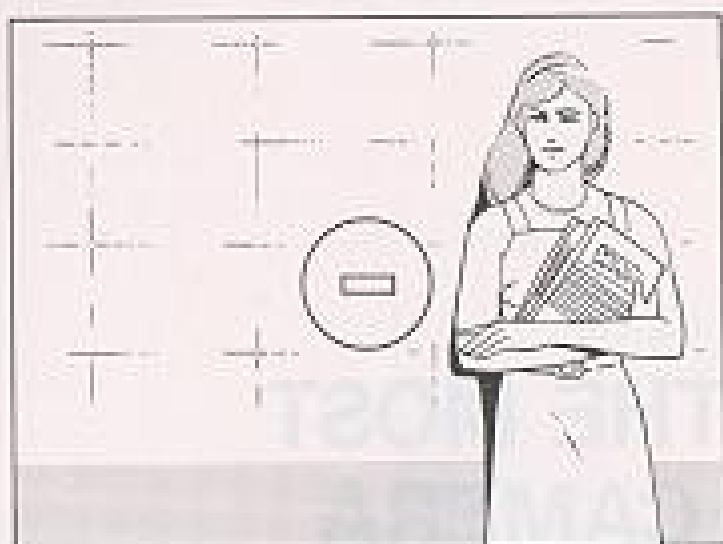 


Fig. 1



Fig. 2

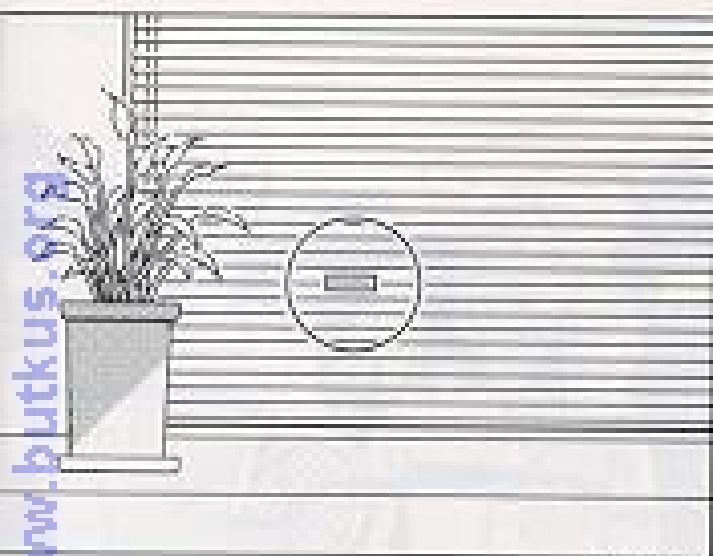 


Fig. 3-A

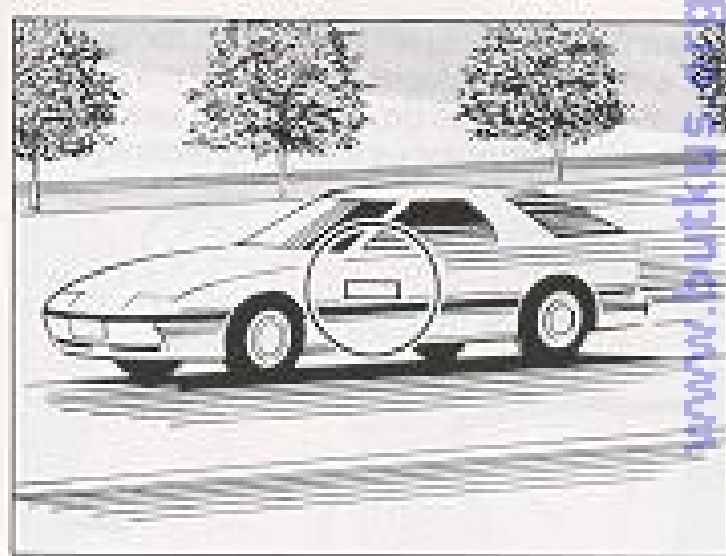 


Fig. 3-B

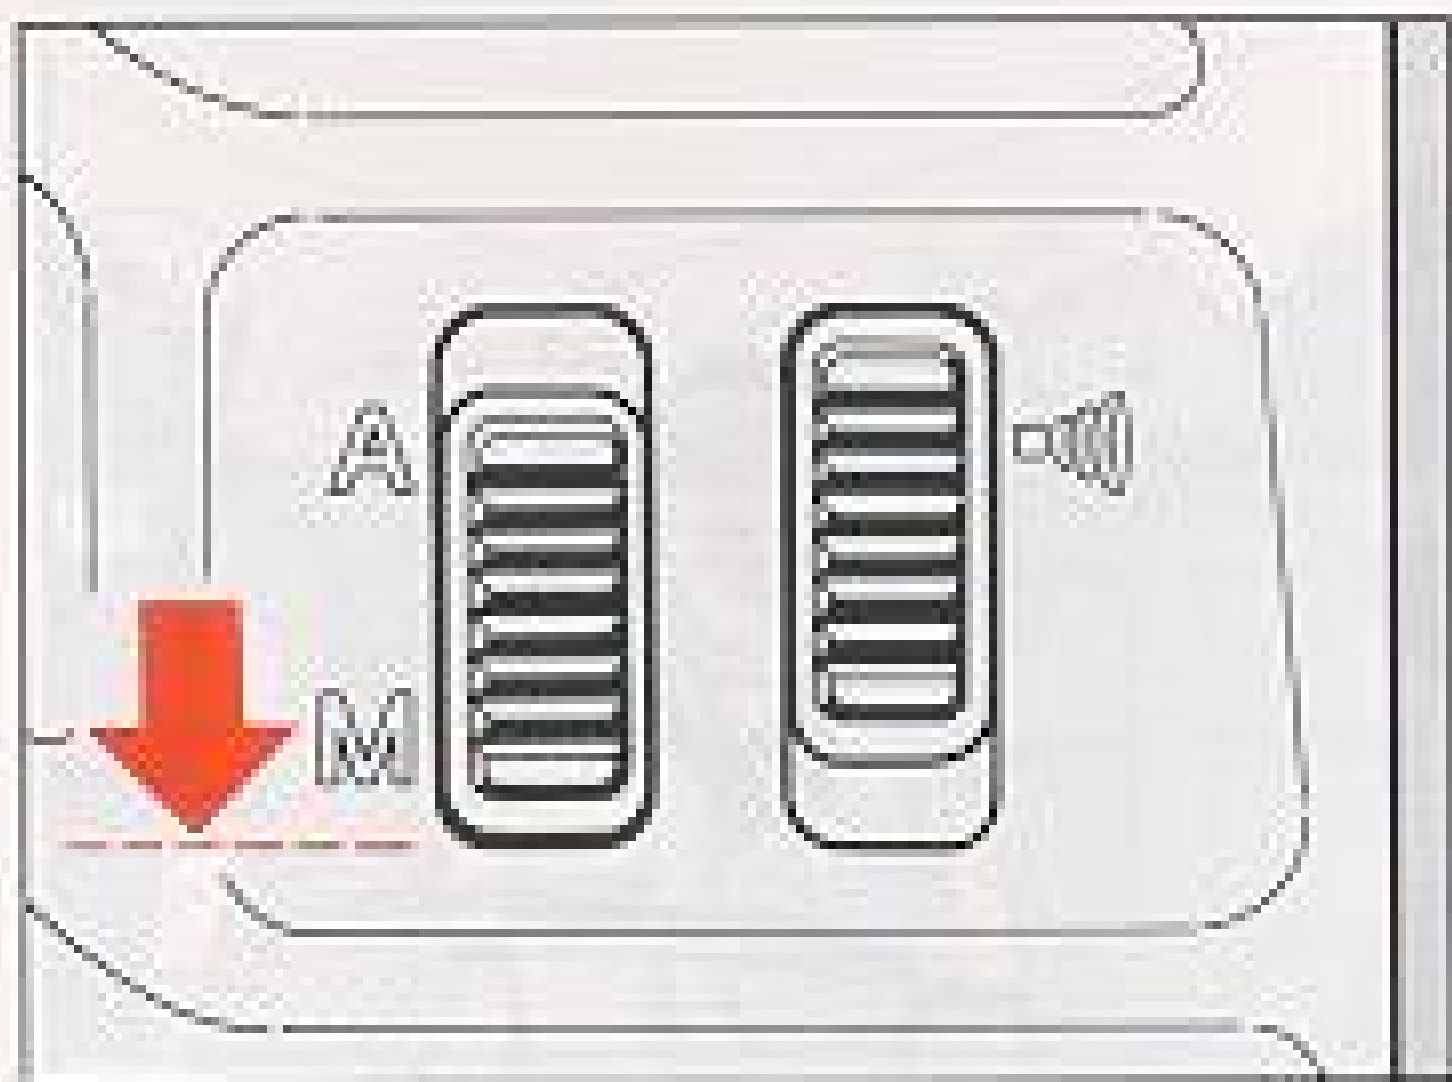 


Fig. 7

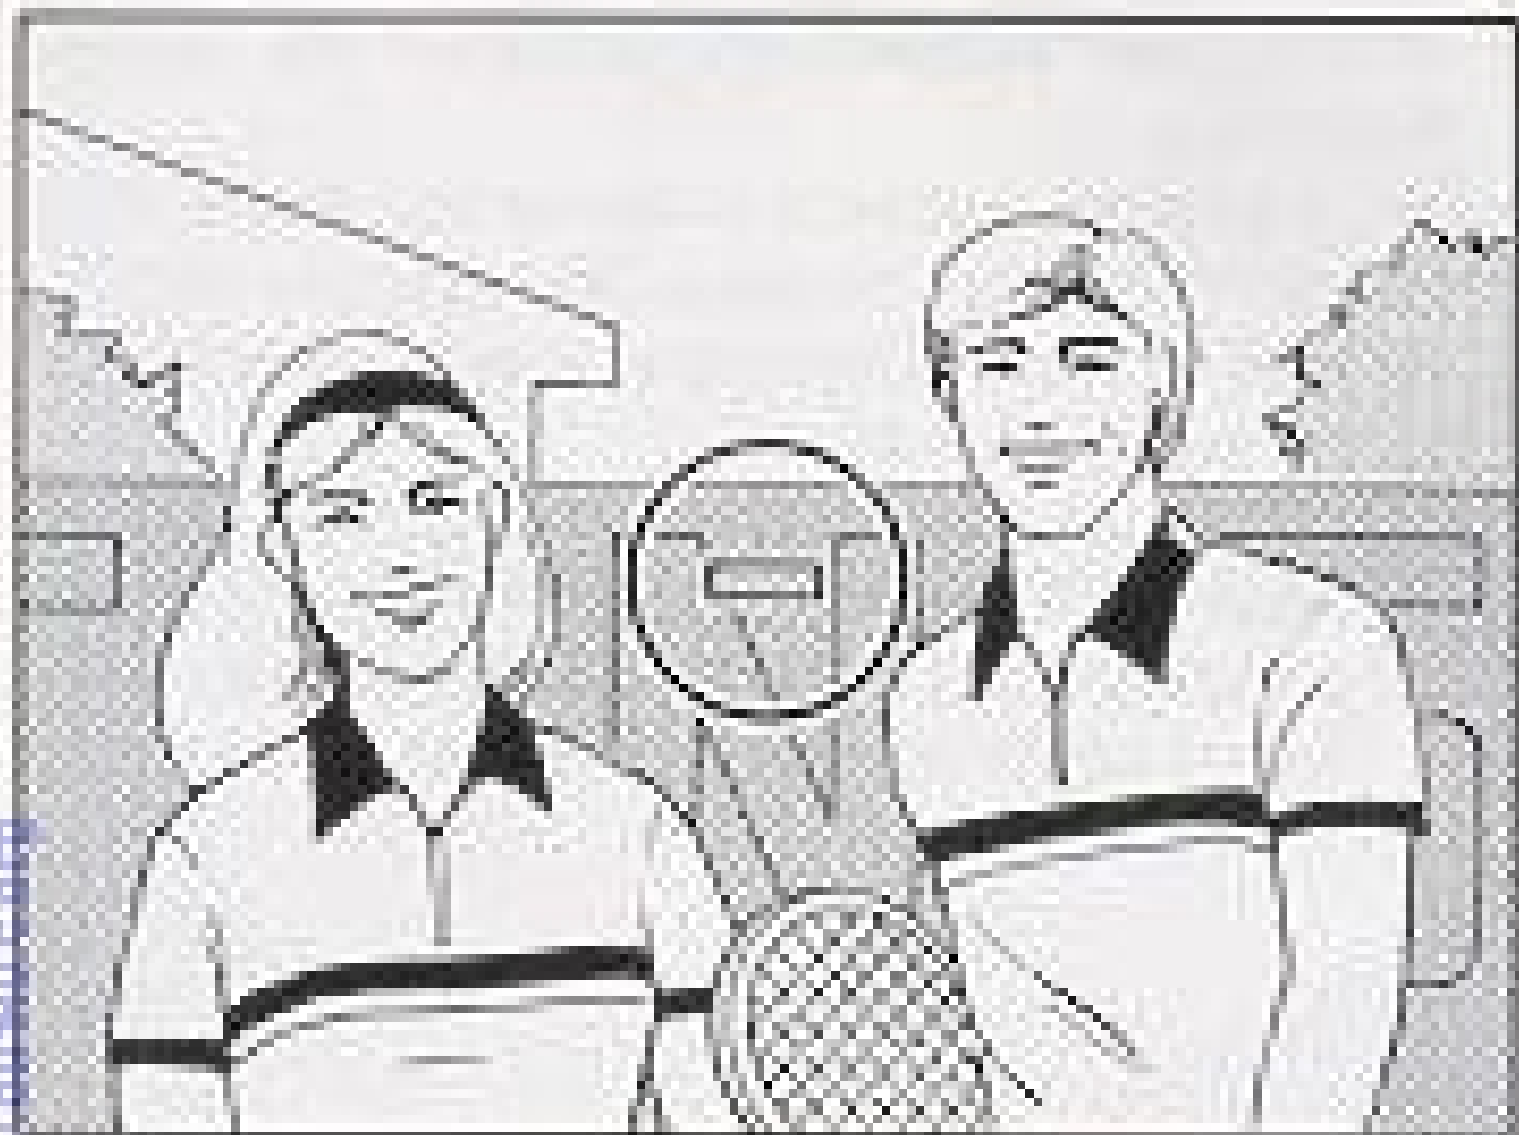 


Fig. 6

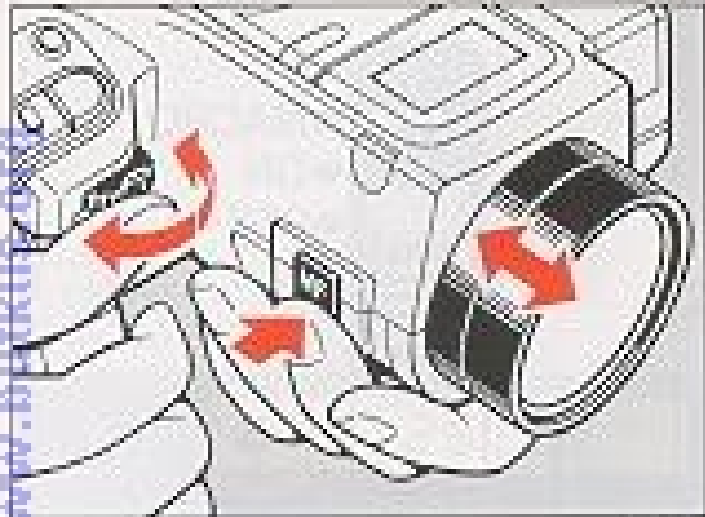 


Fig. 8

