 



Operation	Display on the LCD Panel
1. Press the ON/OFF Switch to turn the power ON 2. Press and hold WORLD TIME Key for at least 2 seconds 3. When the blinking cursor appears, press 0-9 on the Word Input Keys as follows: 1) Time zone No. (2 digits) 2) Year (4 digits) 3) Month (2 digits) 4) Day (2 digits) 5) Hour (2 digits) 6) Minute (2 digits) 4. Press ENTER Key to start the timer.	? or date/time display No. 10 19:00 No 18 / 1992 / Y 09M 09D 15:26 00 No18 1992Y09M09D15:26 01 (You can also move to the place you wish to correct by pressing the Scroll Keys)

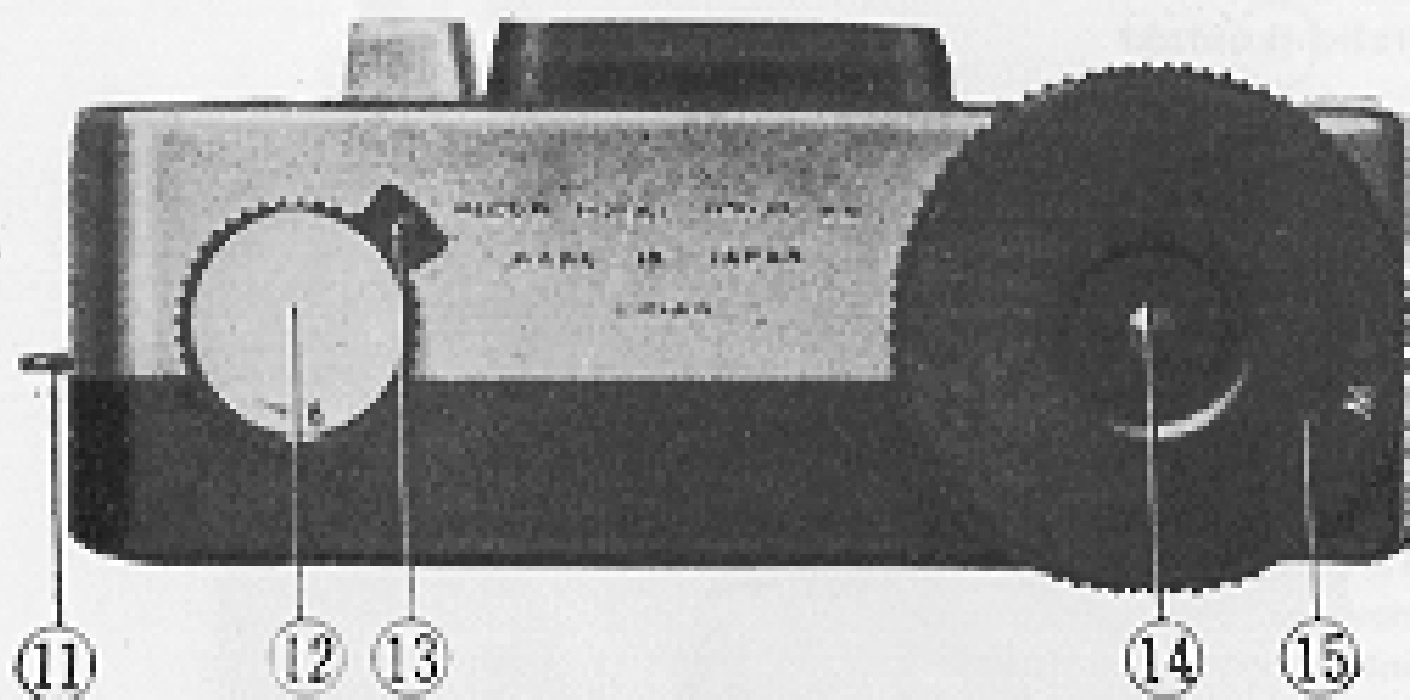

10 sec. Times

ricoh

 
aut

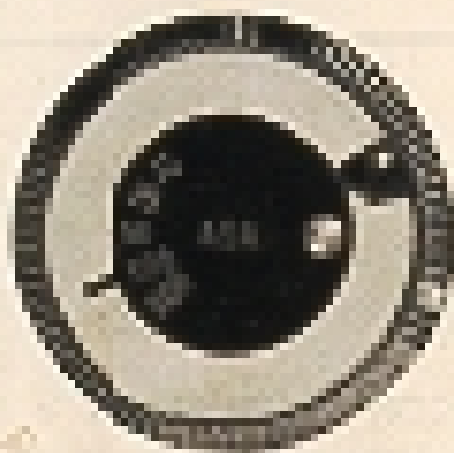


half



RICOH
AUTO
HALF

  
RICOH

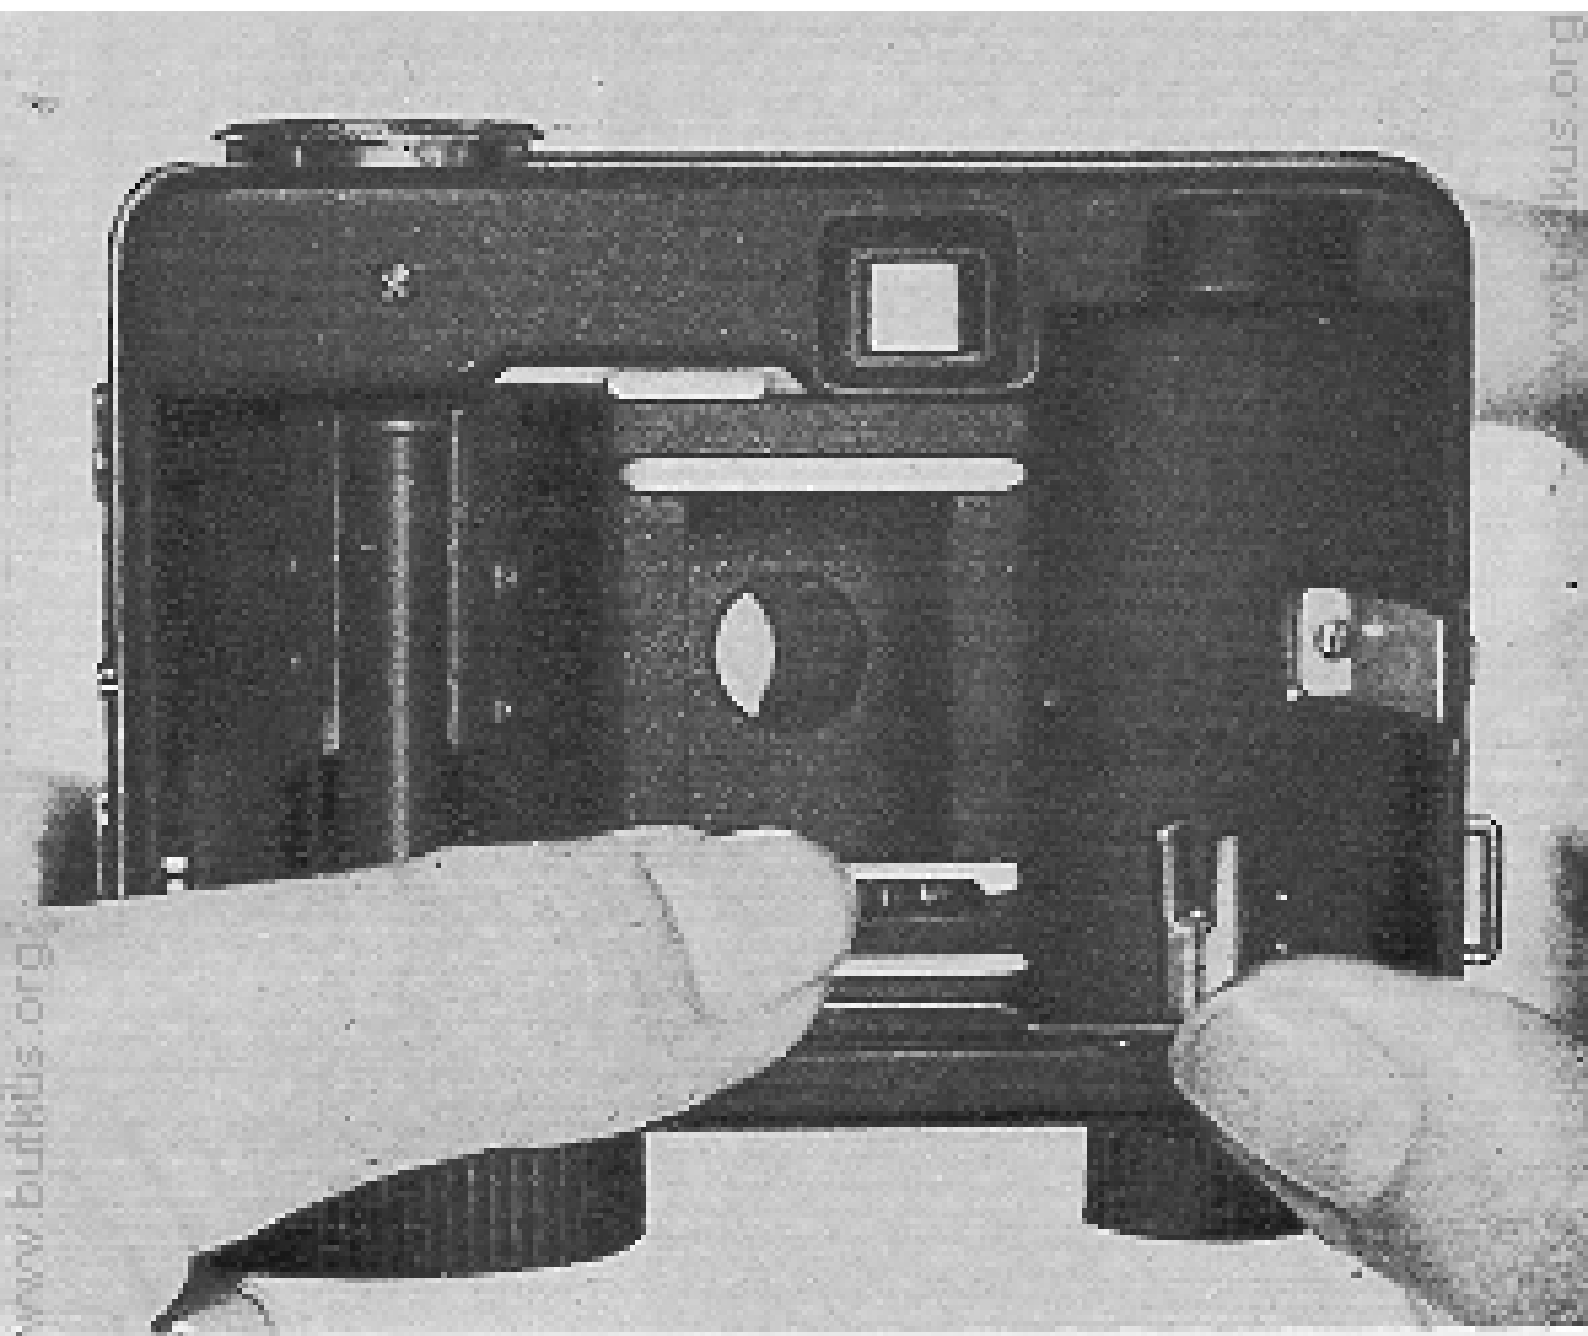


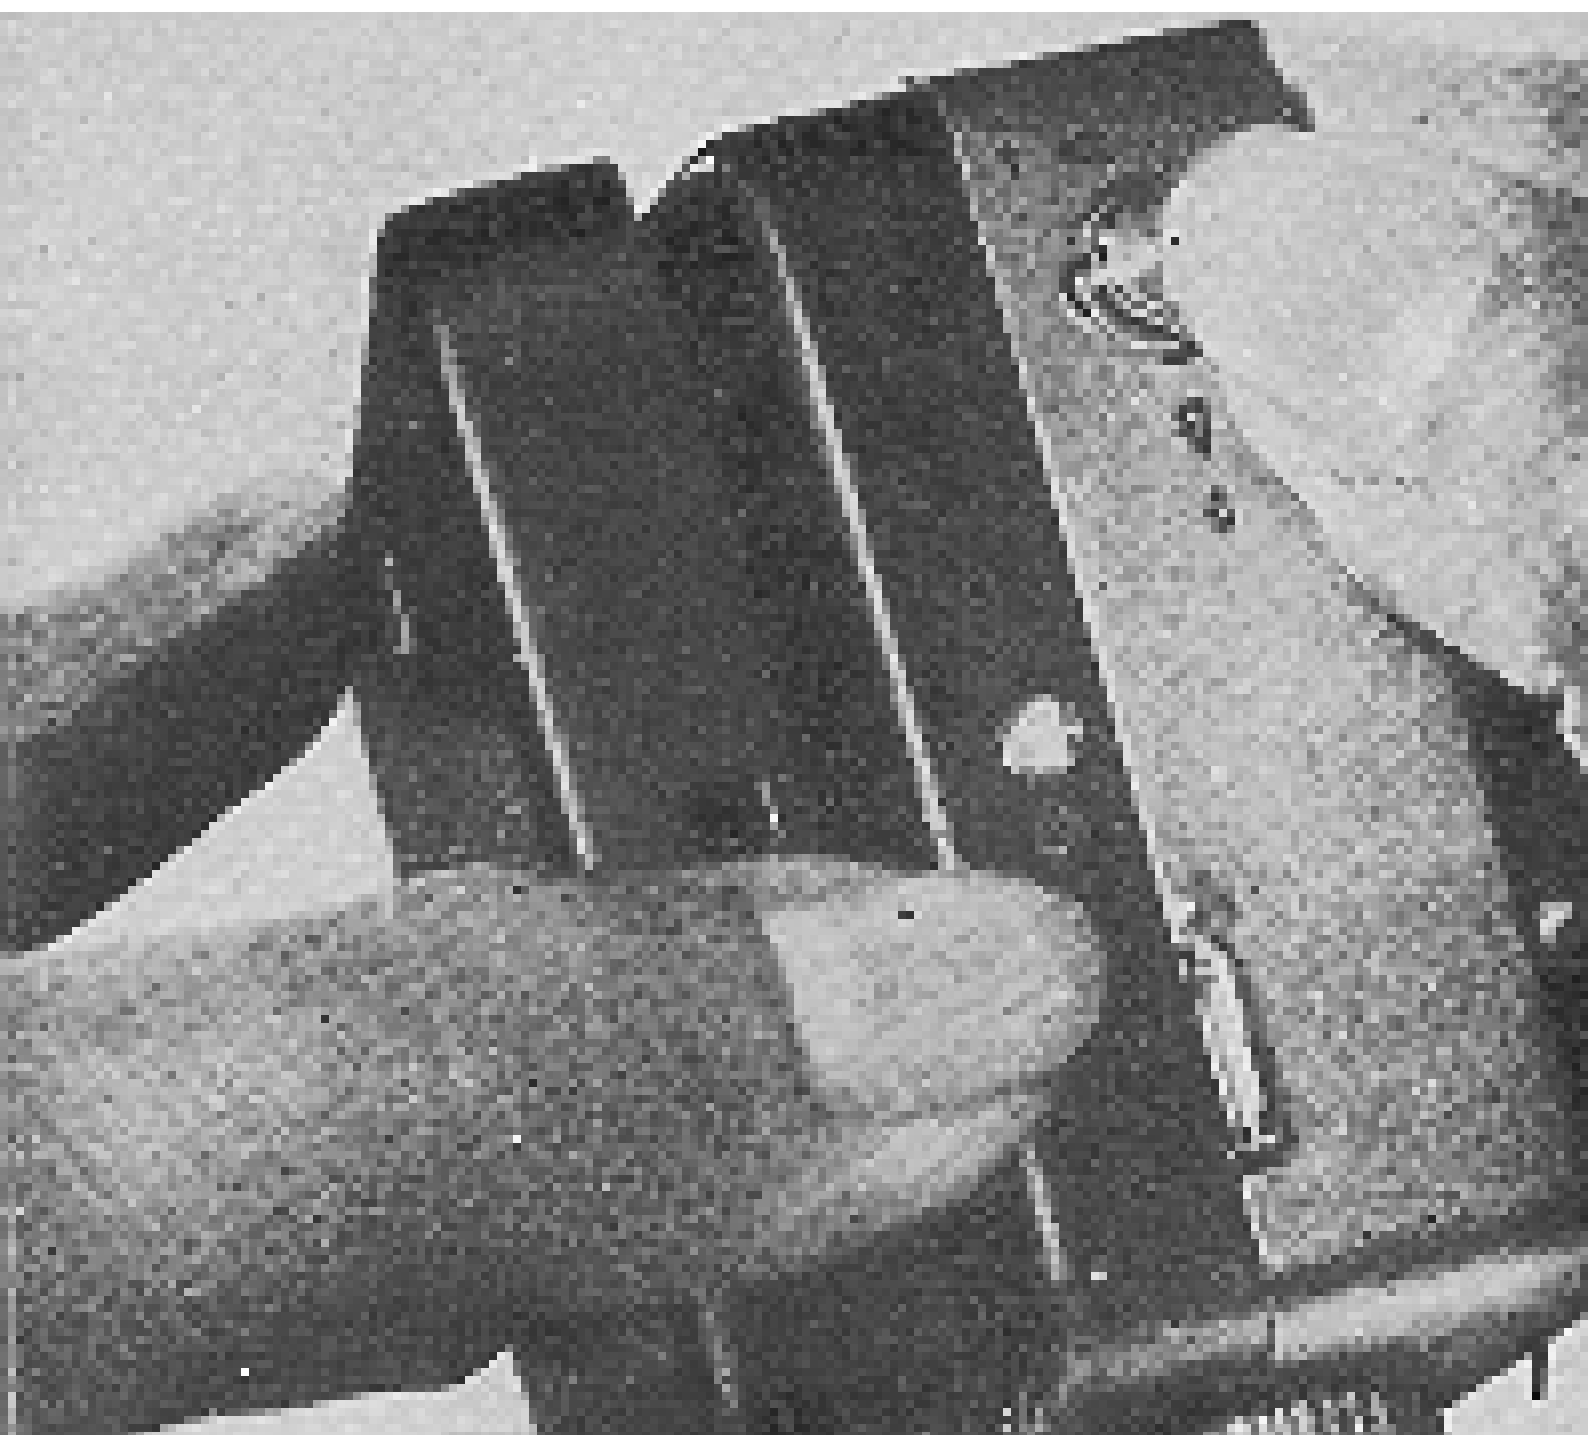


Operation	Display on the LCD Panel	
● Change Move the blinking cursor ■ to the place you wish to change using Scroll Keys Change the letter to K	▶ ▶	NEW YORC NEW YOR■ NEW YORK
● Insert Move the blinking cursor to the place where you wish to insert using Scroll Keys Press SELECT Key to erase ▶ and press INS Key Press SELECT Key and then K	▶ ▶	NEW ORK NEW ■RK NEW ■ORK NEW YORK
● Delete Move the blinking cursor to the place where you wish to delete using Scroll Keys Press SELECT Key to erase ▶ and press DEL Key	▶	NEW YYORK NEW Y■ORK NEW YORK

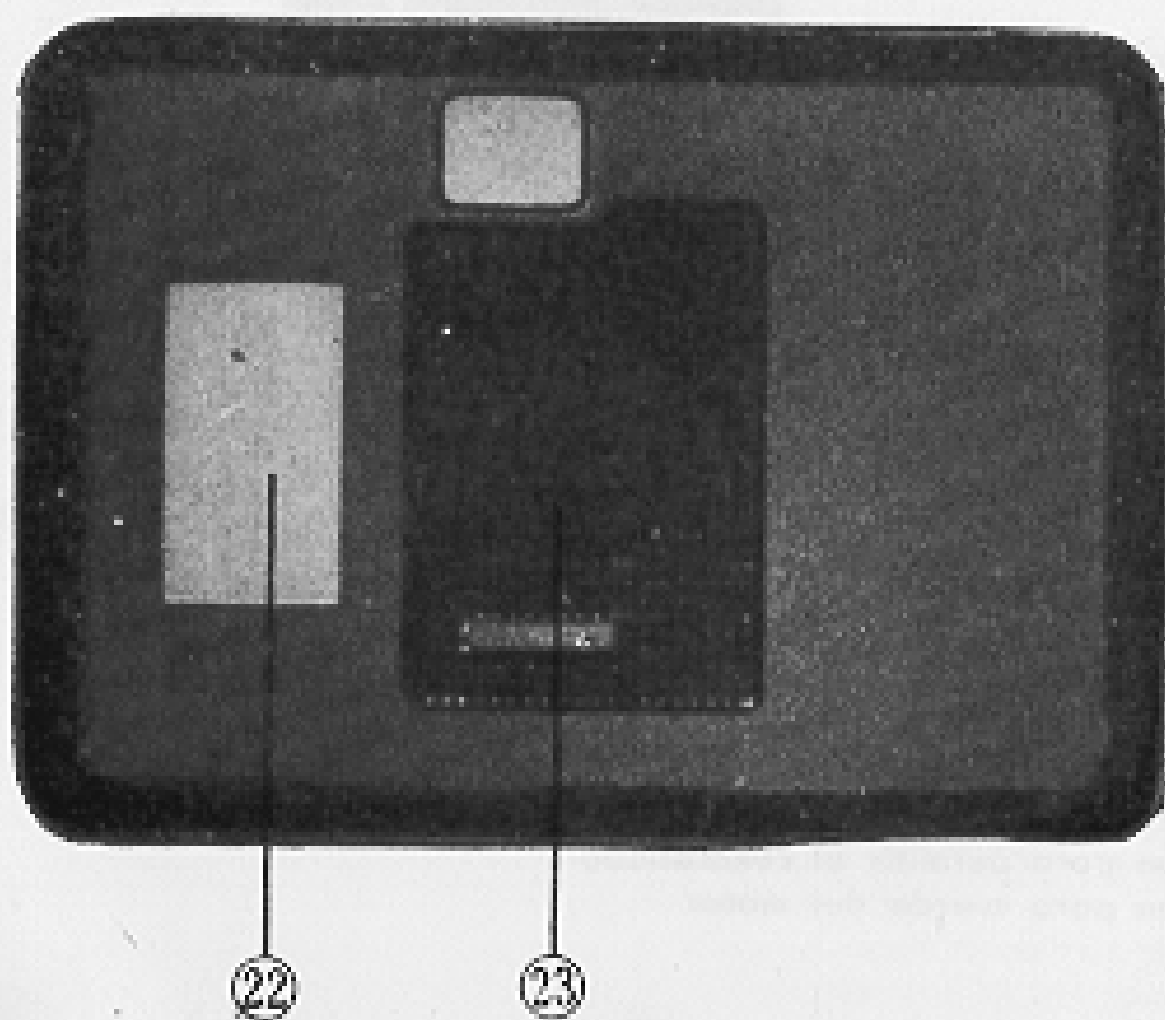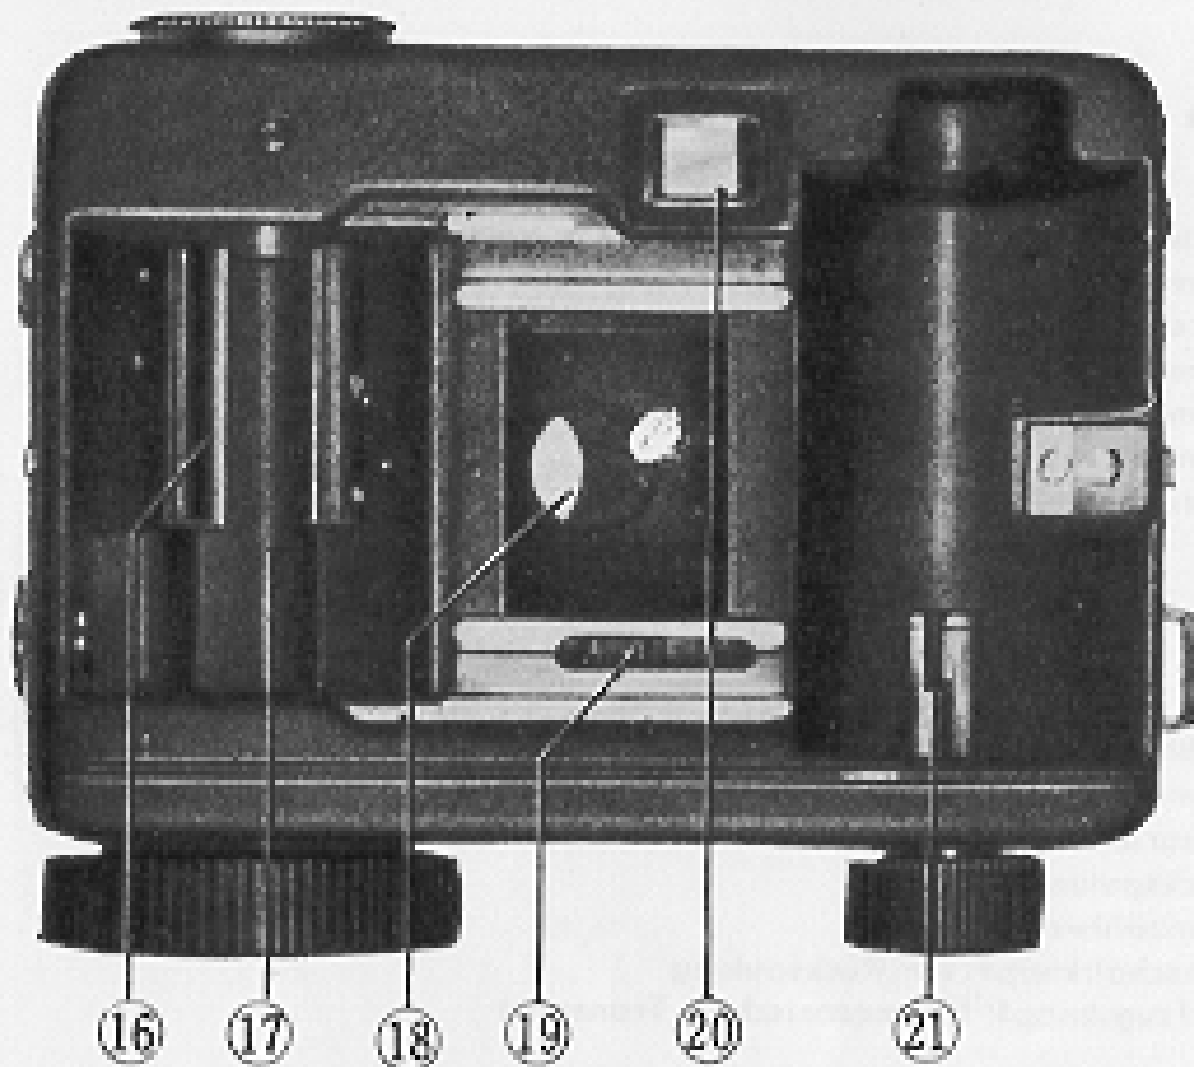  




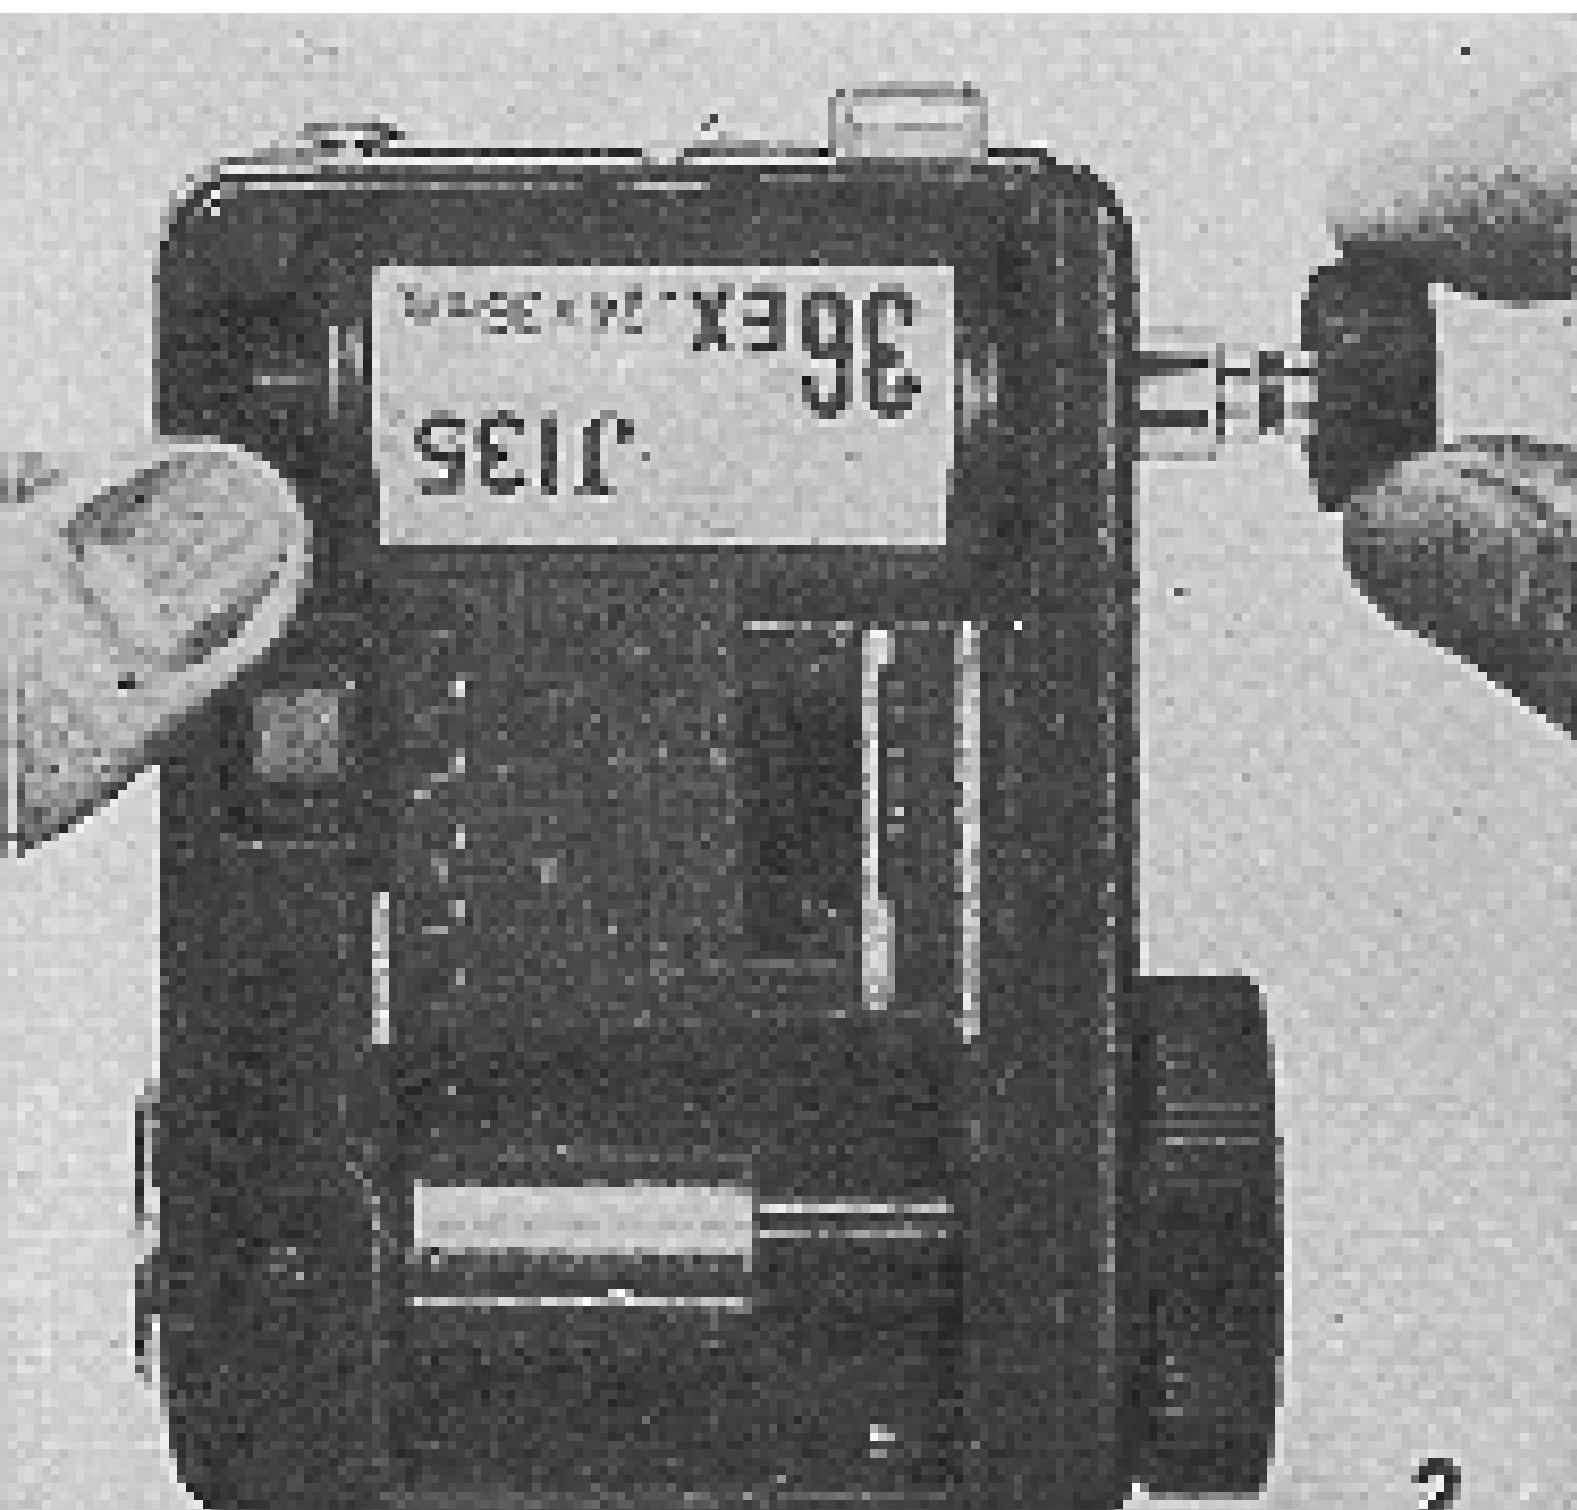



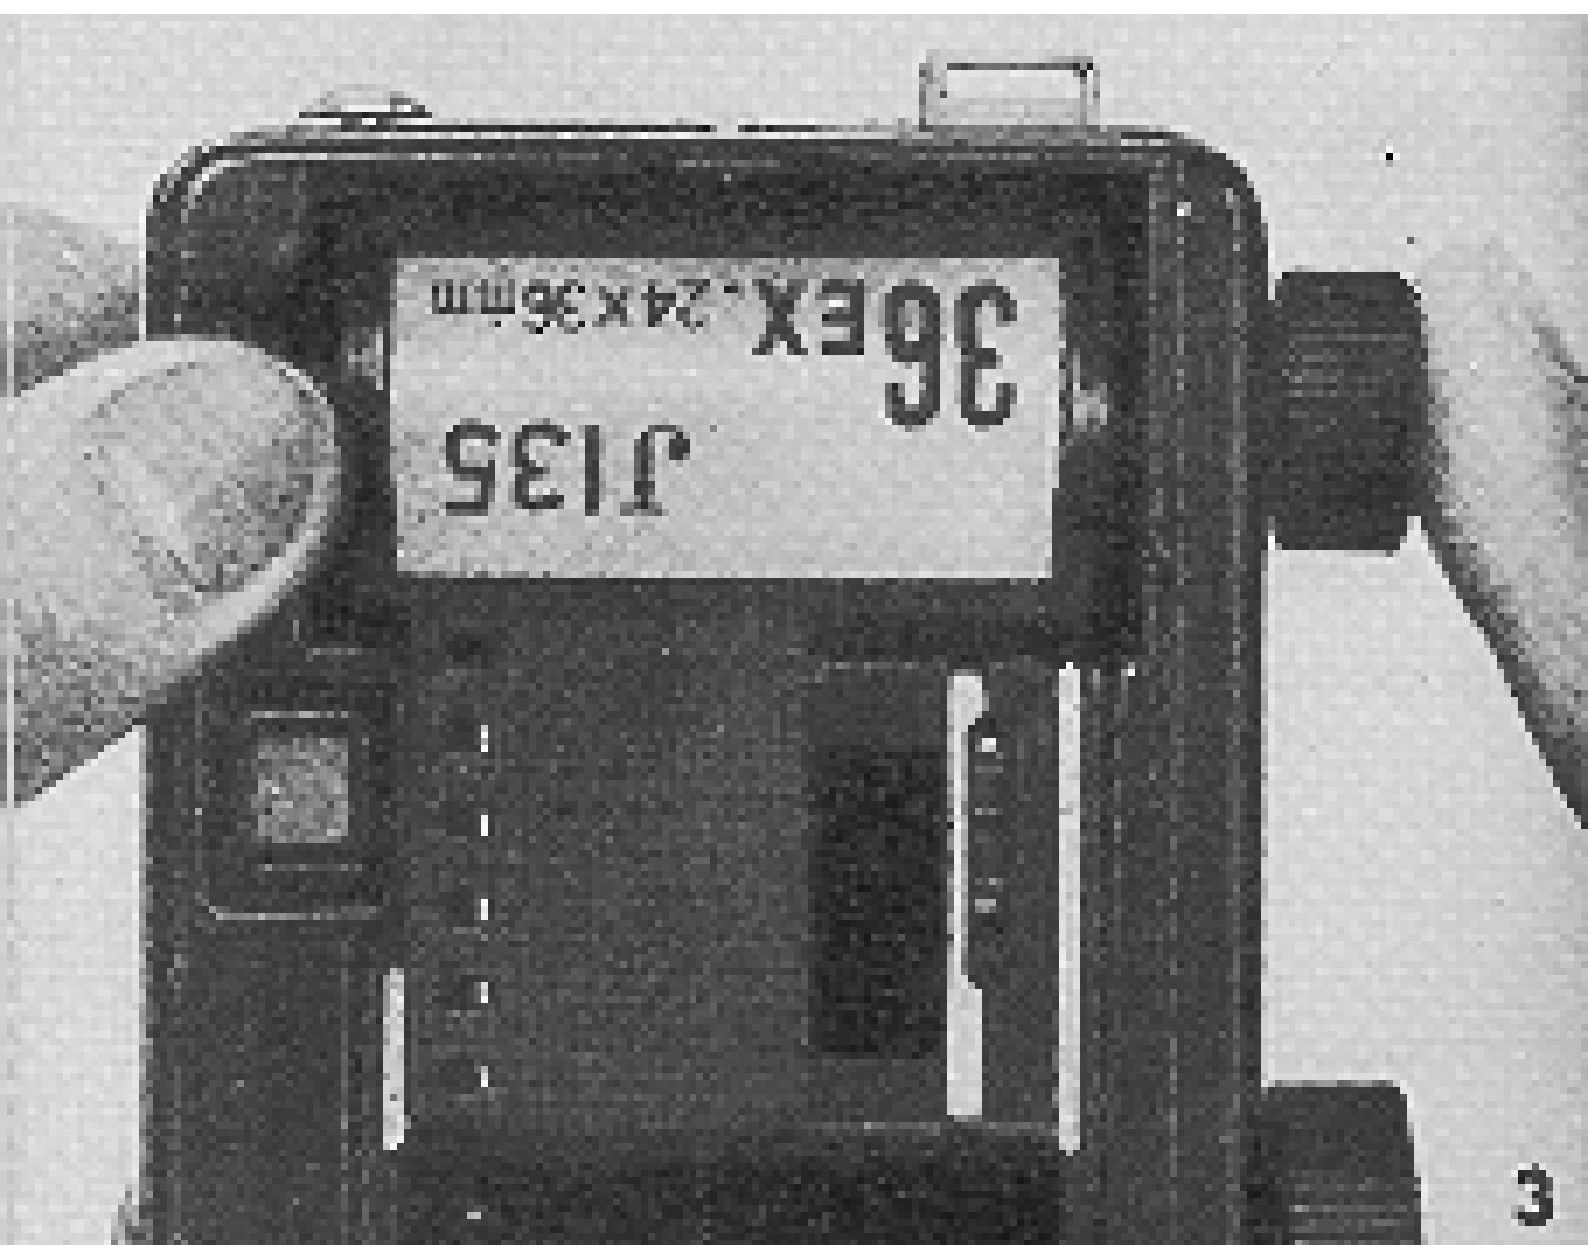





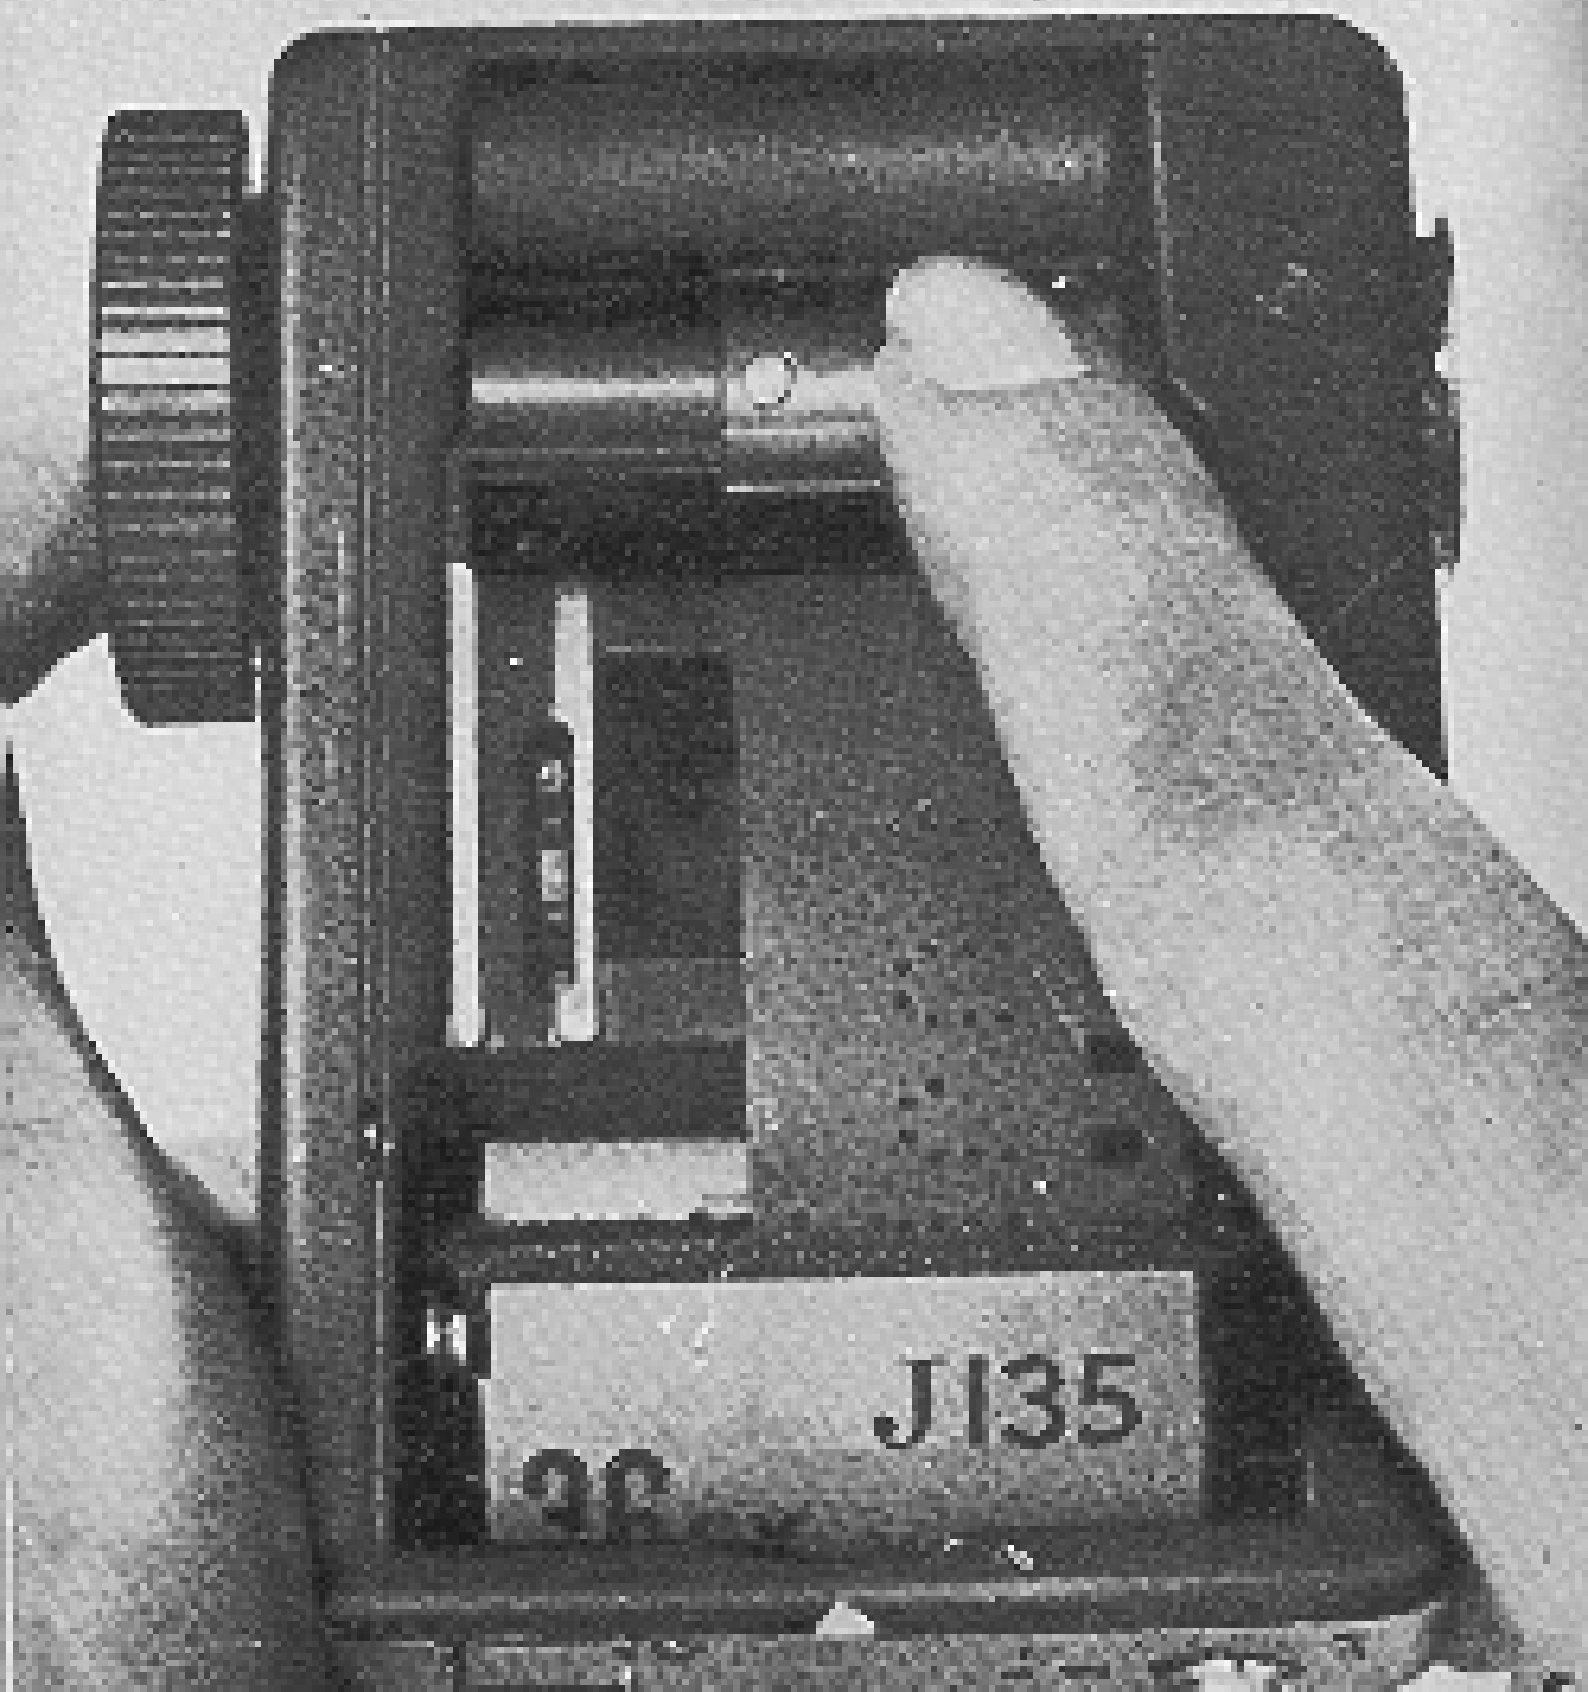       

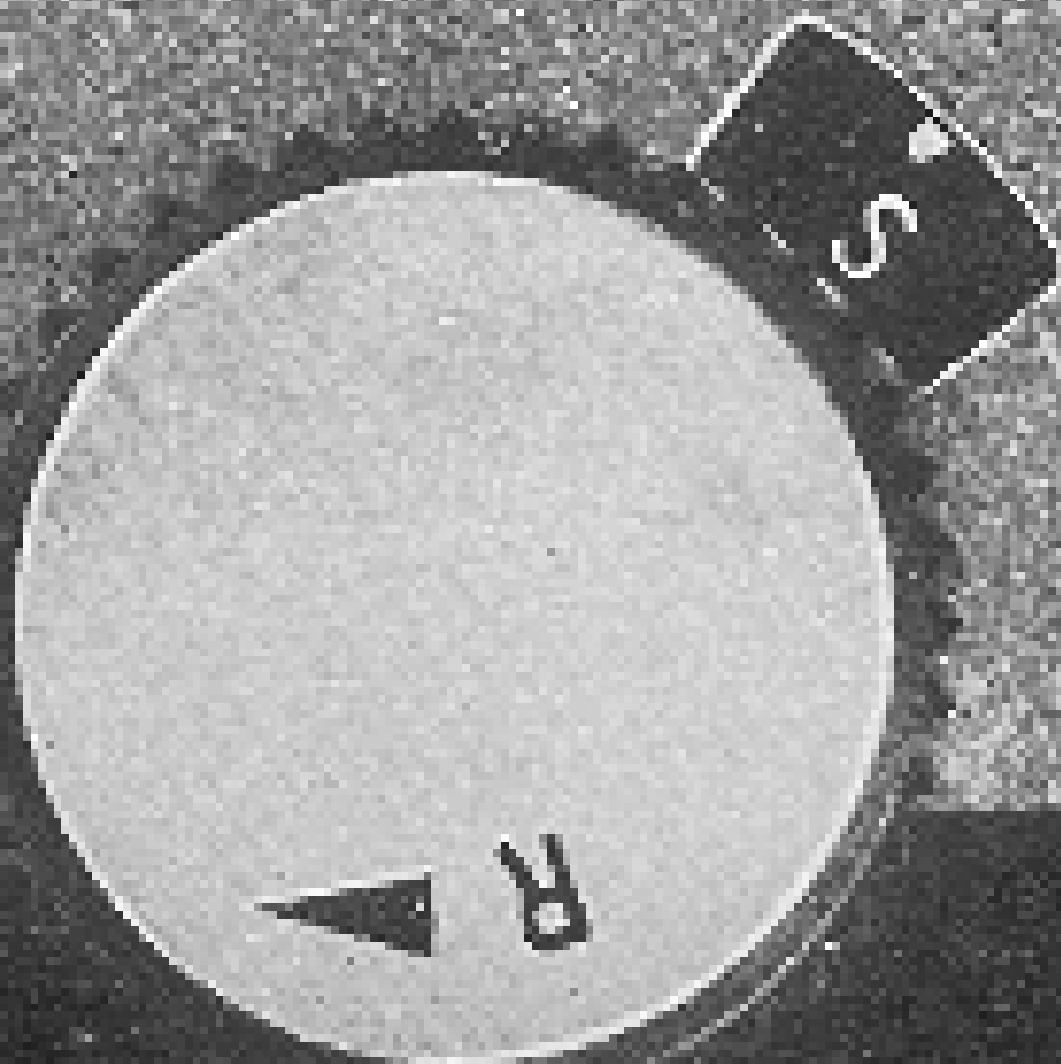


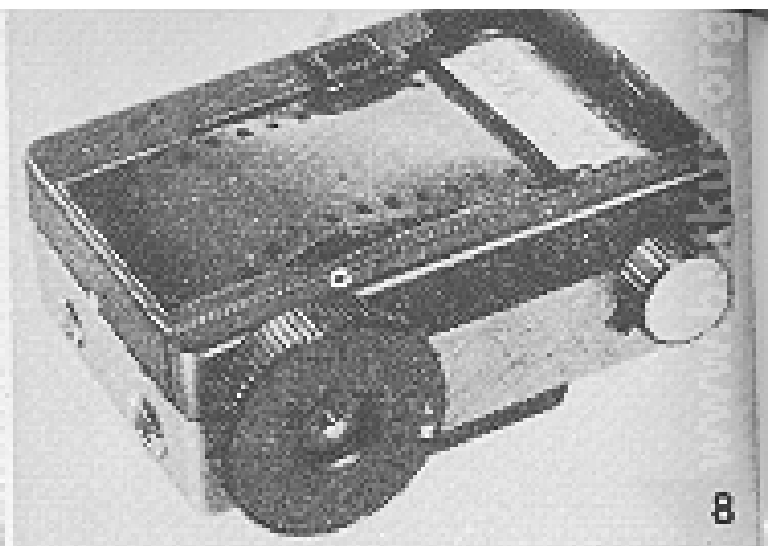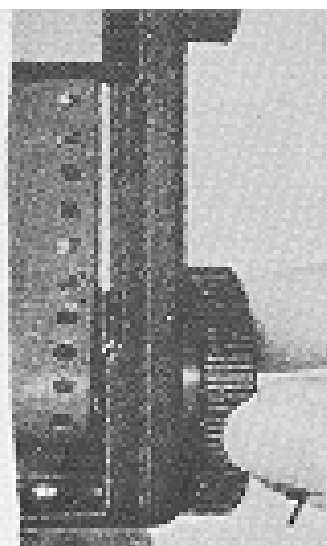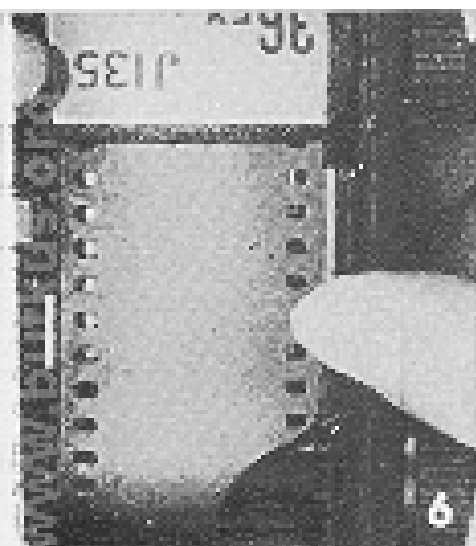


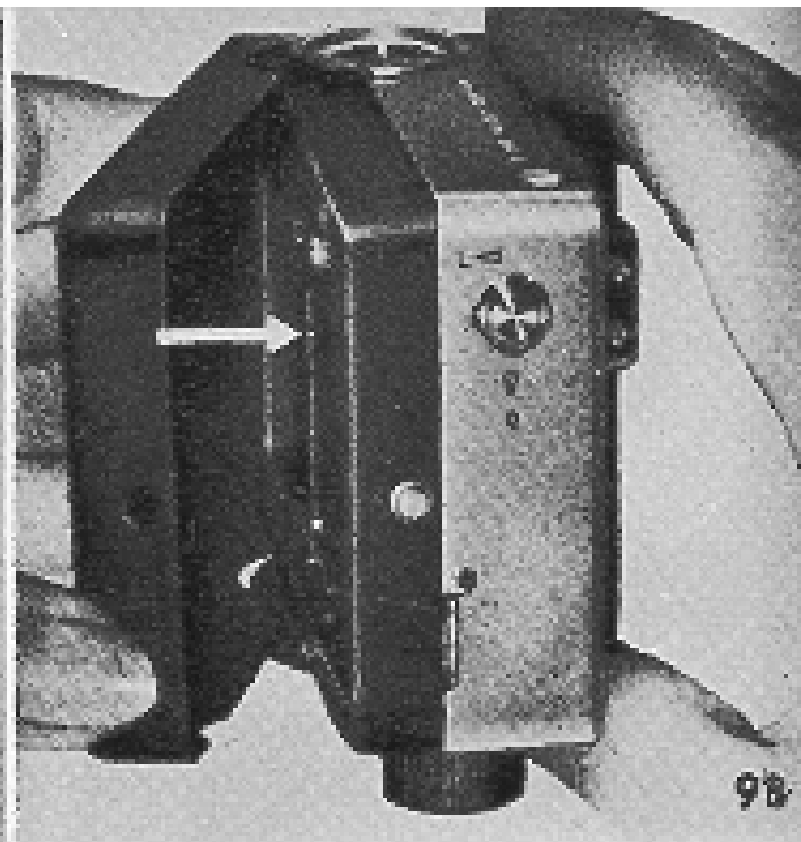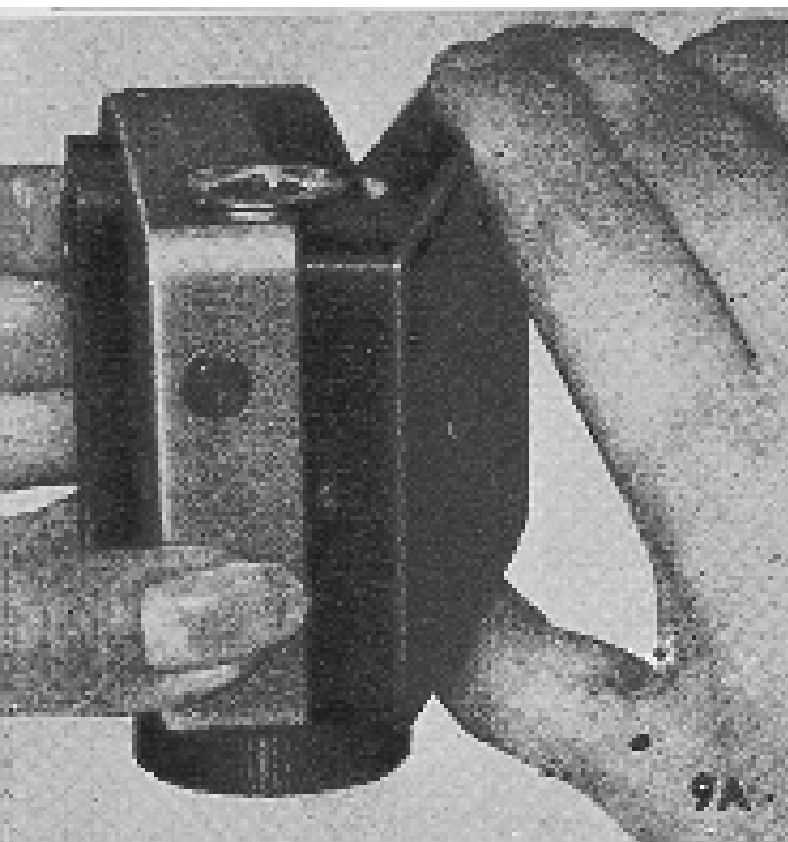


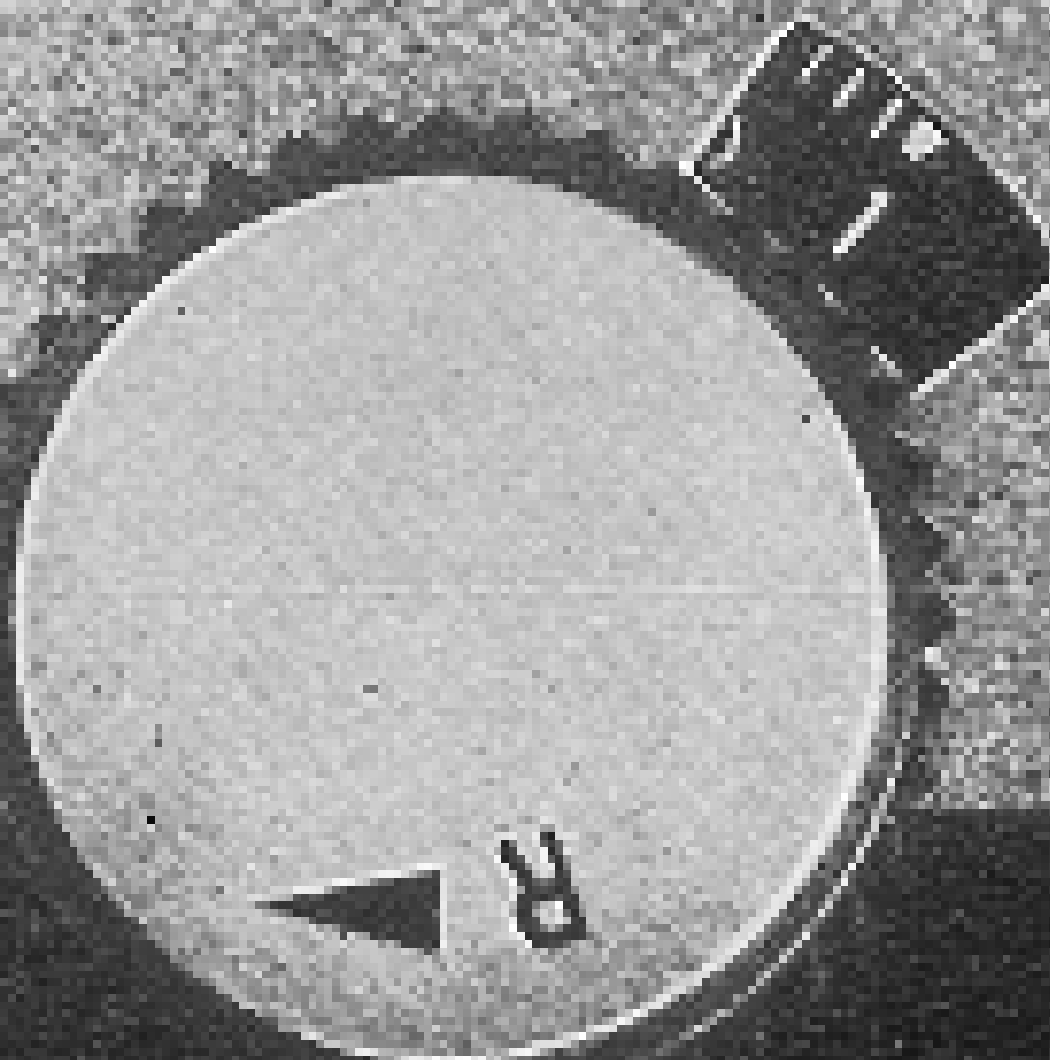


108

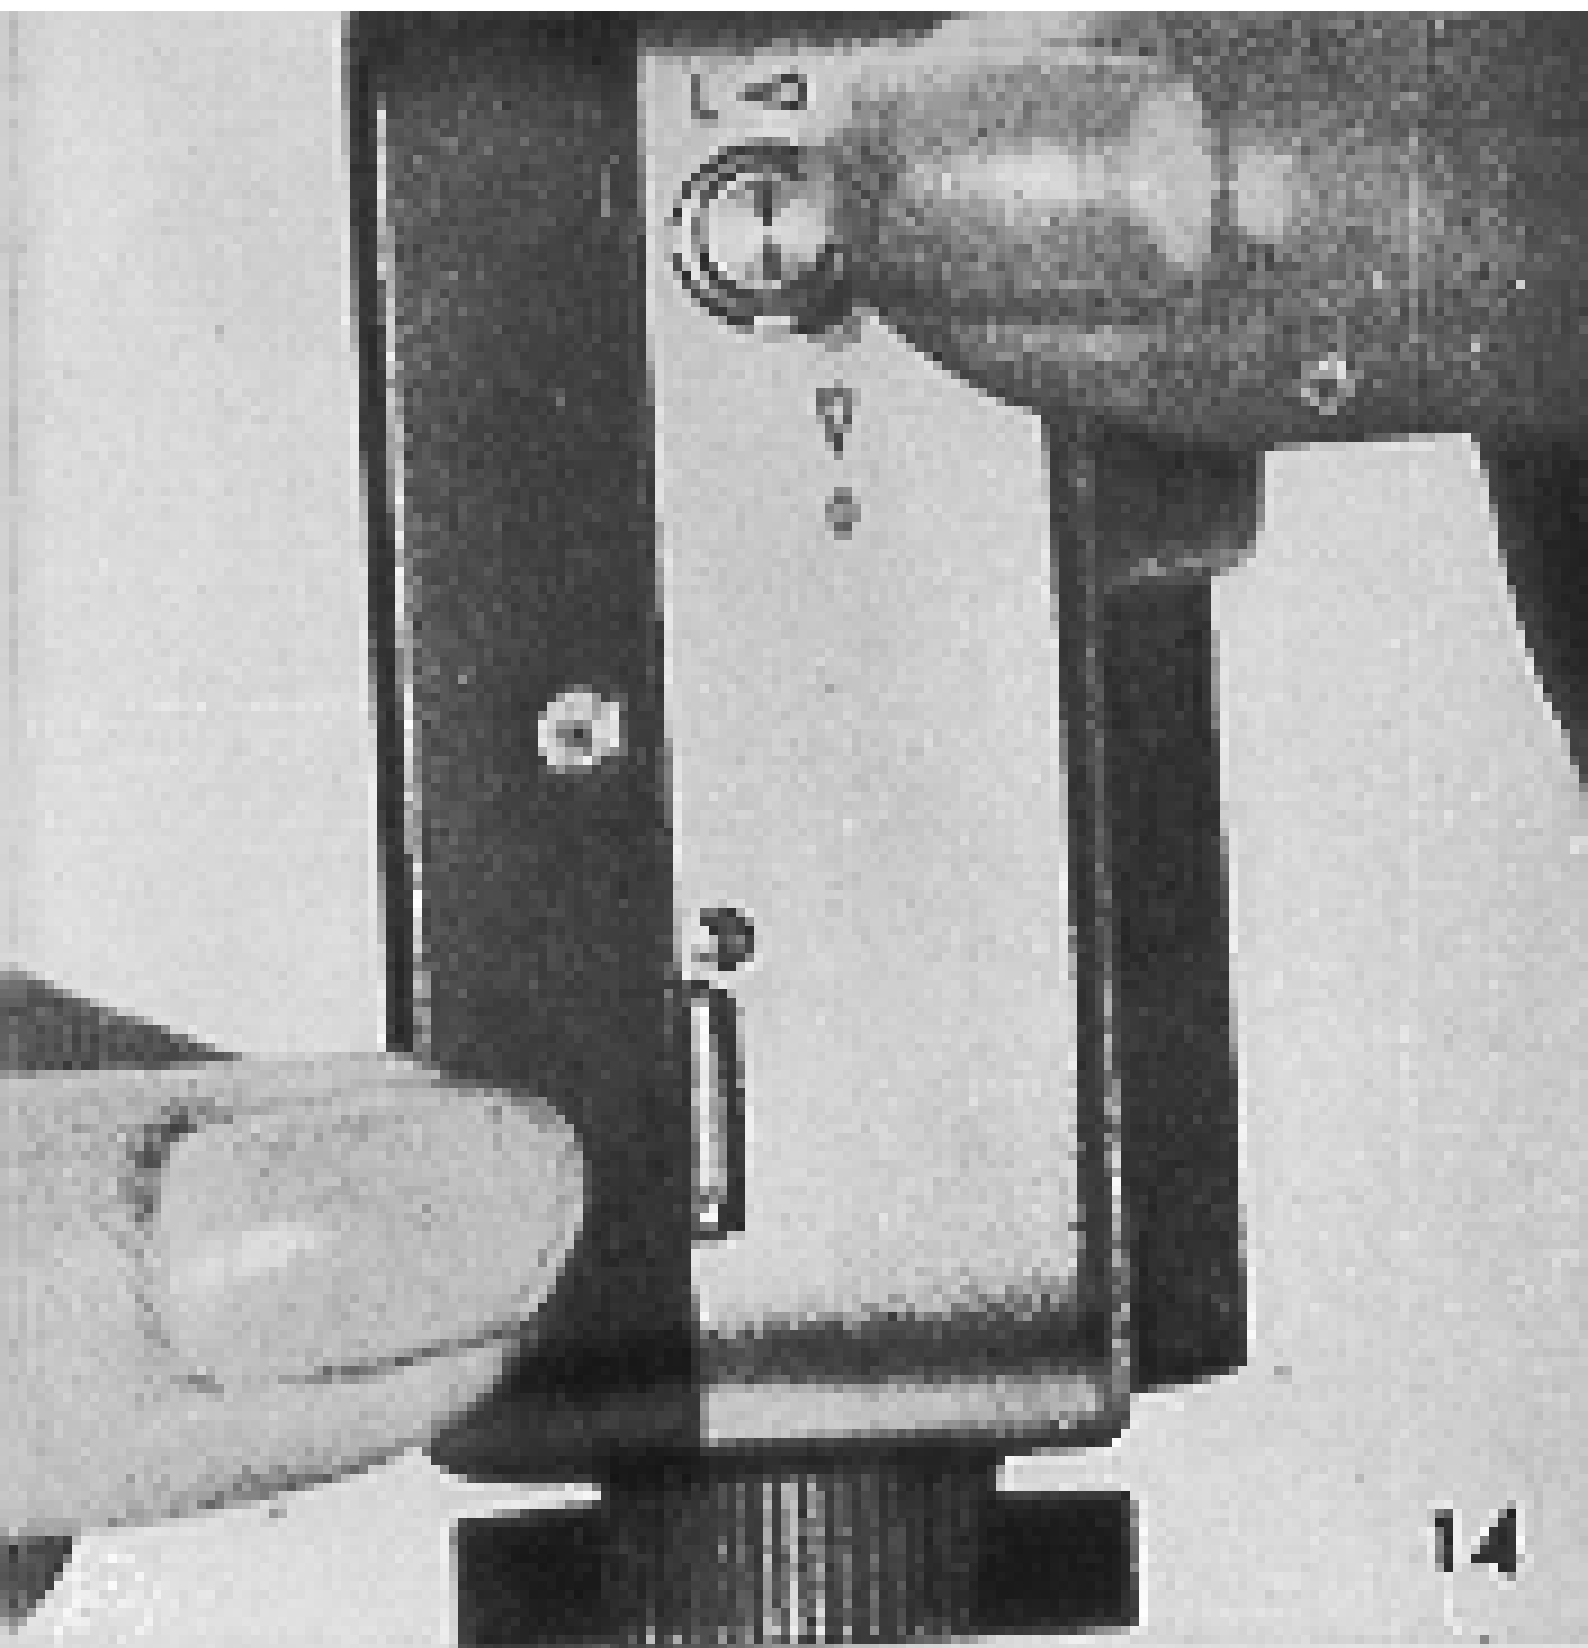 

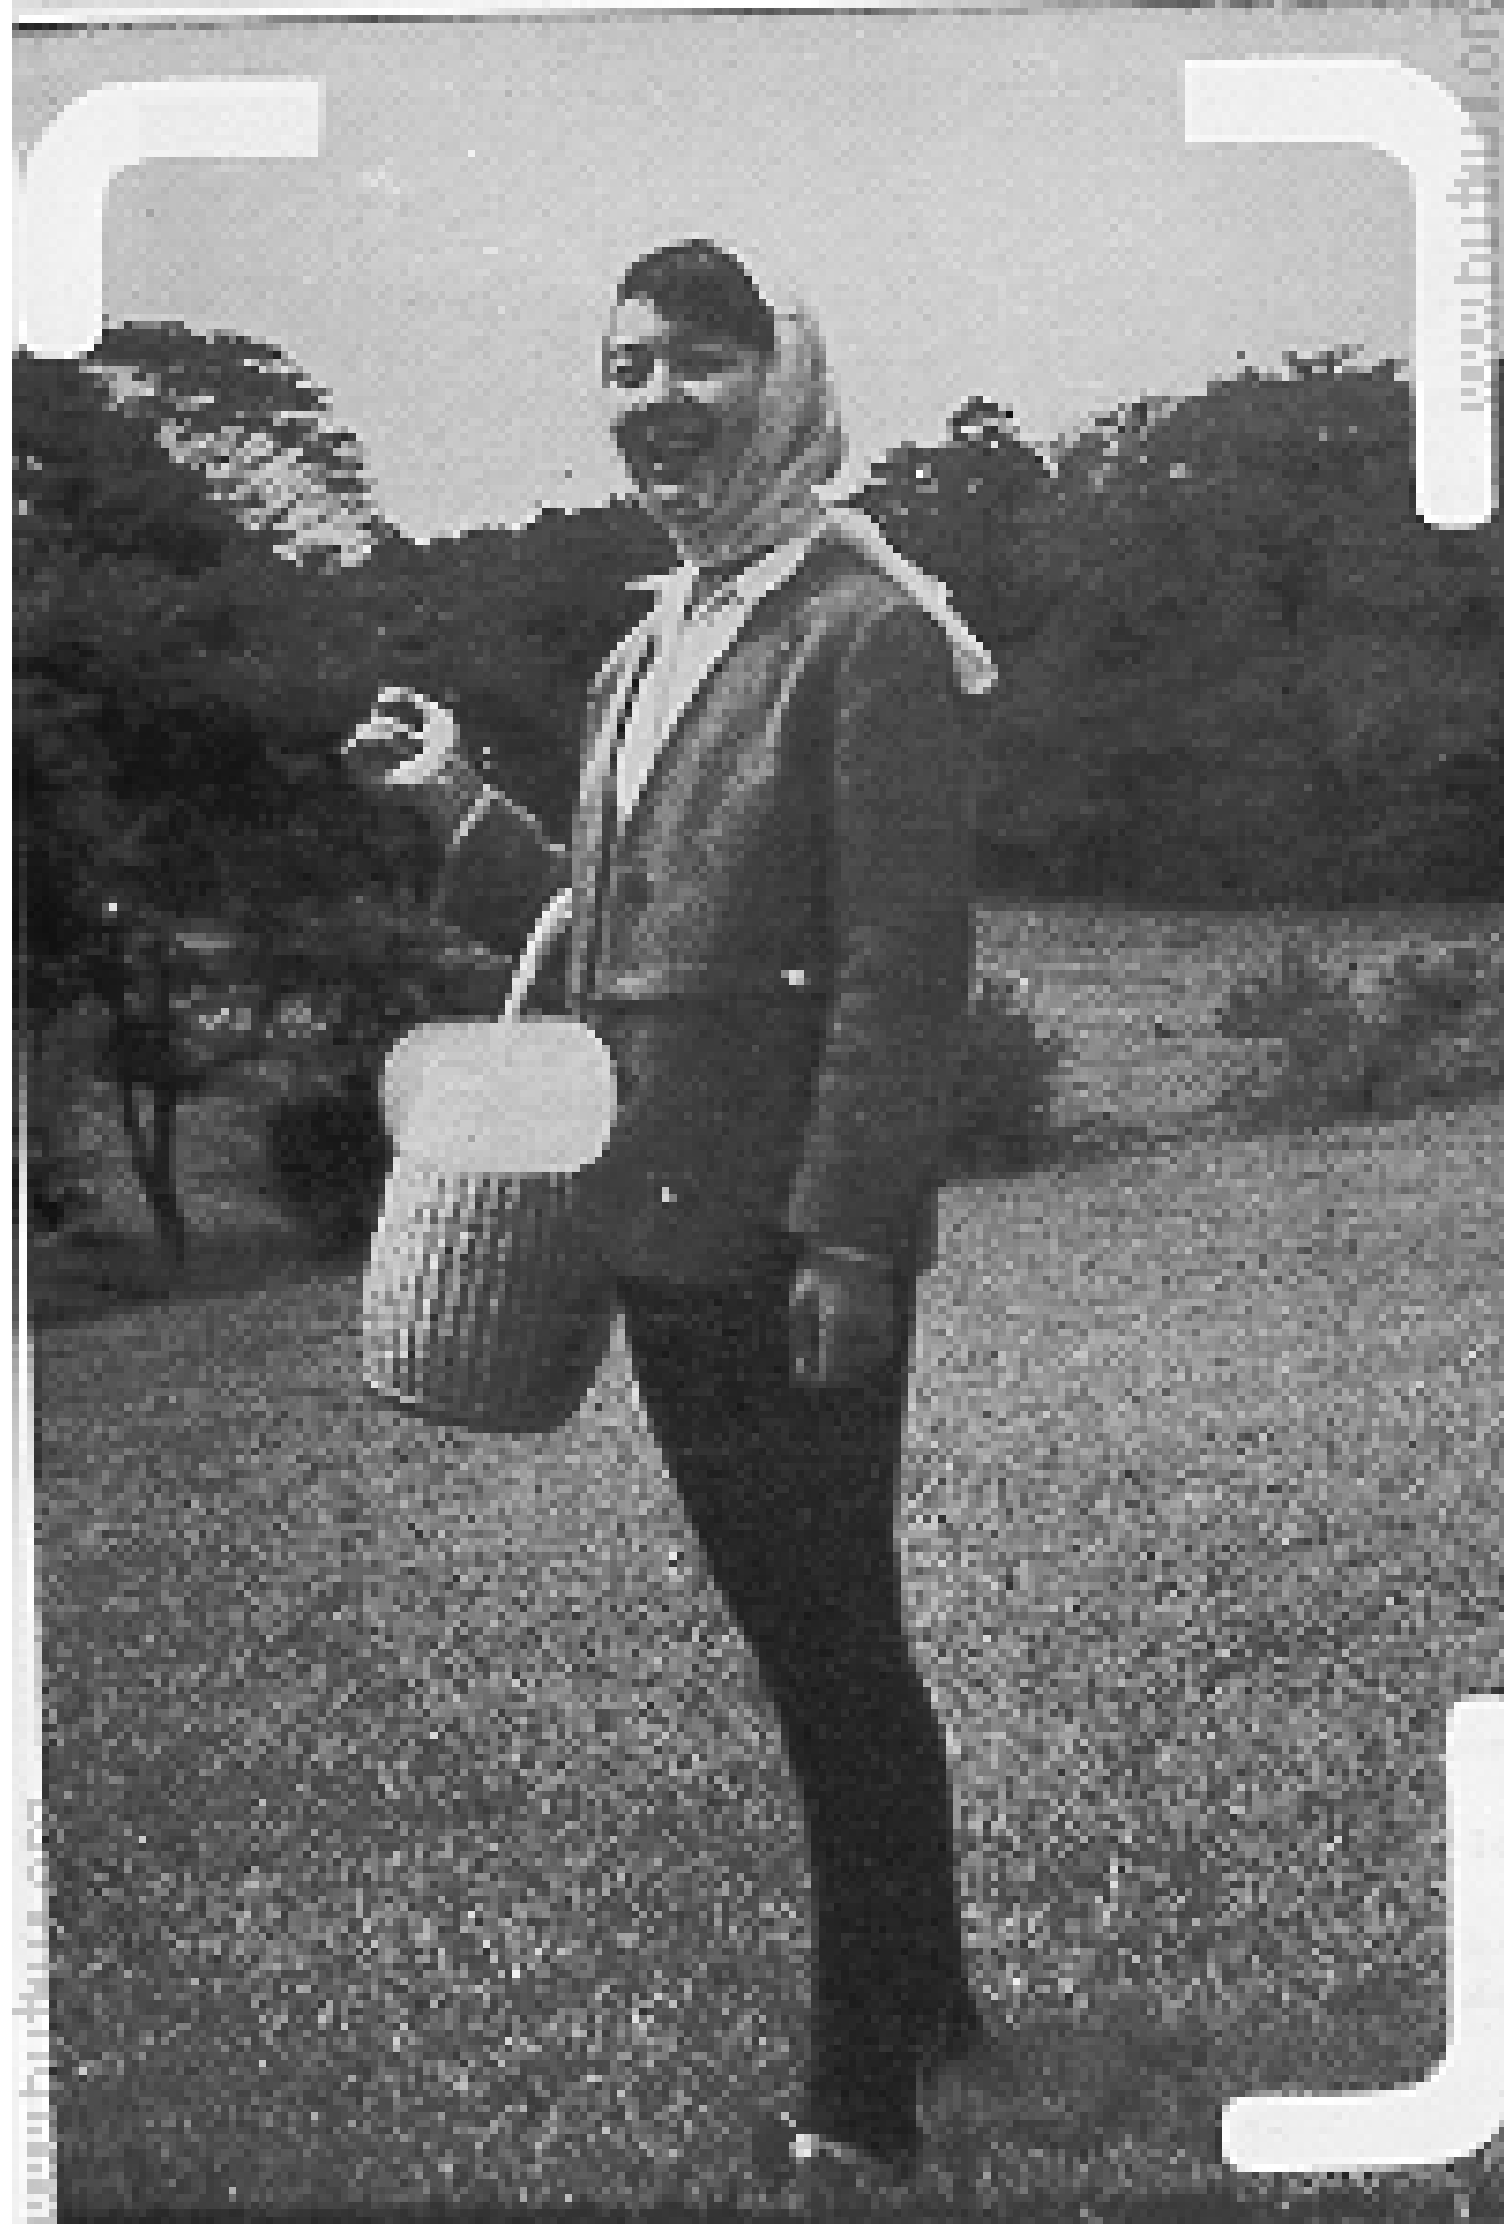 


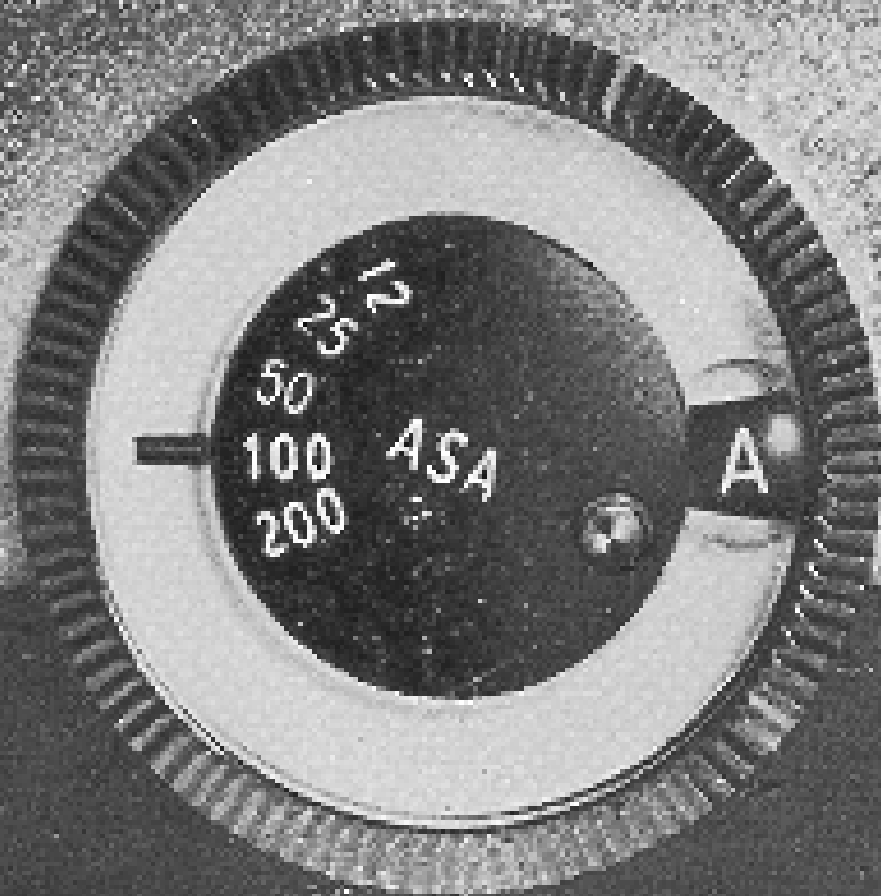 



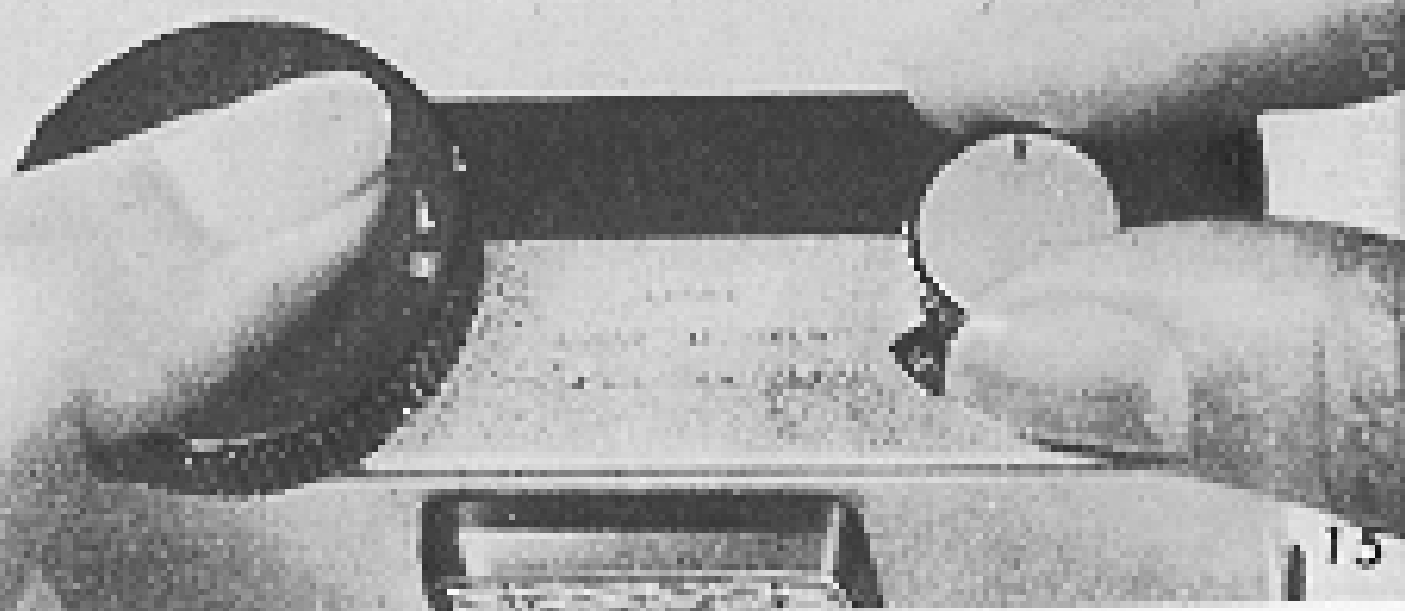  




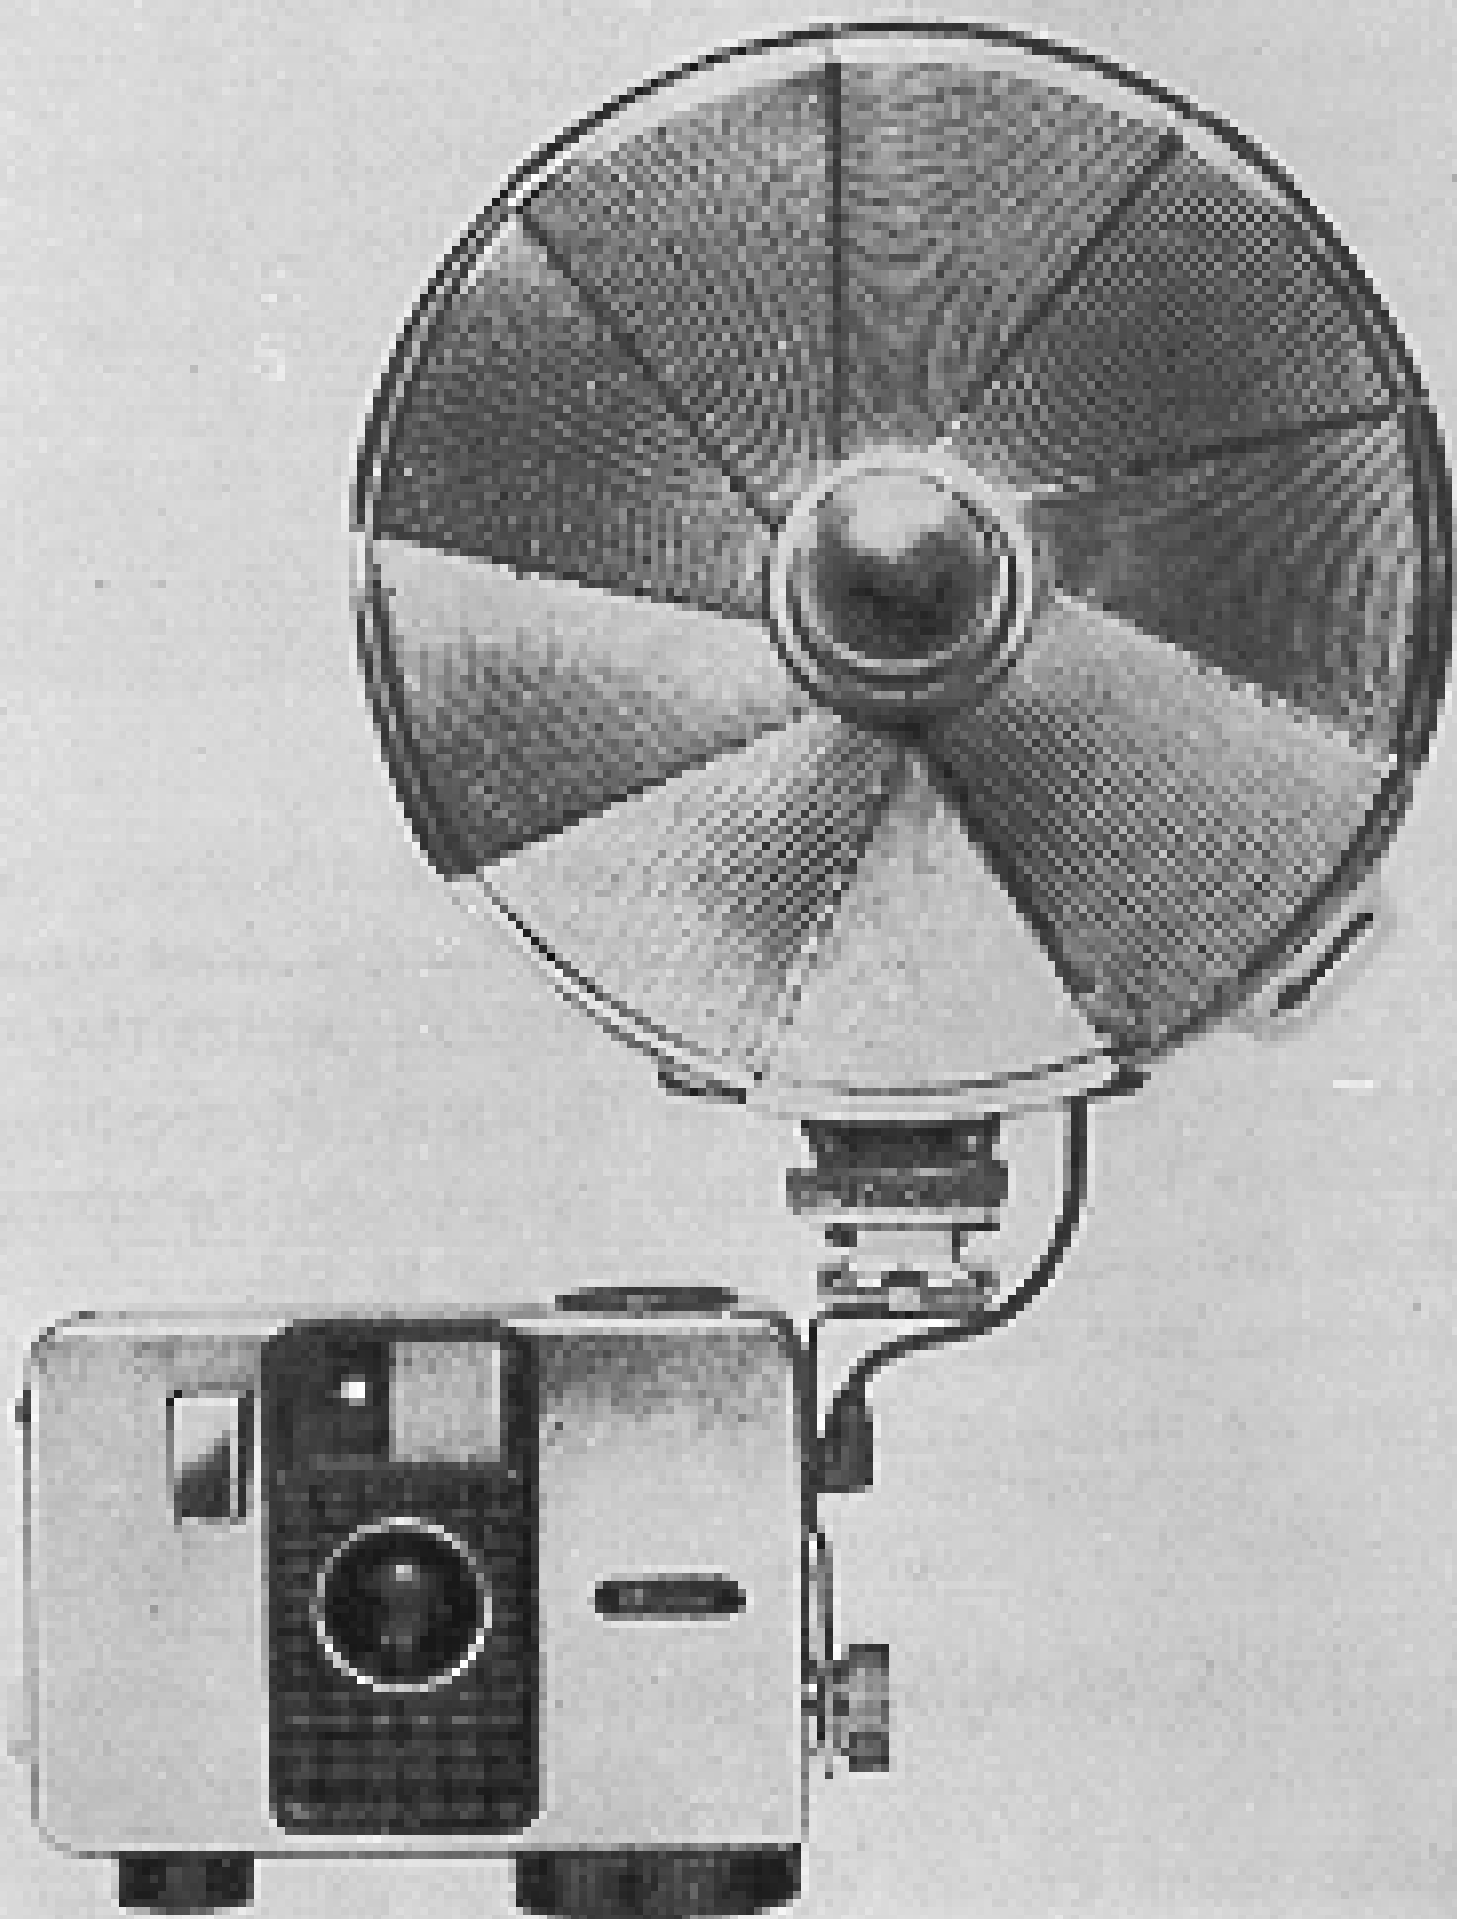


www.burly.org

 www.burtoni.org

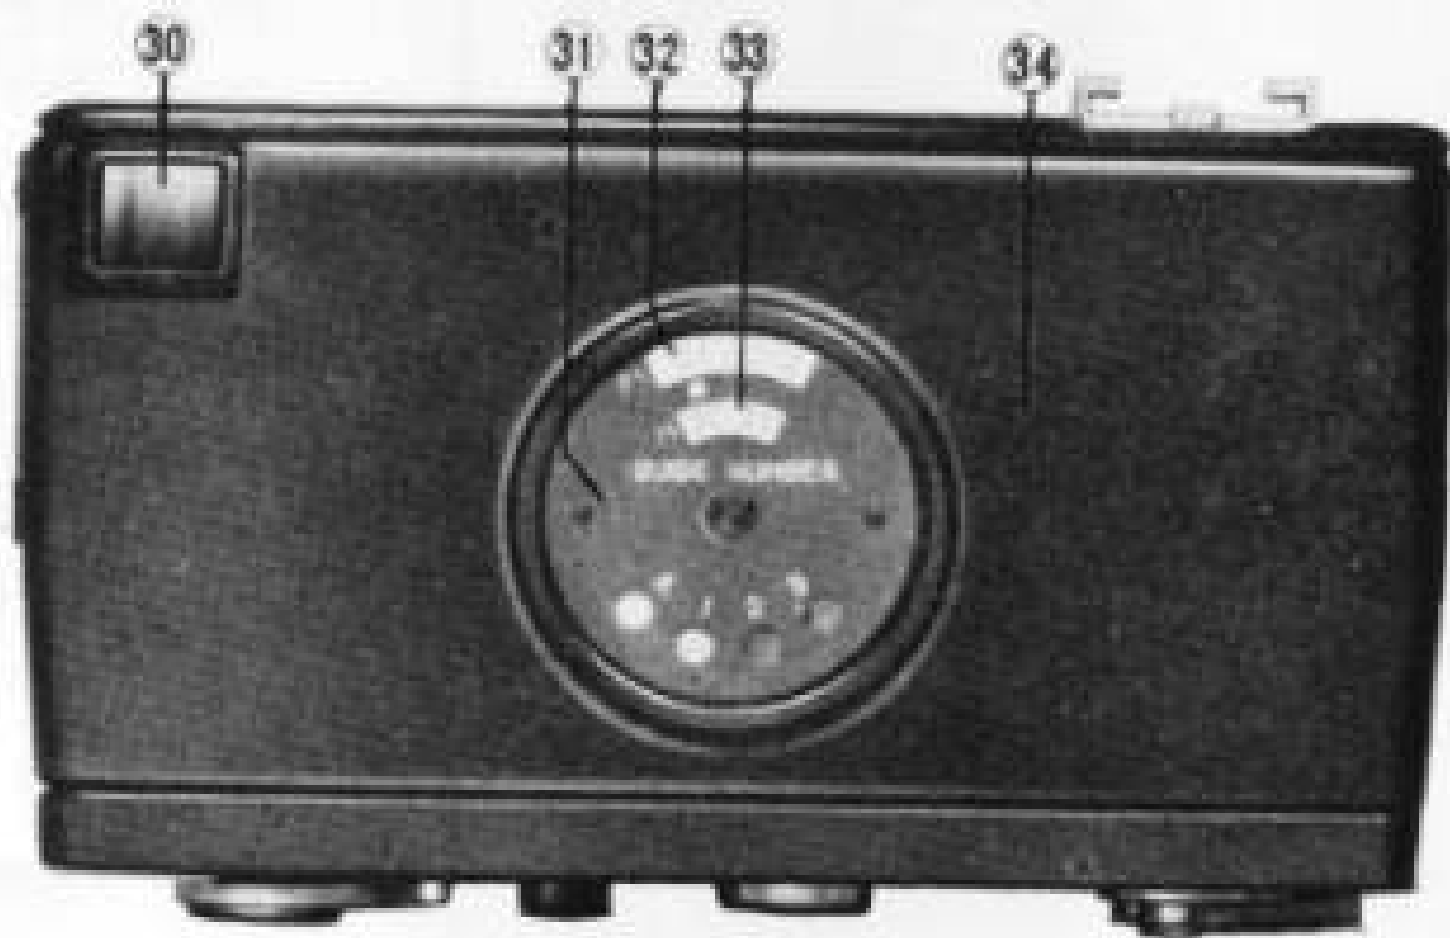


3 2 1 A

 



①

    
②

 


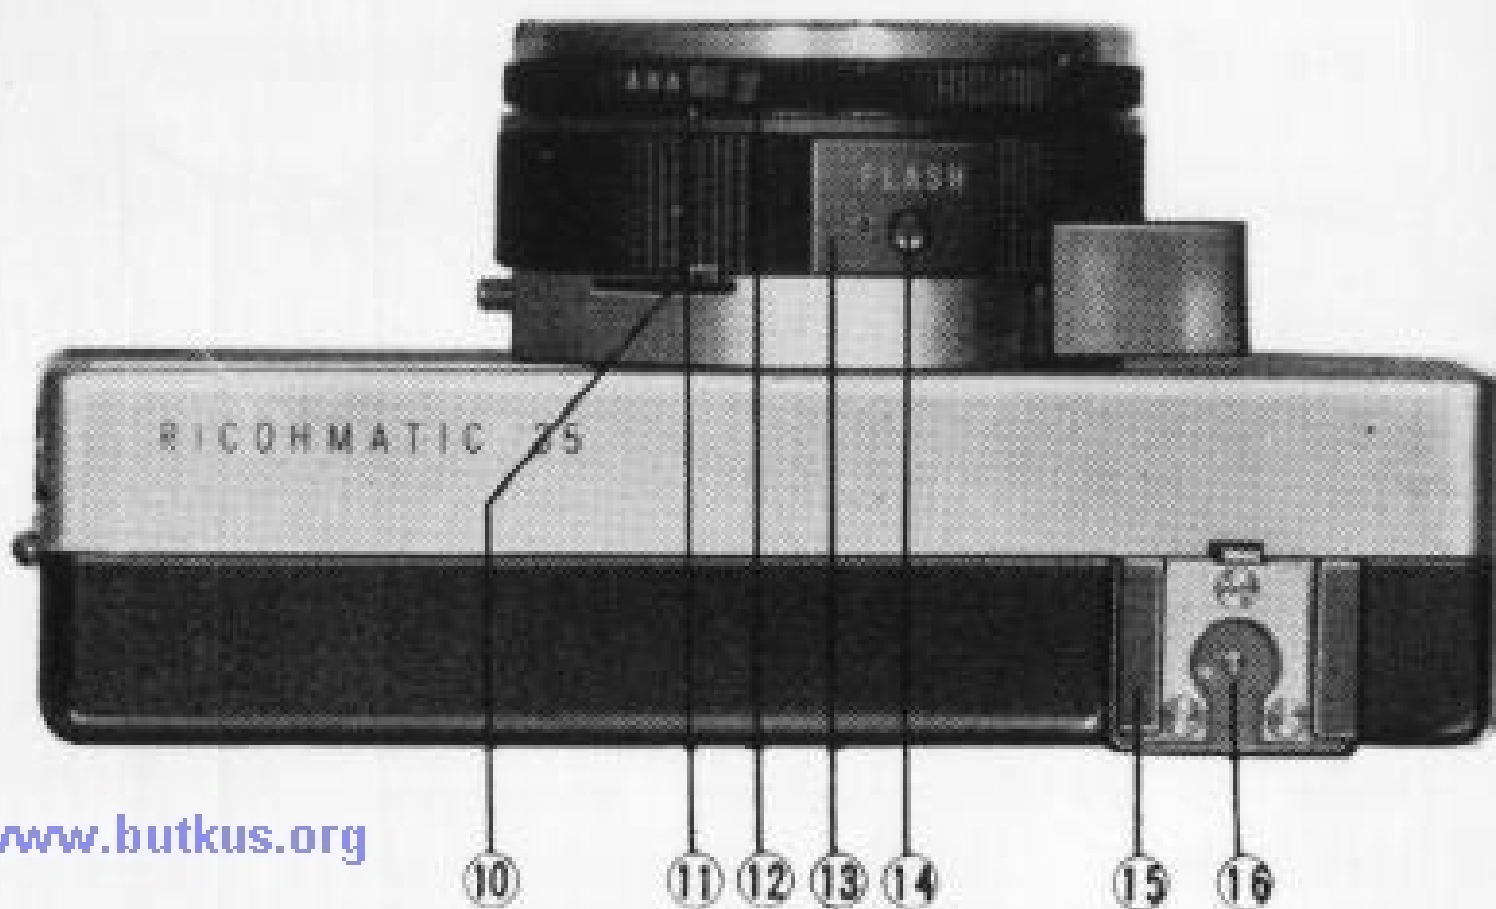

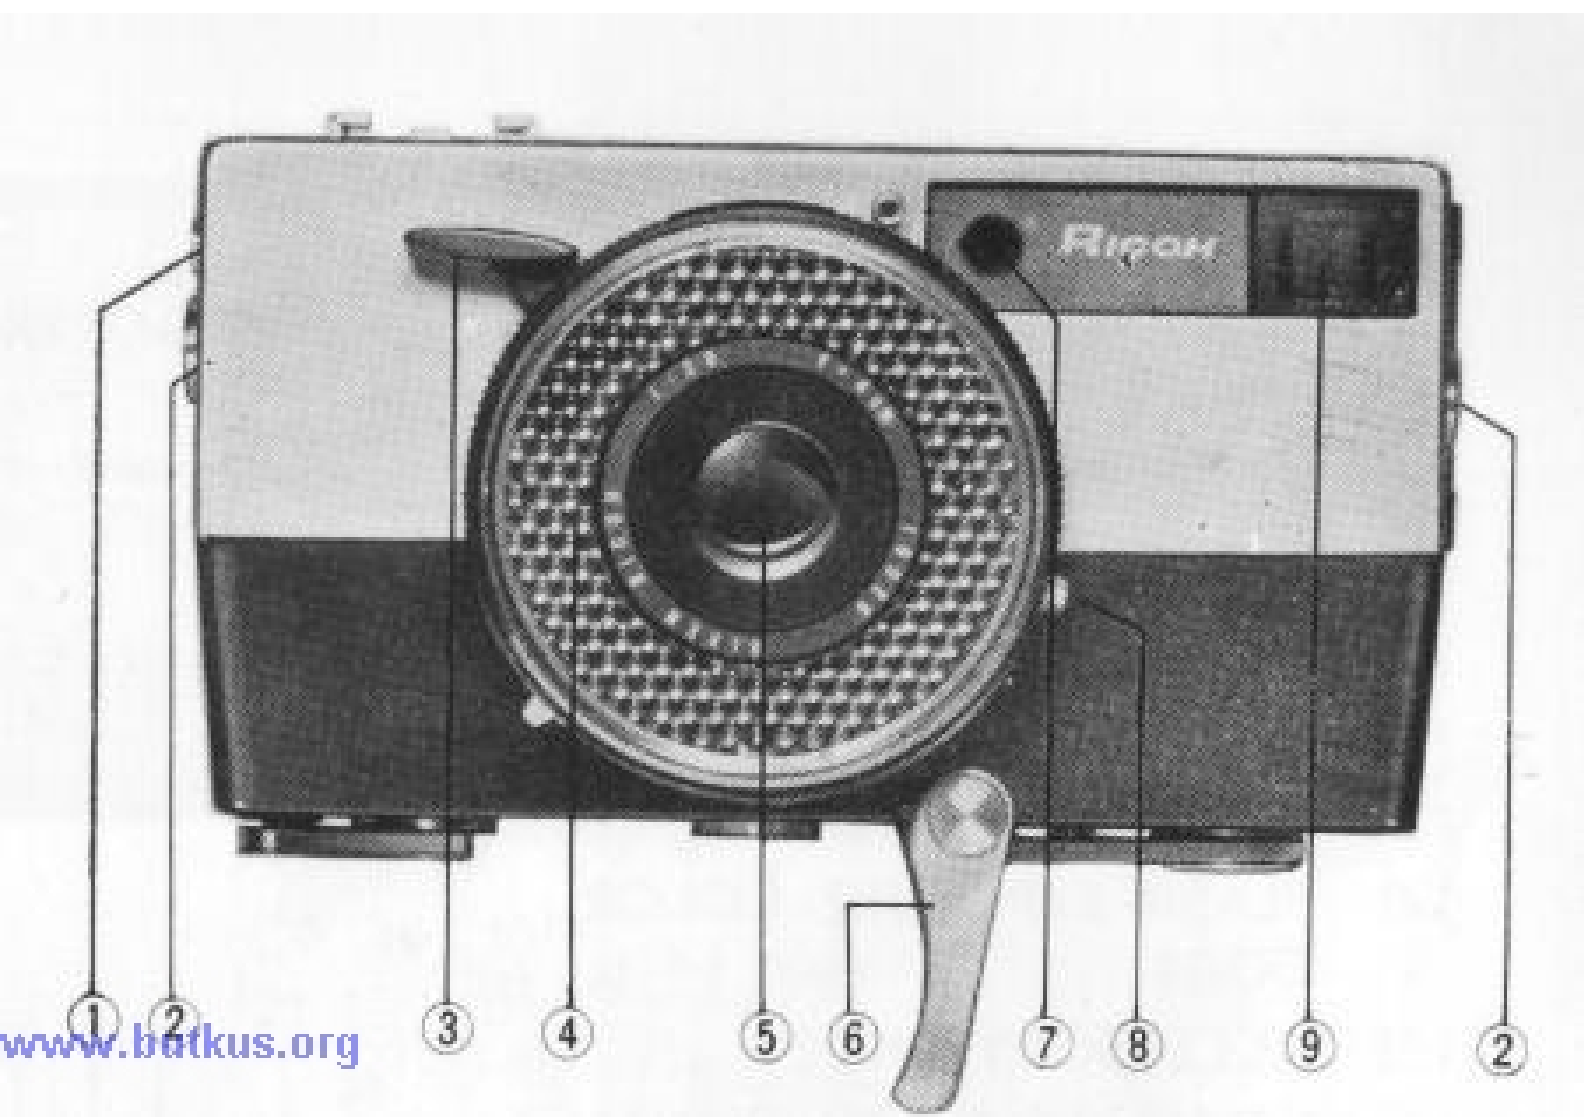 


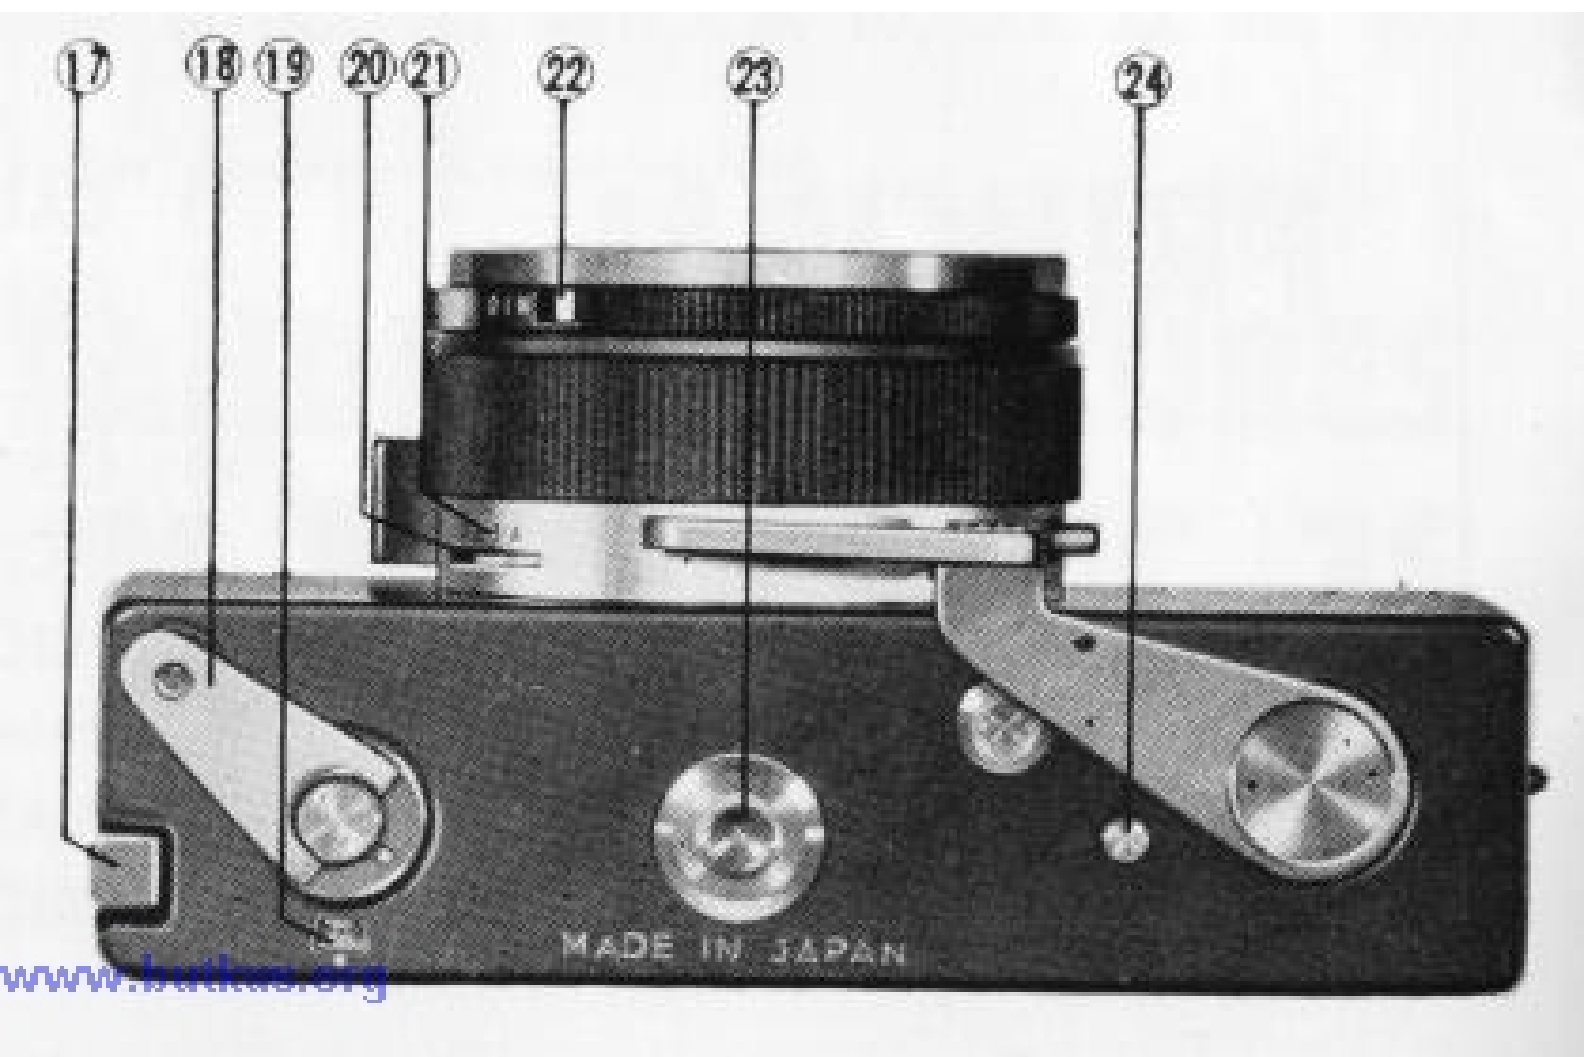

 
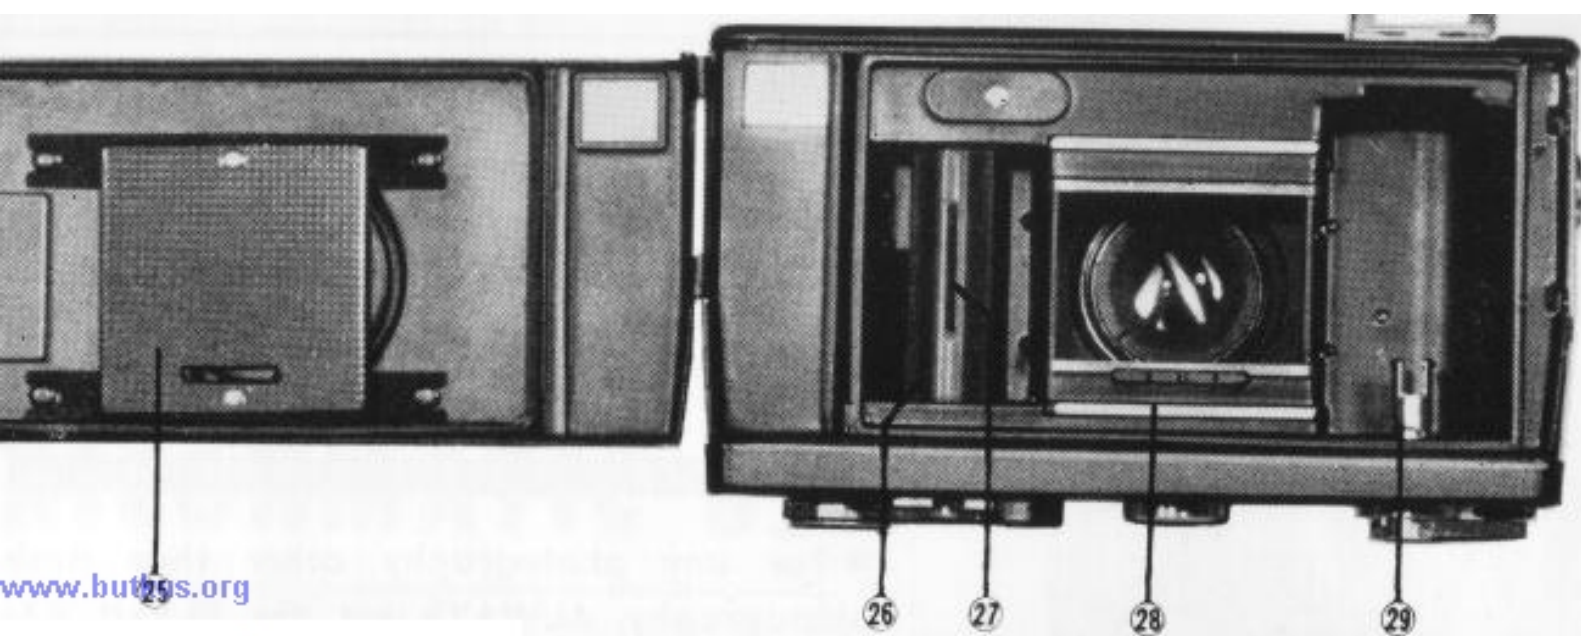 


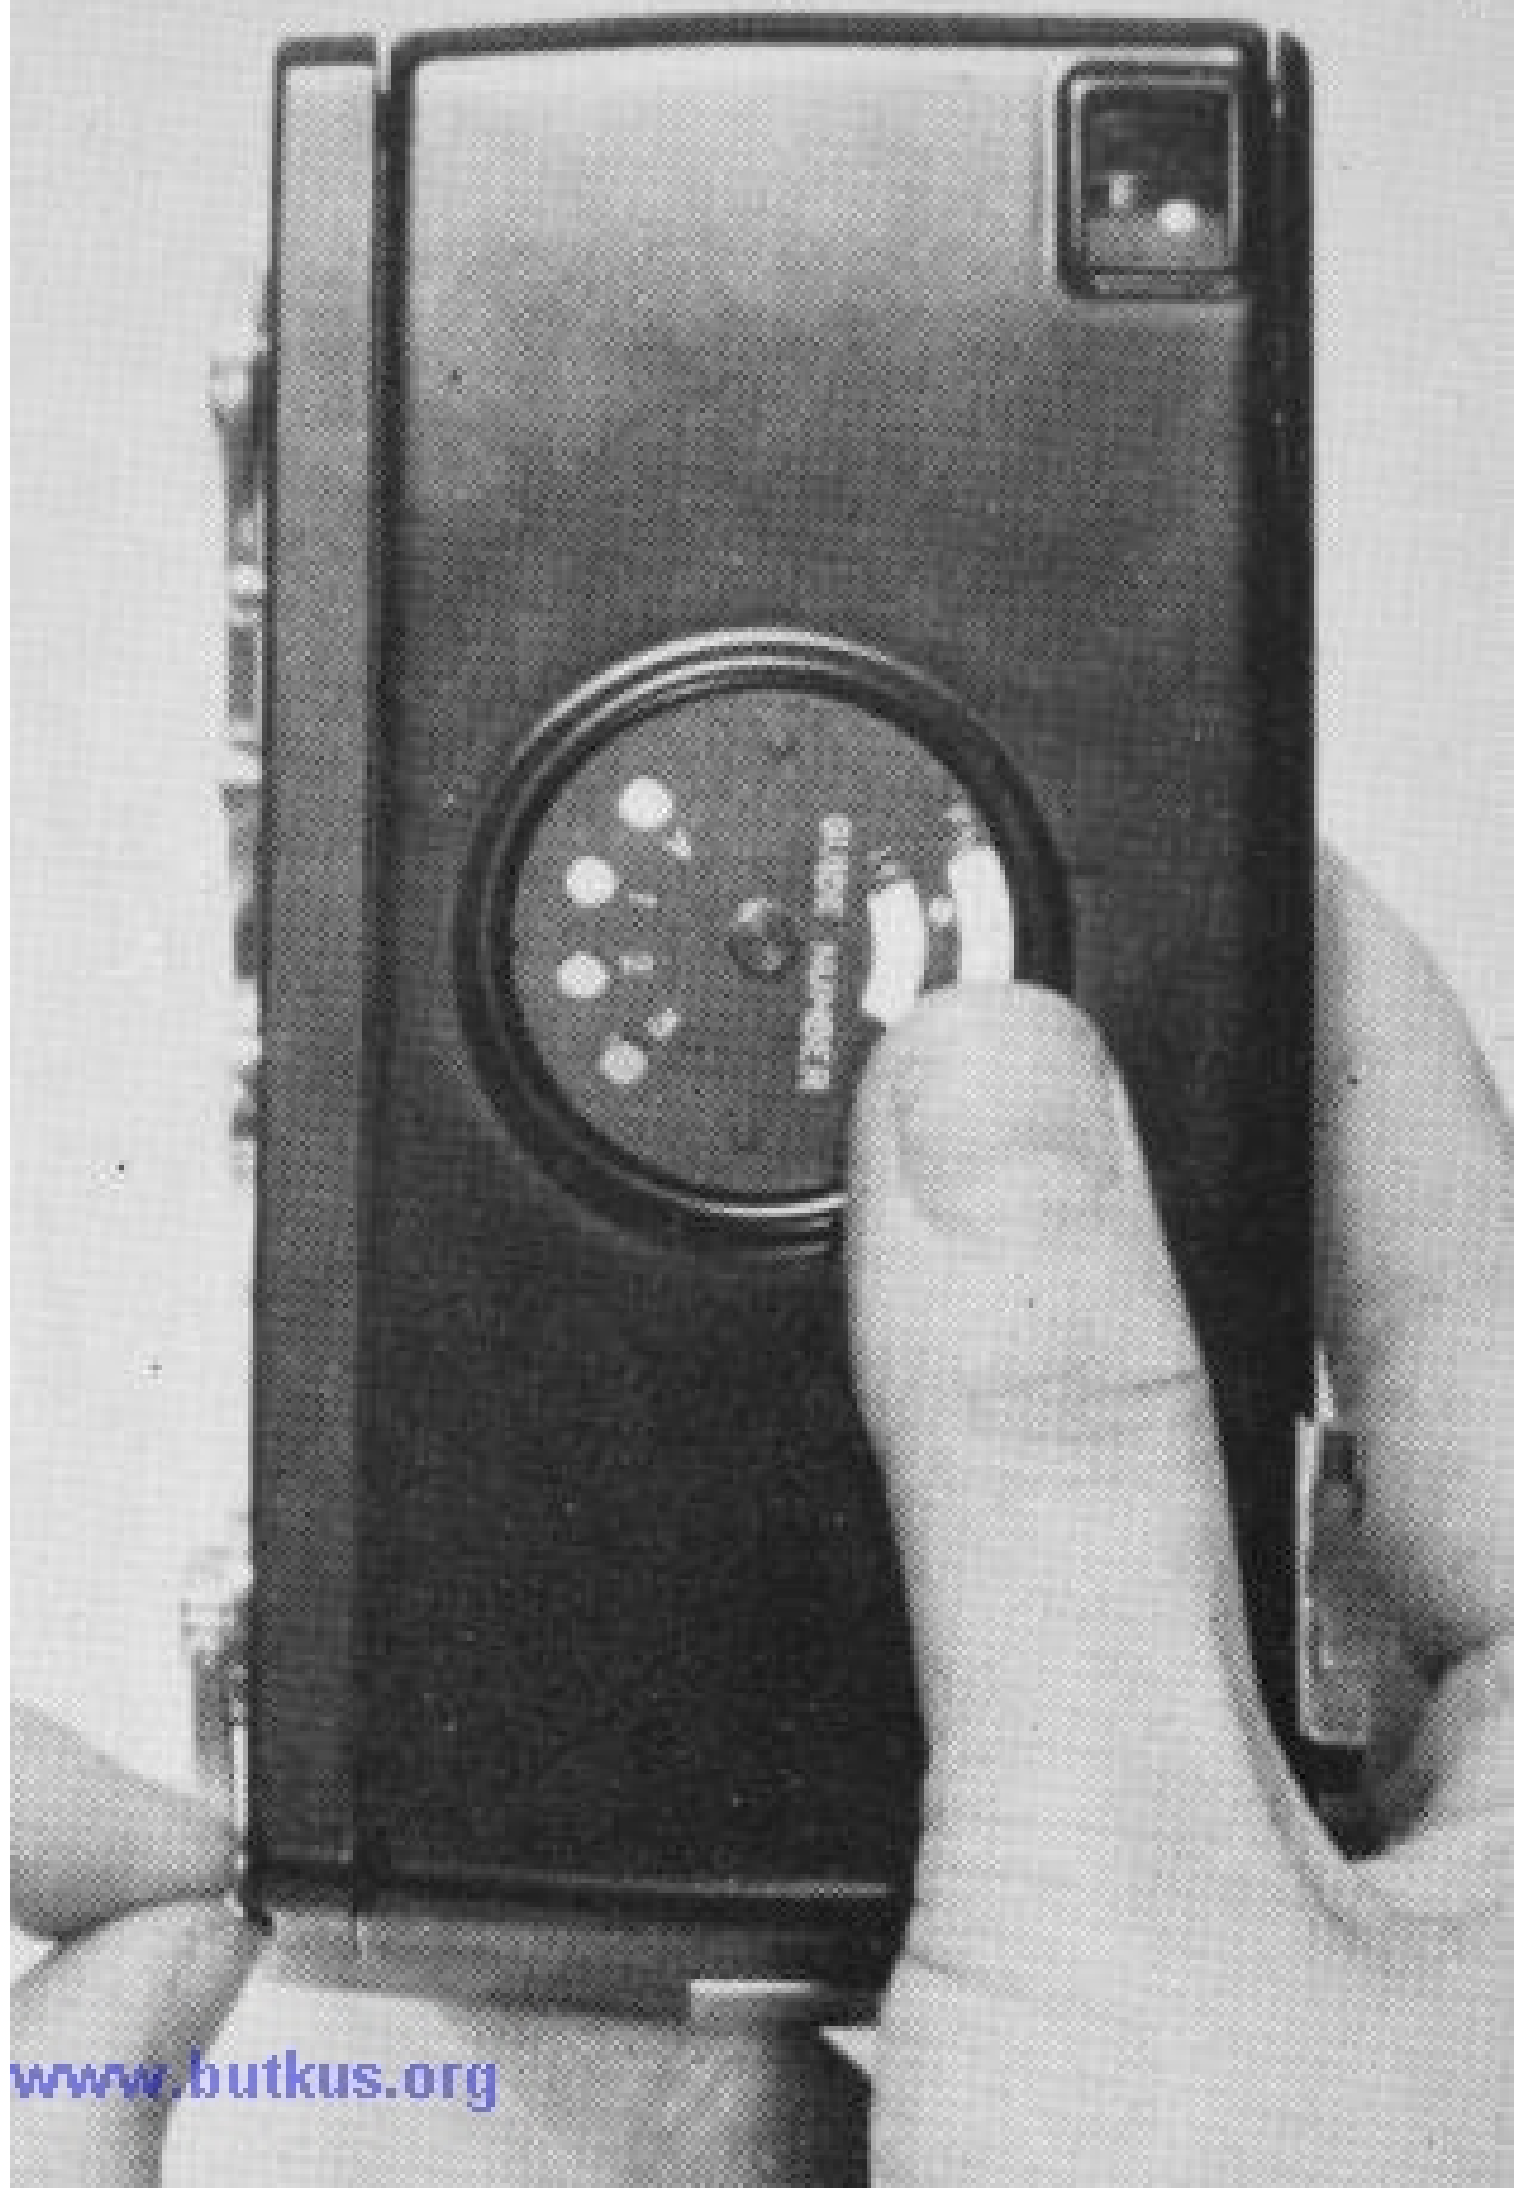 




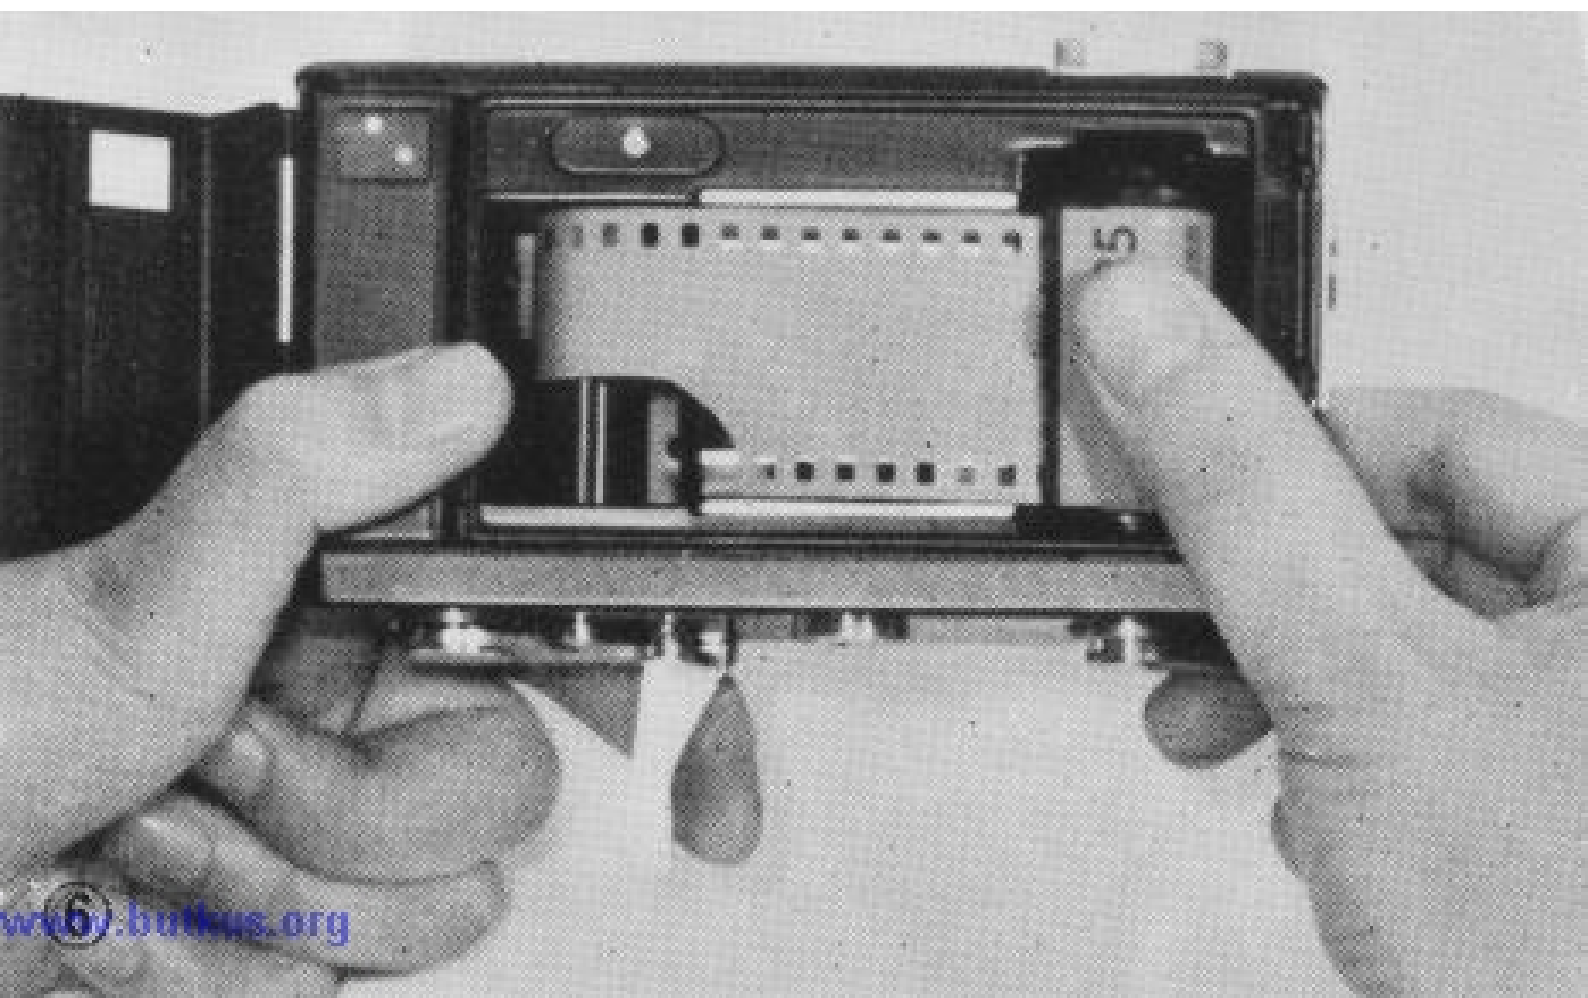



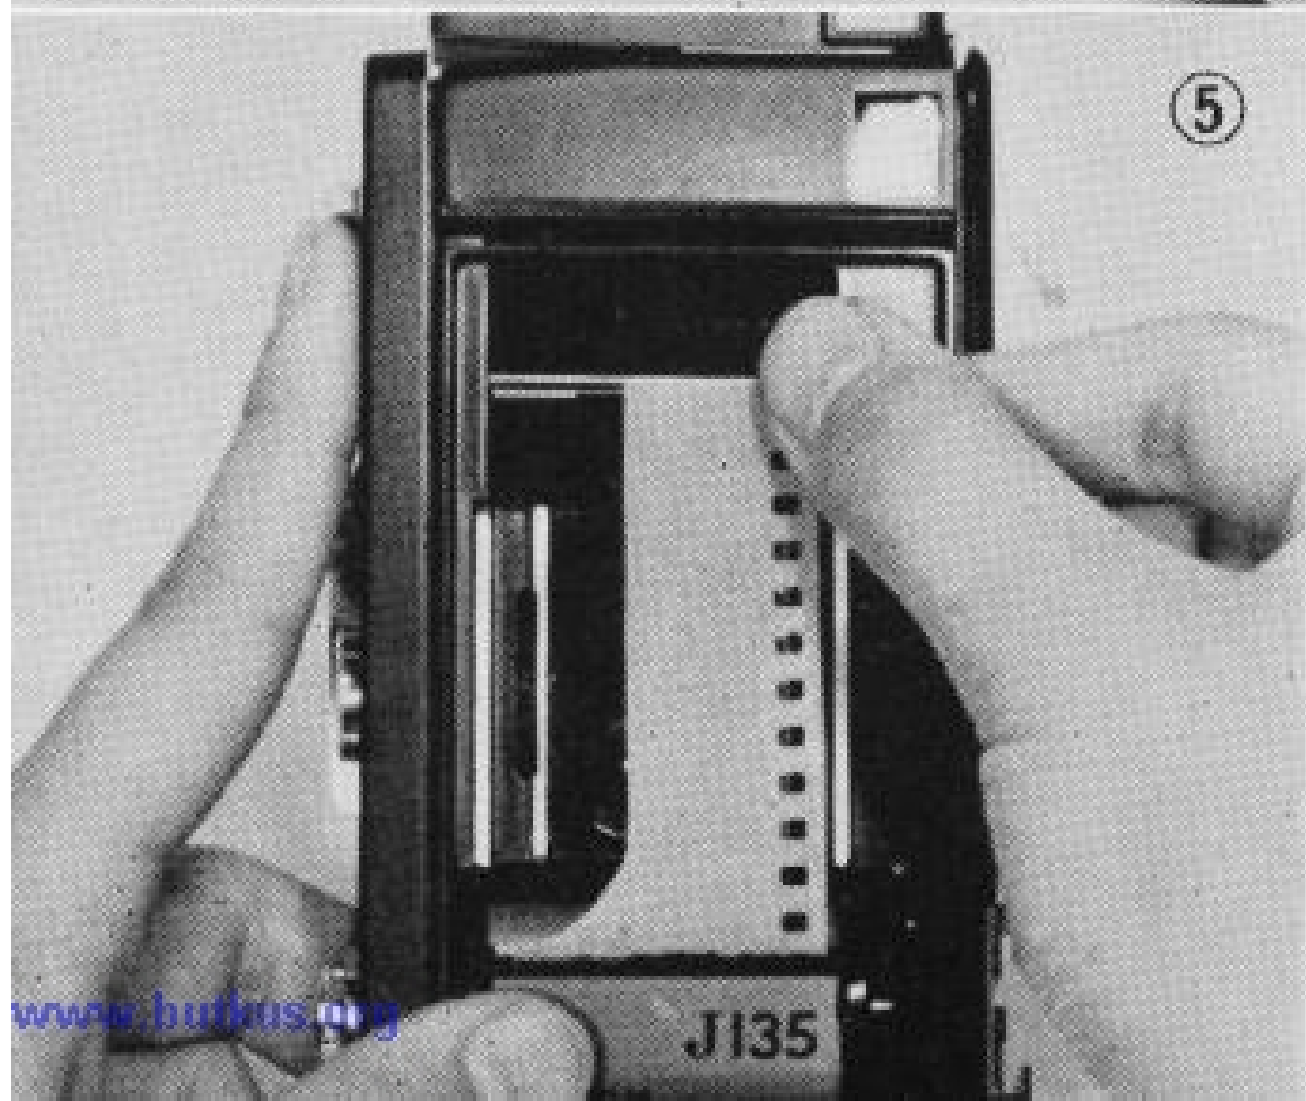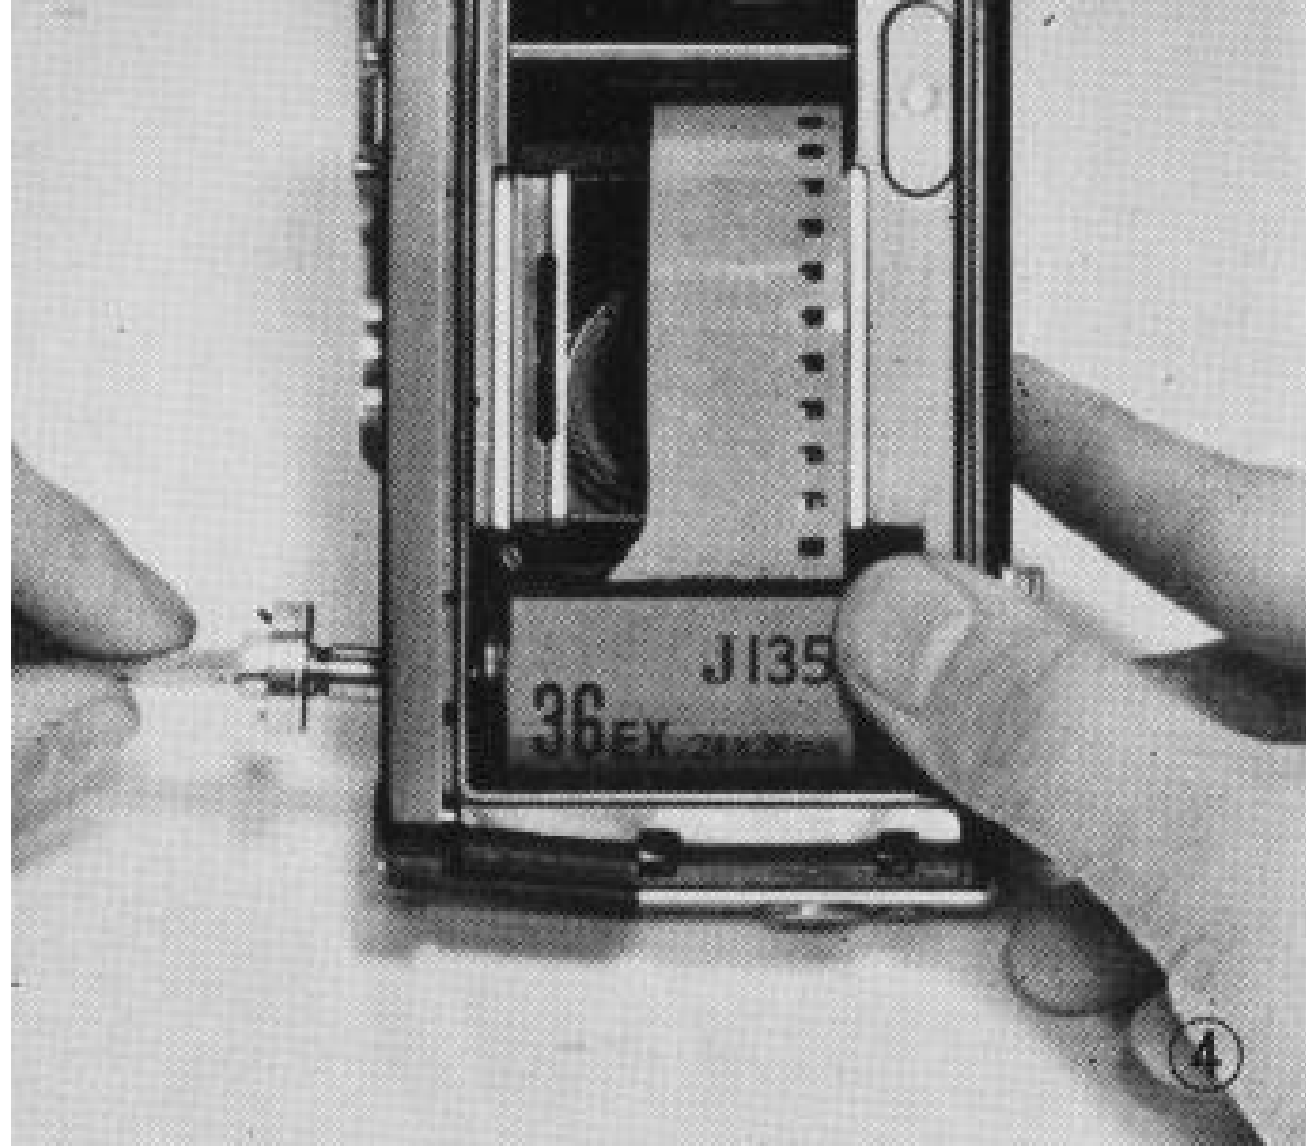

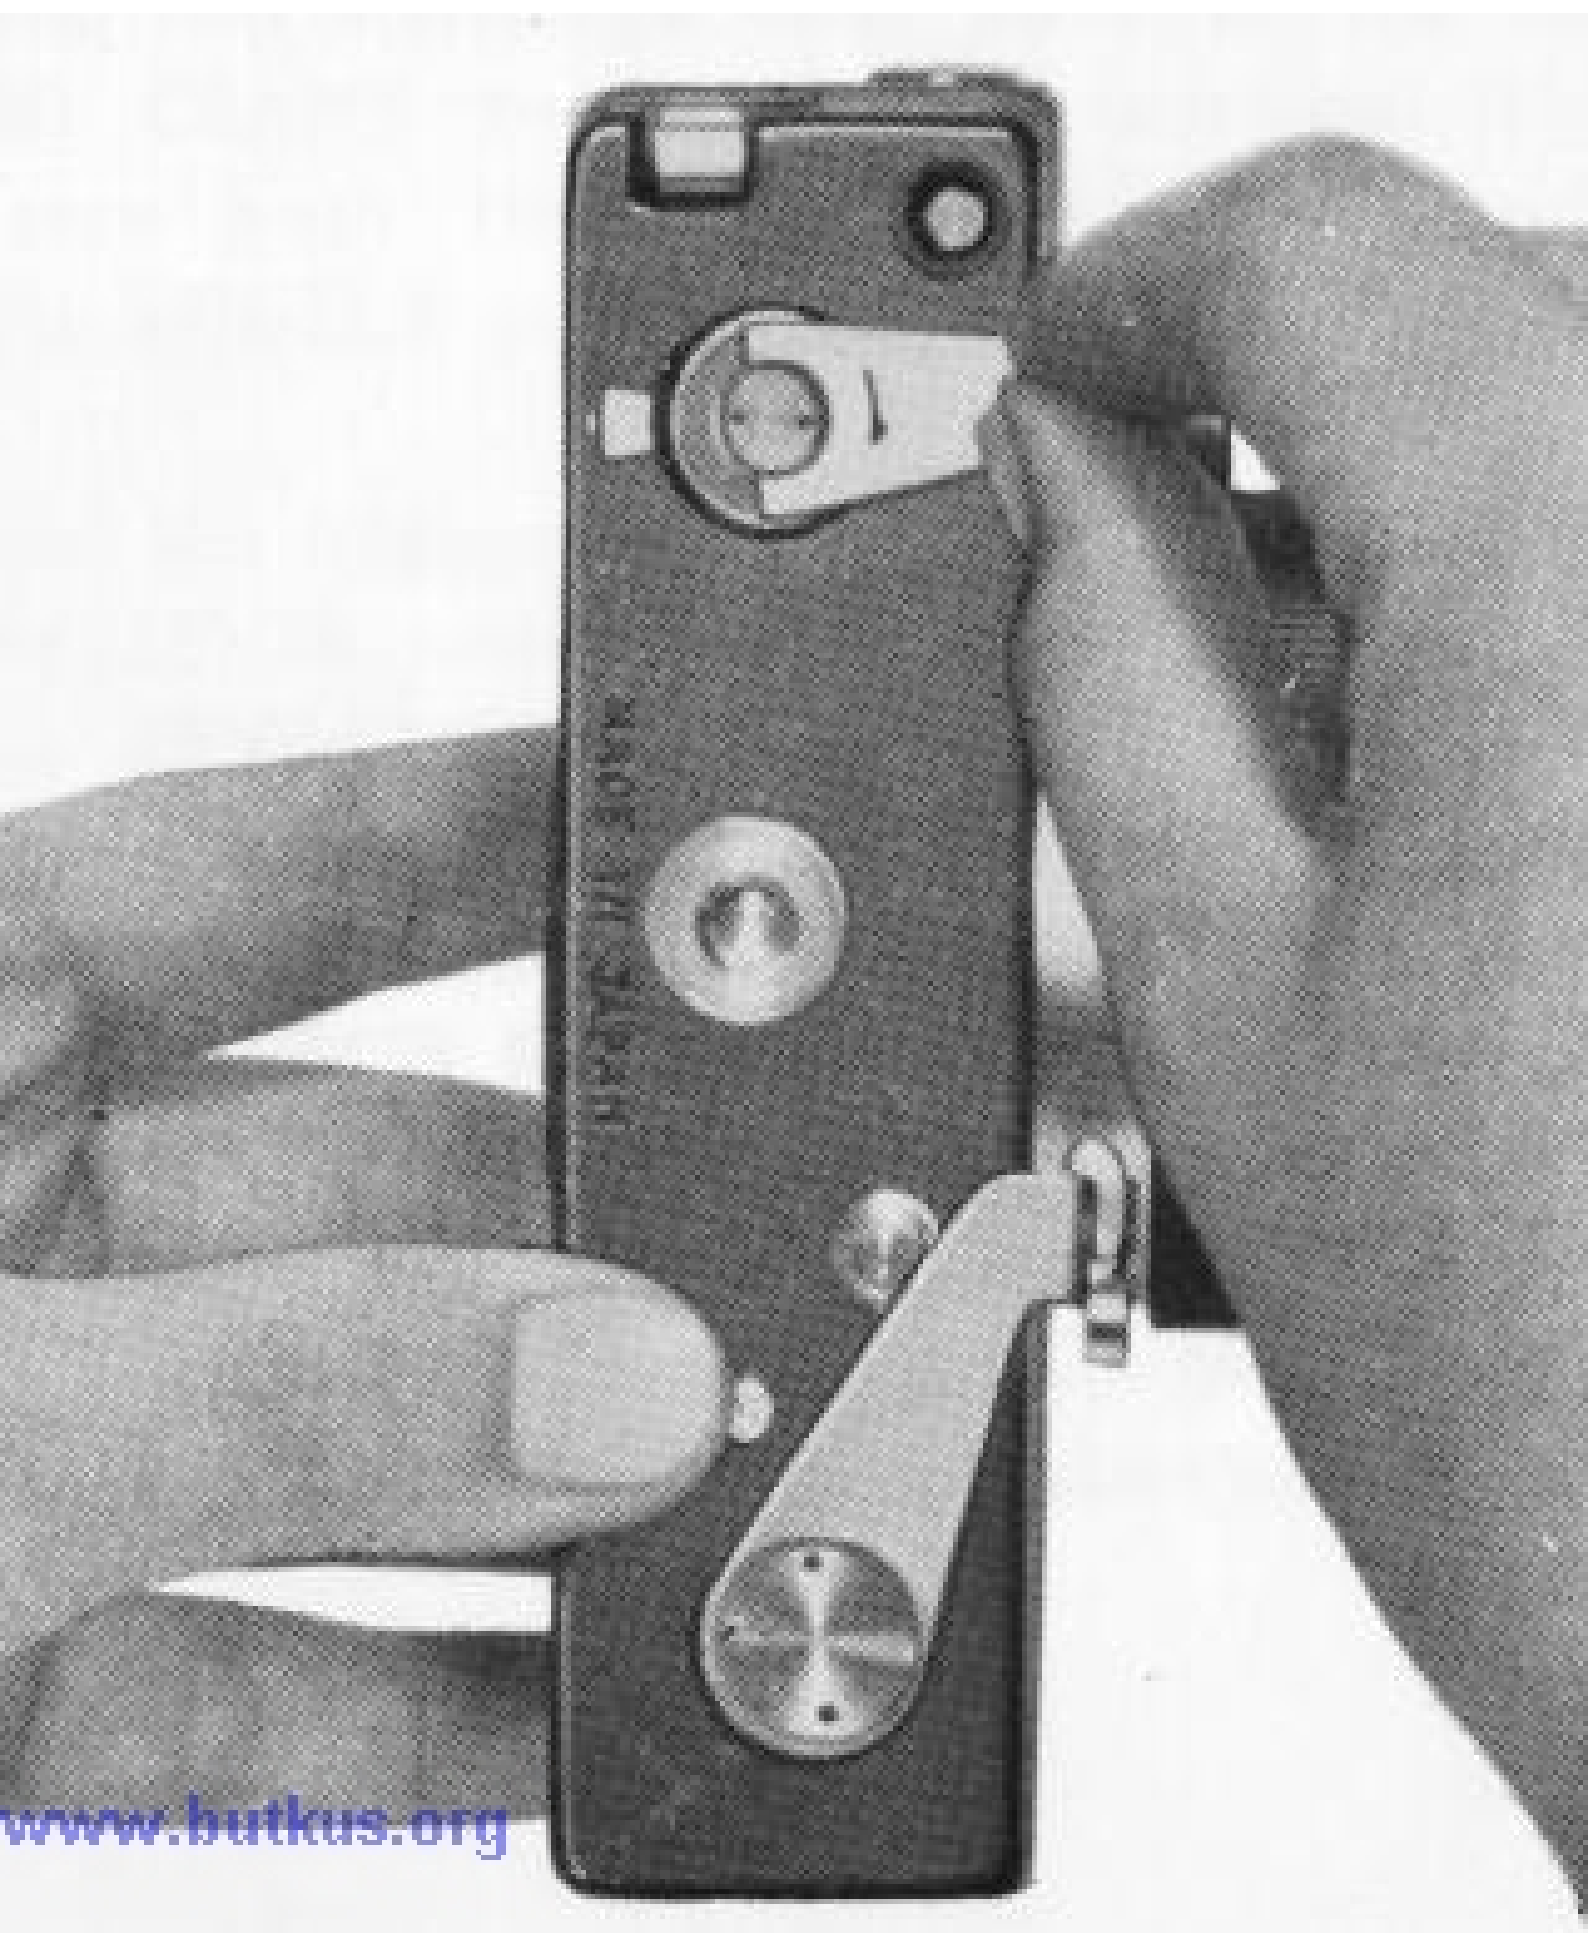





www.butkus.org





www.butkus.org





www.butkus.org



3 2 1 A



 
www.butkus.org

 
THE ELECTRIC EYE










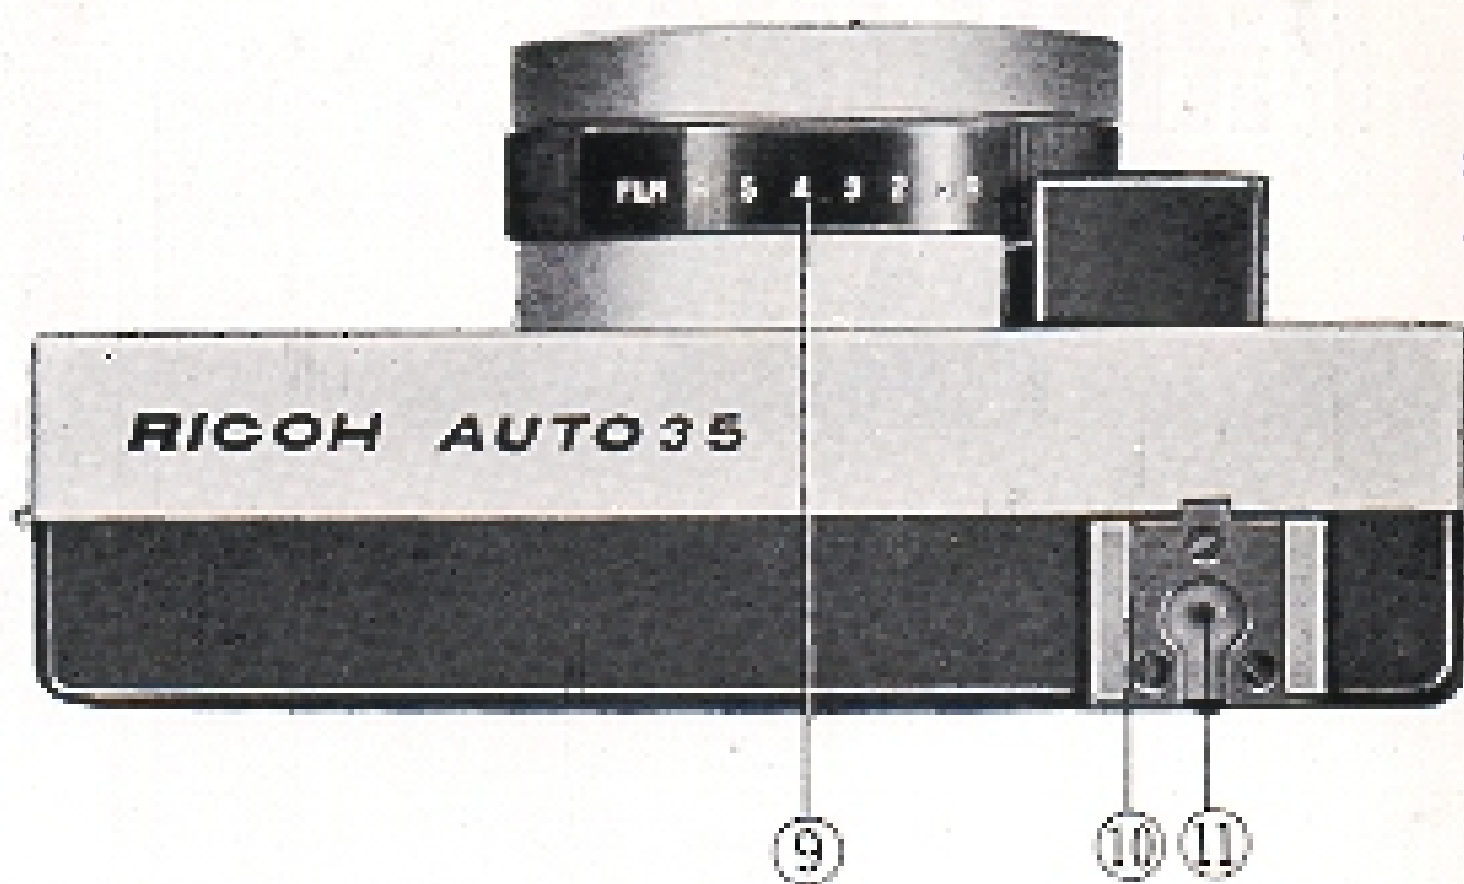

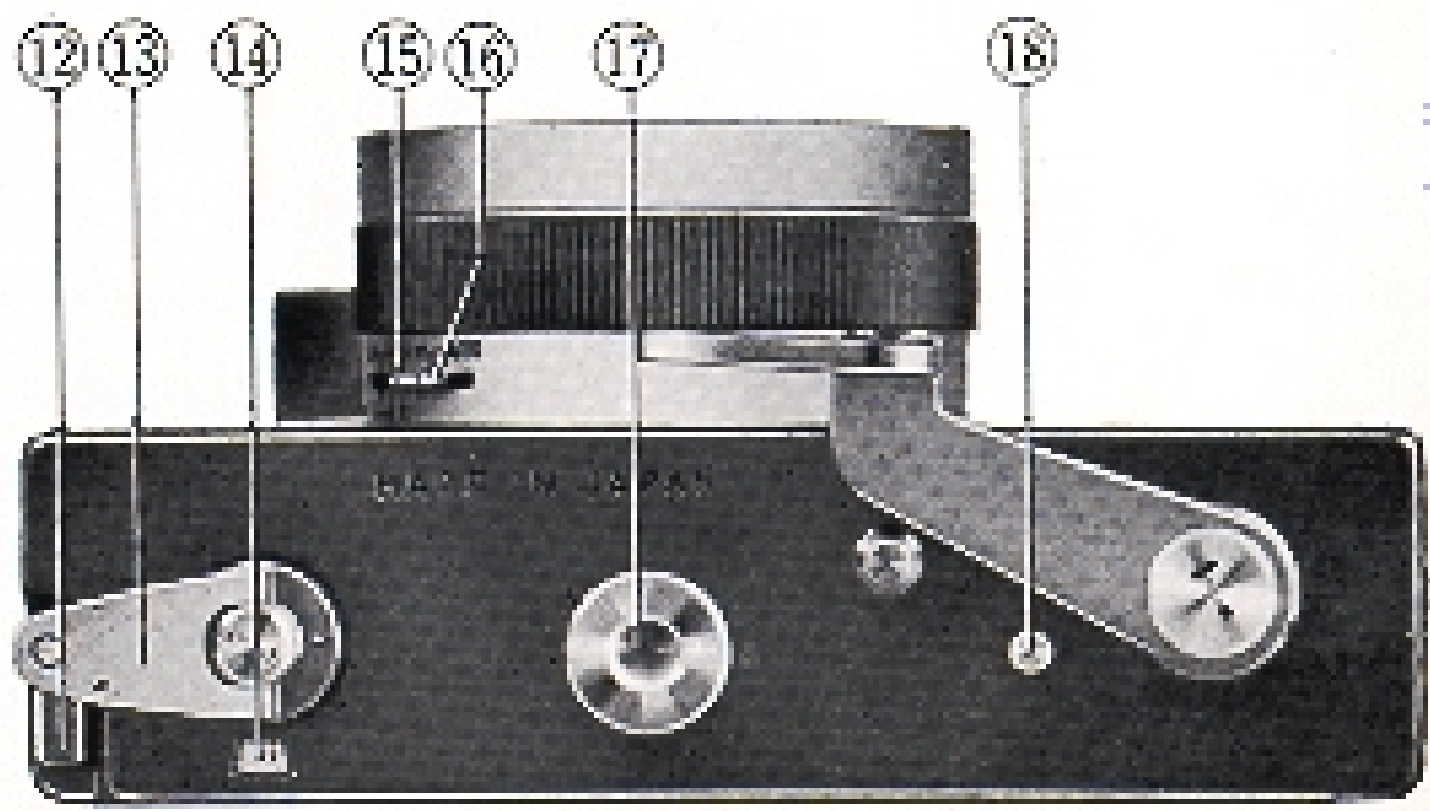

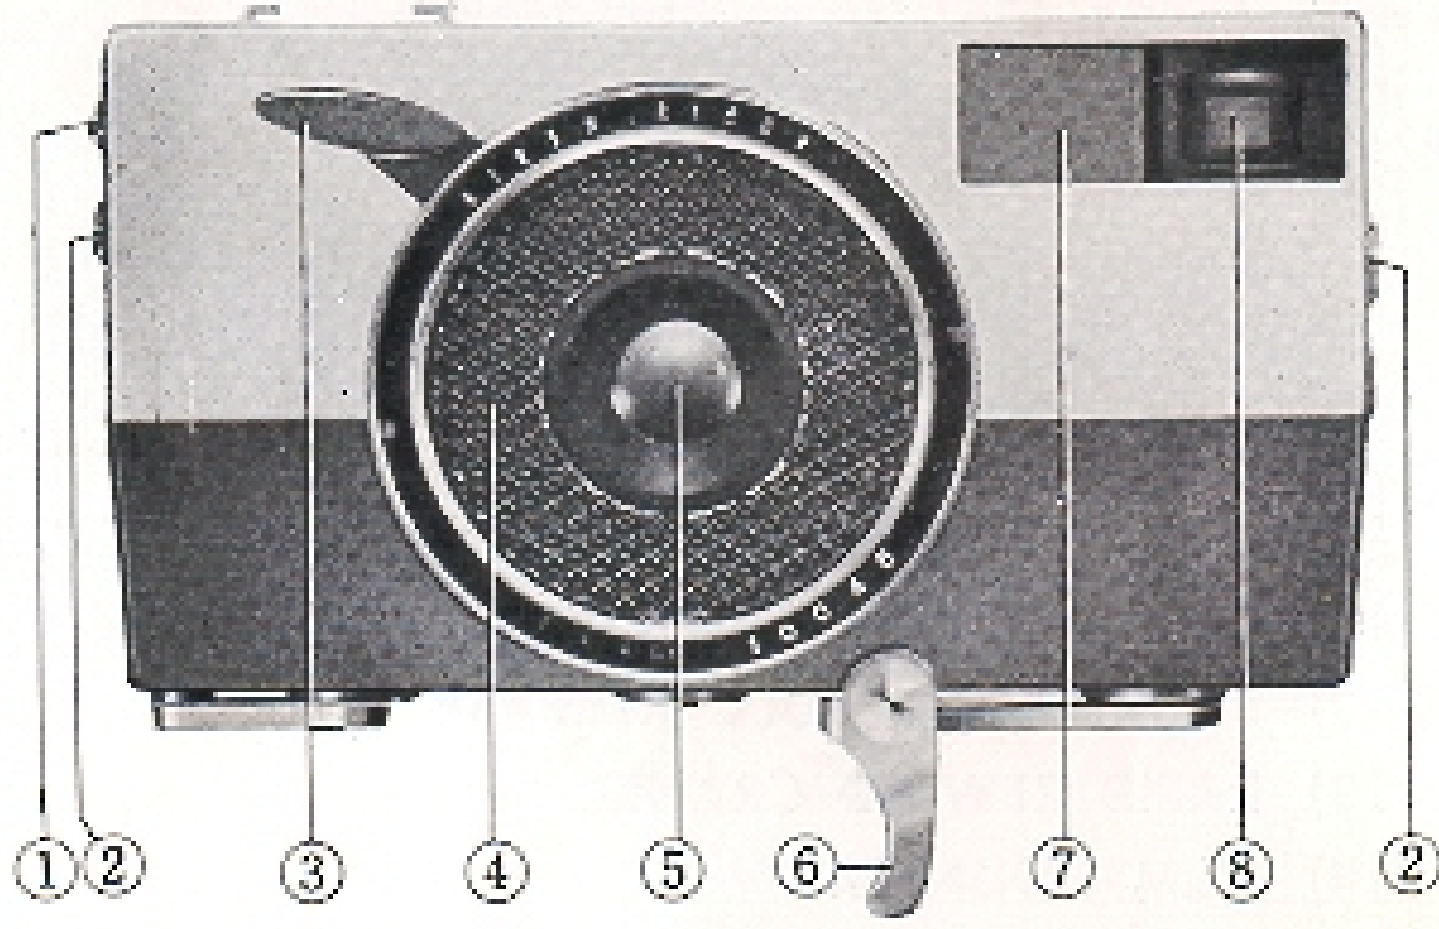


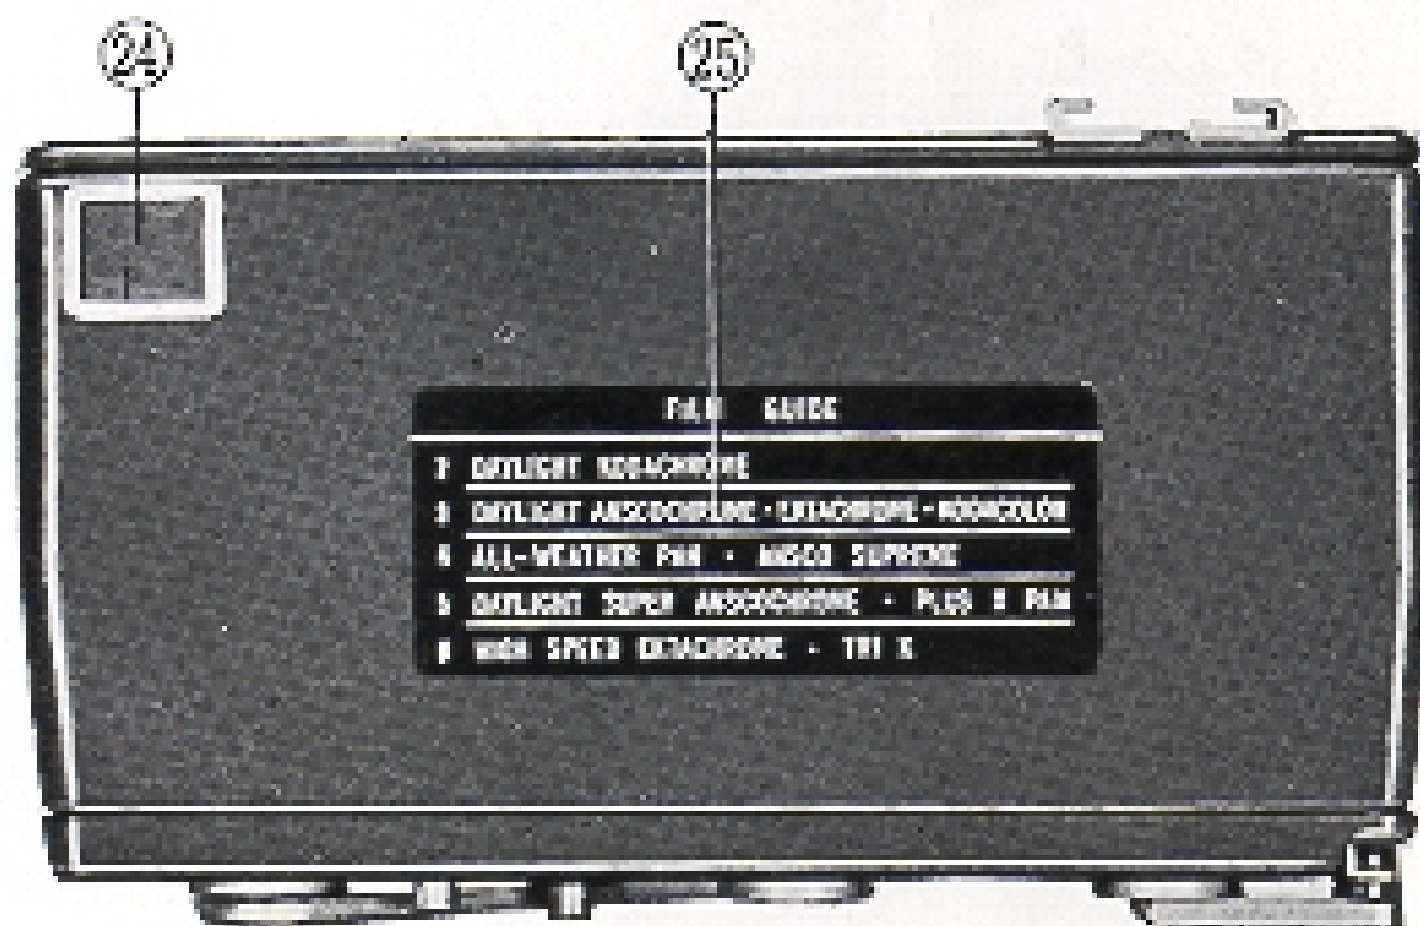


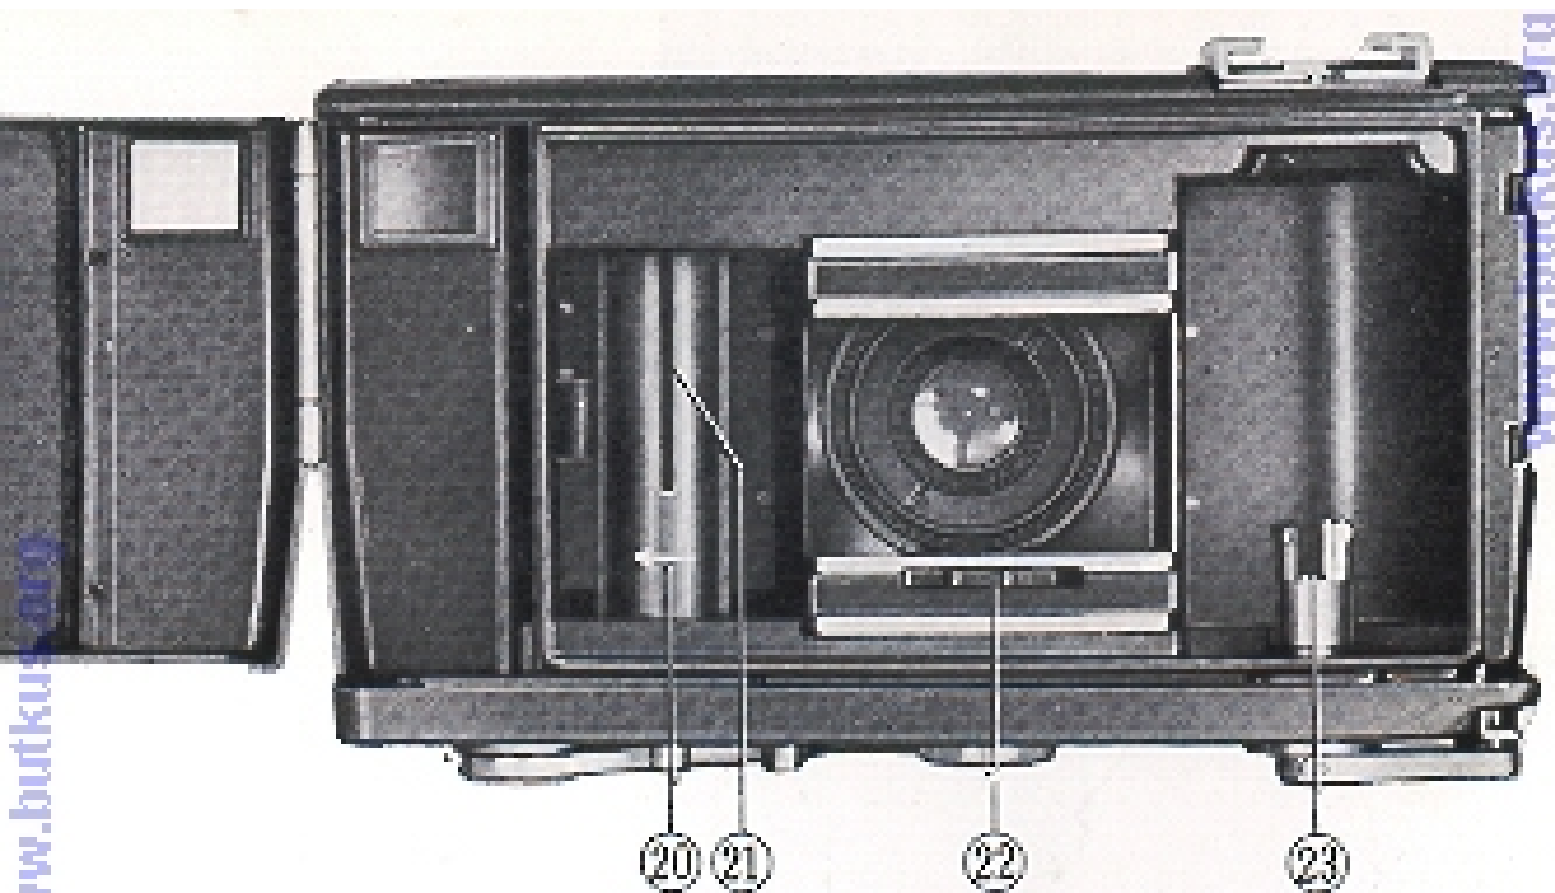

film unit

- Compact recording
- Excellent reproduction - (transparency - negative)
- High-contrast film - large format
- Portable Super motioncam - 16mm & 8mm
- New Super filmcam - 16mm




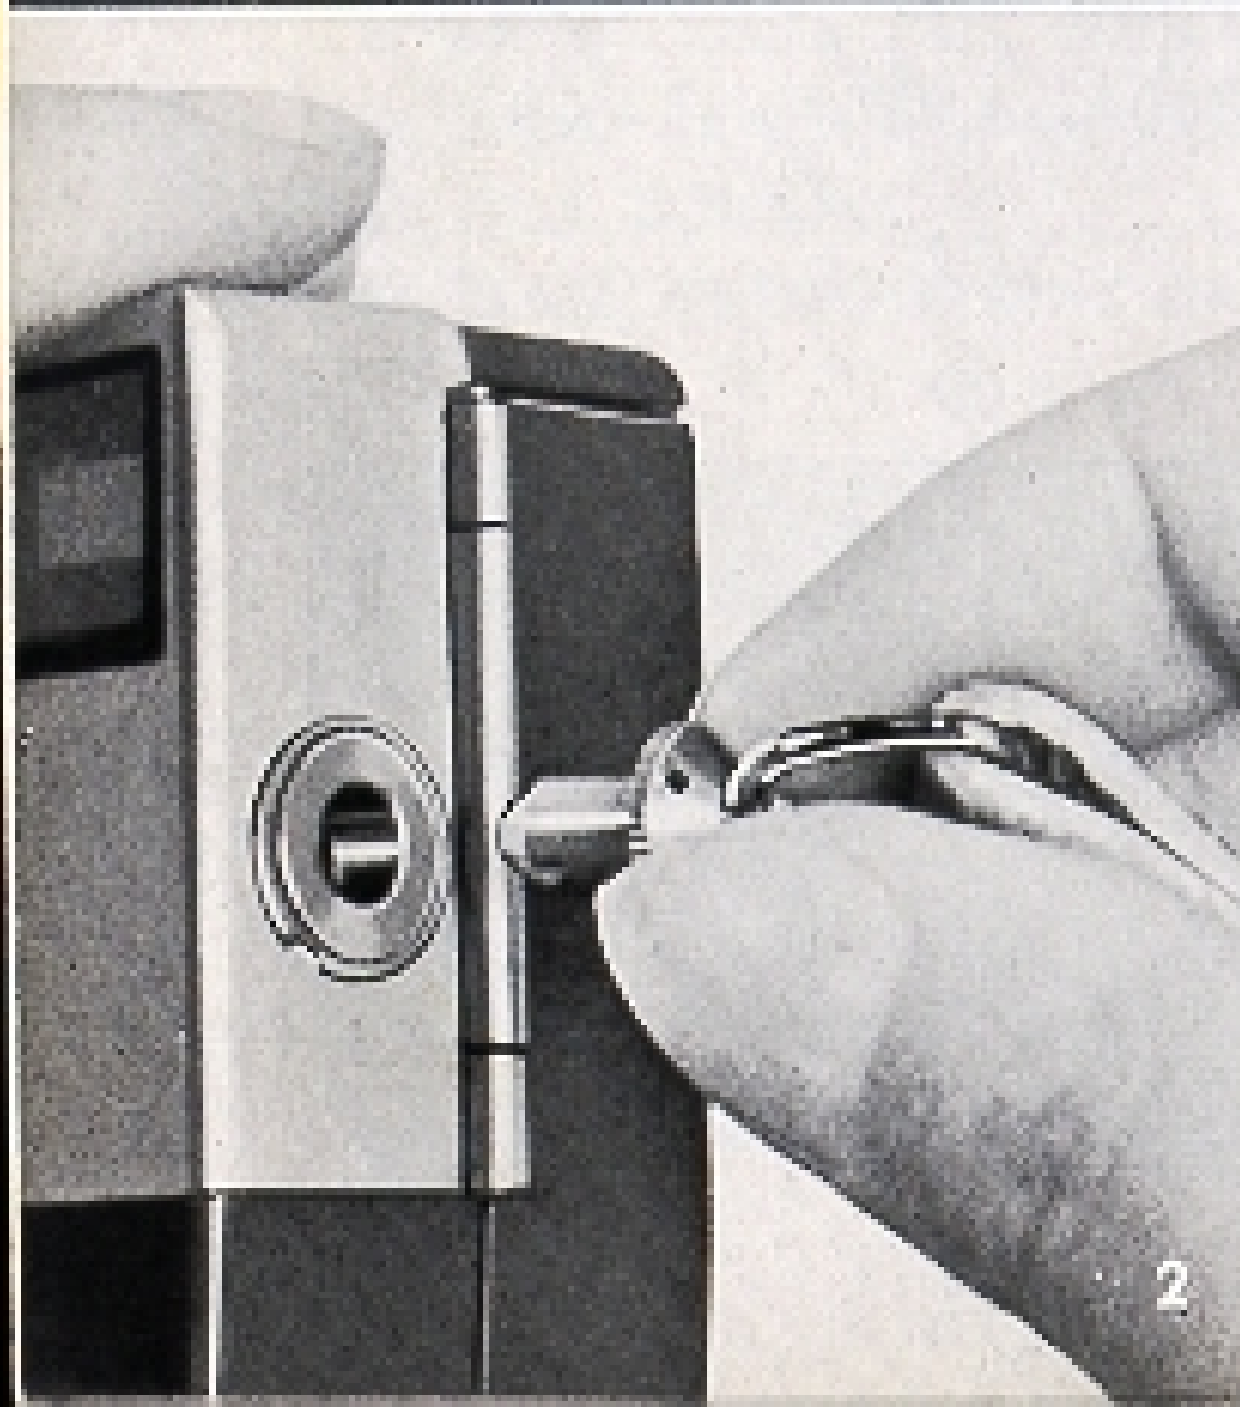
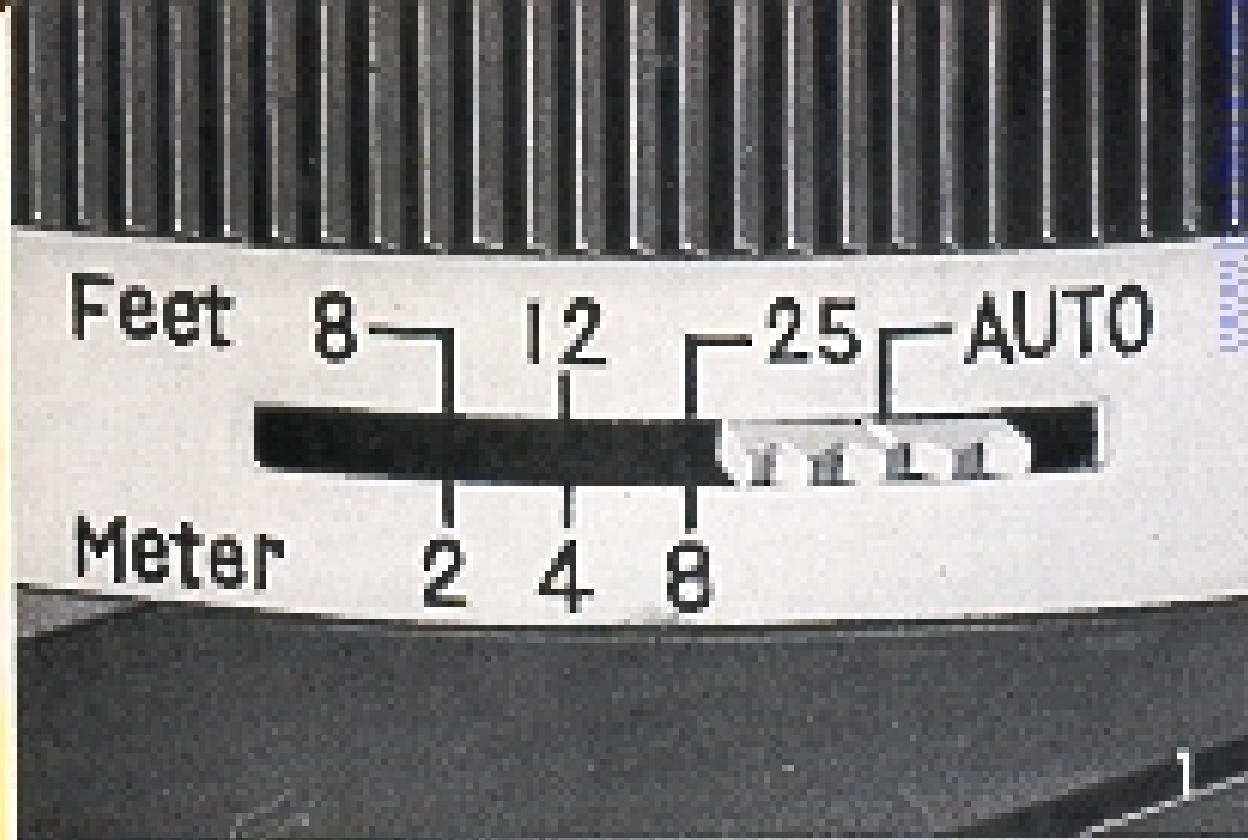




FILM 6 5 4 3 2 MB


9

 www.bu4u.com

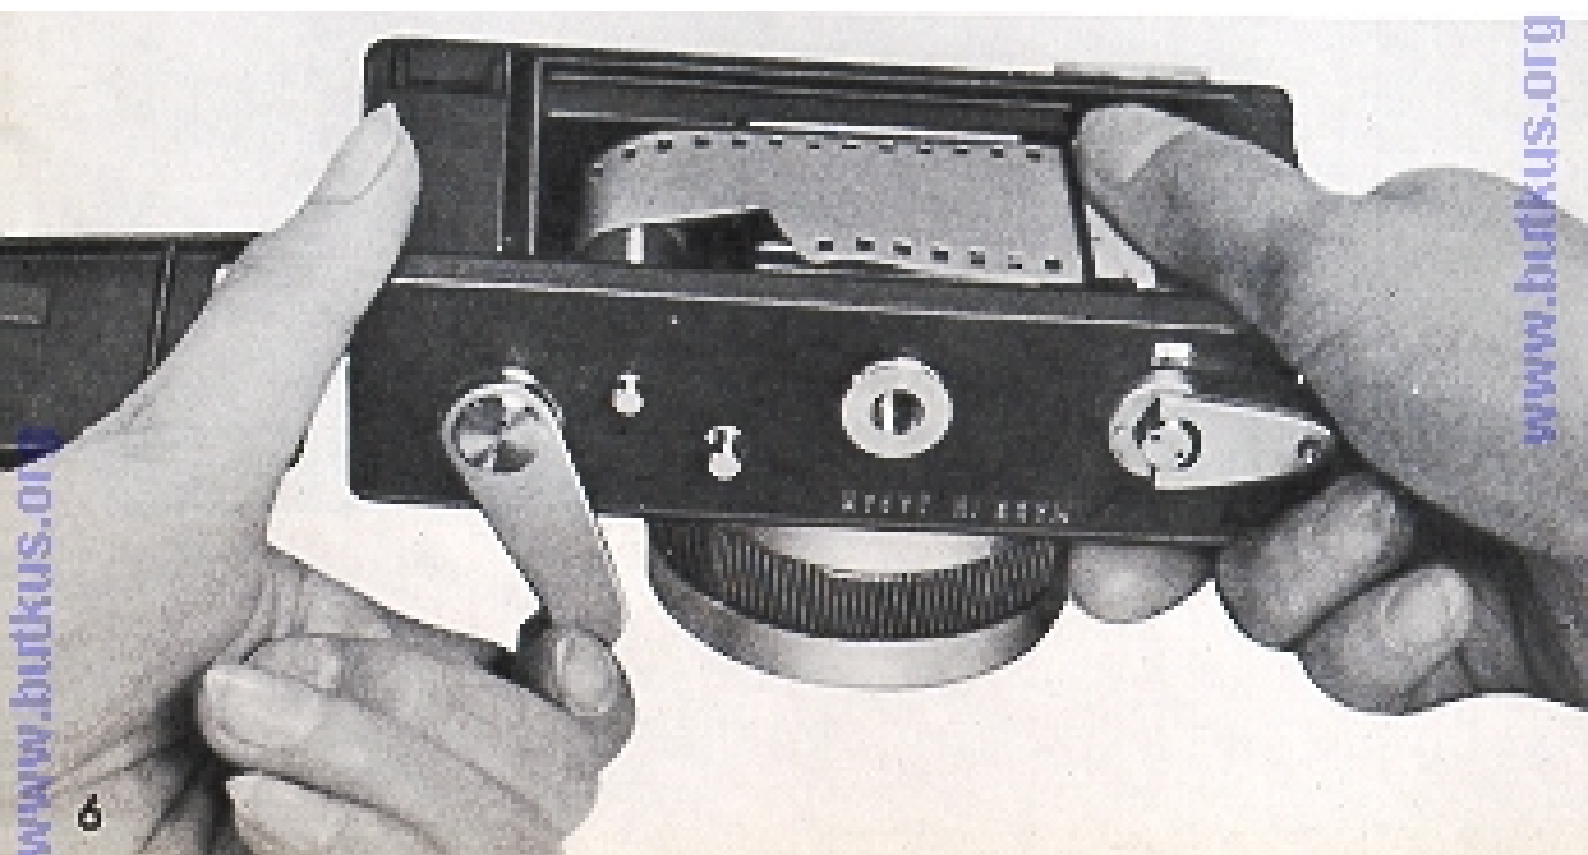

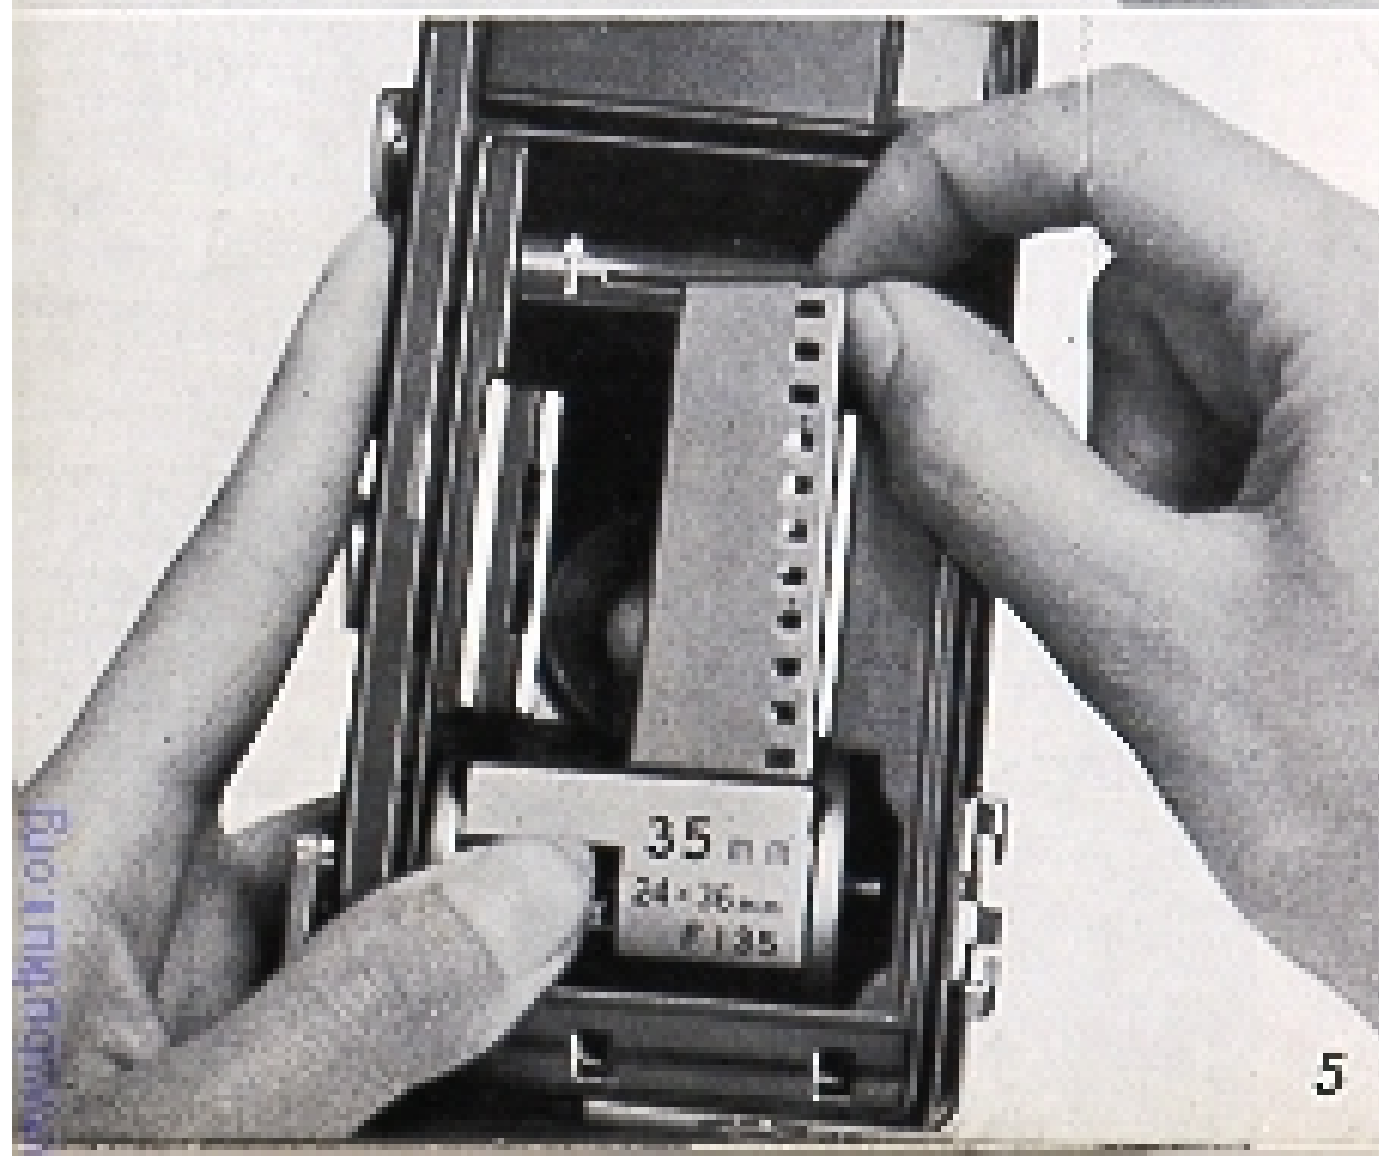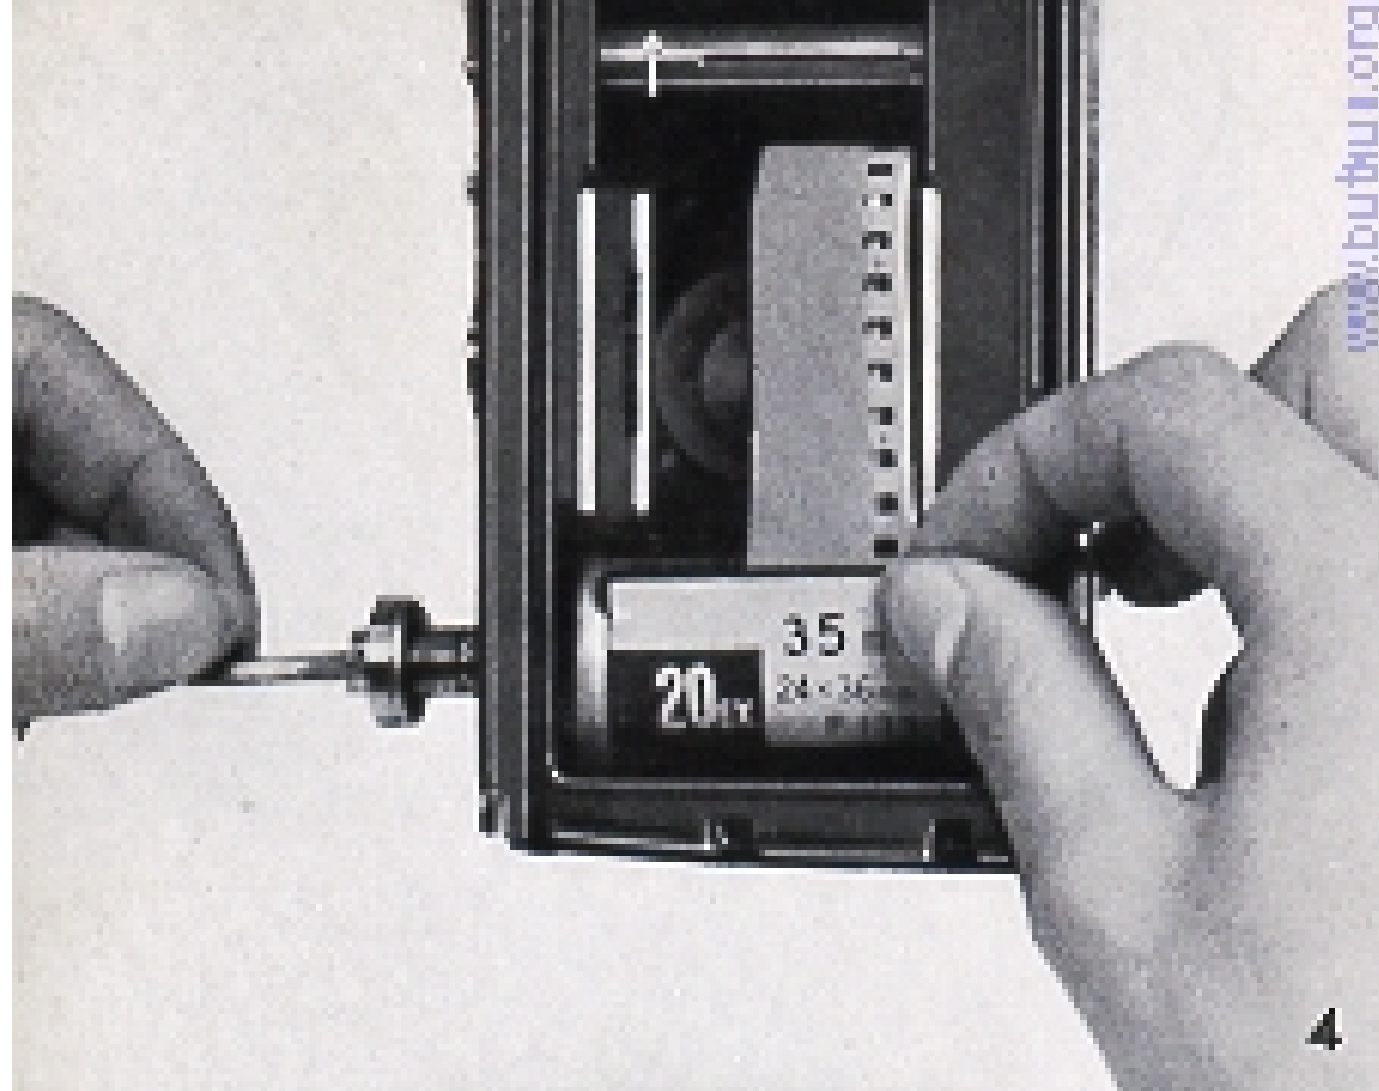


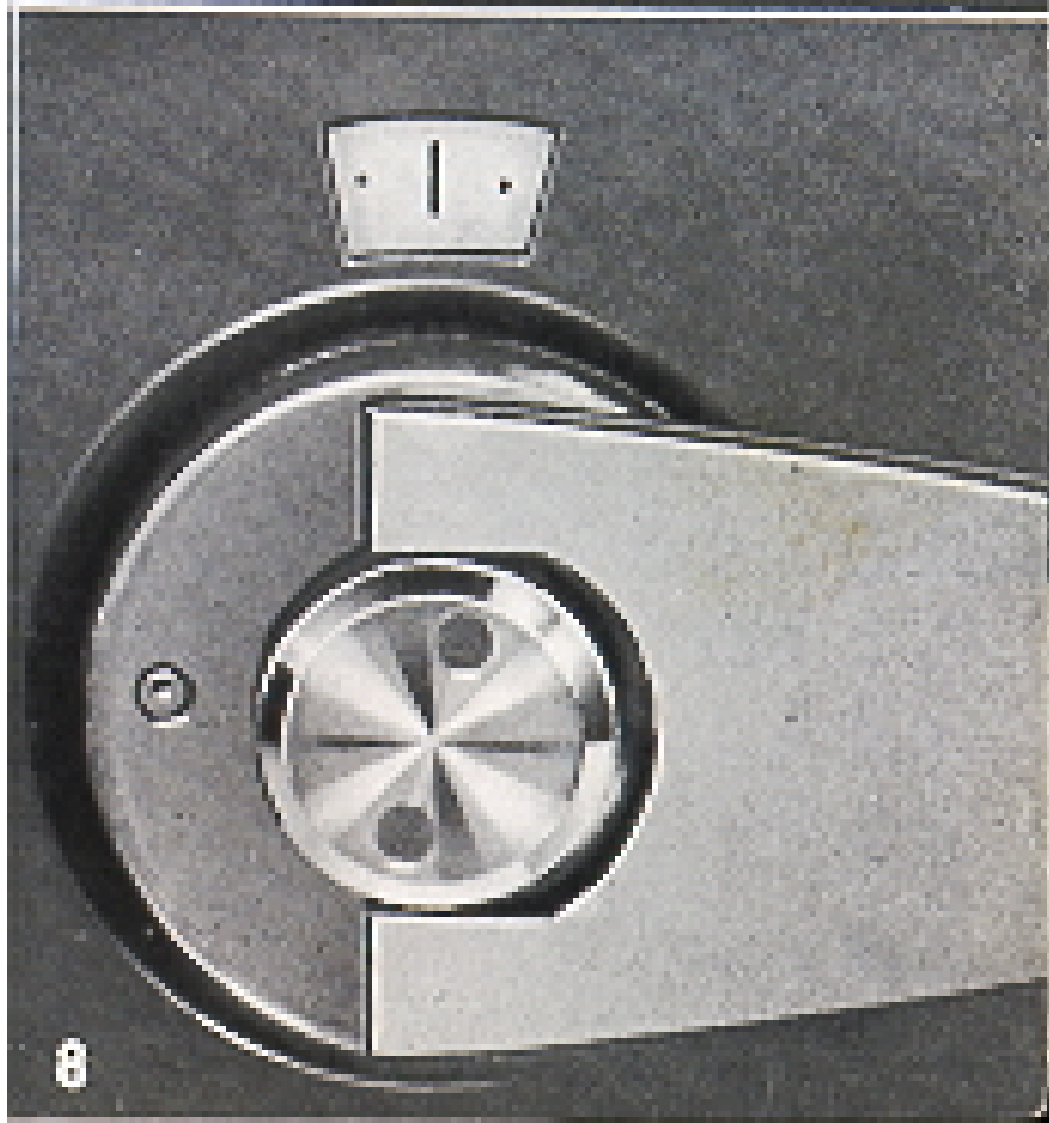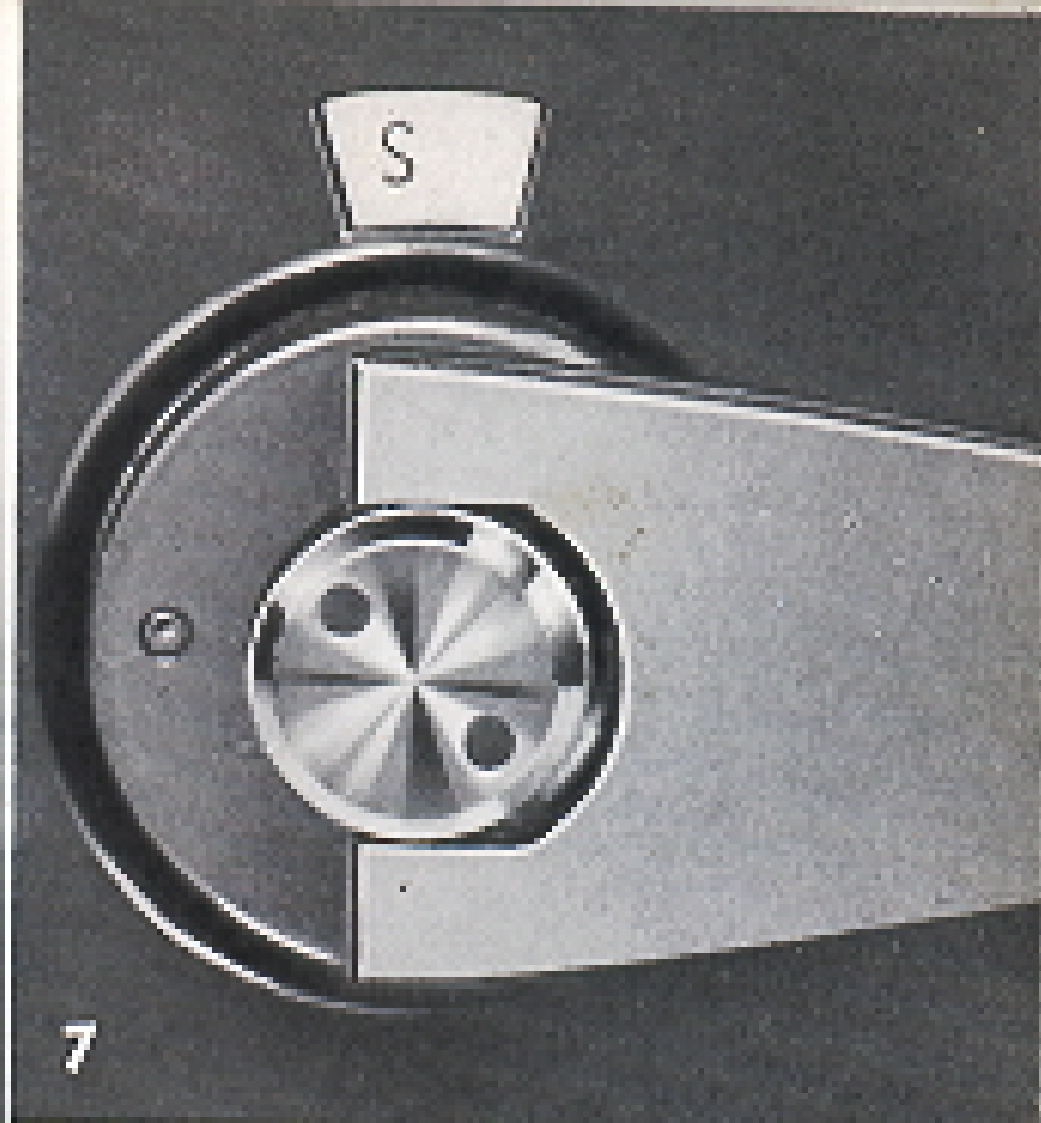

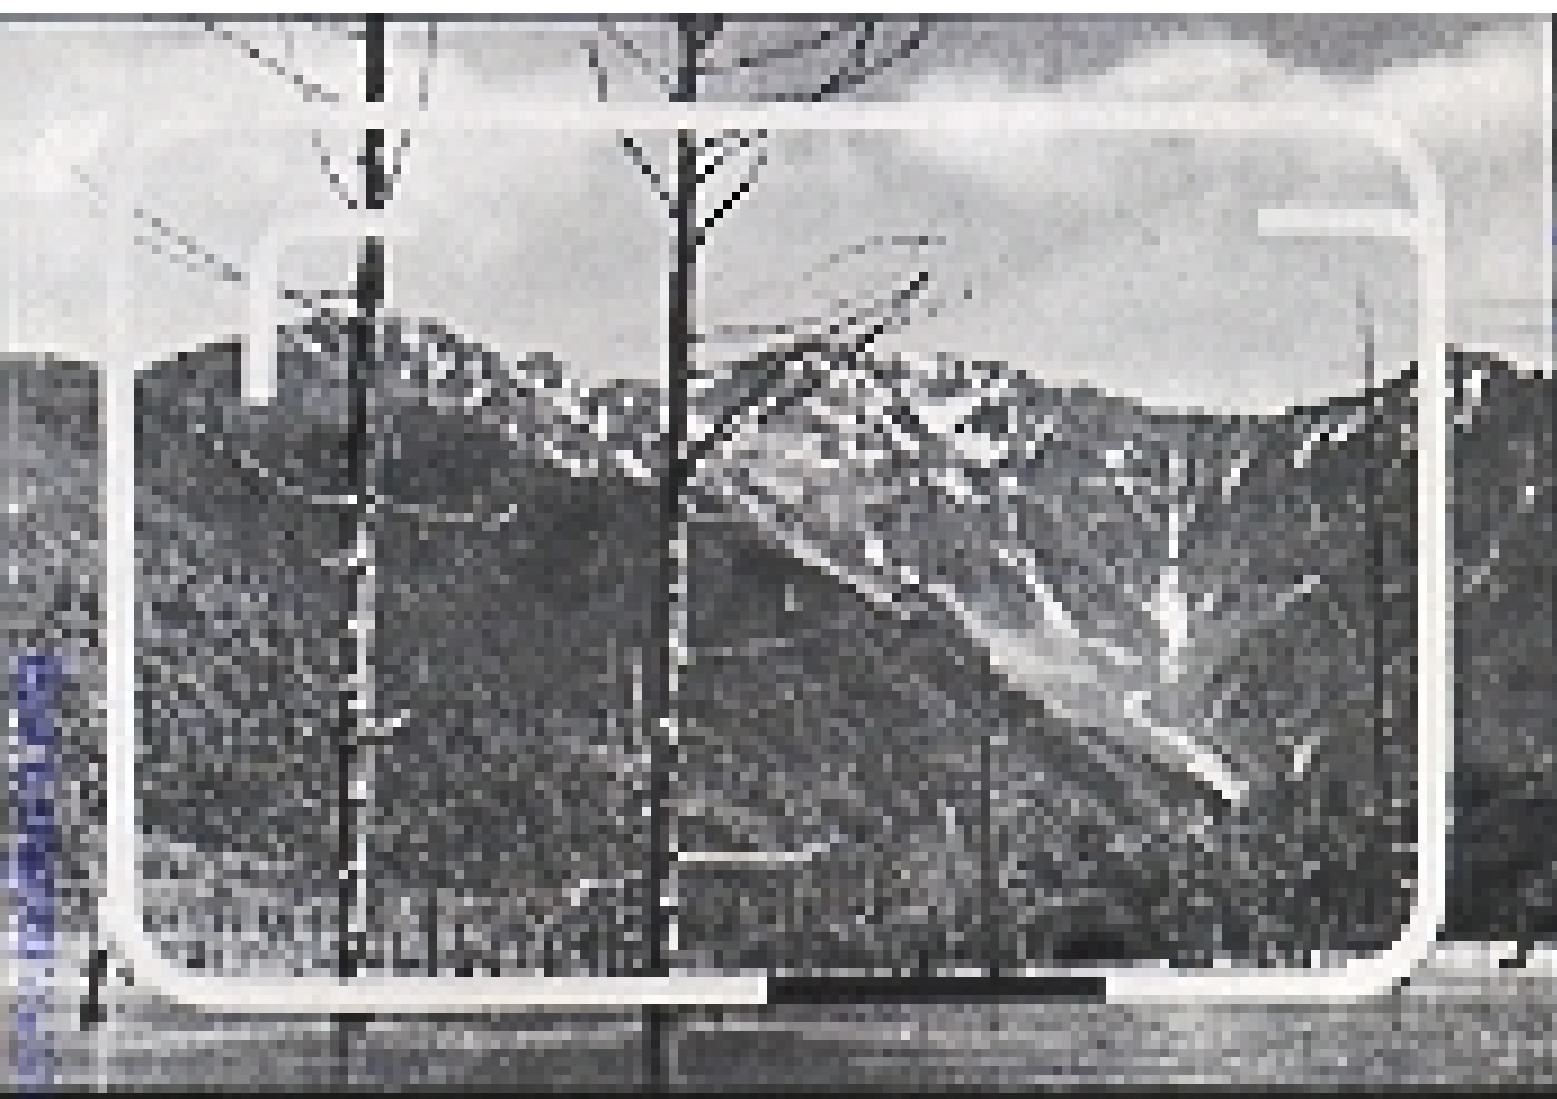



FILM GUIDE


- | | | |
|---|---|----|
| 2 | DAYLIGHT KODACHROME | |
| 3 | DAYLIGHT ANSCOCHROME - EKTACHROME - KODACOLOR | |
| 4 | ALL-WEATHER PAN - ANSCO SUPREME | |
| 5 | DAYLIGHT SUPER ANSCOCHROME - PLUS X PAN | |
| 6 | HIGH SPEED EKTACHROME - TRI X | 10 |

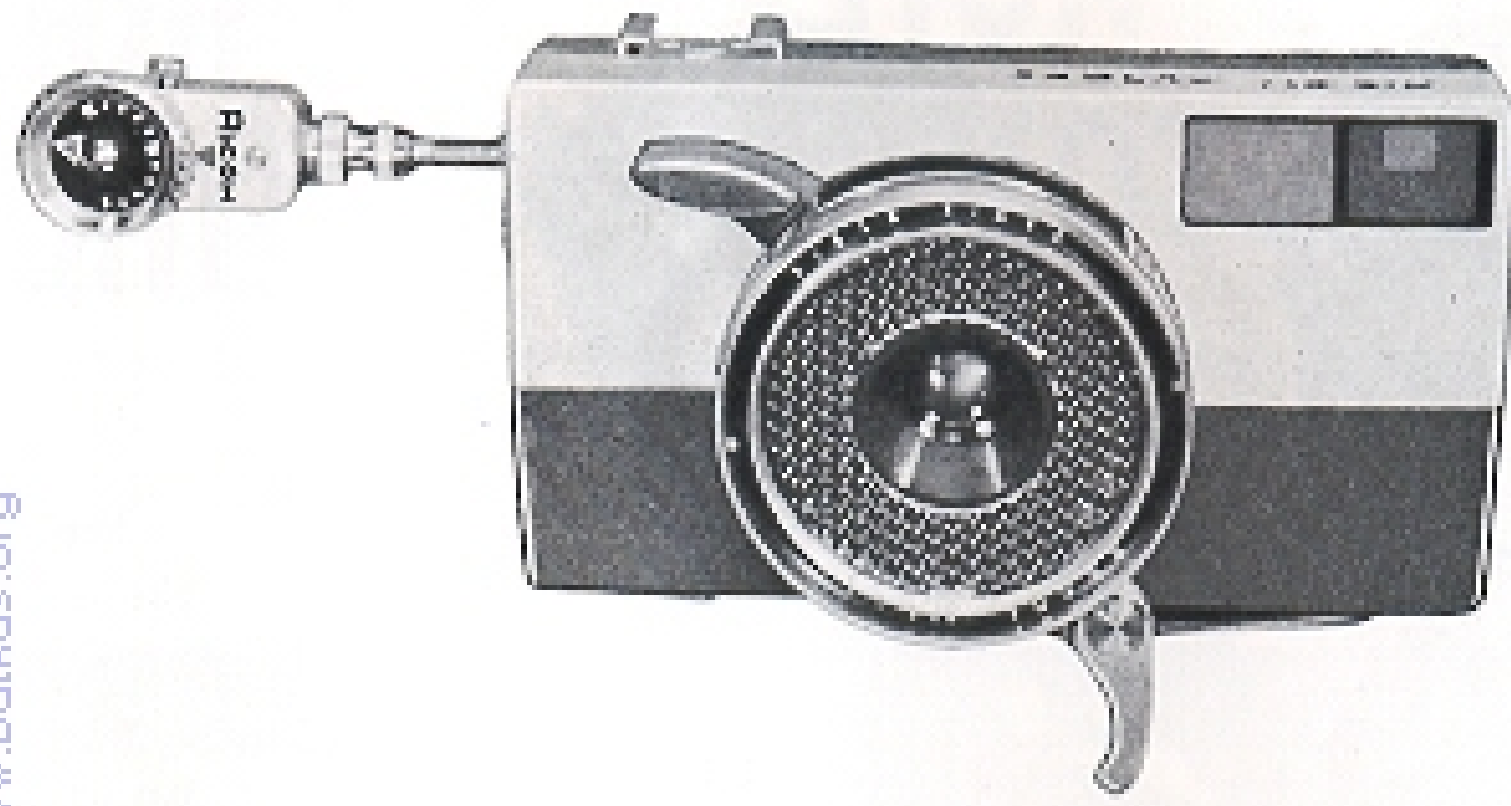 




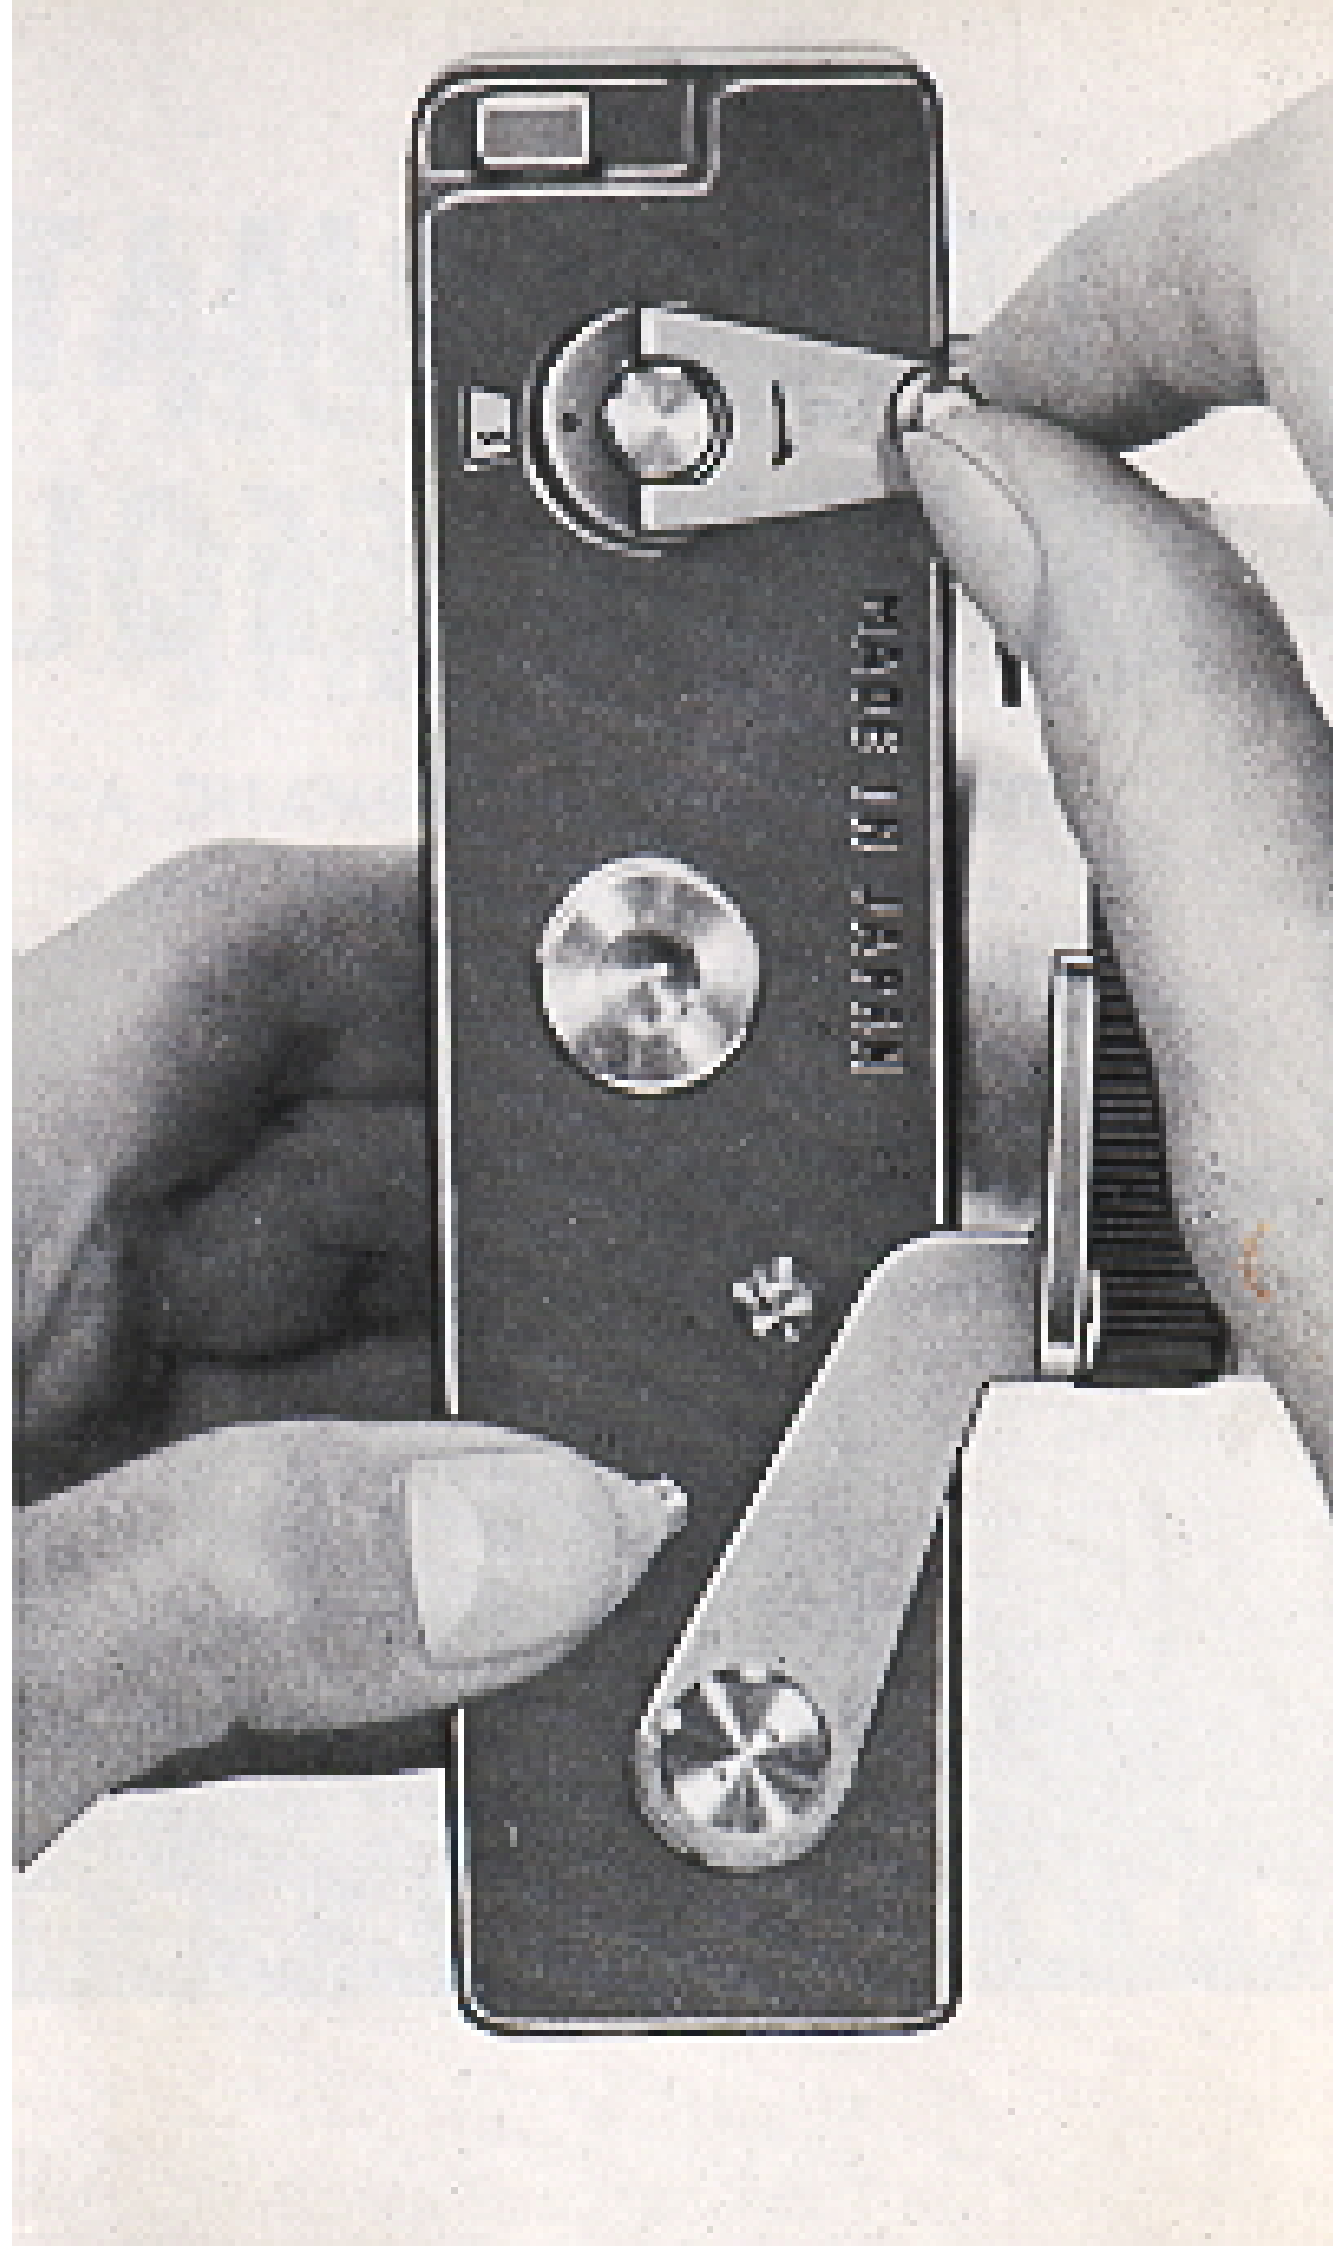 


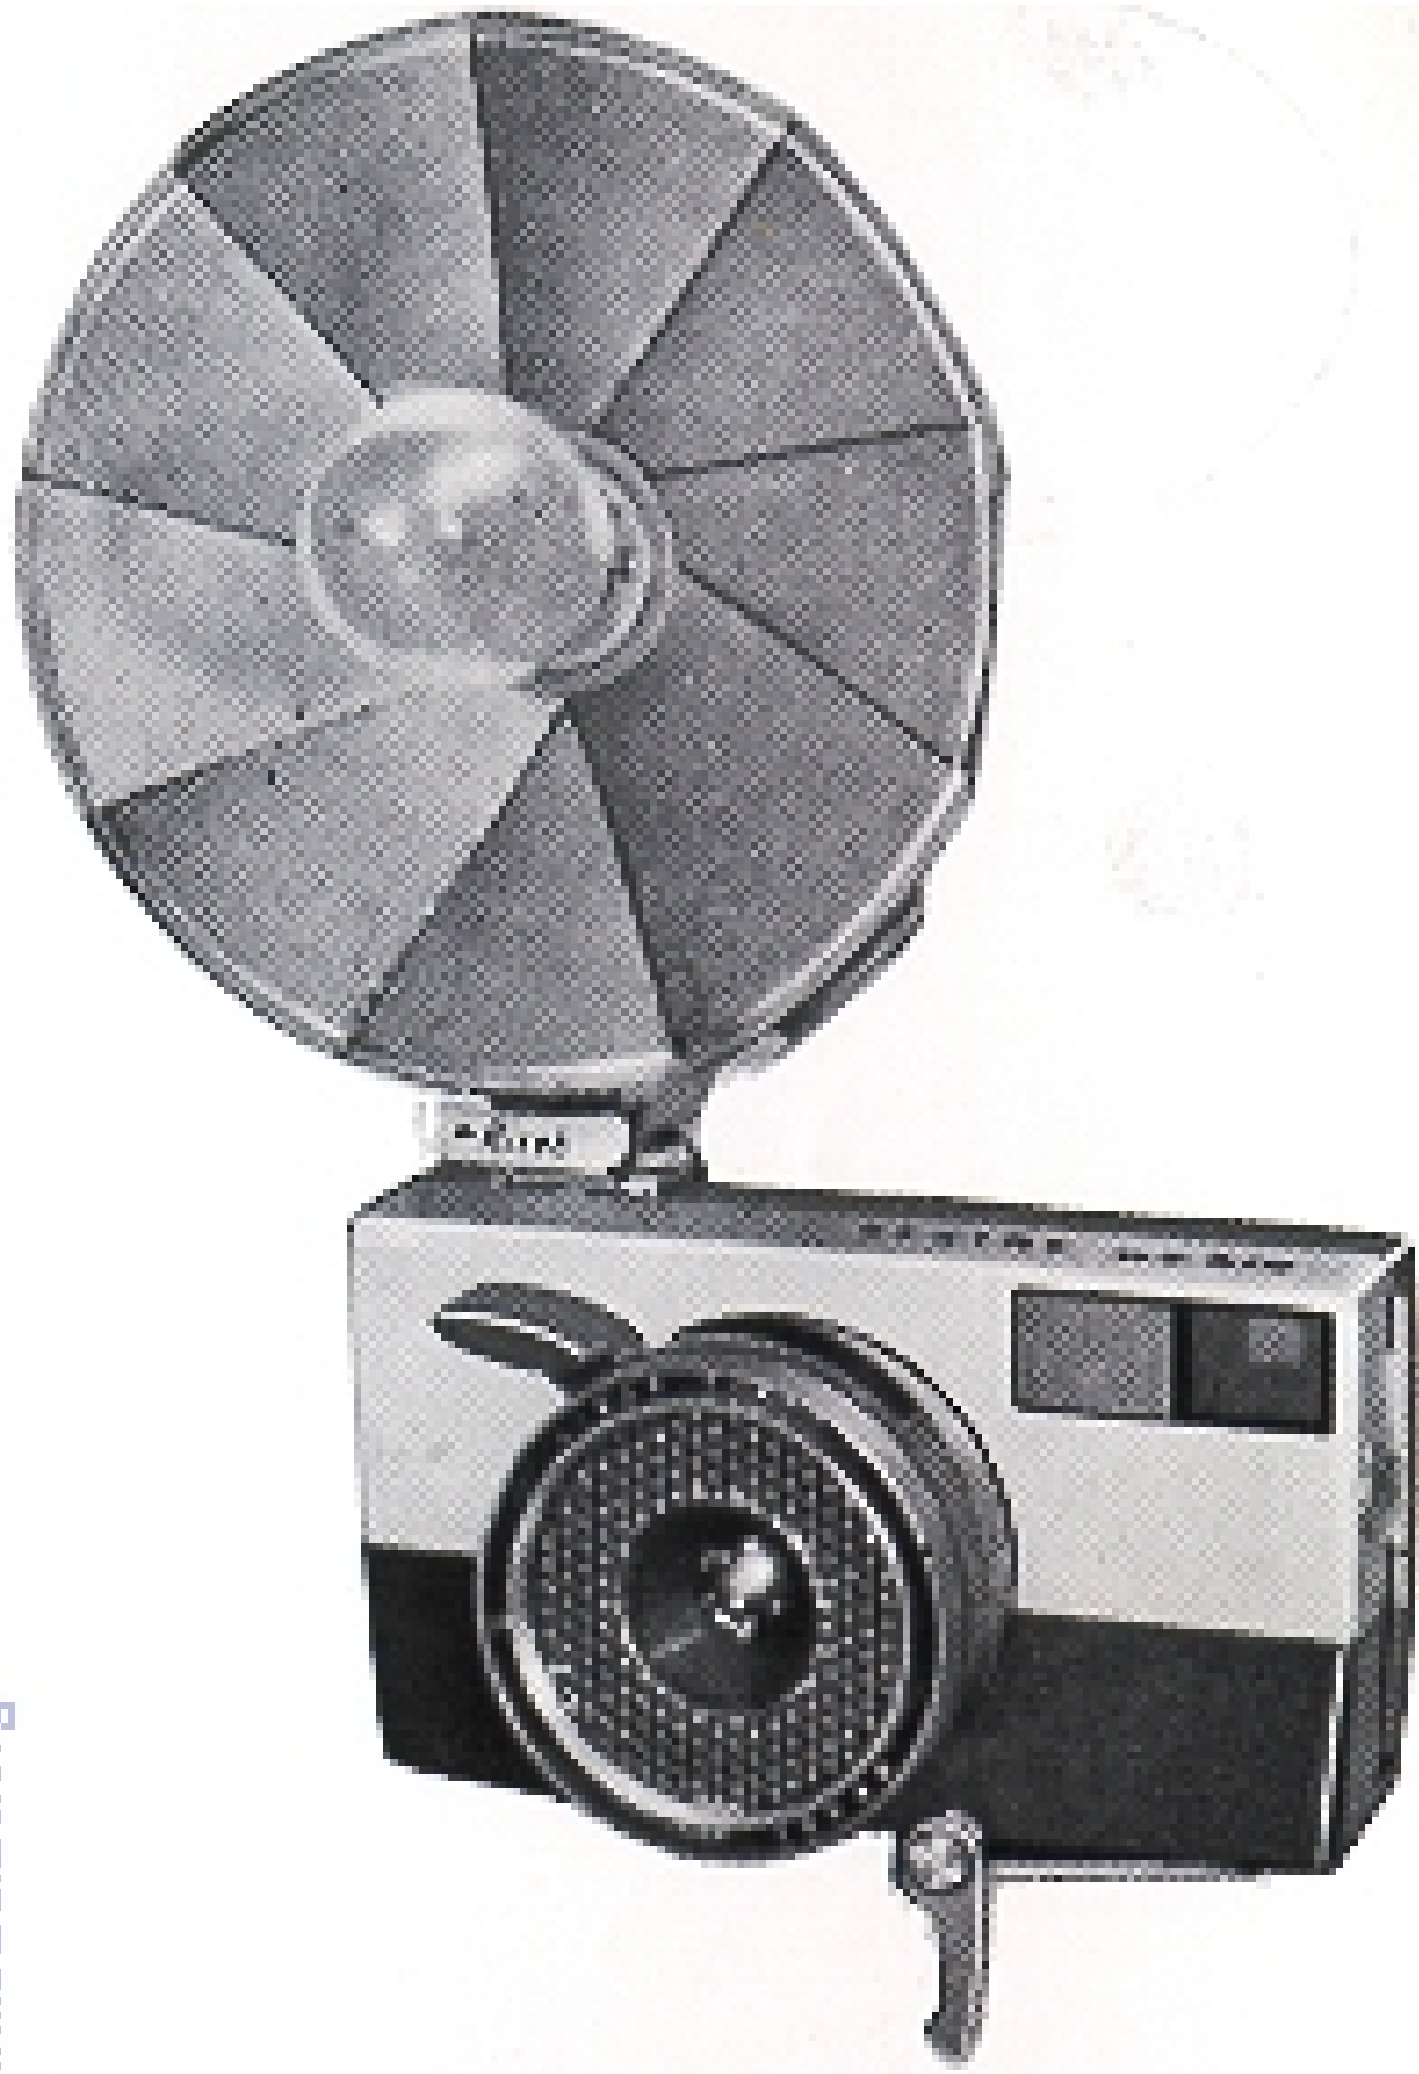 

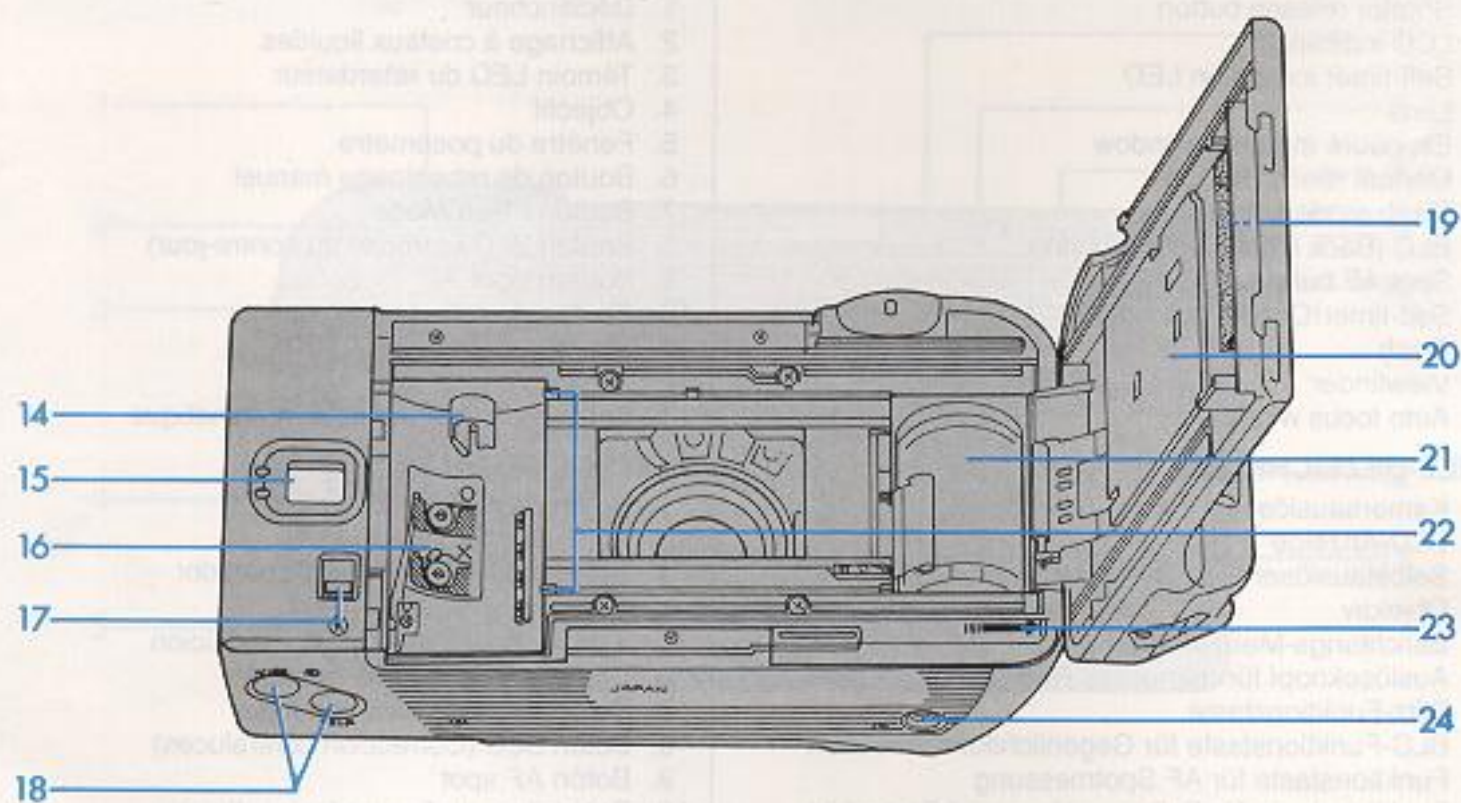  

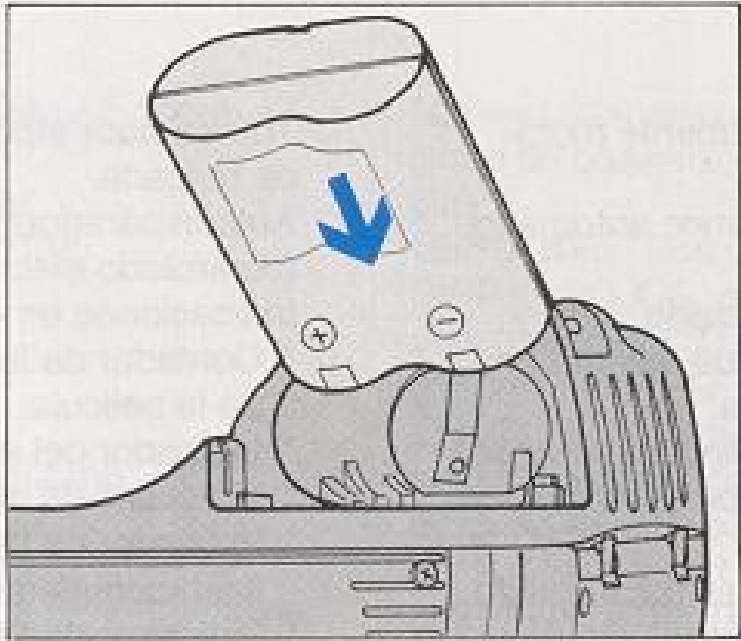


A

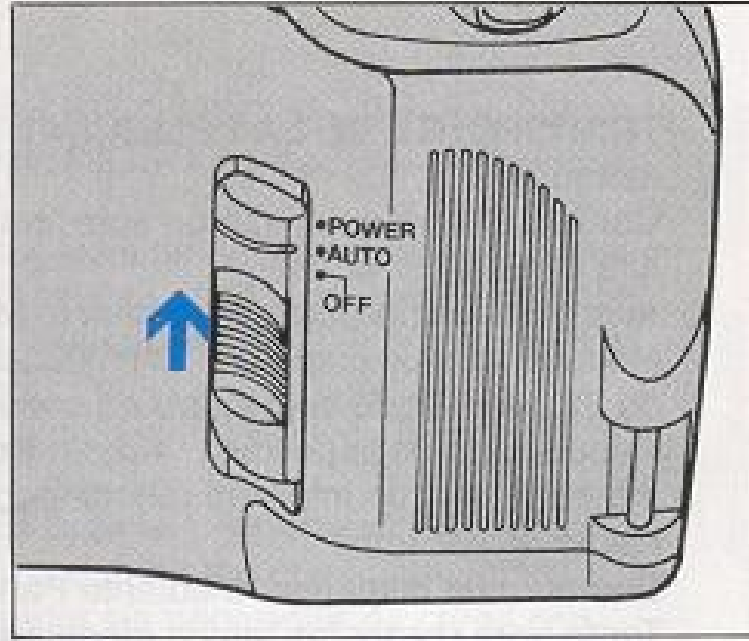 


B



 E

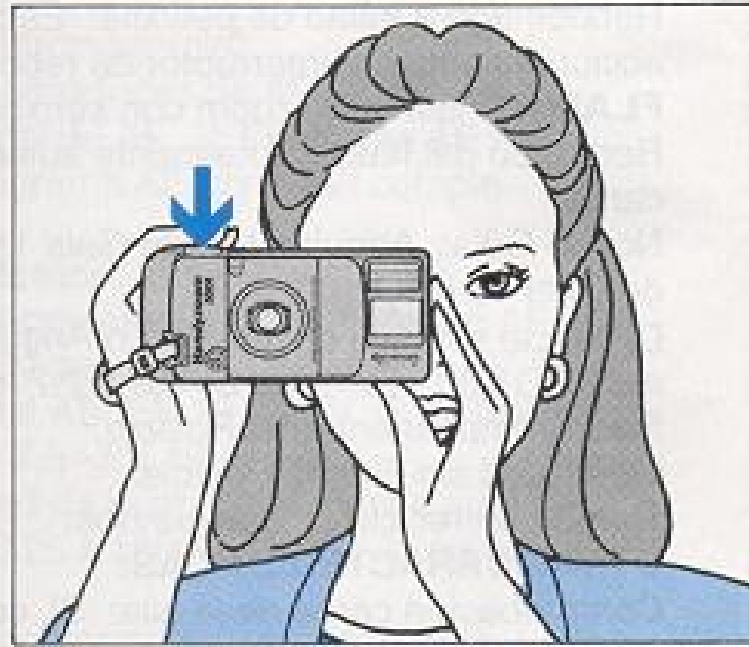

F


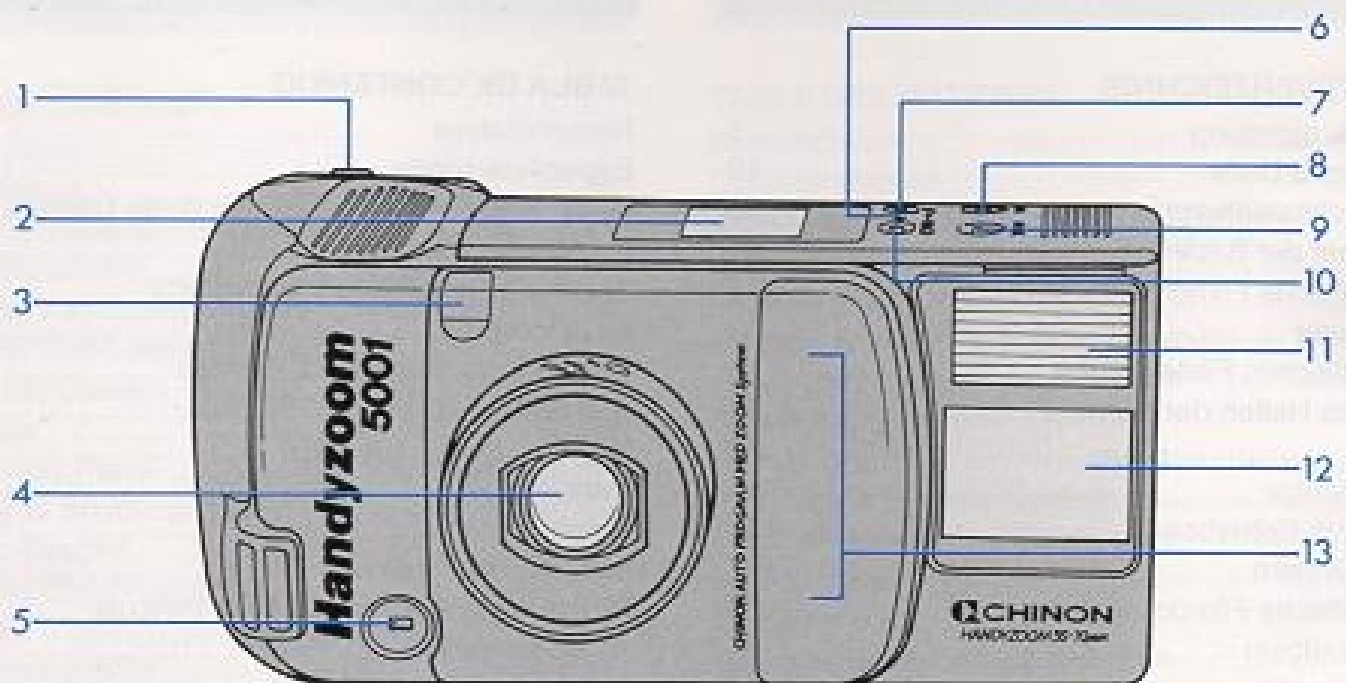 



FILM 6 5 4 3 2 M B



14



Feet 8 12 25 AUTO
Meter 2 4 8

        
15

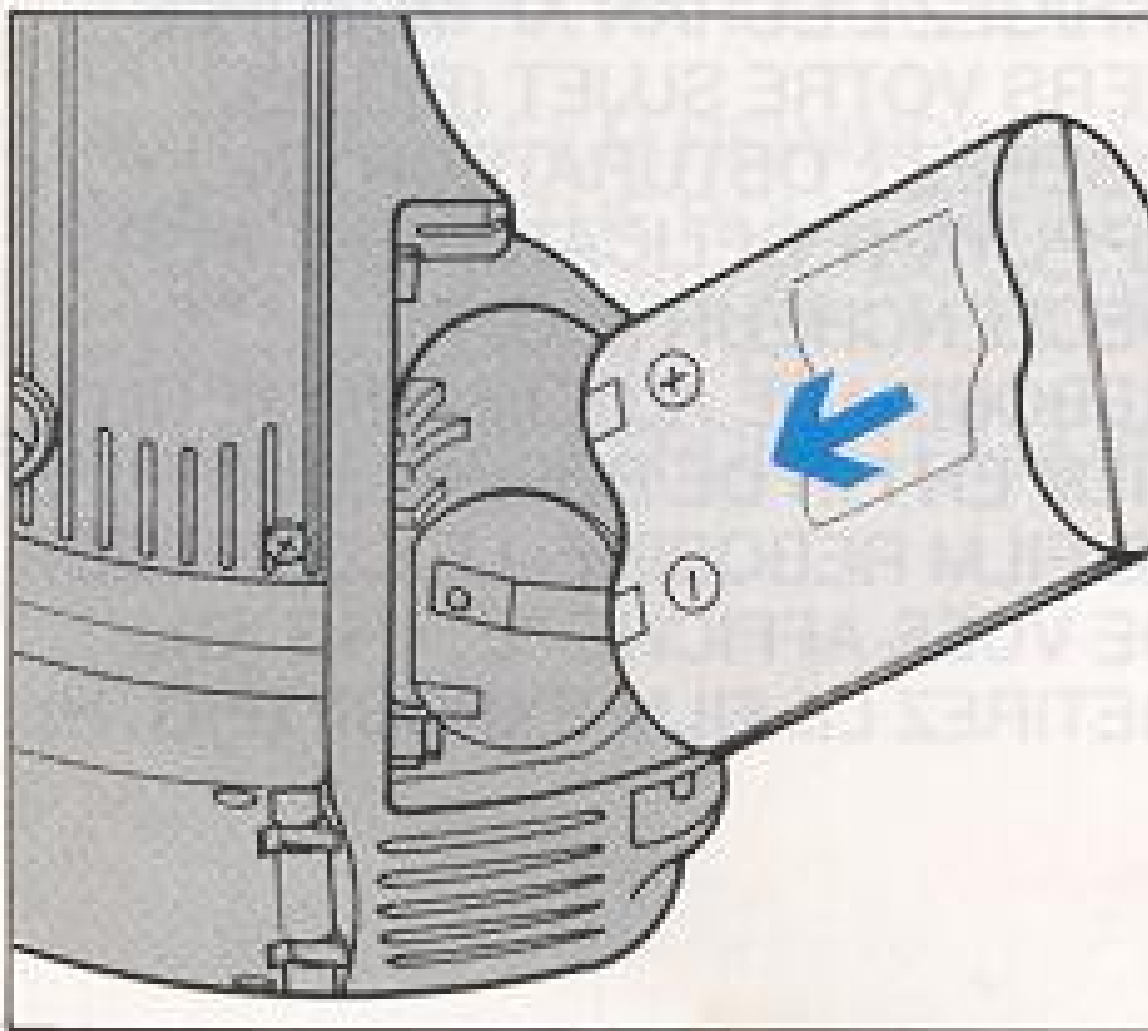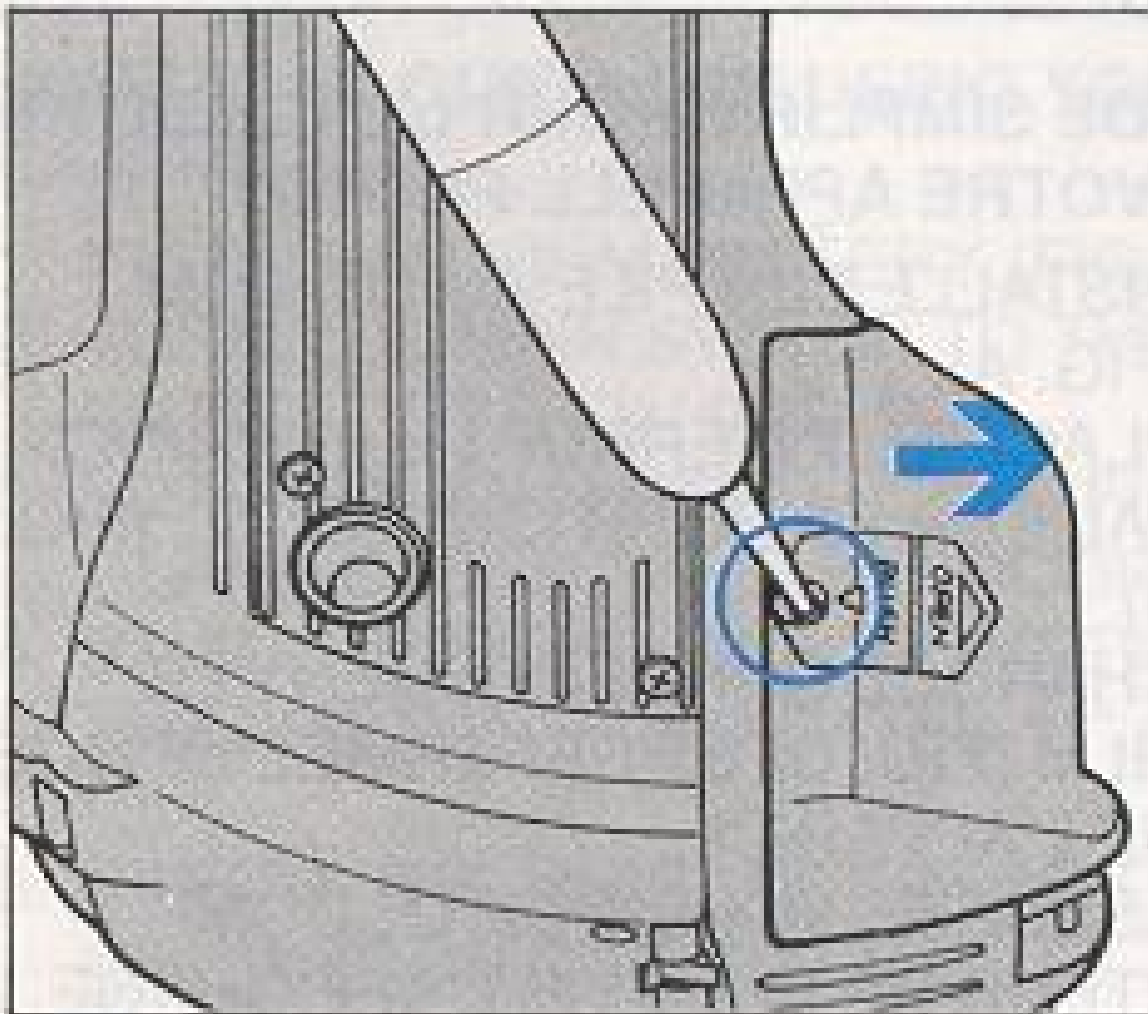

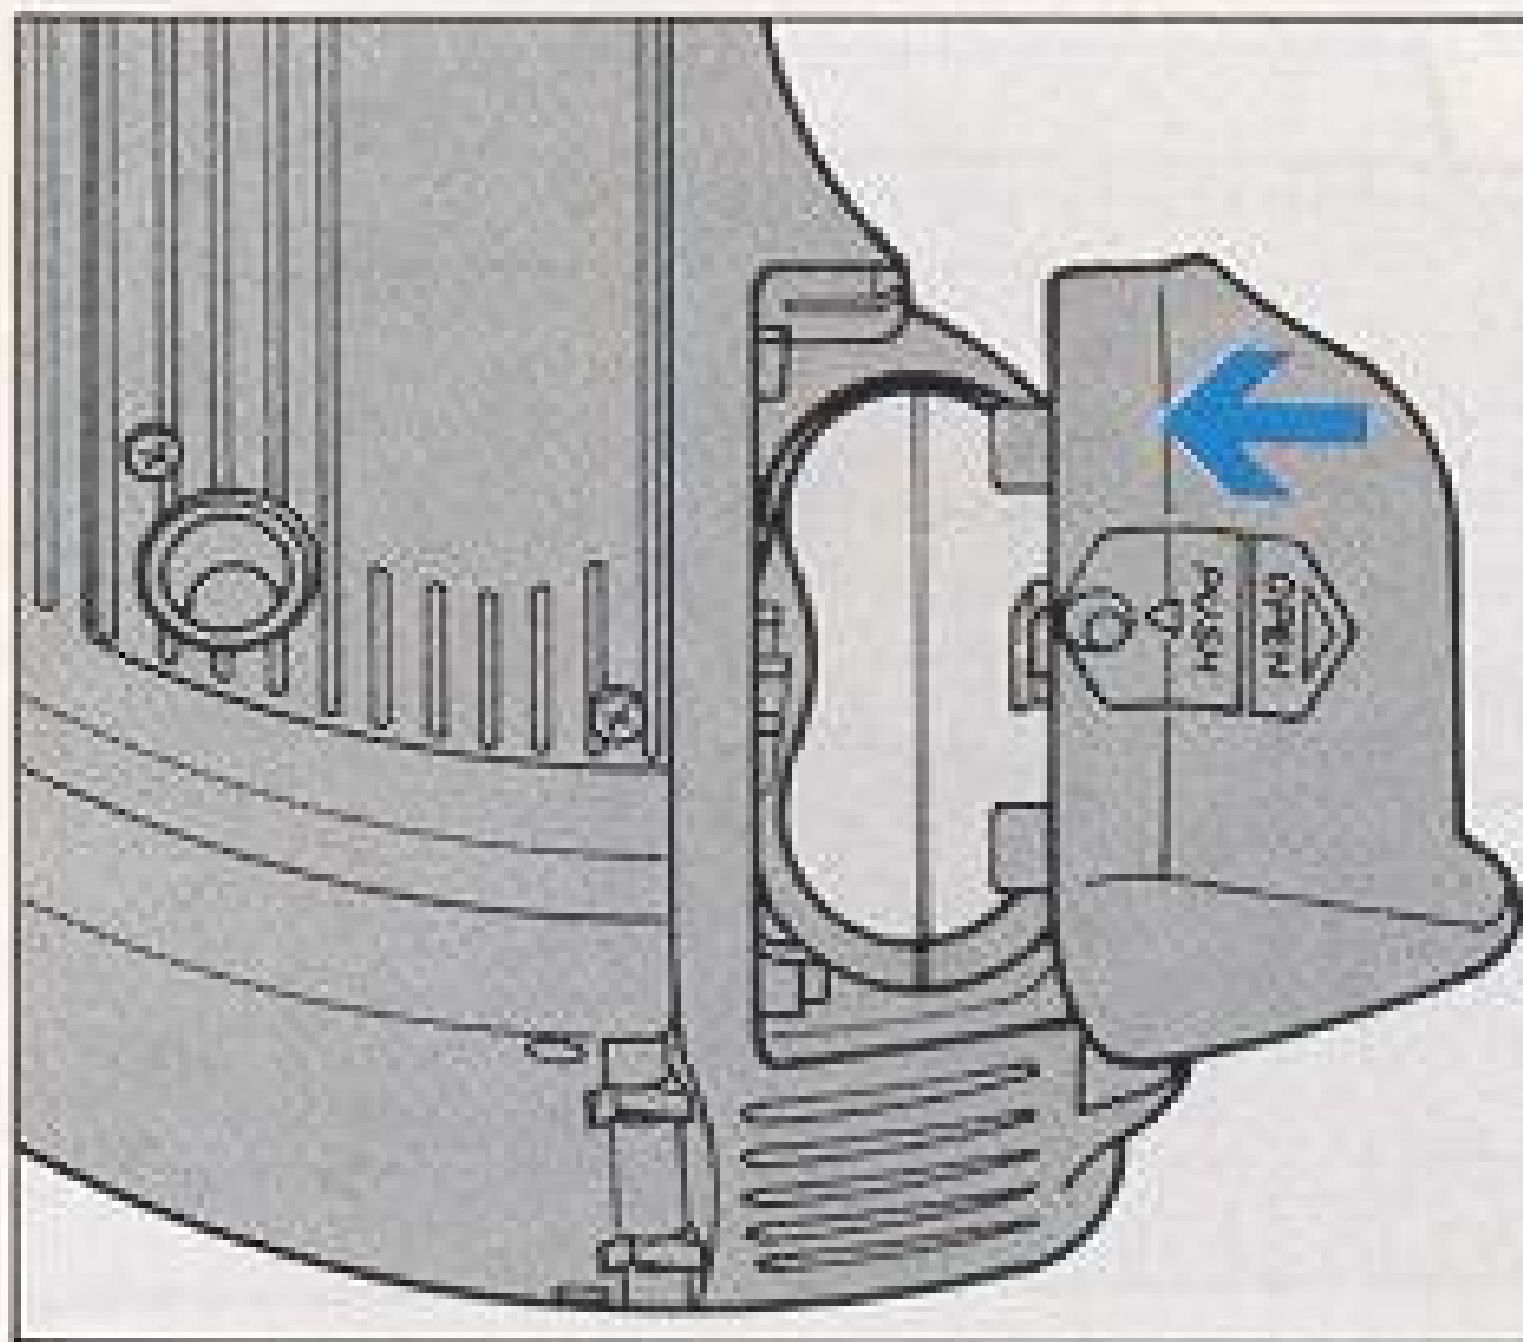


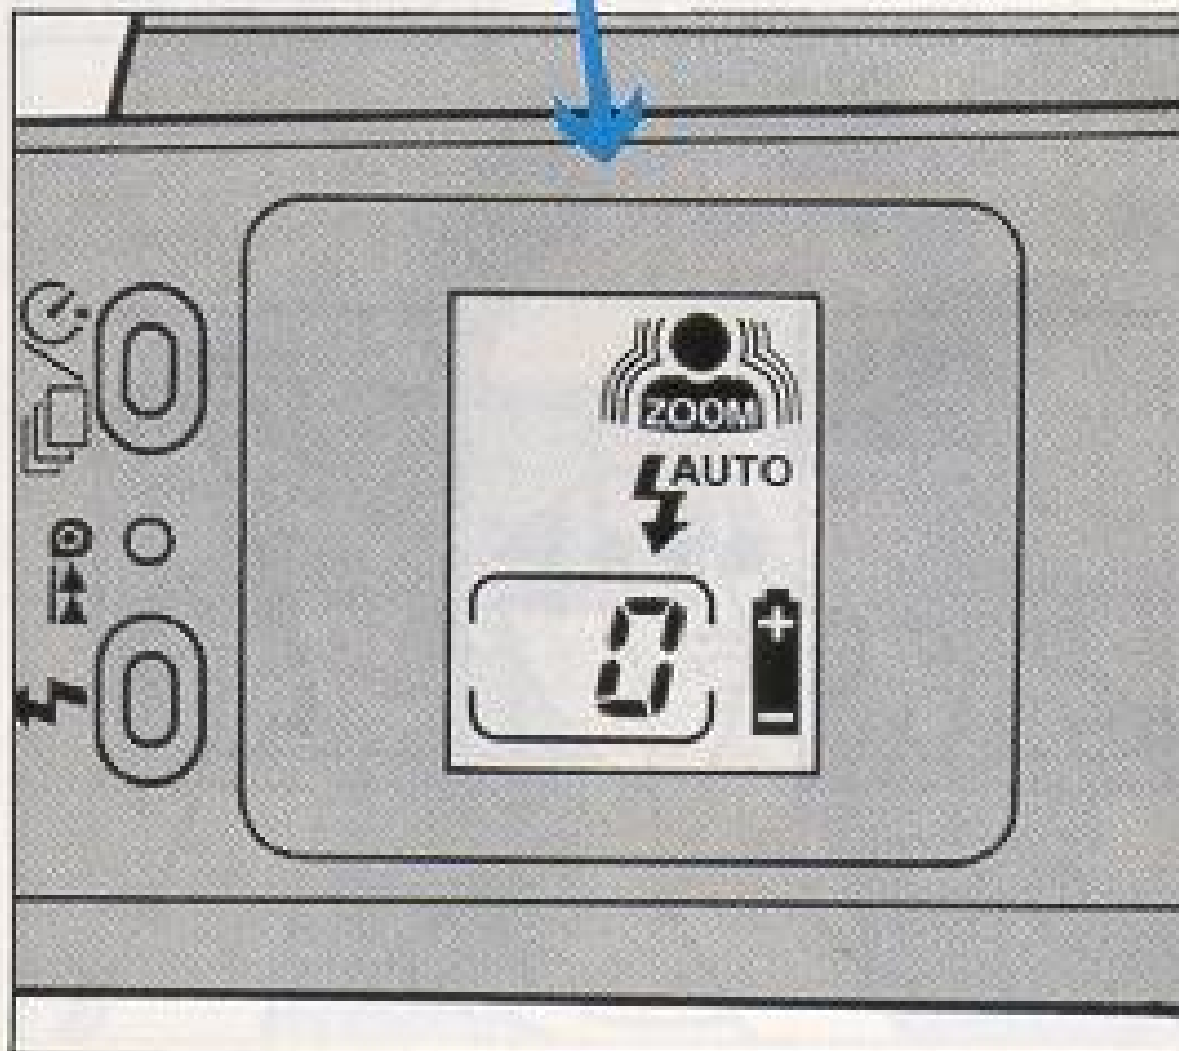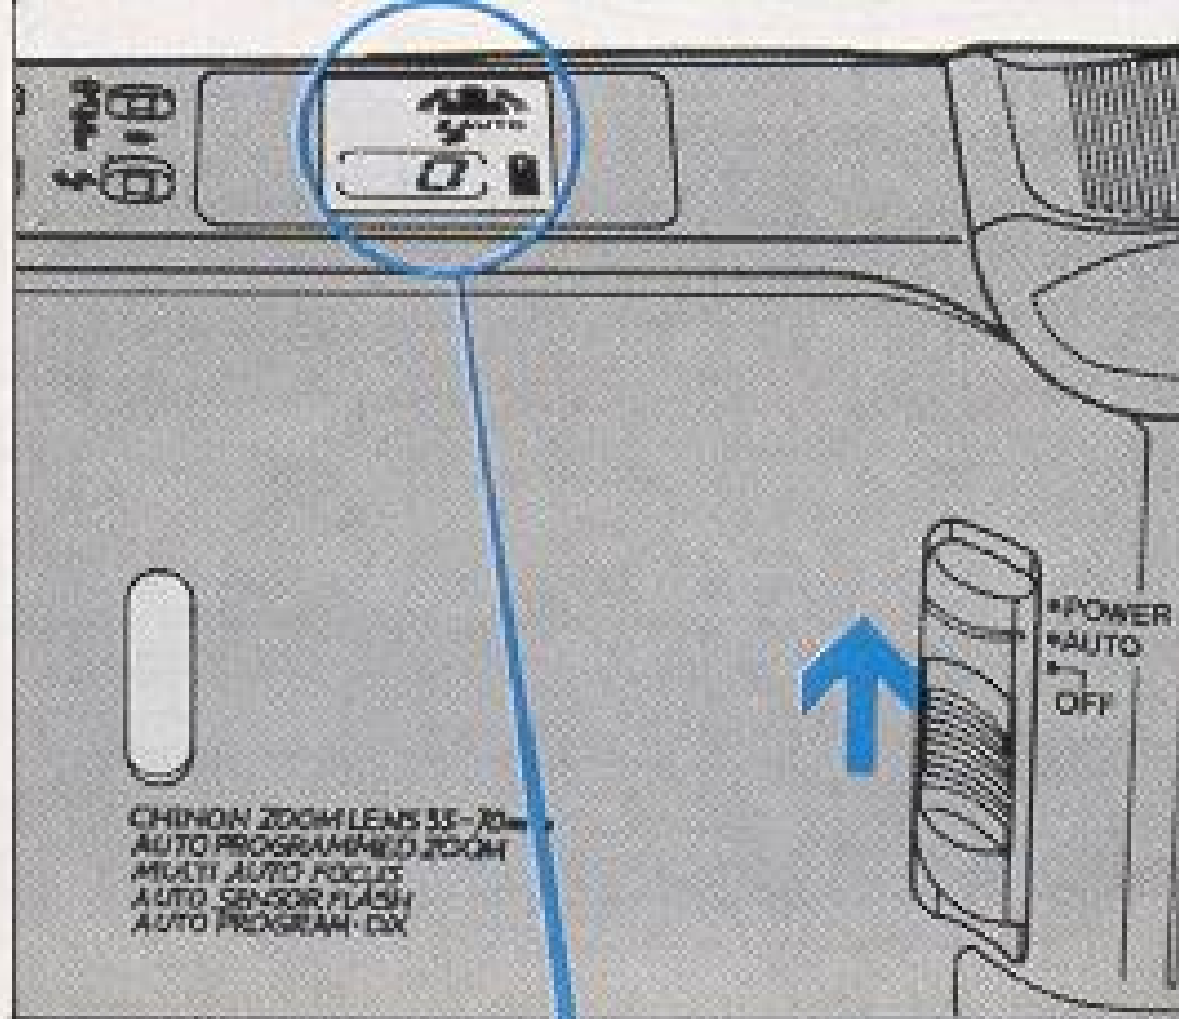


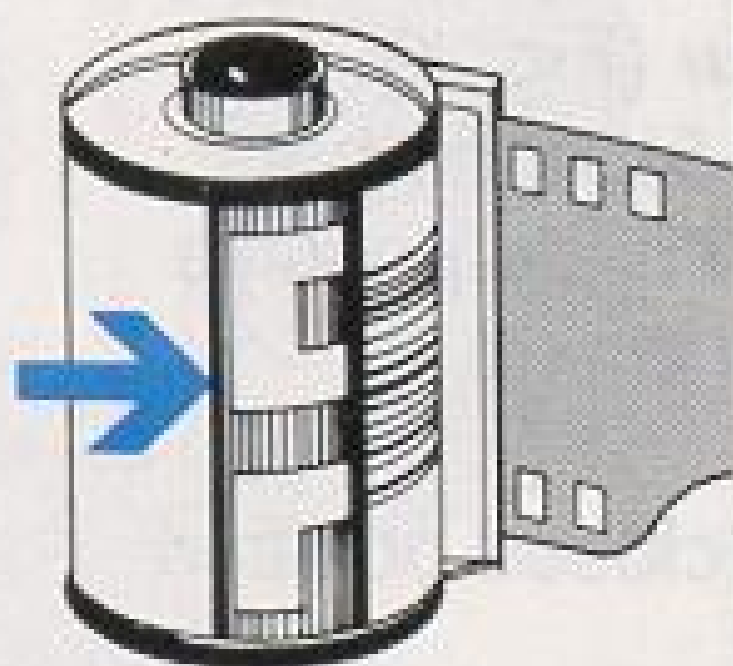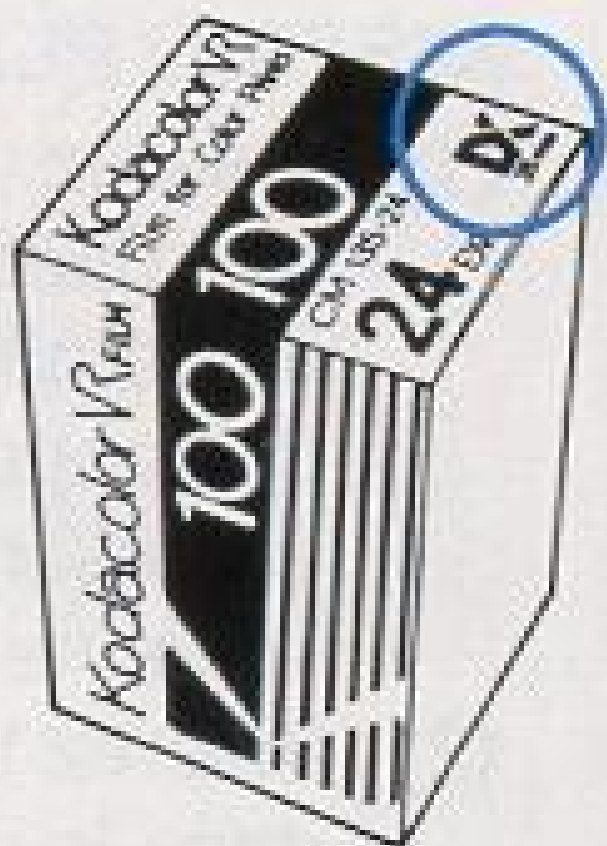

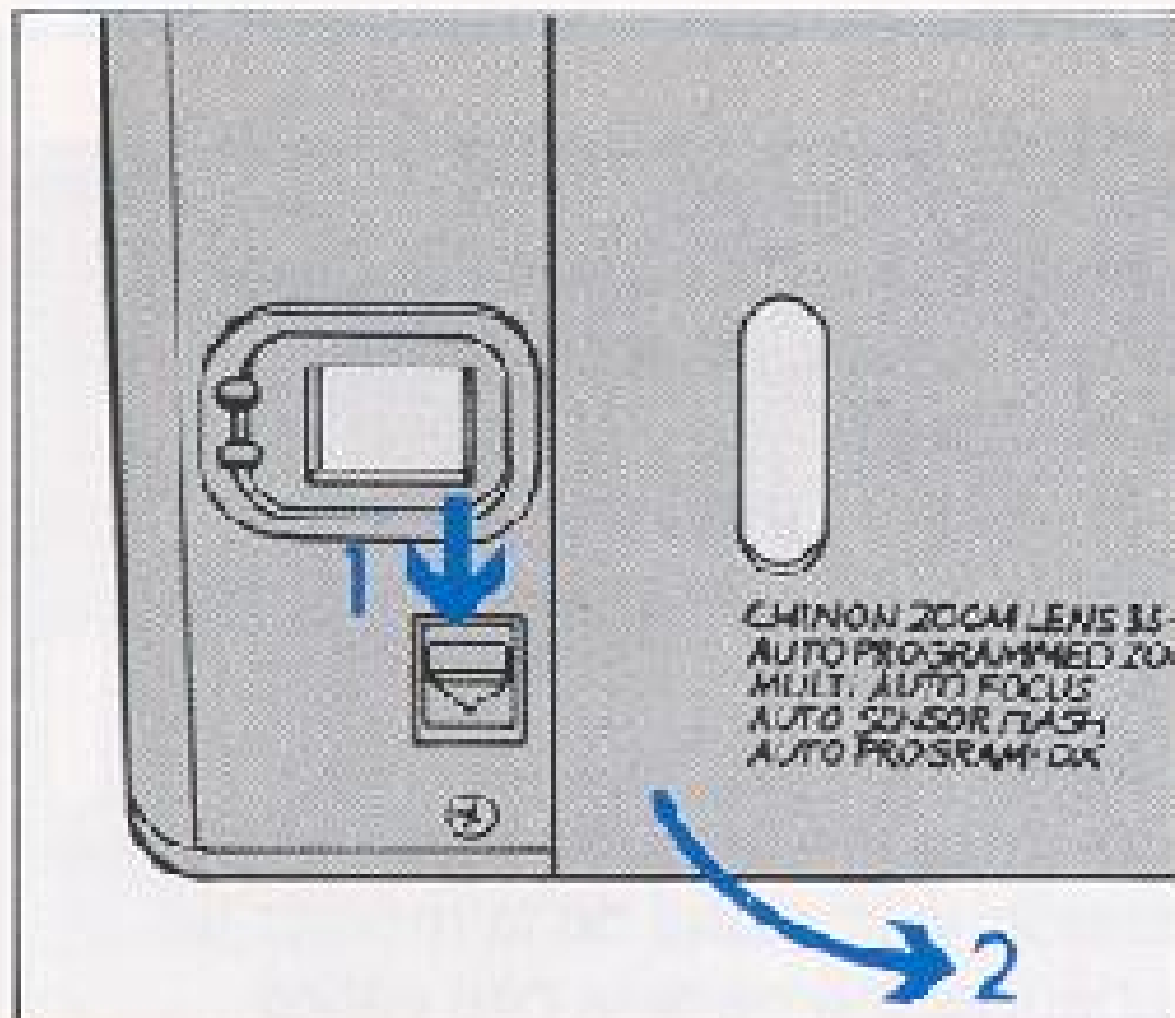


7

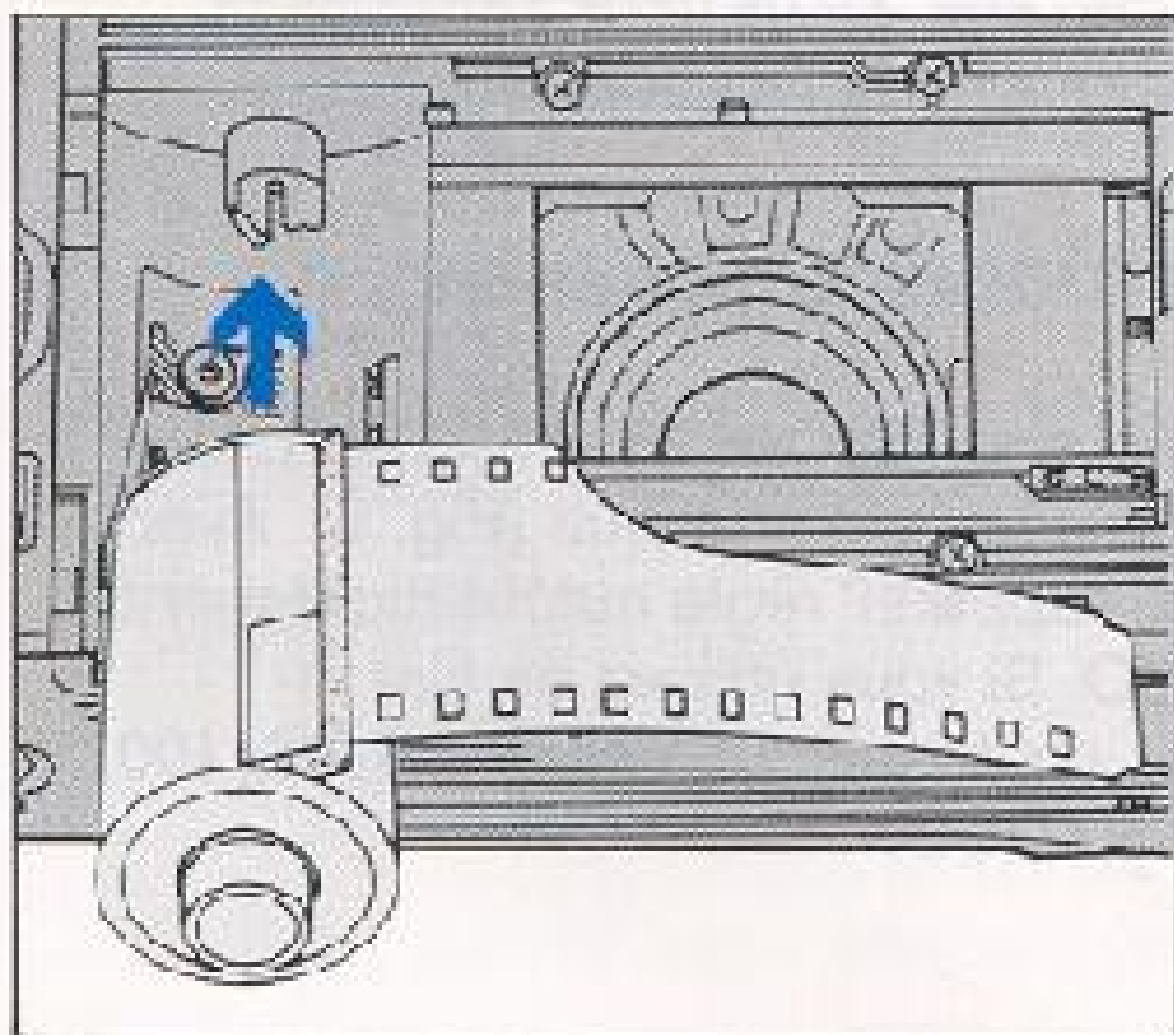 


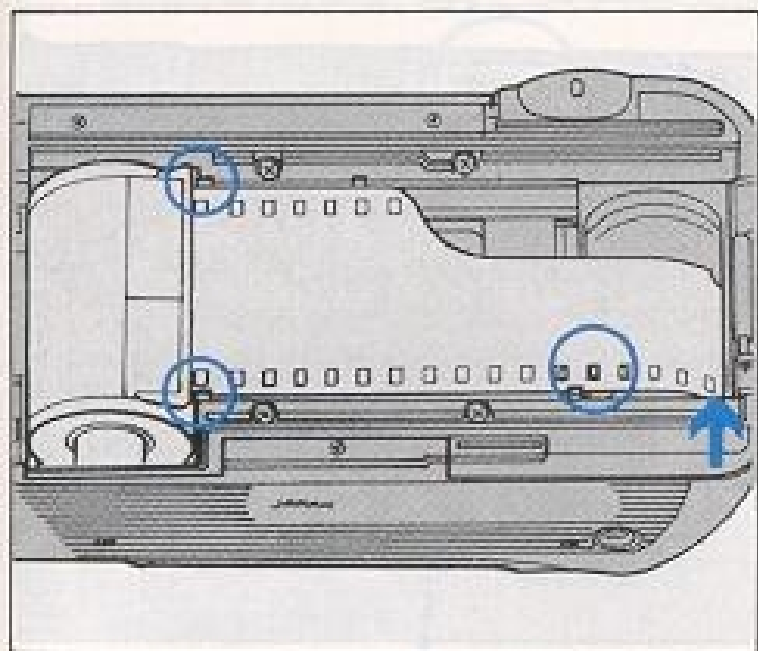 


C

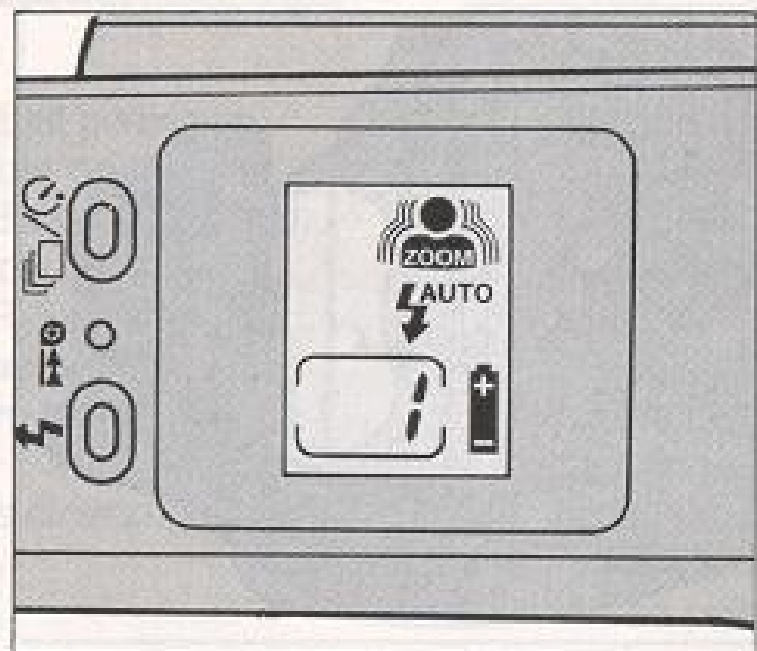 


D

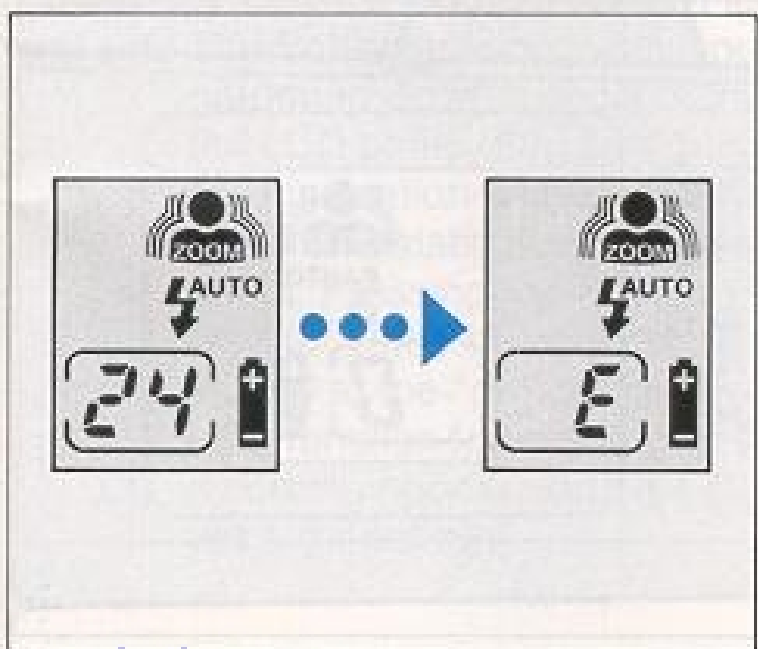 



G



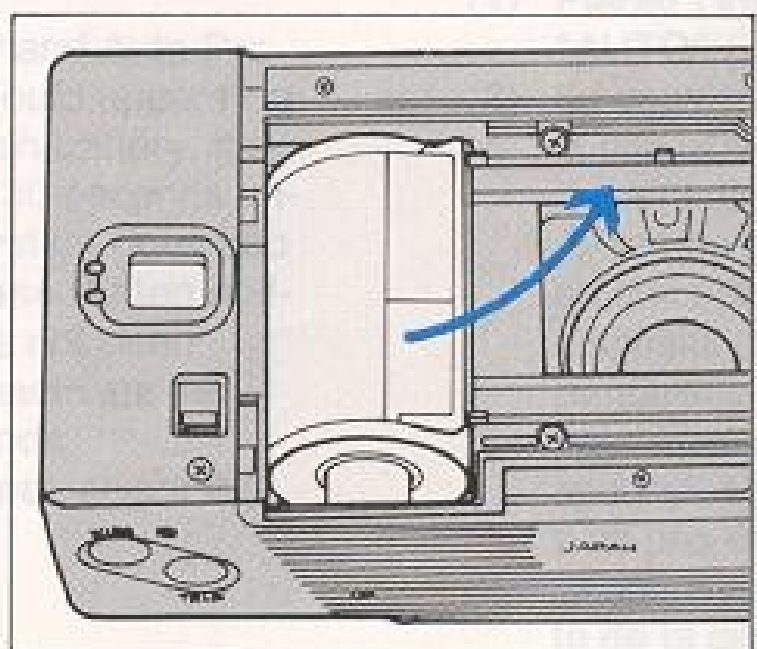 



H

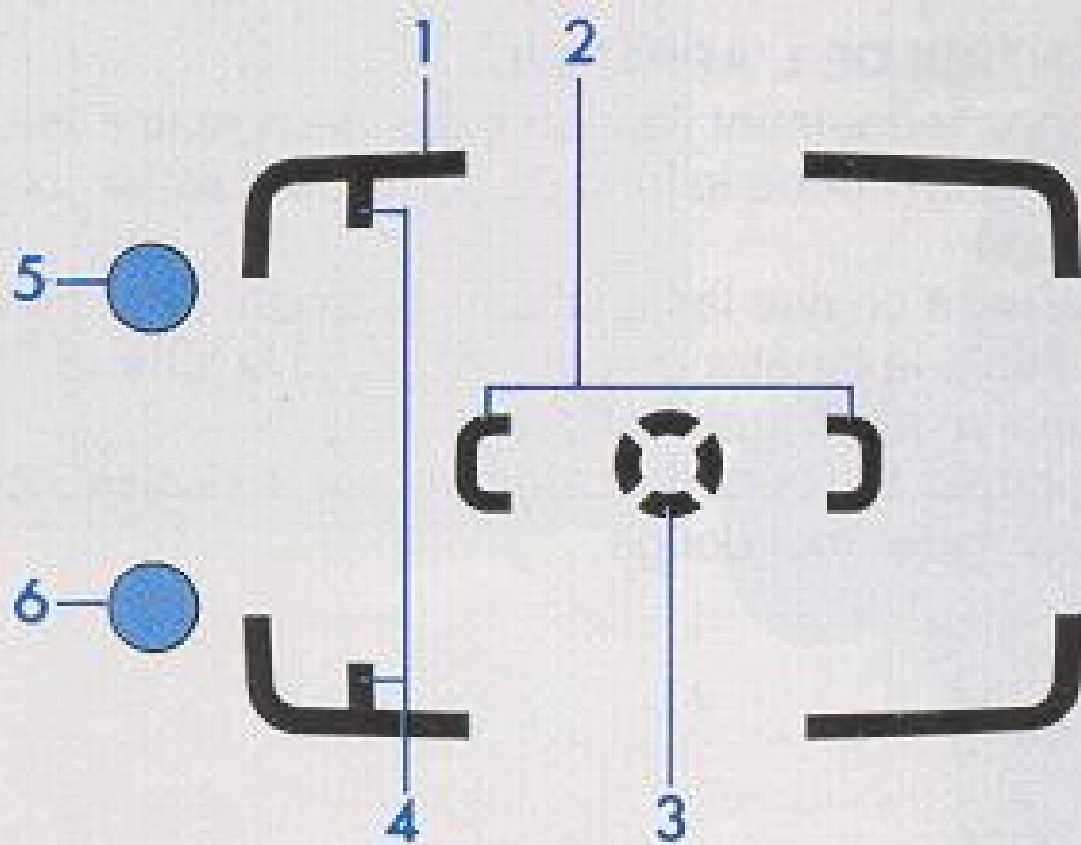 



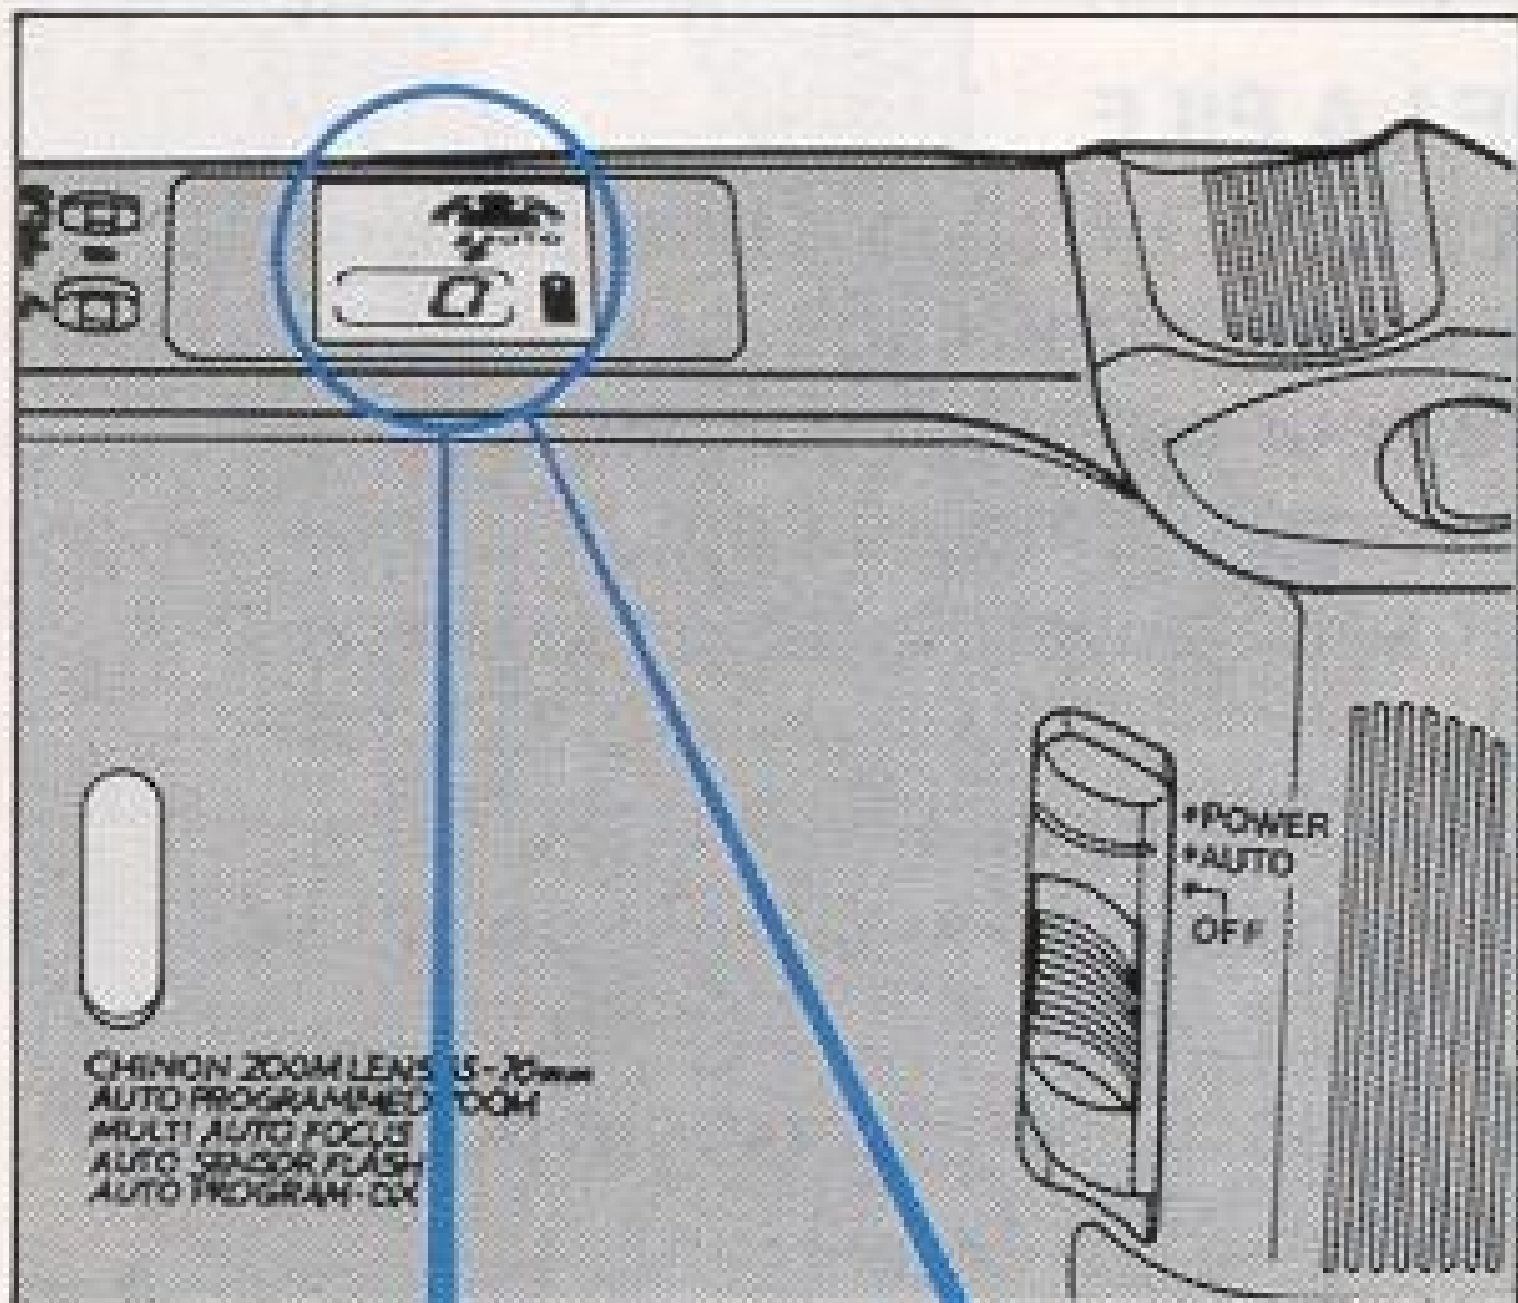 


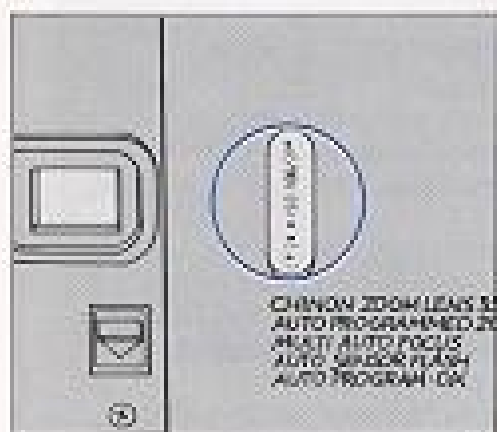 


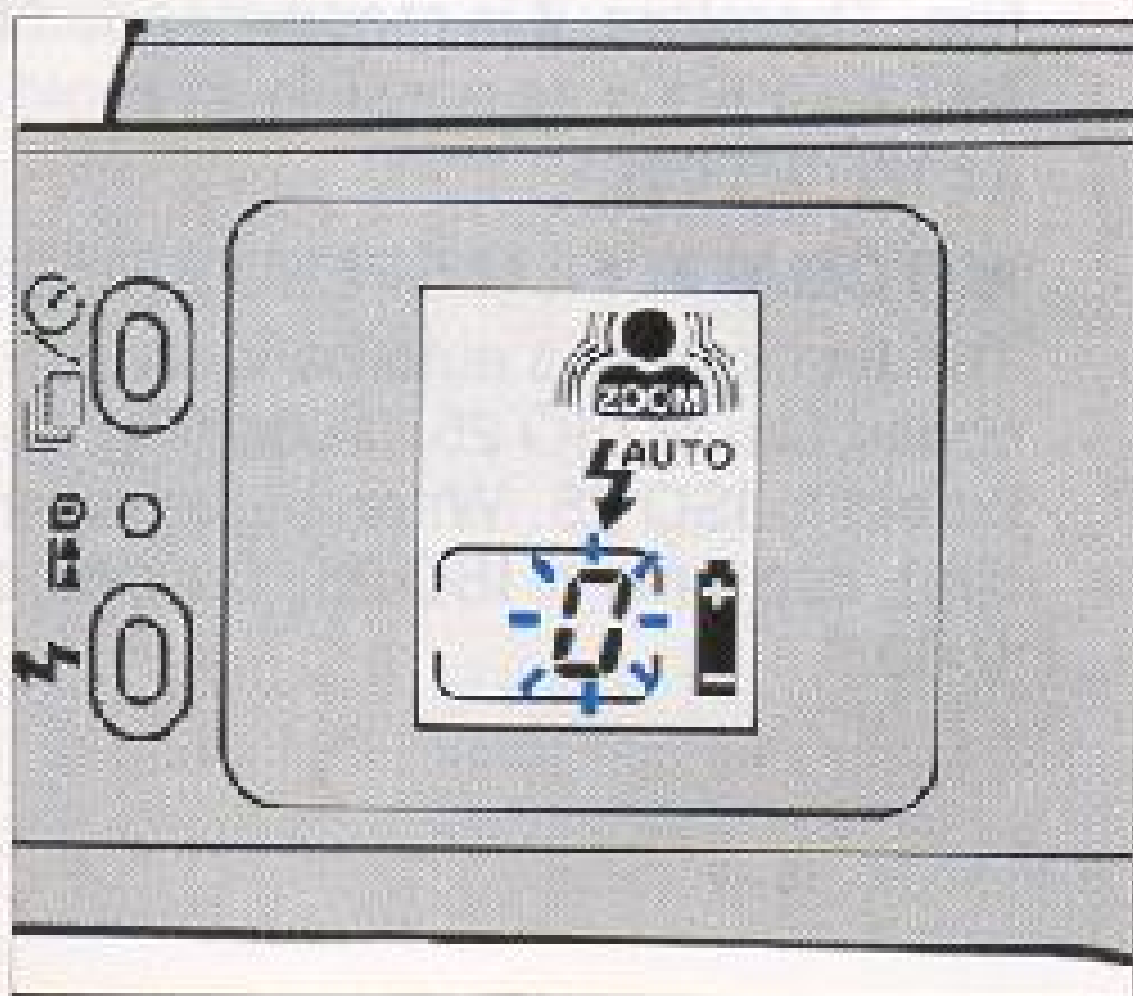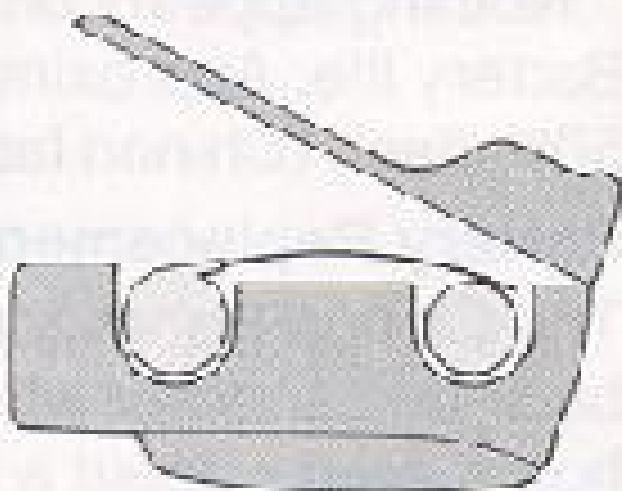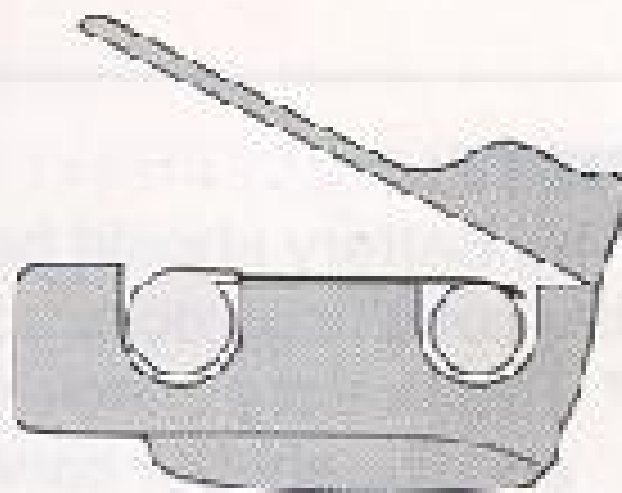   


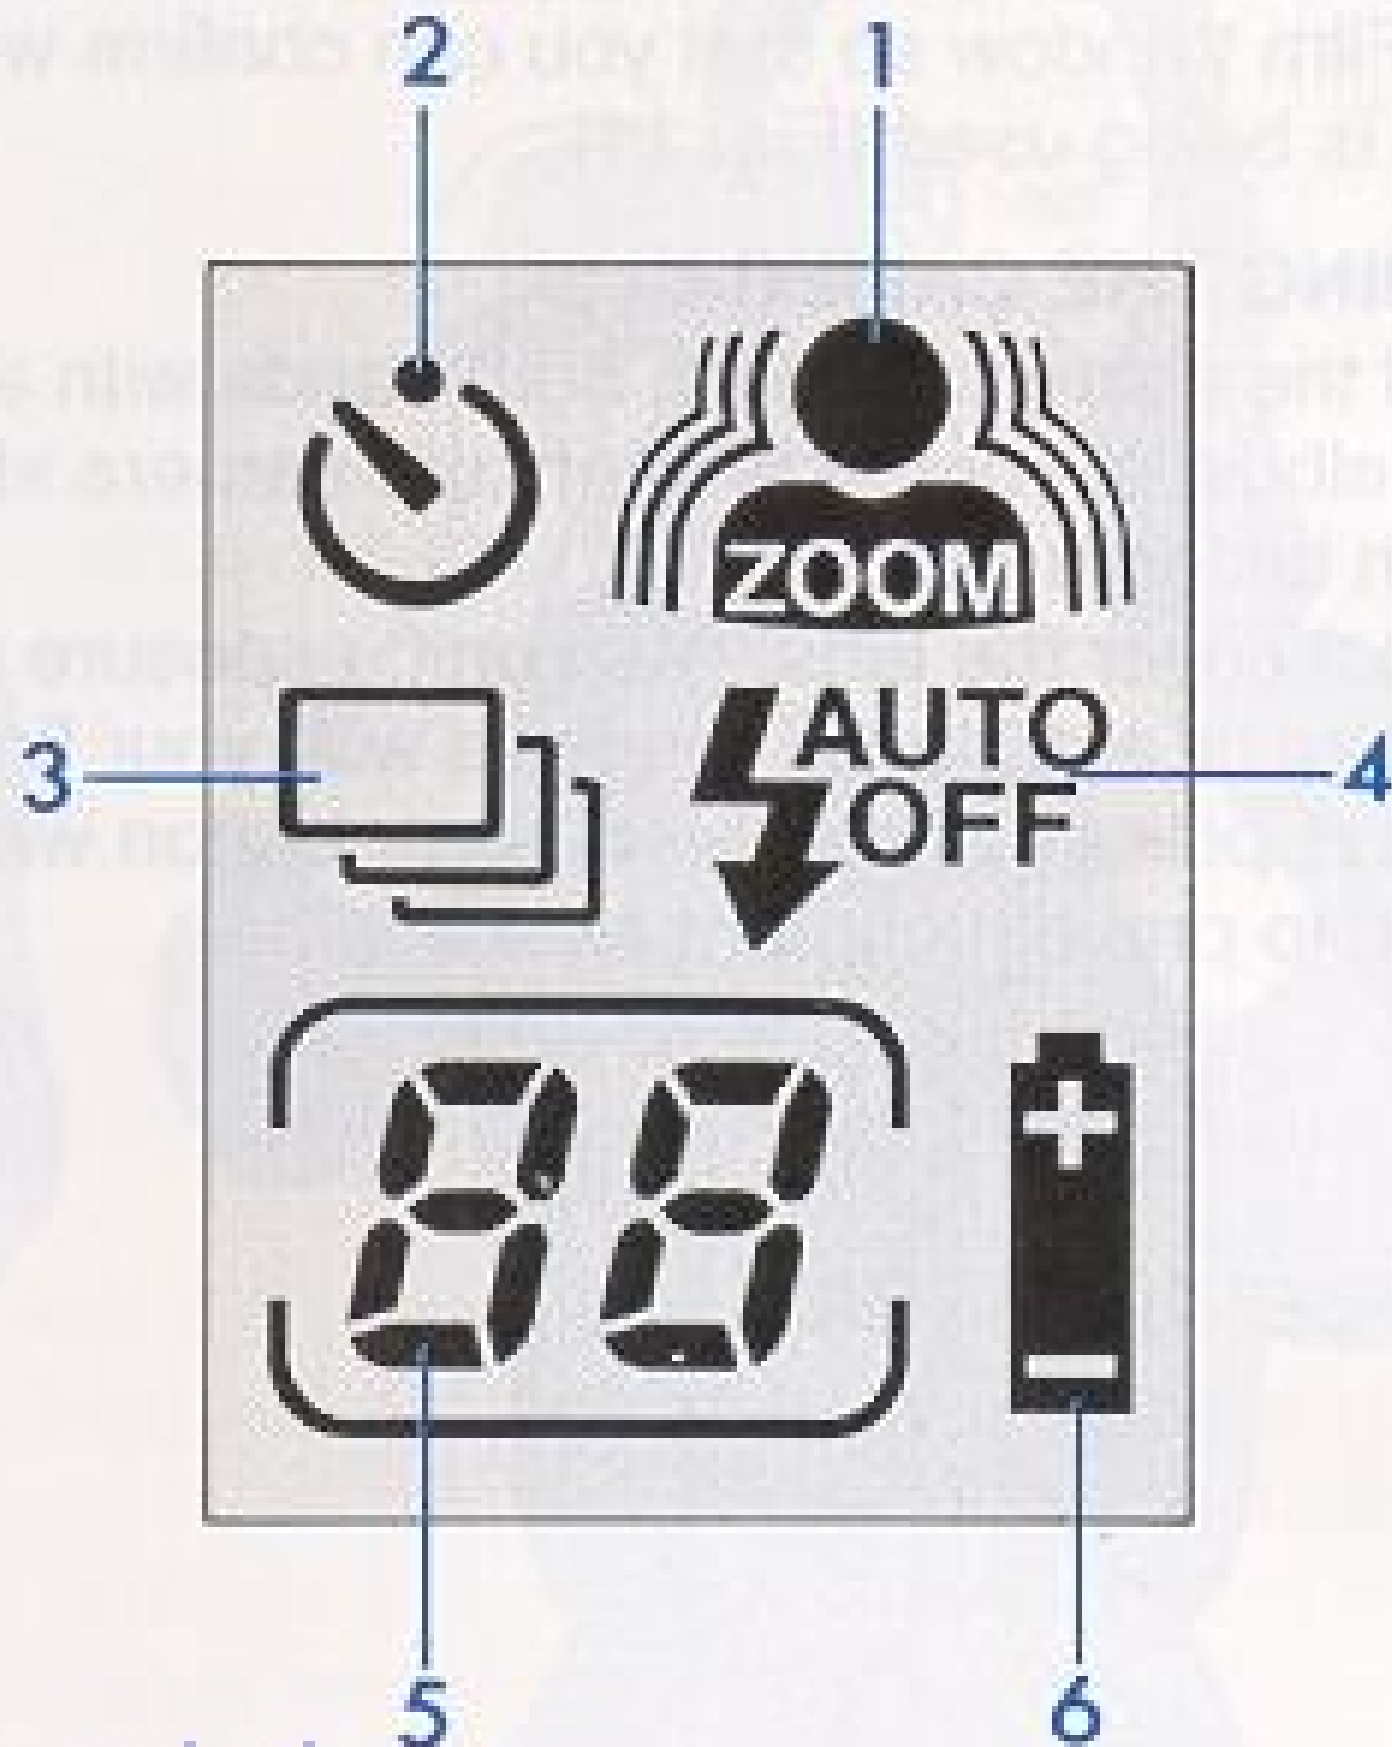      

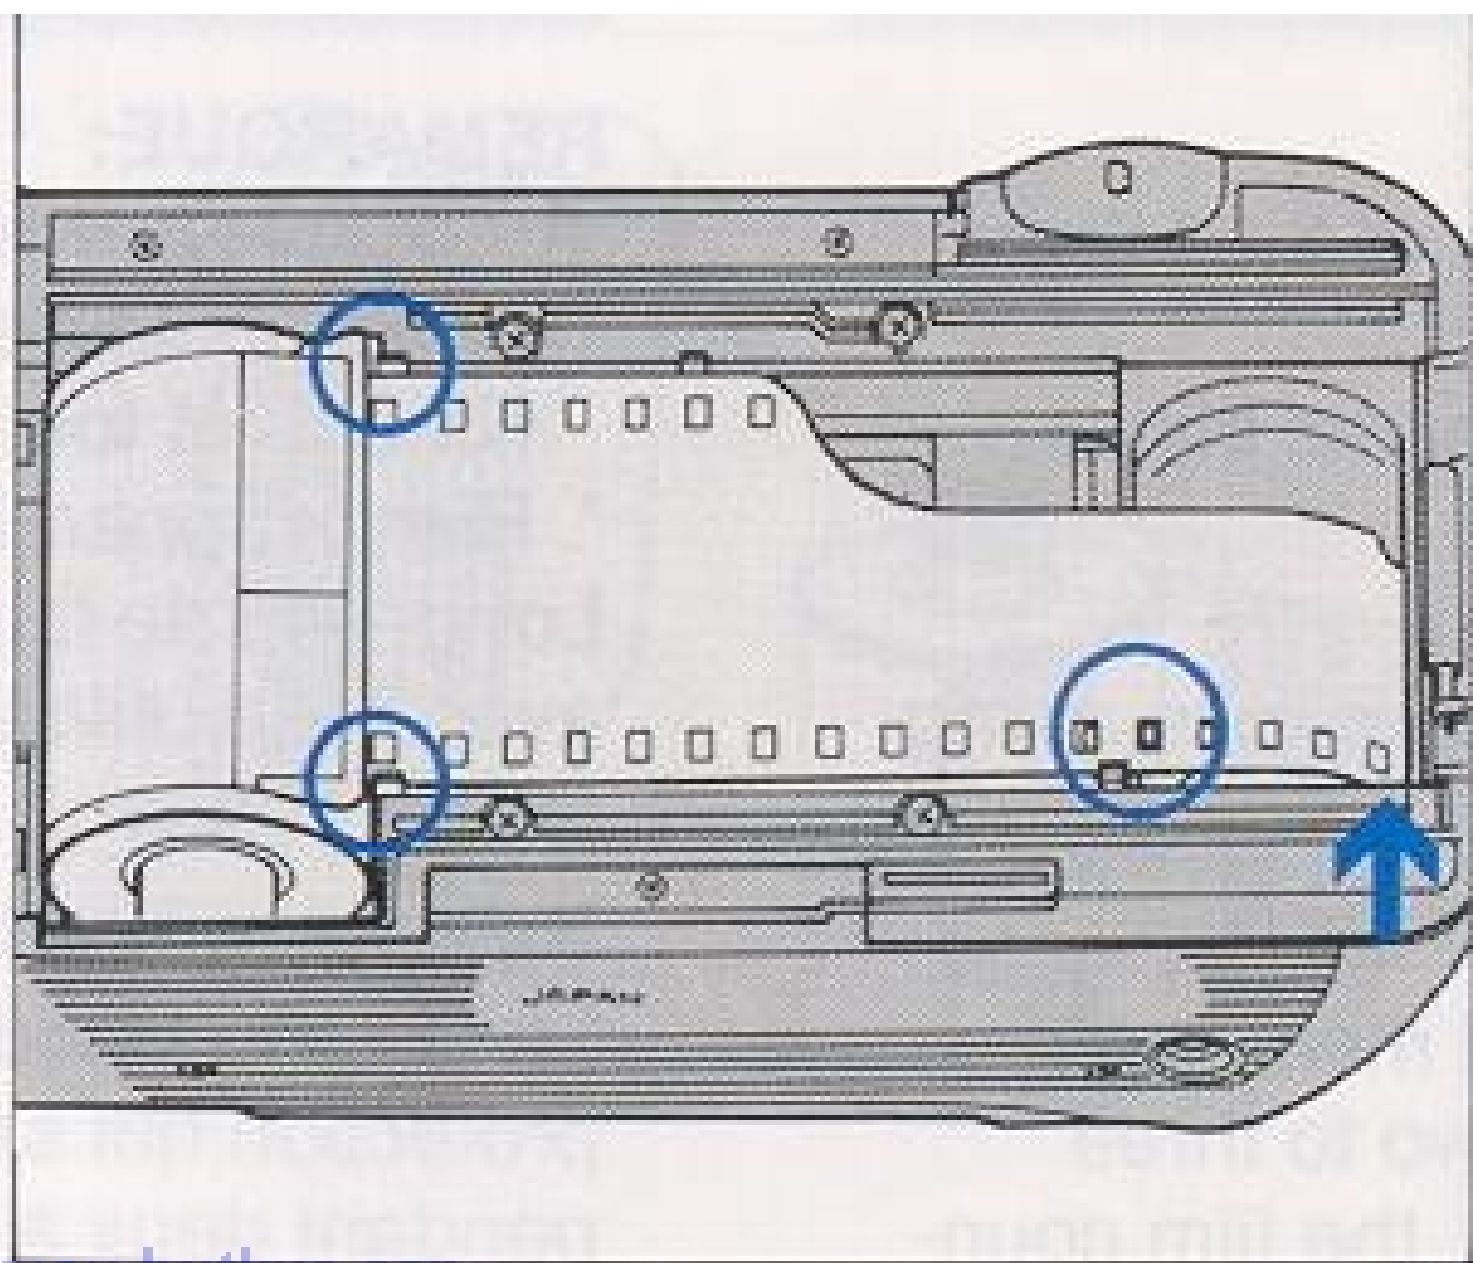


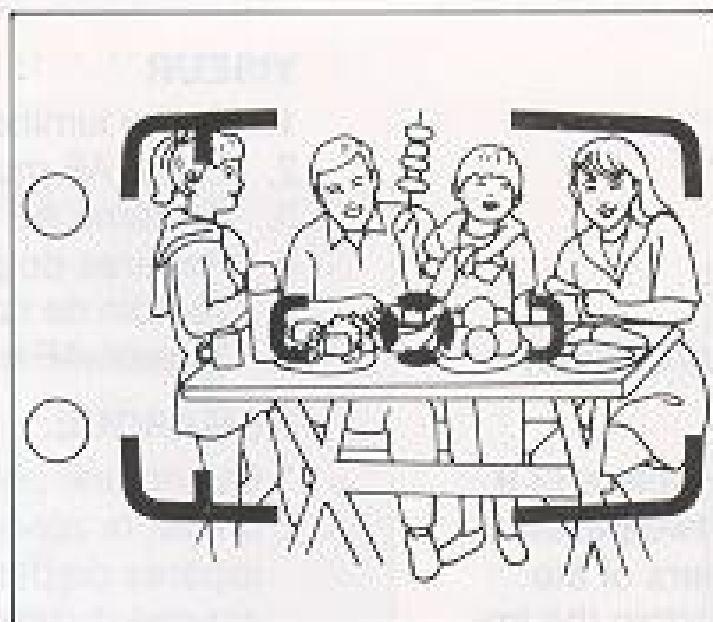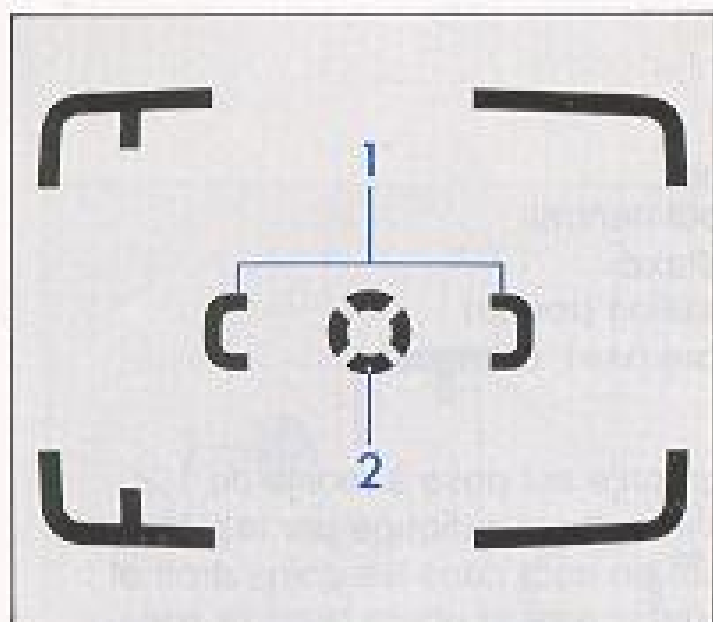

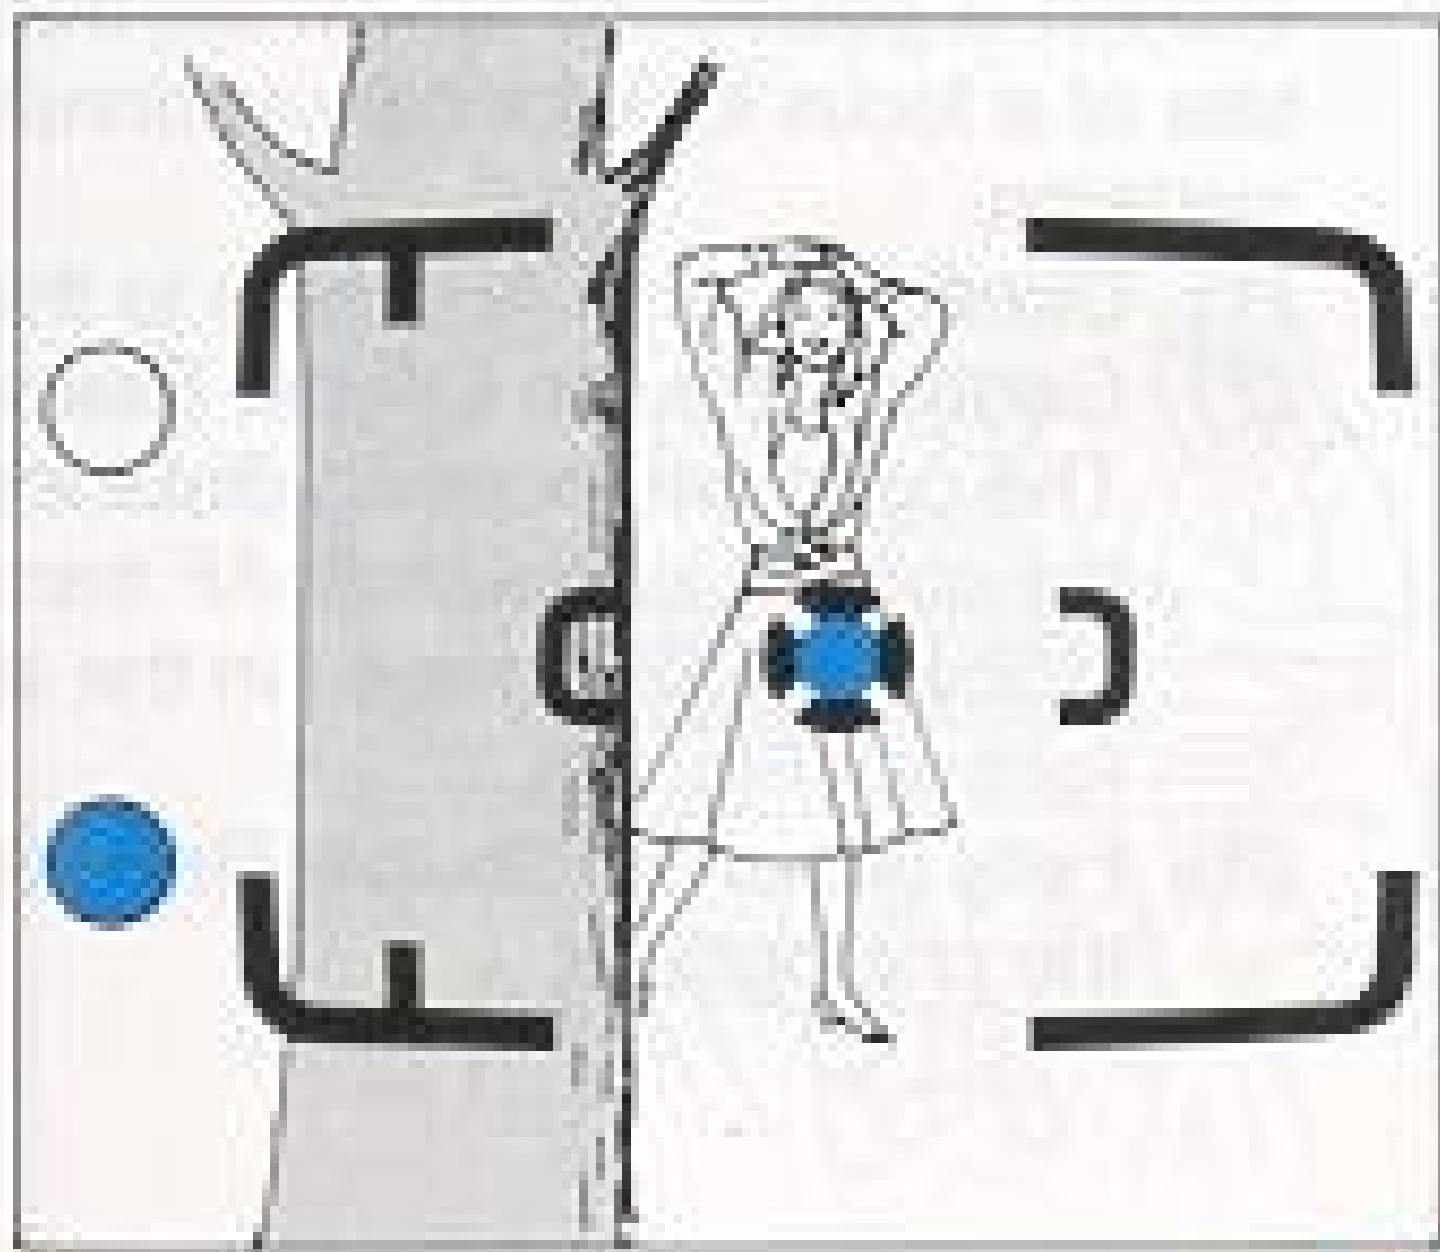

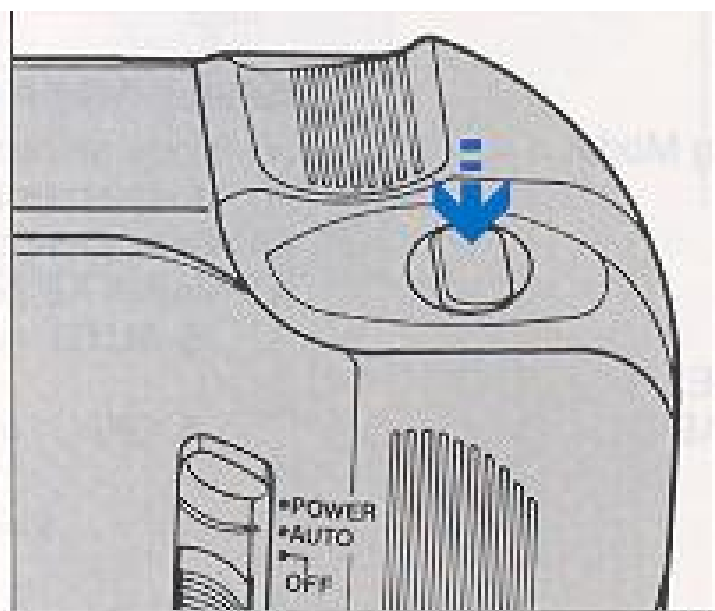

13

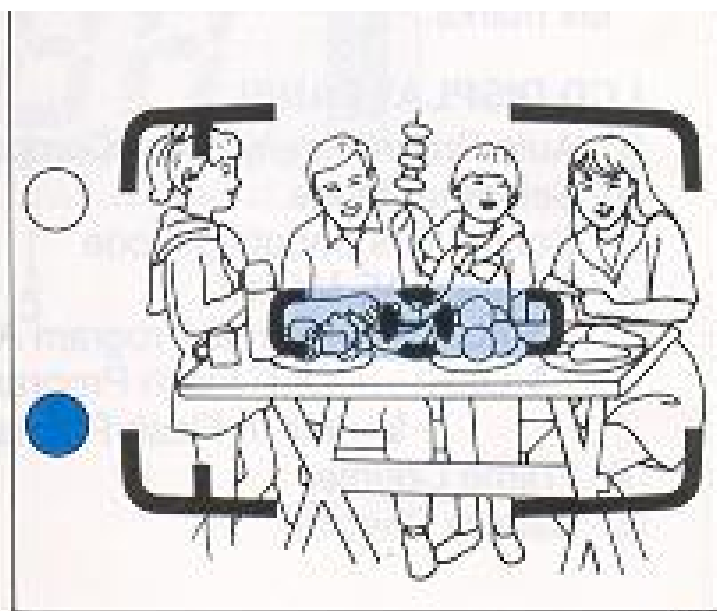 


WIDE




TELE



 
14

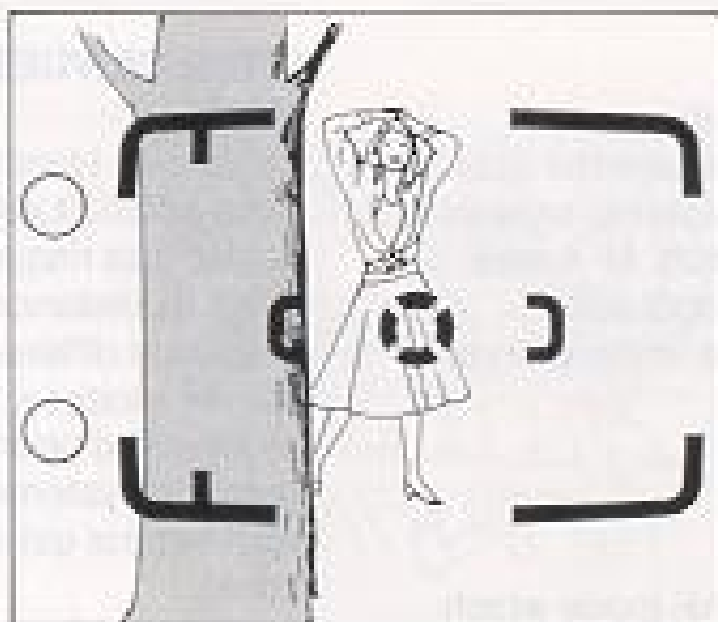

15

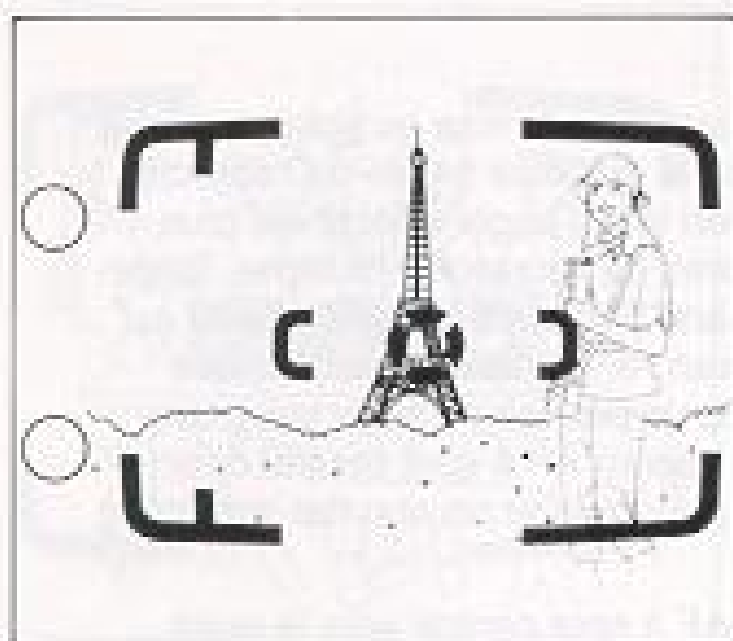 

17

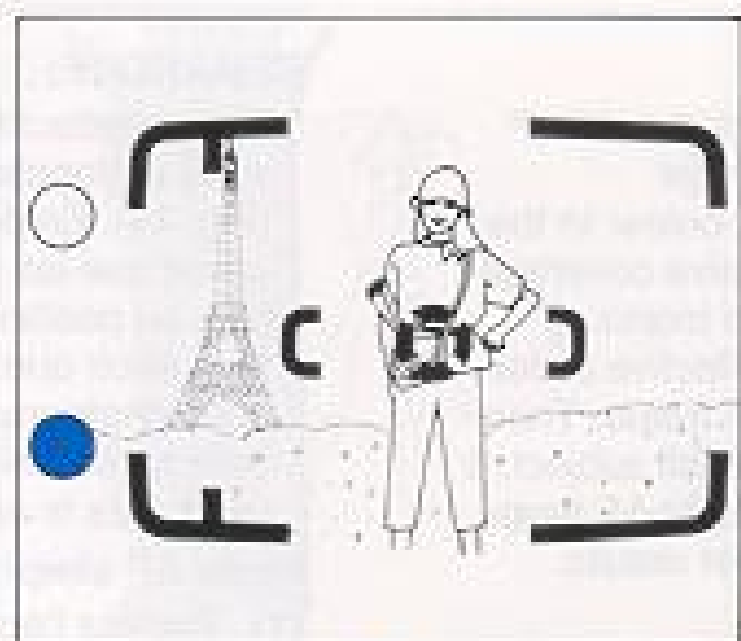 

18





TELE

 


14




www.batkus.org

15

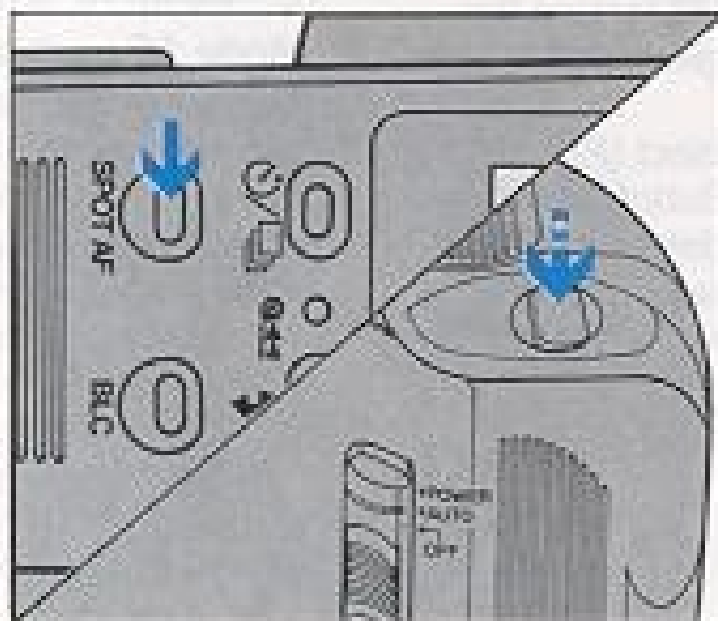



16



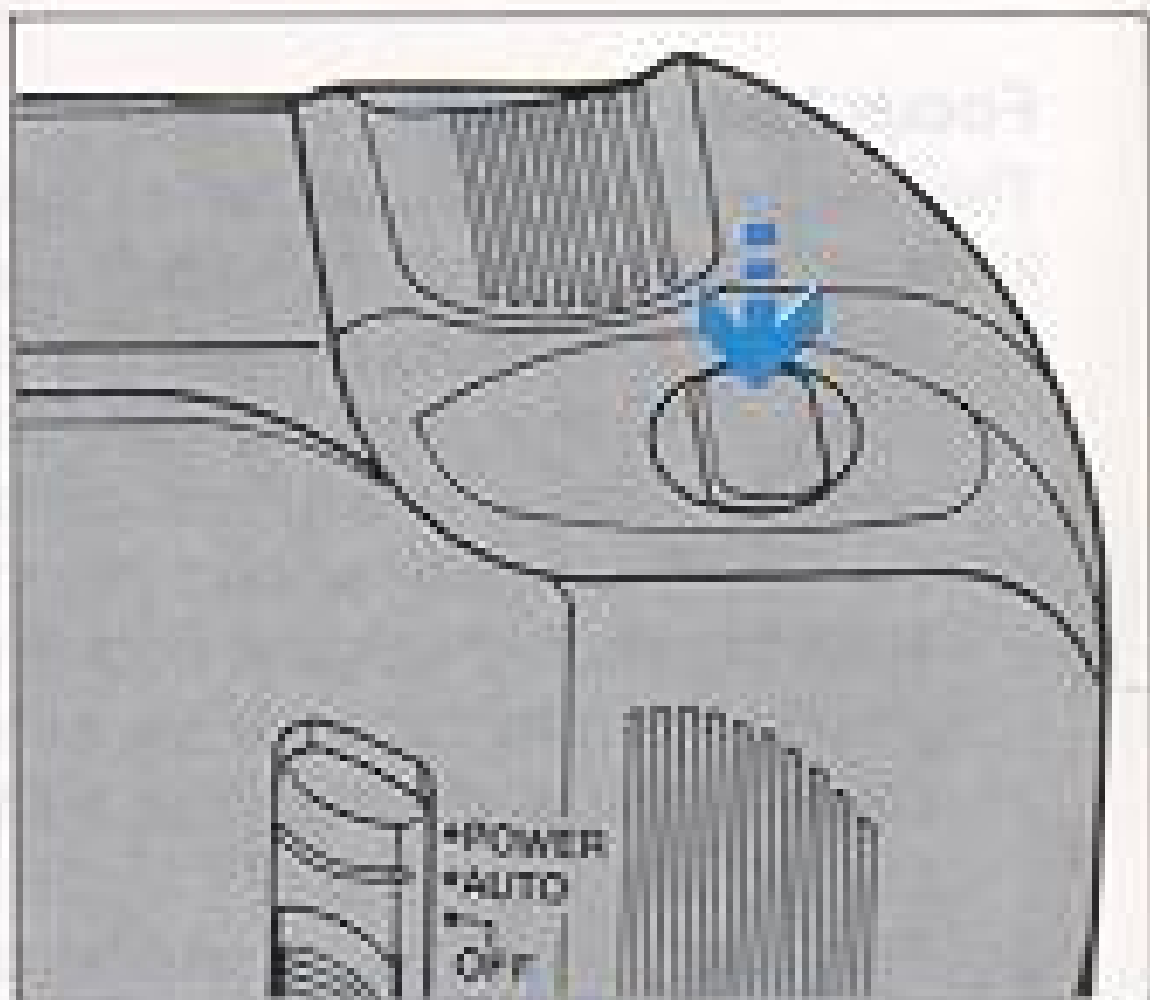 


22

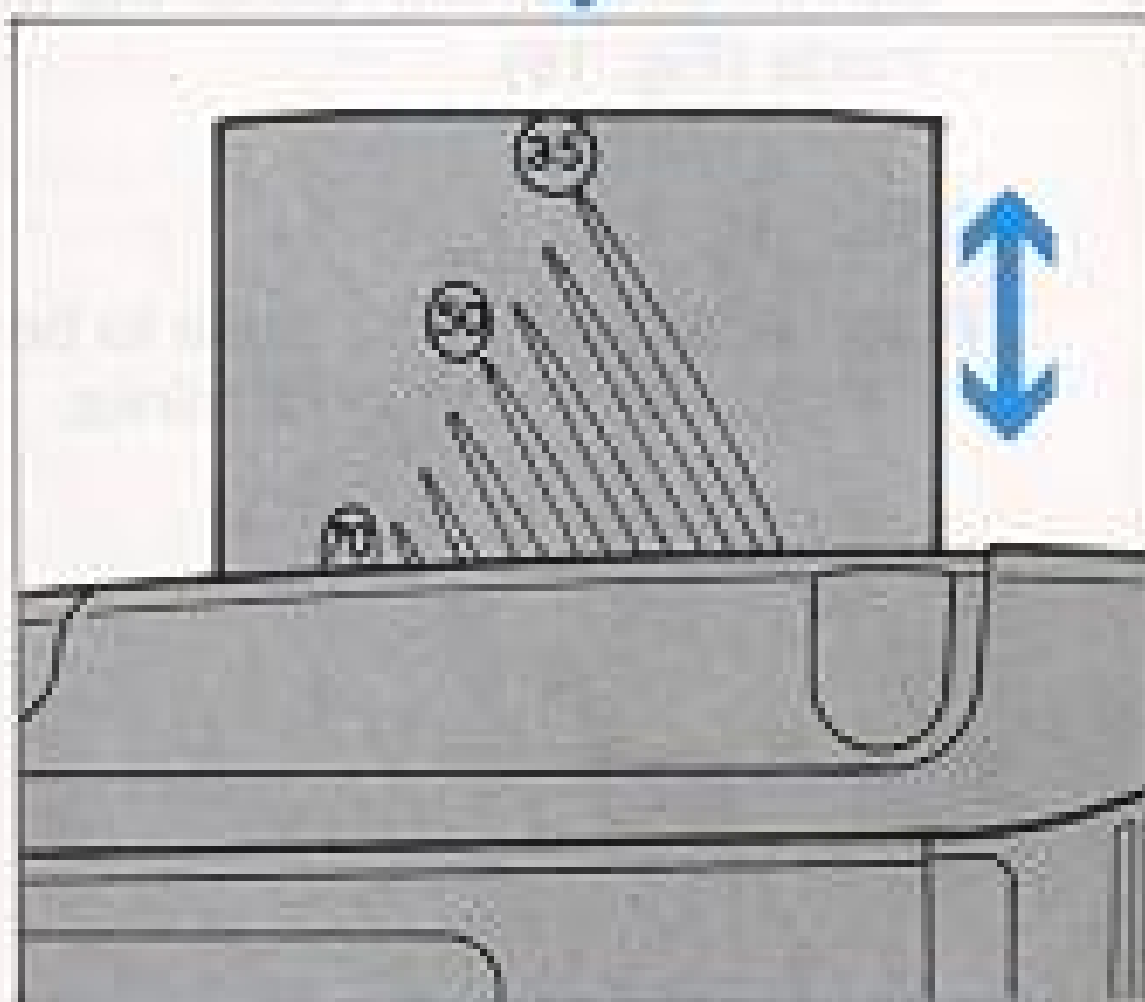 

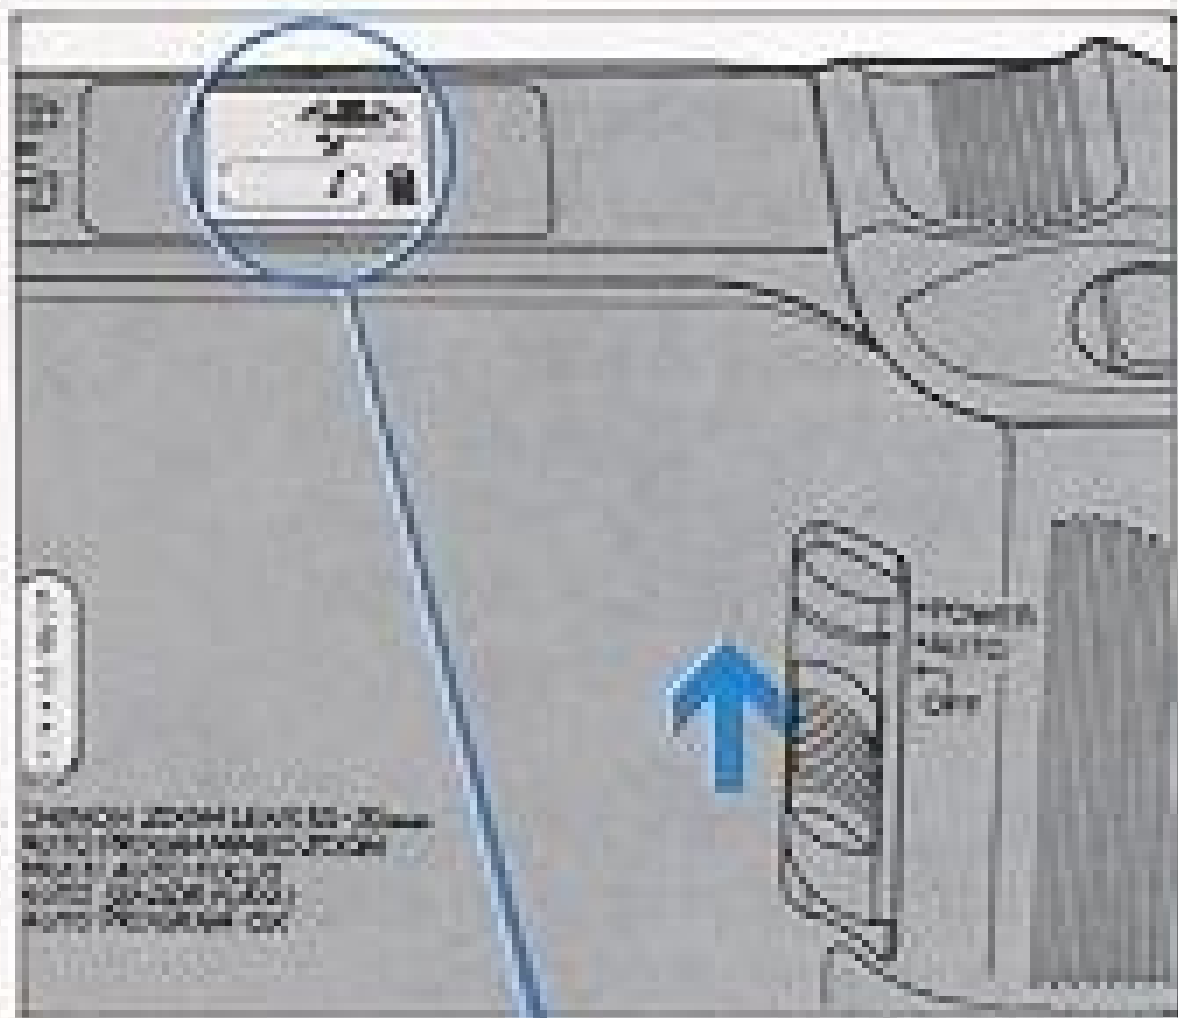 



20



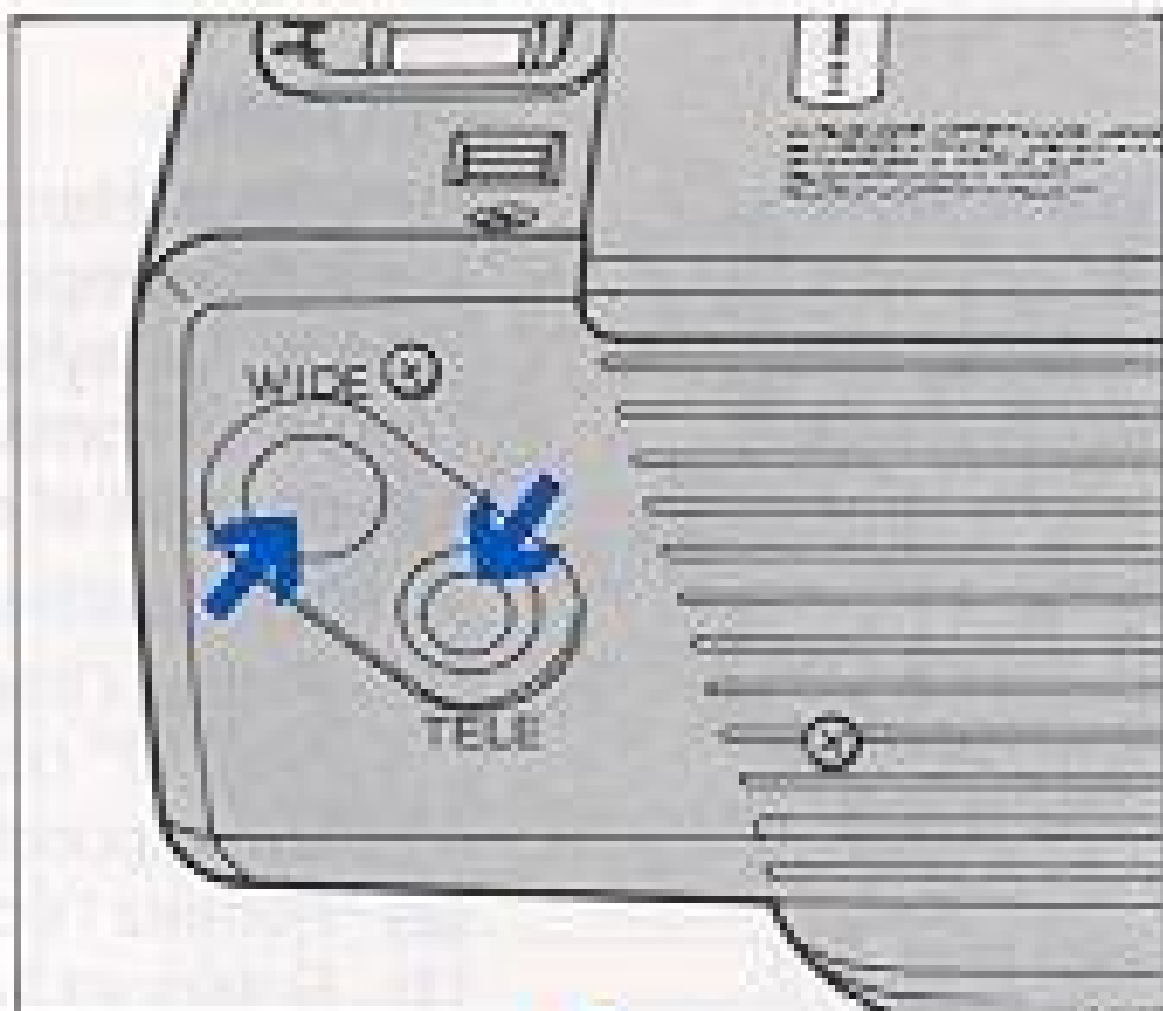 


24


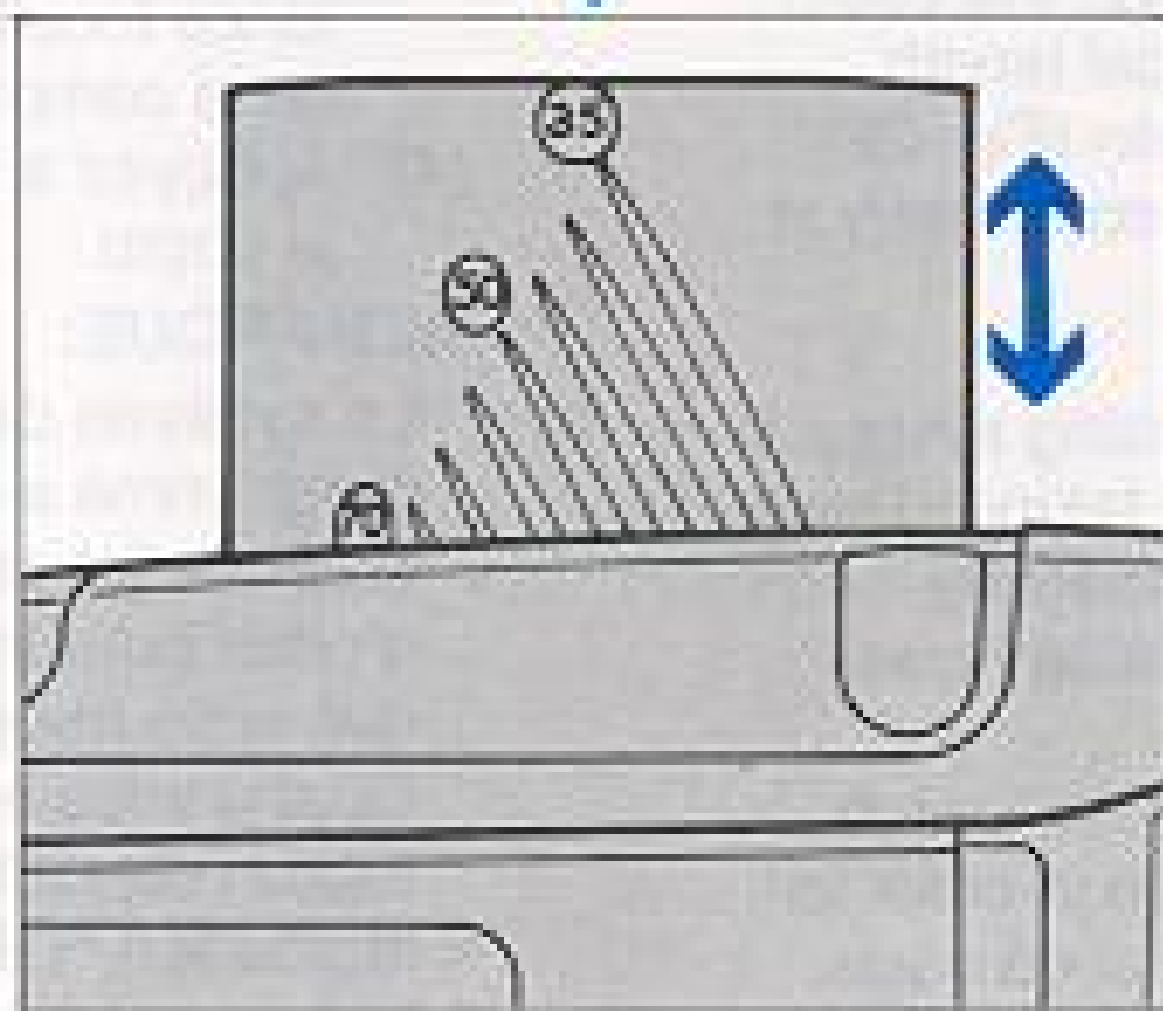 


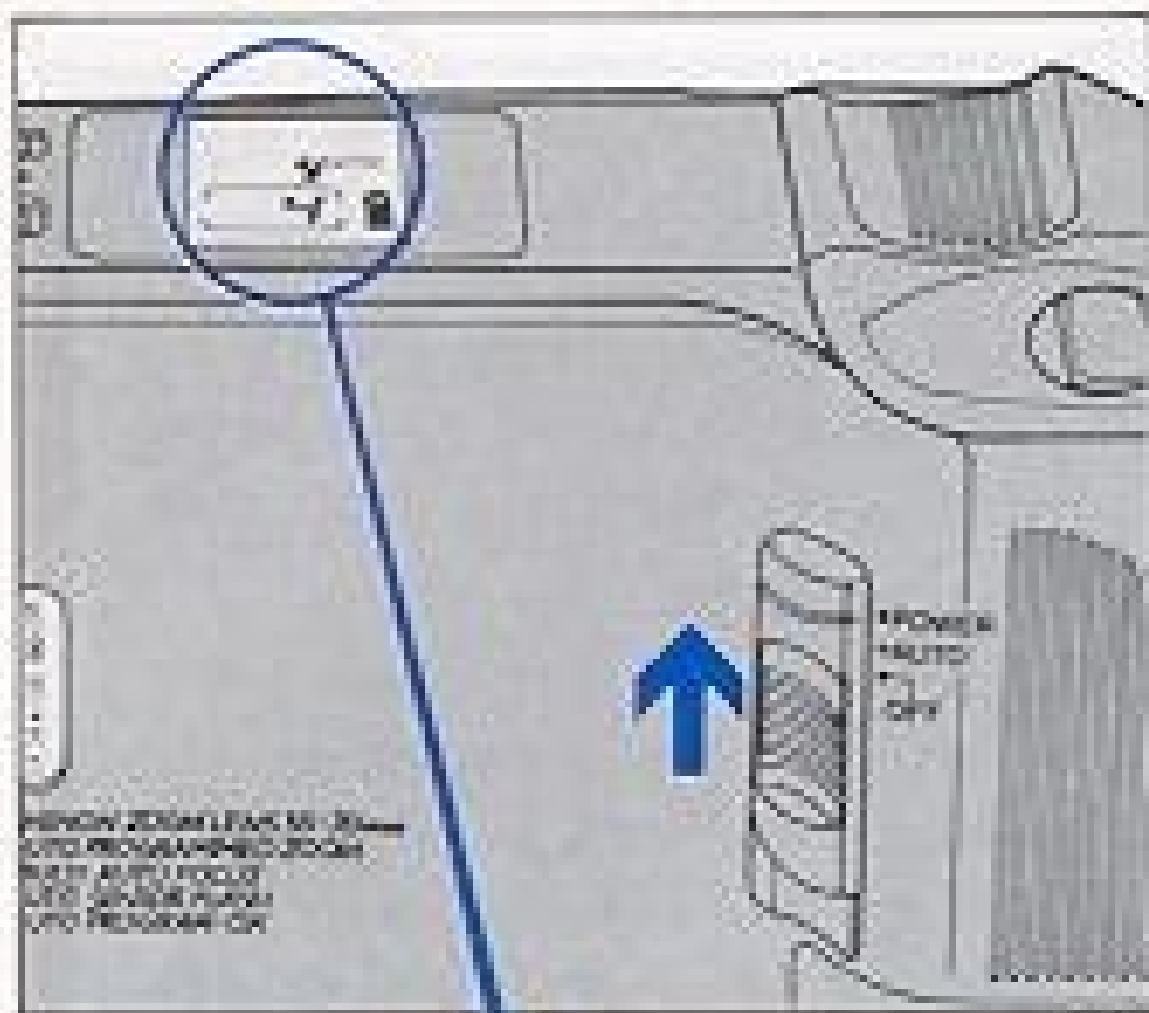 


23



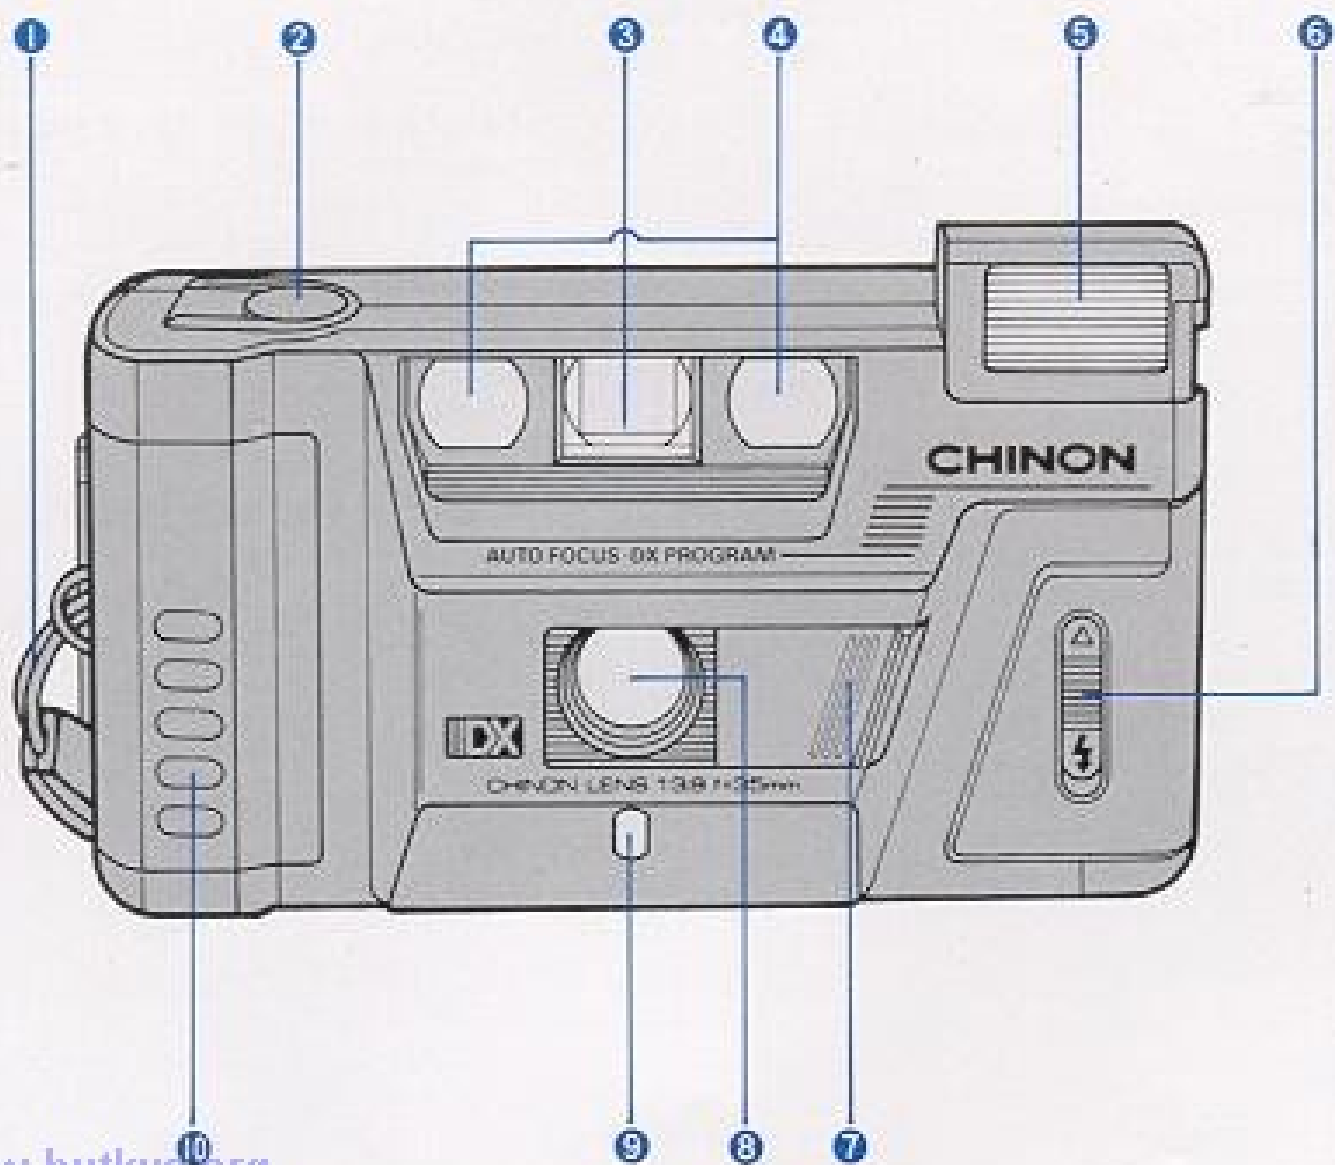 


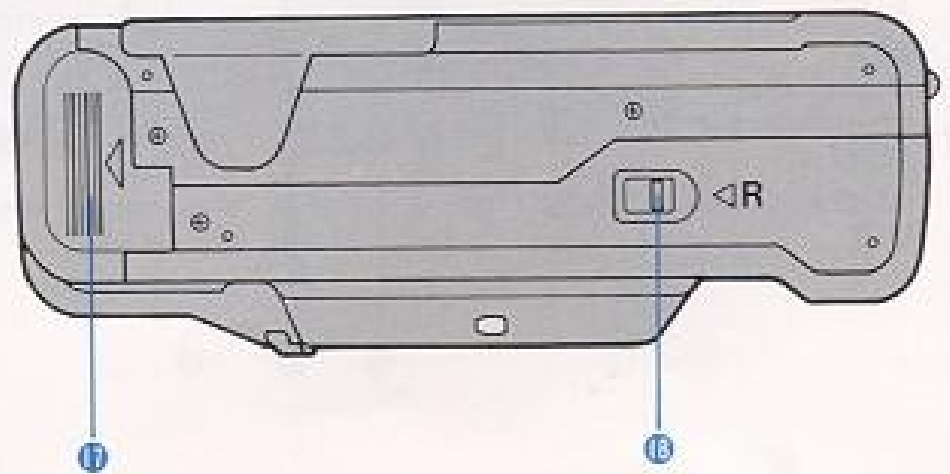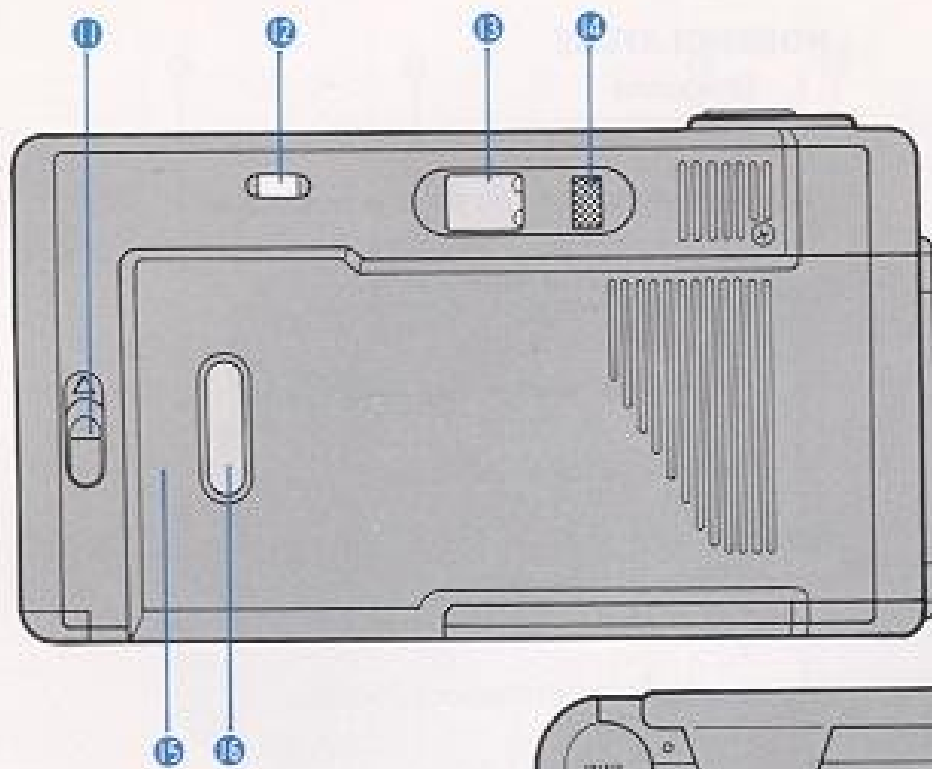  

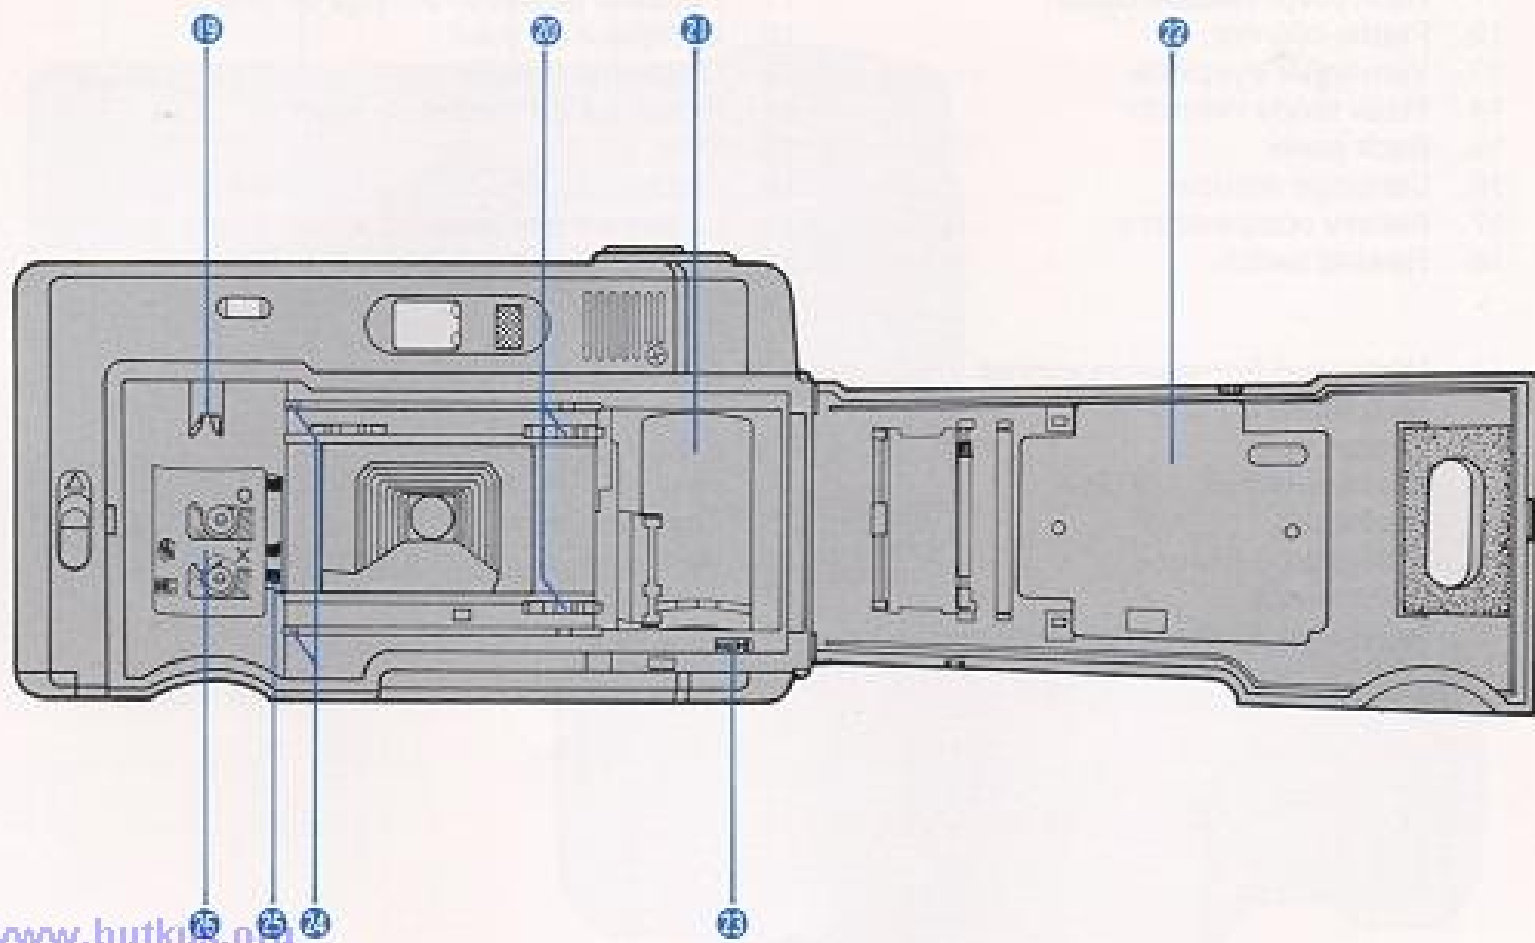 





E

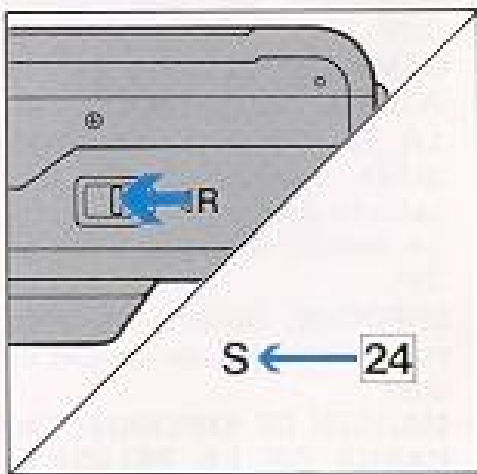 

F

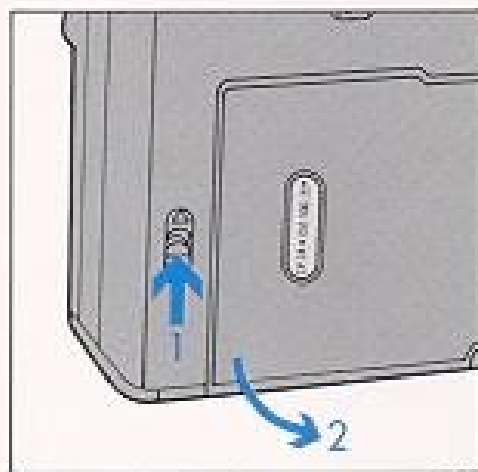 


G

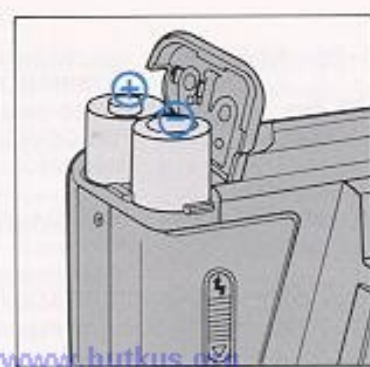 

A




 
B

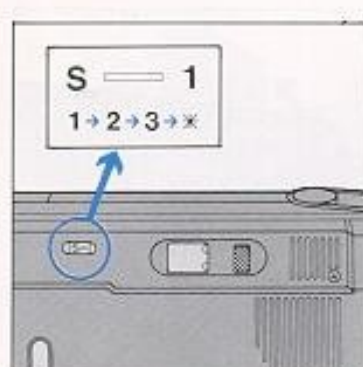

C




  D

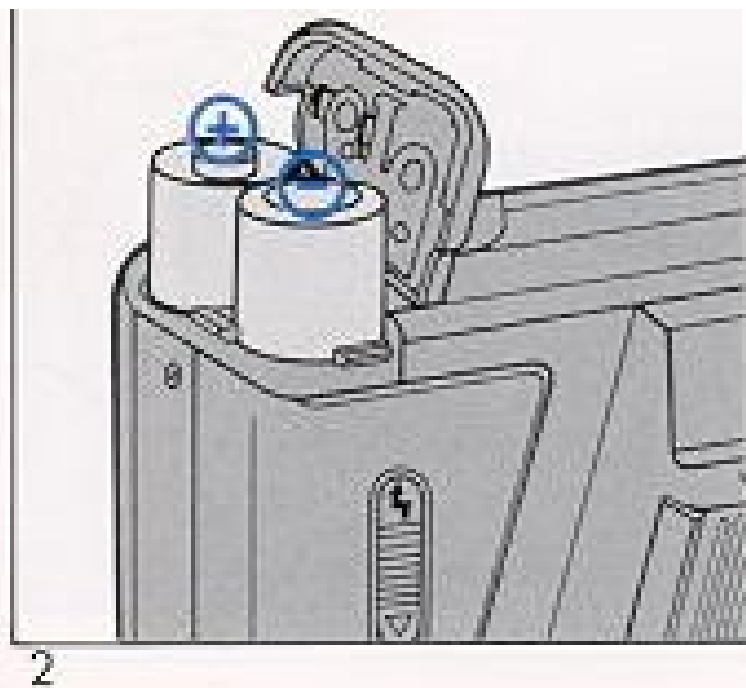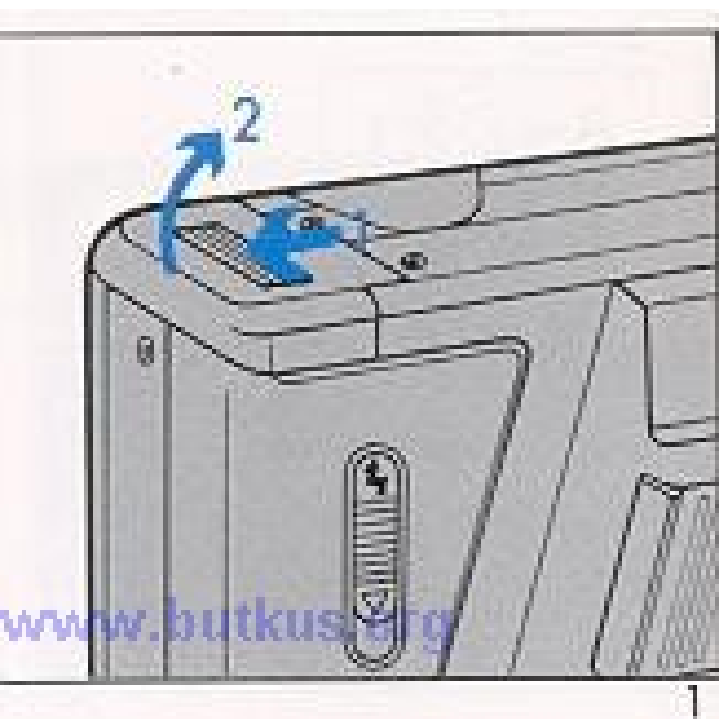




3

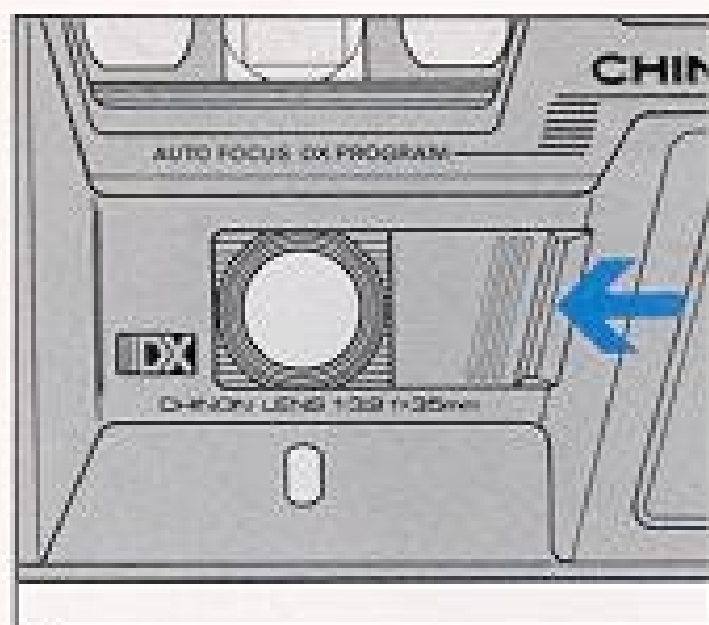 



4




 5

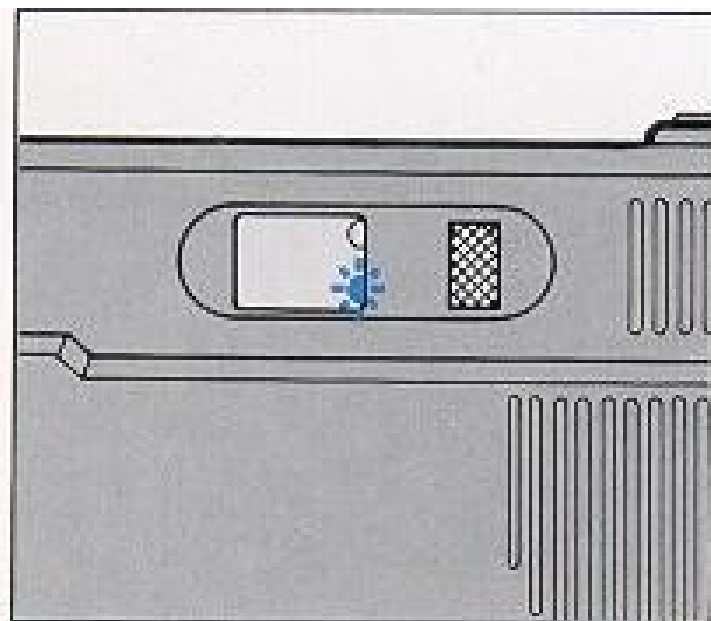


6

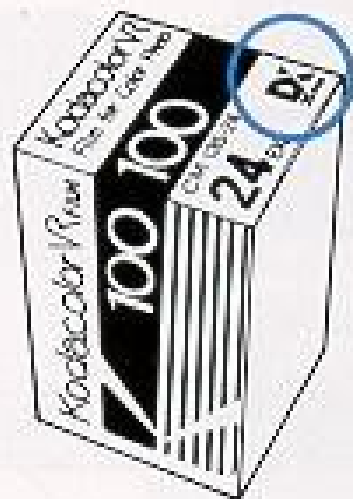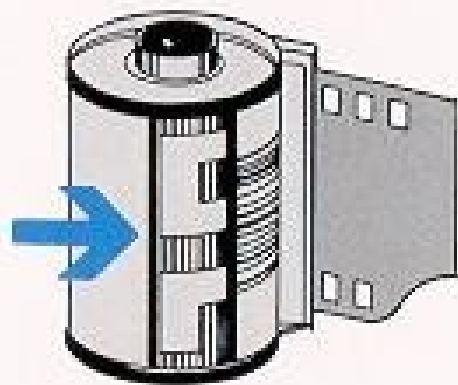  

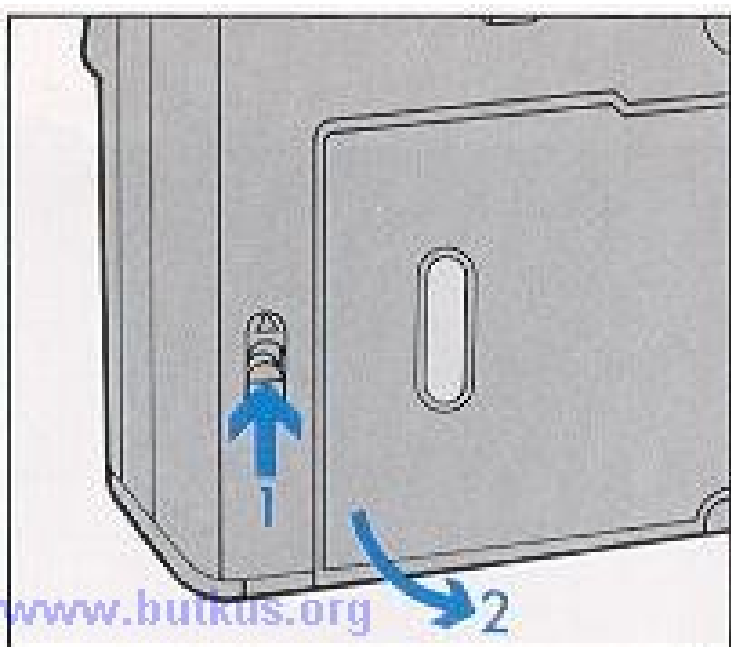 

8

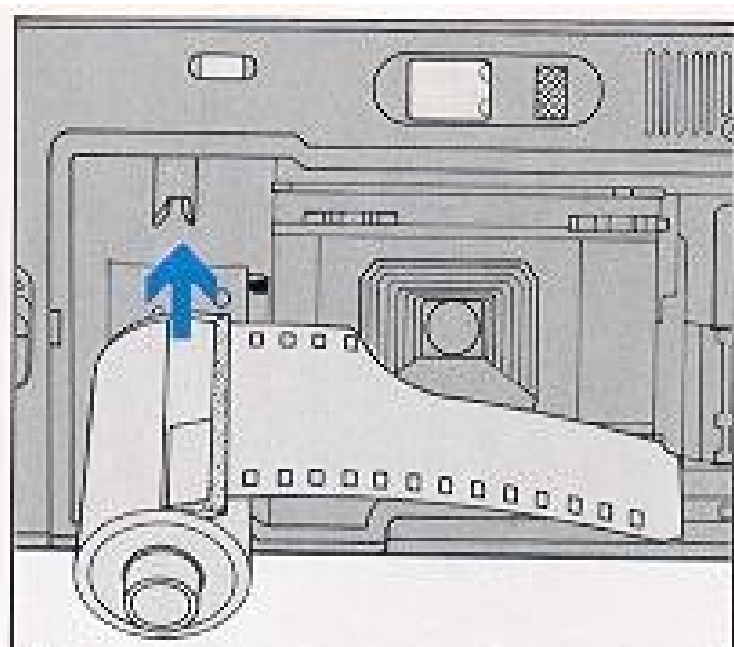 

9