 
 
 


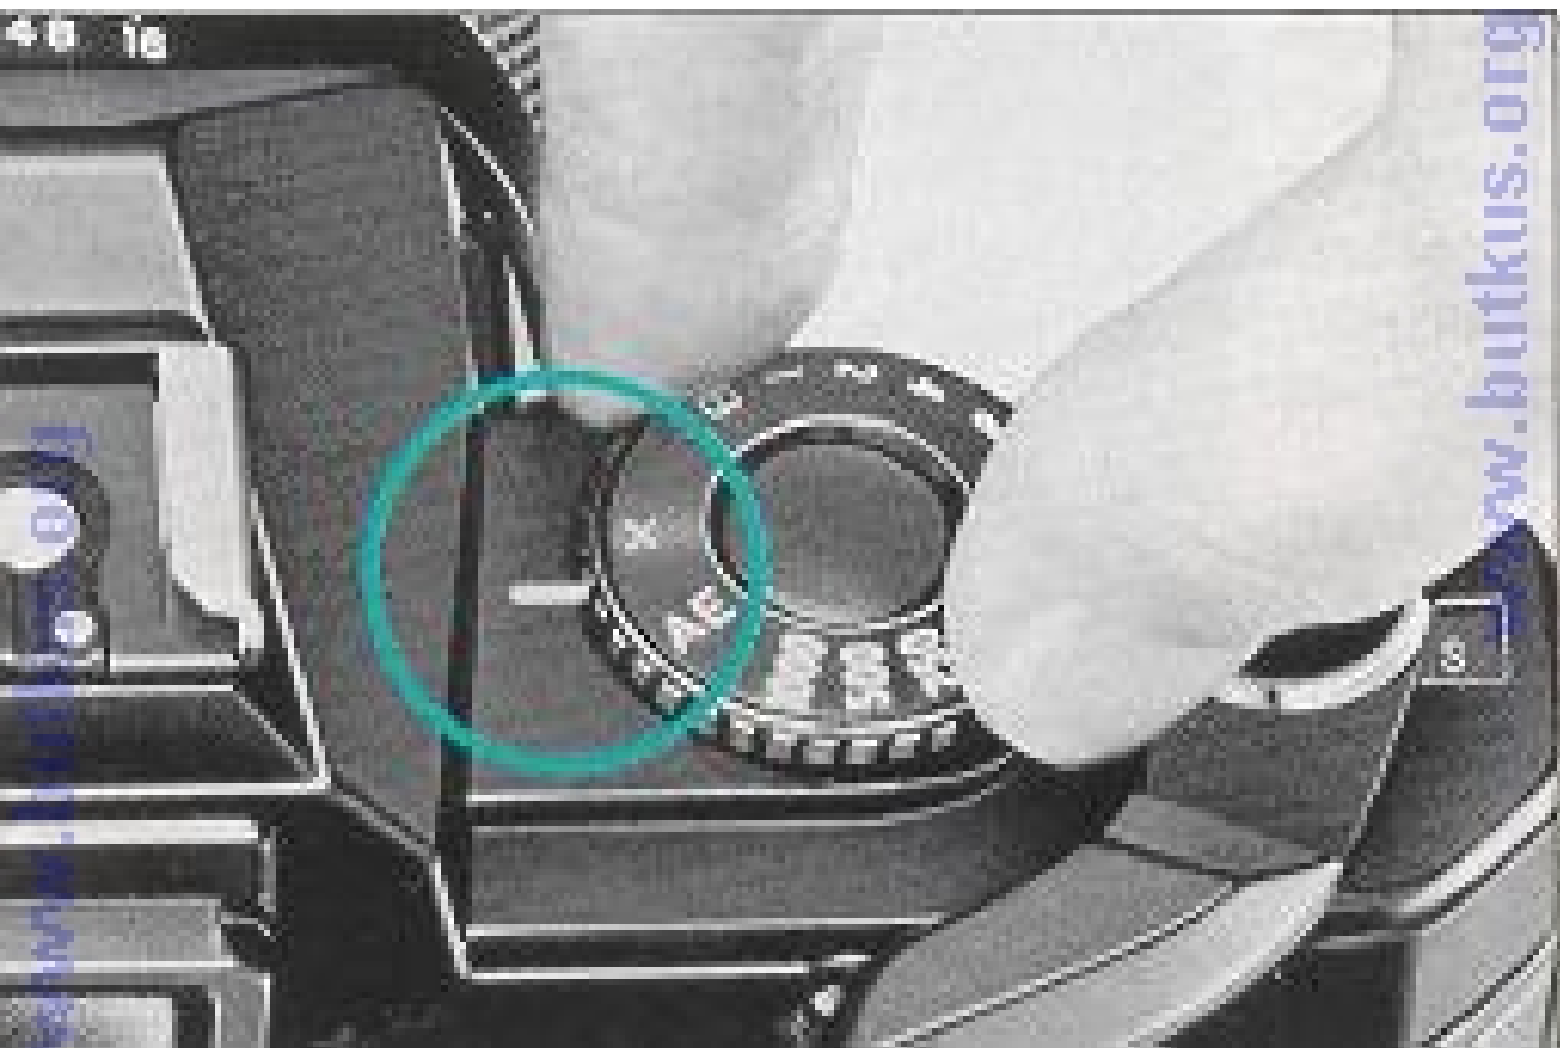

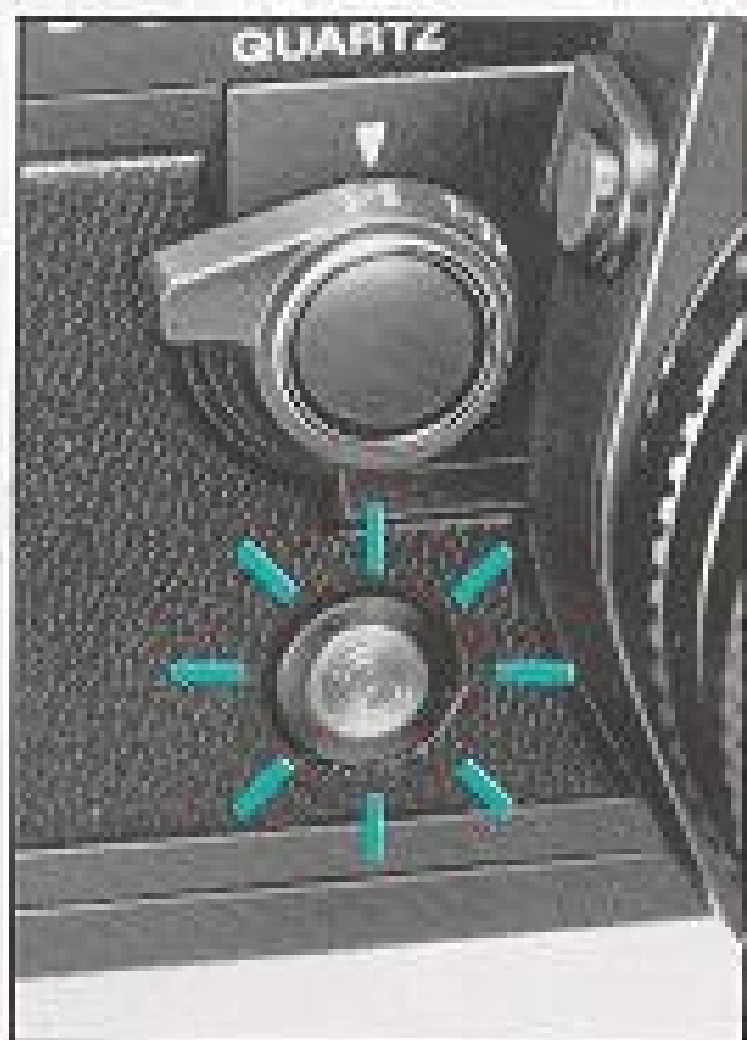

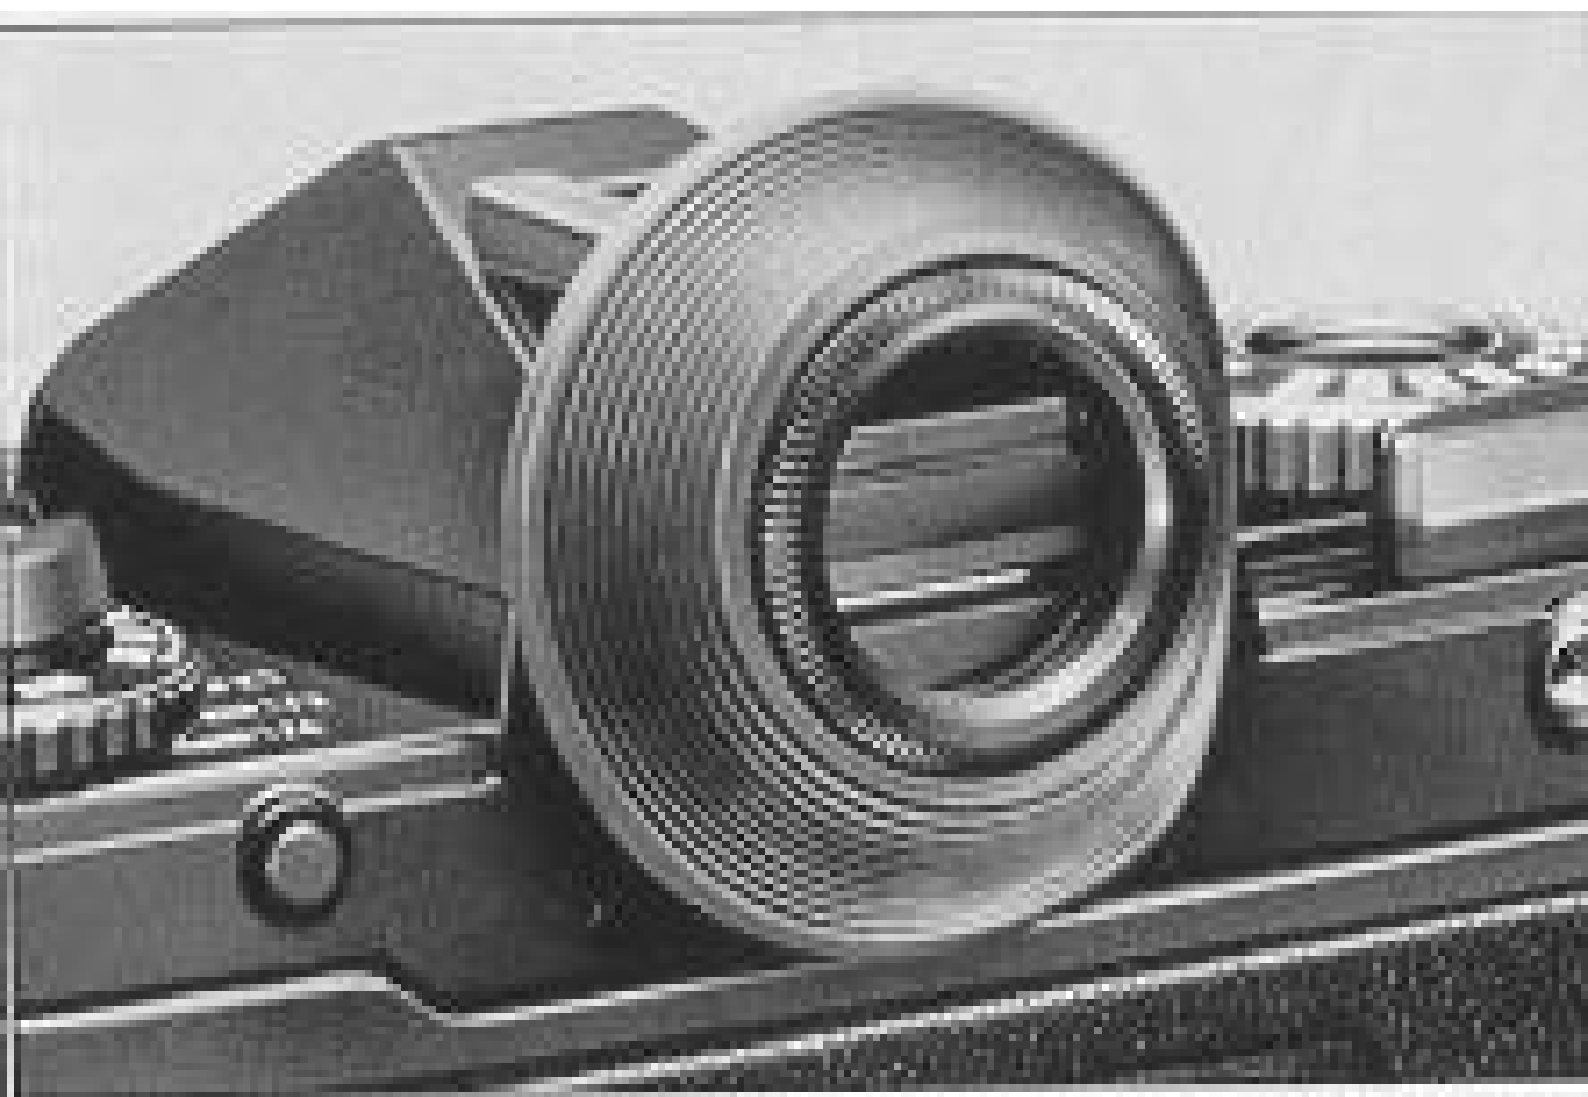





Depth-of-Field Scale

Schärfentiefskala

L'échelle de profondeur de champ

La escala profundidad de campo







F1.7





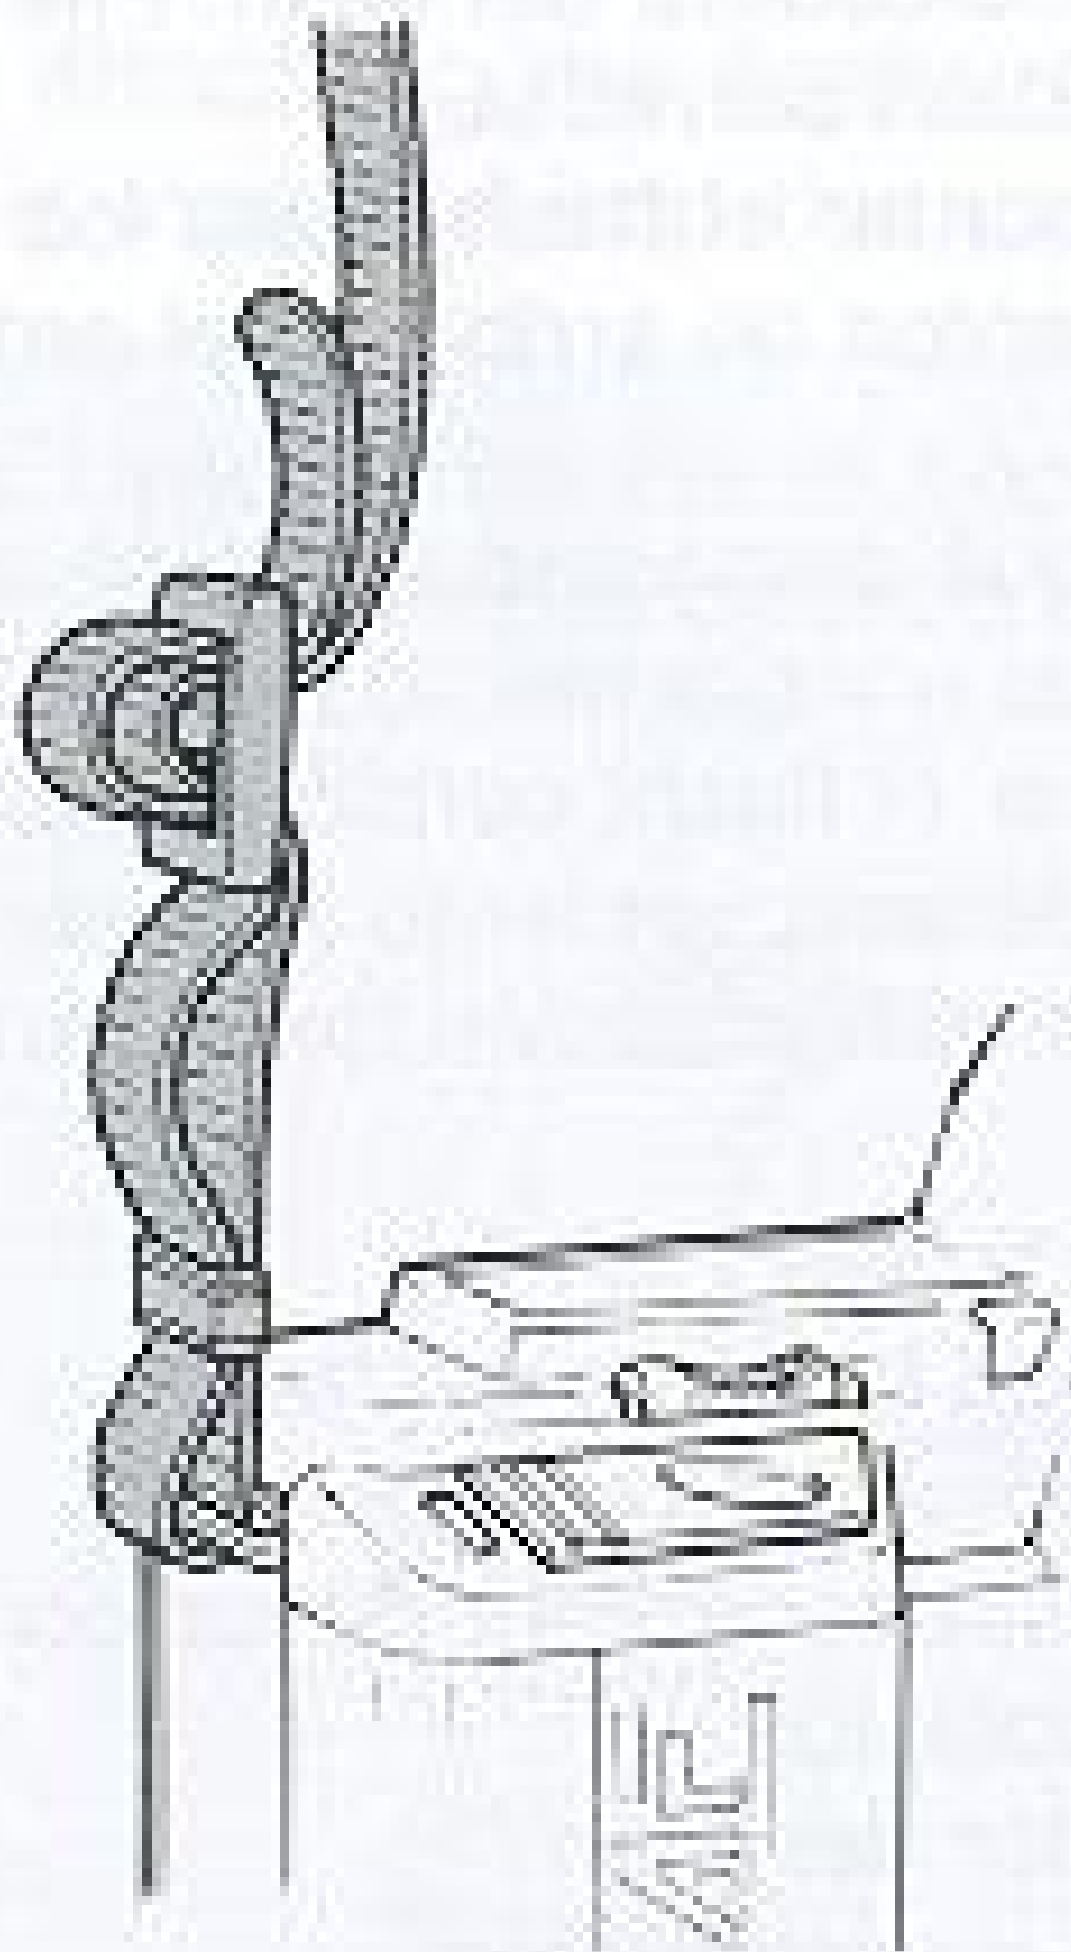

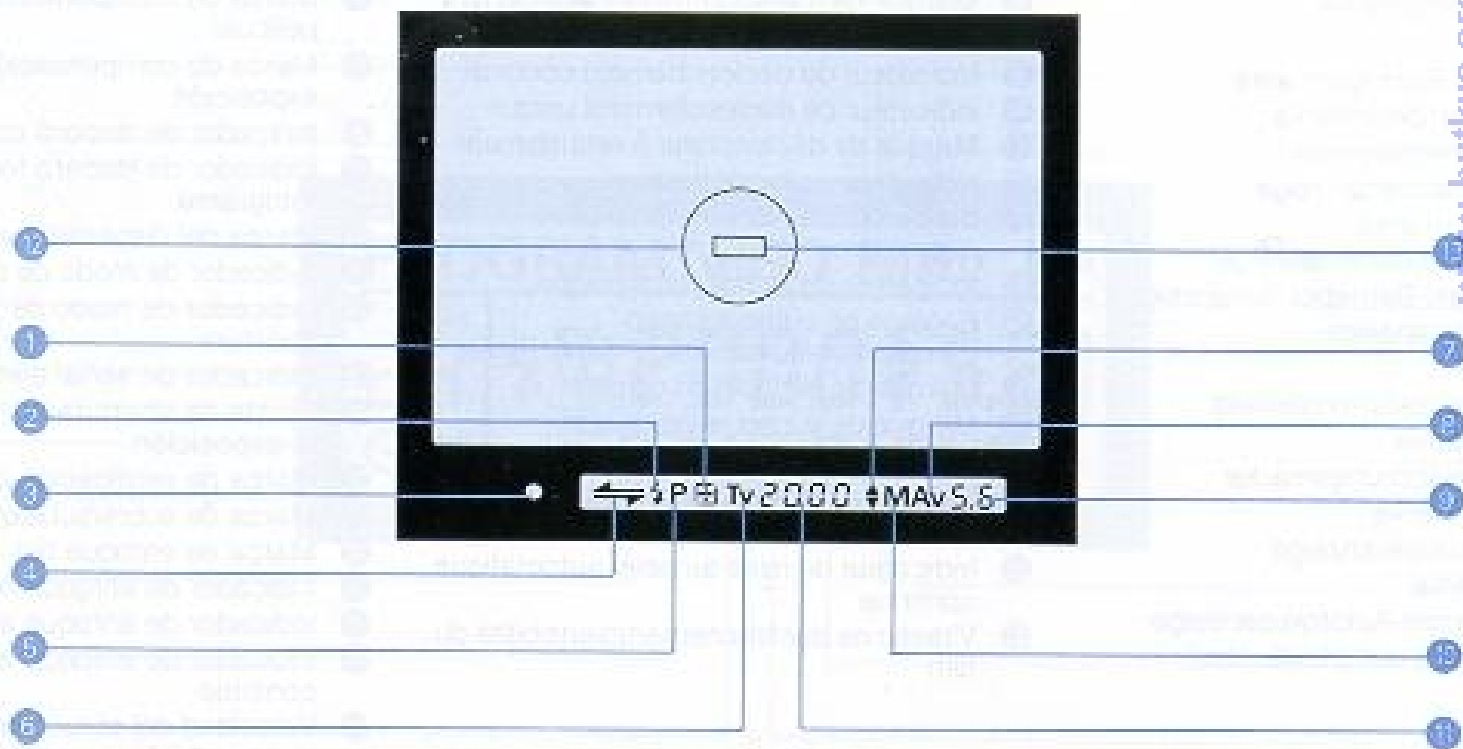


How to Unlock the Flash Lock Button/Entriegeln des Blitzsperrknopfs
Pour déverrouiller le bouton de verrouillage du flash/Cómo desbloquear el botón de bloqueo del flash











- 1 Guide Rail
- 2 Flash Lock Button
- 3 Flash Switch
- 4 Light Receptor Window with Exposure Guide
- 5 Flash Reflector
- 6 Index Mark
- 7 Coupling Contact

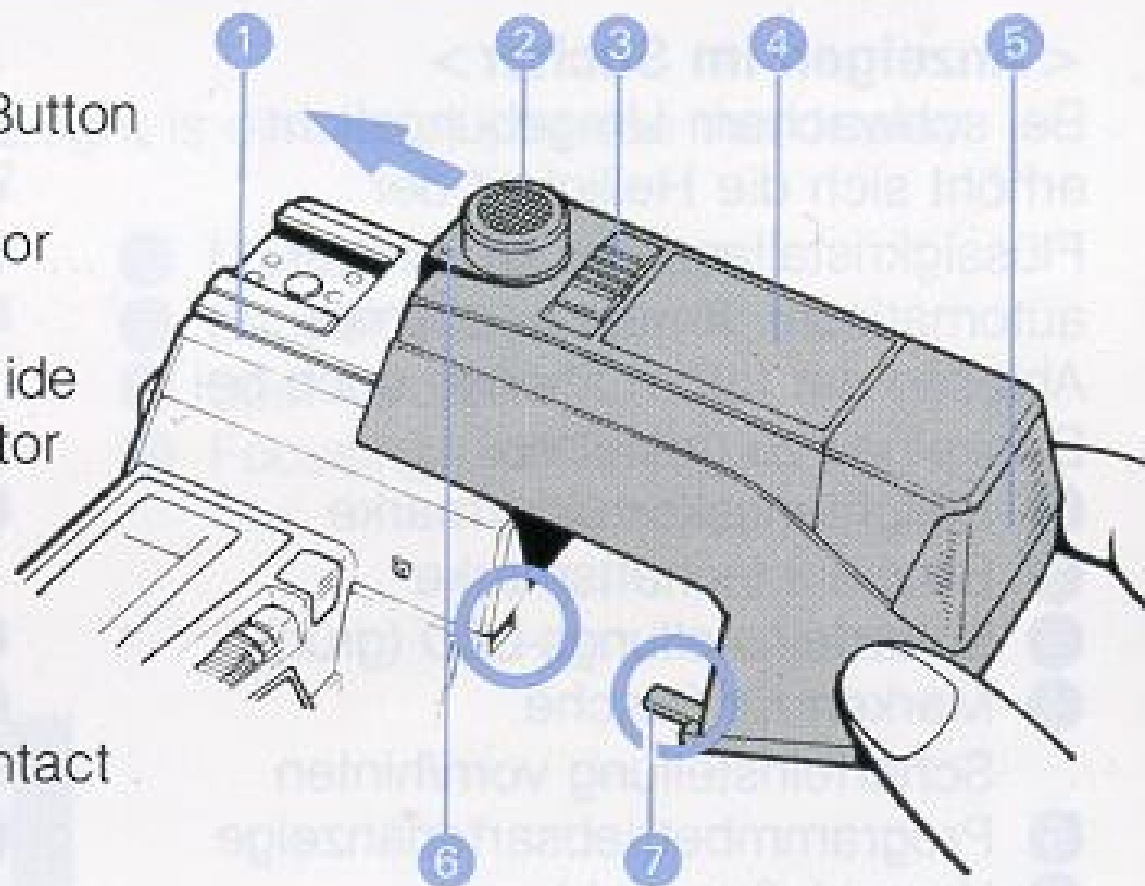


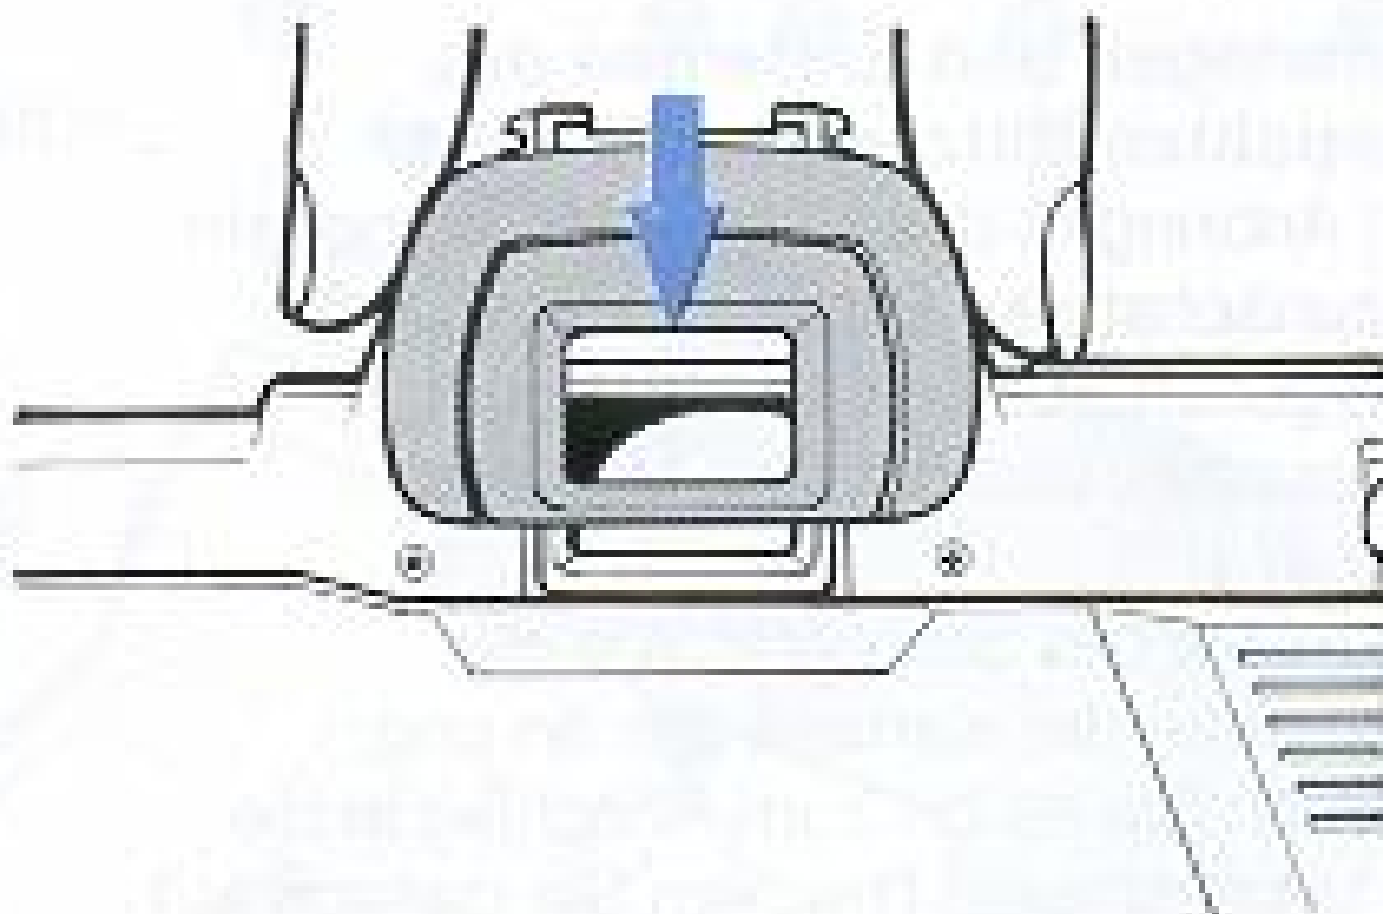



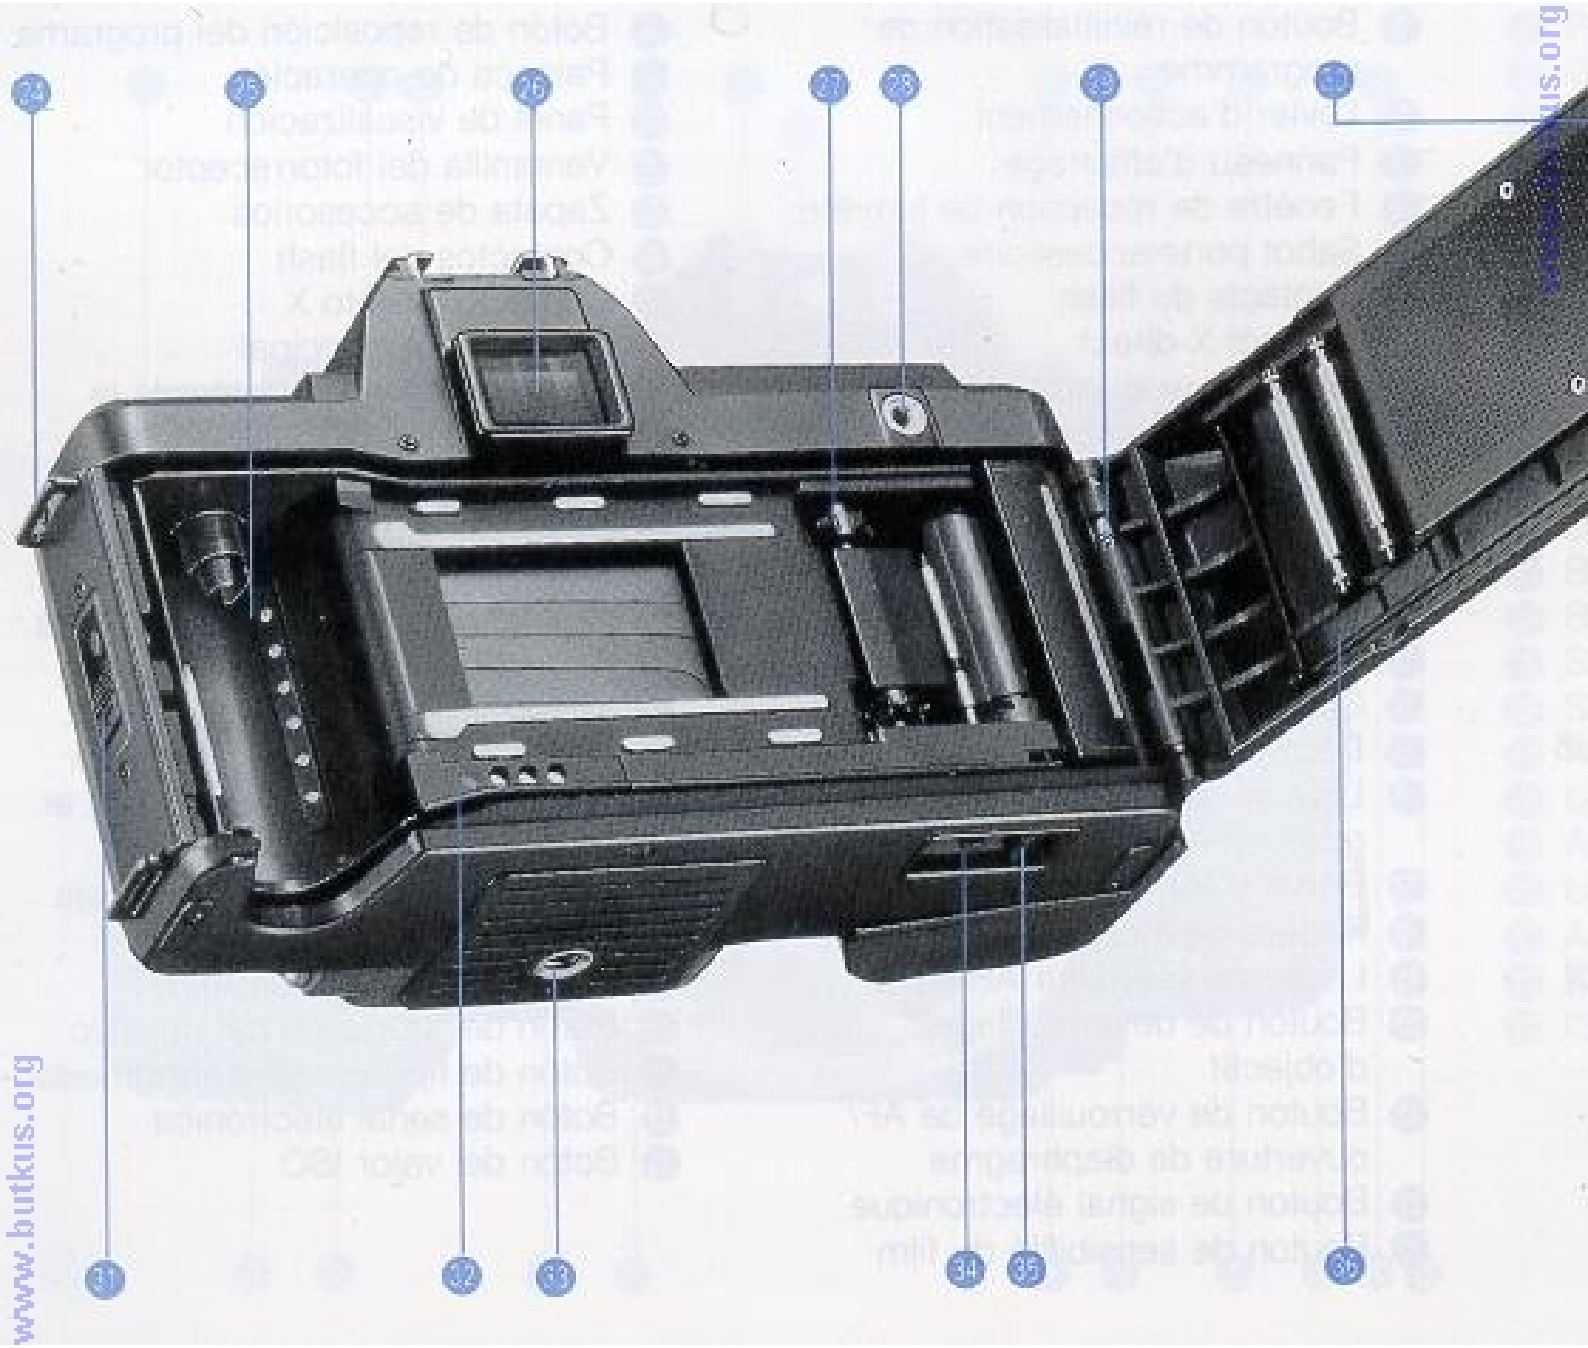


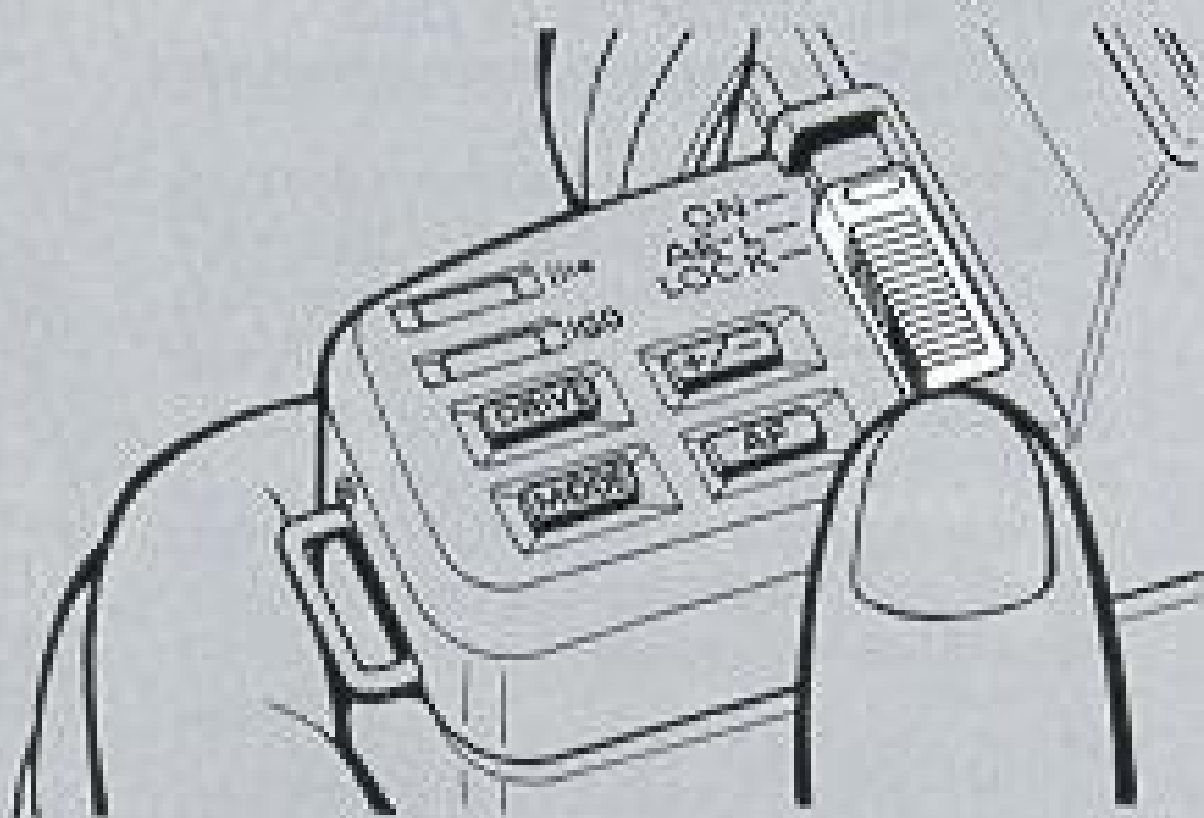

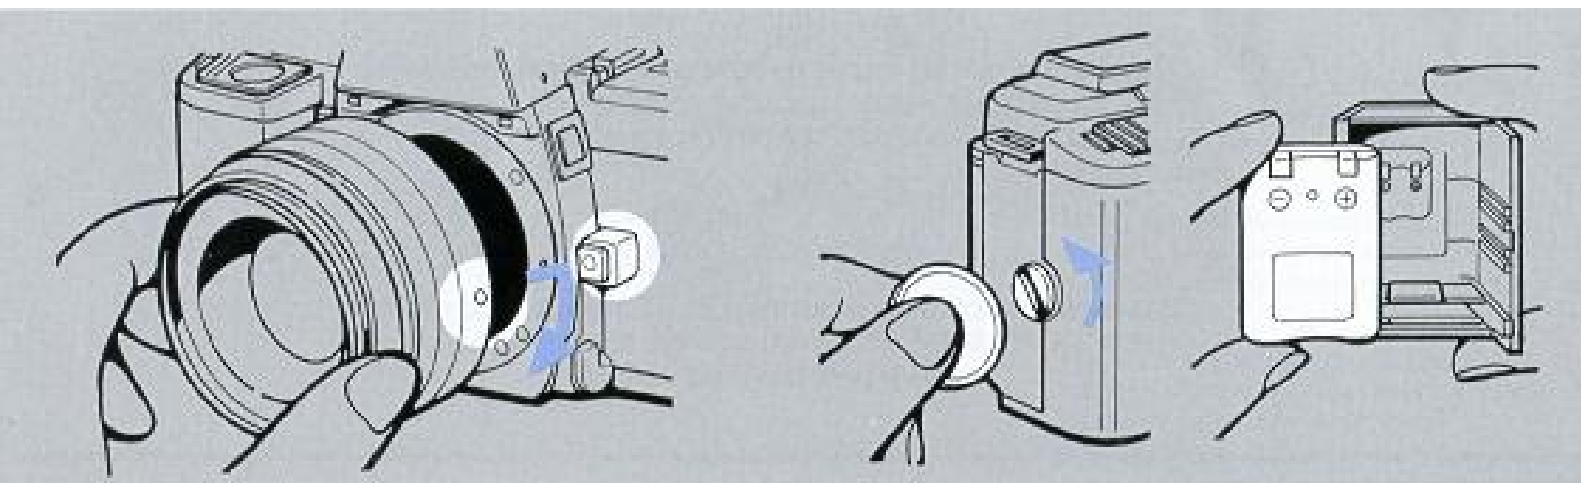


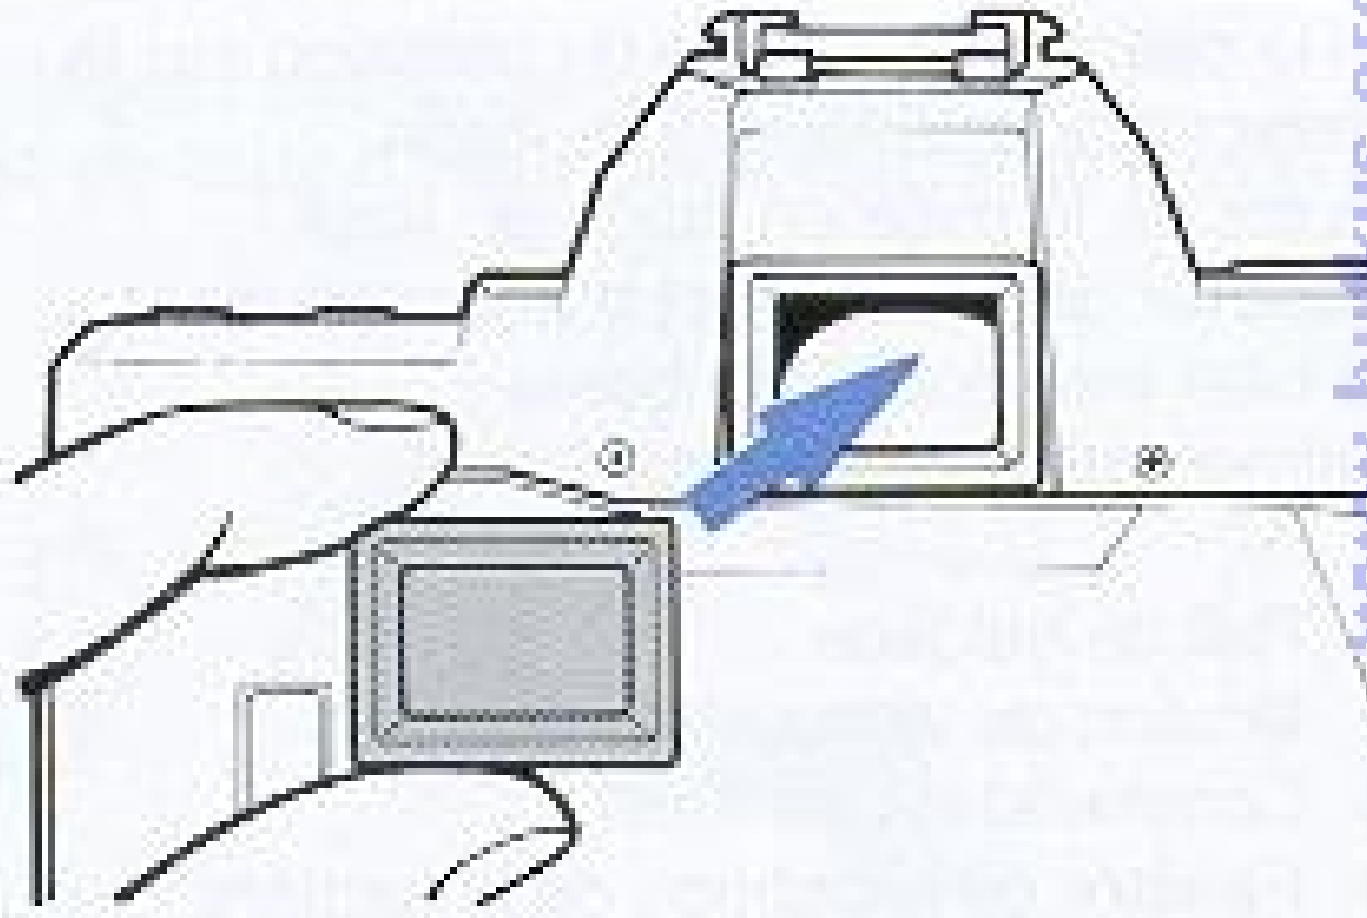

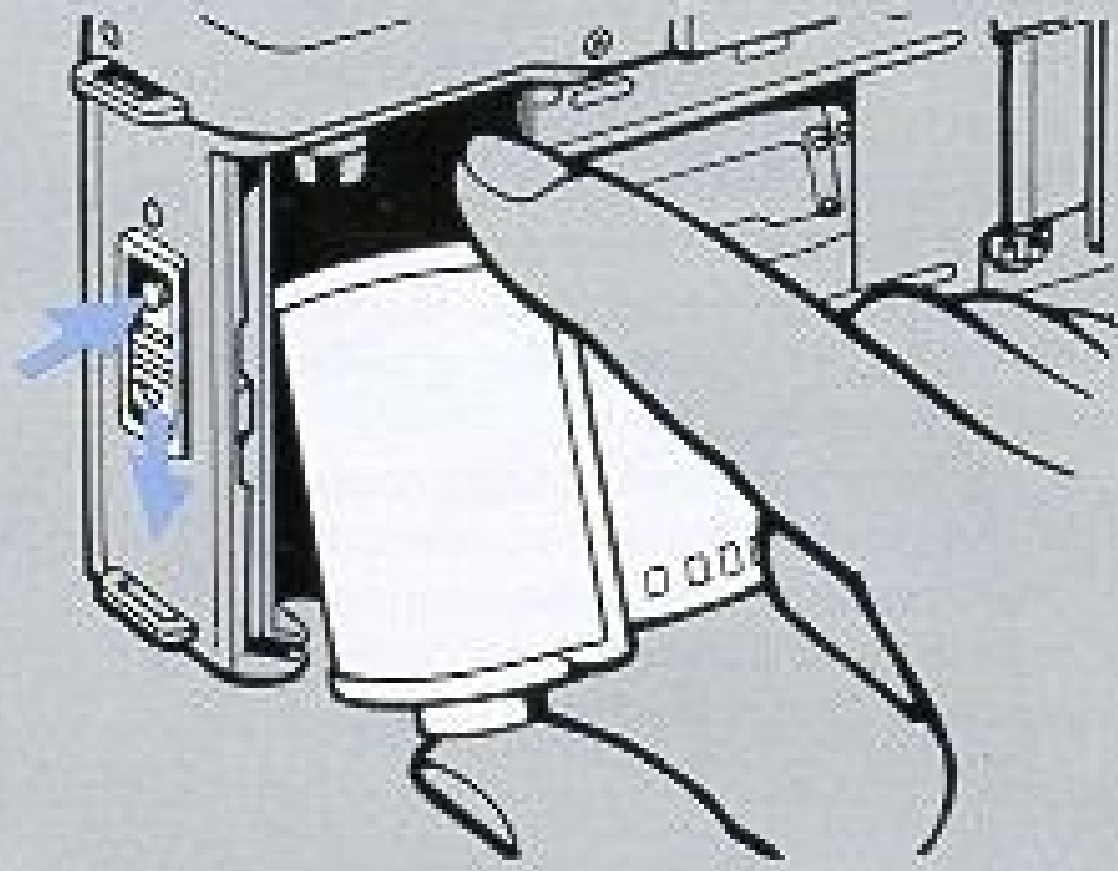


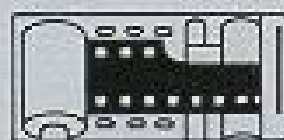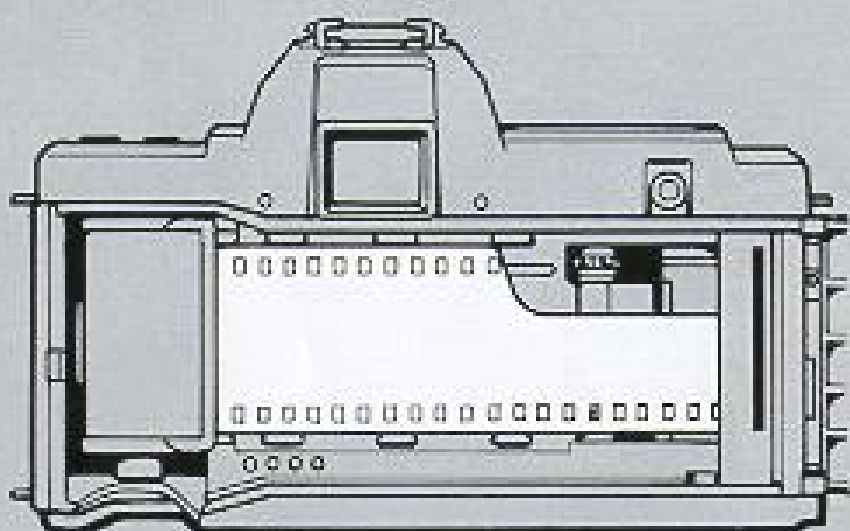


Yes
Ja
Oui
Si

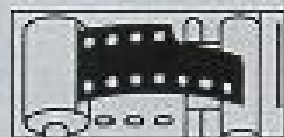


No
Nein
Non
No

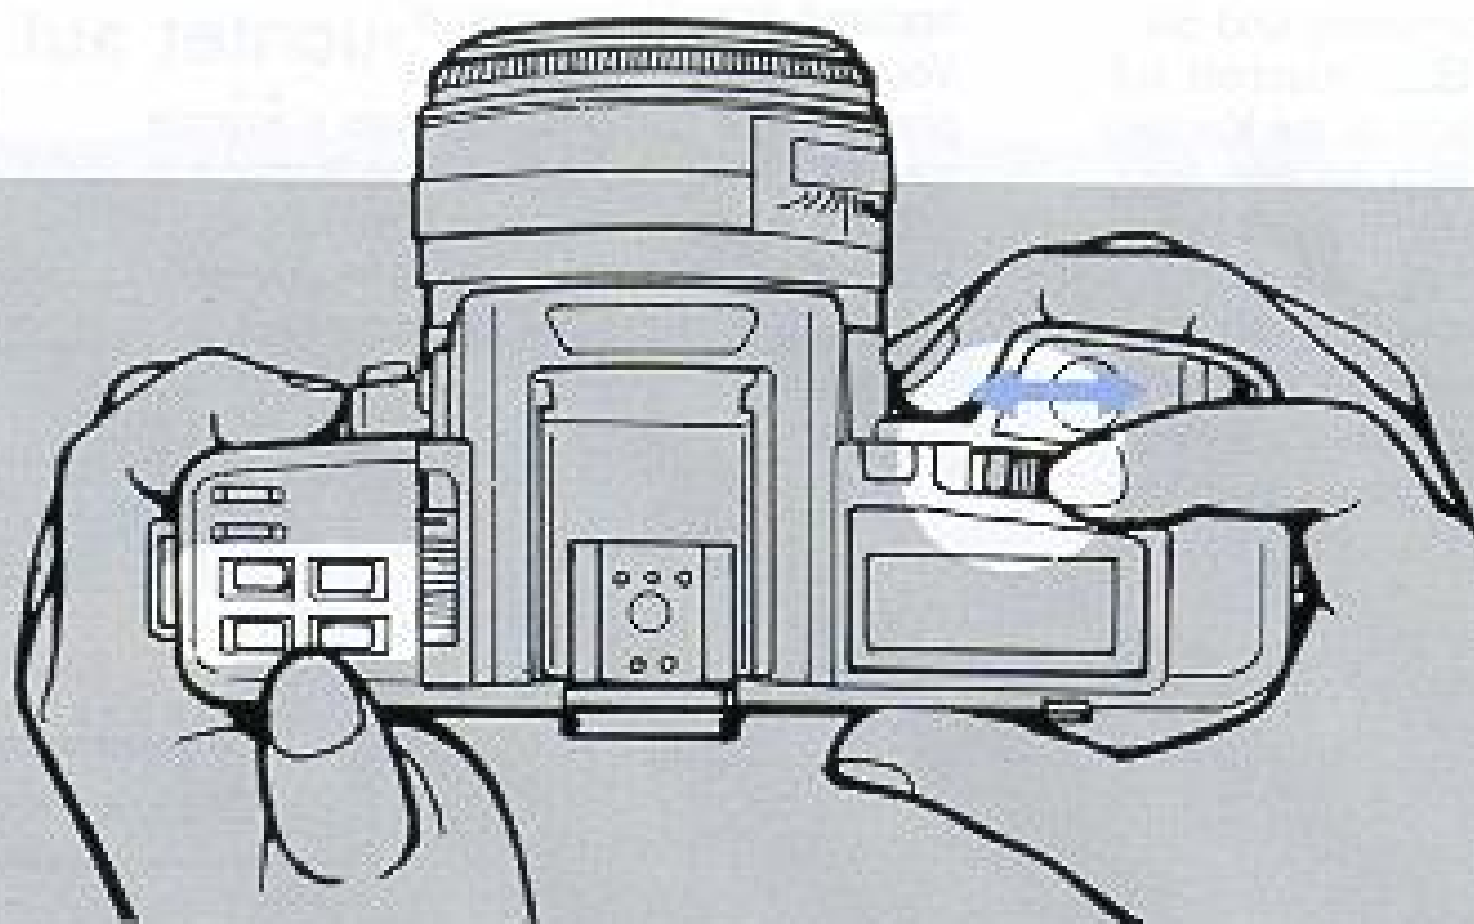


1

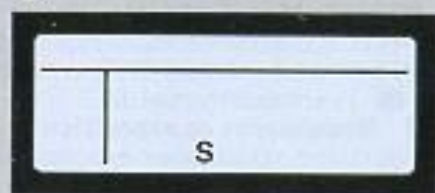



2

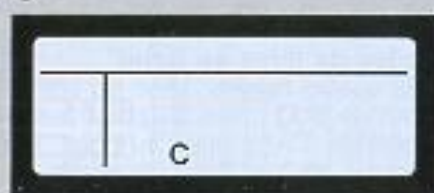 

3

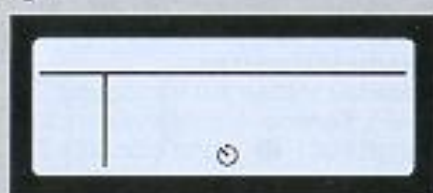 

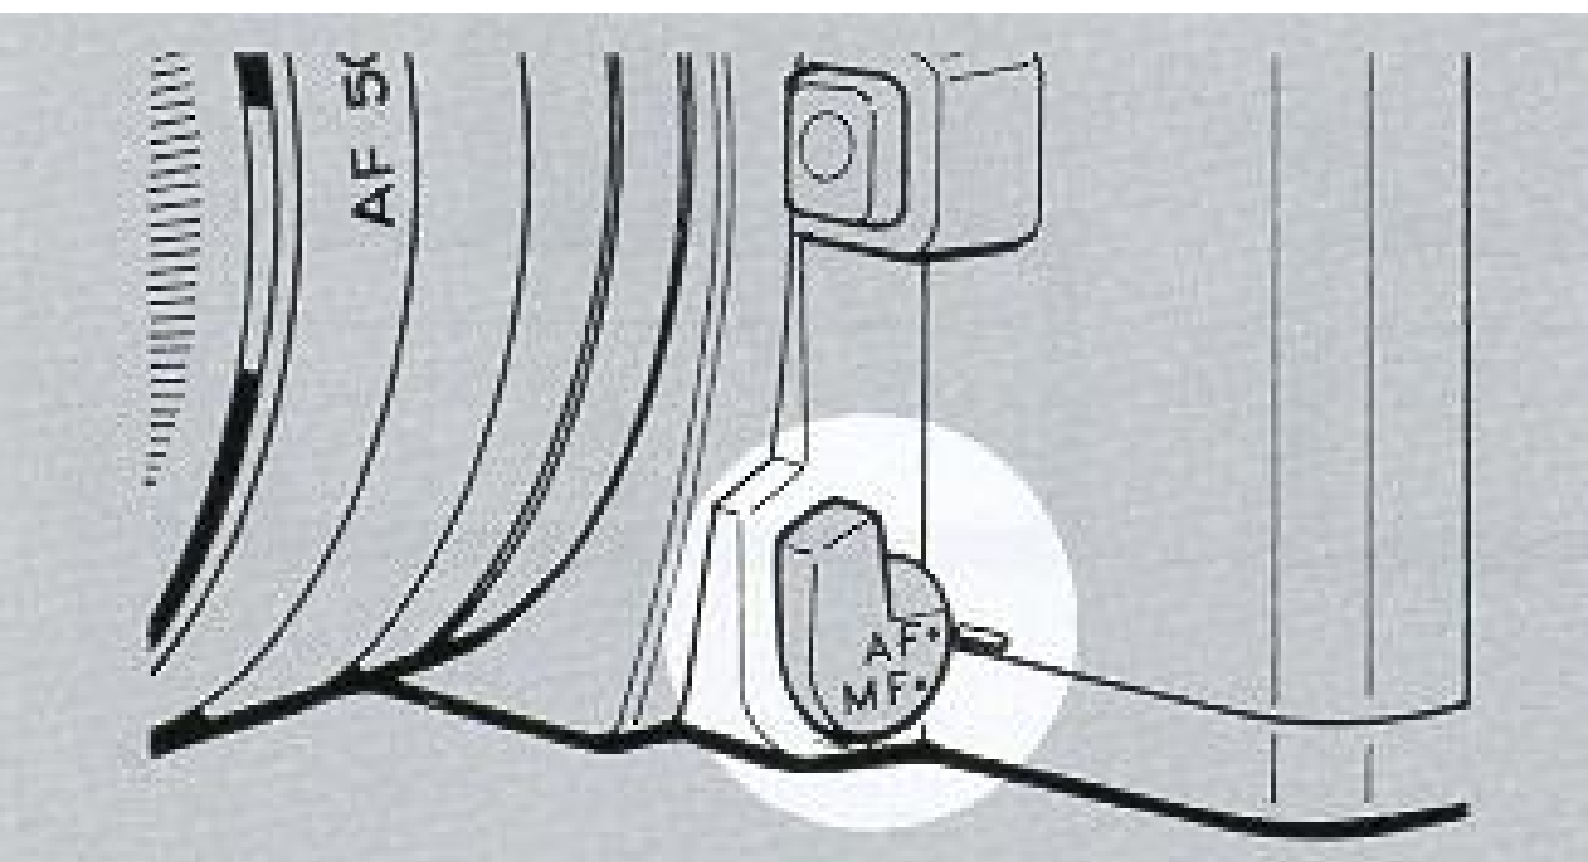 


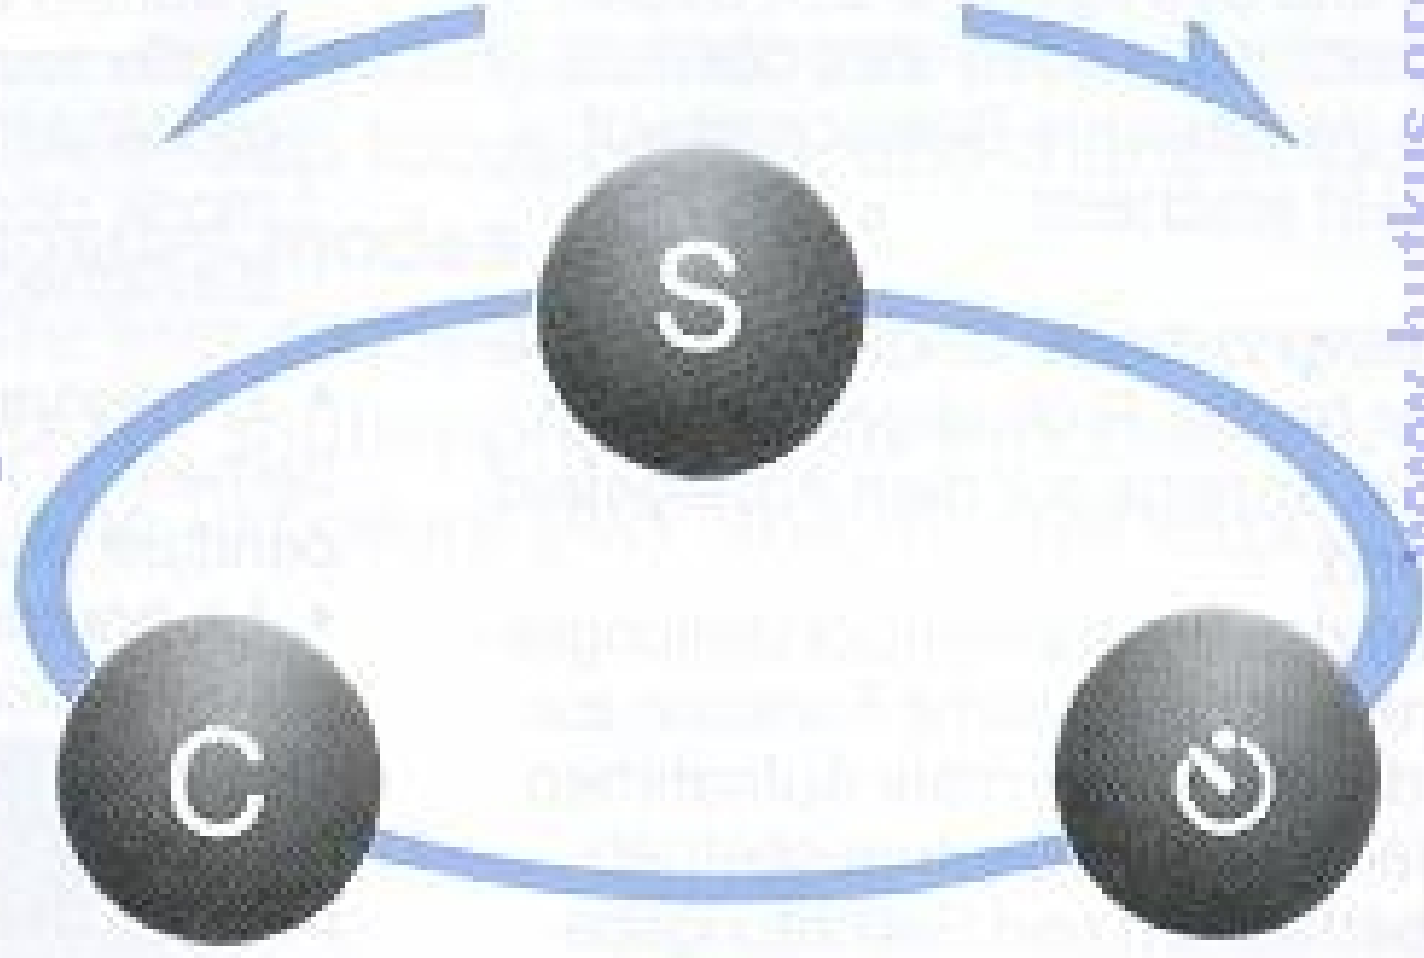 

PROGRAM



 12




125

5.6

S

  
AF

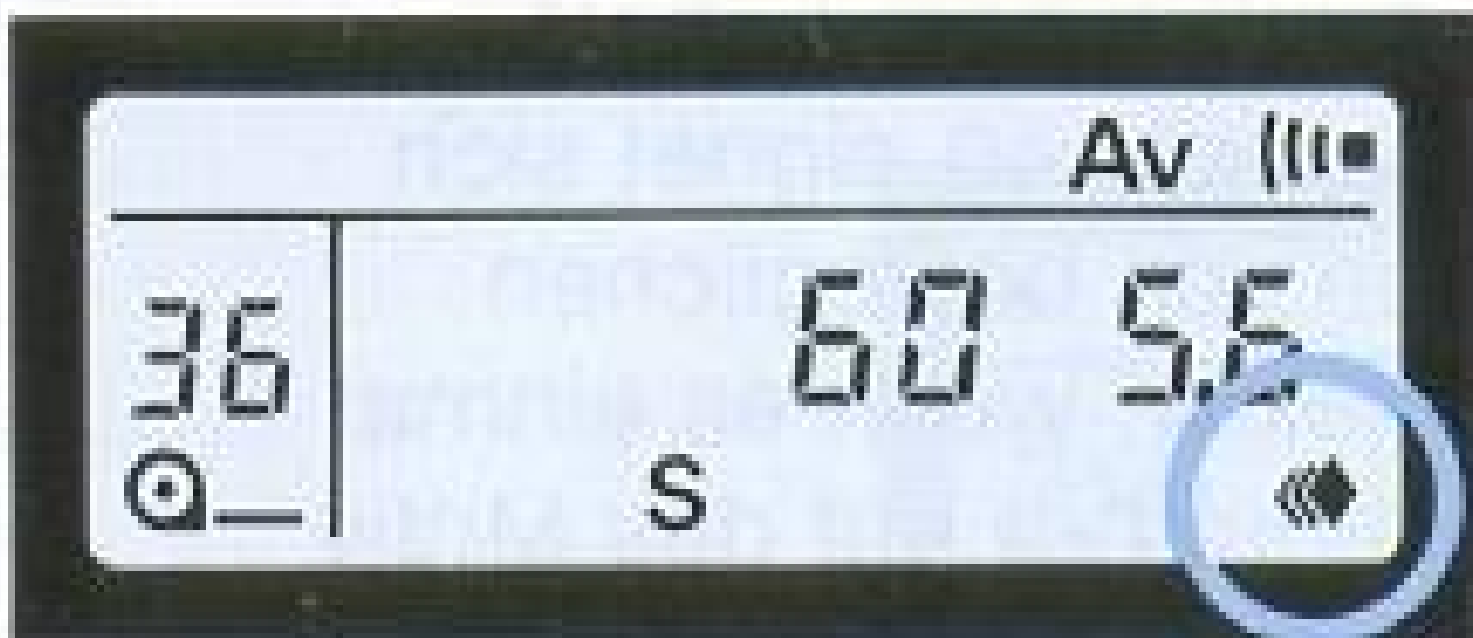









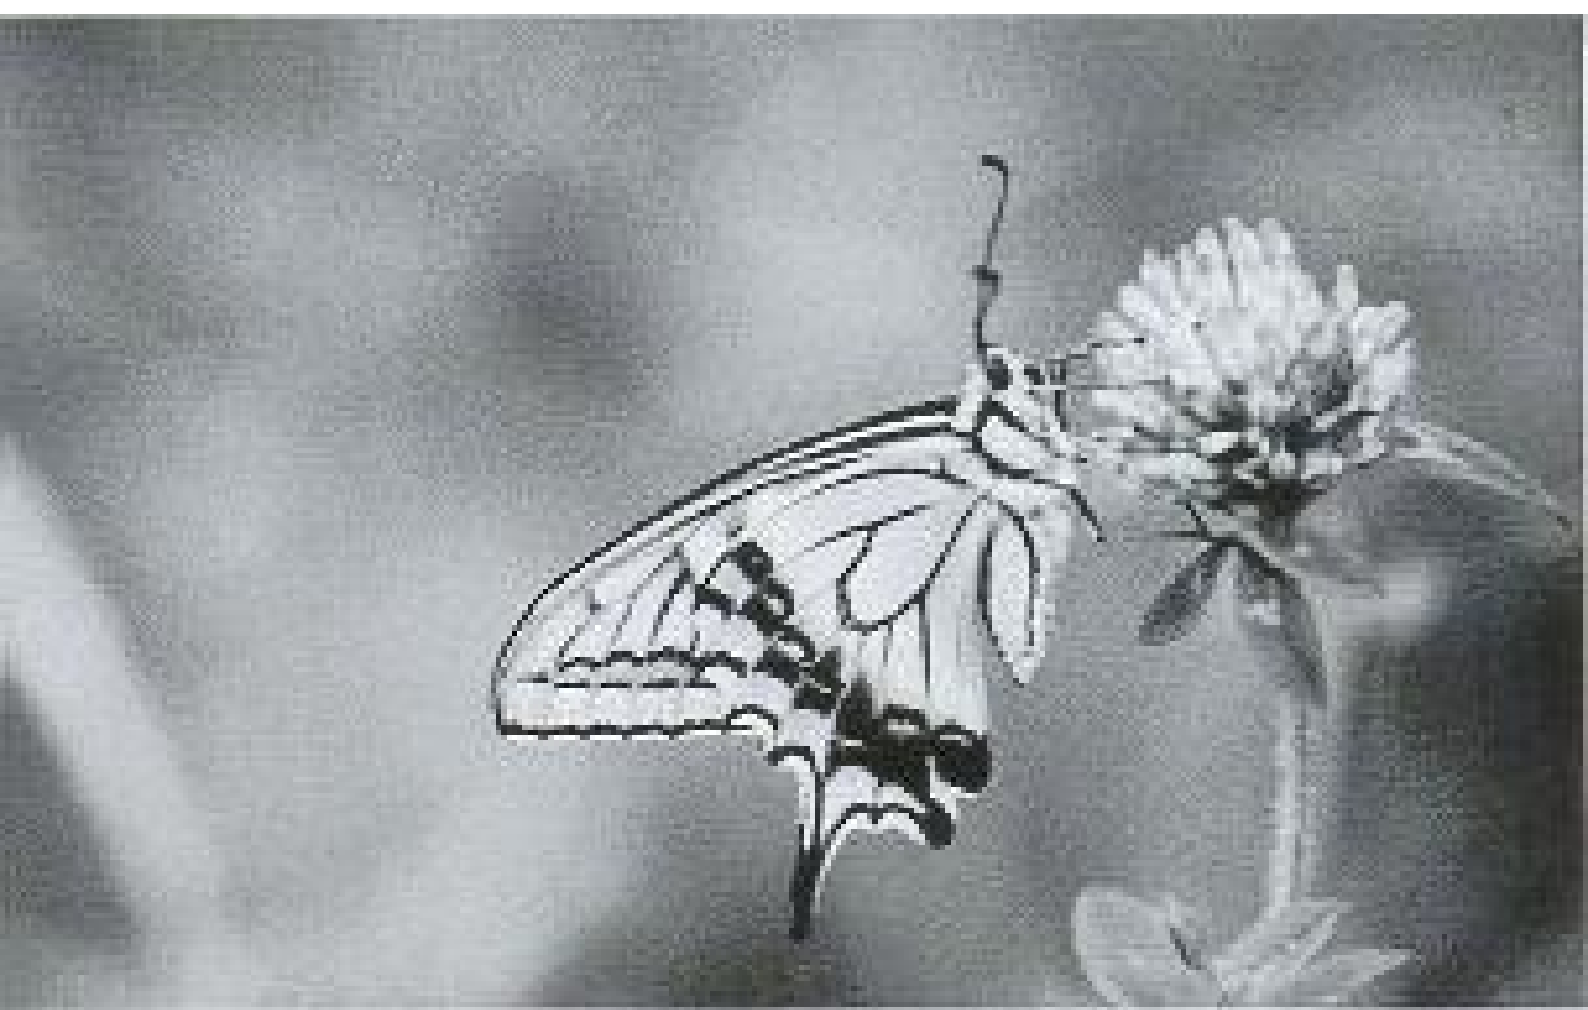






4

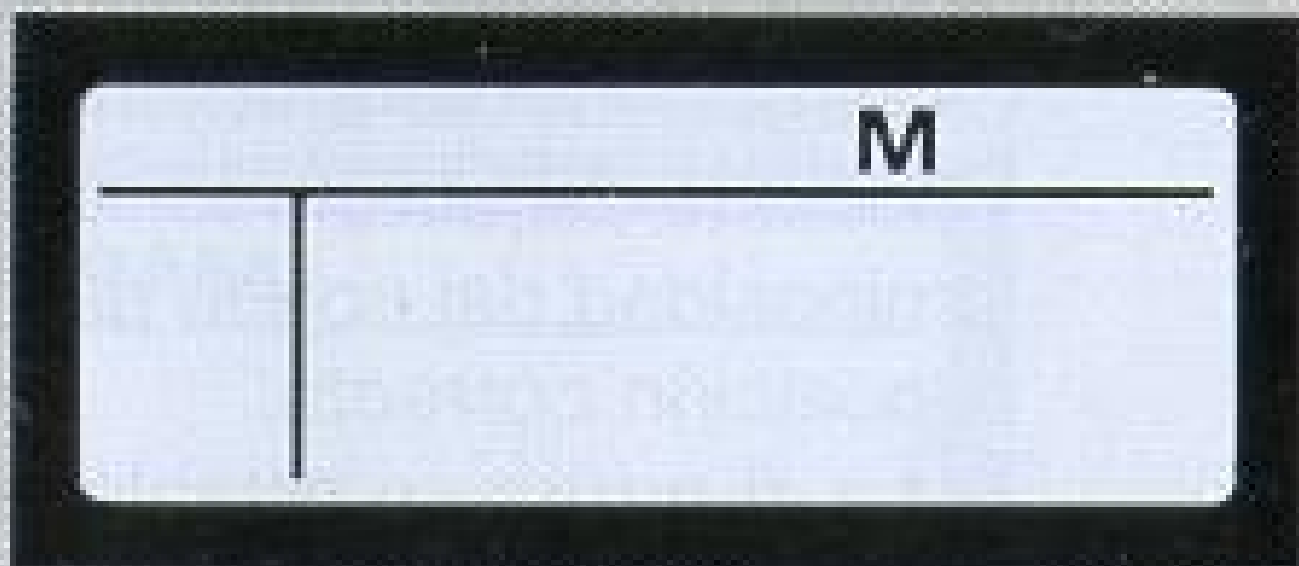 


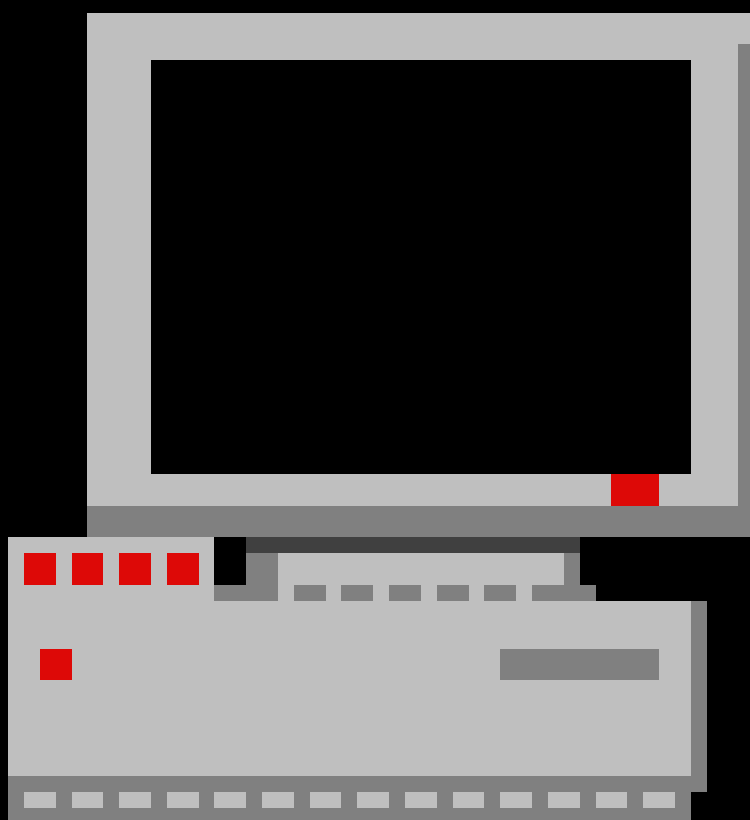 


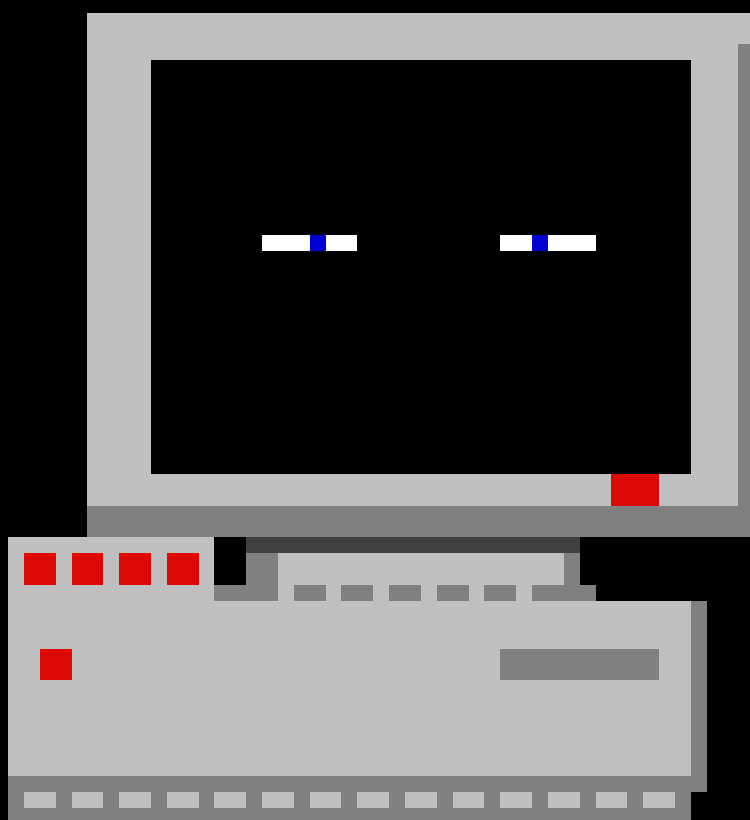 


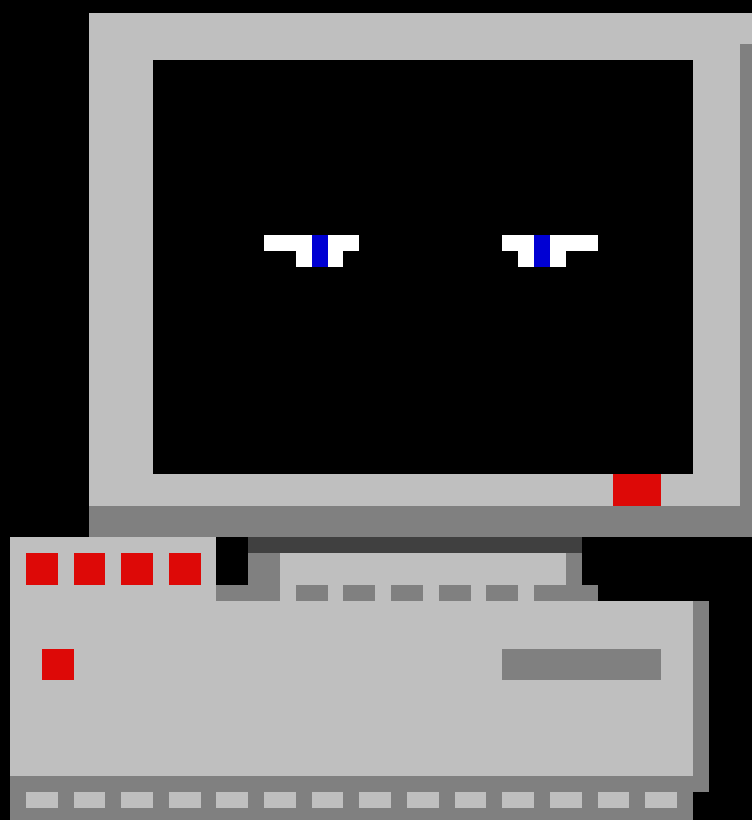 

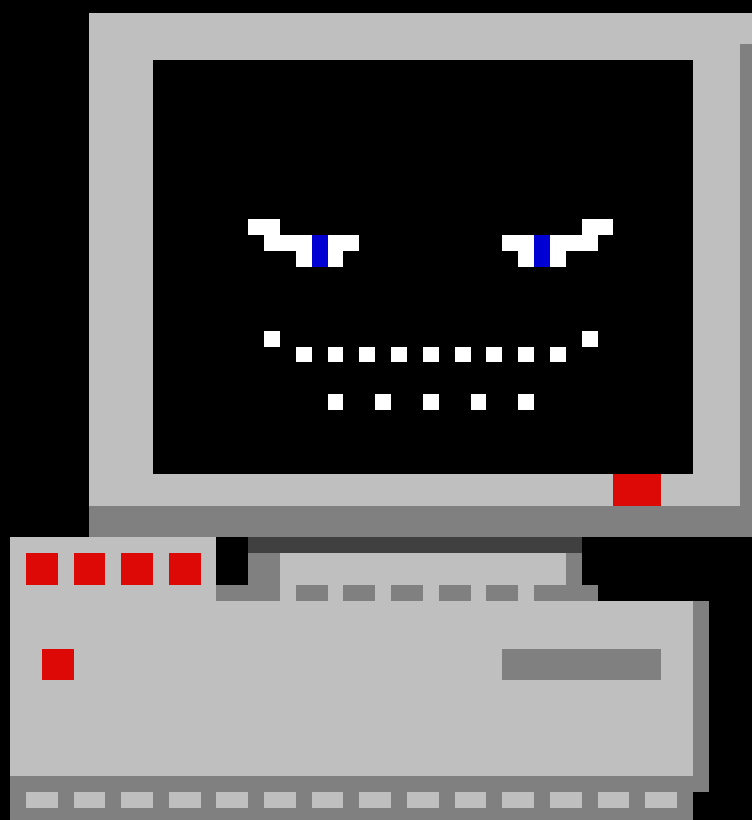     


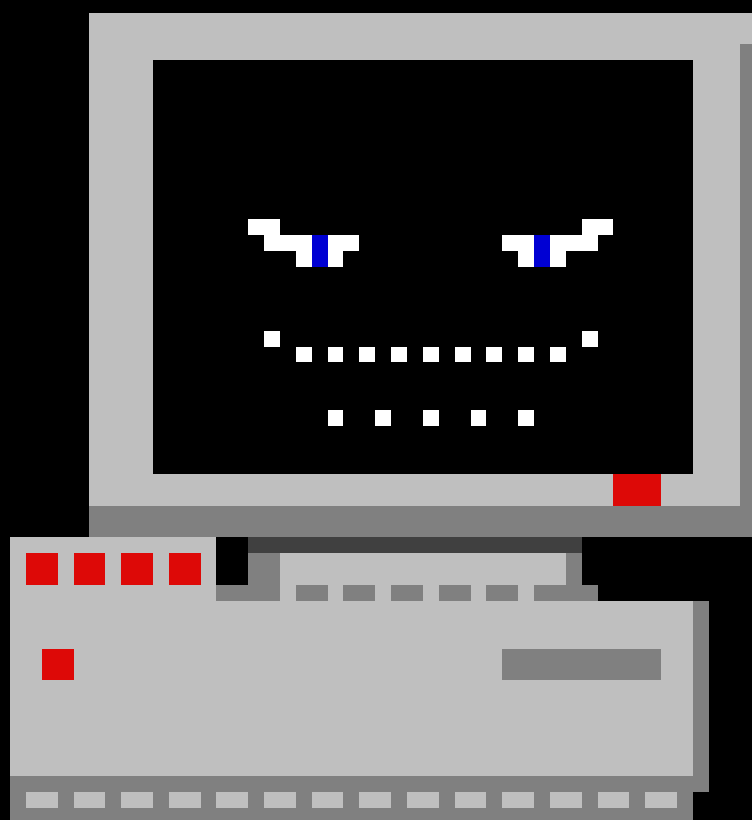 


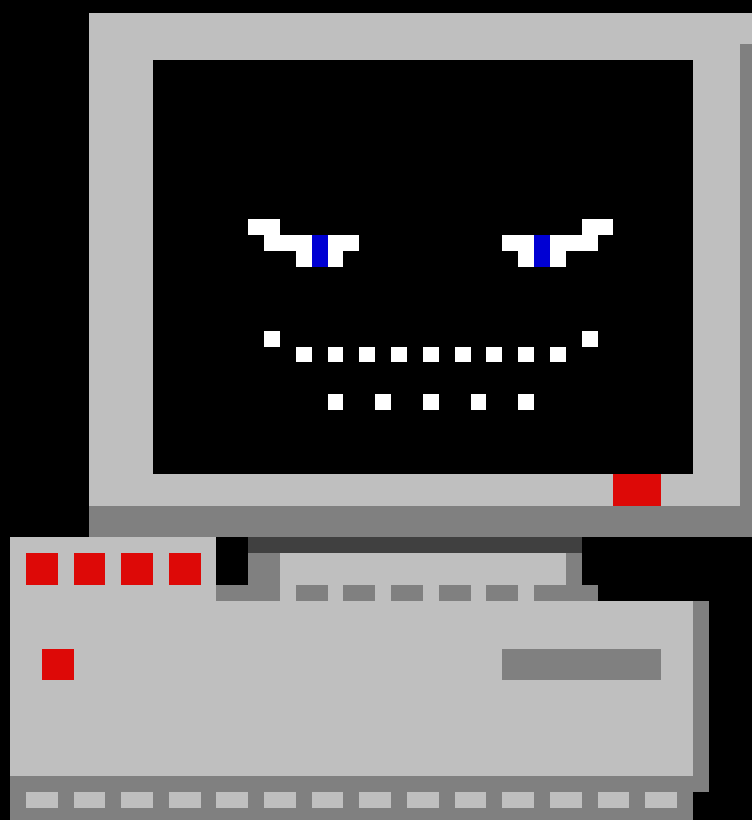 


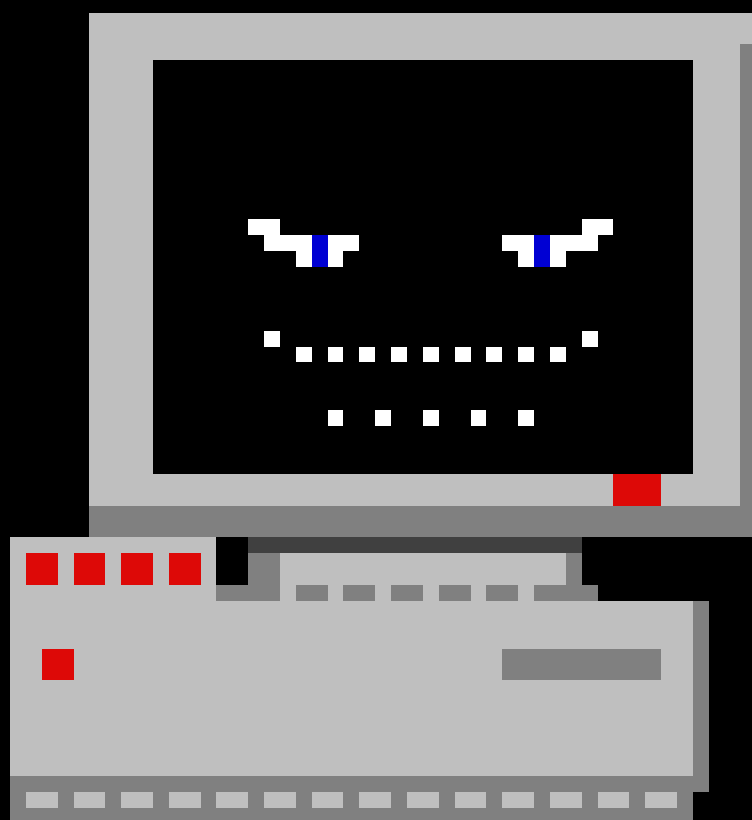 


 


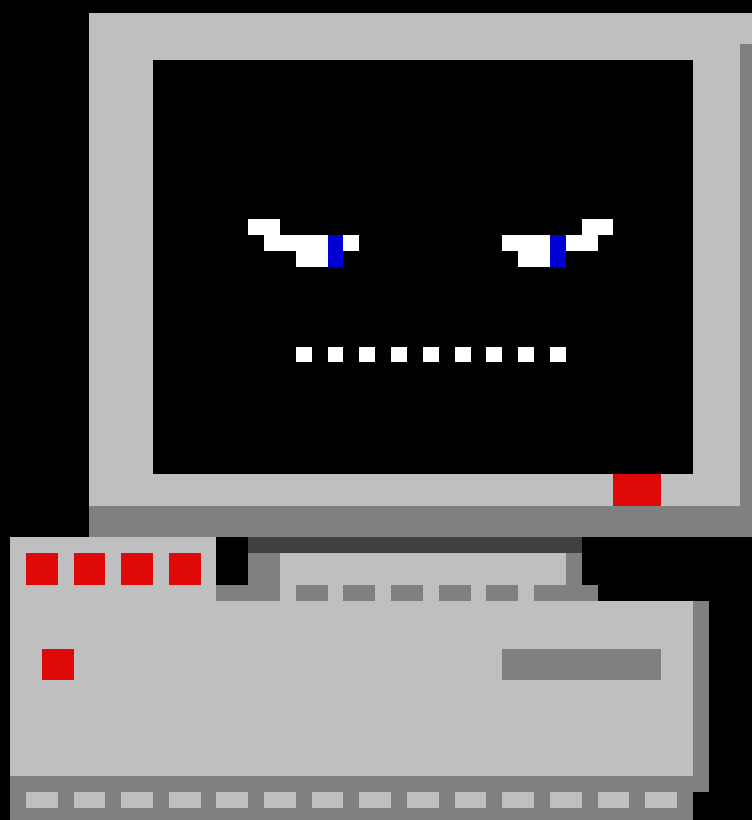 


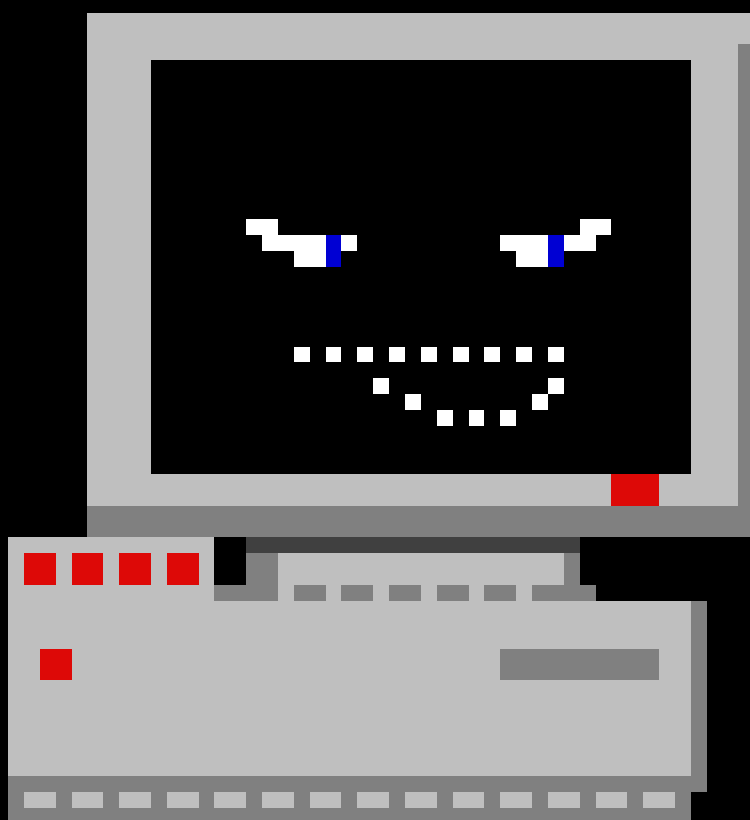 


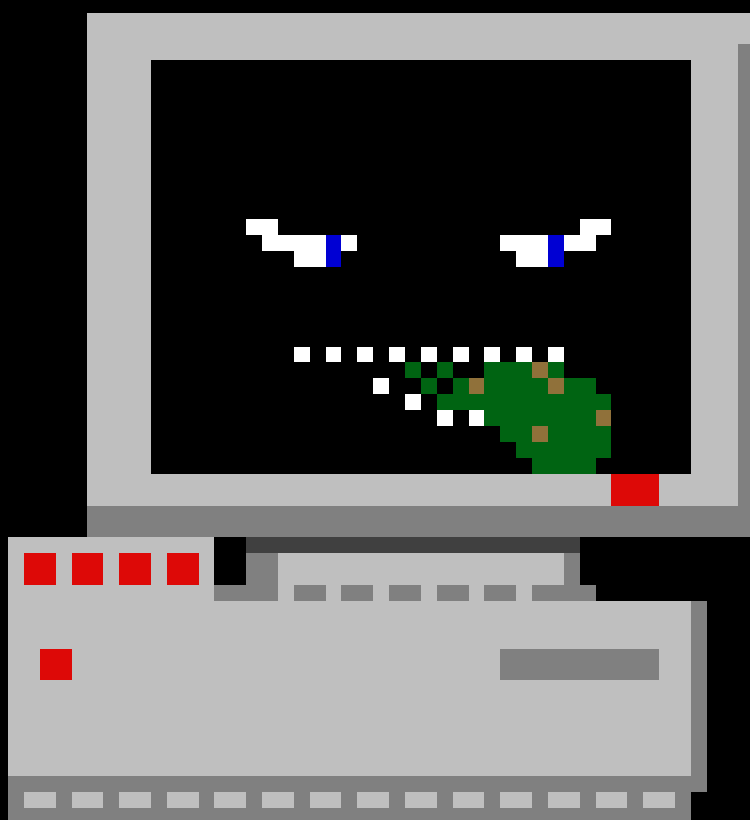 


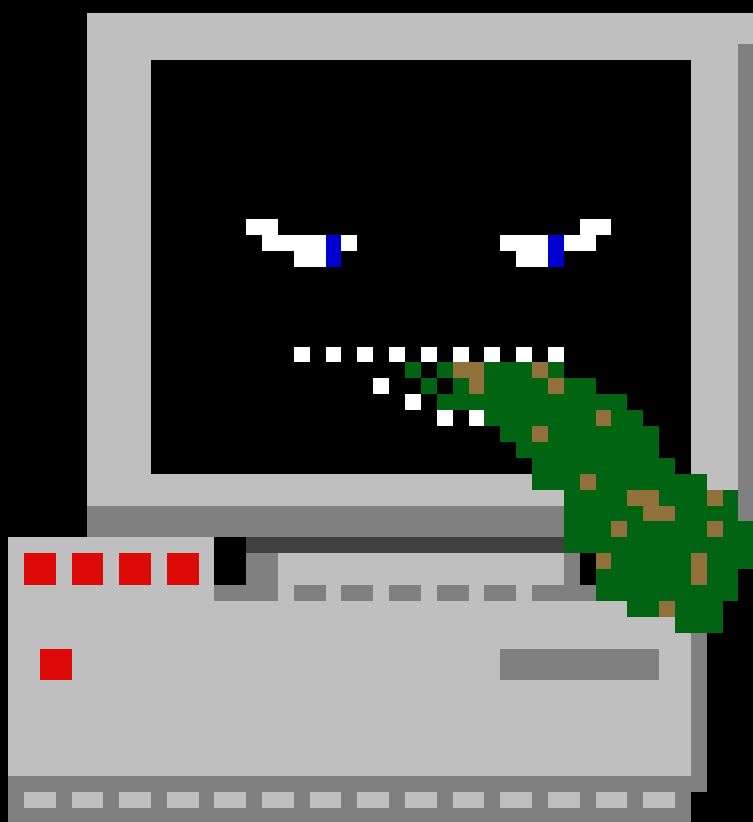 


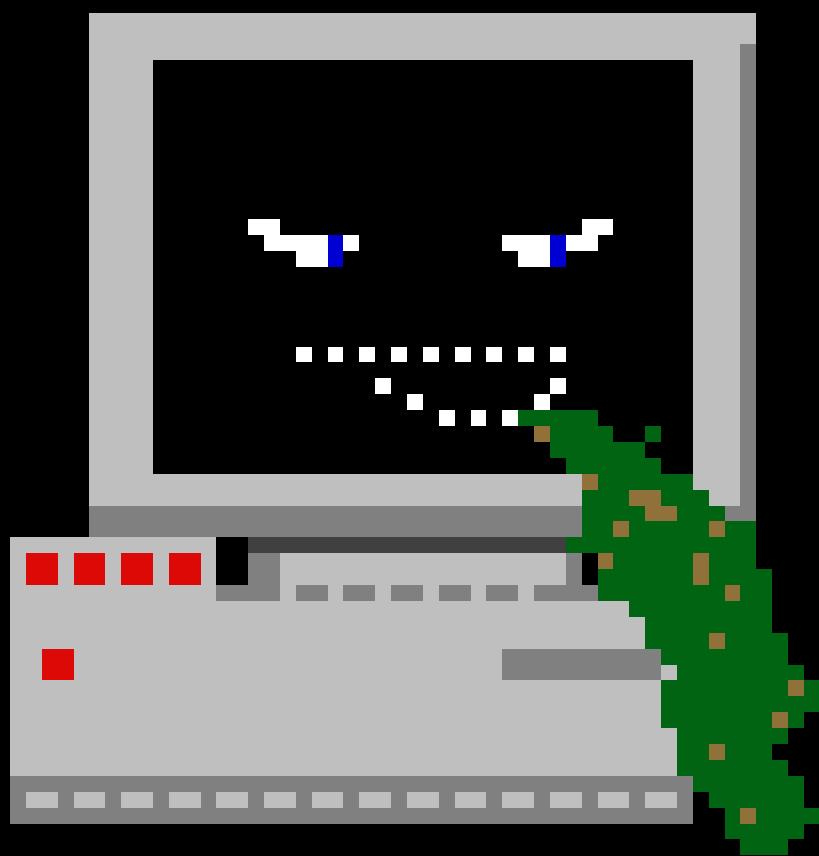 


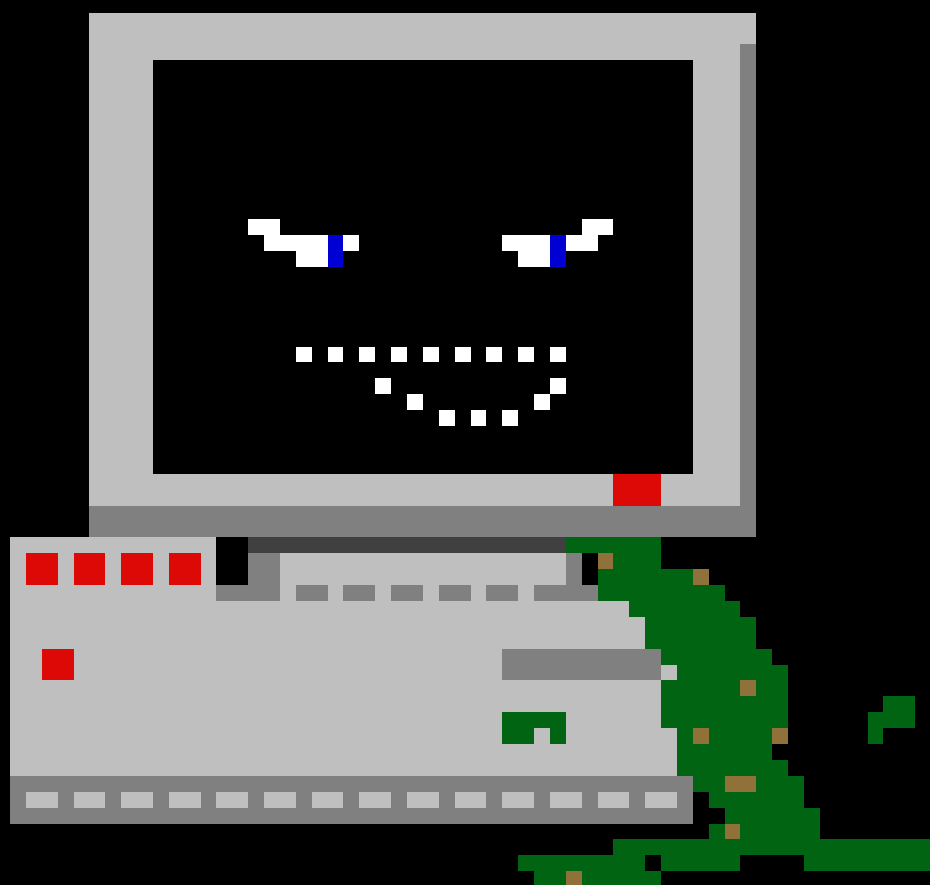 


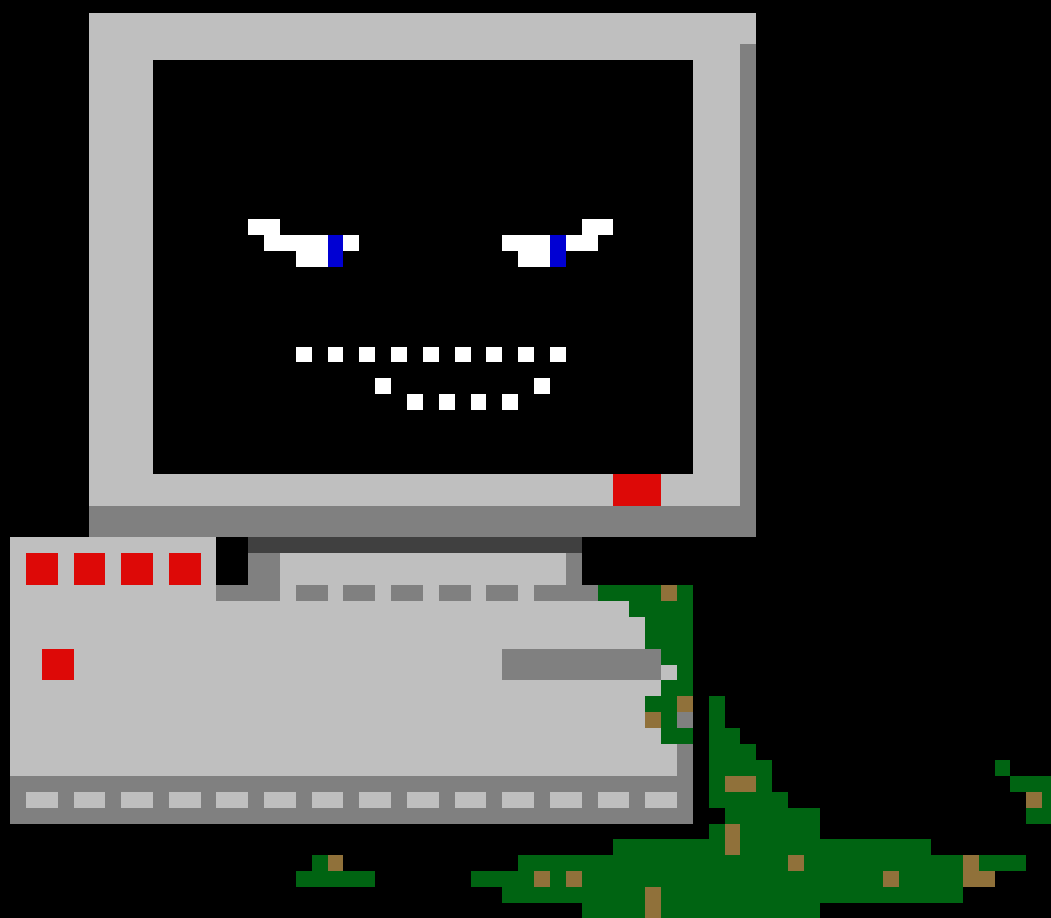 


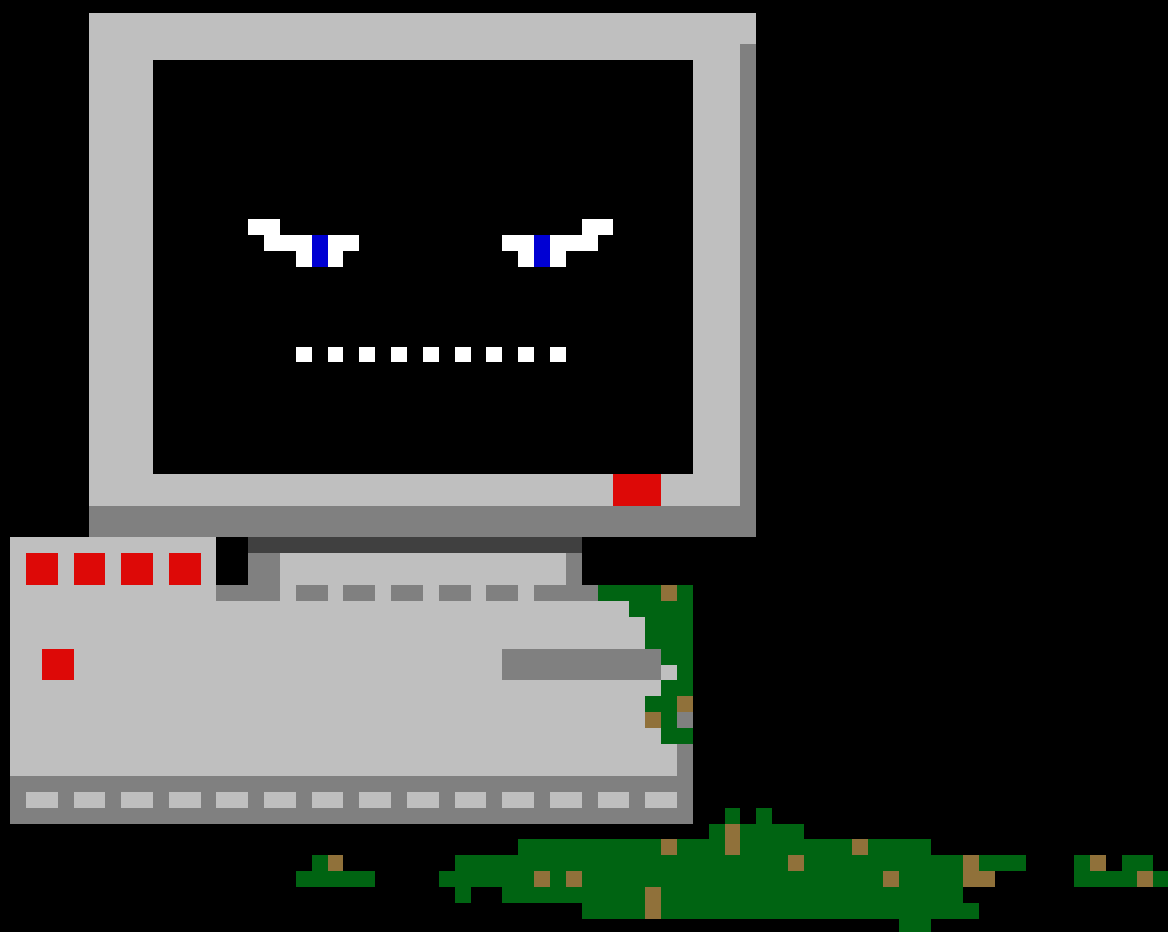 


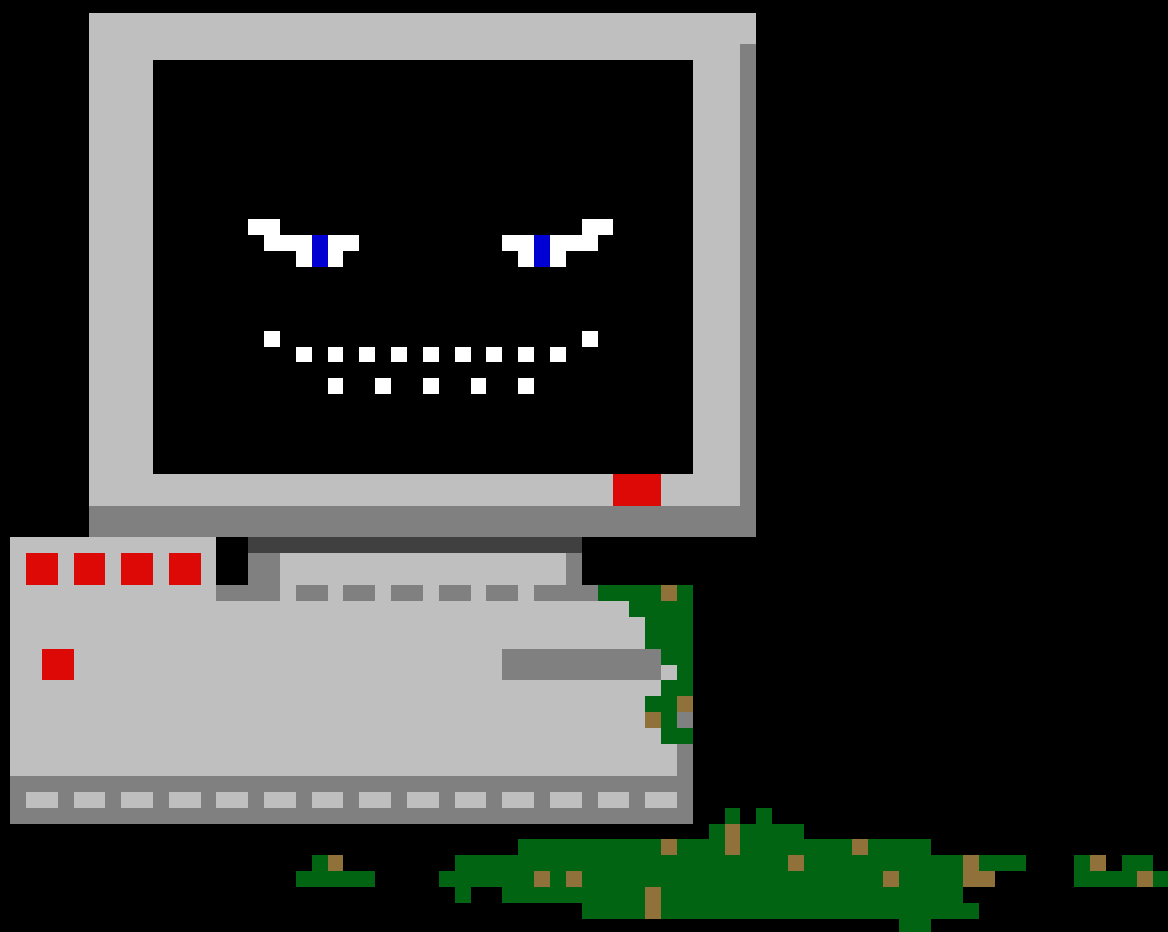 


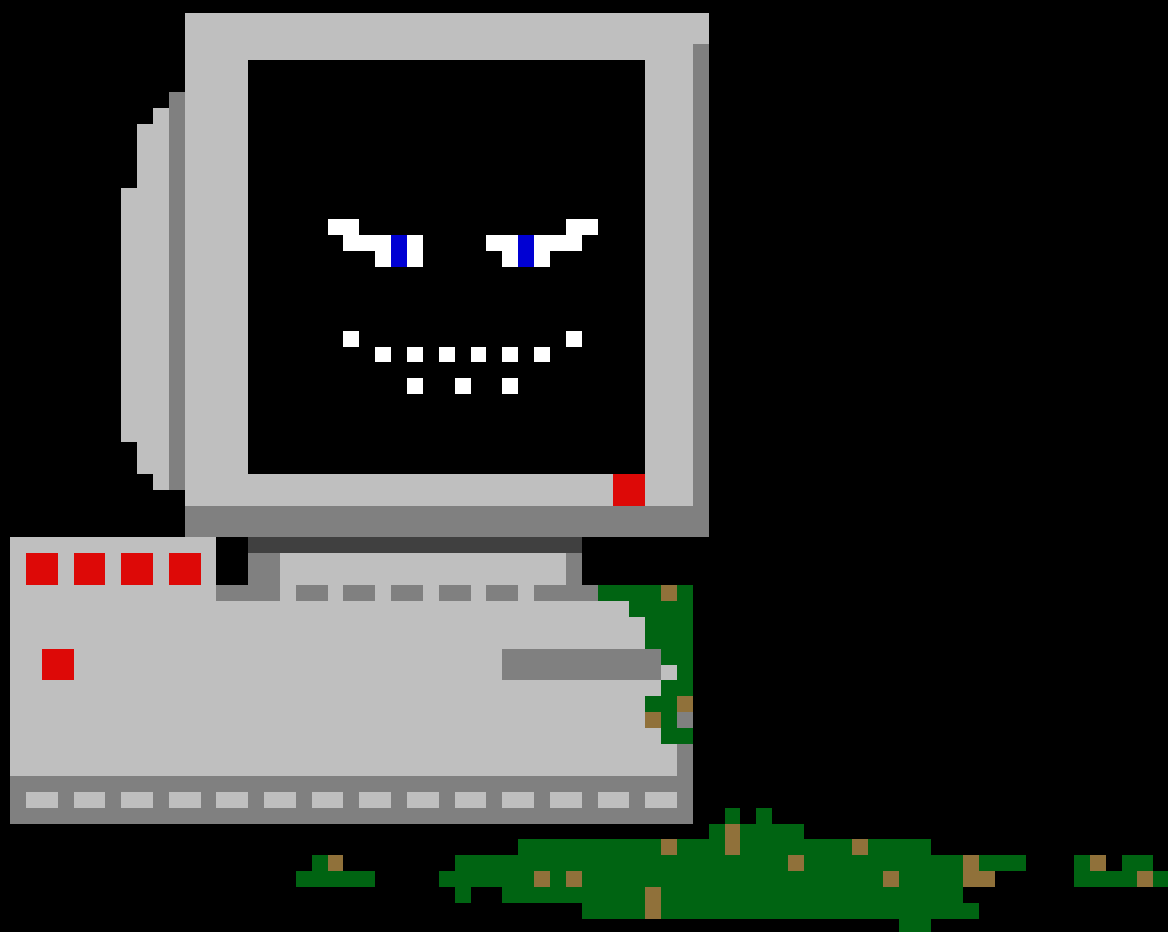 


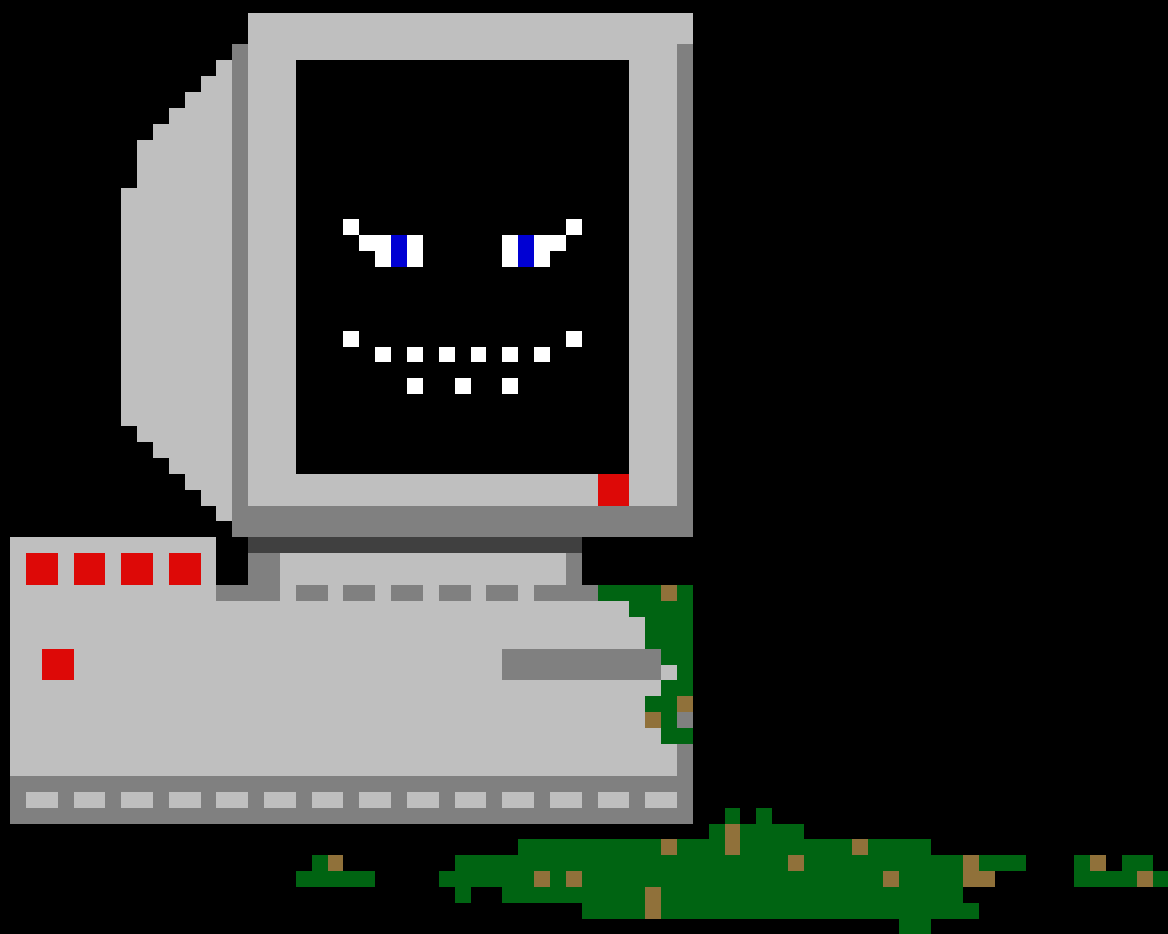 


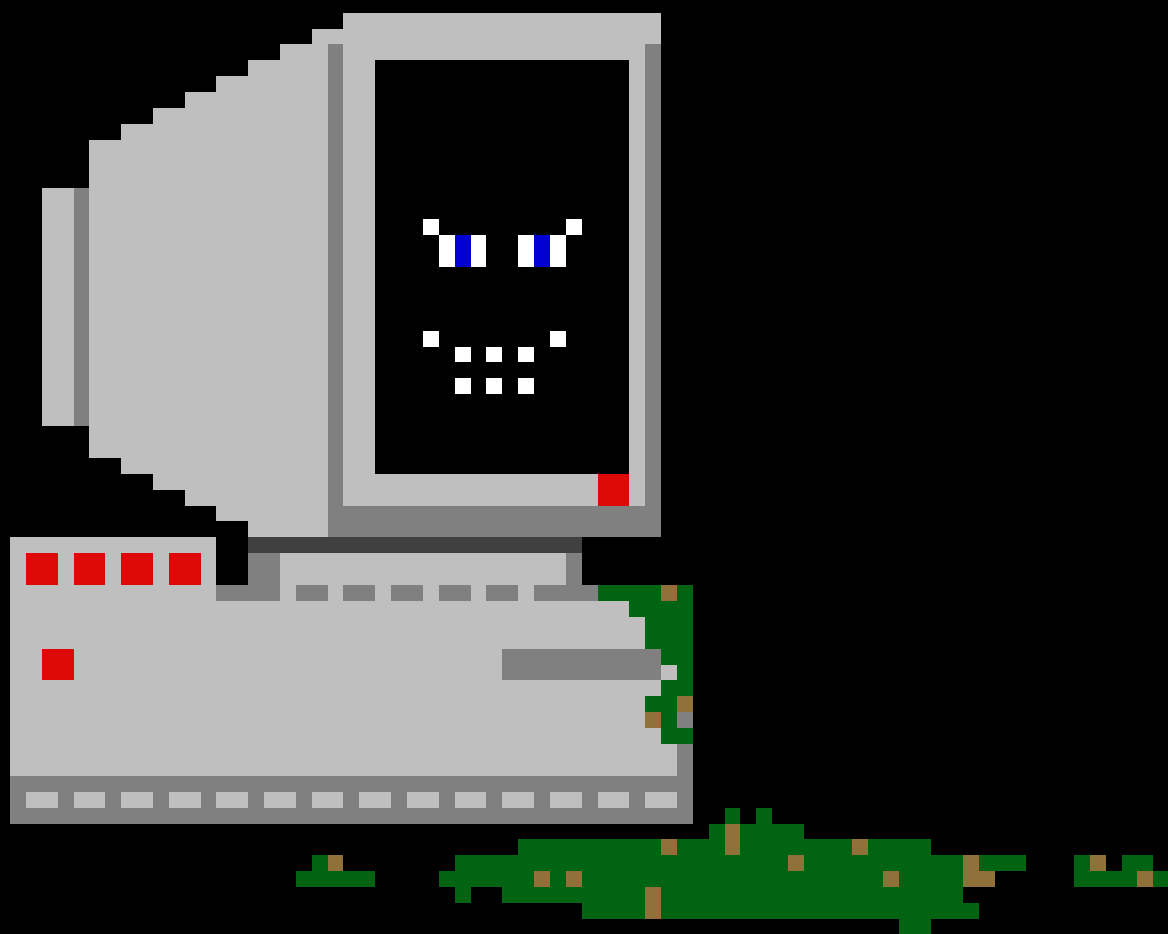 


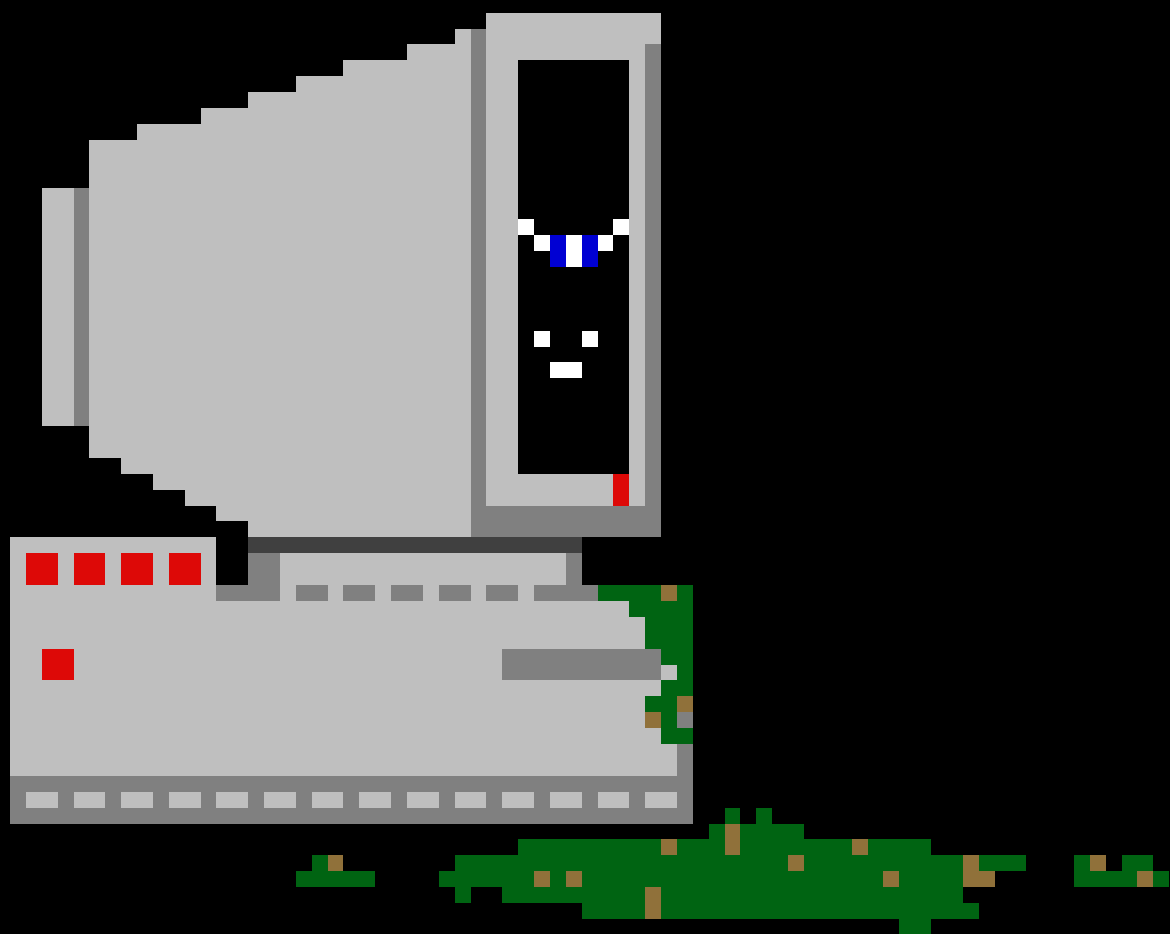 


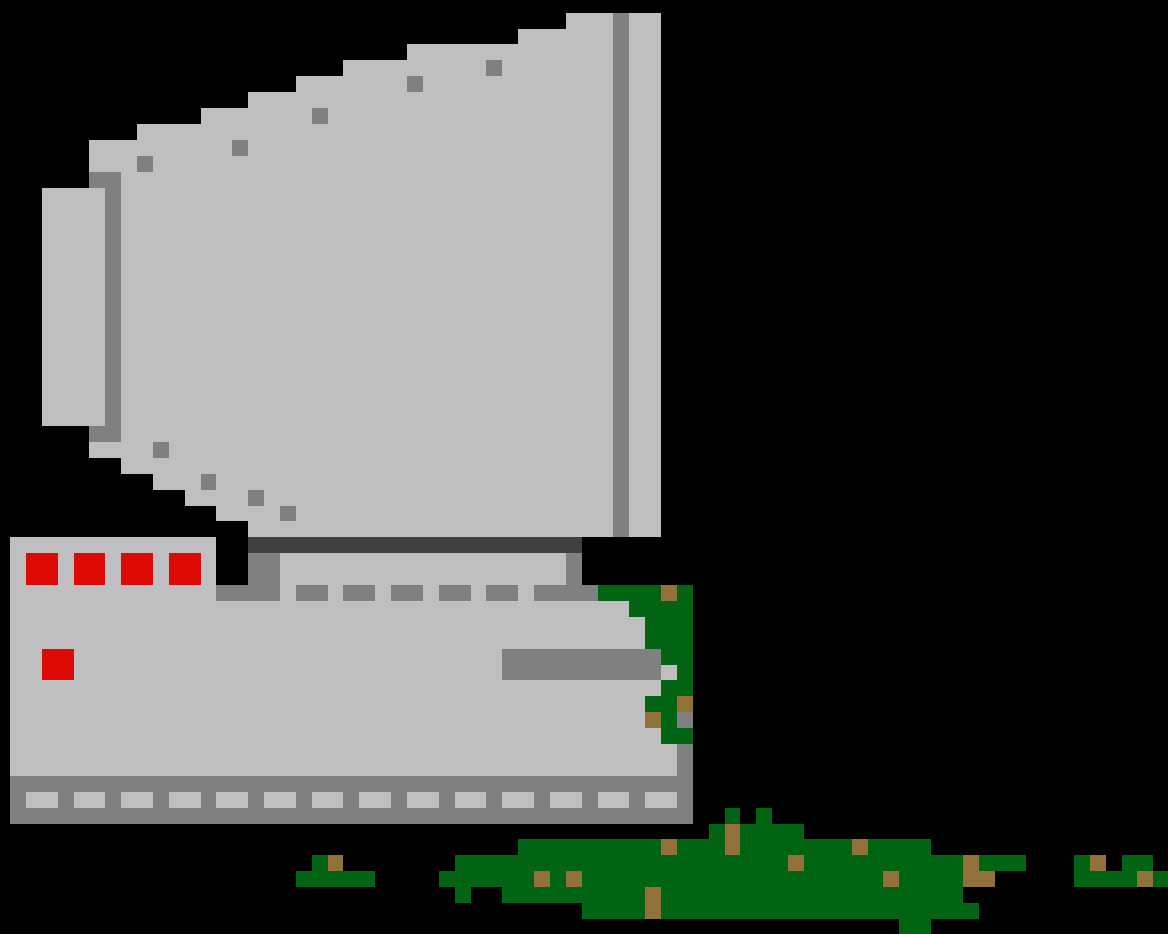 


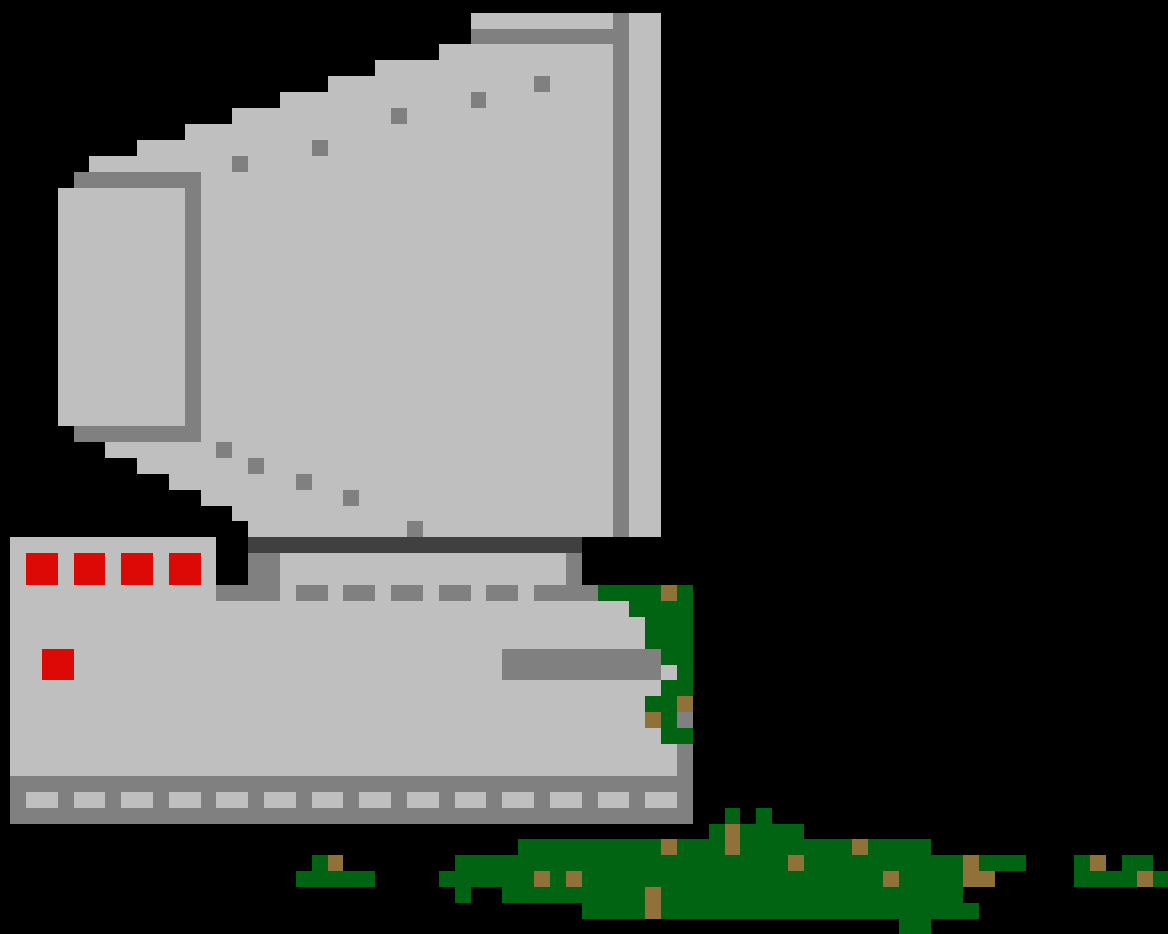 


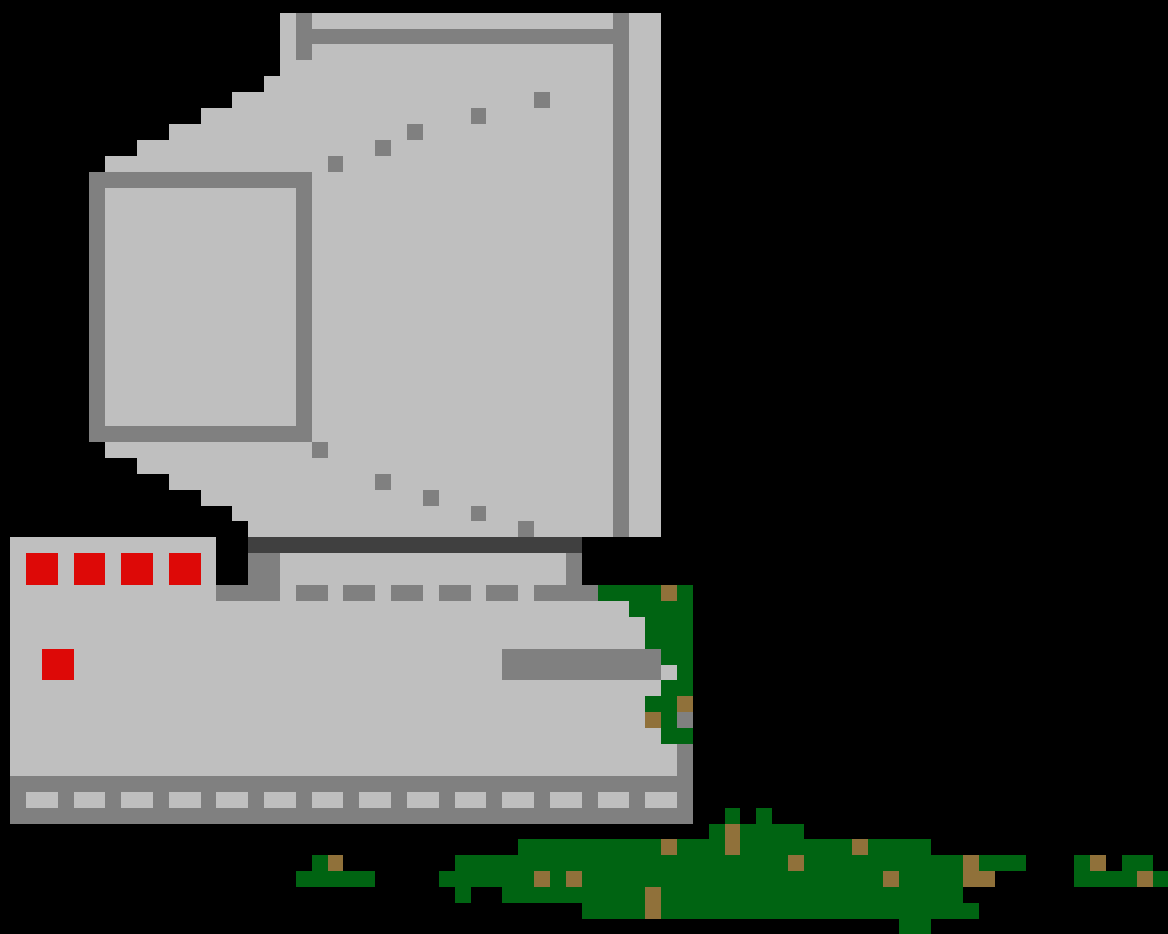 


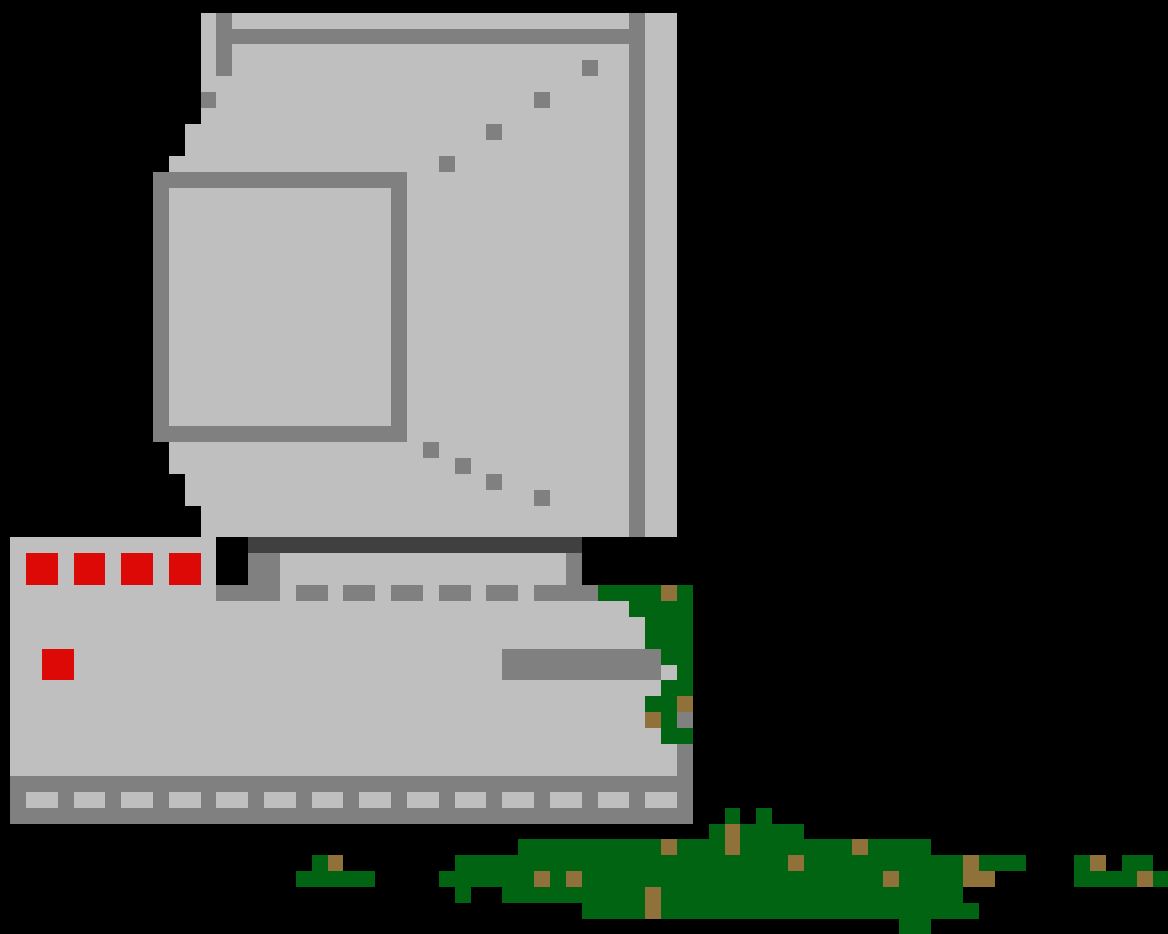 


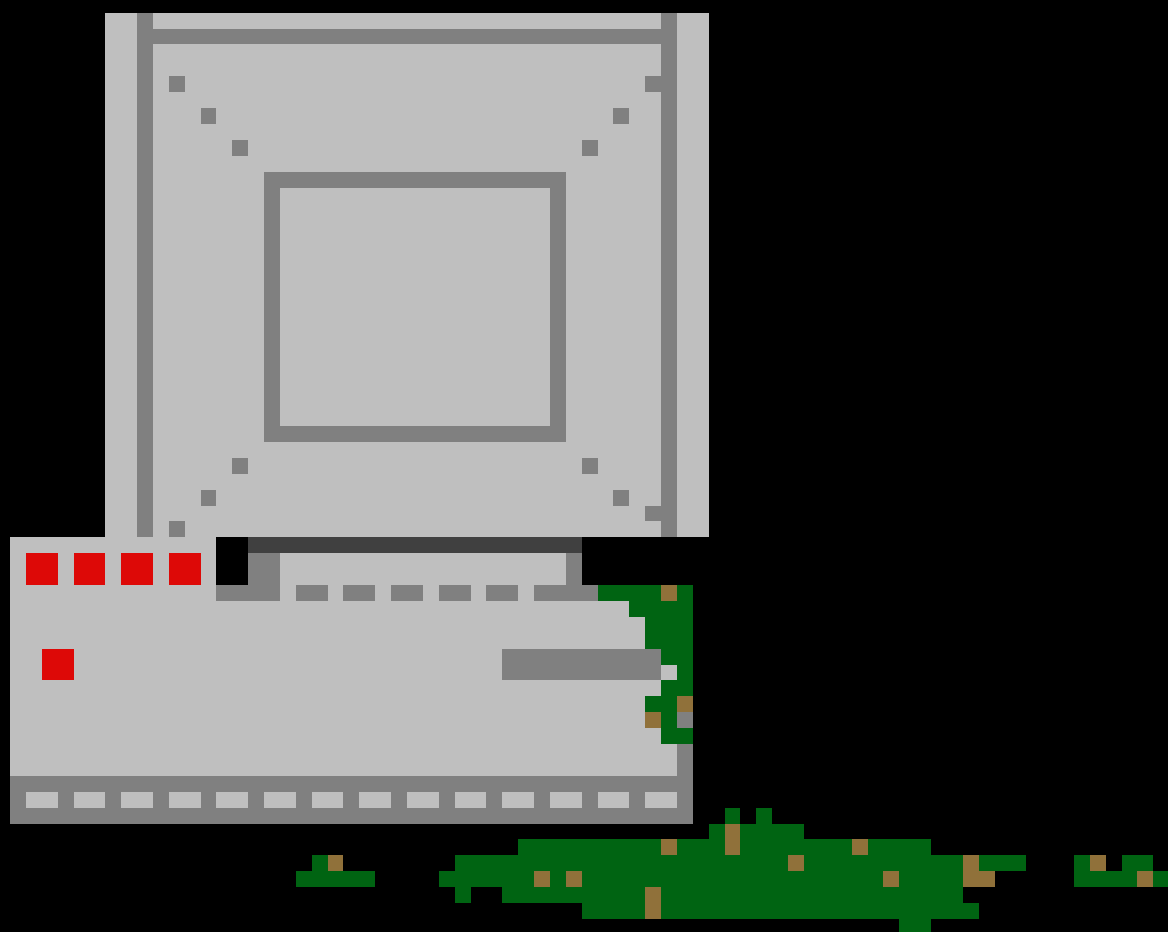 


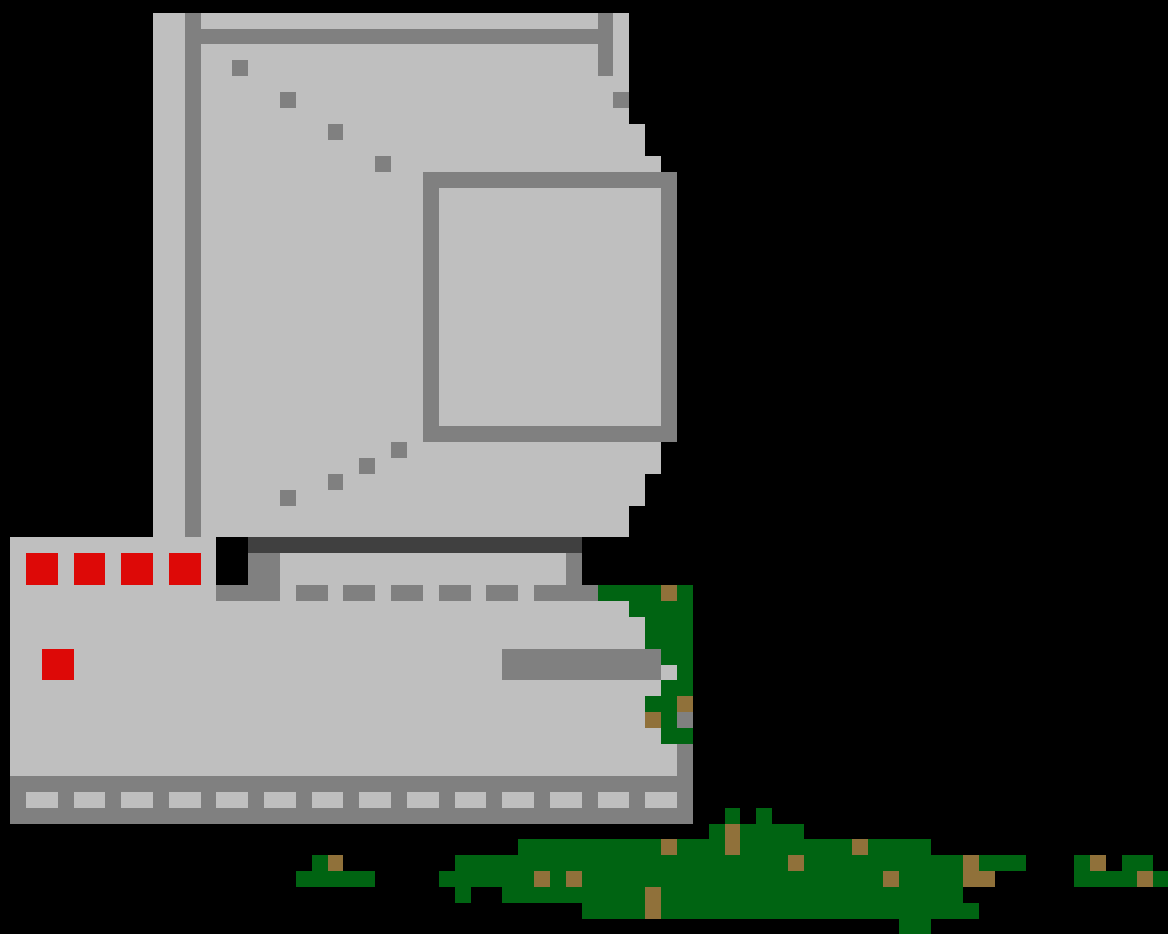 


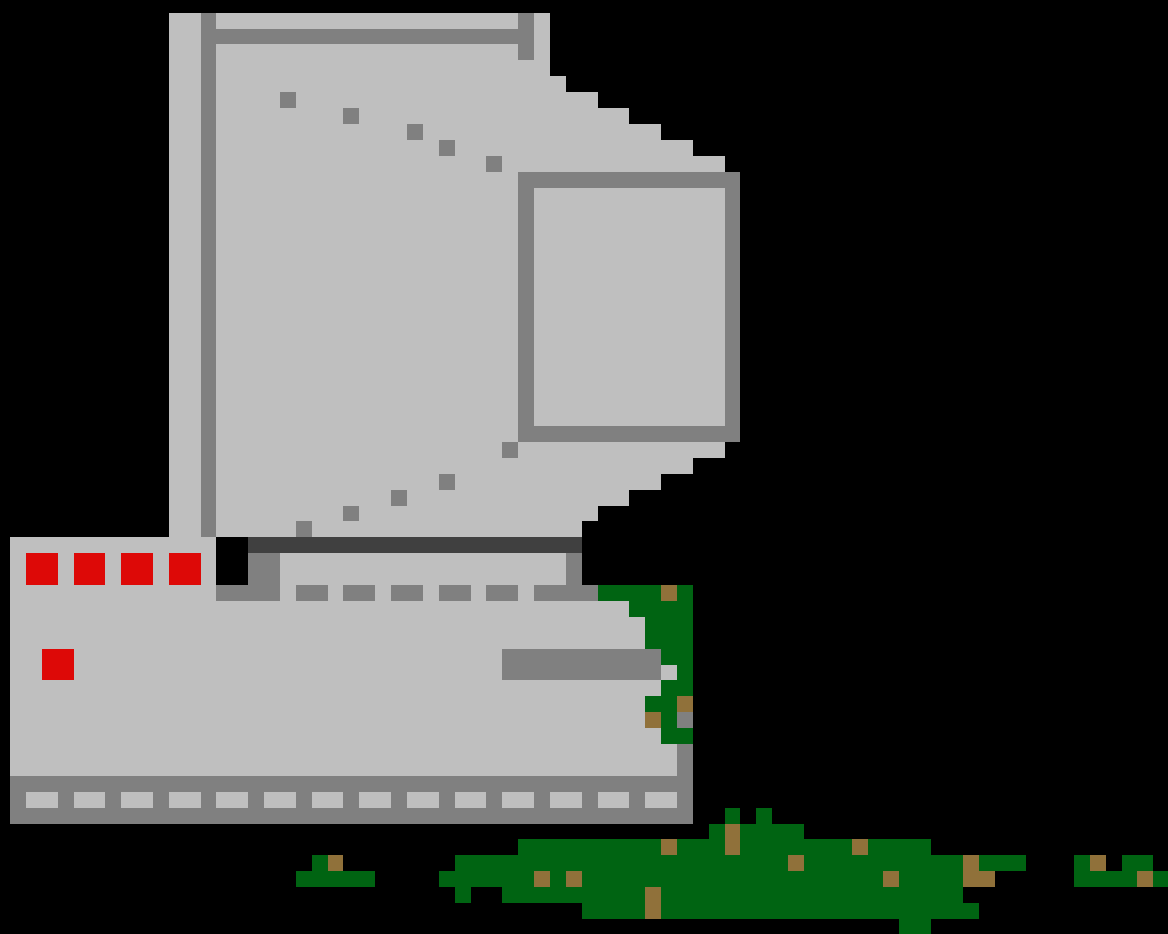 


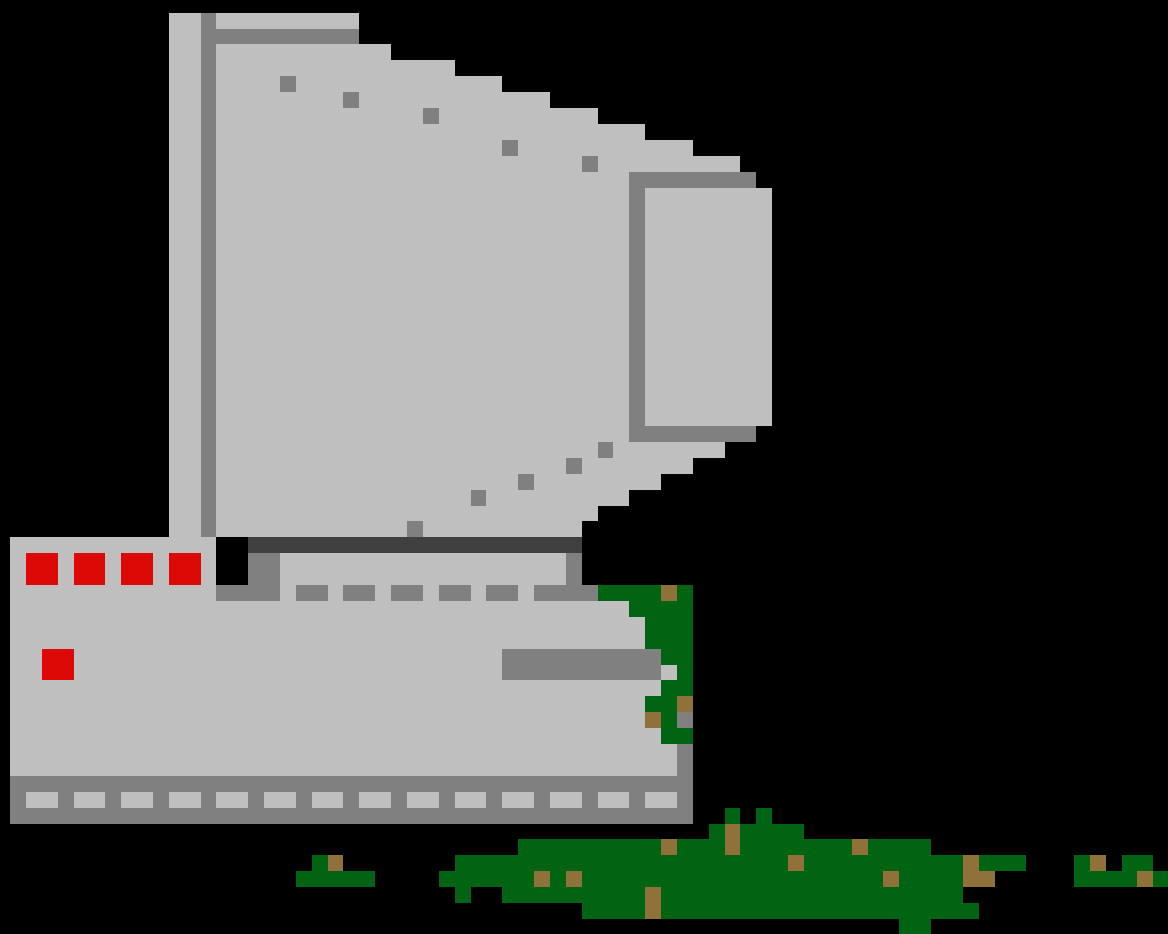 


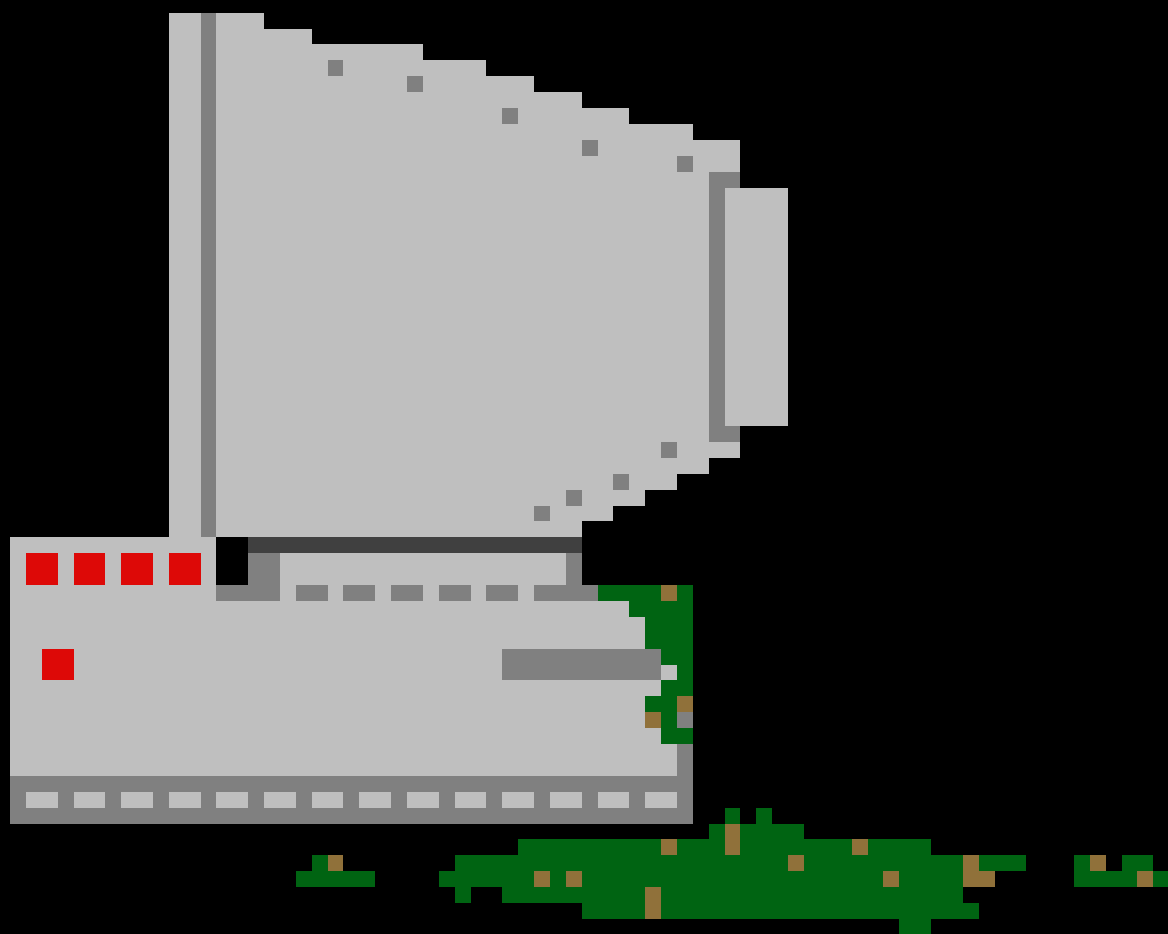 


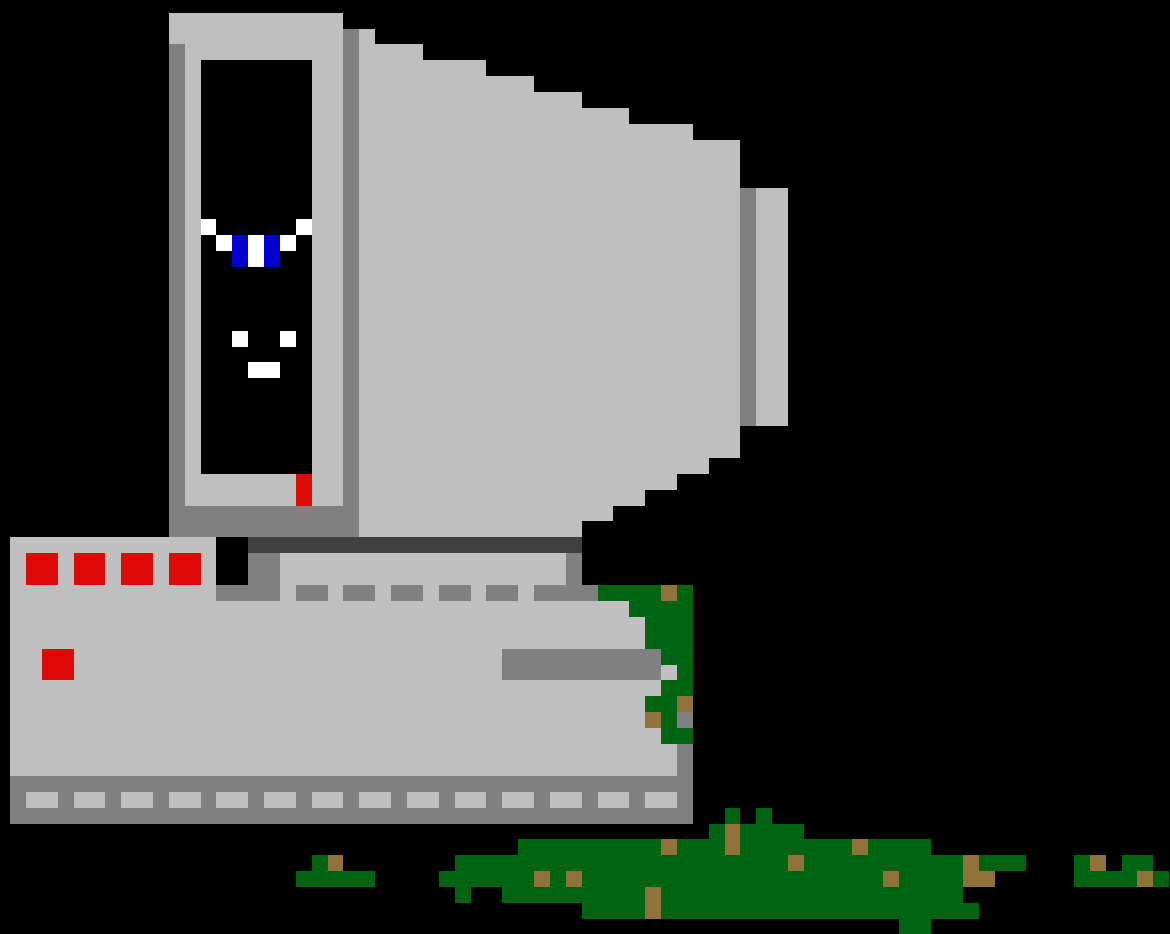 


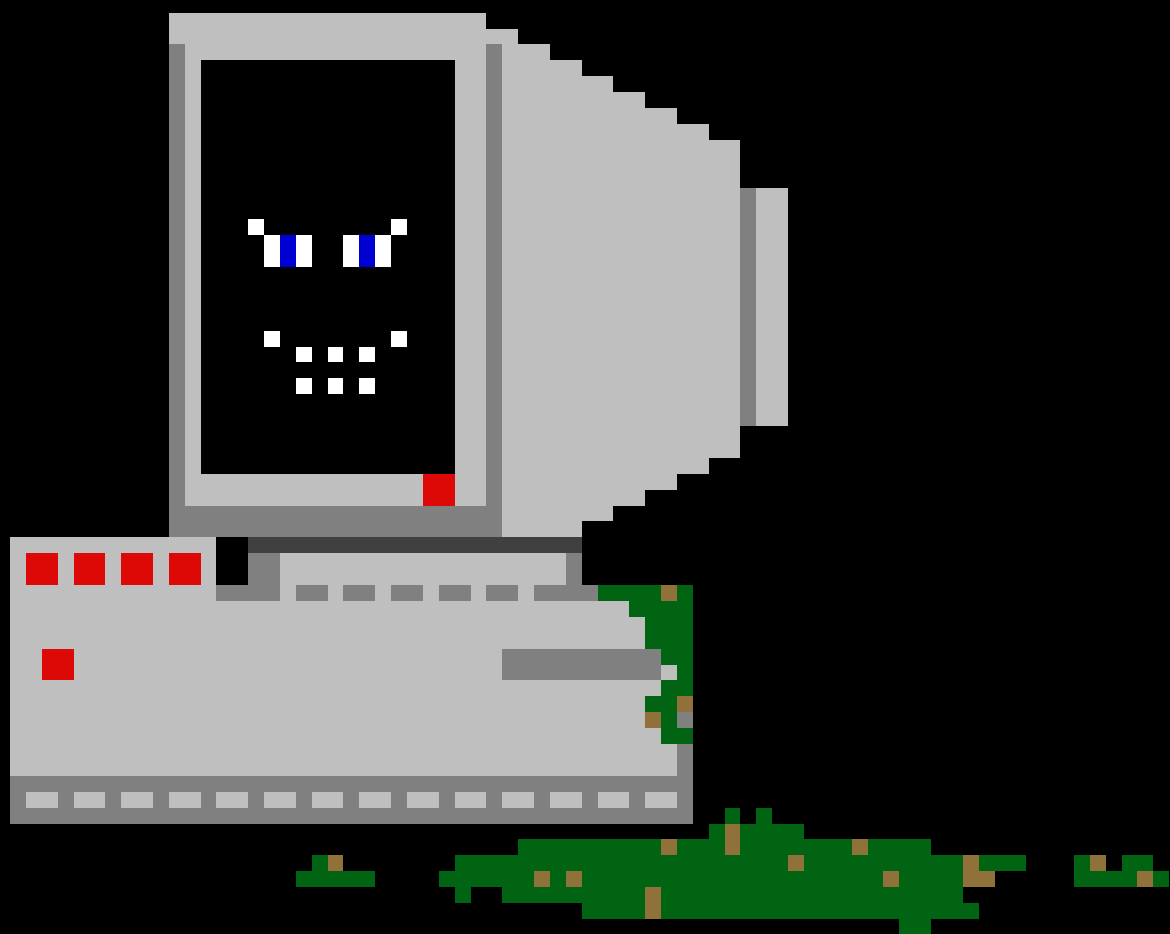 


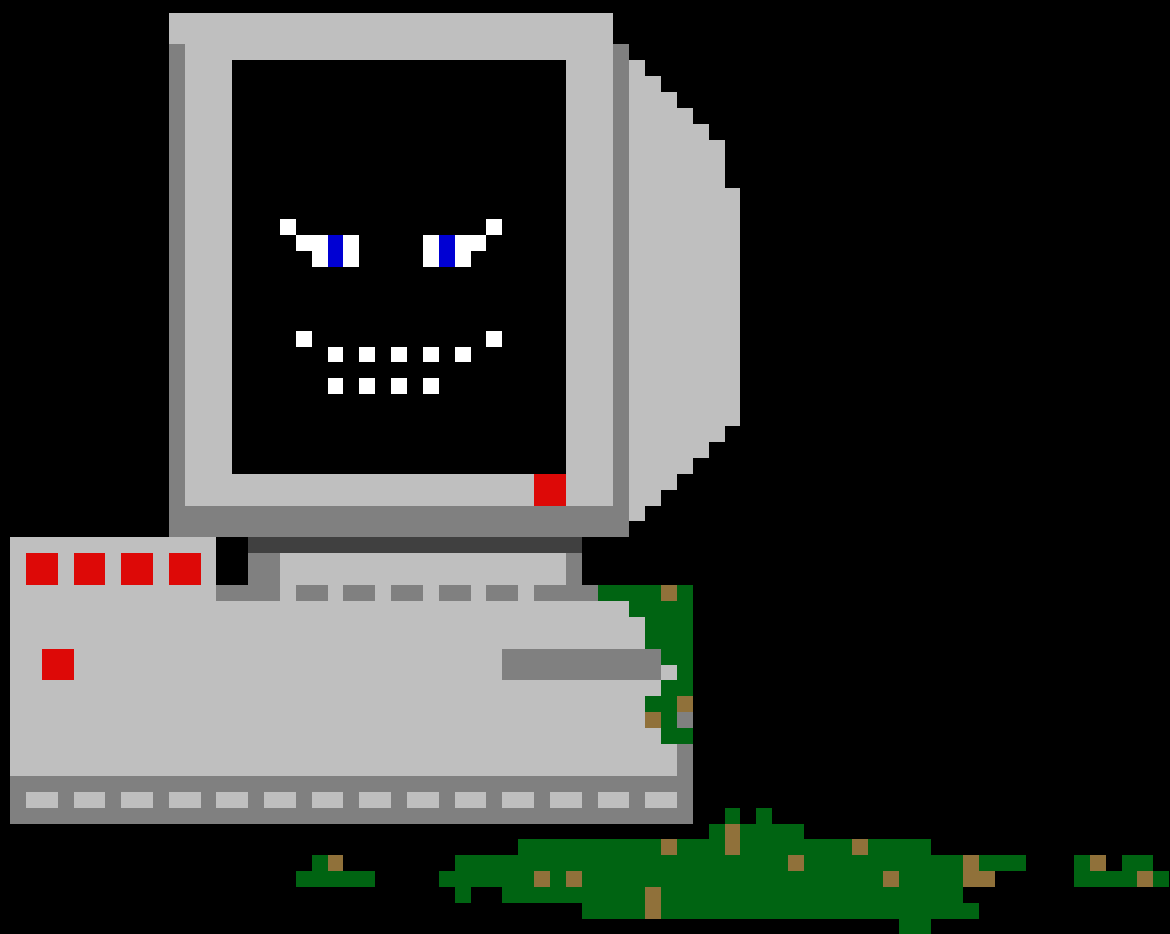 


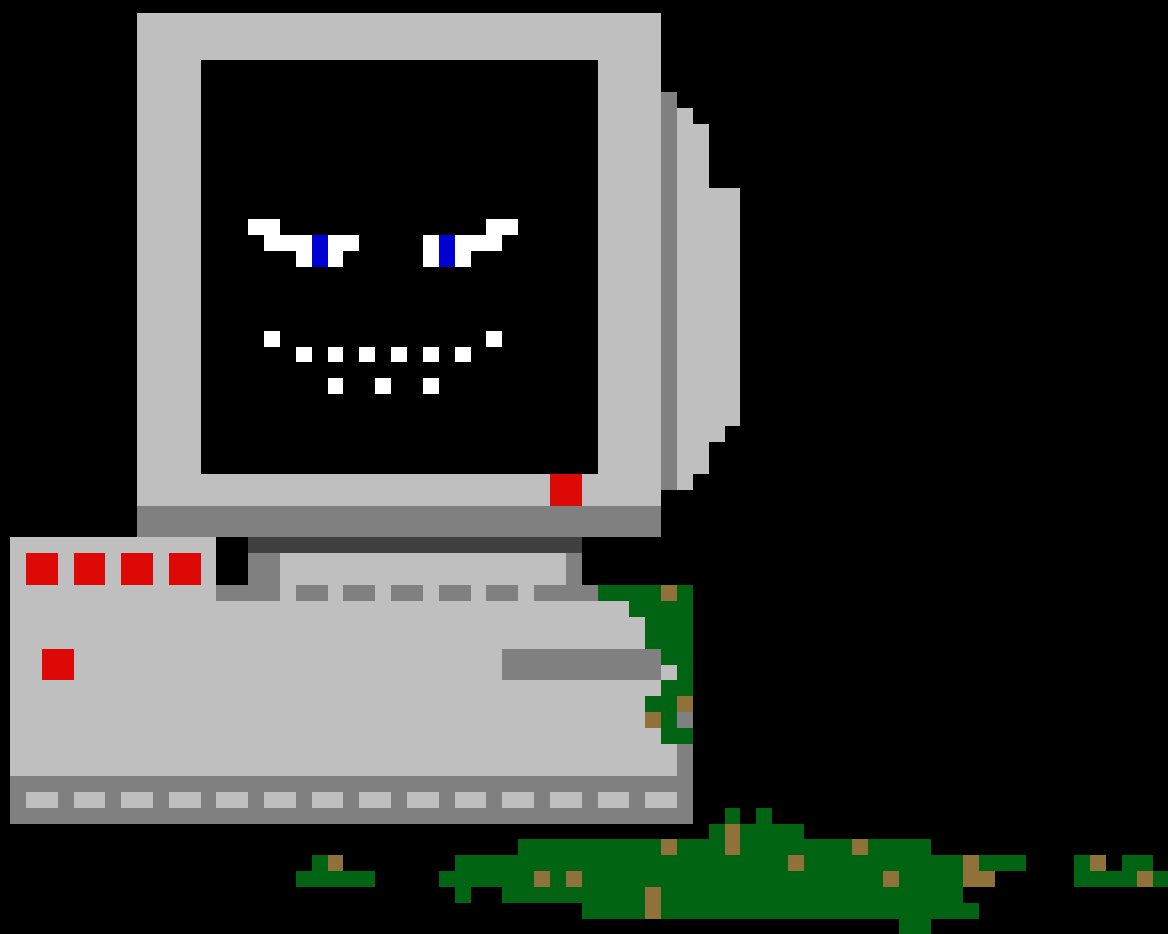 


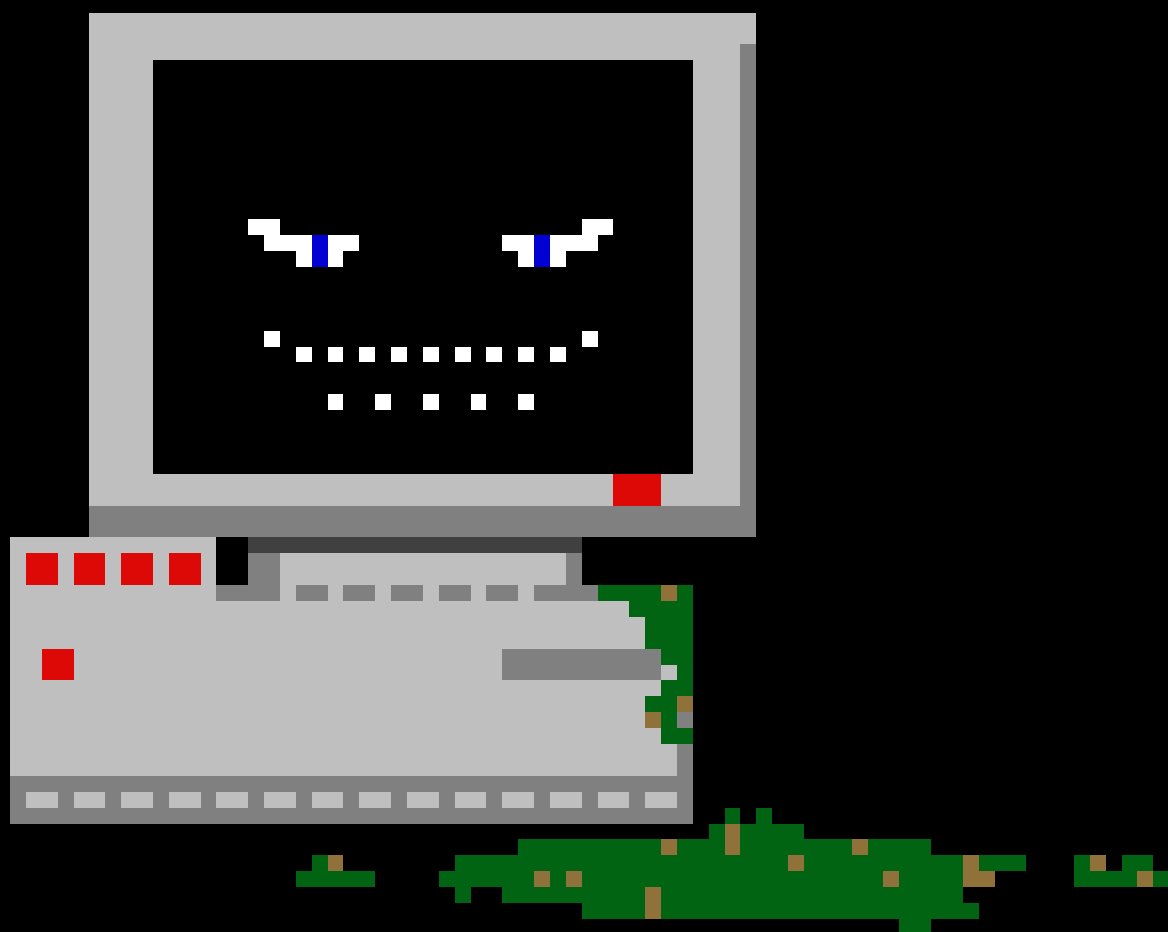 


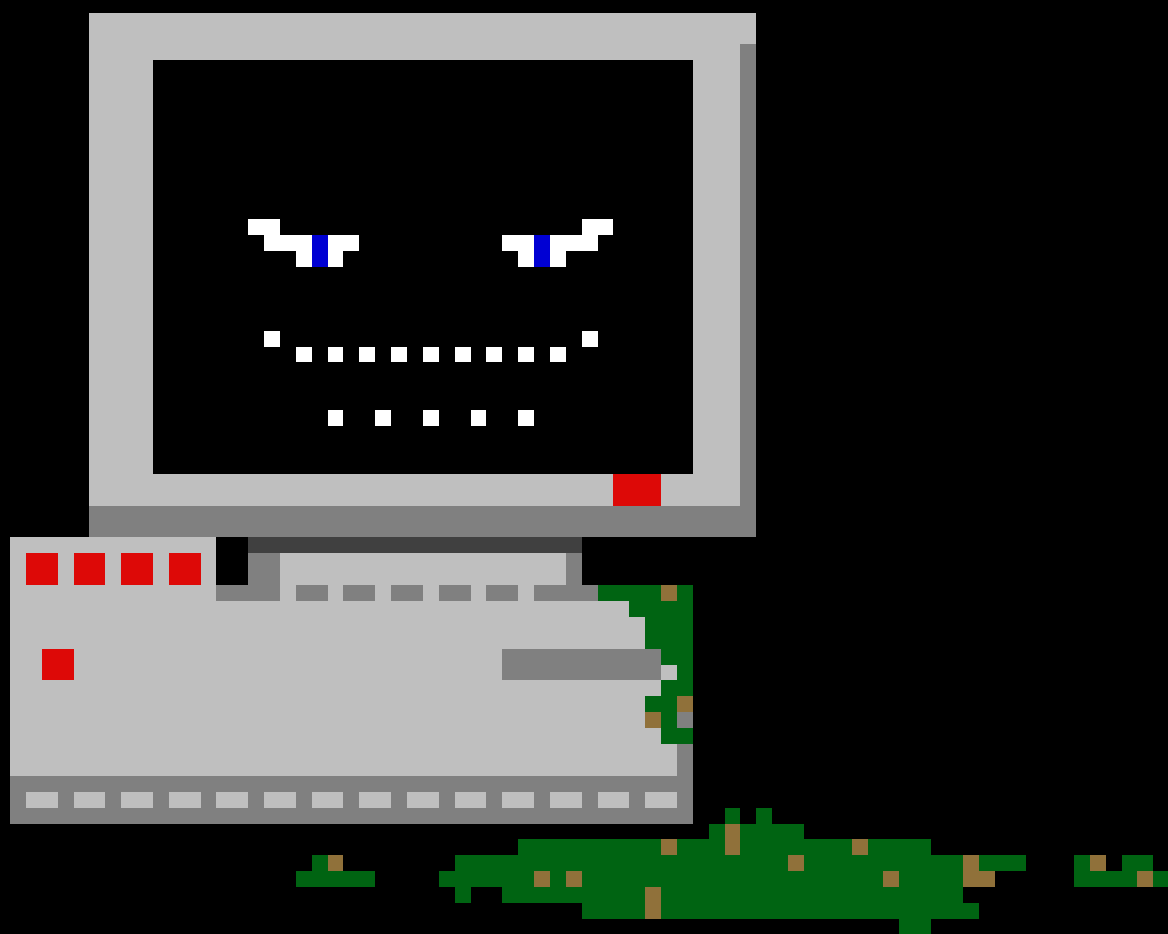

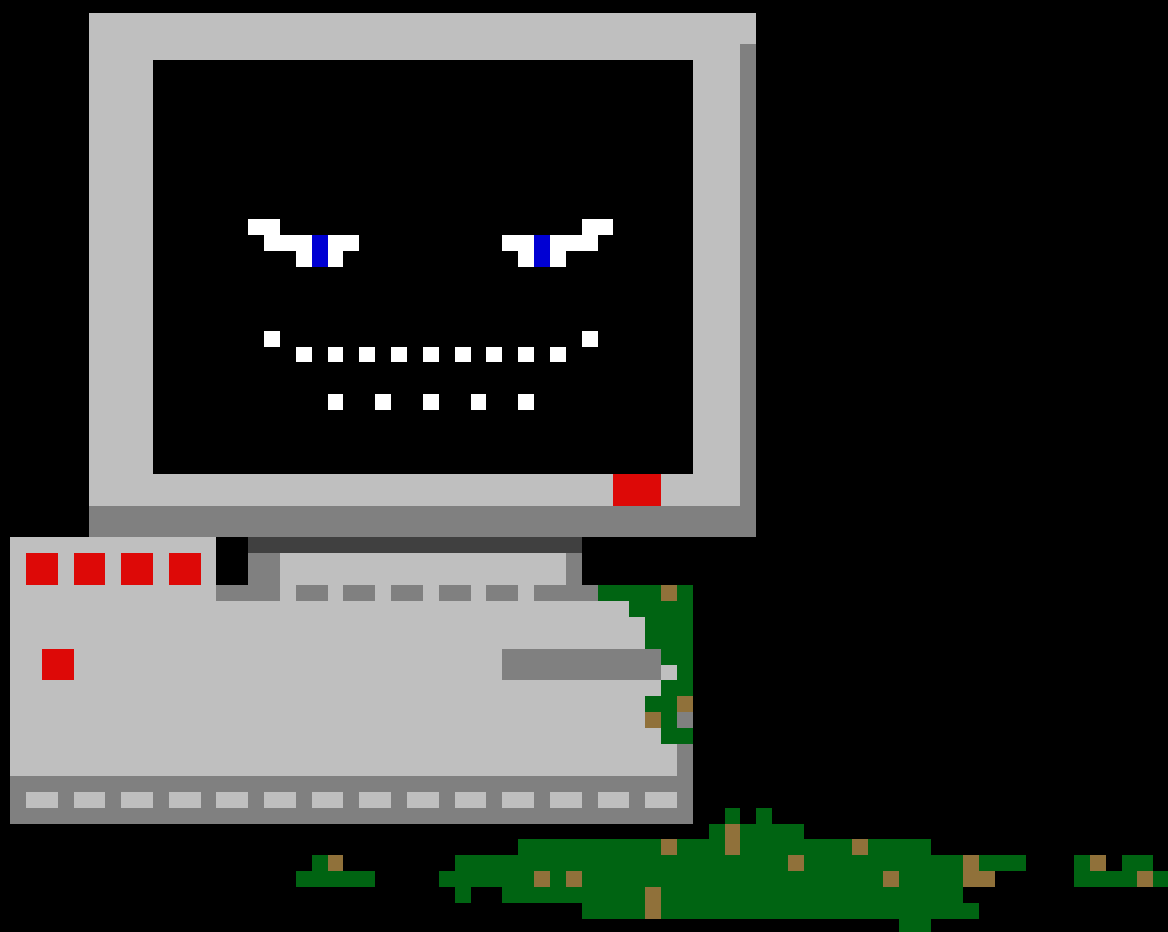

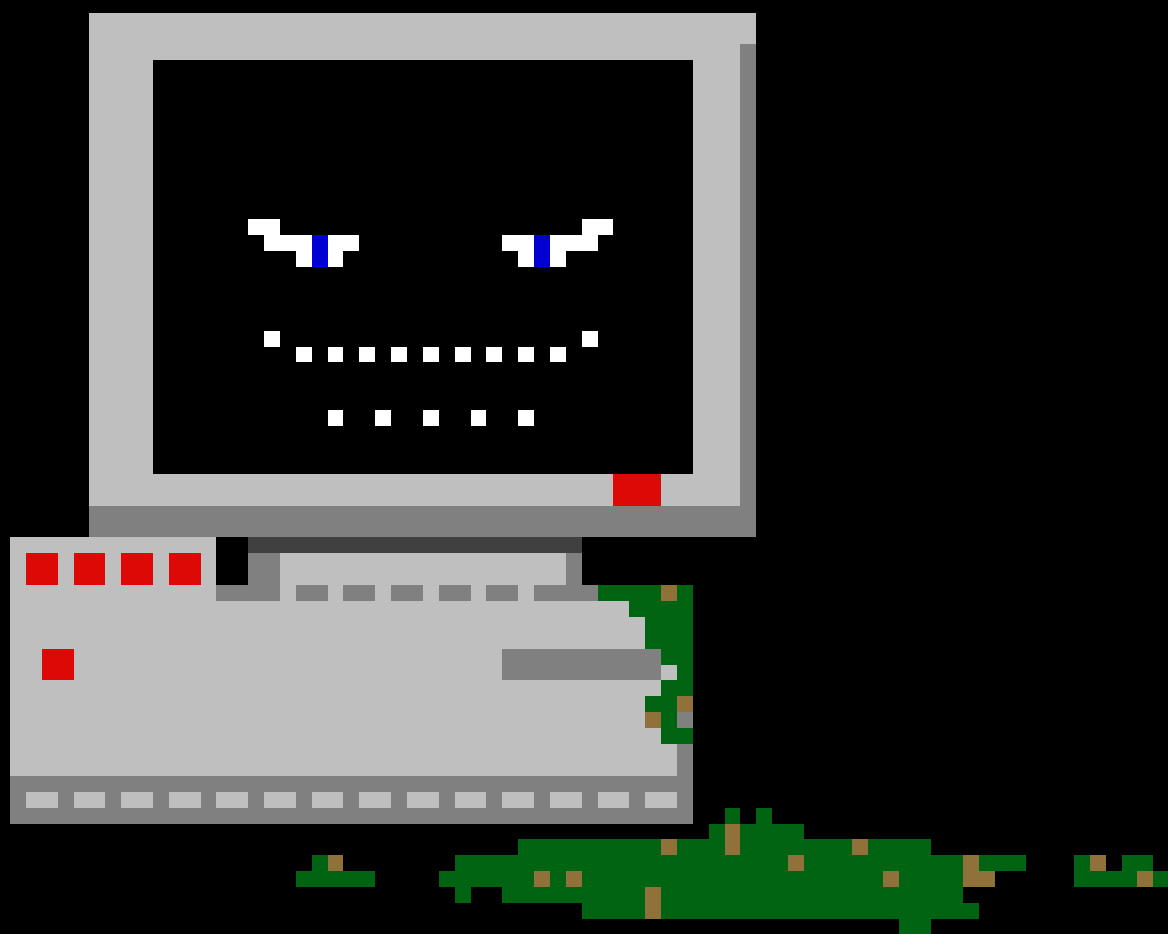

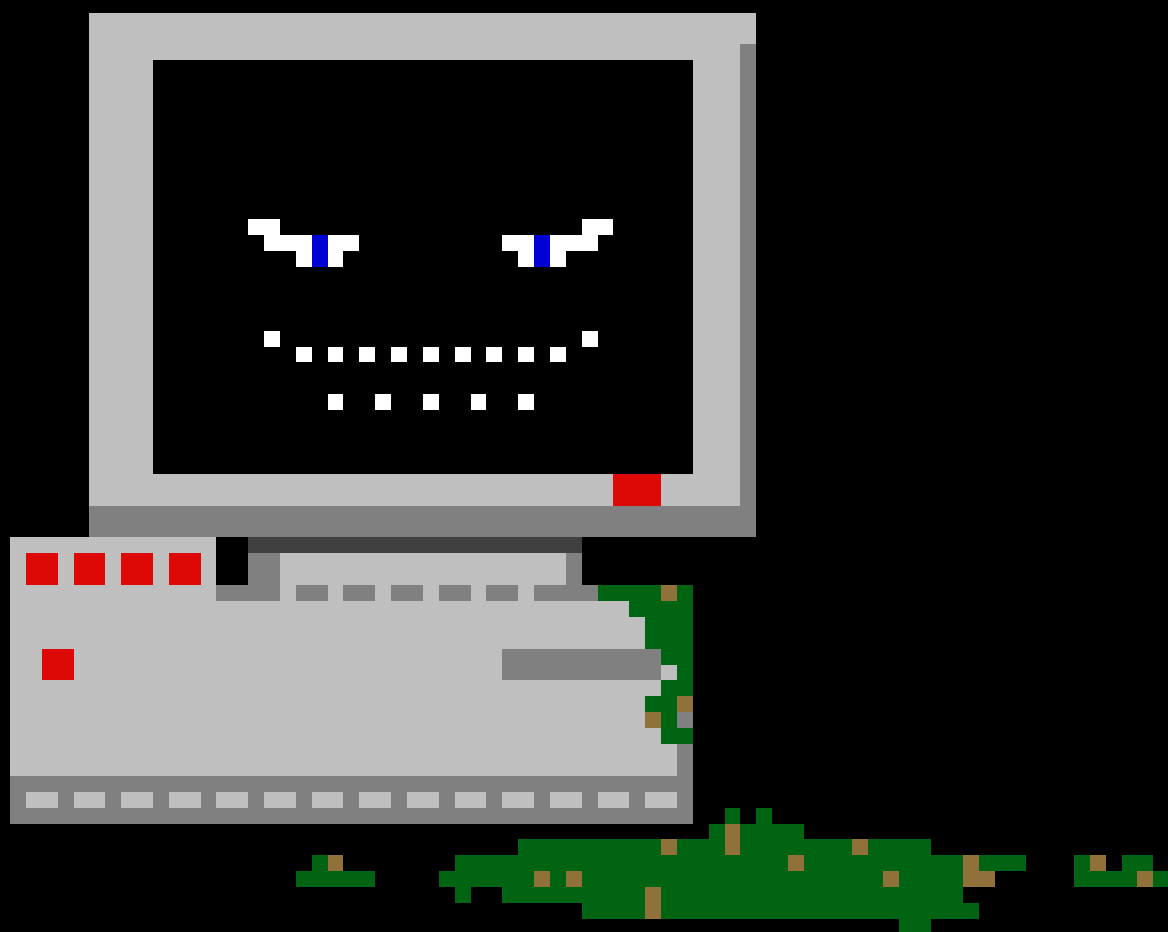

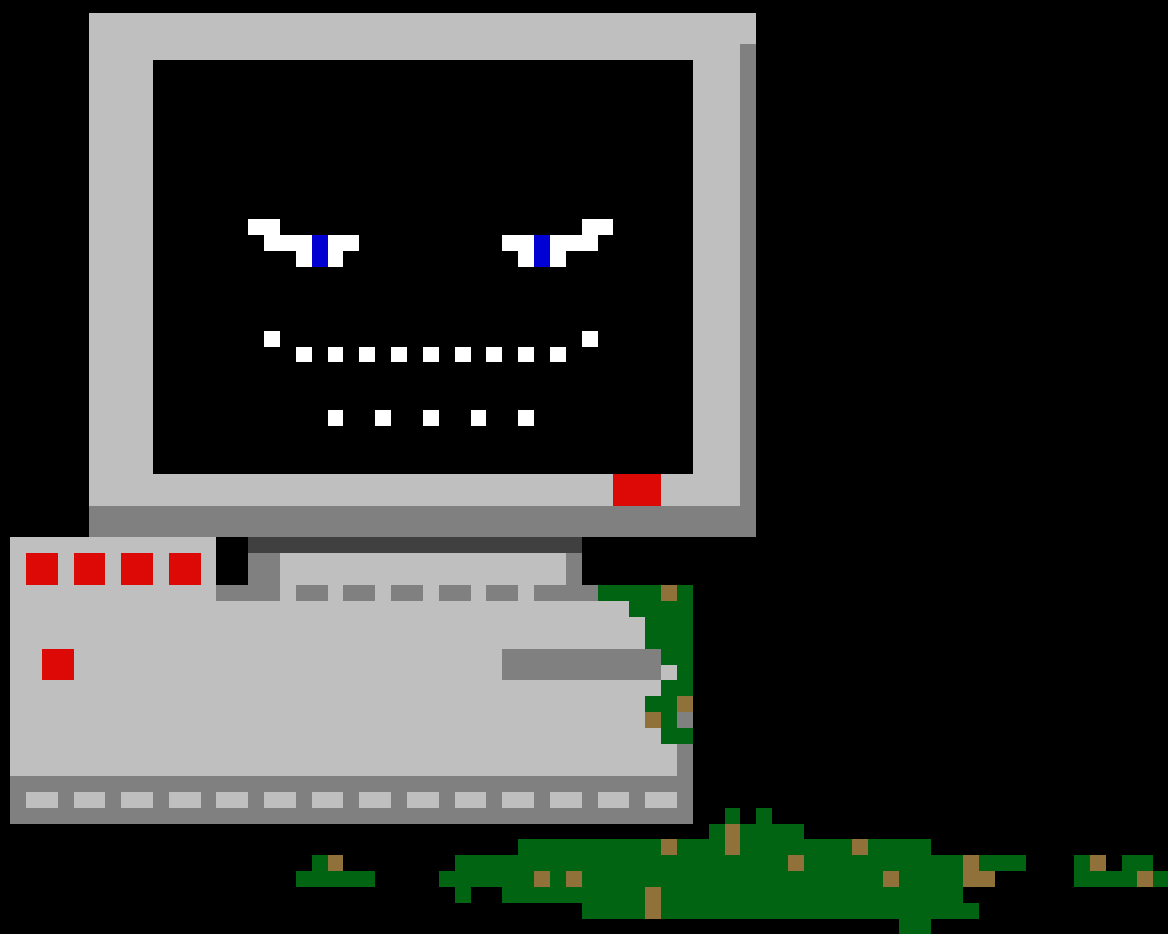



1

 
PROGRAM	

2

TV	

3

Av	

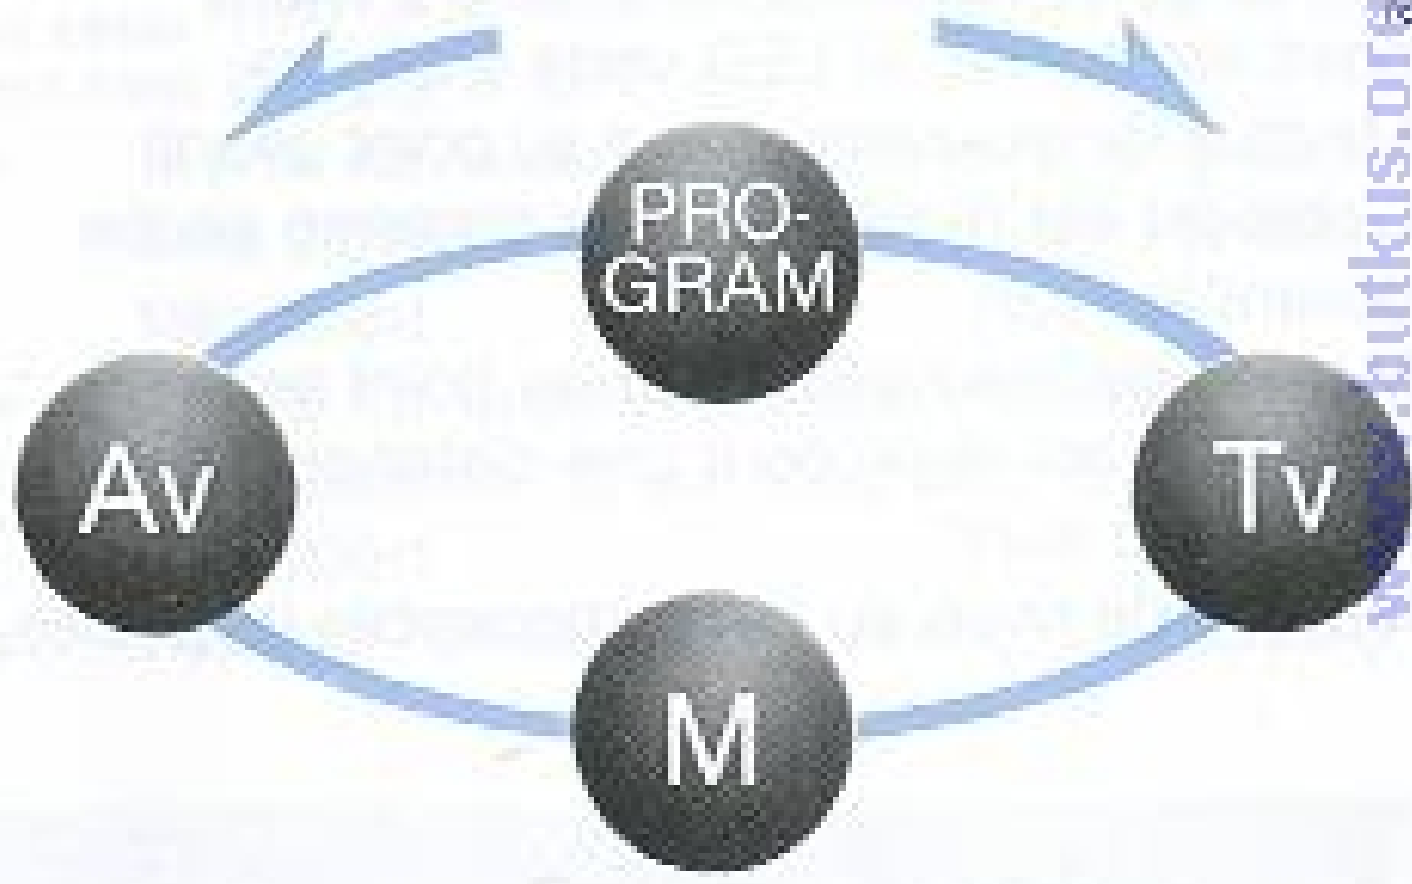

Front Mis-focus Mark

Marke für falsche Scharfeinstellung vorn
Marque de mauvaise mise au point avant
Marca de enfoque incorrecto anterior



Rear Mis-focus Mark


Marke für falsche Scharfeinstellung hinten
Marque de mauvaise mise au point arrière
Marca de enfoque incorrecto posterior



"Focusing impossible" Mark

Marke "Fokussierung unmöglich"
Marque de mise au point impossible
Marca de "enfoque imposible"



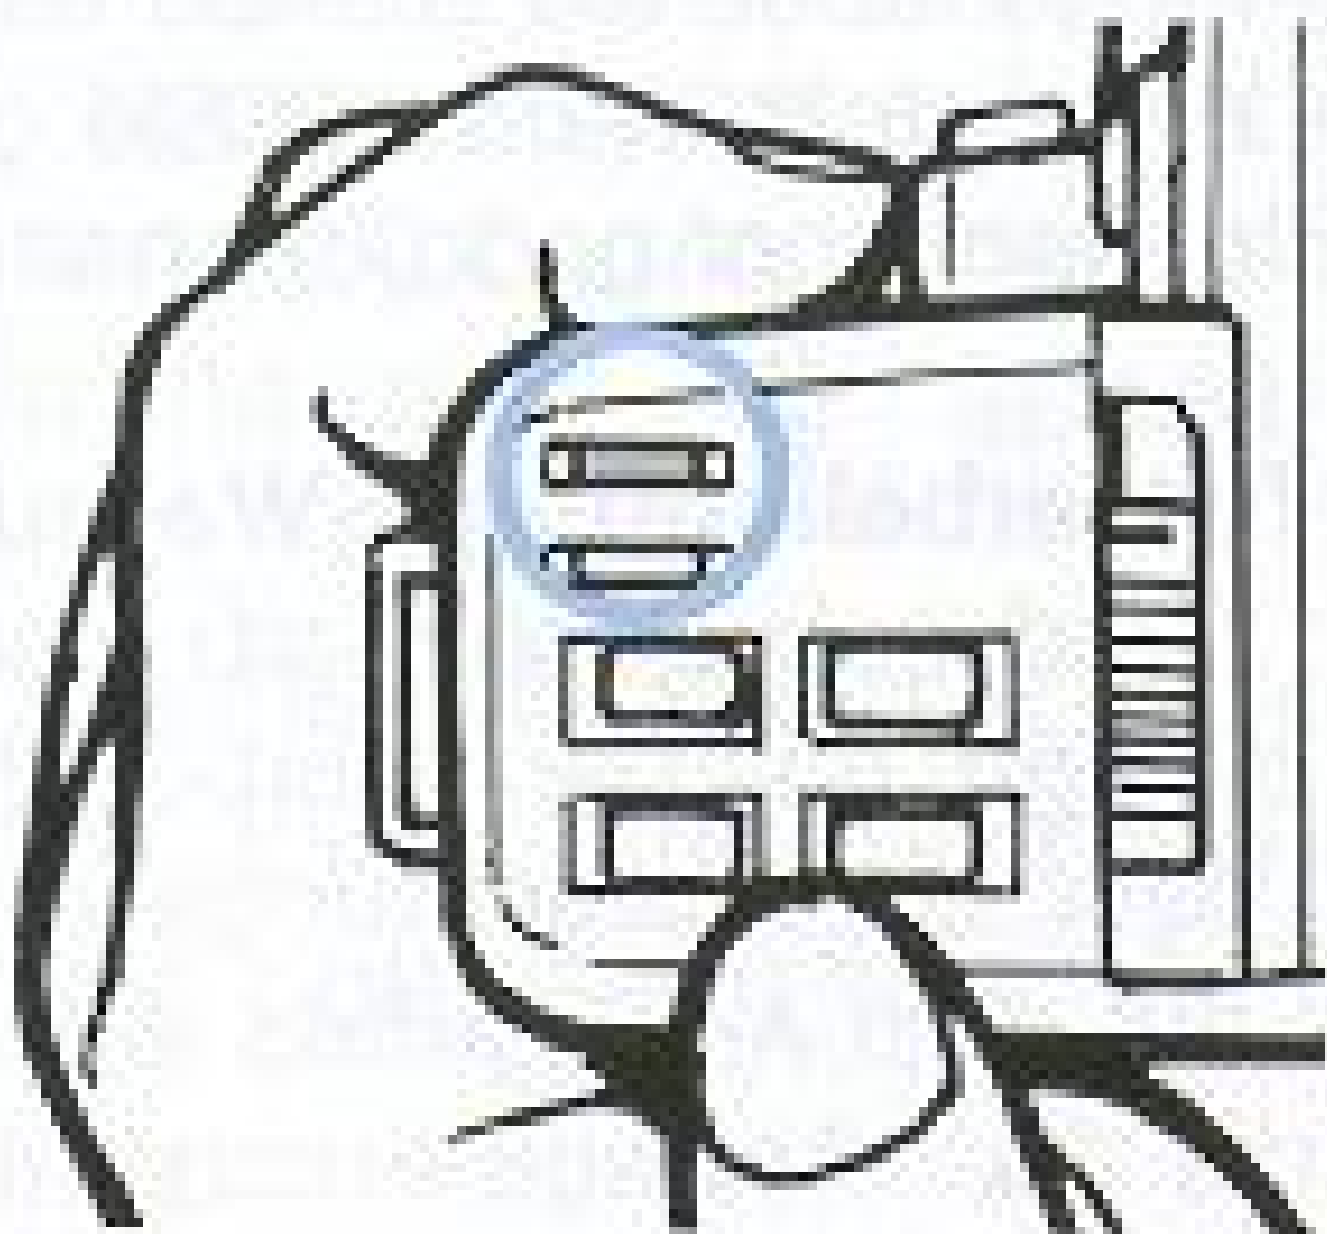

Overexposure
Überbelichtung
Surexposition
Sobreexposición

 


Underexposure
Unterbelichtung
Sous-exposition
Subexposición



Correct exposure
Richtige Belichtung
Exposition correcte
Exposición correcta



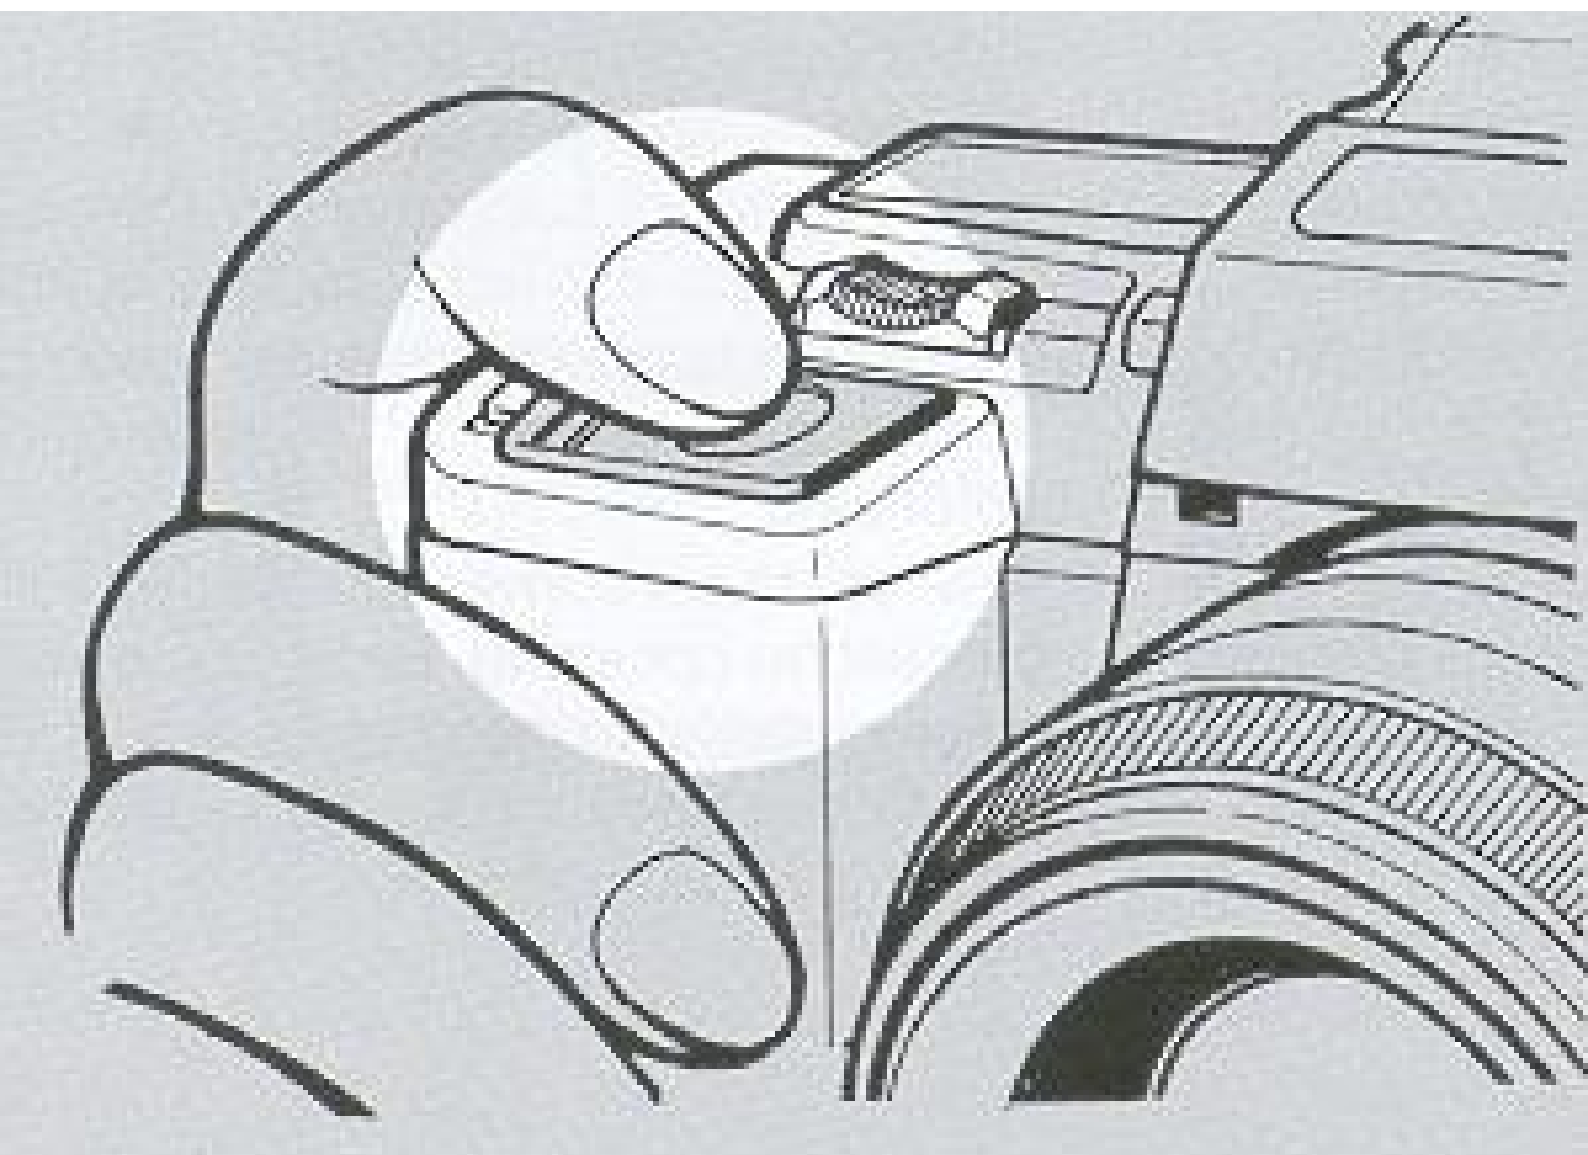

PROGRAM



12

 
Q

 
 
125

5.6

S

AF

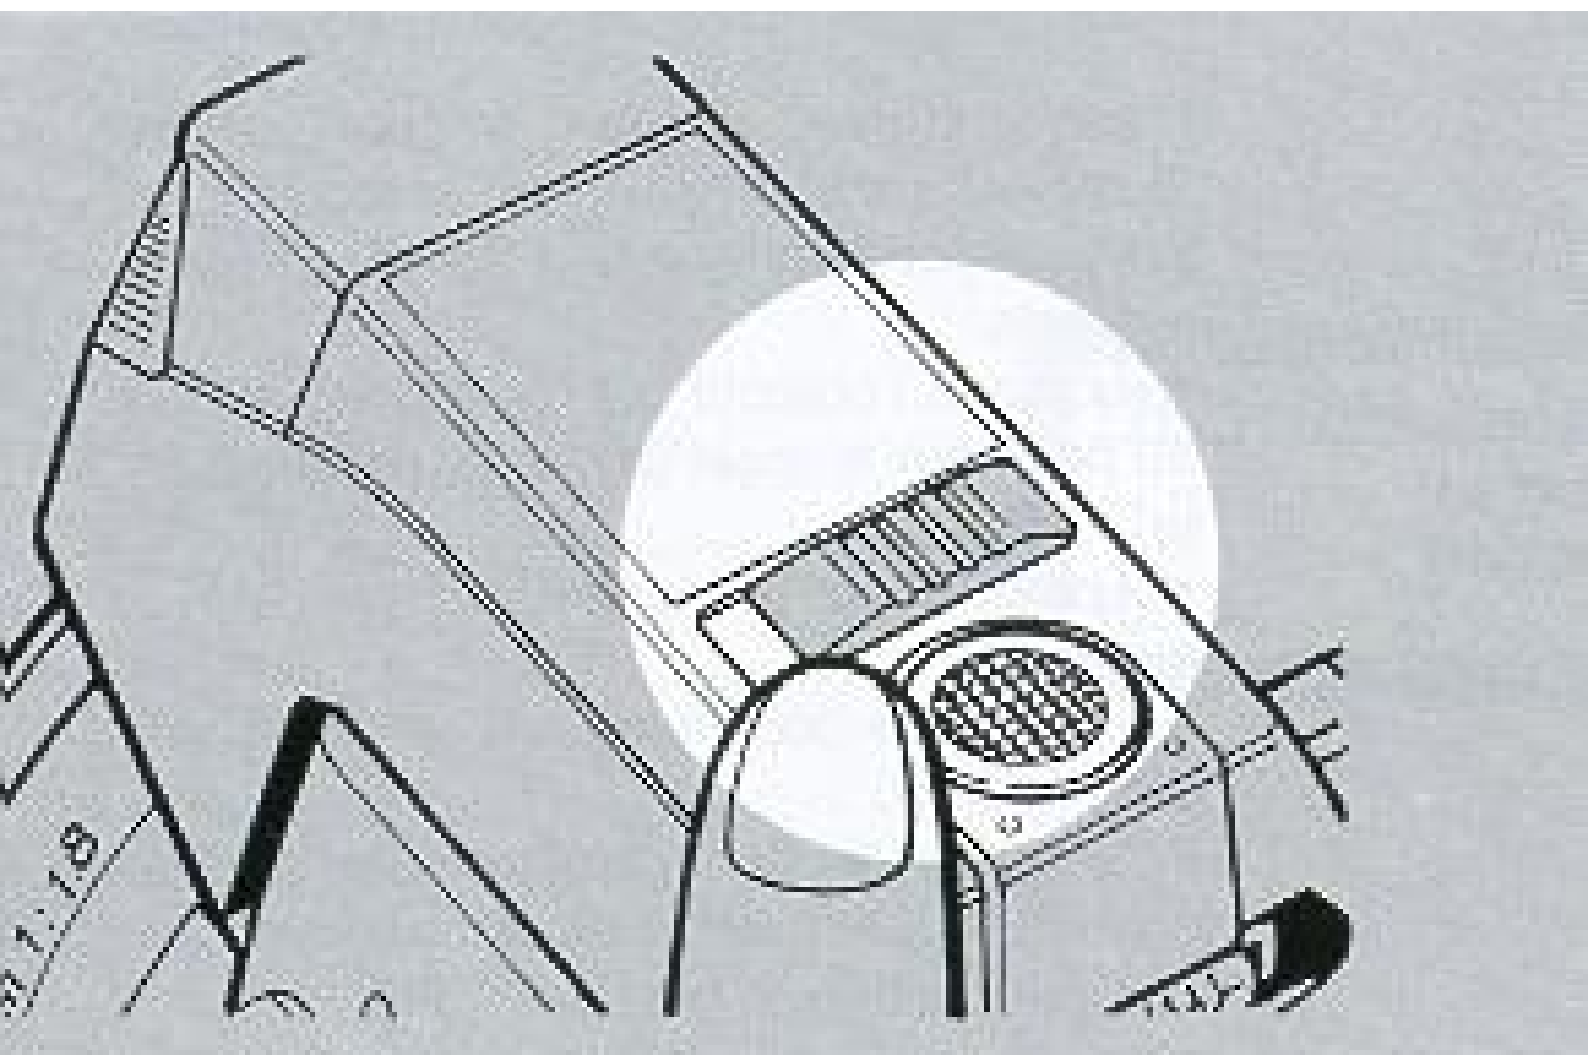

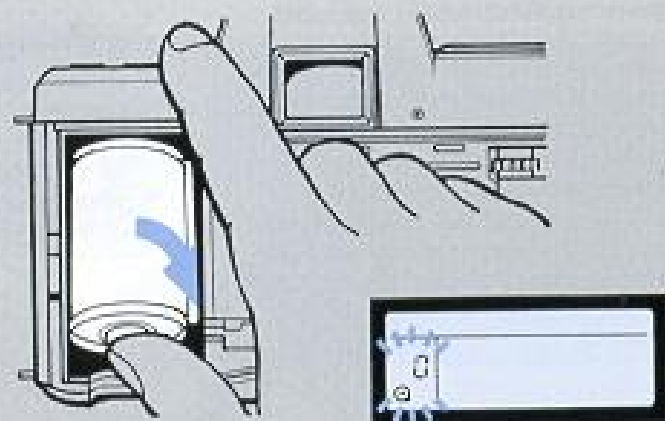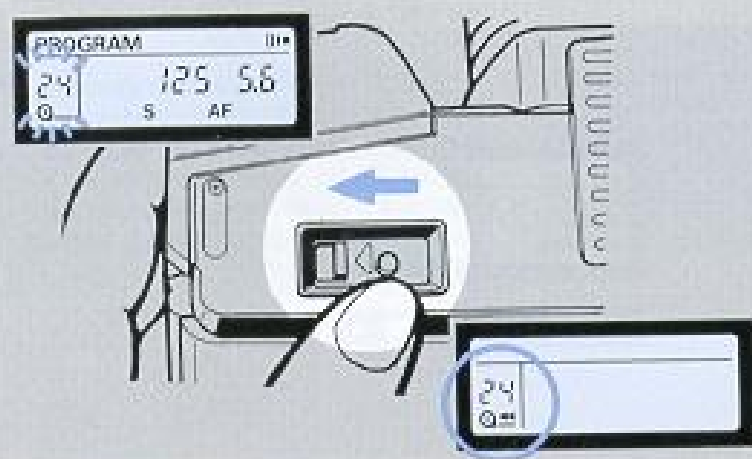

①



 
①



 


 
USE 161 FILM ONLY

②

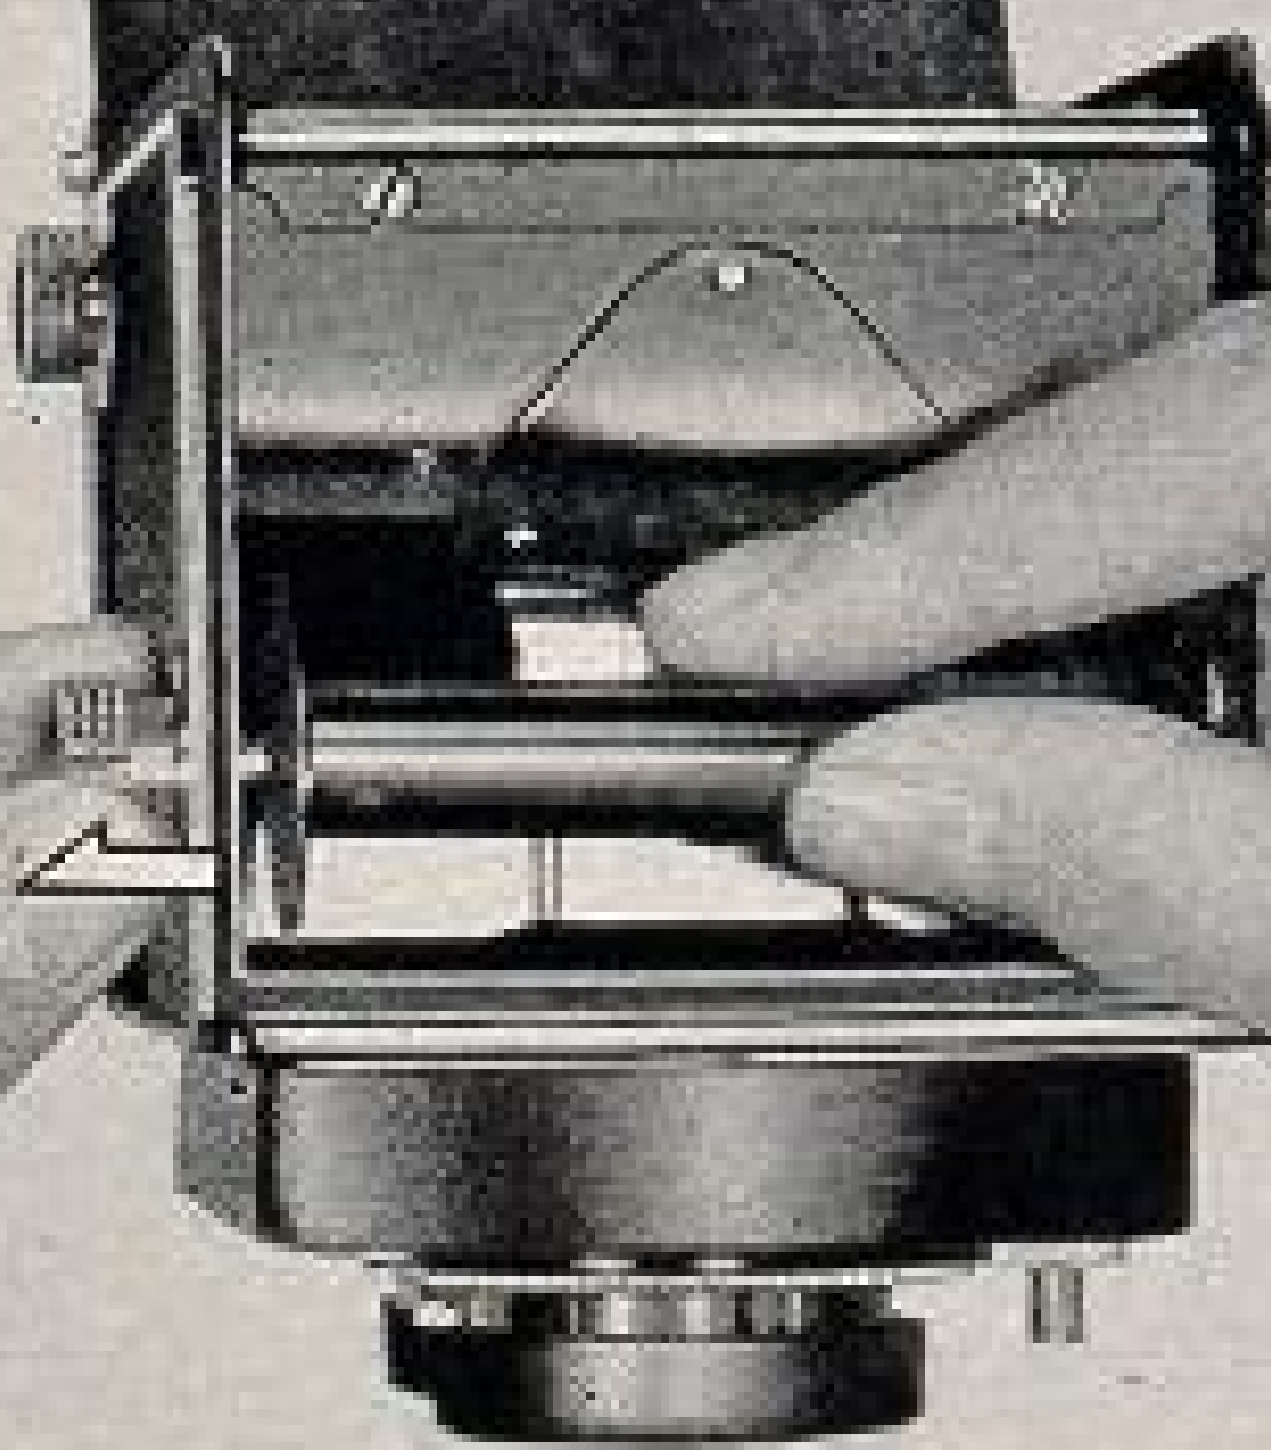




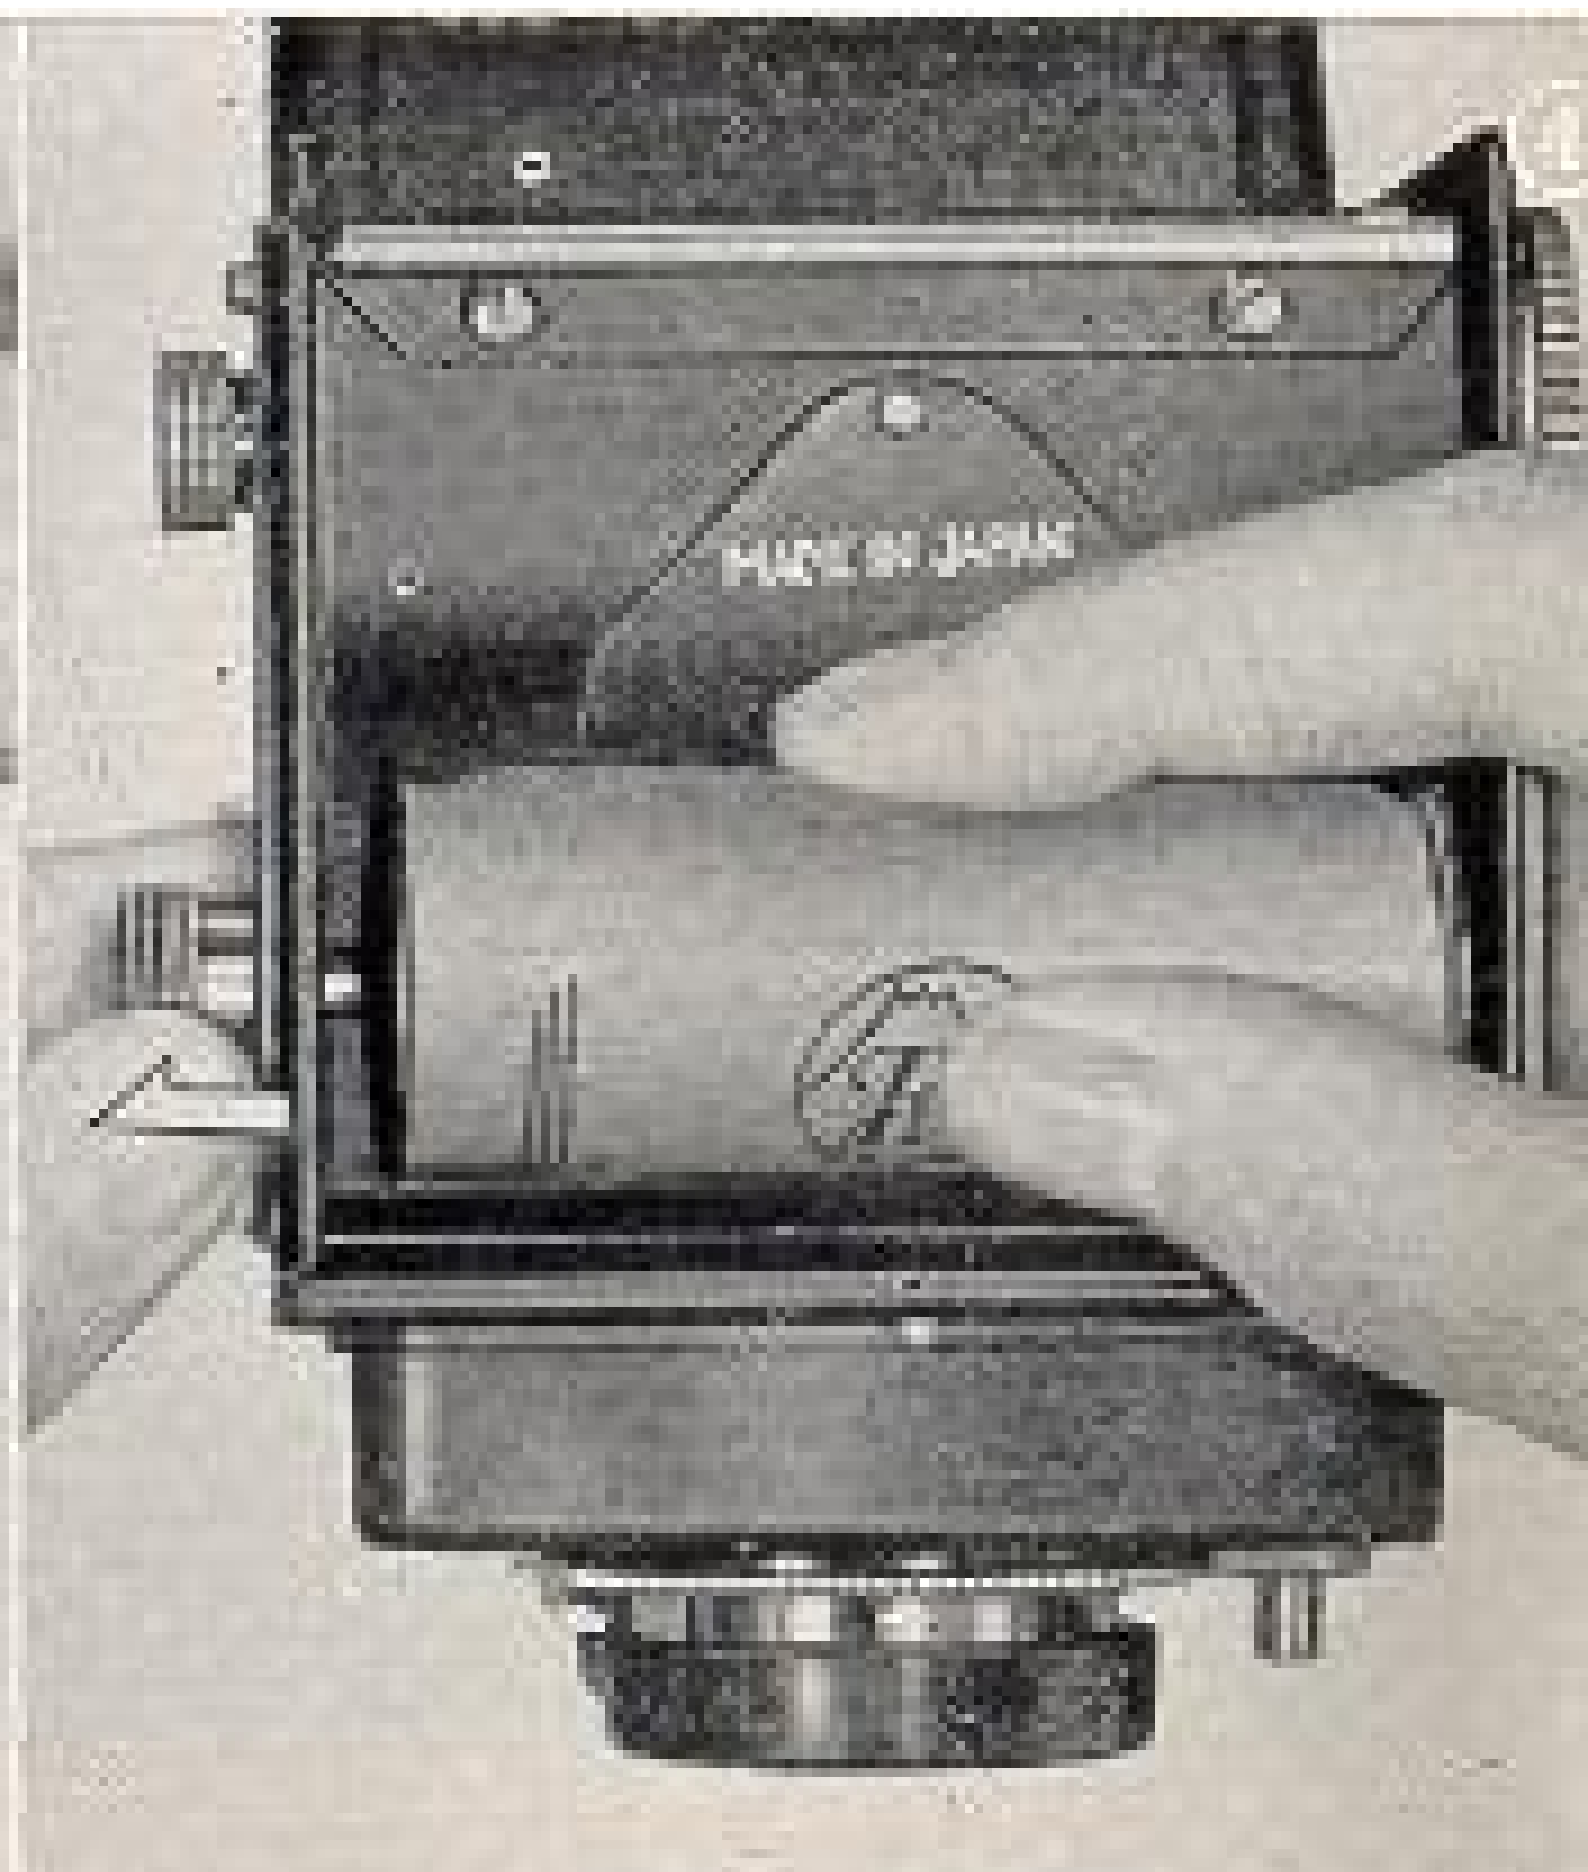

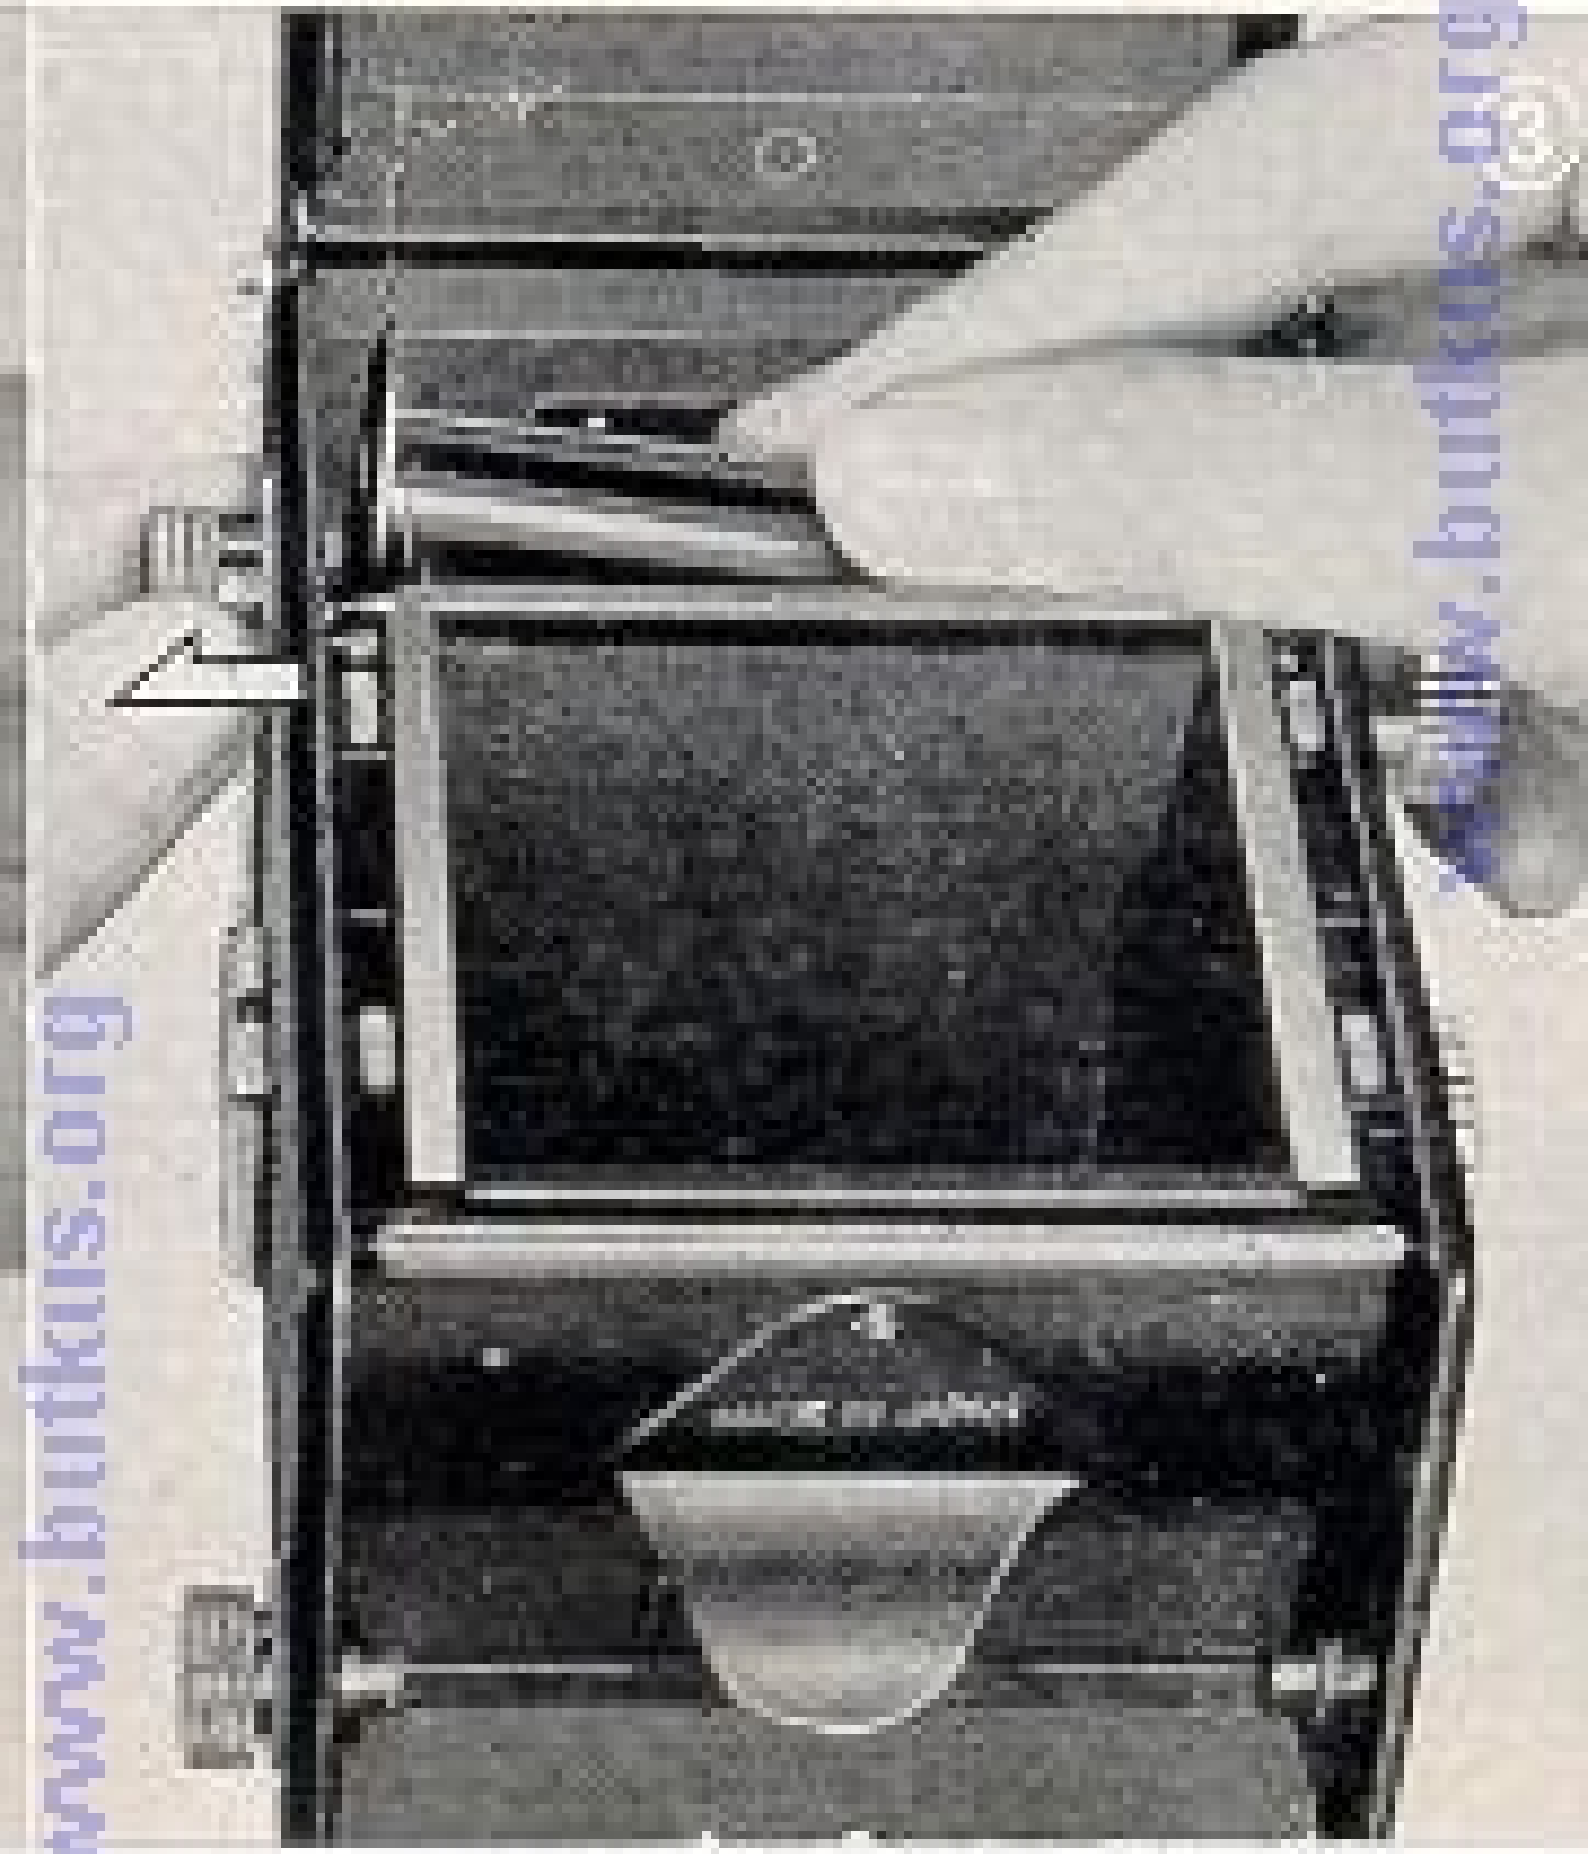




5

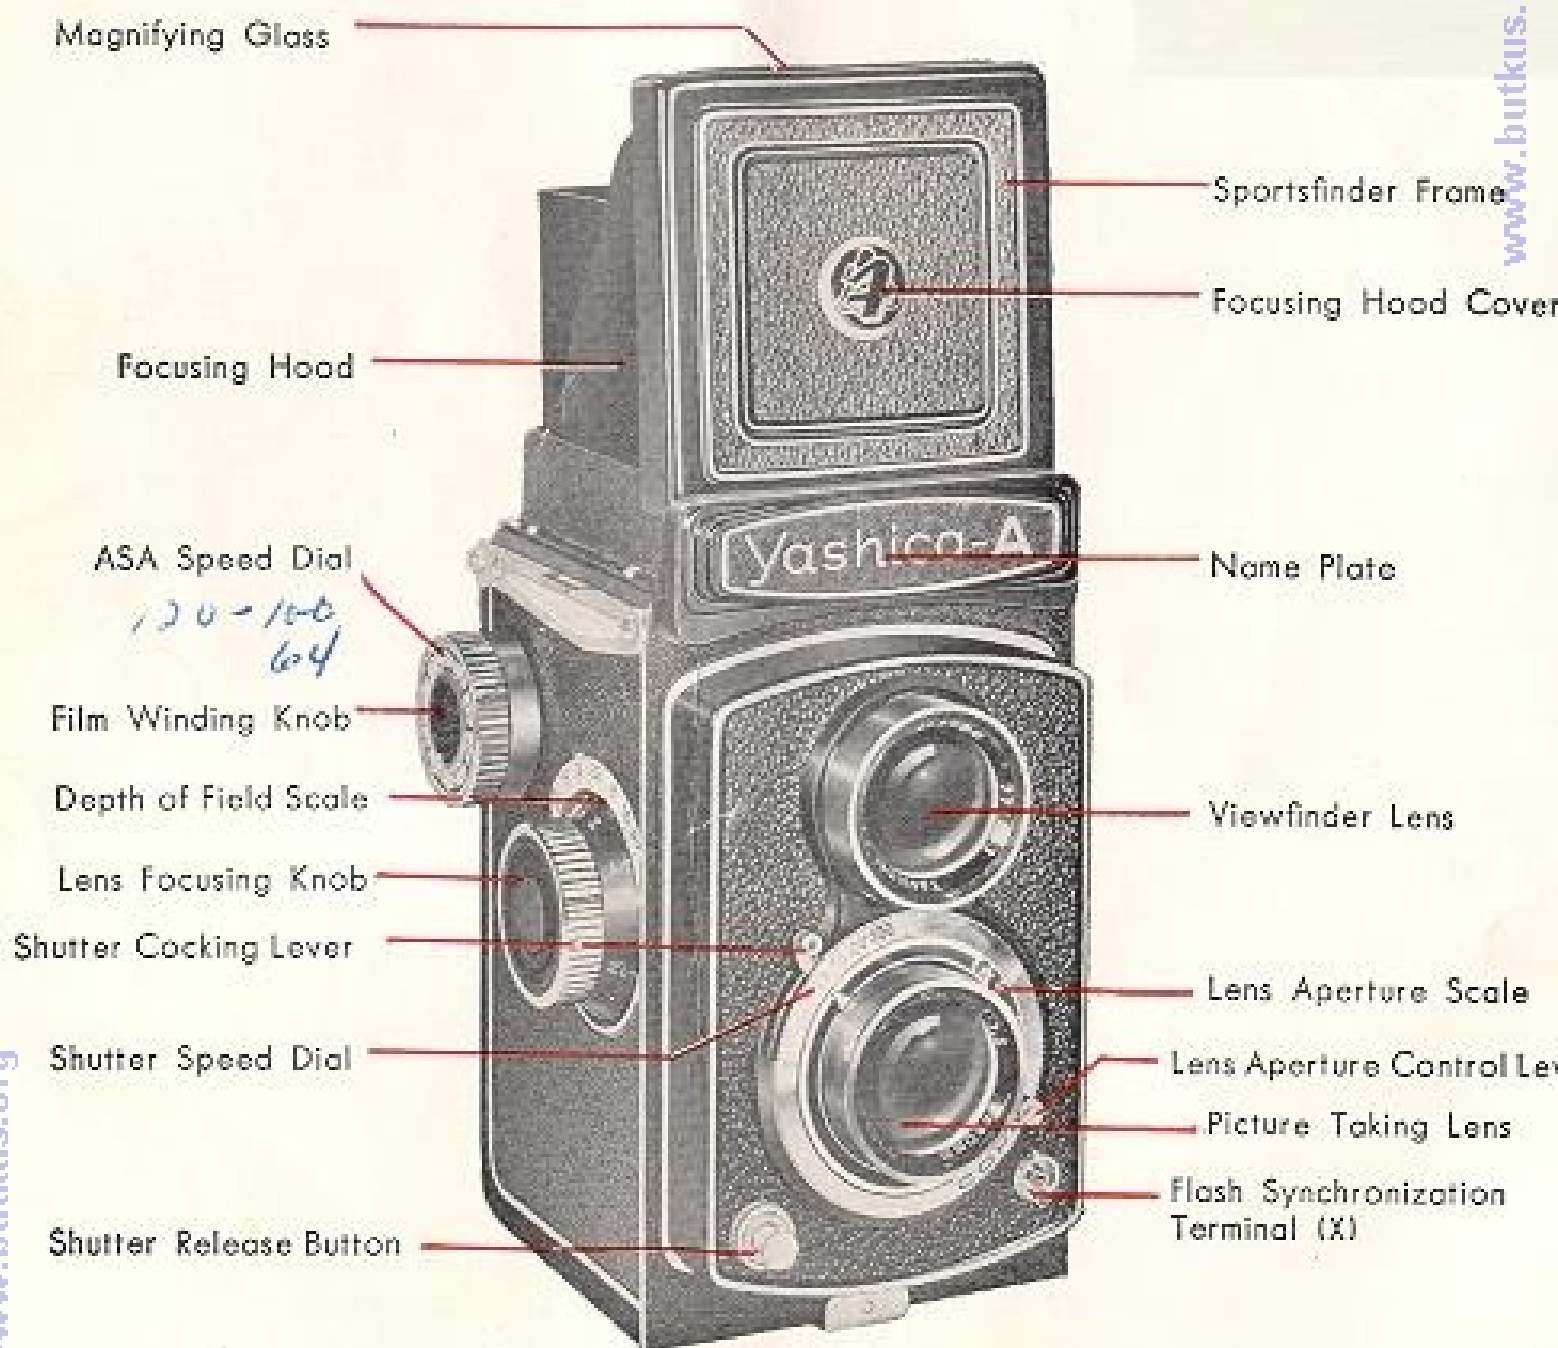 







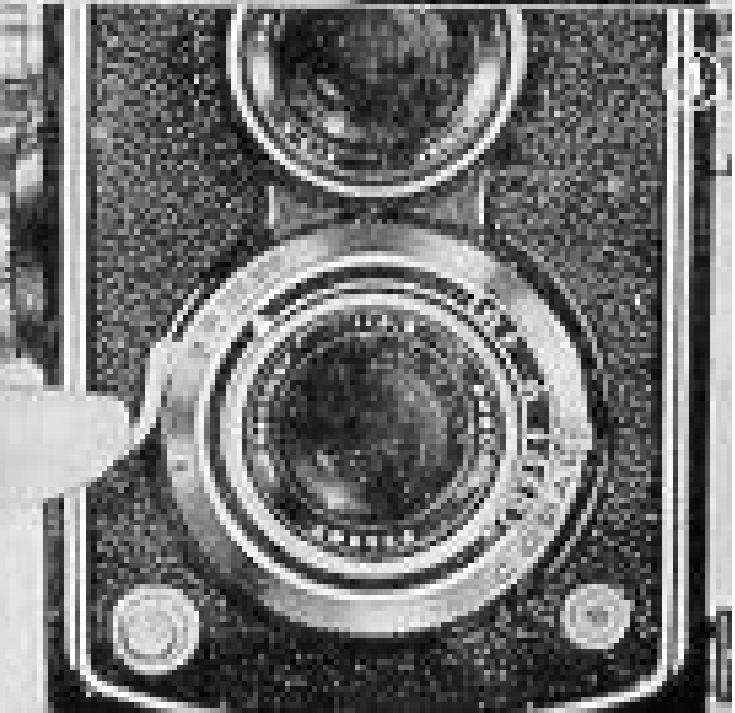 

www.buttks.org



www.buttks.org

 




 
®



 


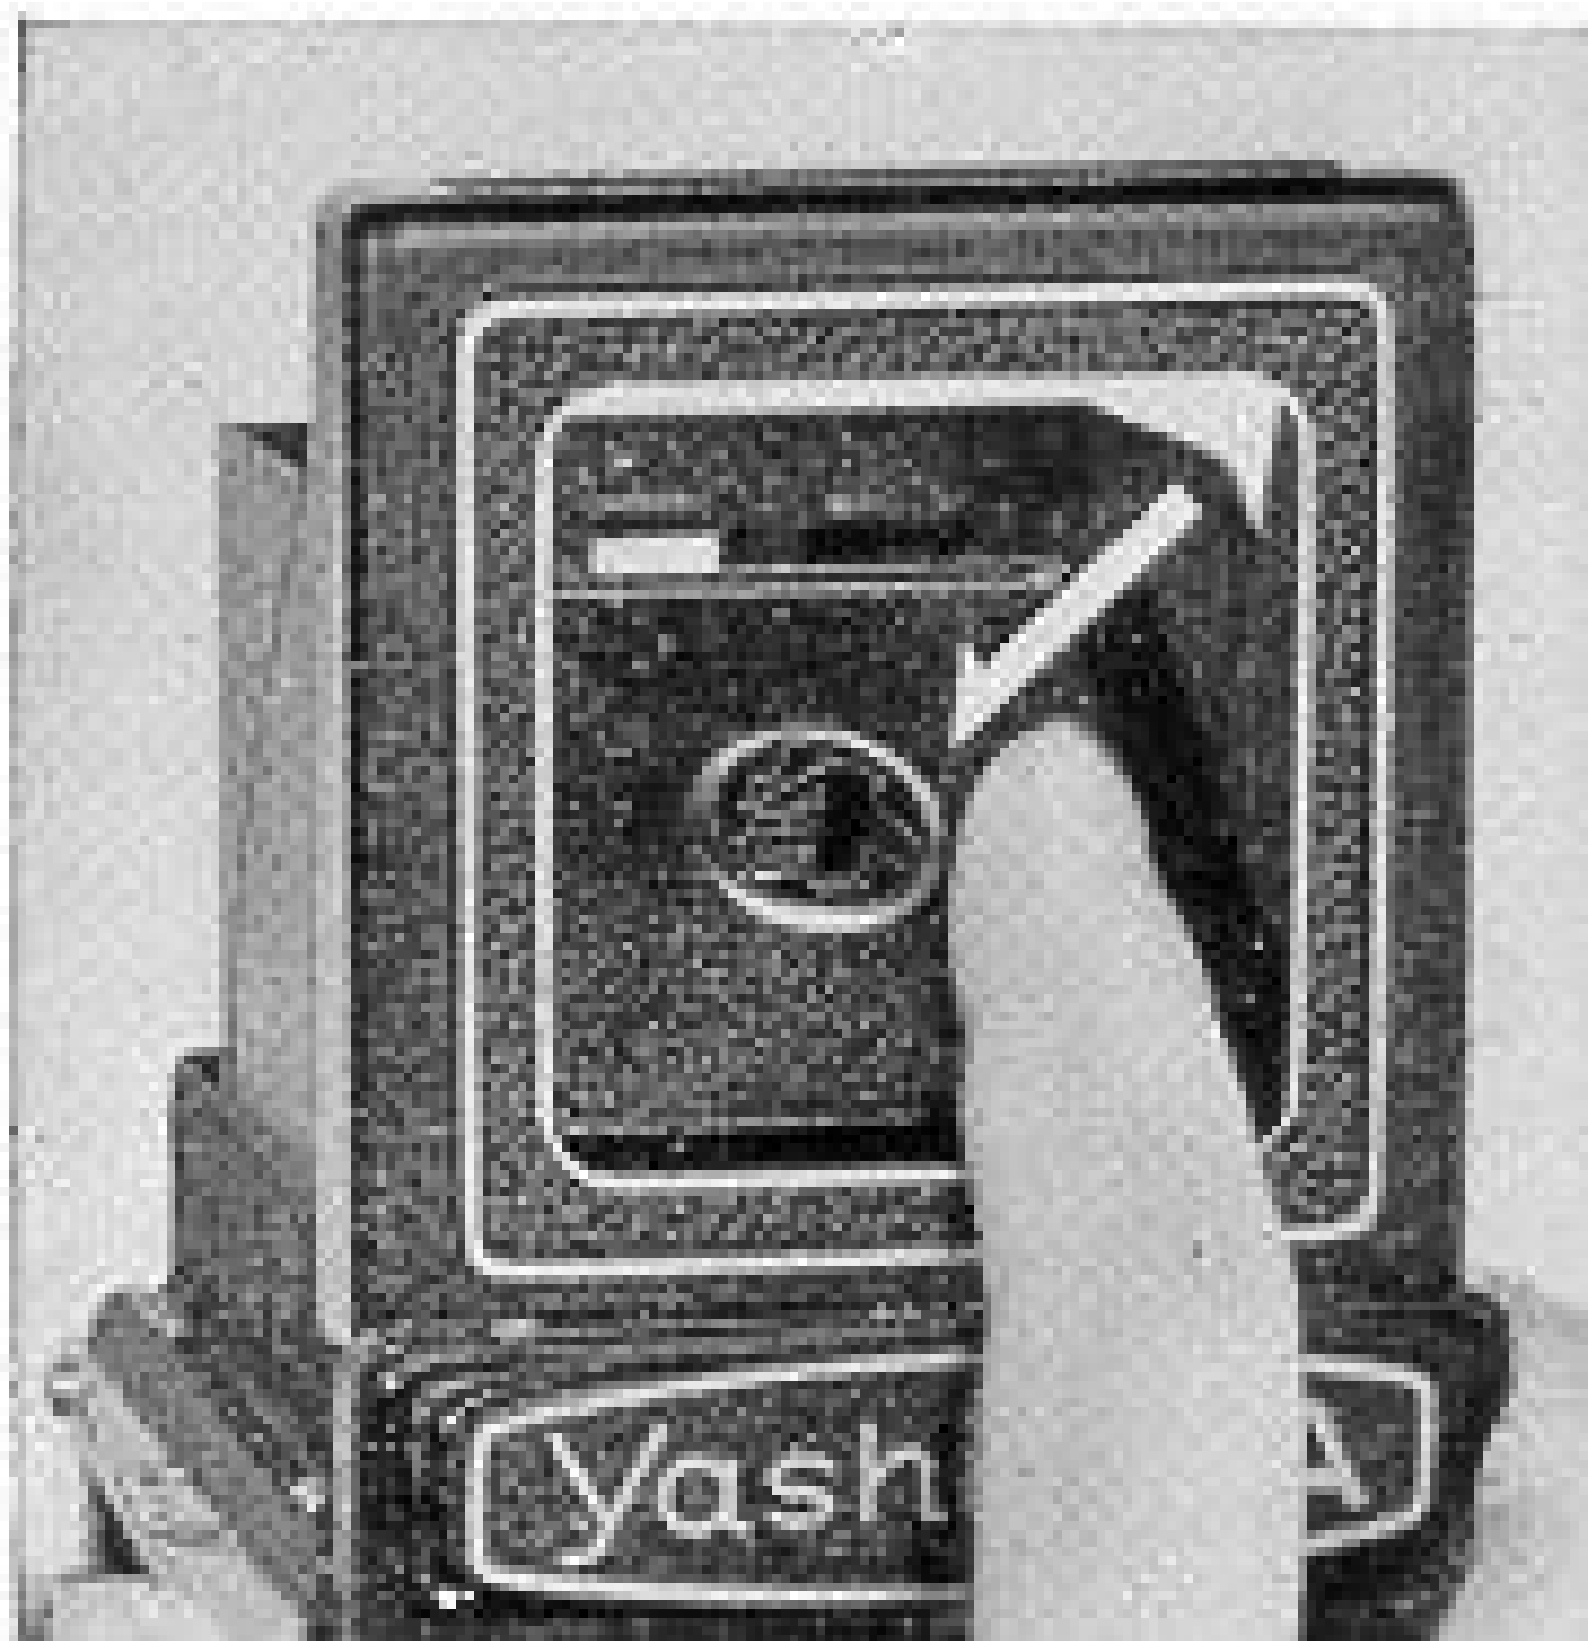



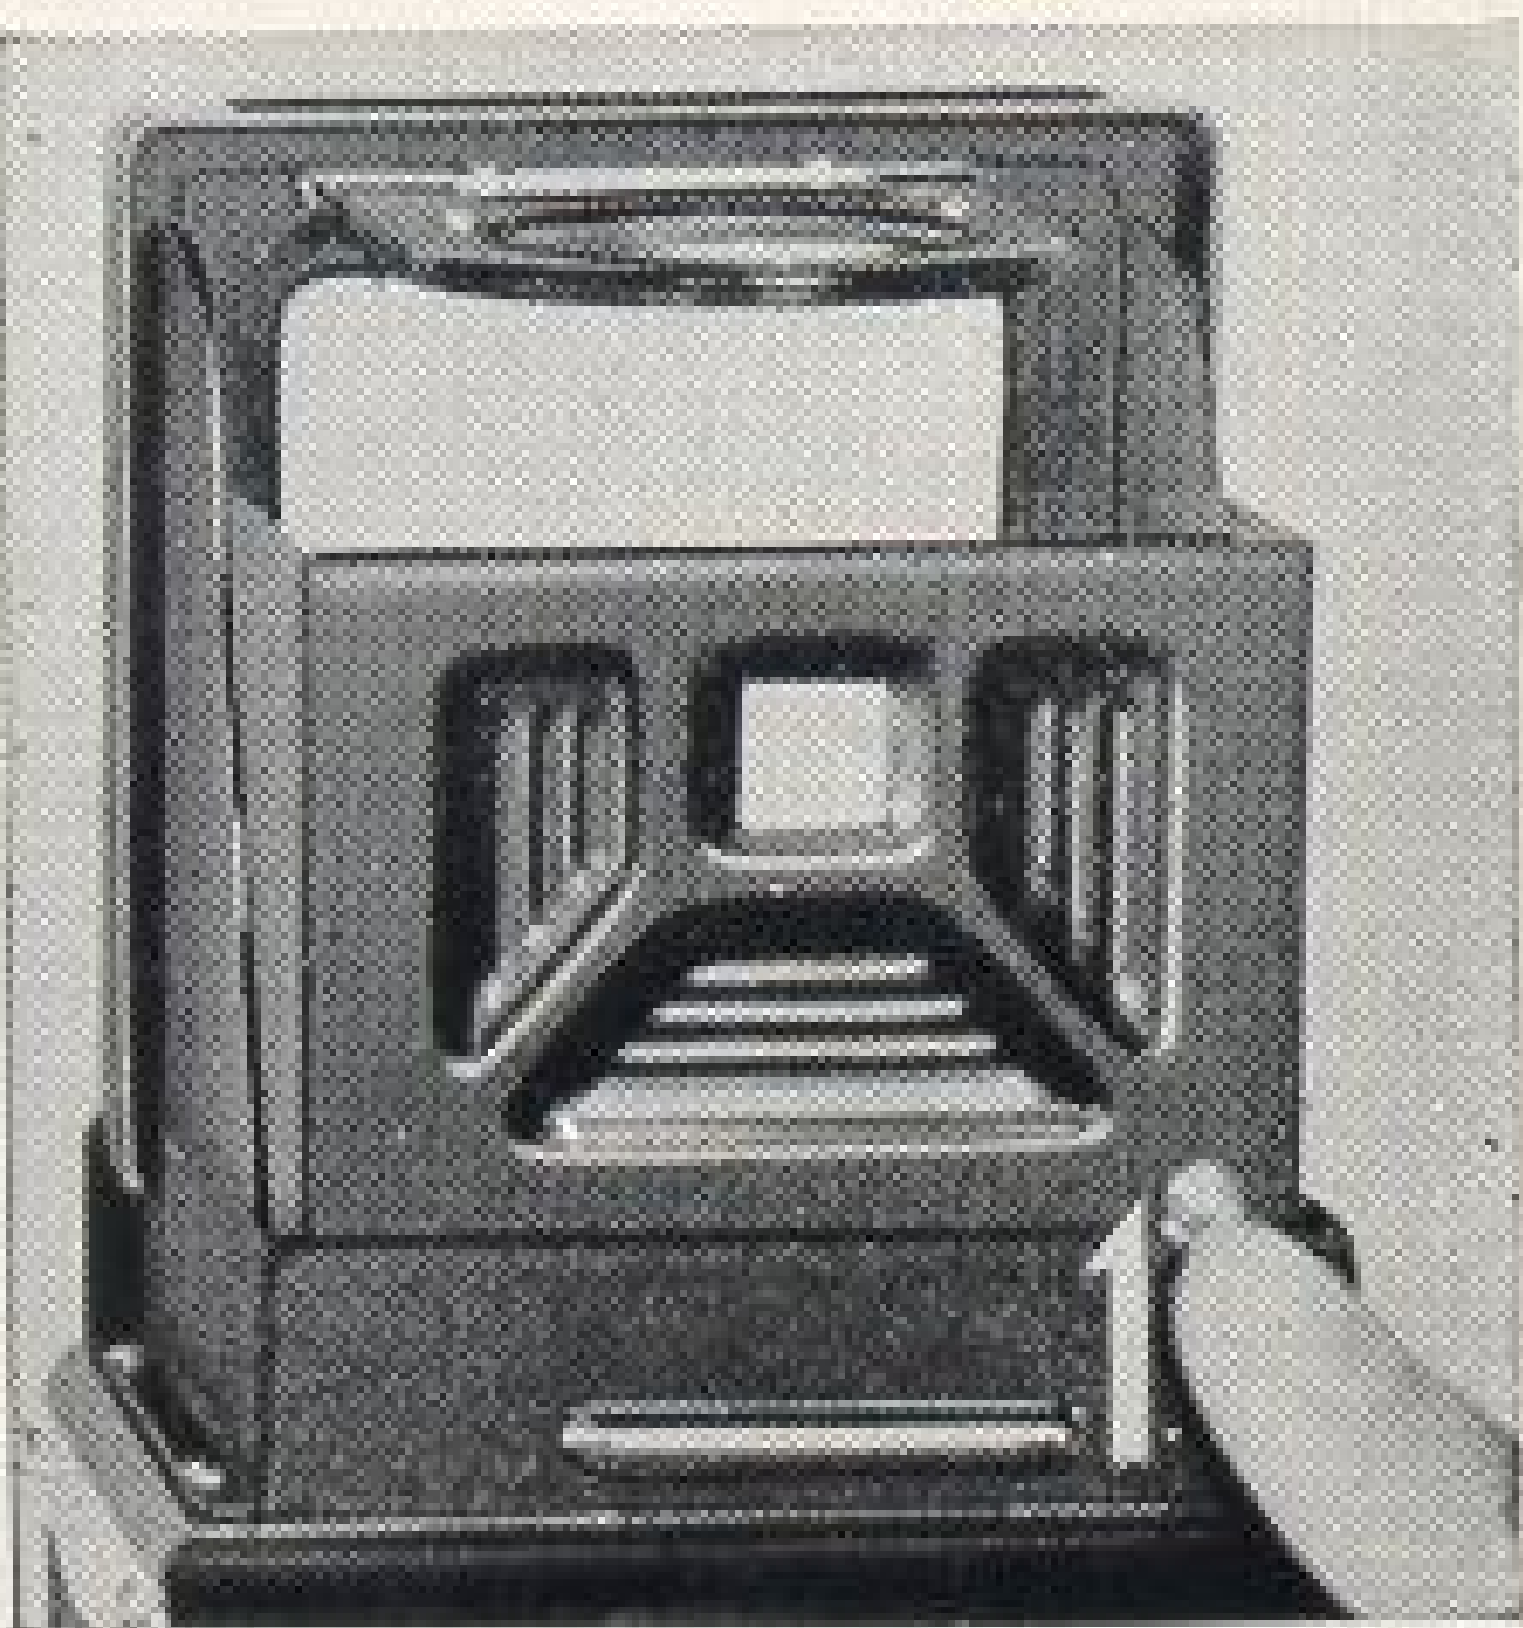



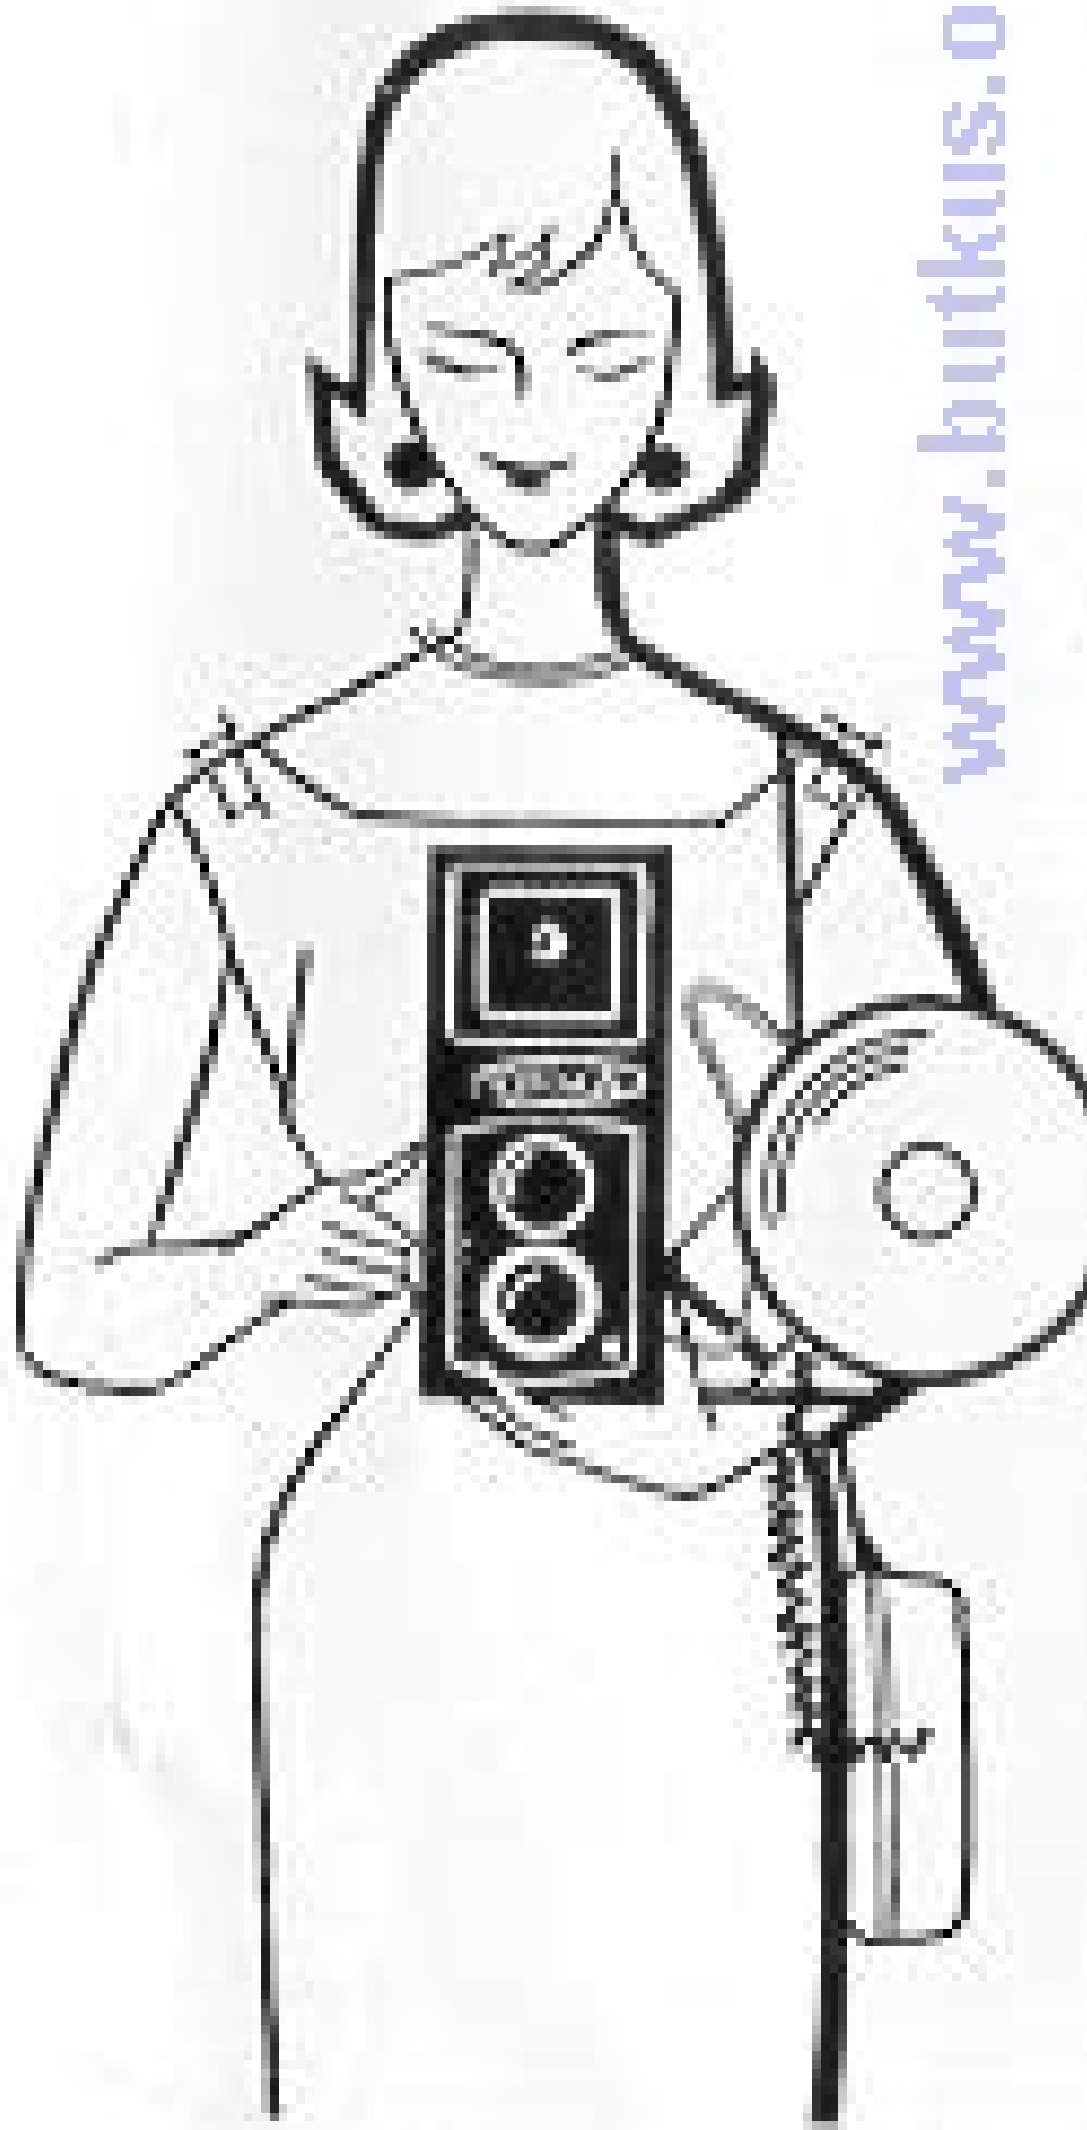




USE RED FILM ONLY



 11 10 22

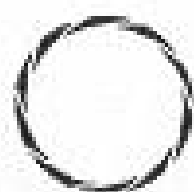

f 3.5



f 4



f 5.6



f 8



f 11

 


f 16




f 22

www.butkus.org

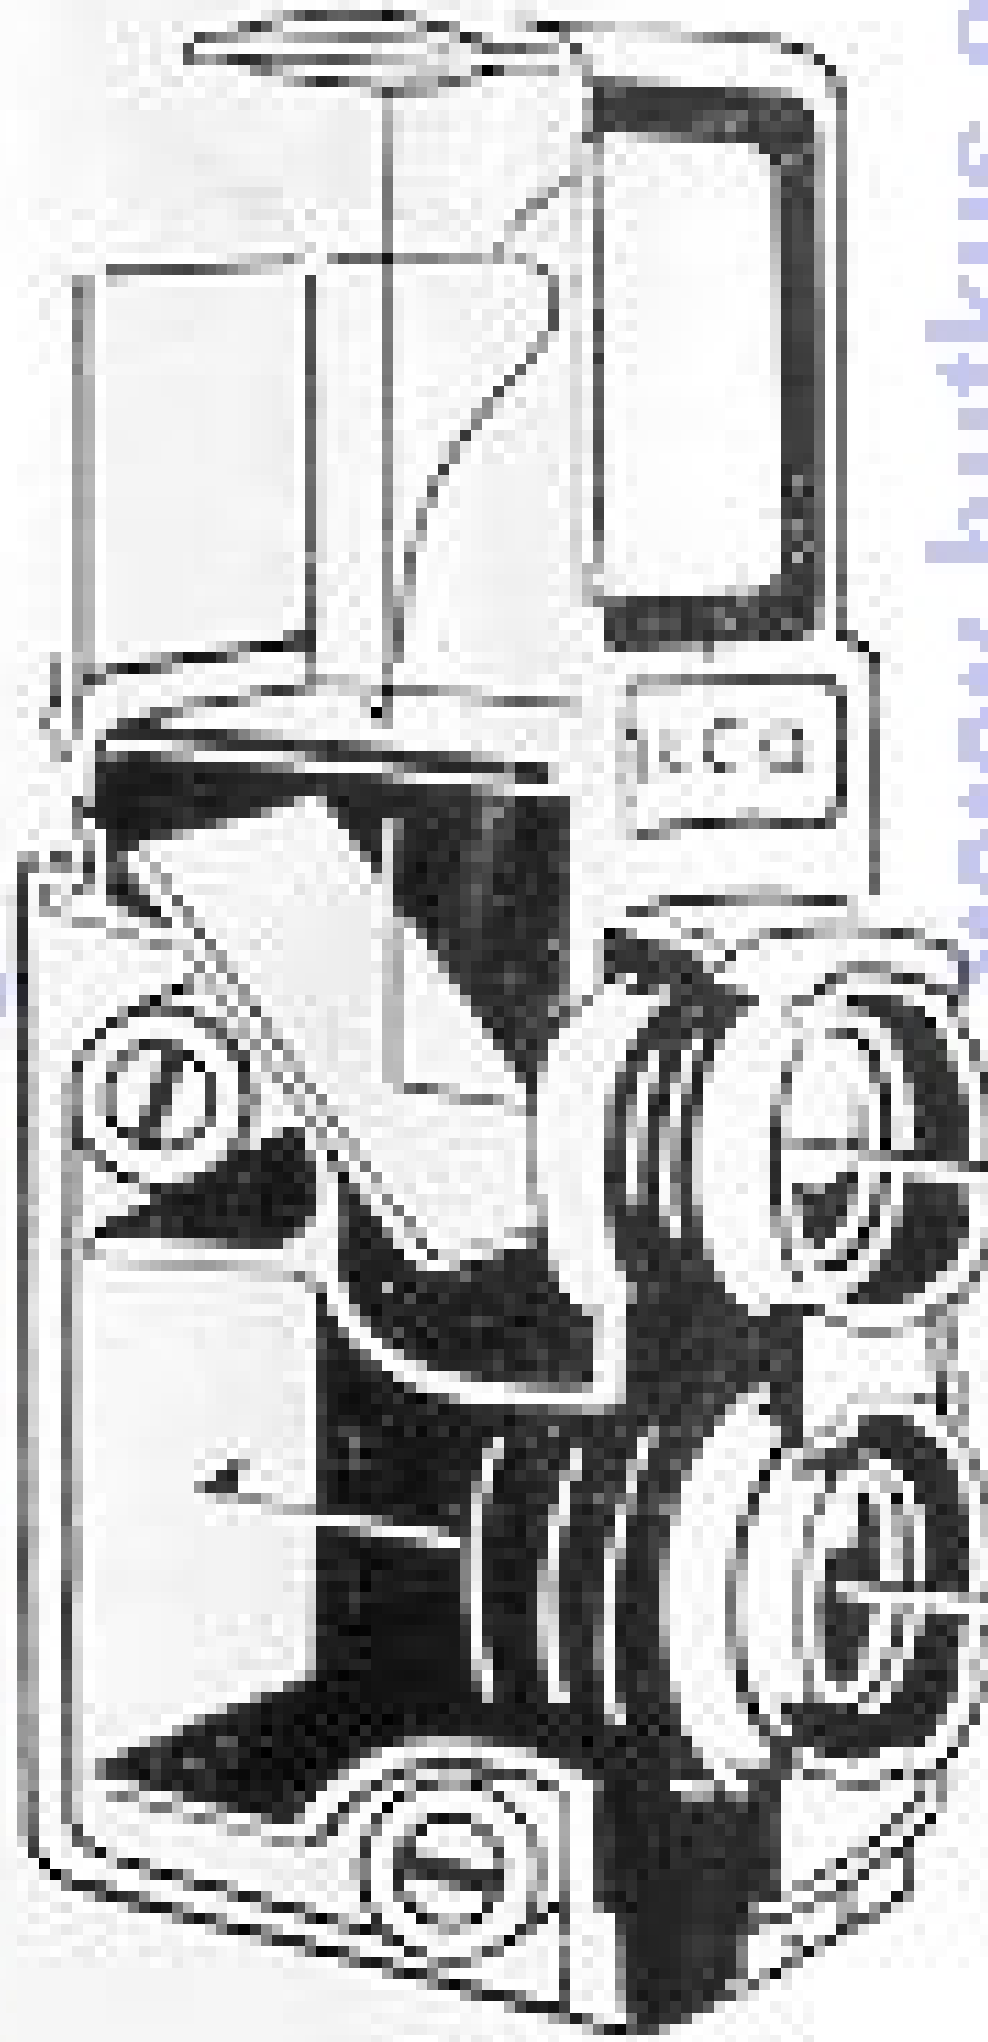

www.butkus.org

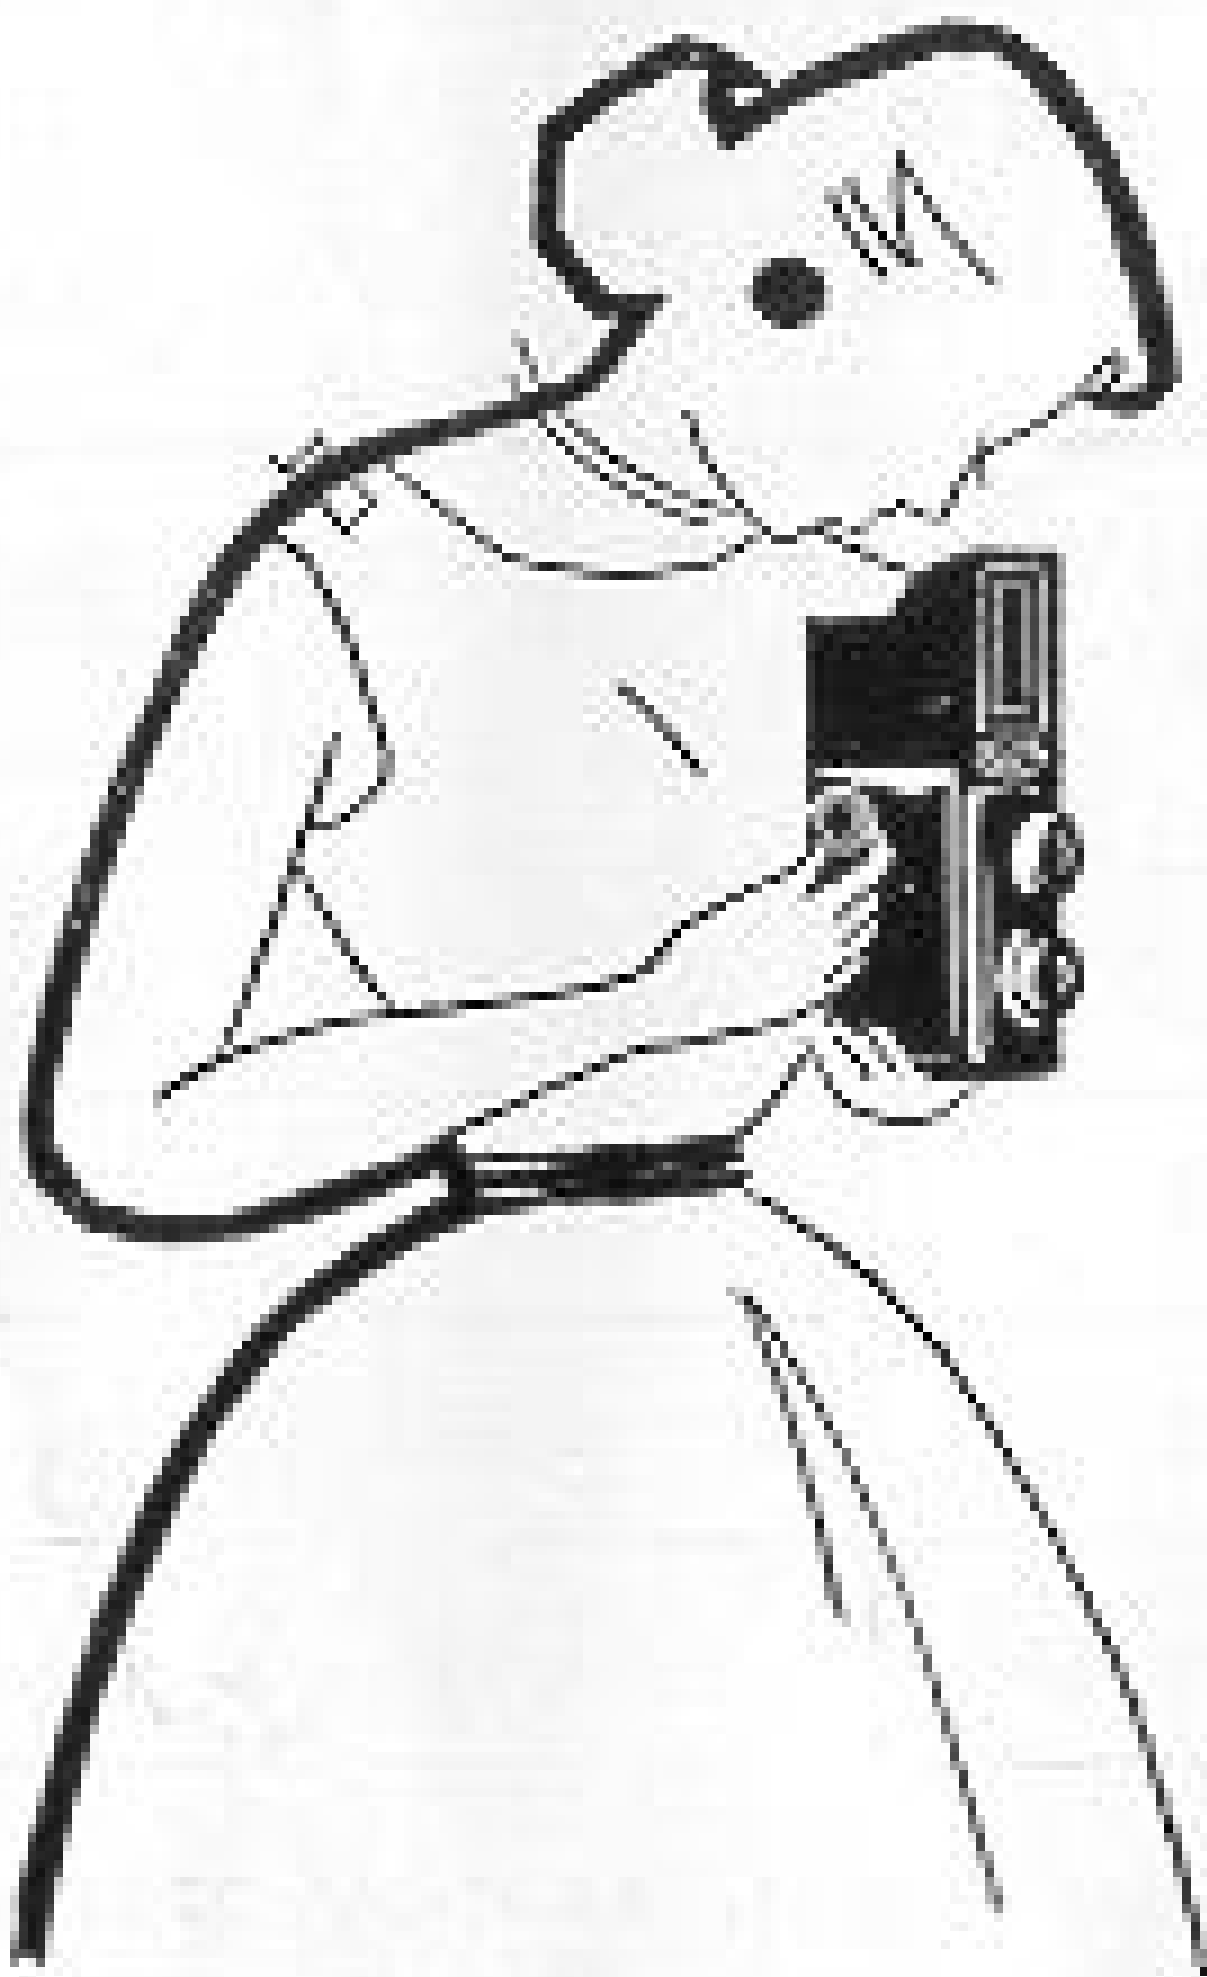 

www.butkus.org

 


www.butkus.org

www.butkus.org




www.butkus.org

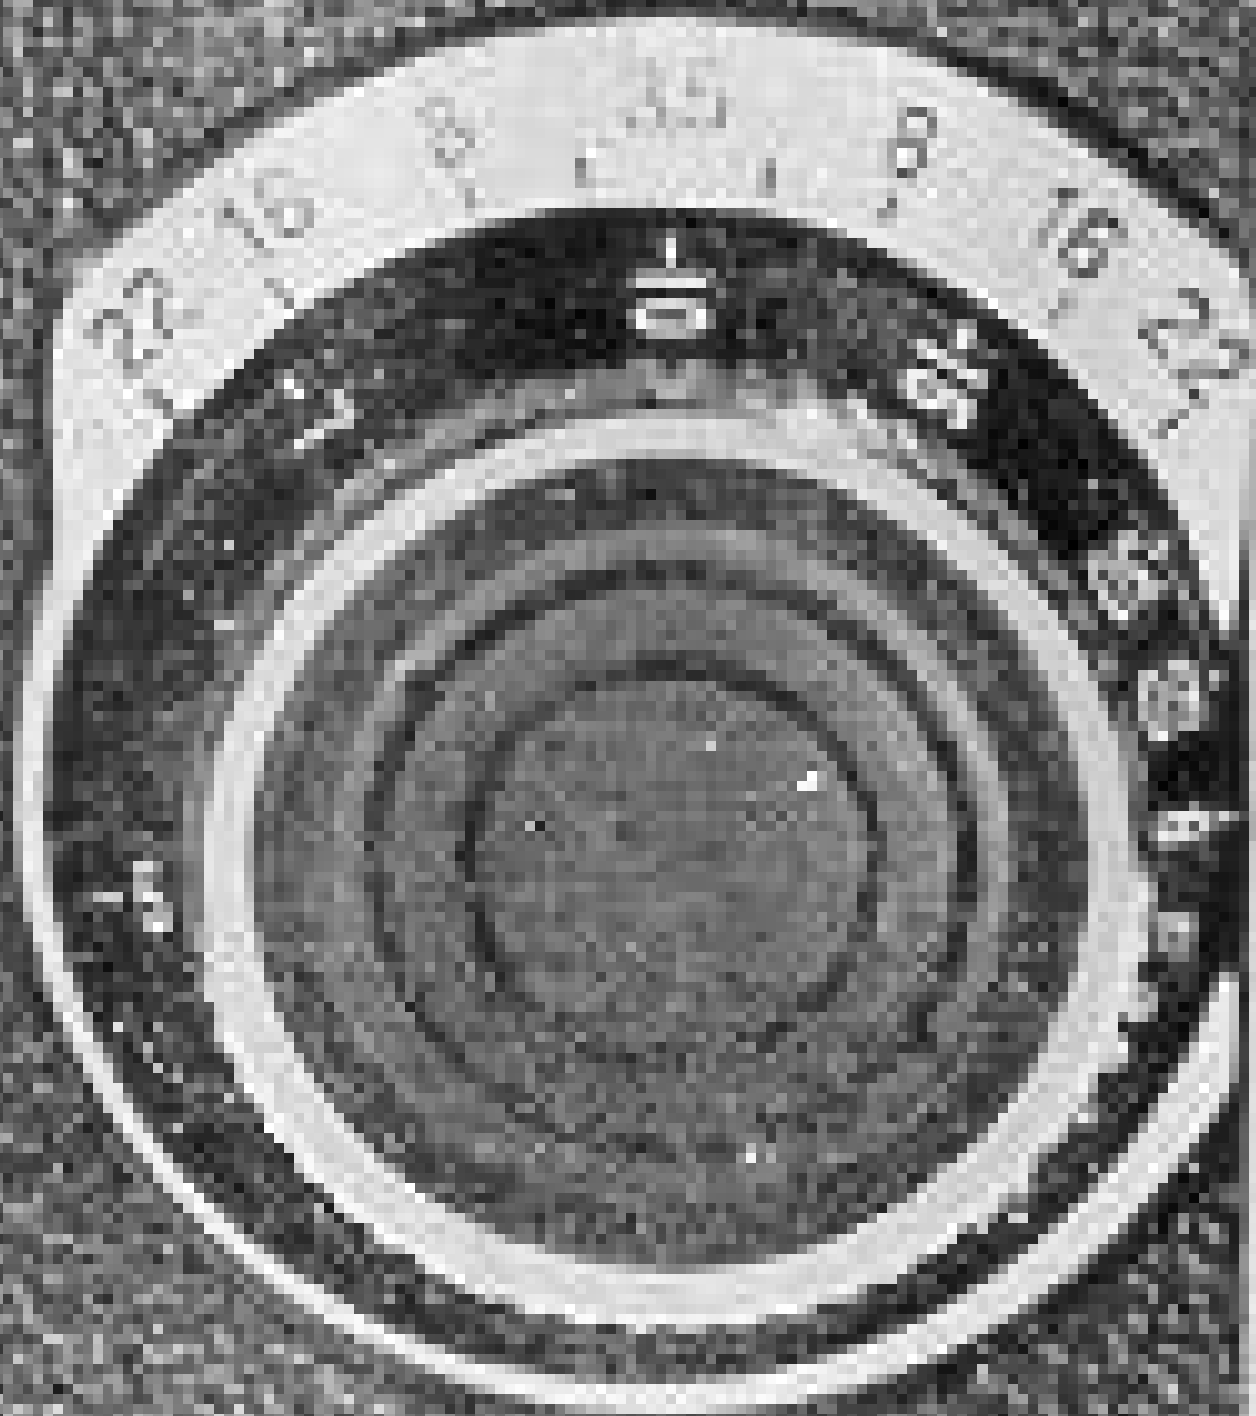



14

 15

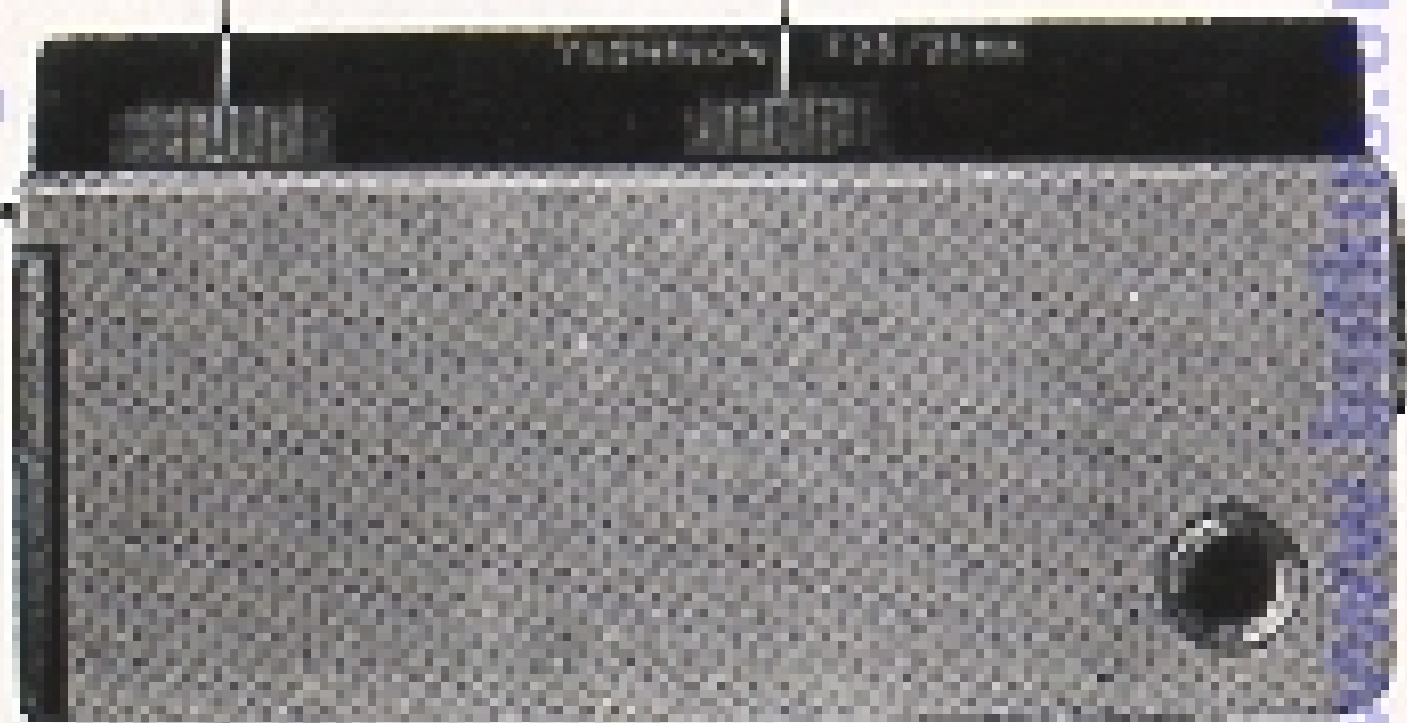



YASHICA


Y16

INSTRUCTION

   BOOKLET

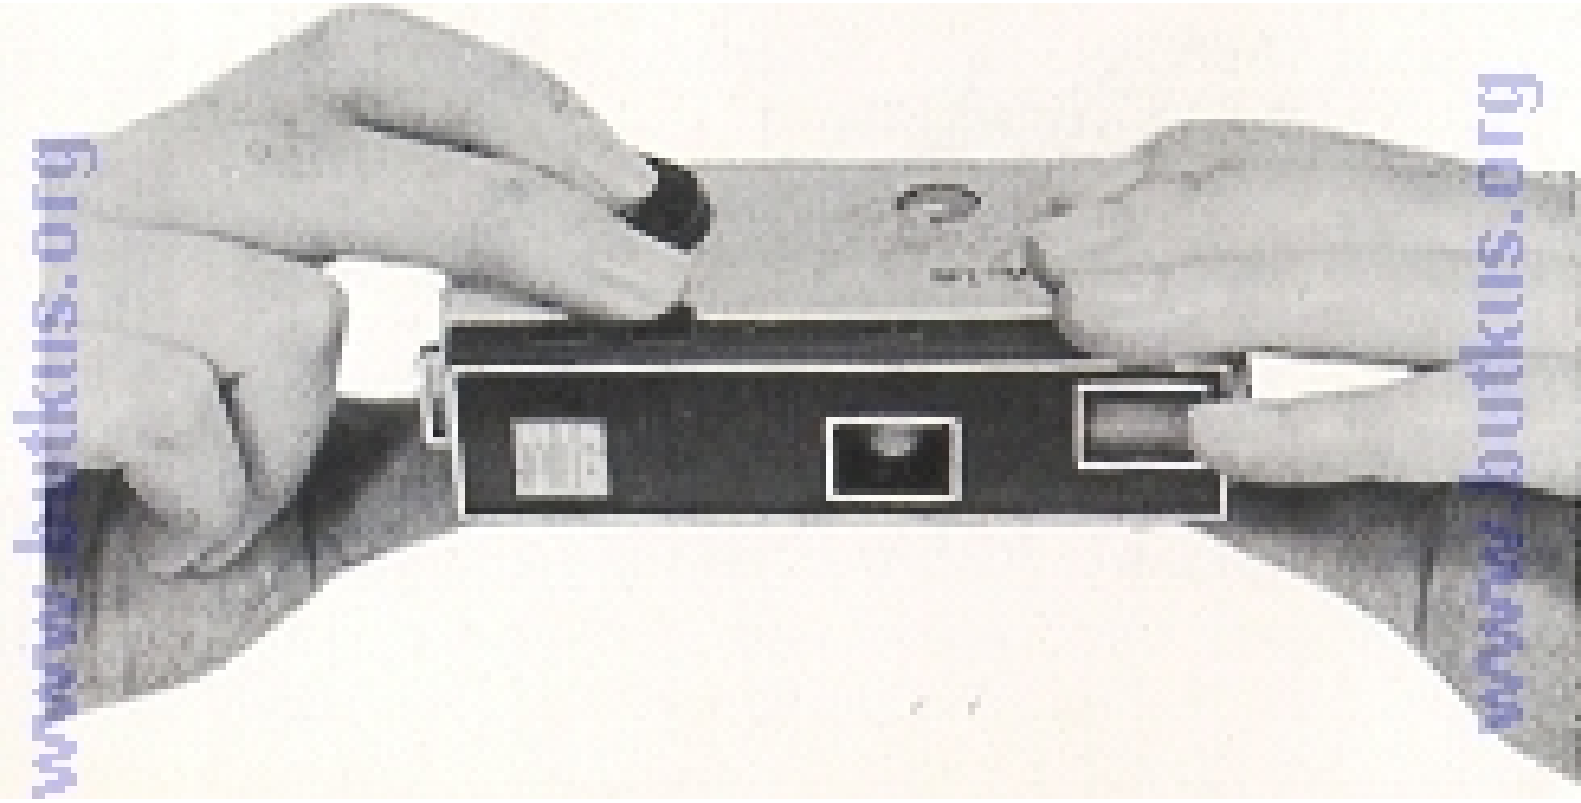

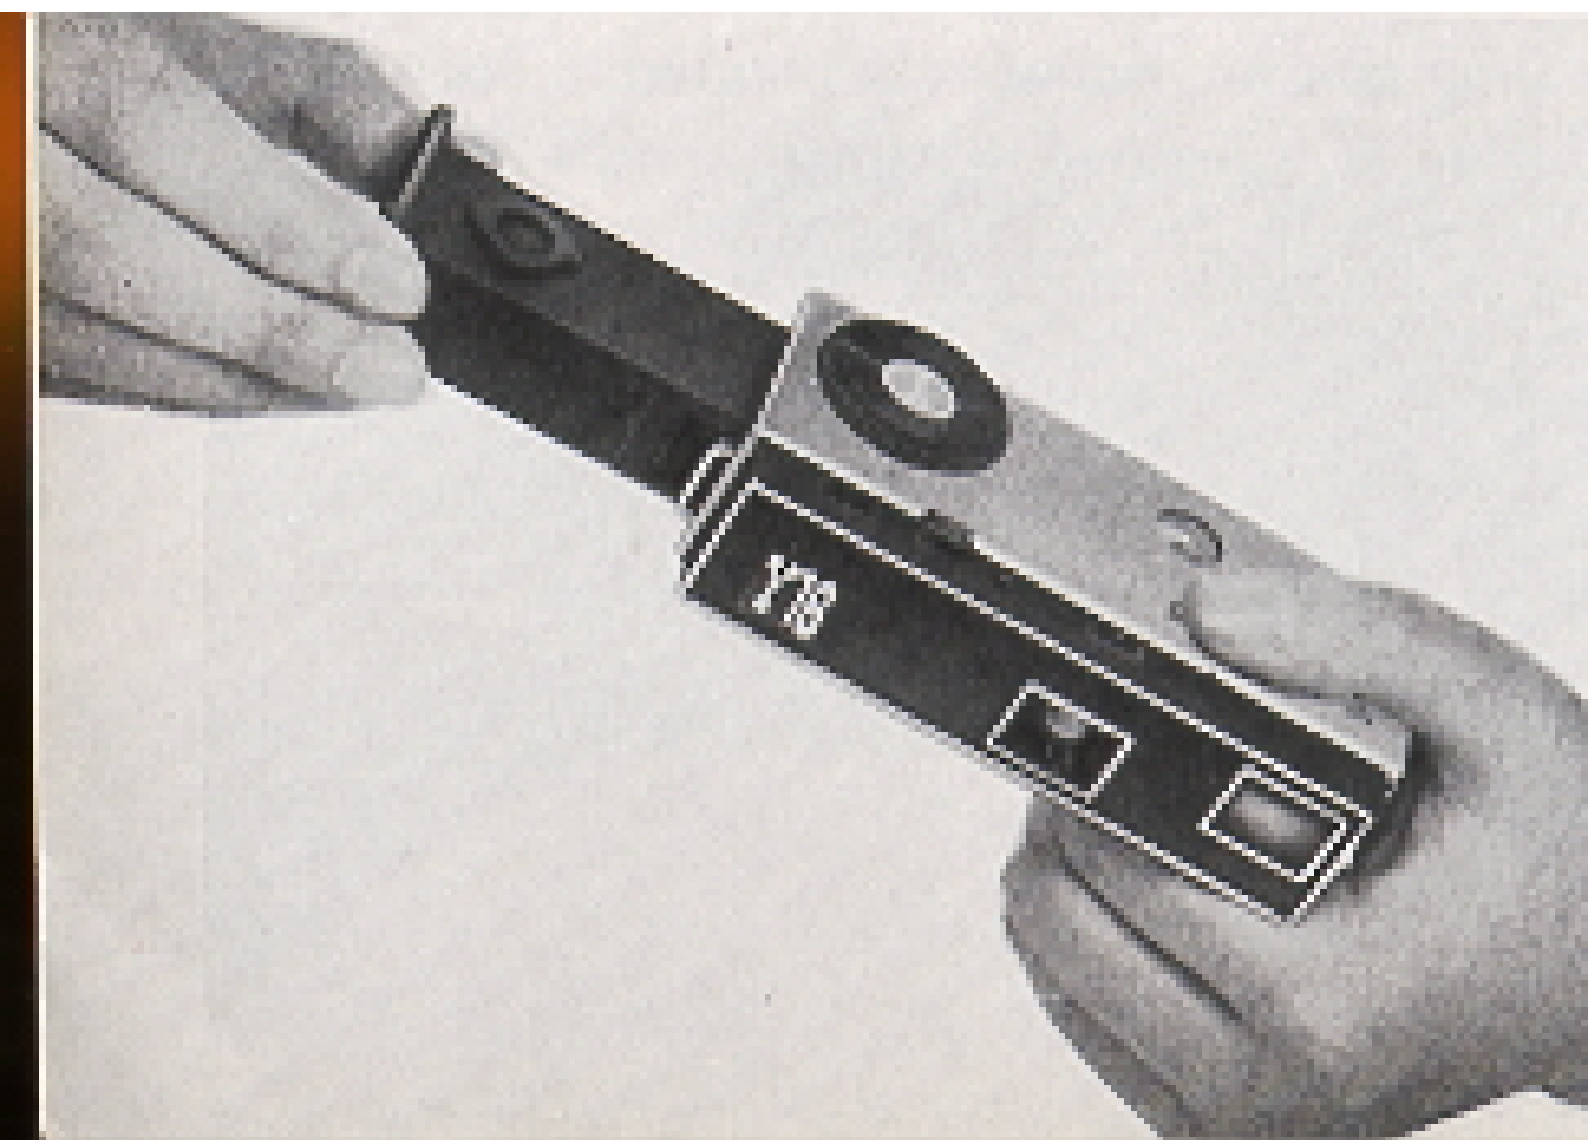


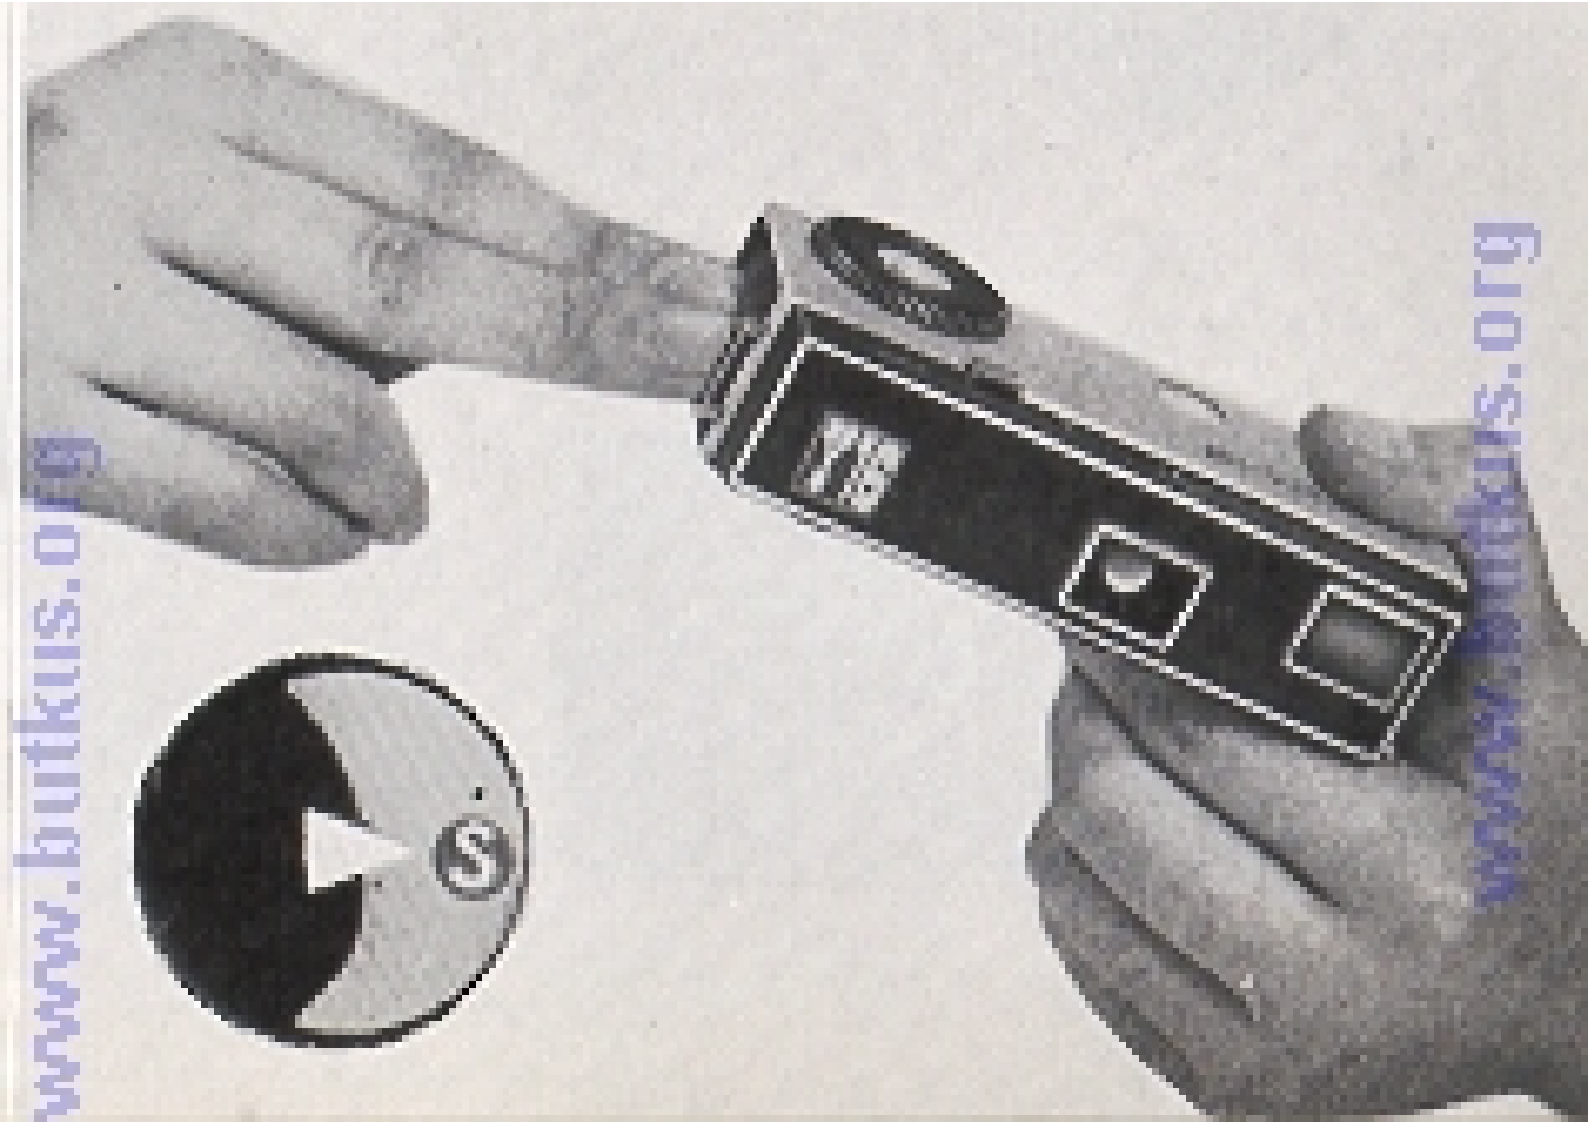

CLIP-LOAD MAGAZINE





SECOND:- Press this Shutter Release Button

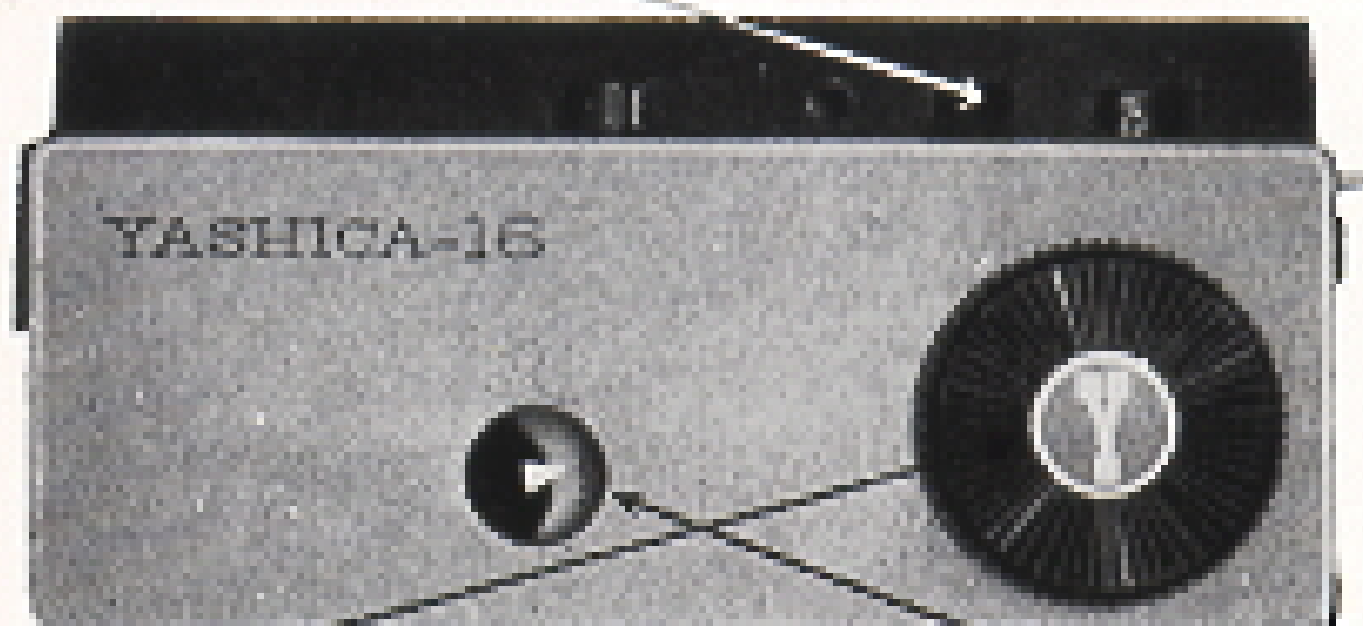

FIRST:- Turn this Film Advancing Disc counterclockwise until it stops.

REPEAT TWICE THIS OPERATION, AND ADVANCE THE FILM AGAIN

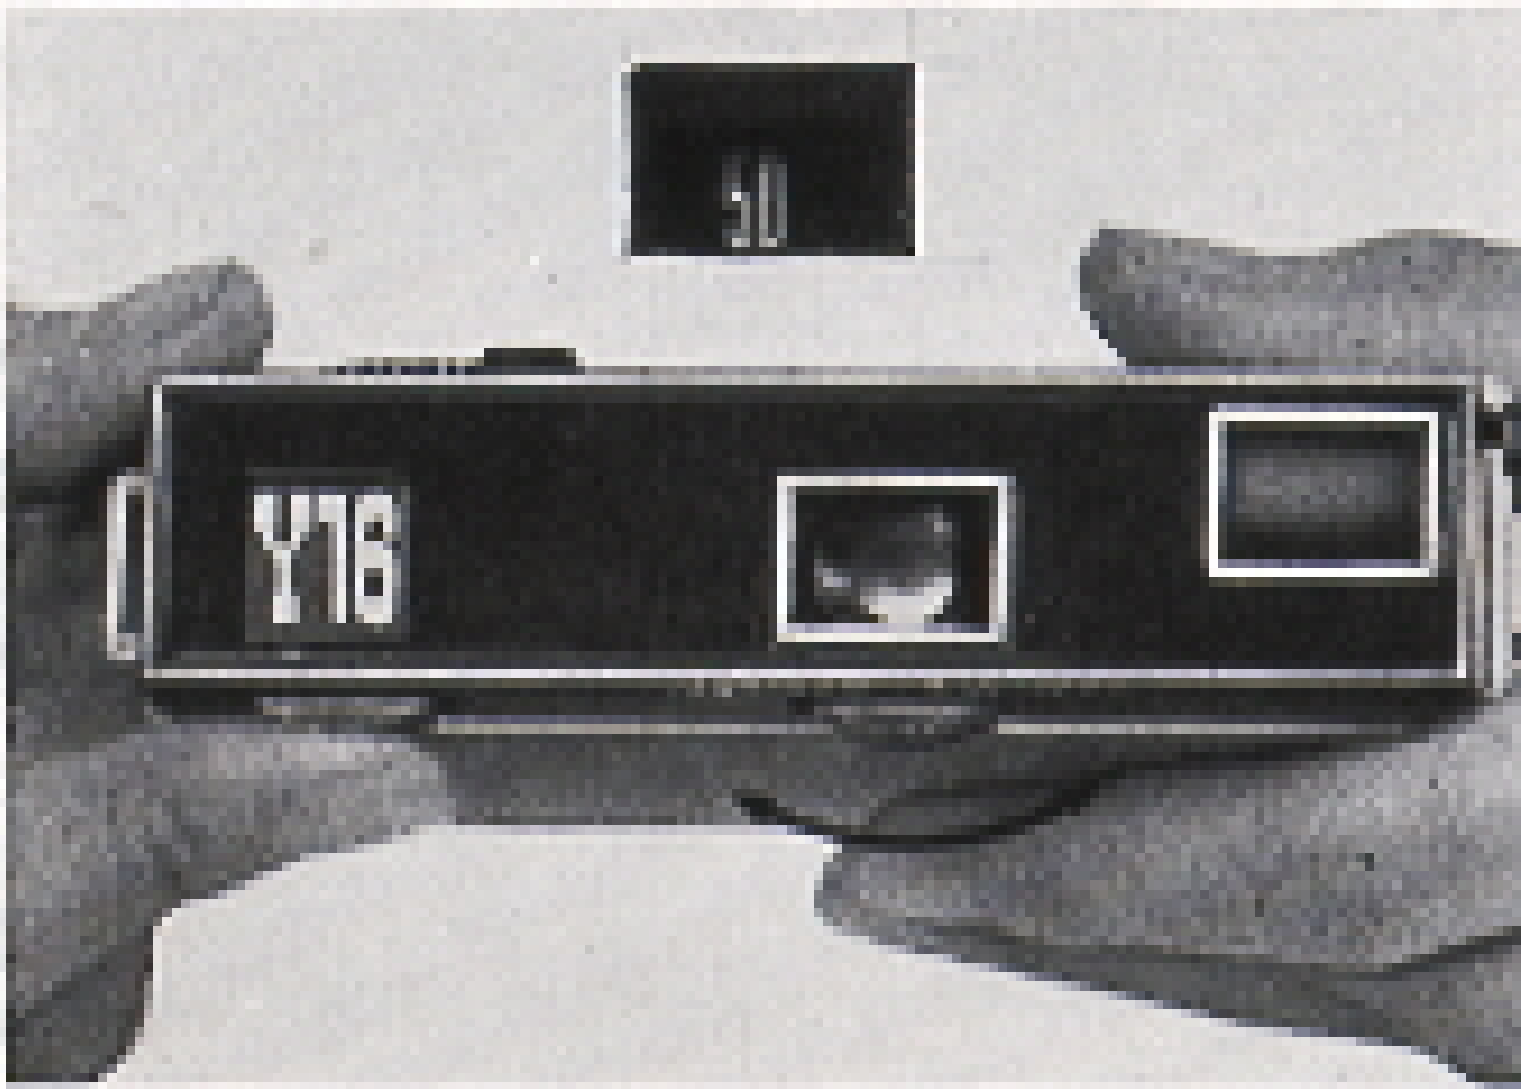
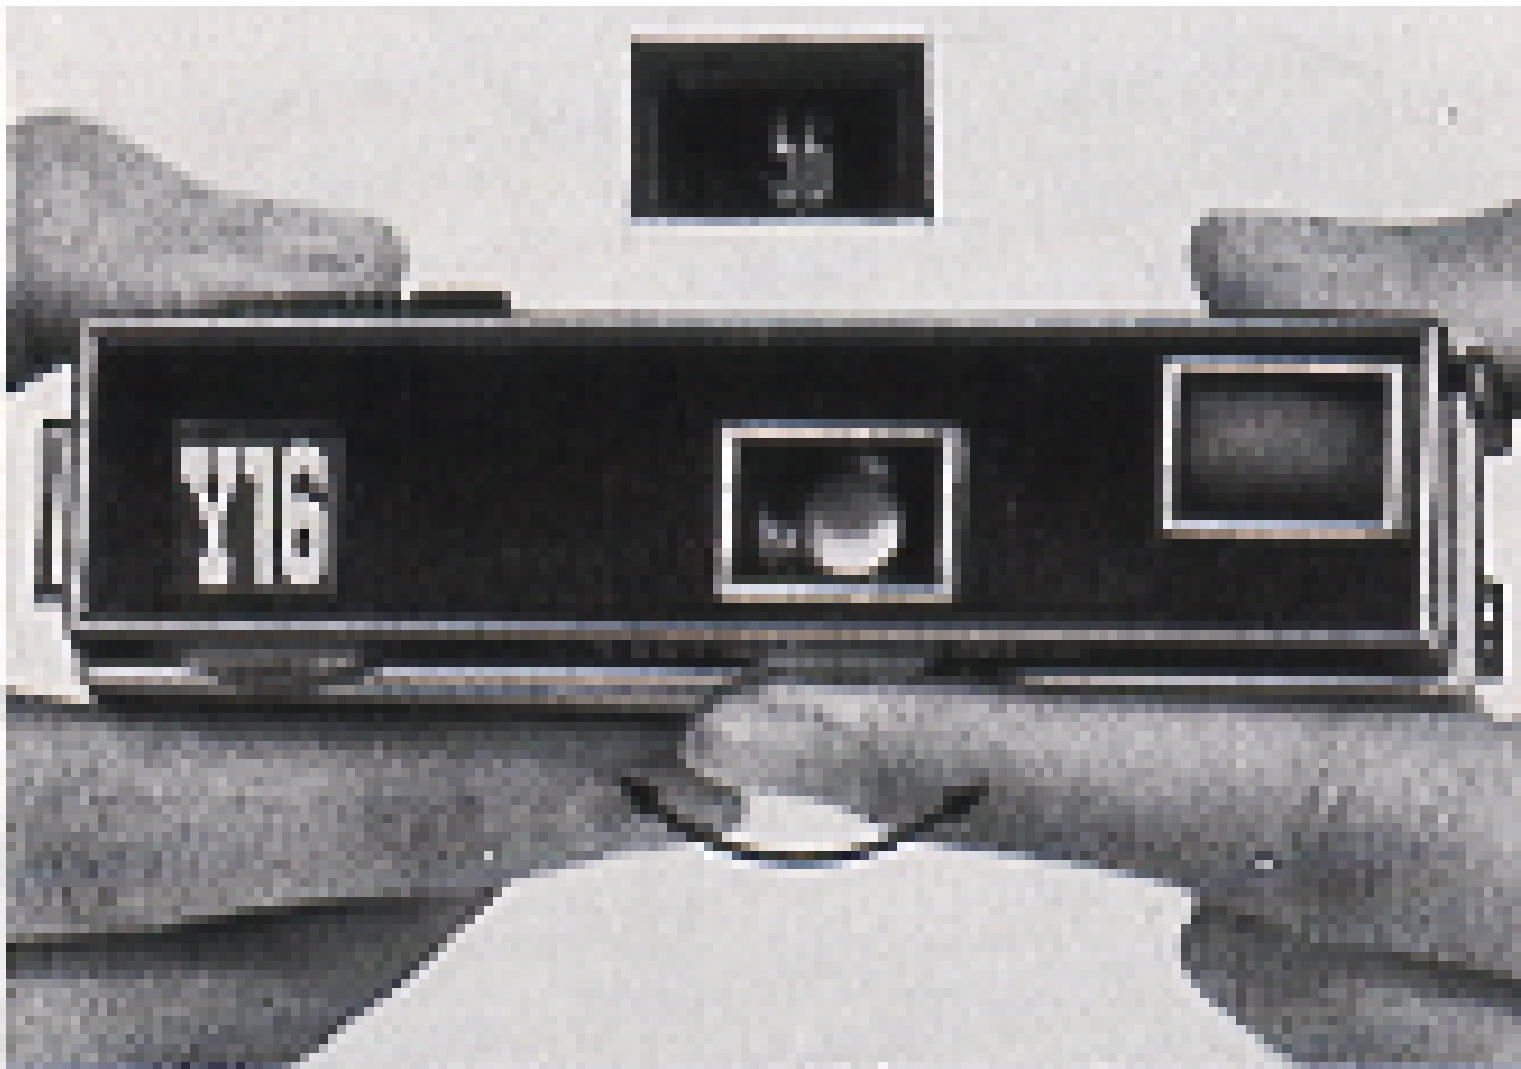





Horizontal Holding




Vertical Holding

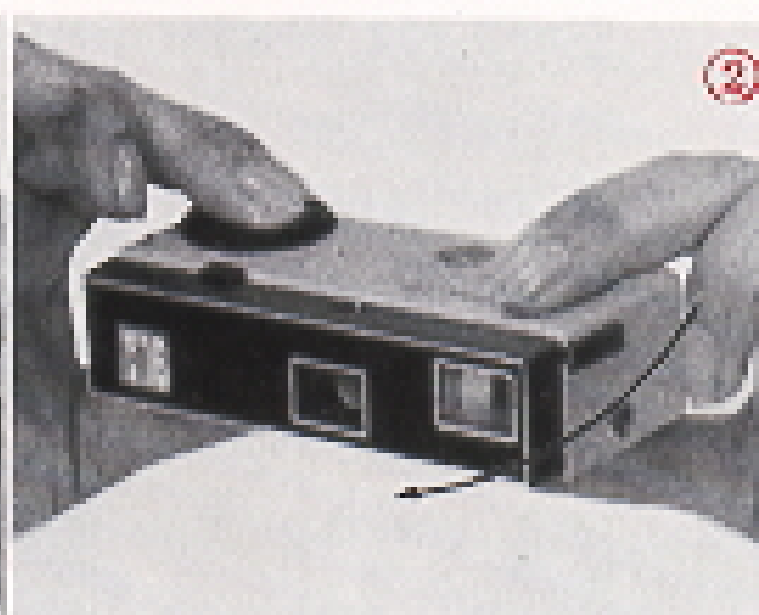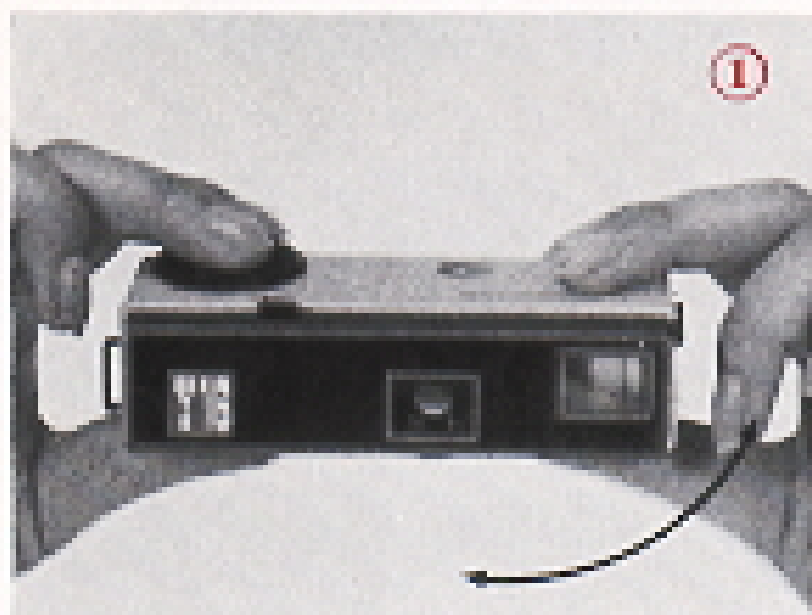


3

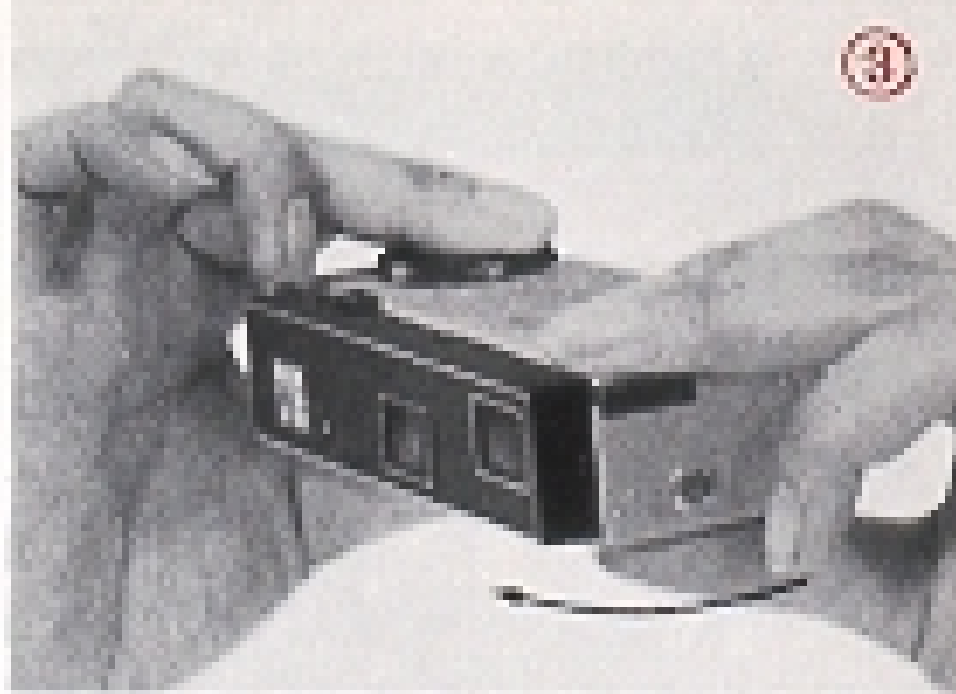


4

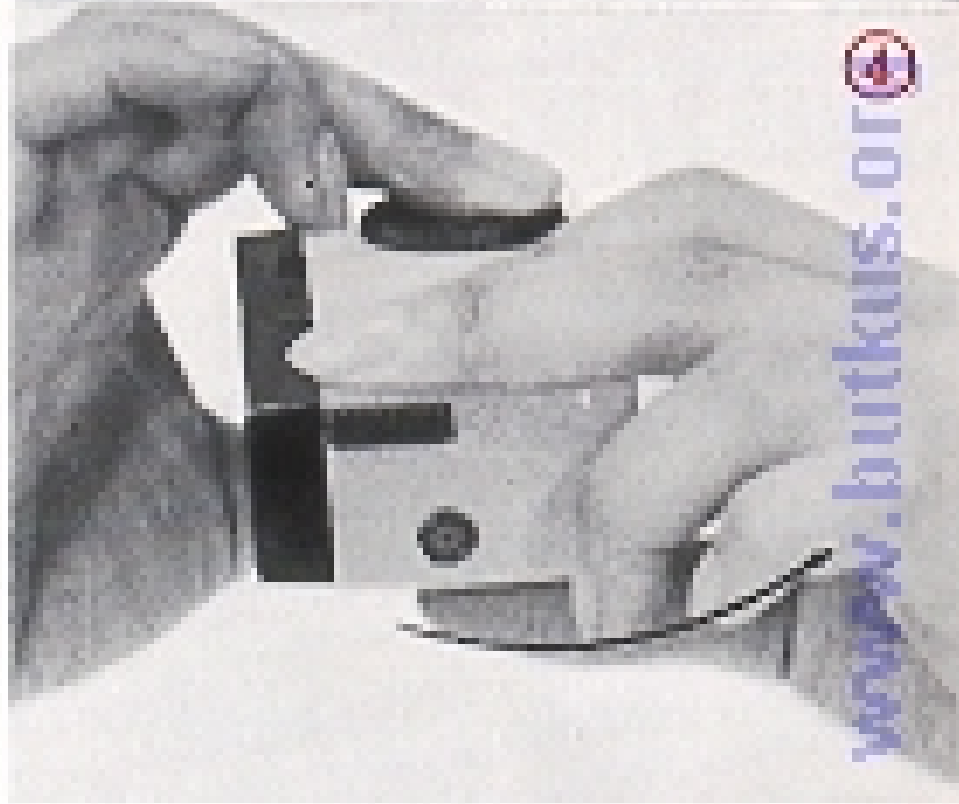

5

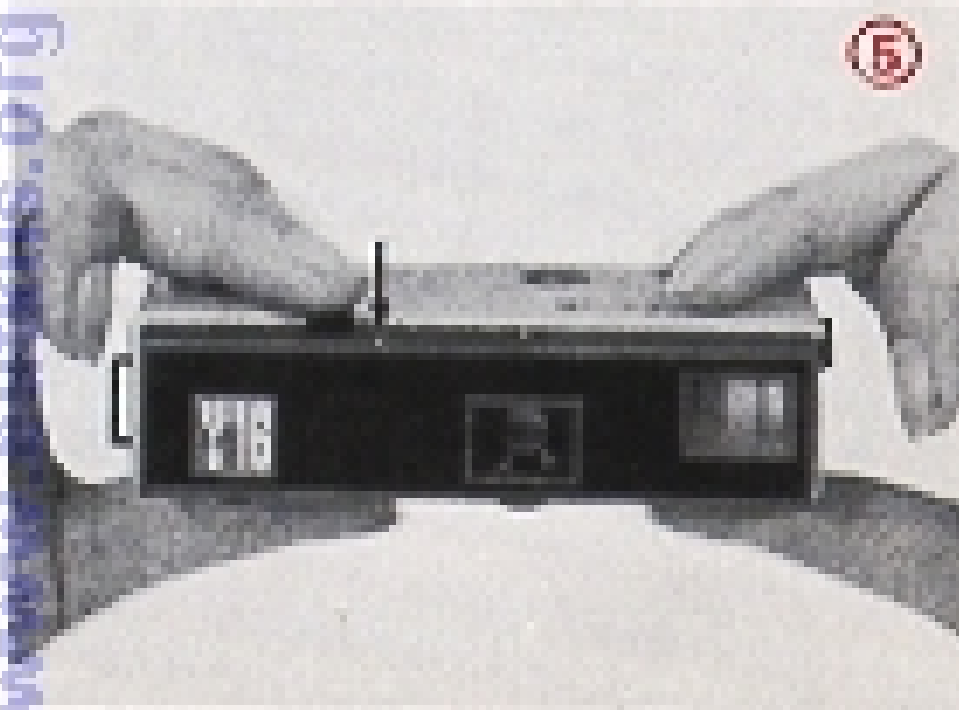

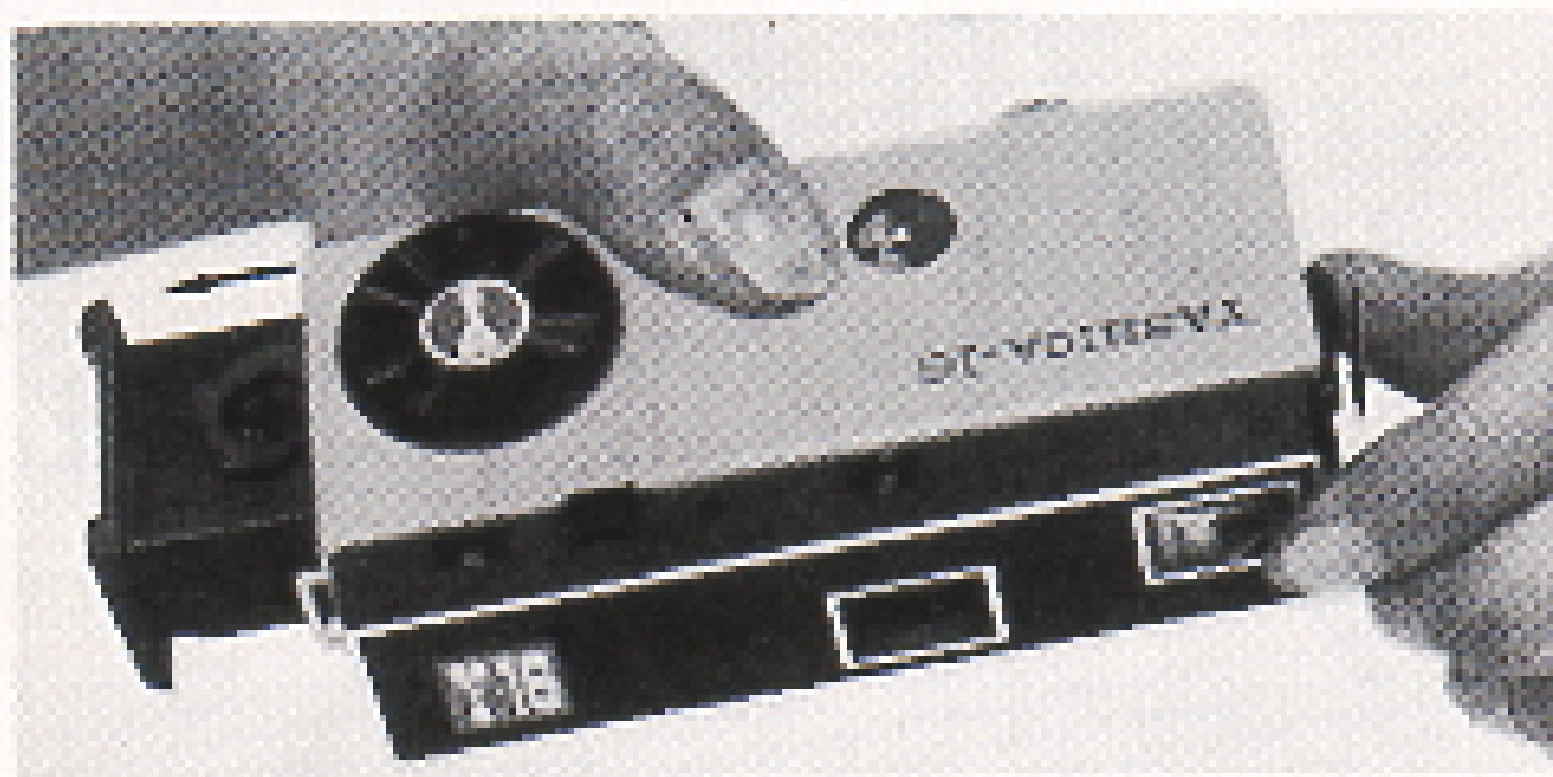

THE LENS OPENING




f 3.5




4



5.6

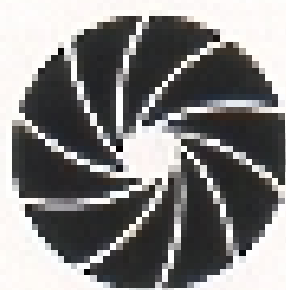


• (f16)

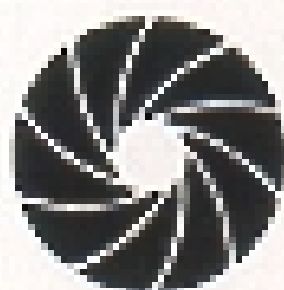



f 11



f 8

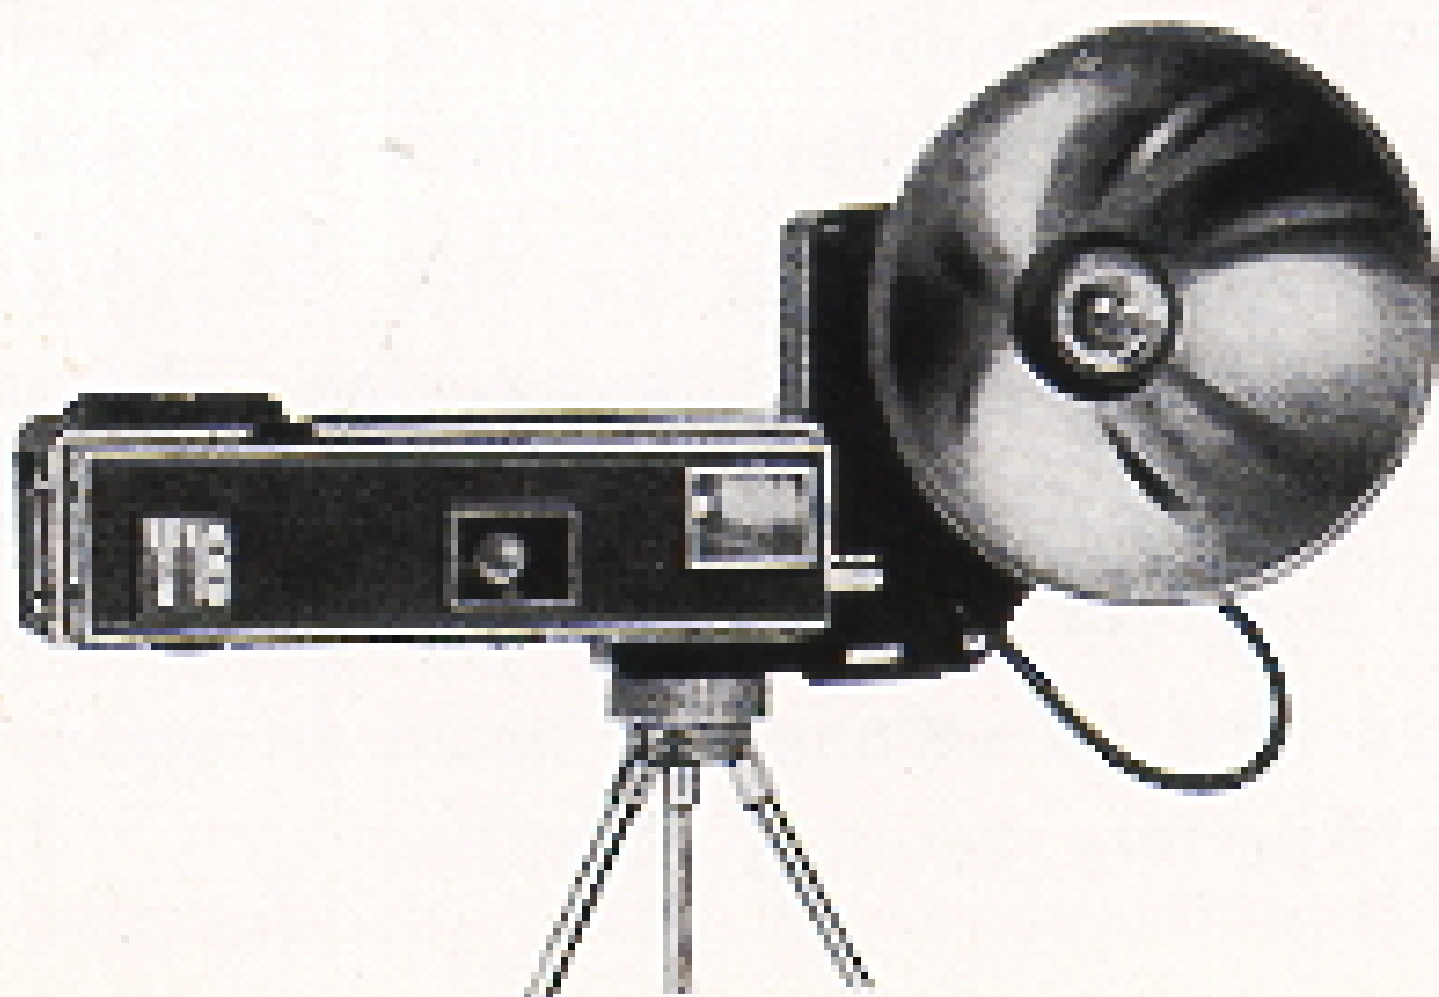

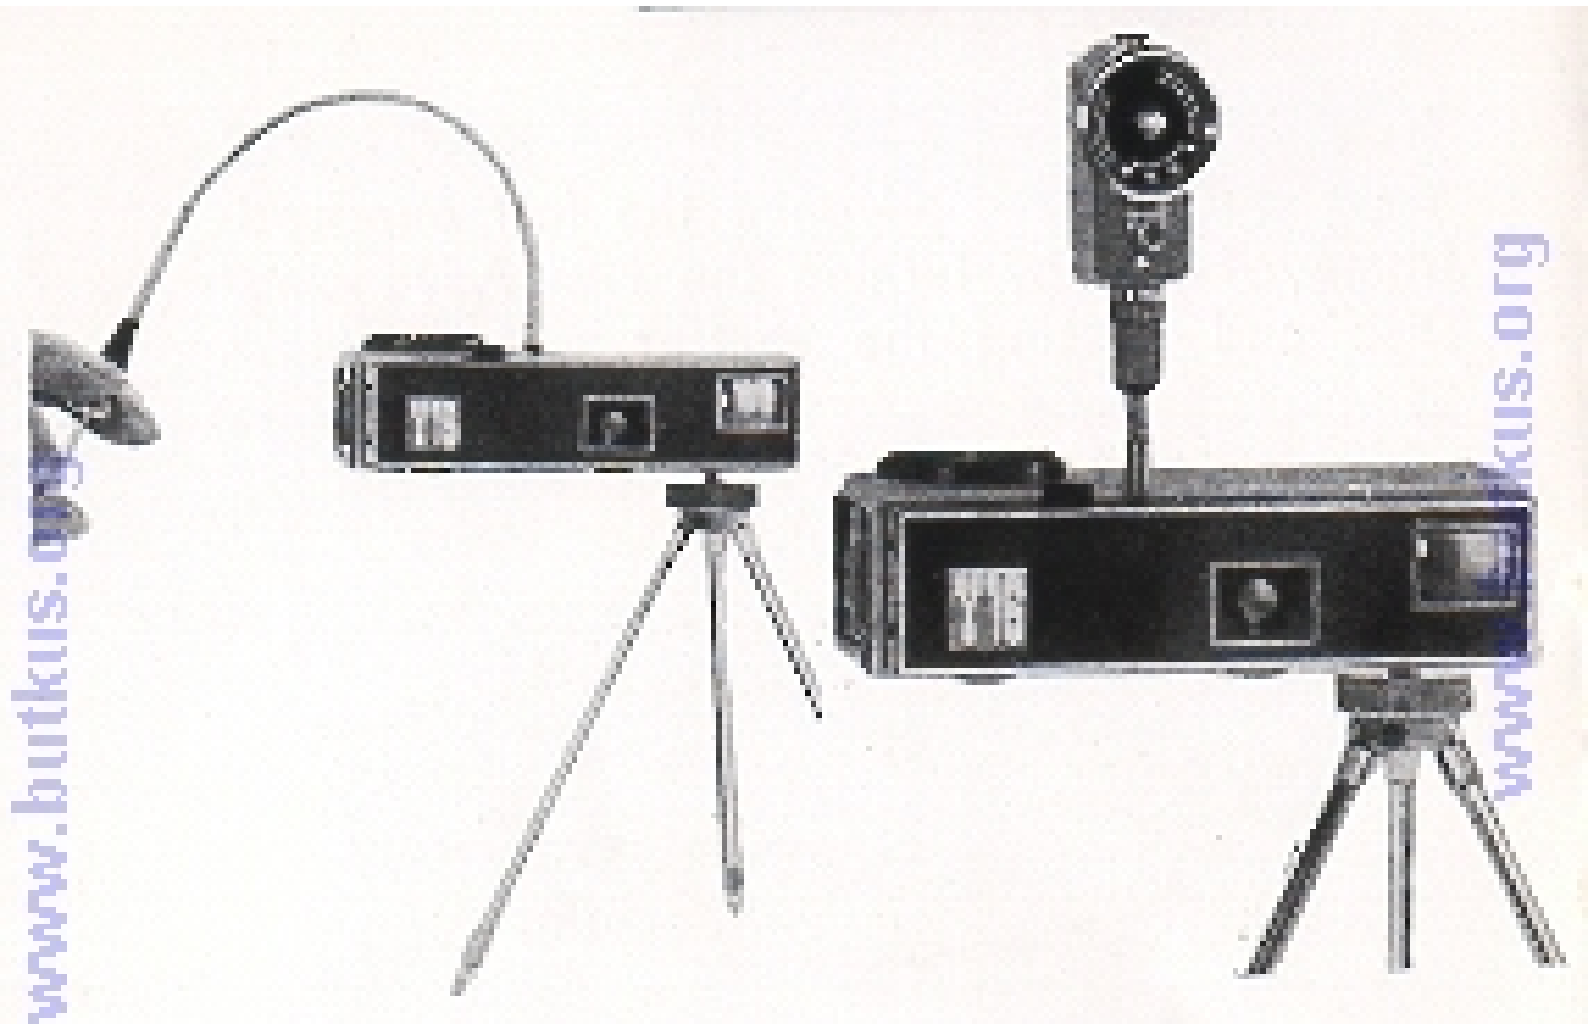

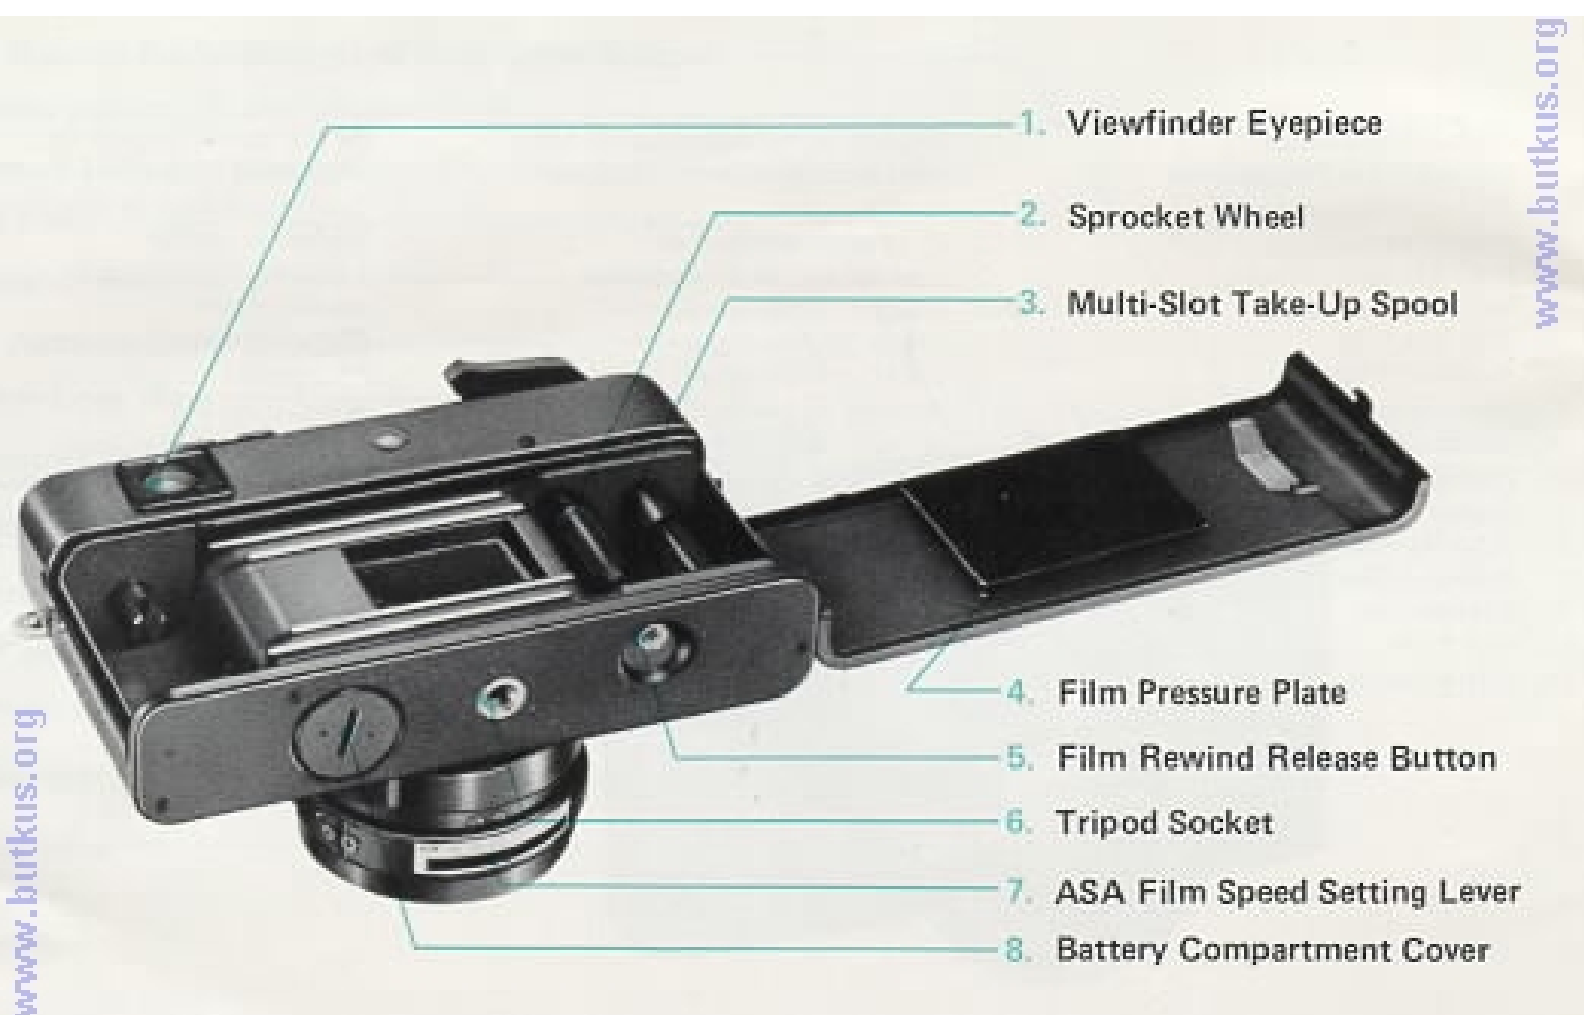







1. Film Rewind Knob (Doubles as Back Cover Release)
2. Accessory Shoe ('X' contact hot-shoe)
3. Exposure Indicator Lamp
4. Auto Lever
5. Shutter Release Button
6. Film Advance Lever
7. Shutter Lock Ring
8. Exposure Counter
9. Viewfinder
10. Focusing Ring
11. Self-Timer Lever
12. Aperture Ring
13. CdS Sensor
14. Taking Lens



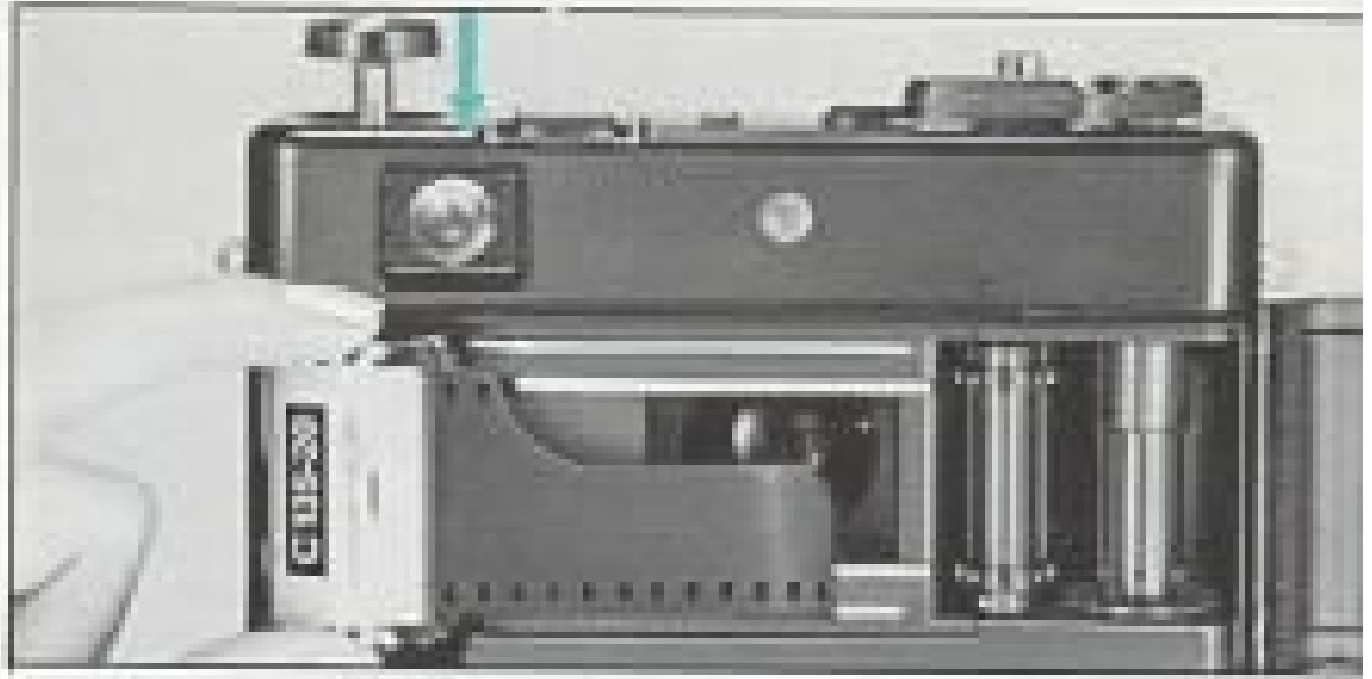




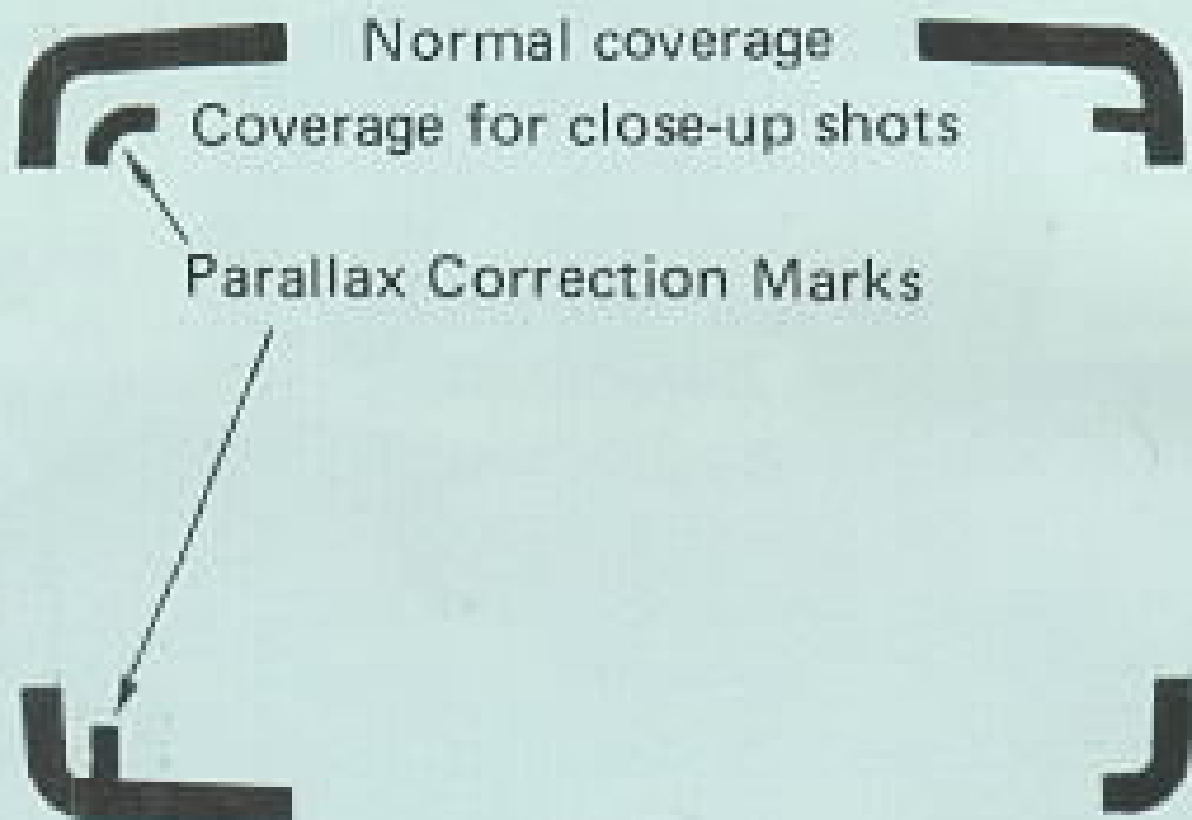

Normal coverage
Coverage for close-up shots
Parallax Correction Marks

Bright Frame

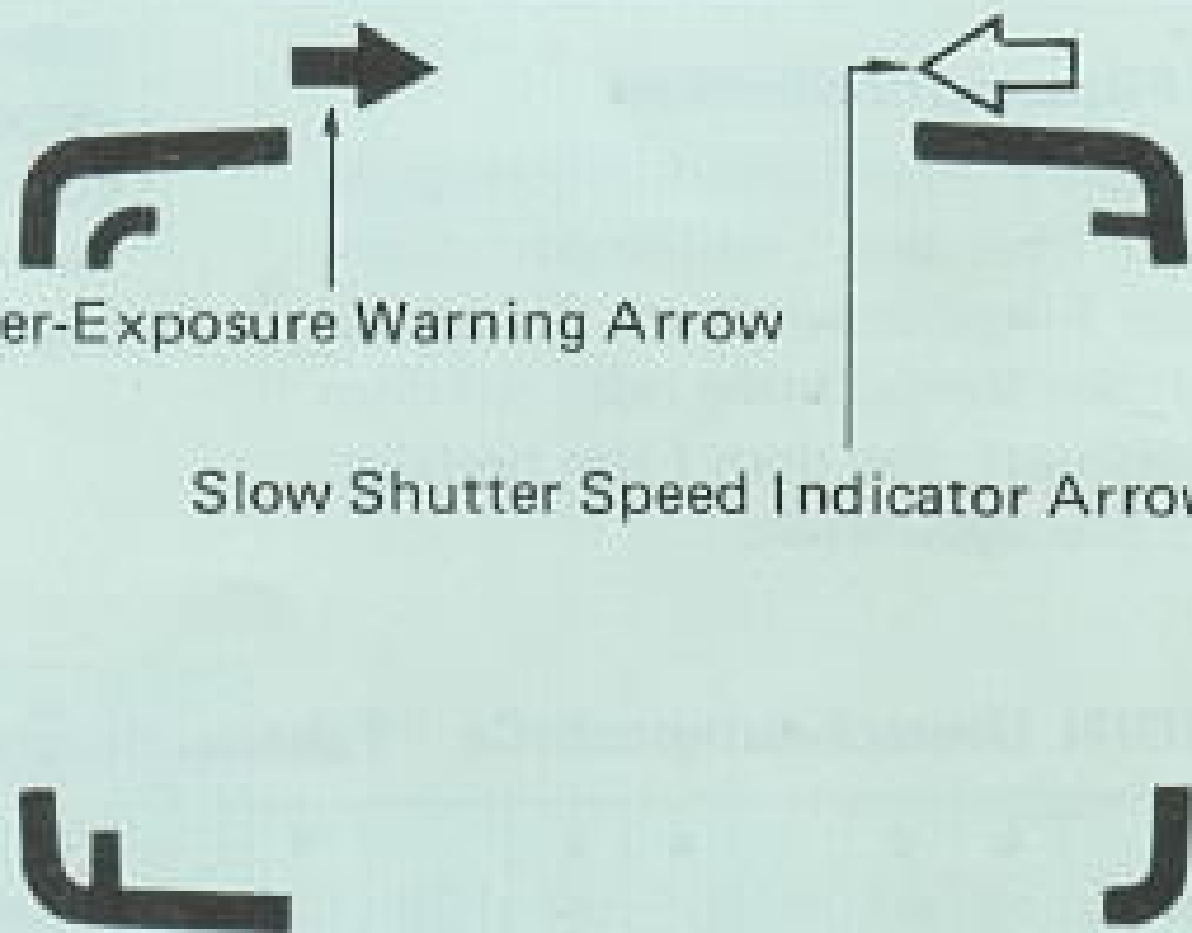

Over-Exposure Warning Arrow

Slow Shutter Speed Indicator Arrow



