 
 
 


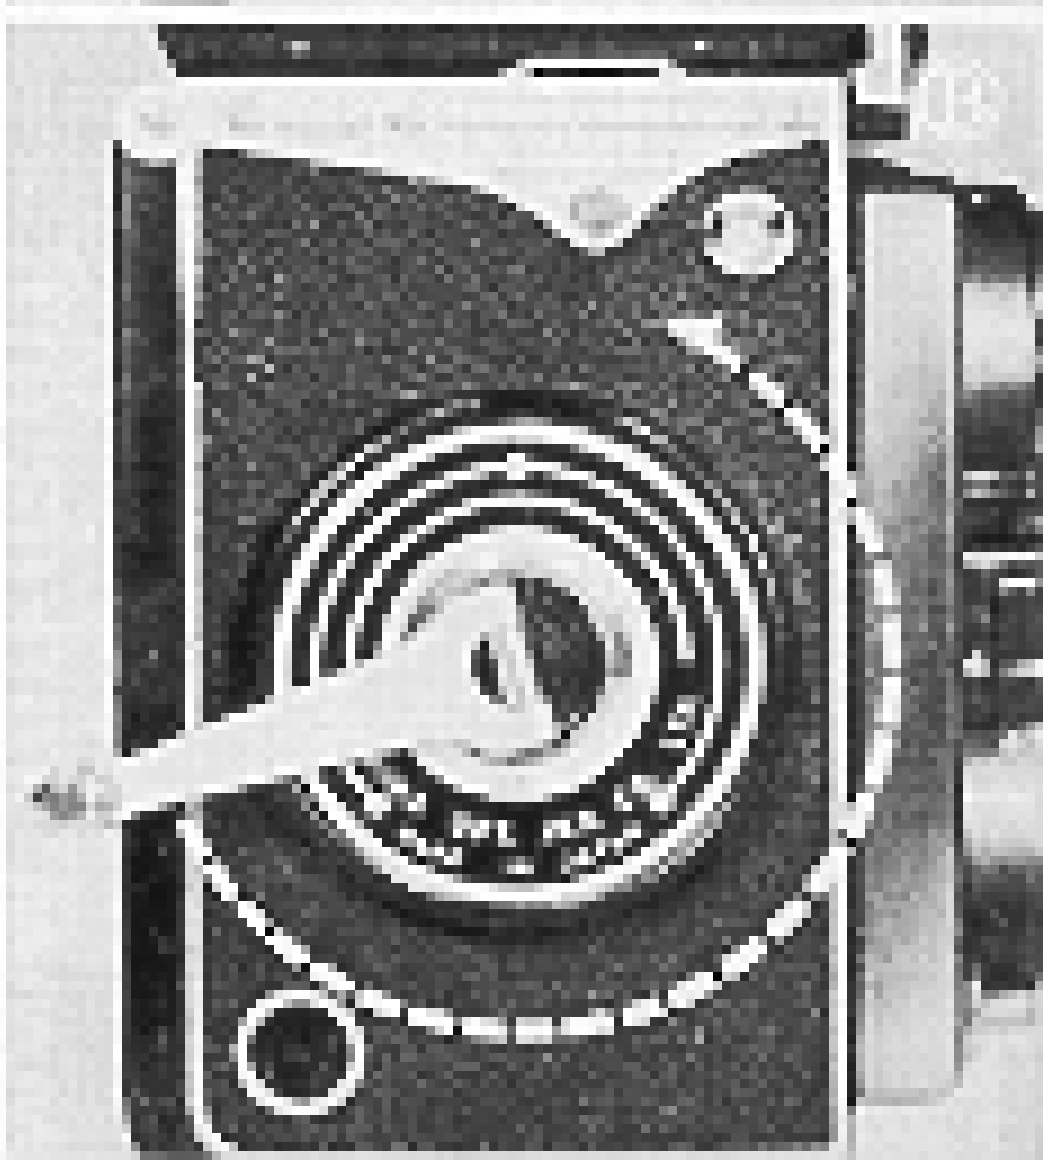

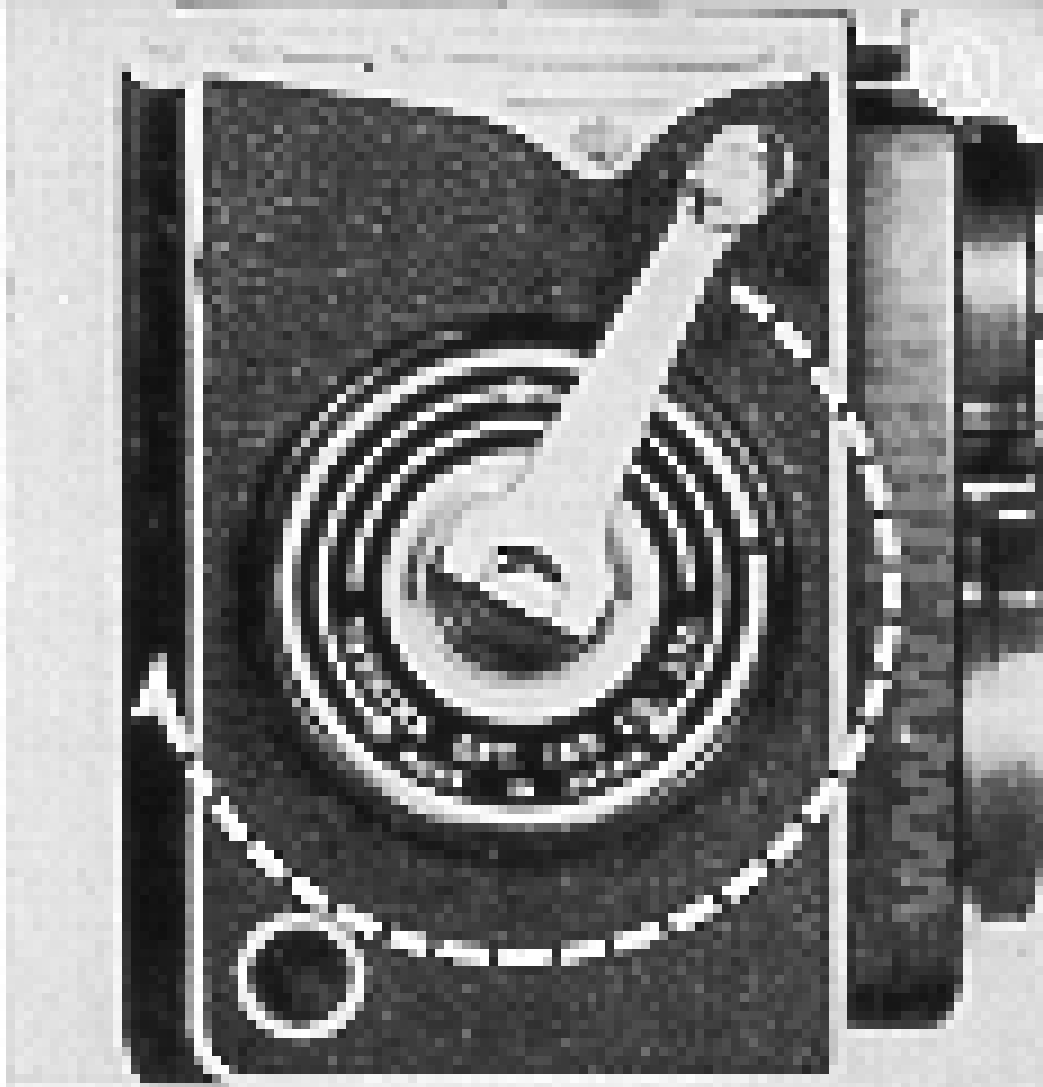


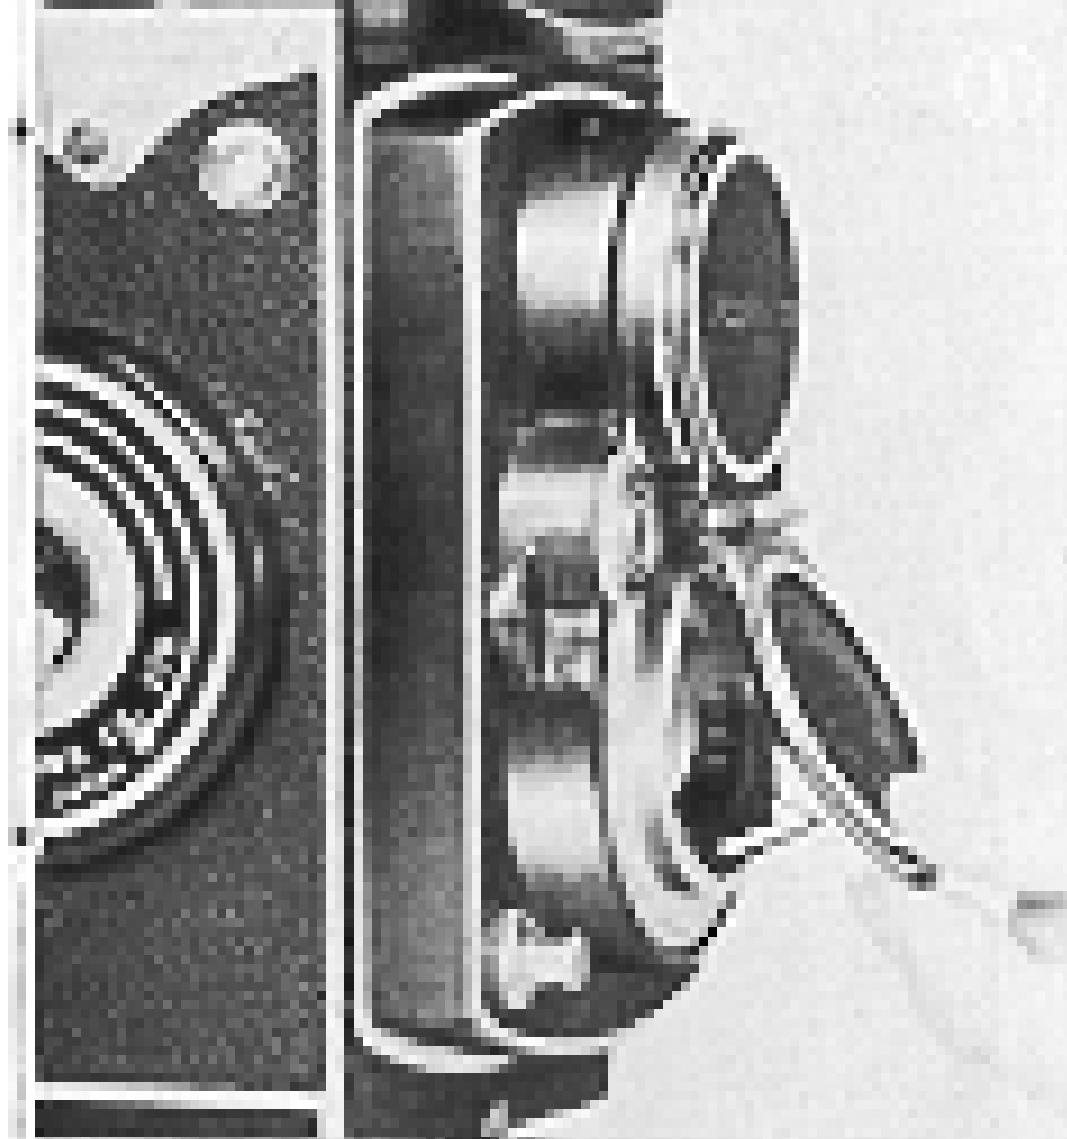


www.butkus.org




    
www.butkus.org

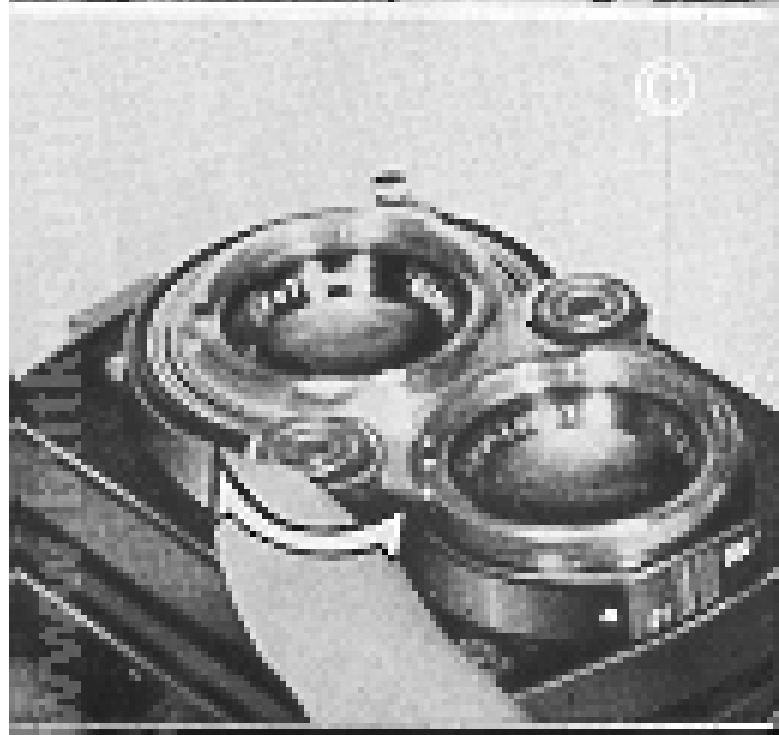

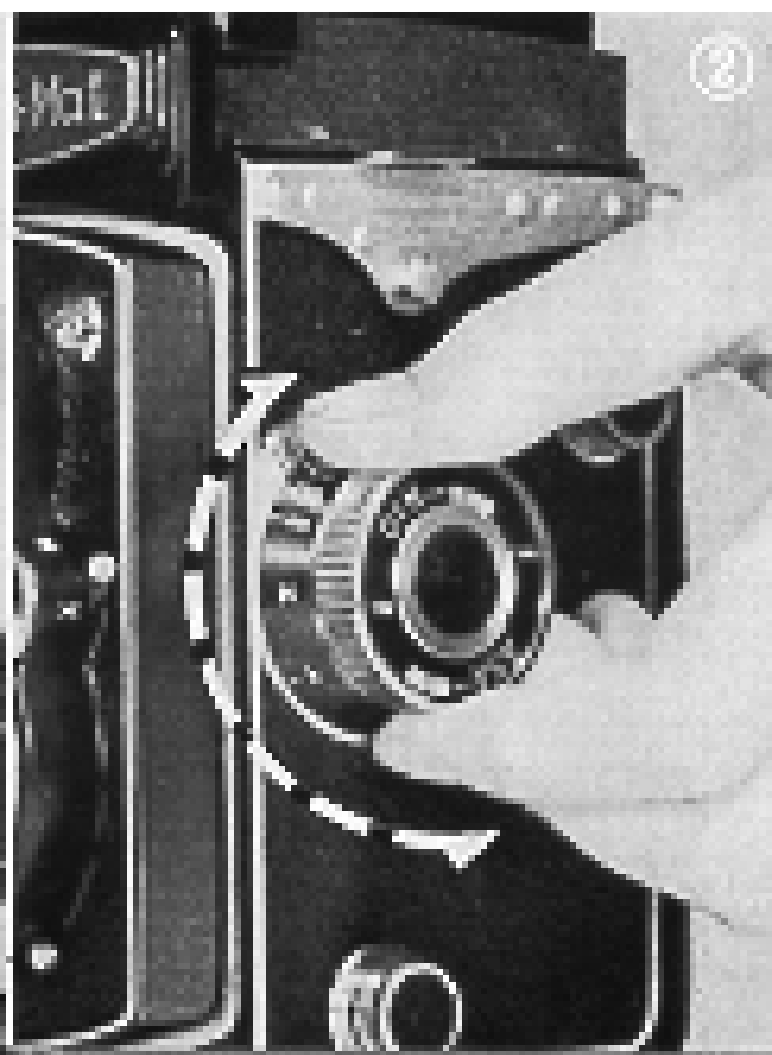



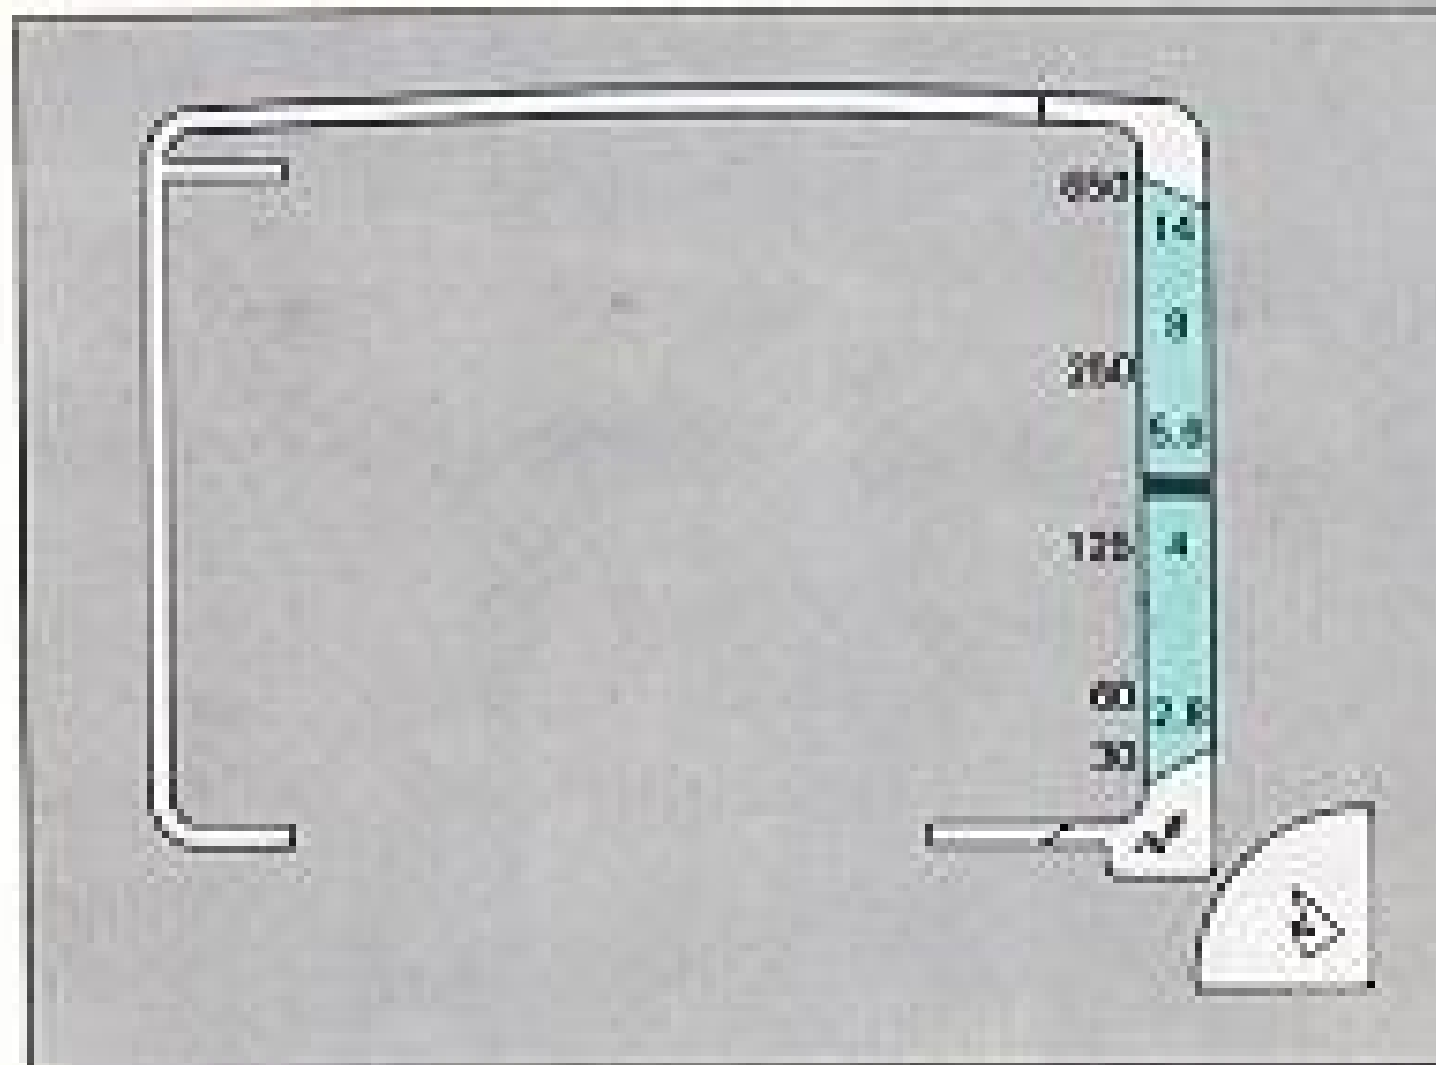

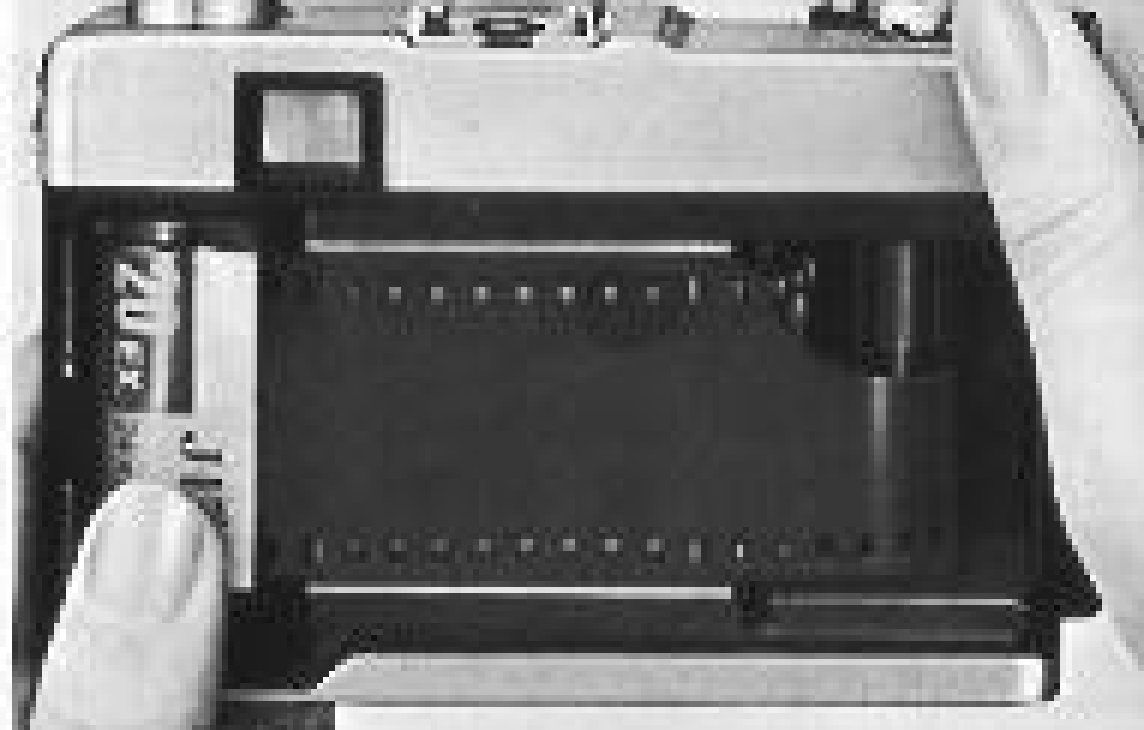








ASA
100



 ASA
~~100~~ 12



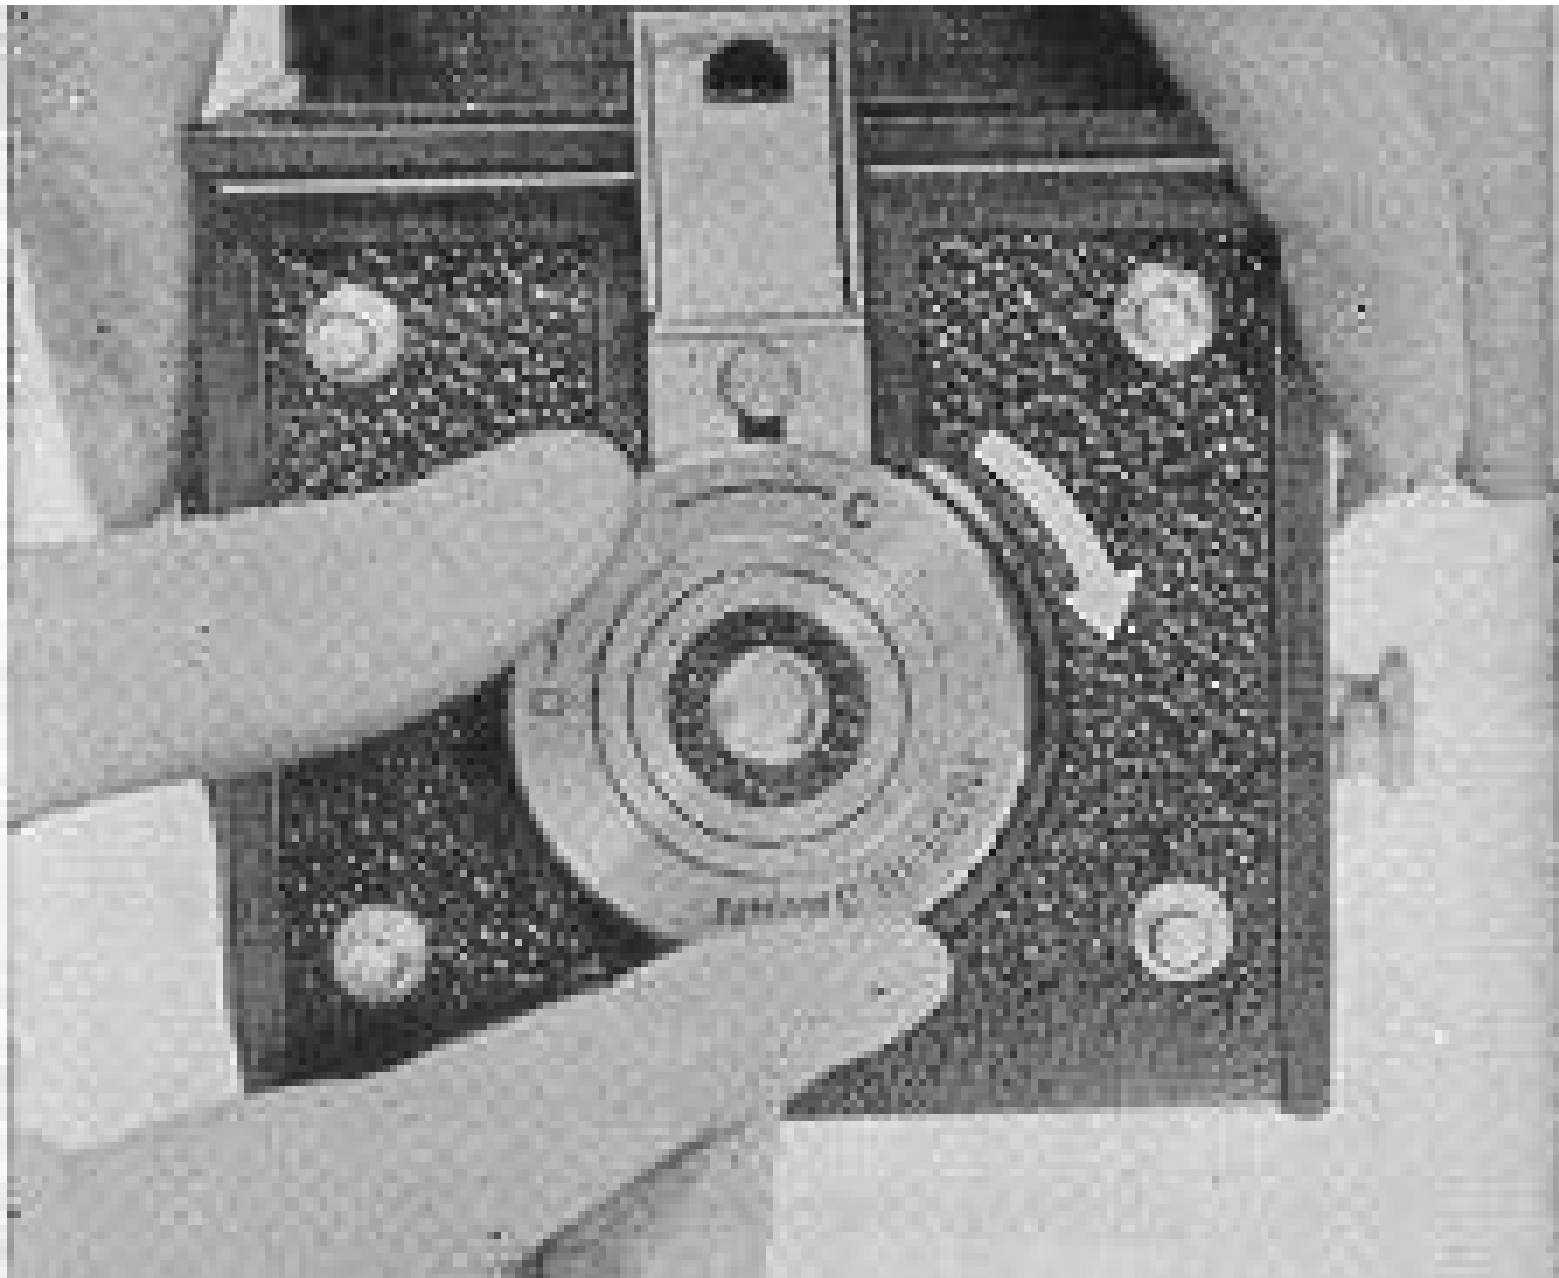



YASHICA MAT

 
INSTRUCTION BOOKLET

 
 
Foglio de istruzioni

 
Mode d'Emploi

 
 
Gebrauchsanweisung

 
 


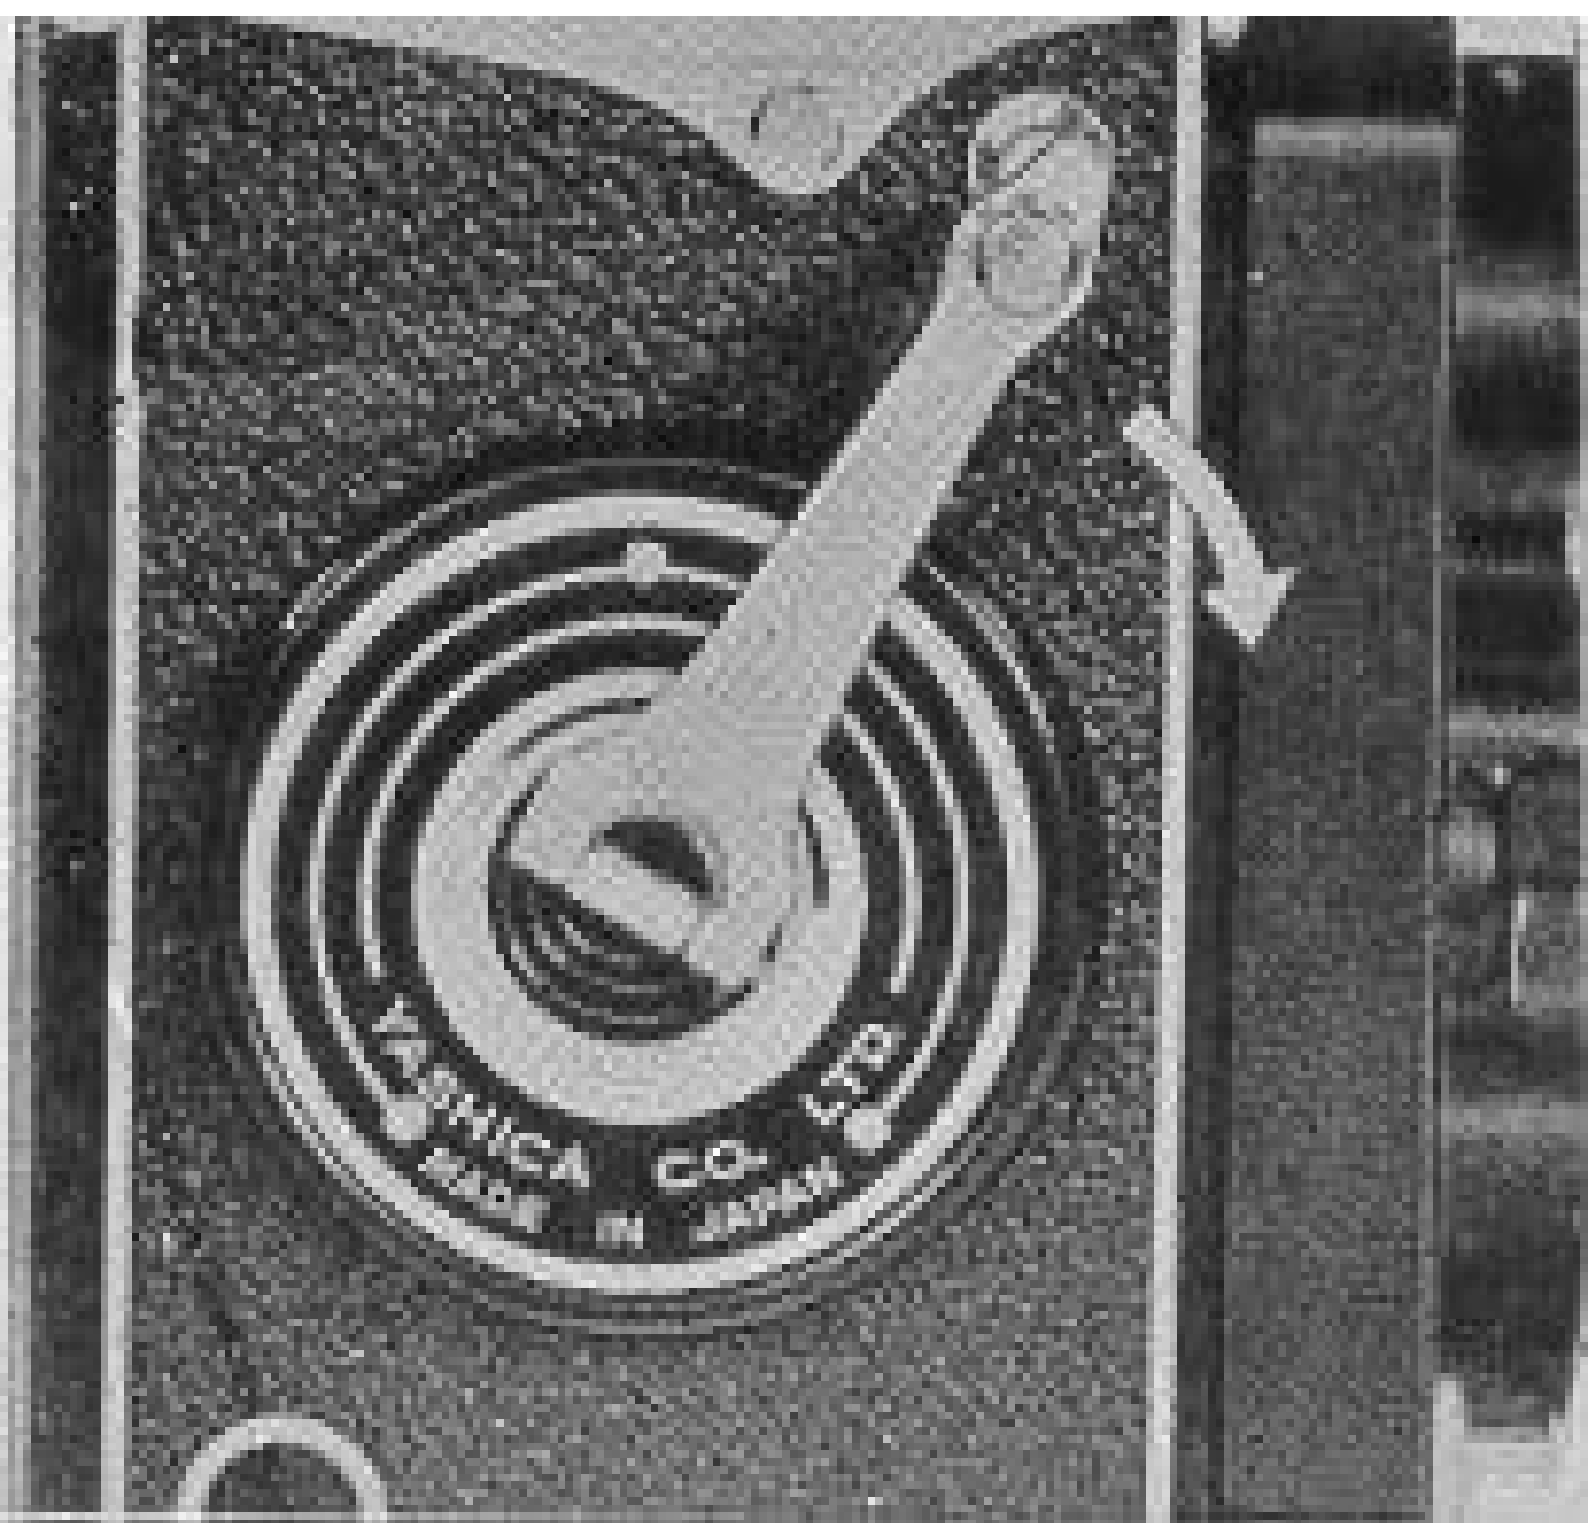 


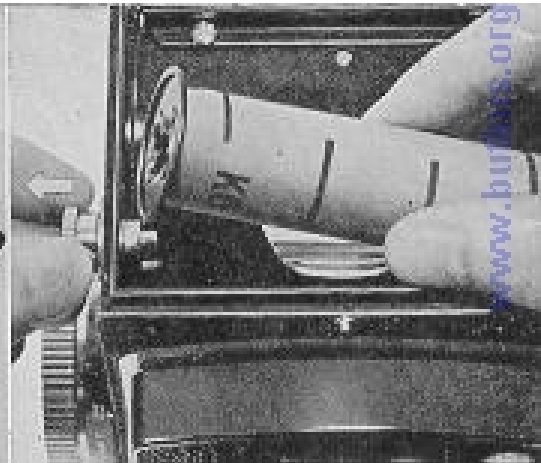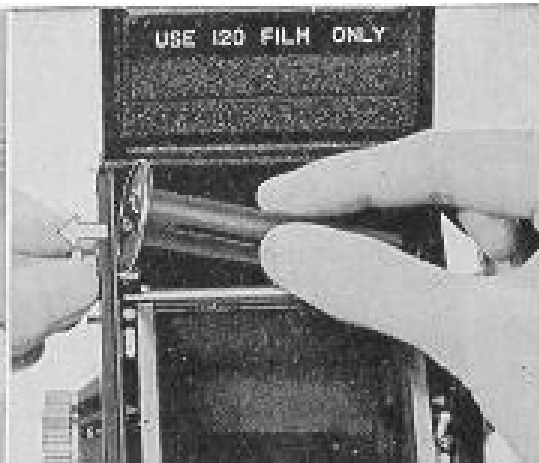 


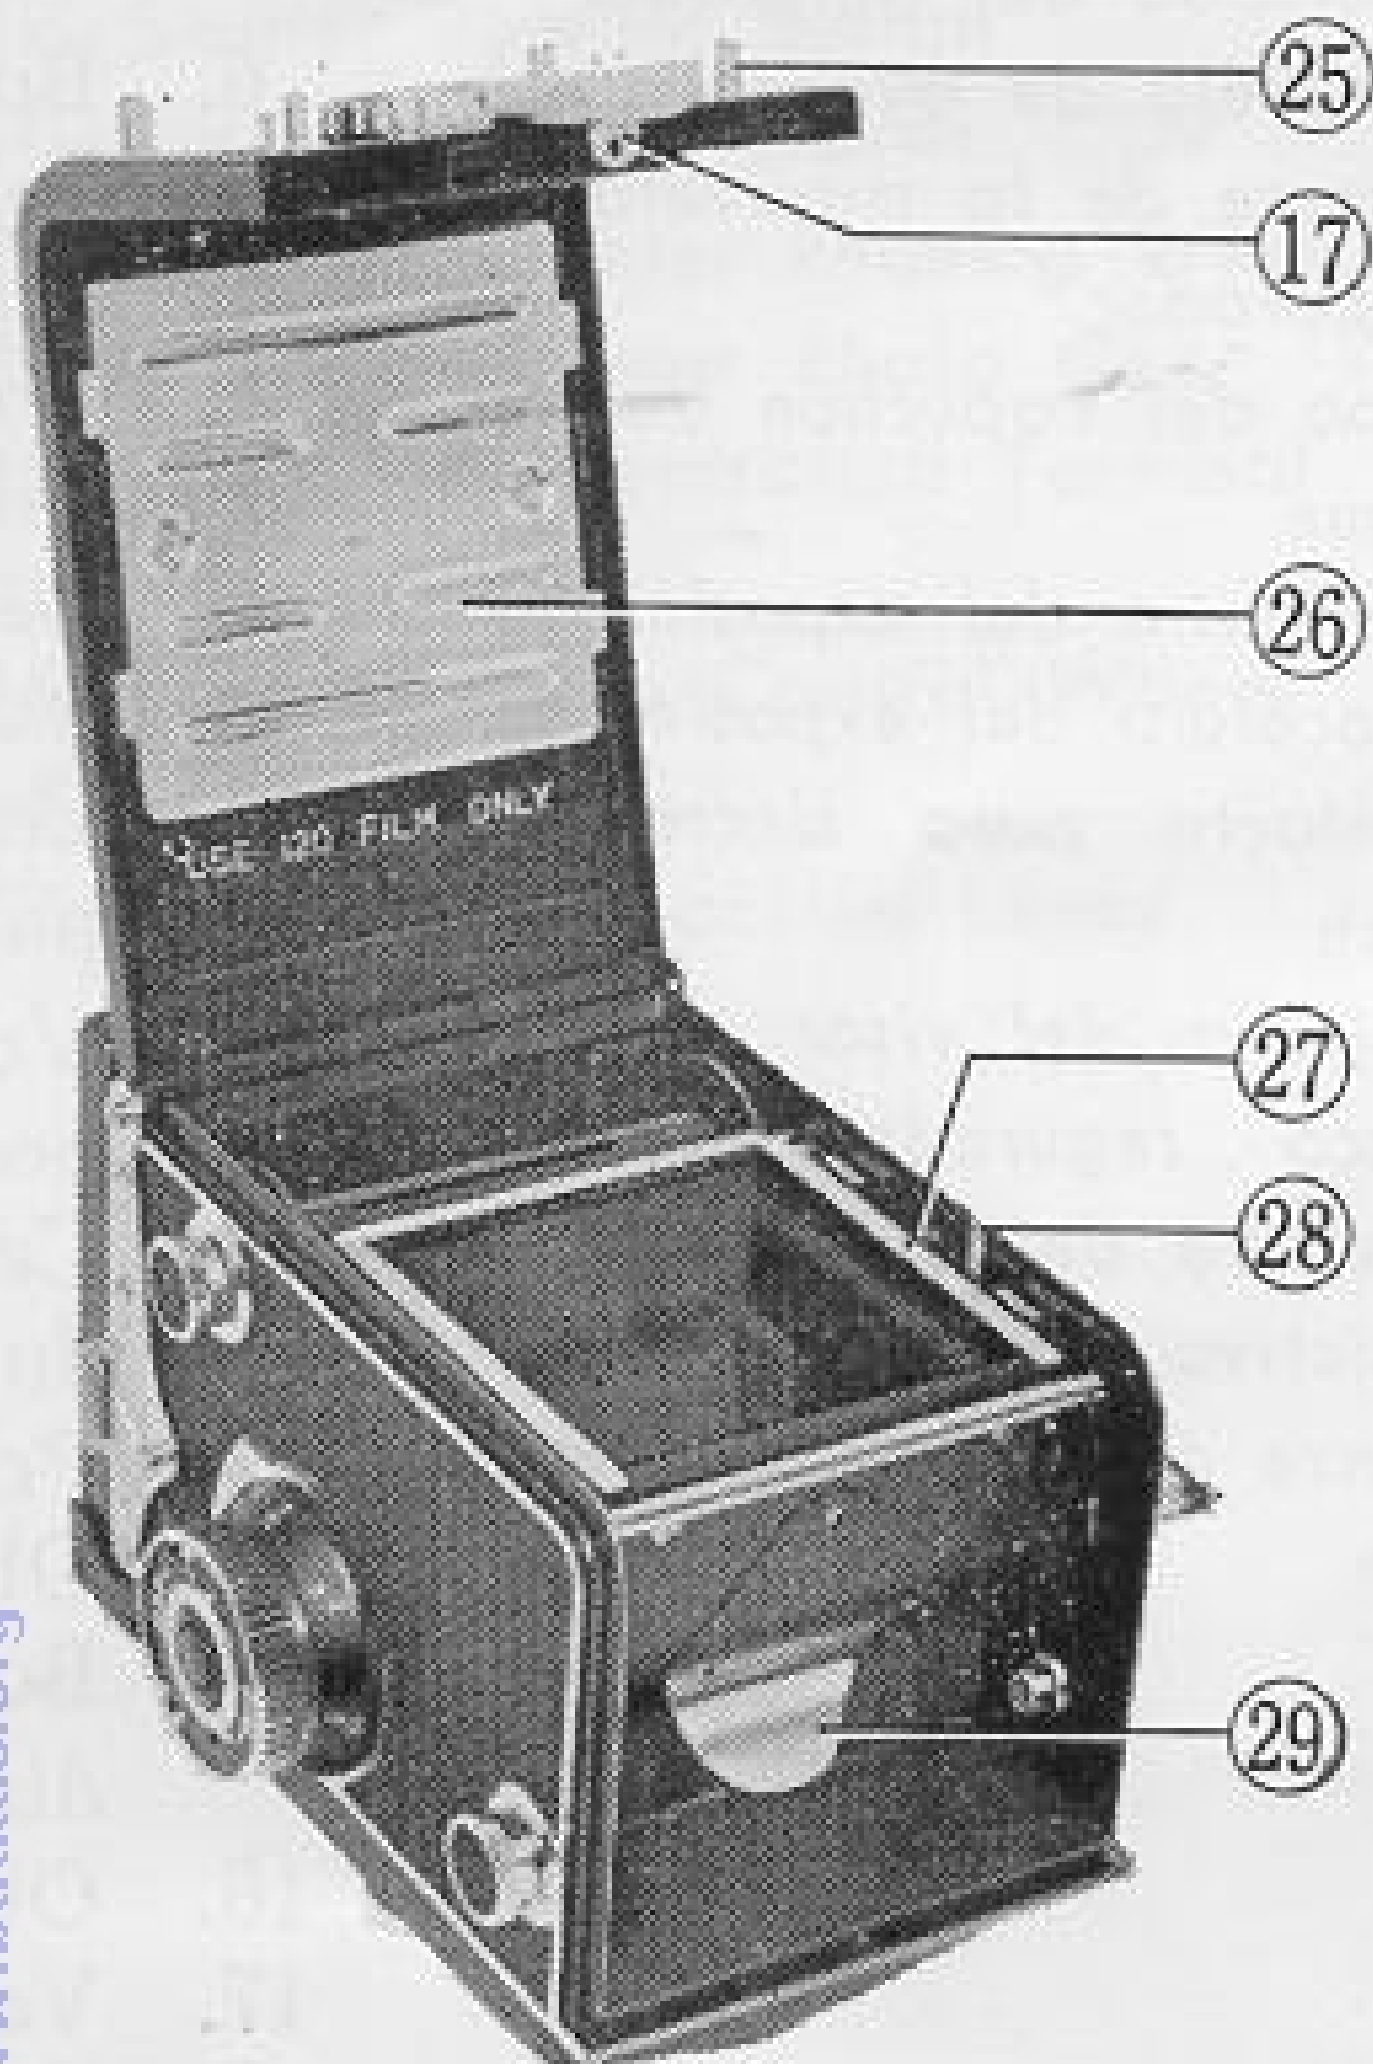 


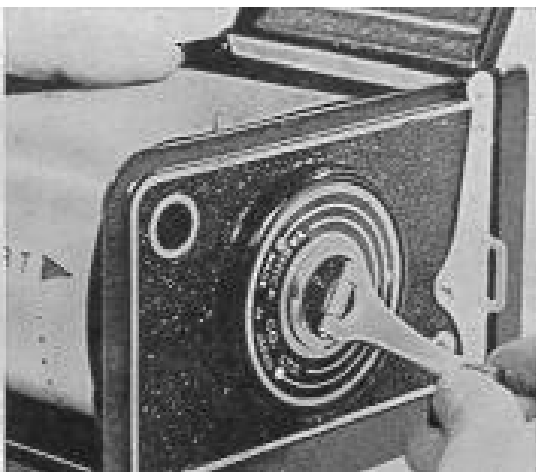 
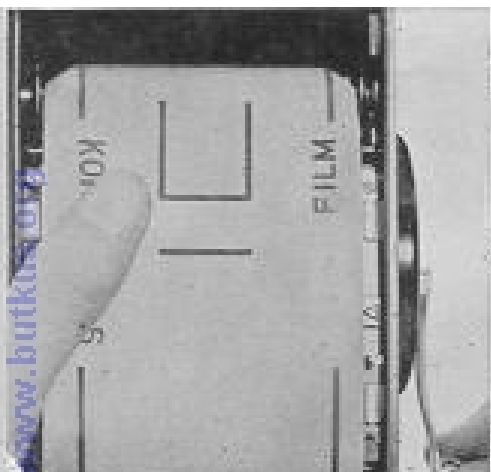 


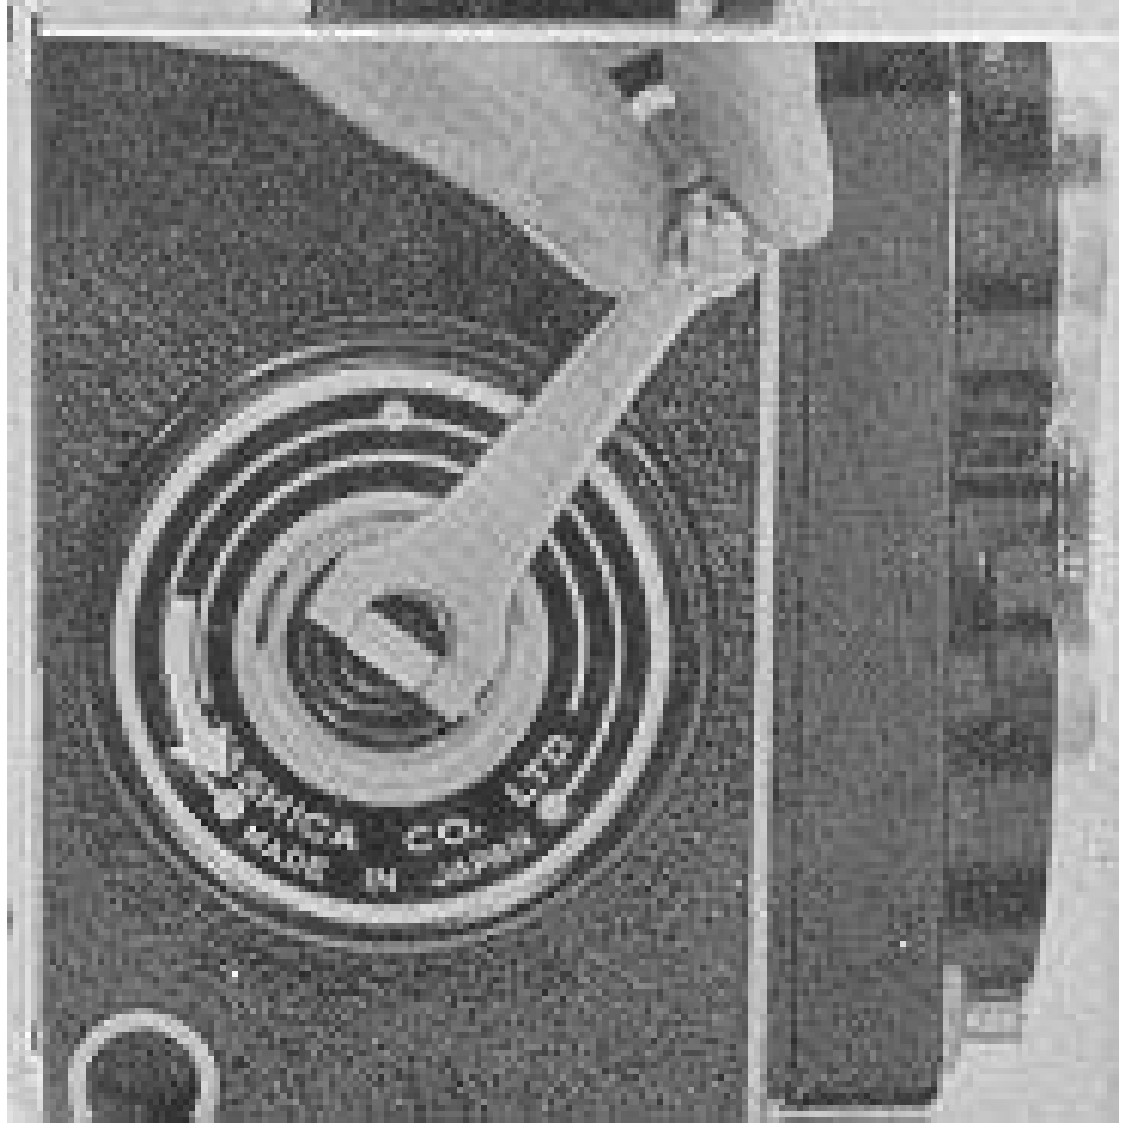 
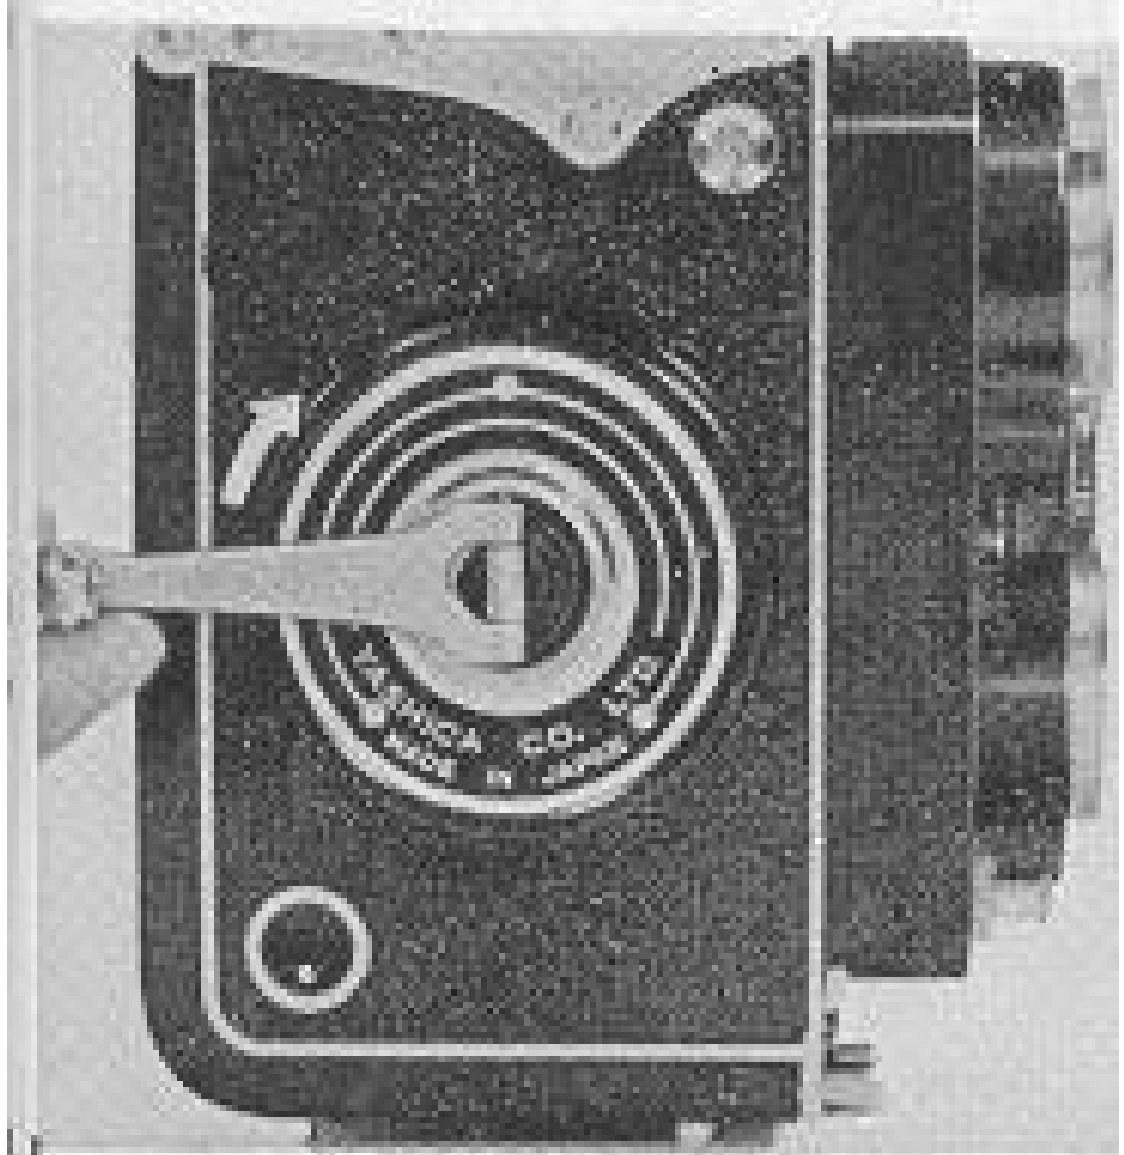 


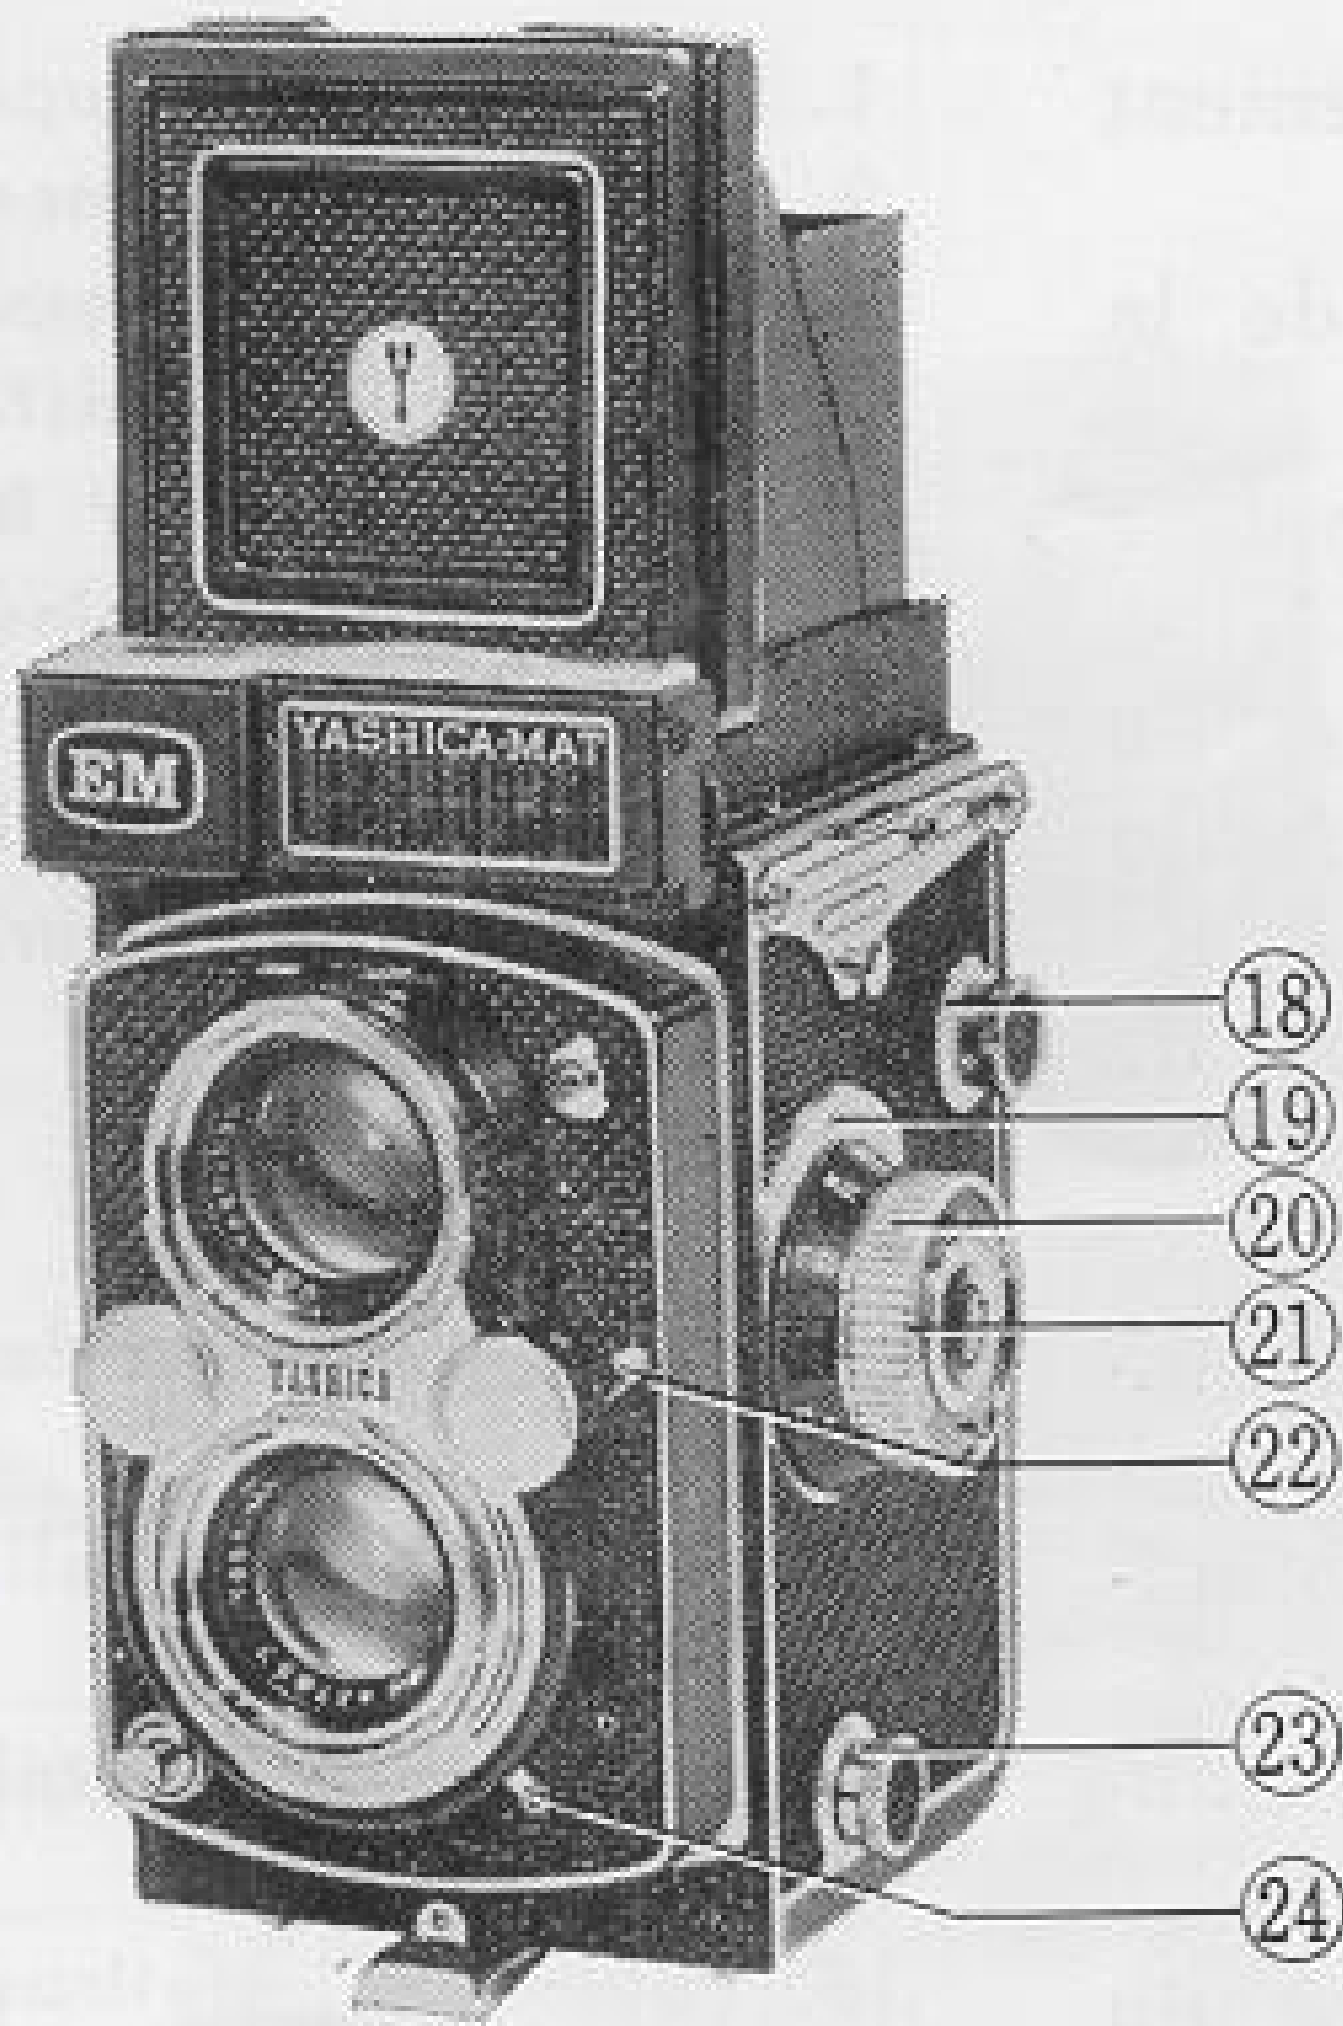 


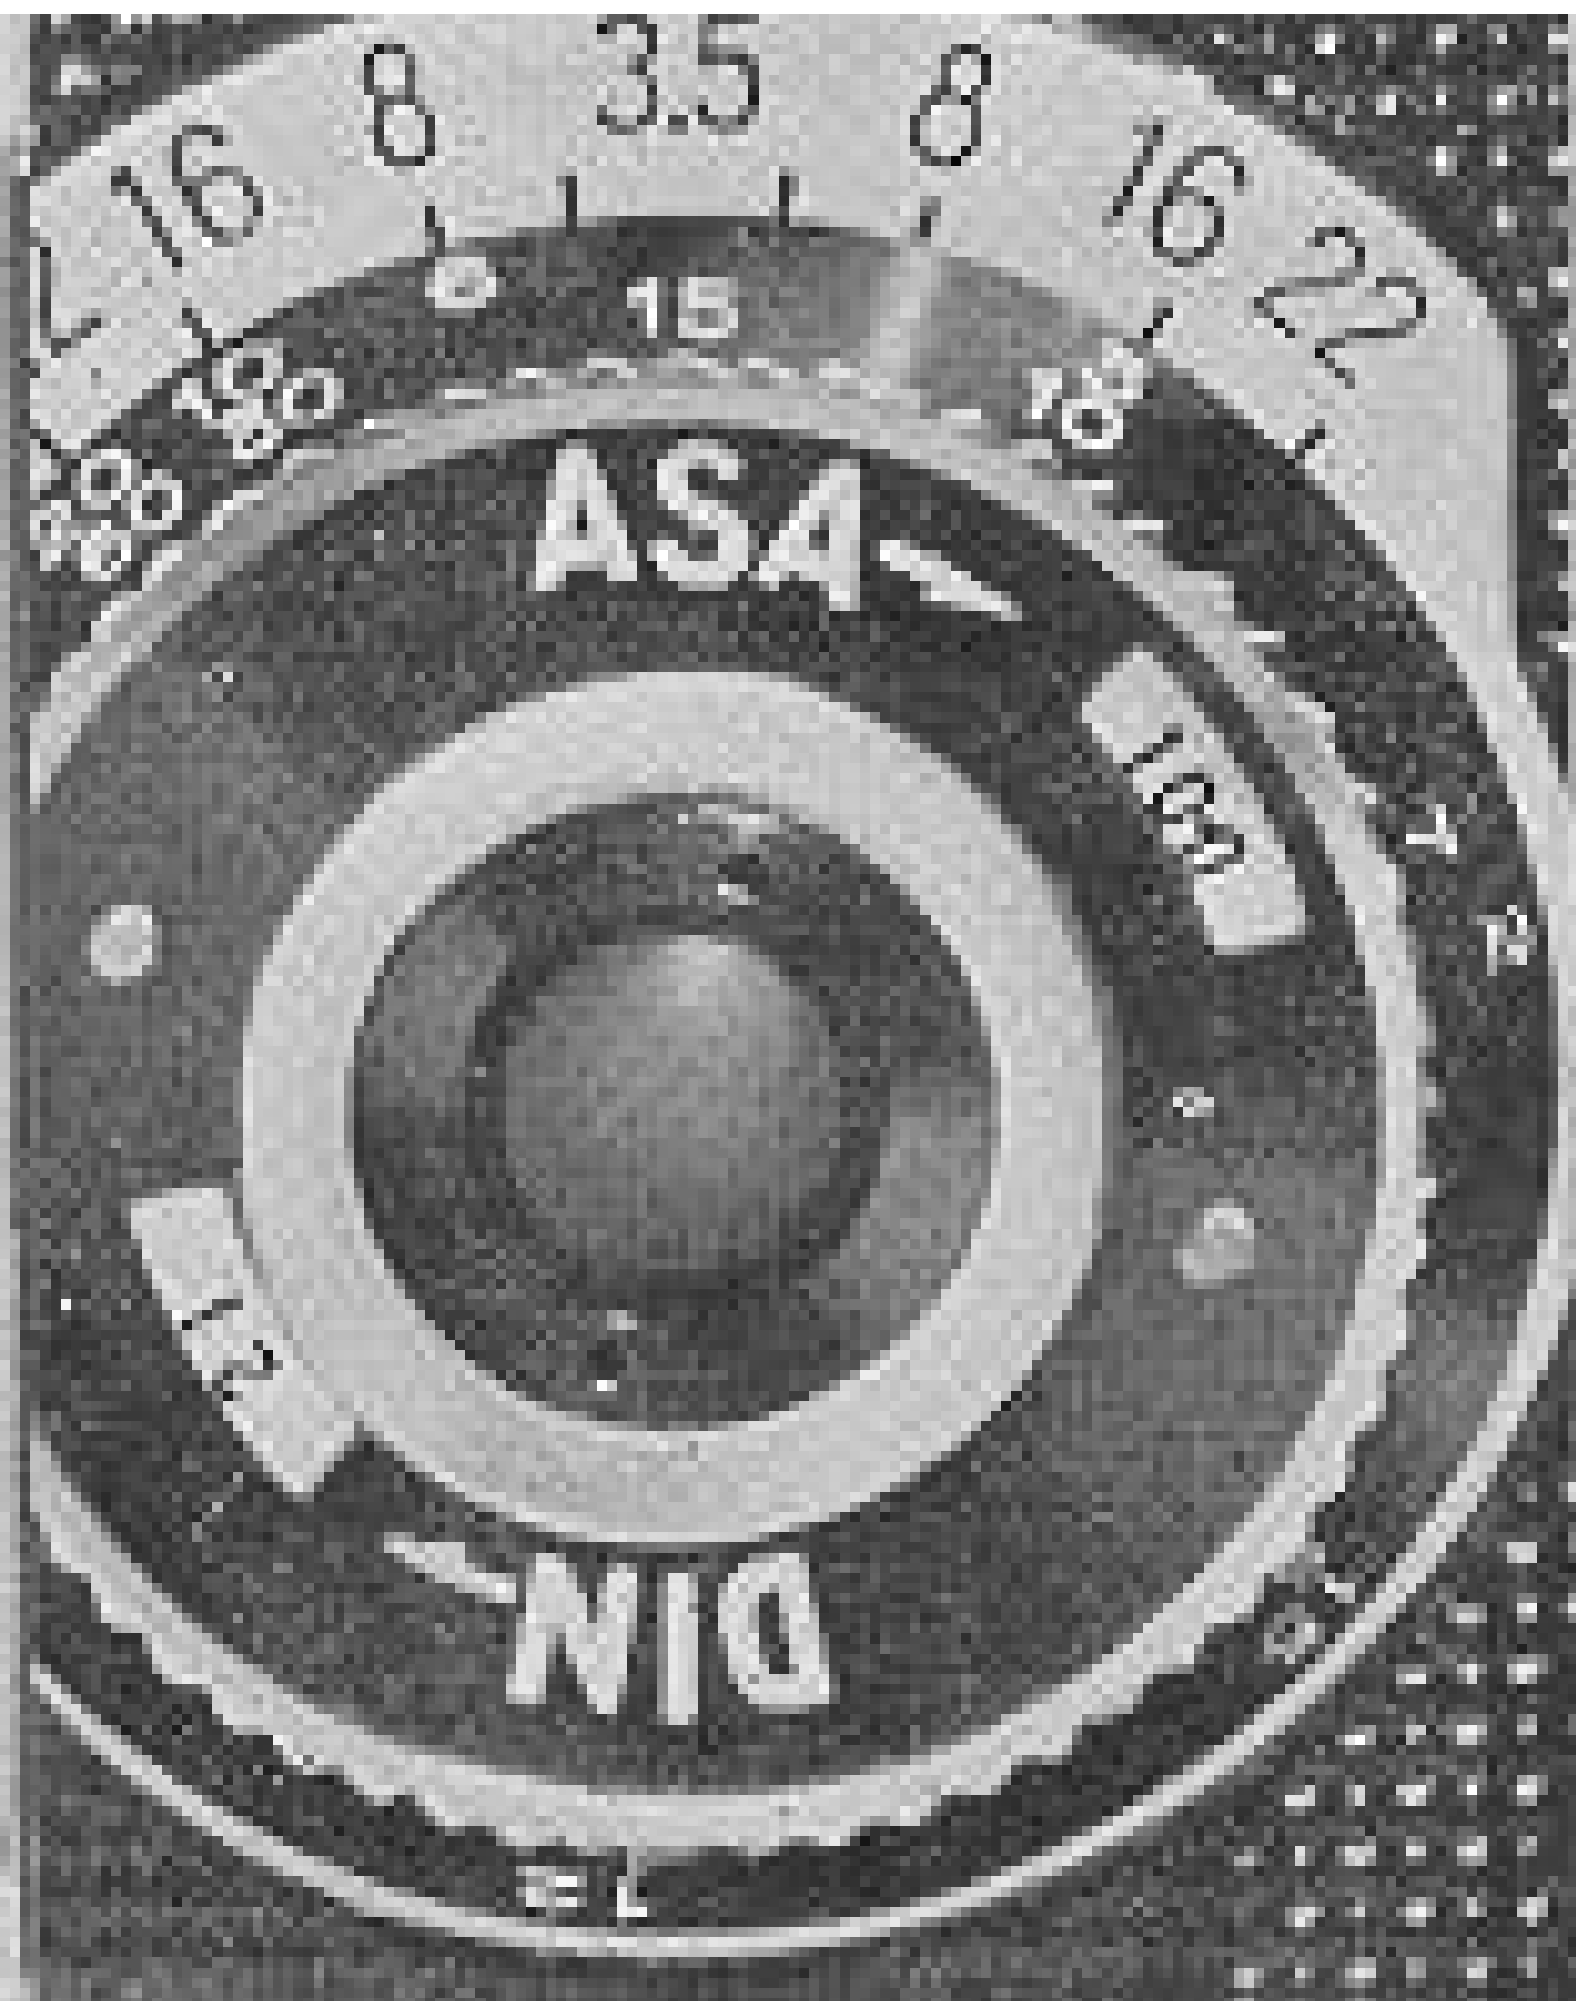 


 
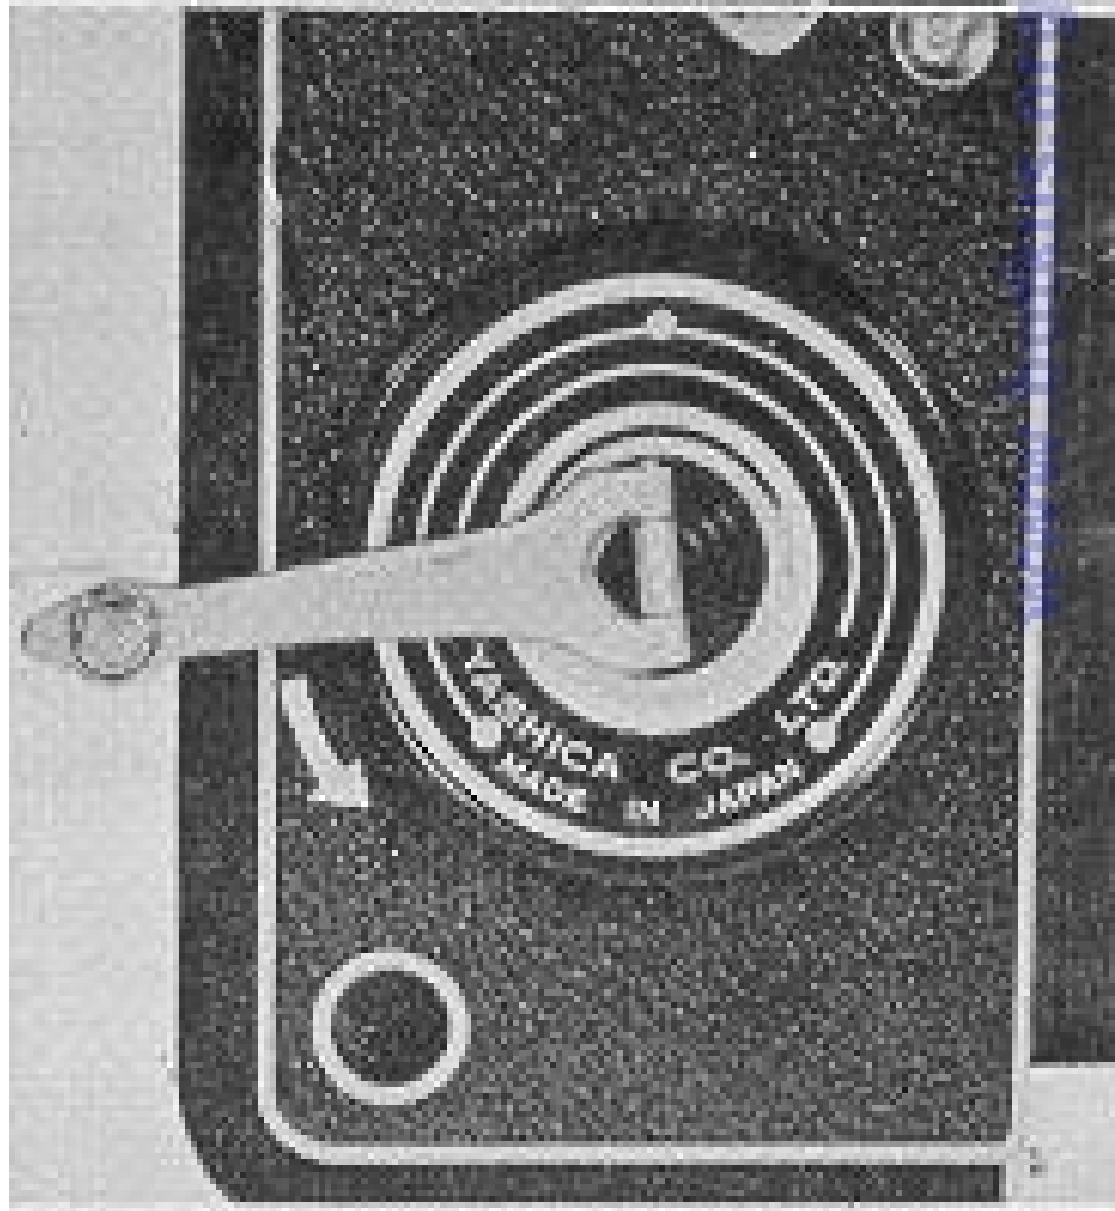 


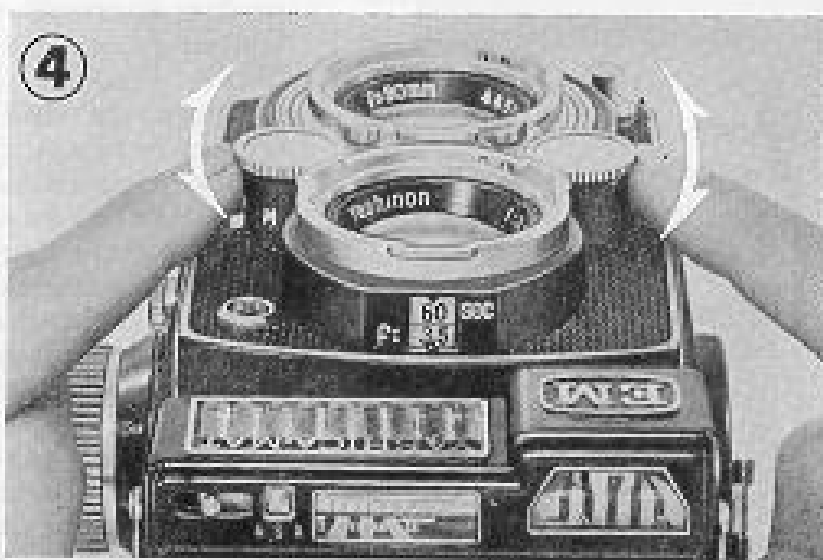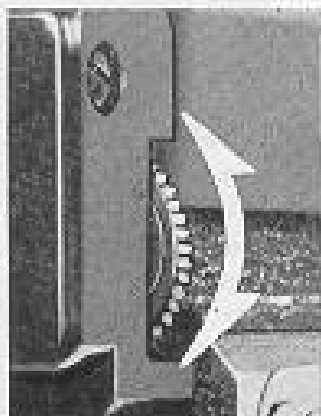 


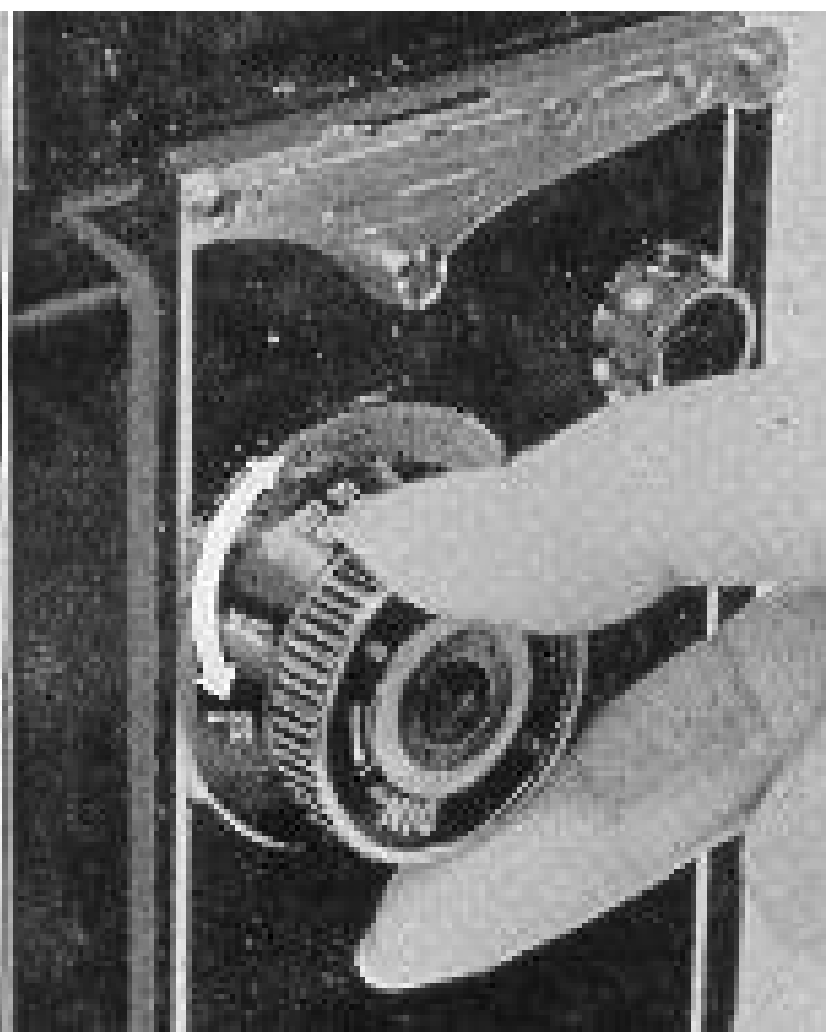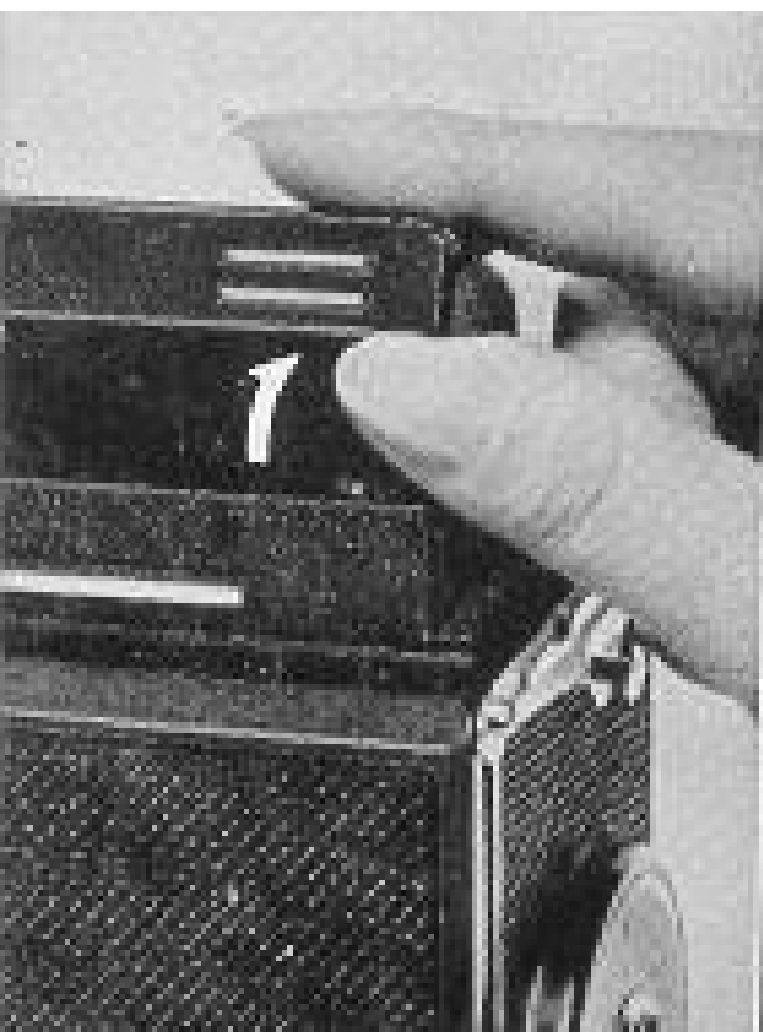

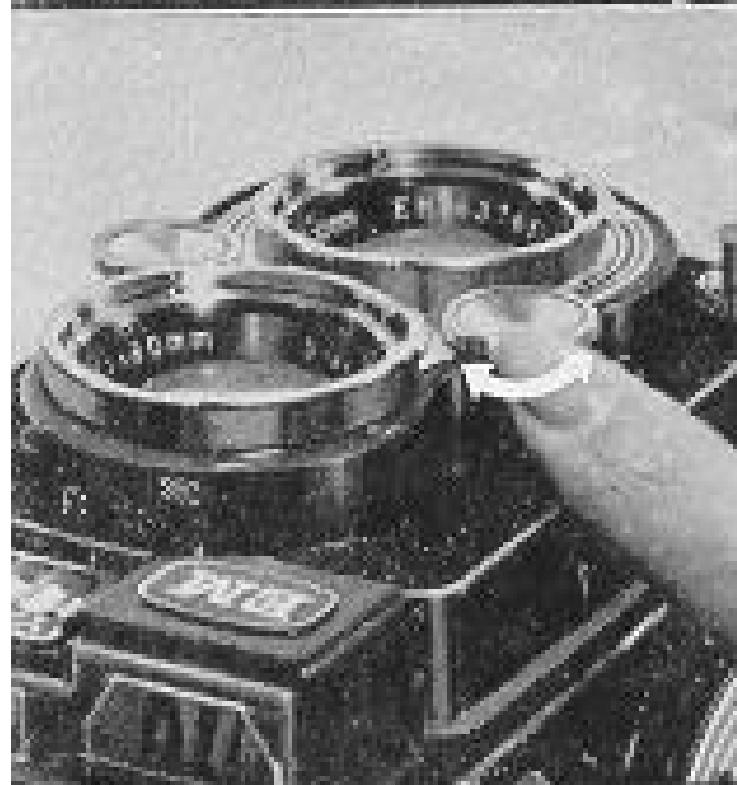 


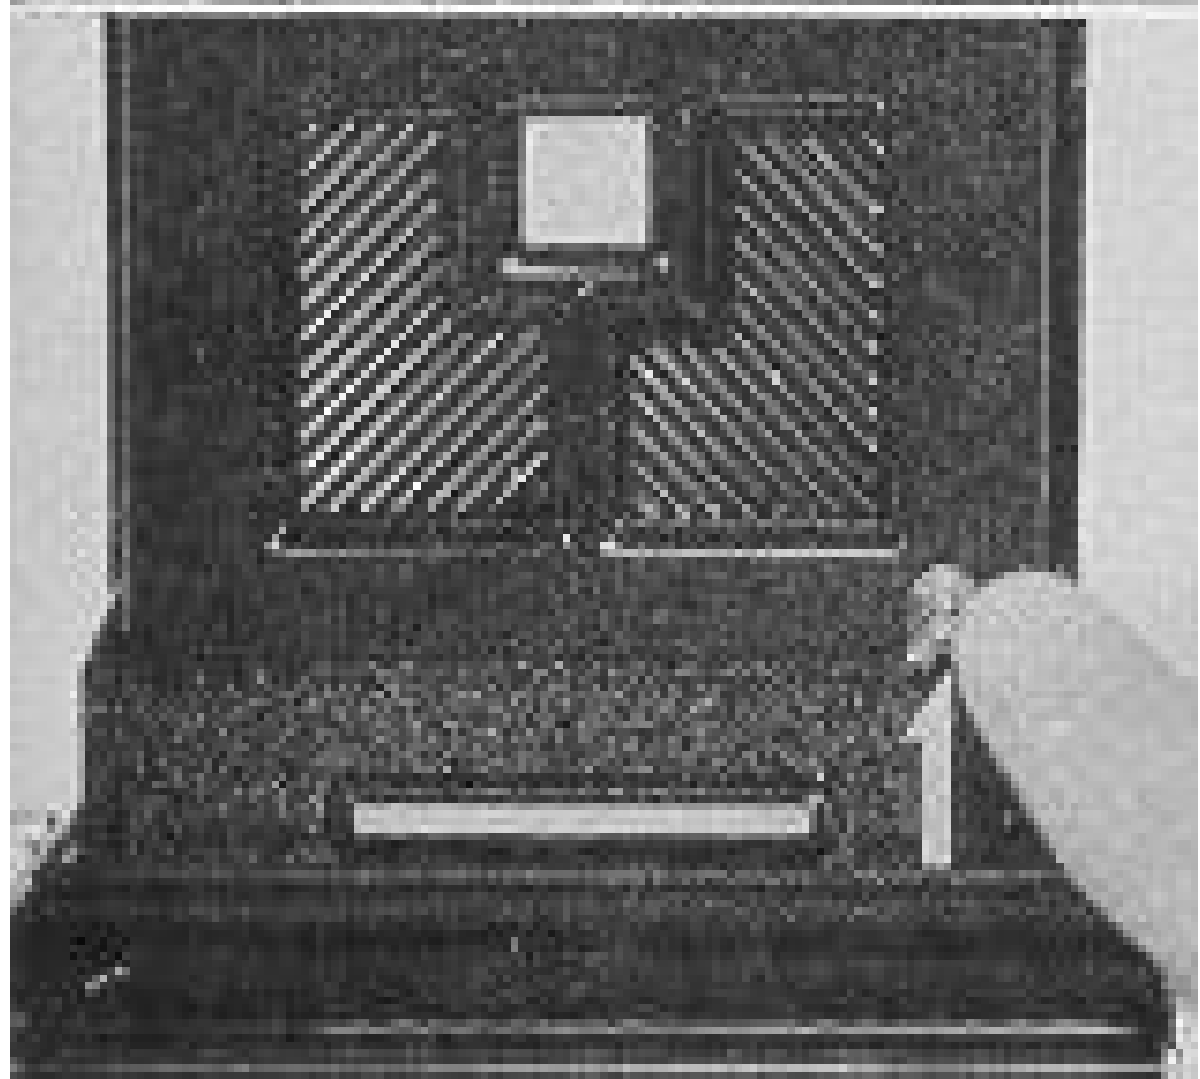

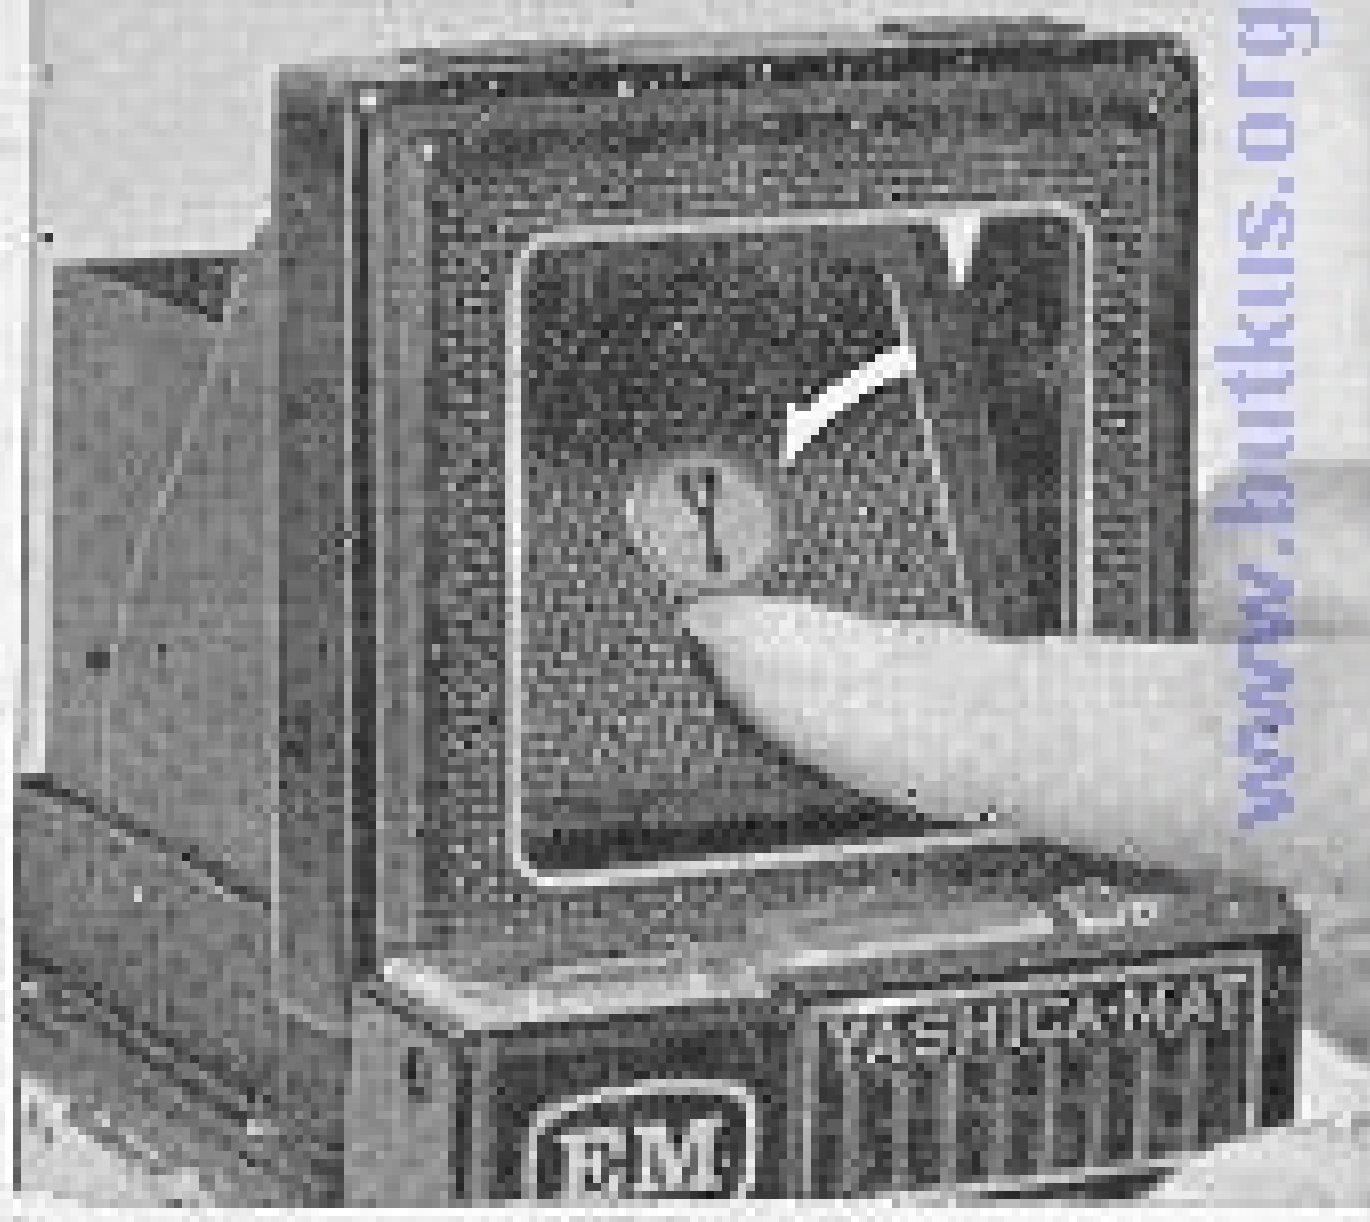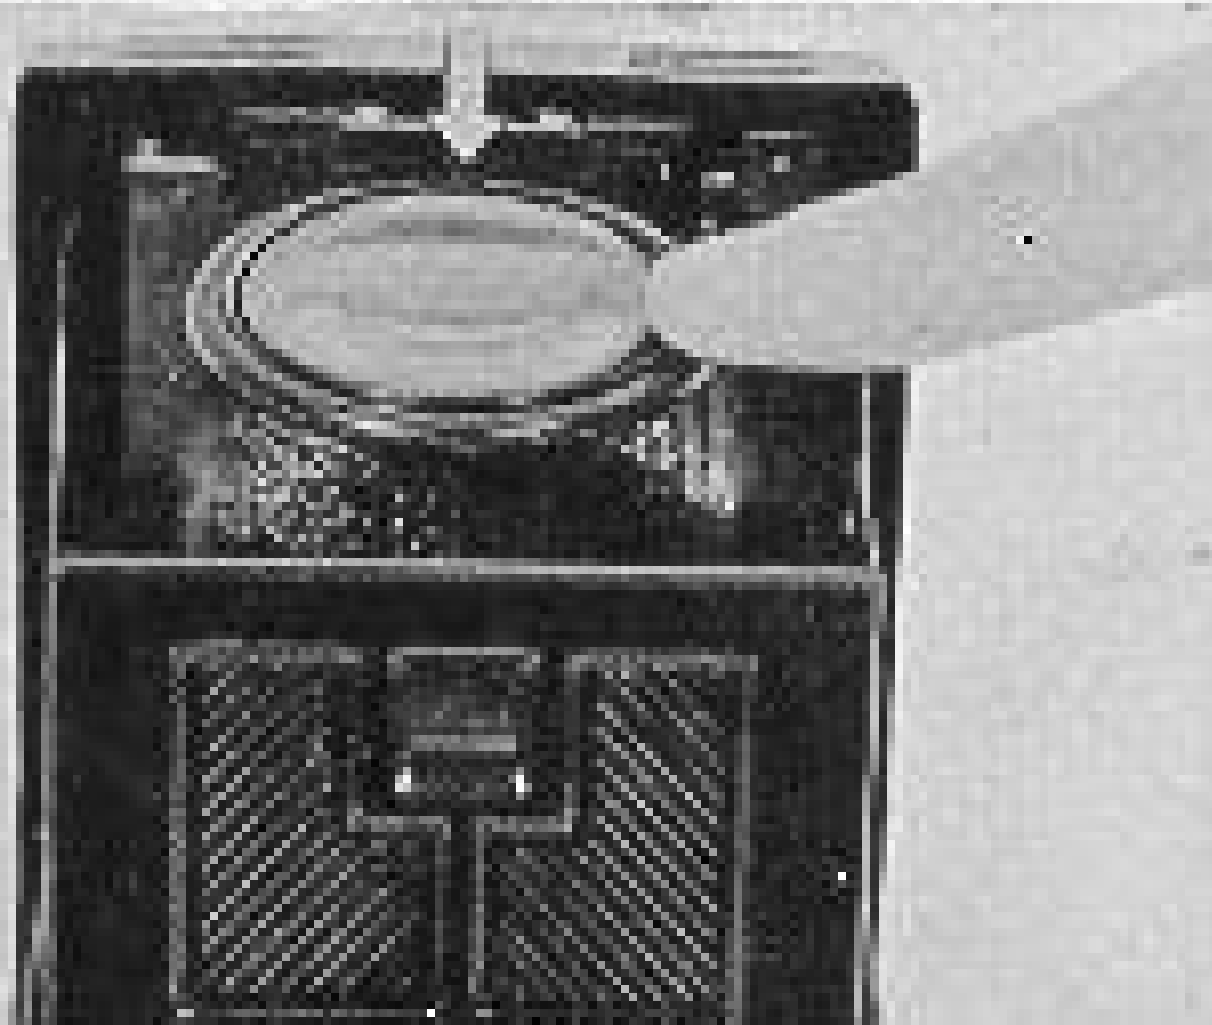

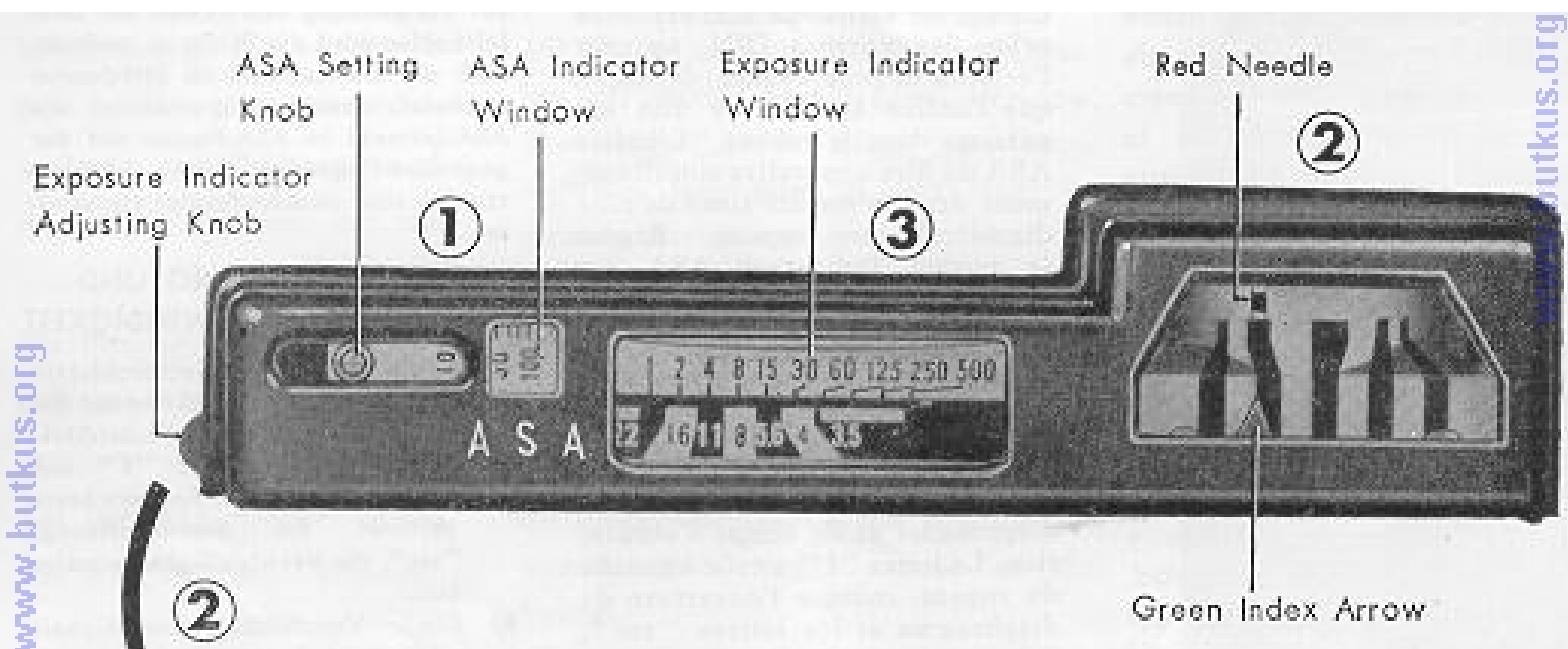



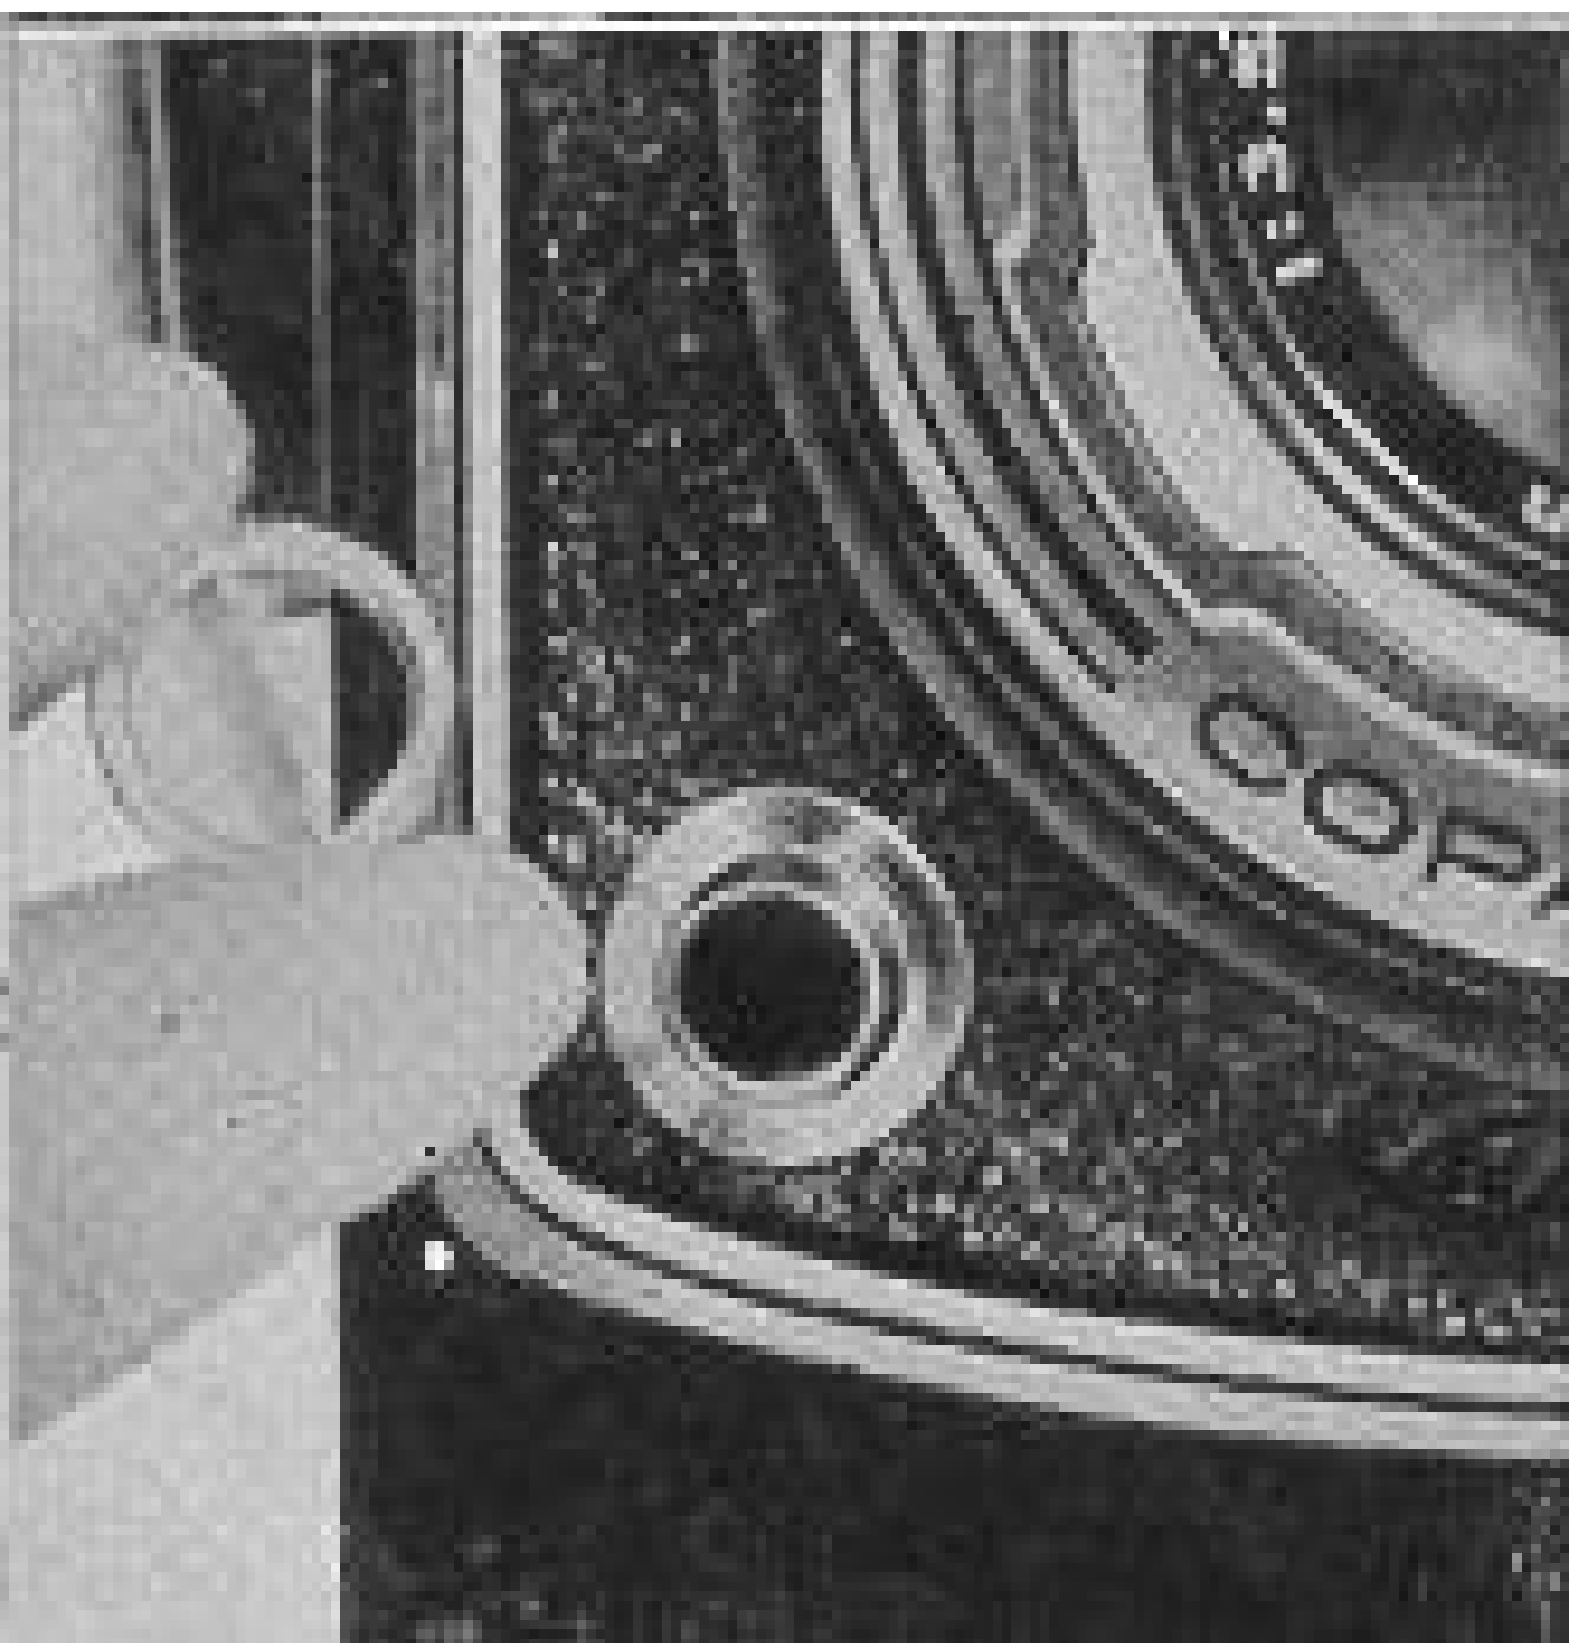



f 3.5



f 4



f 5.6



 
f 8



f 11



f 16

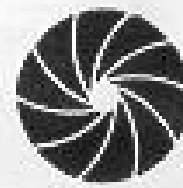


f 22





www.boutique.com

 www.boutique.com

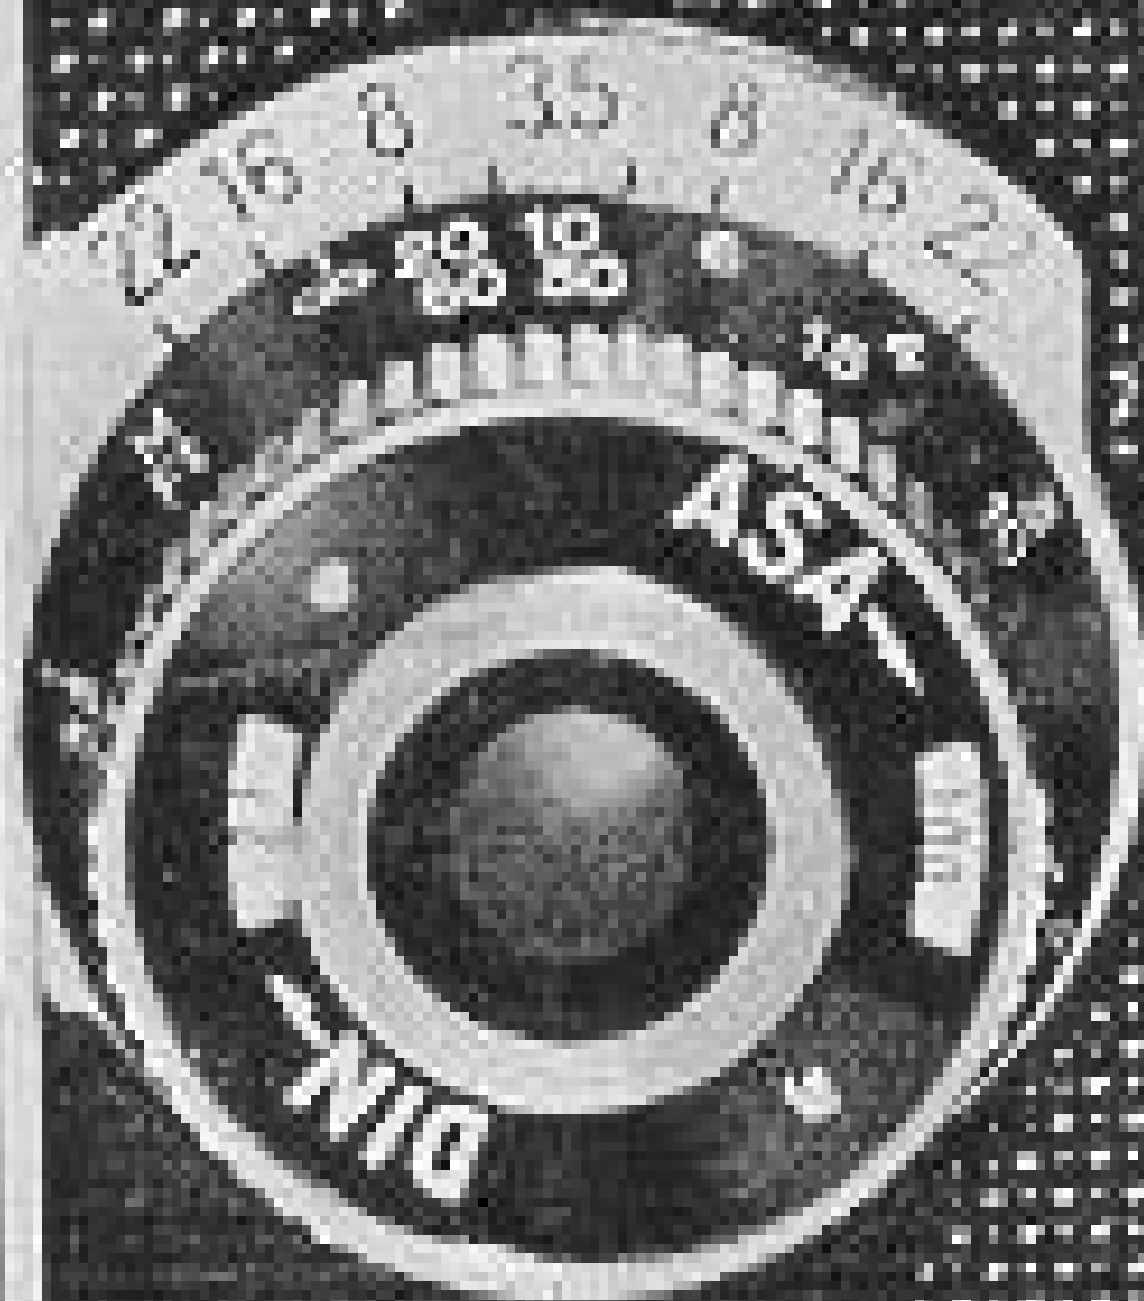


YASHICA

YASHICA 24




INSTRUCTION BOOKLET GEBRUCHSANWEISUNG
MODE D'EMPLOI FOLLETO DE INSTRUCCIONES

     
66

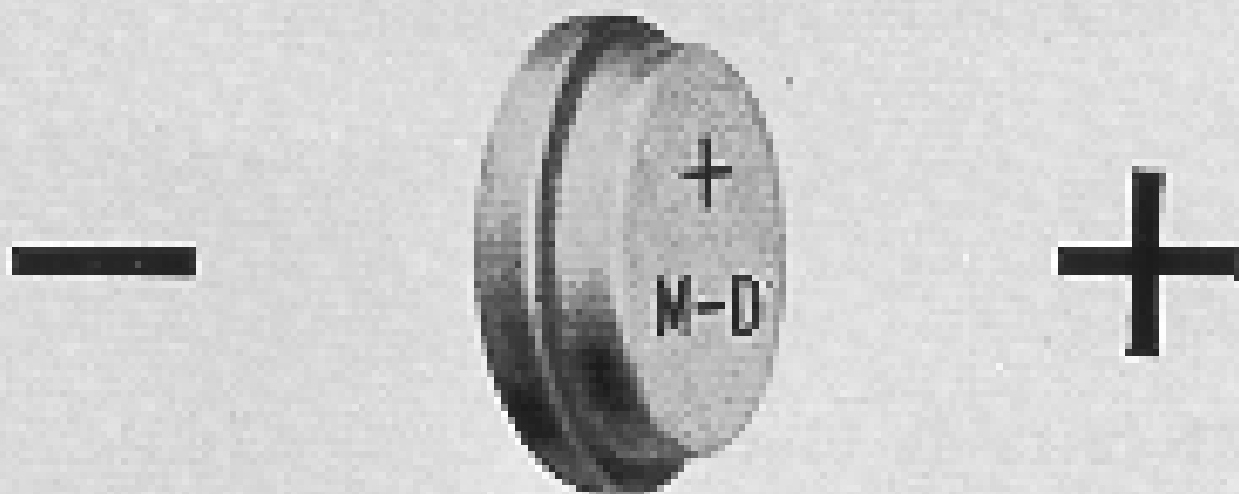 


 
 


 


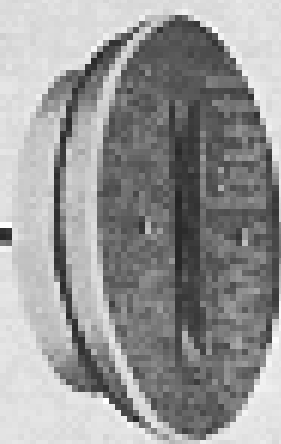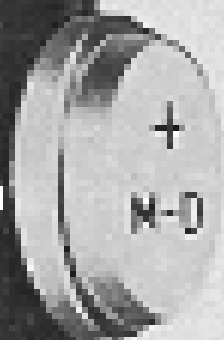 
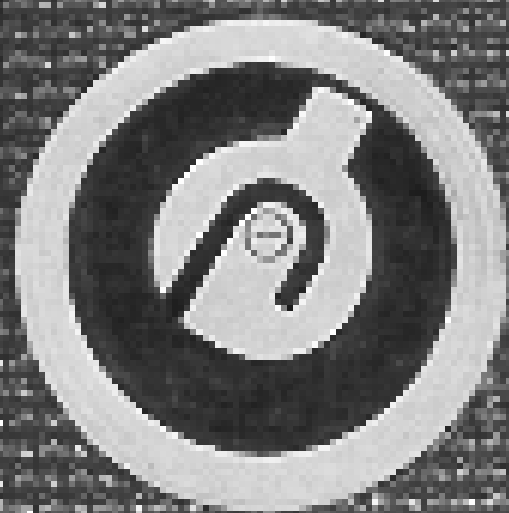 


 
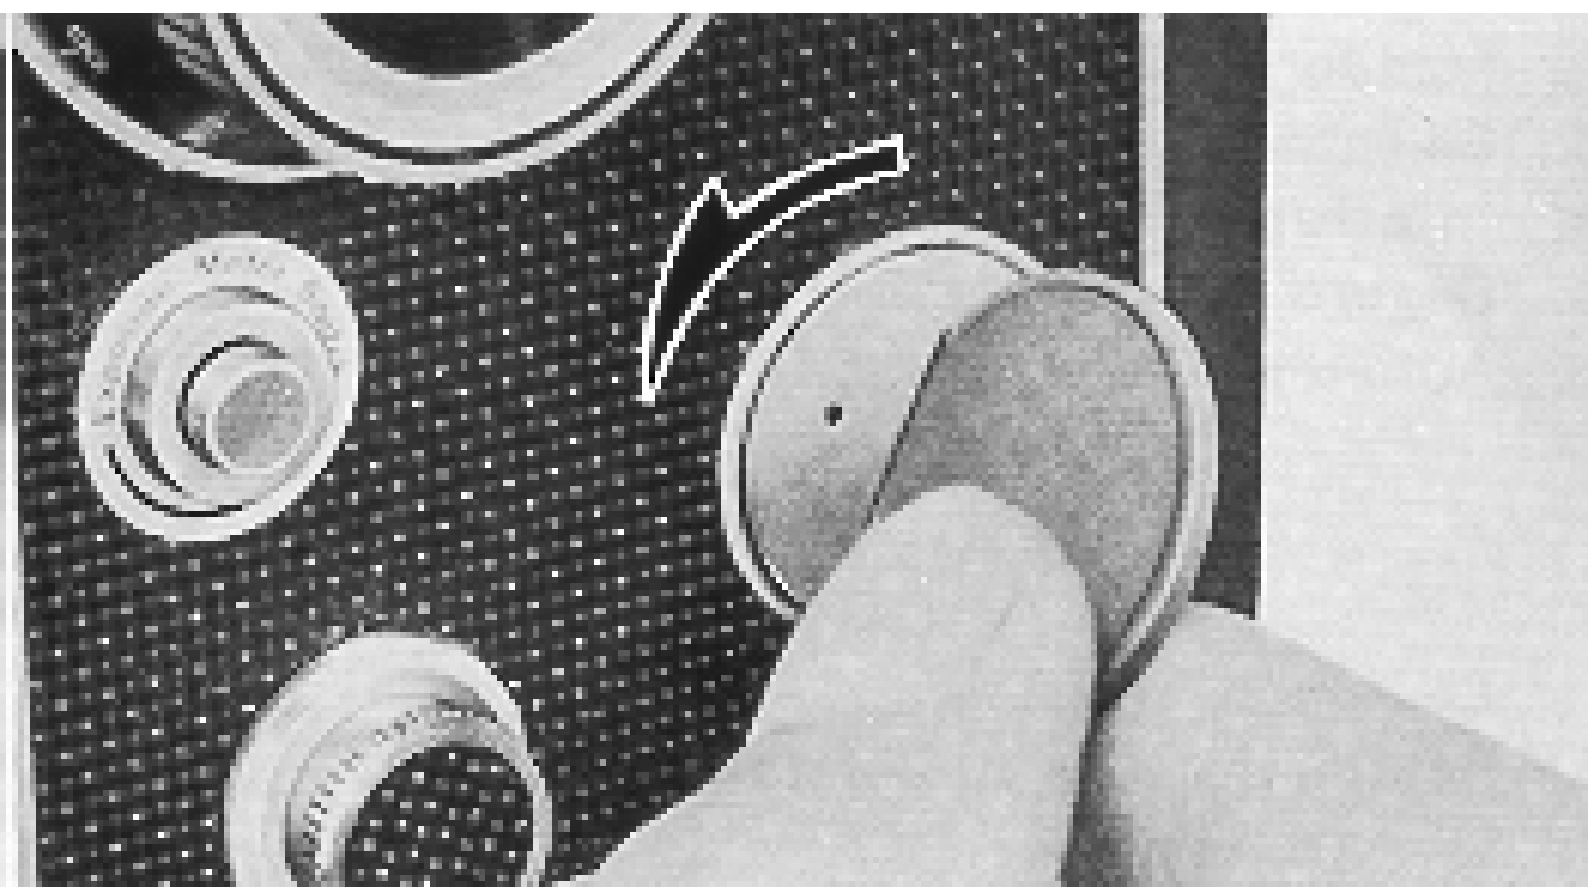 


 
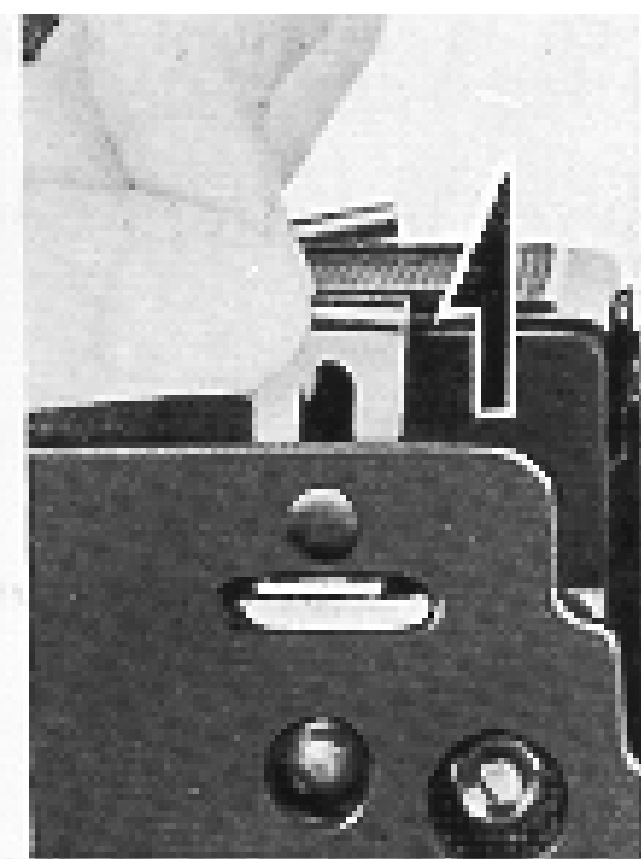 


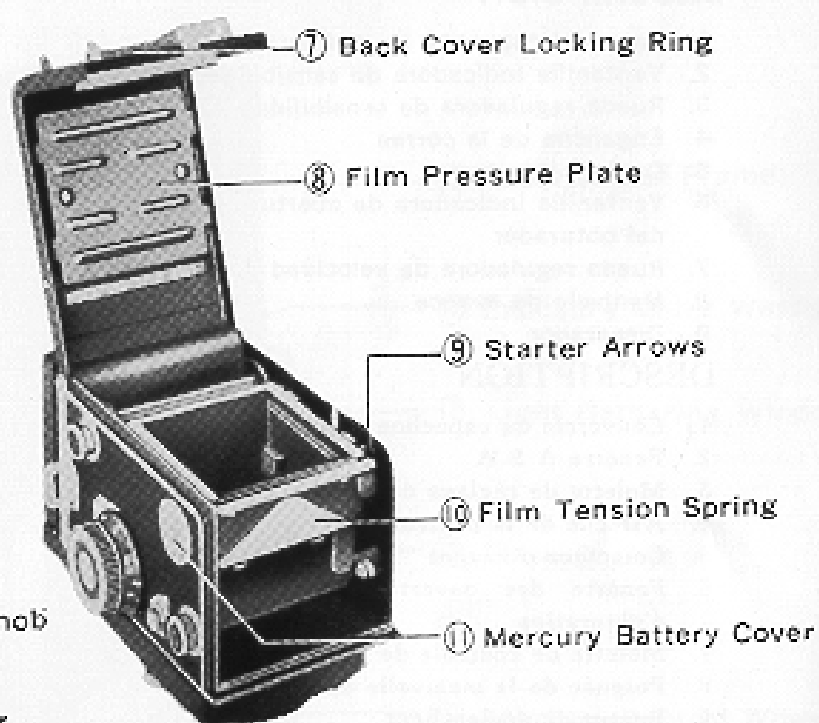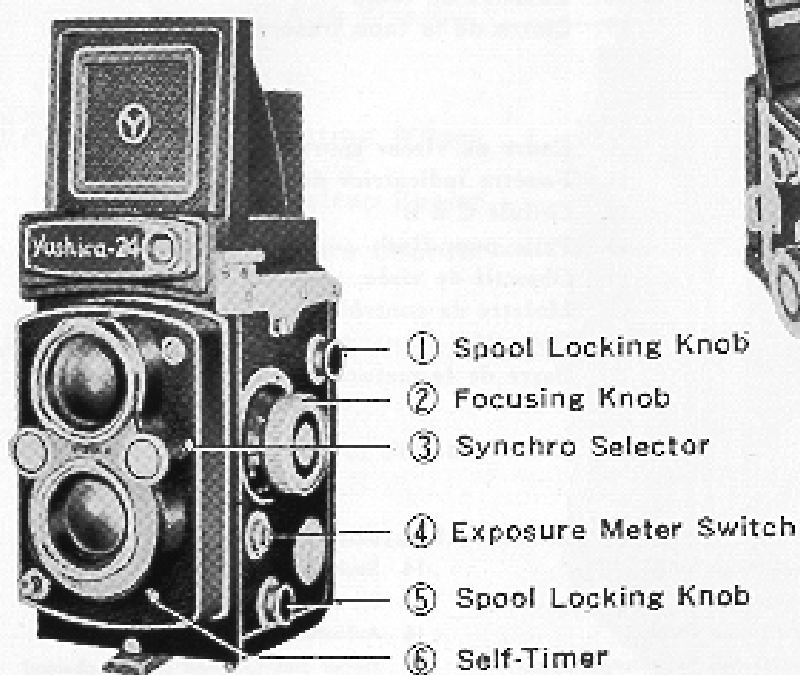 


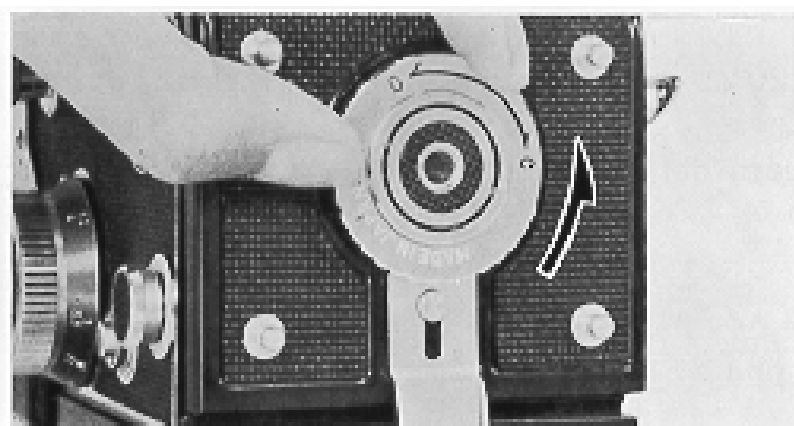

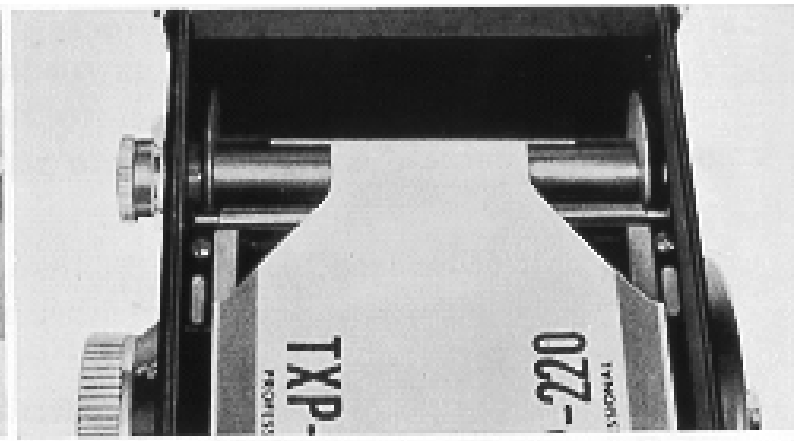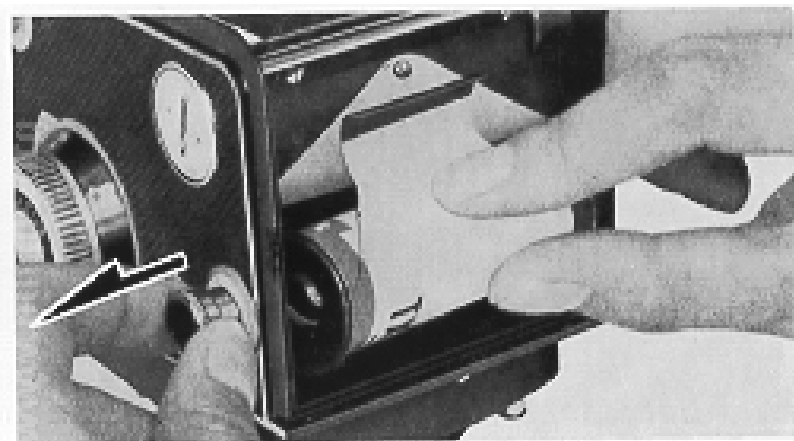 


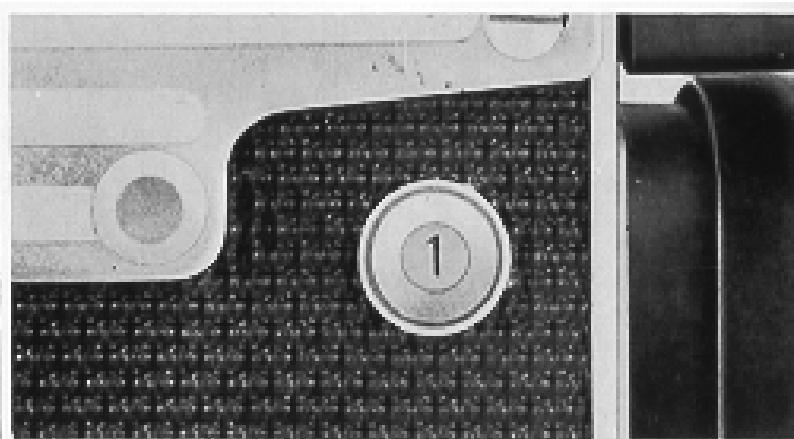 
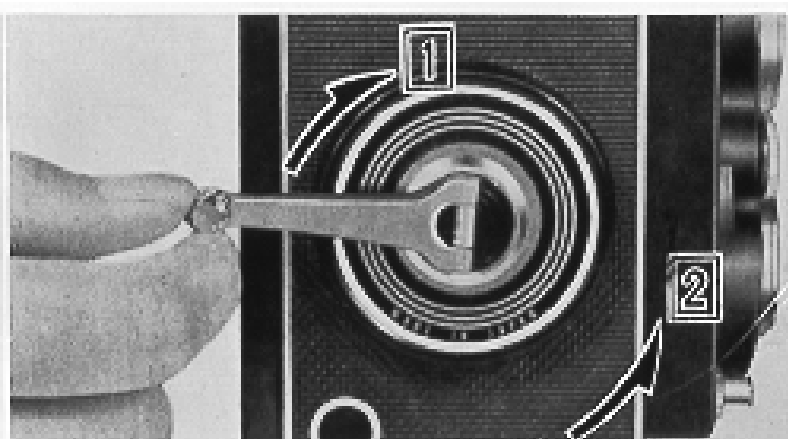 


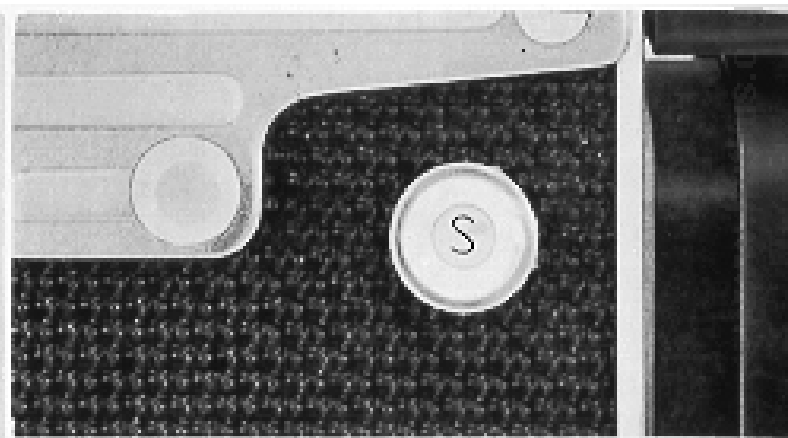 
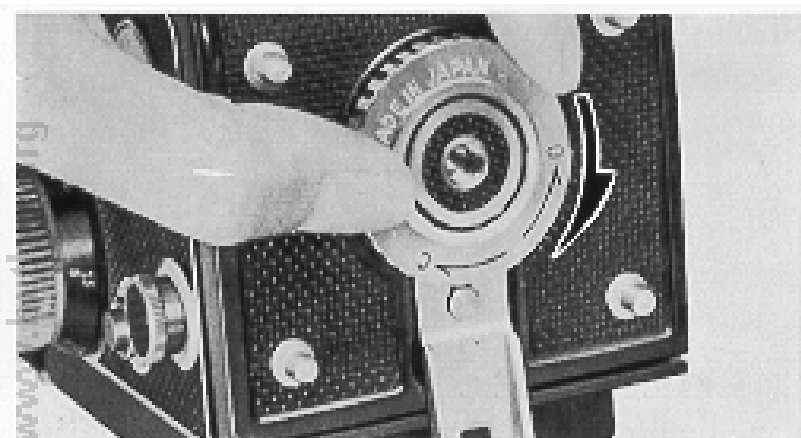 


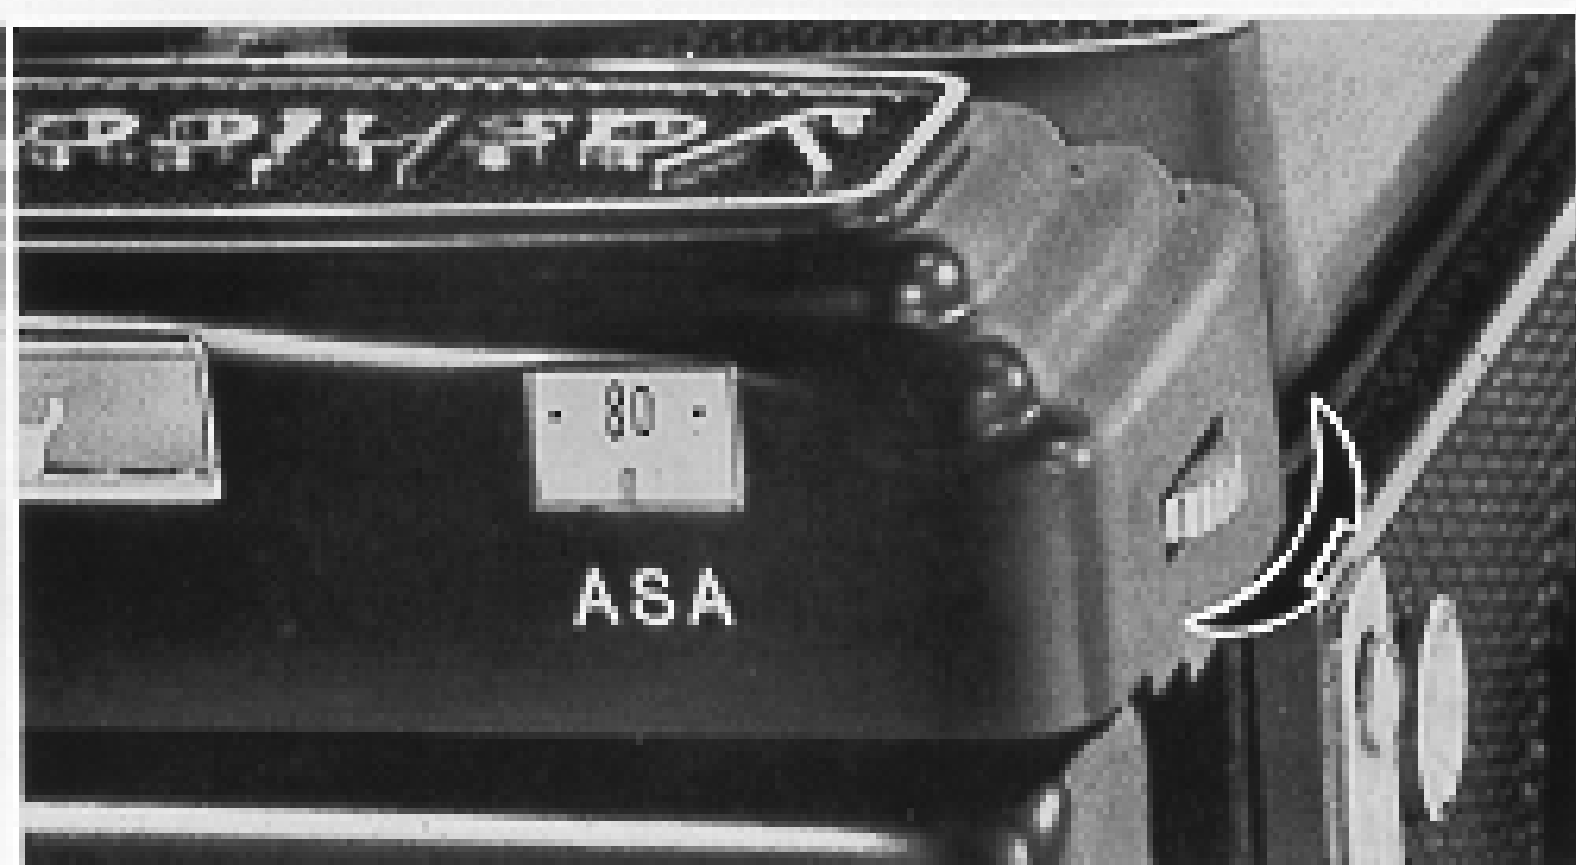 




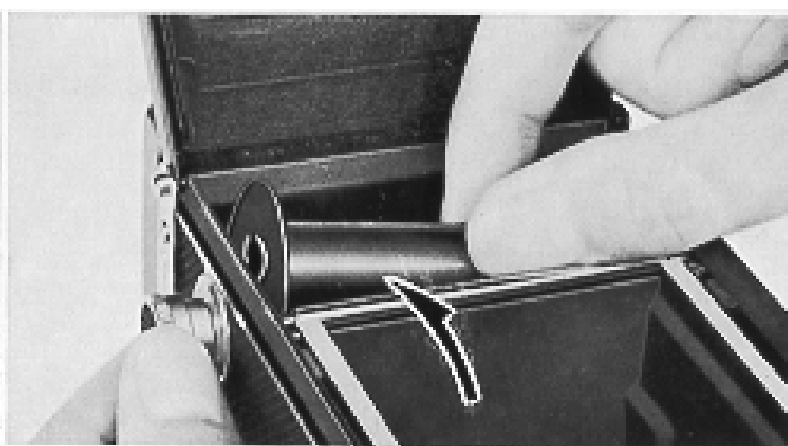

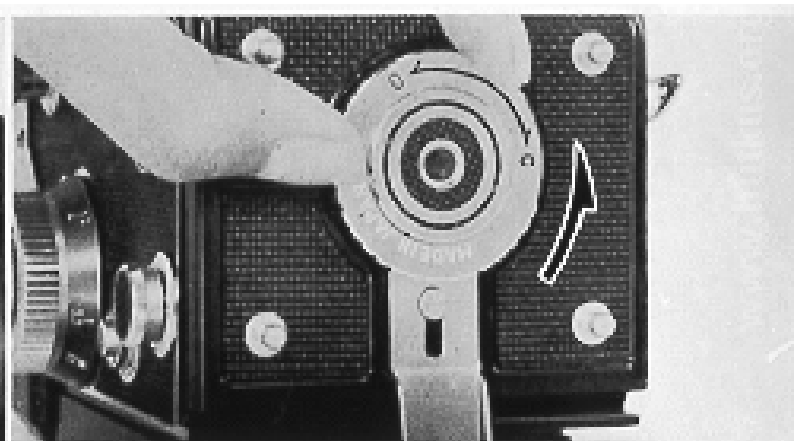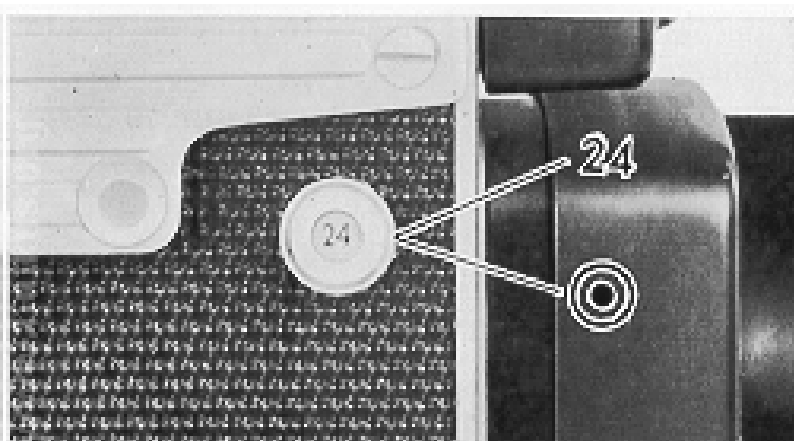

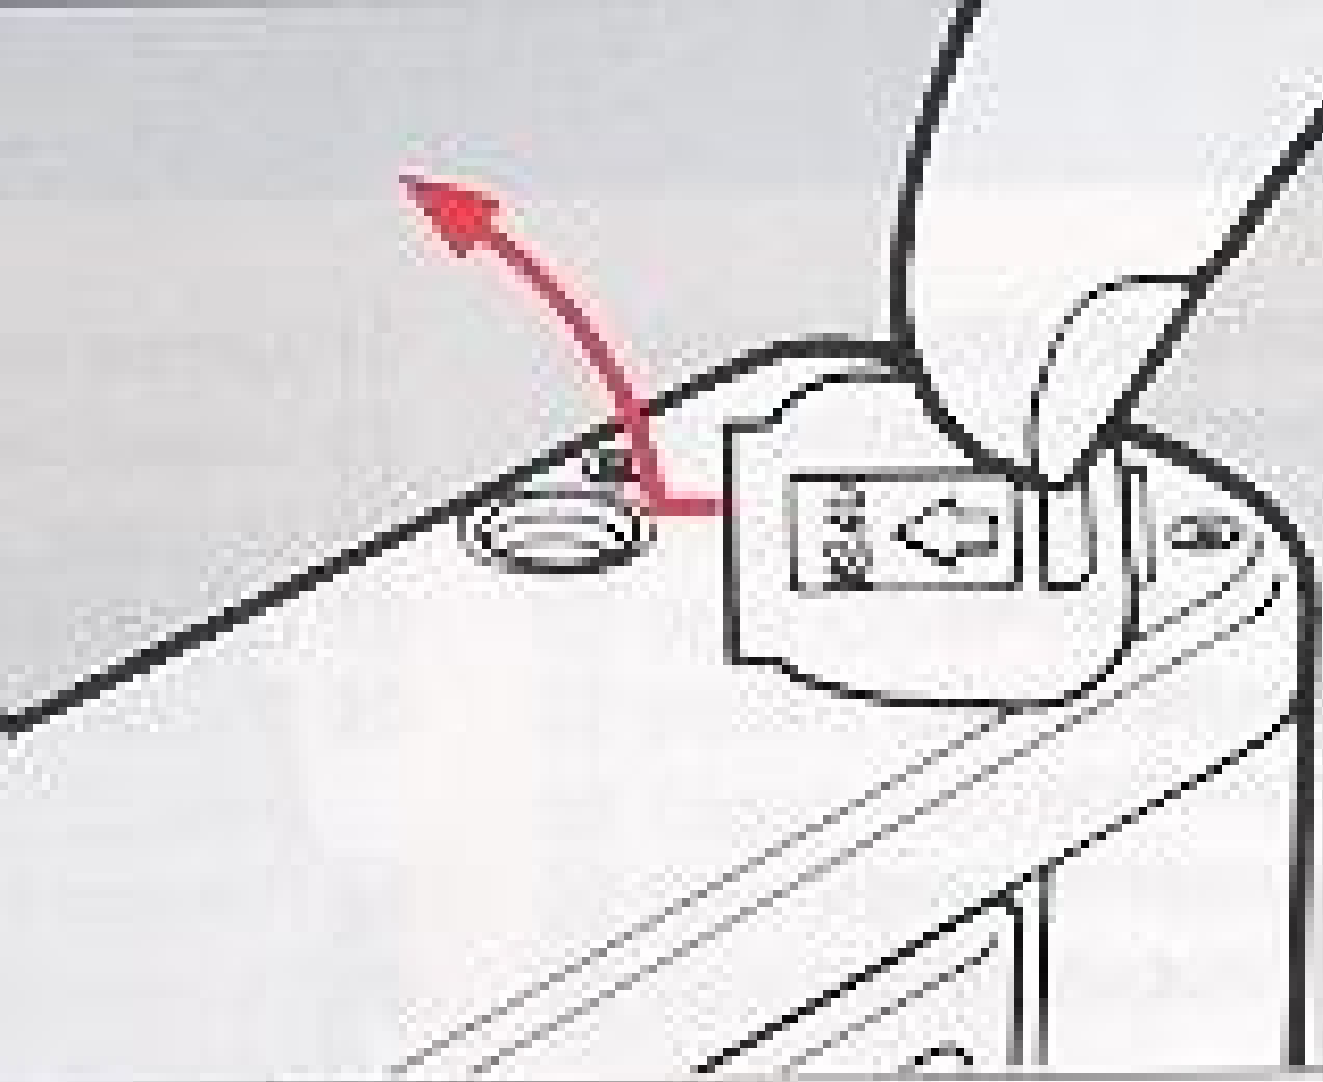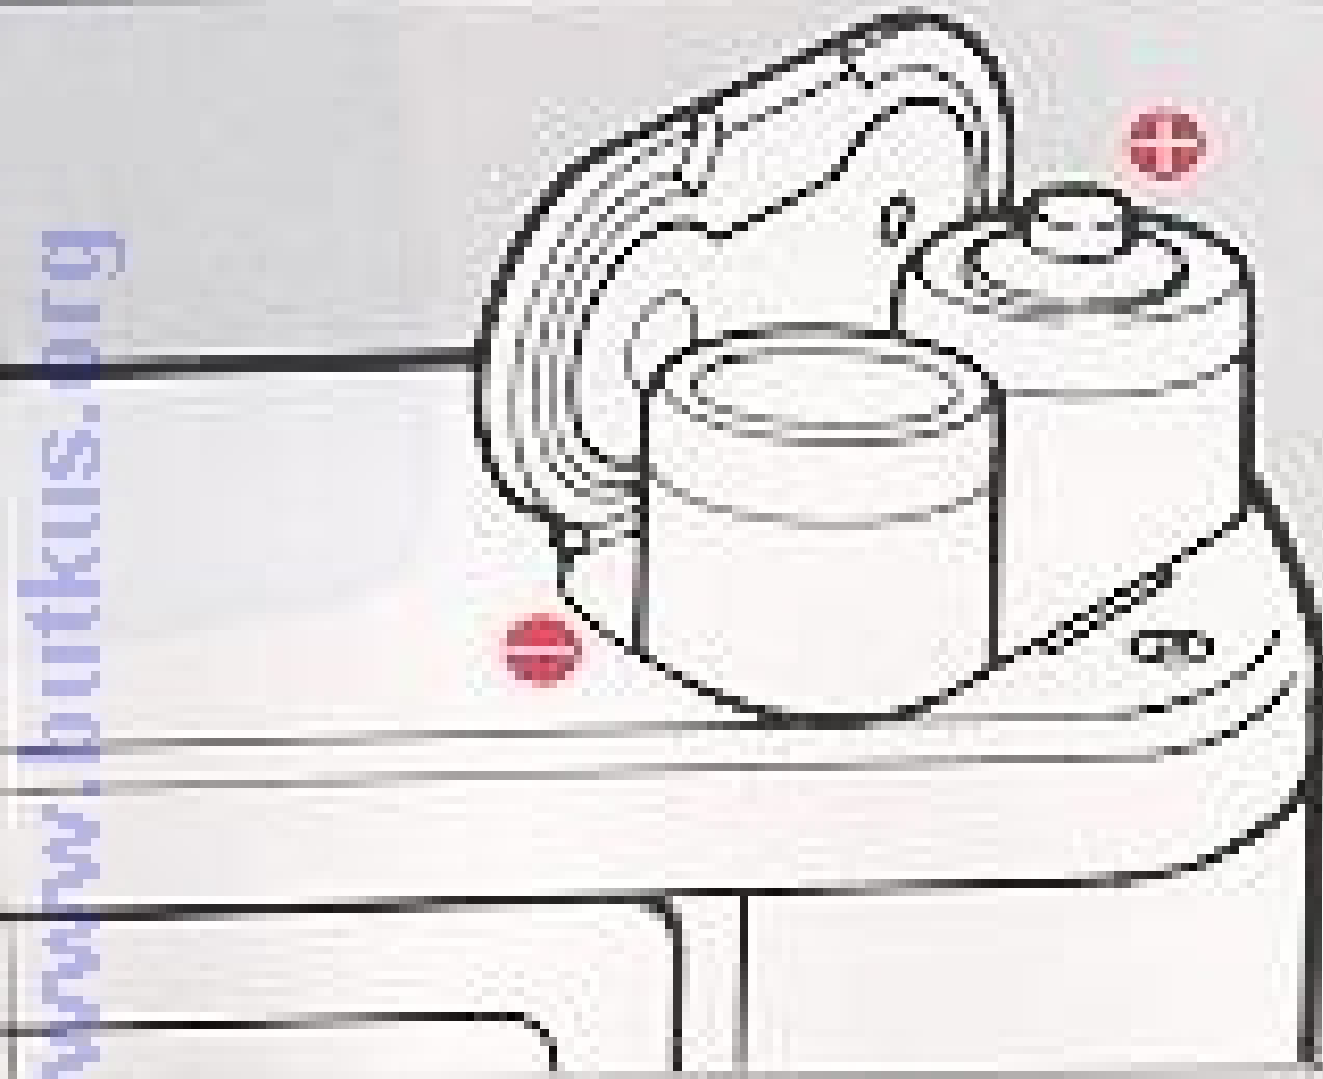

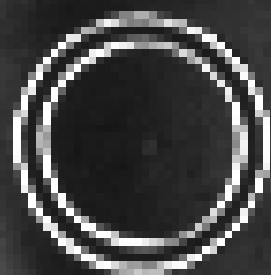

f:

60

sec

11



f:

60

sec

32



YASHICA

AUTO

FOCUS

MOTOR

 


 
www.butkus.org

 
www.butkus.org

 
 
4

 
 
Instruction booklet • Gebrauchsanweisung • Mode d'emploi • Folleto de instrucciones

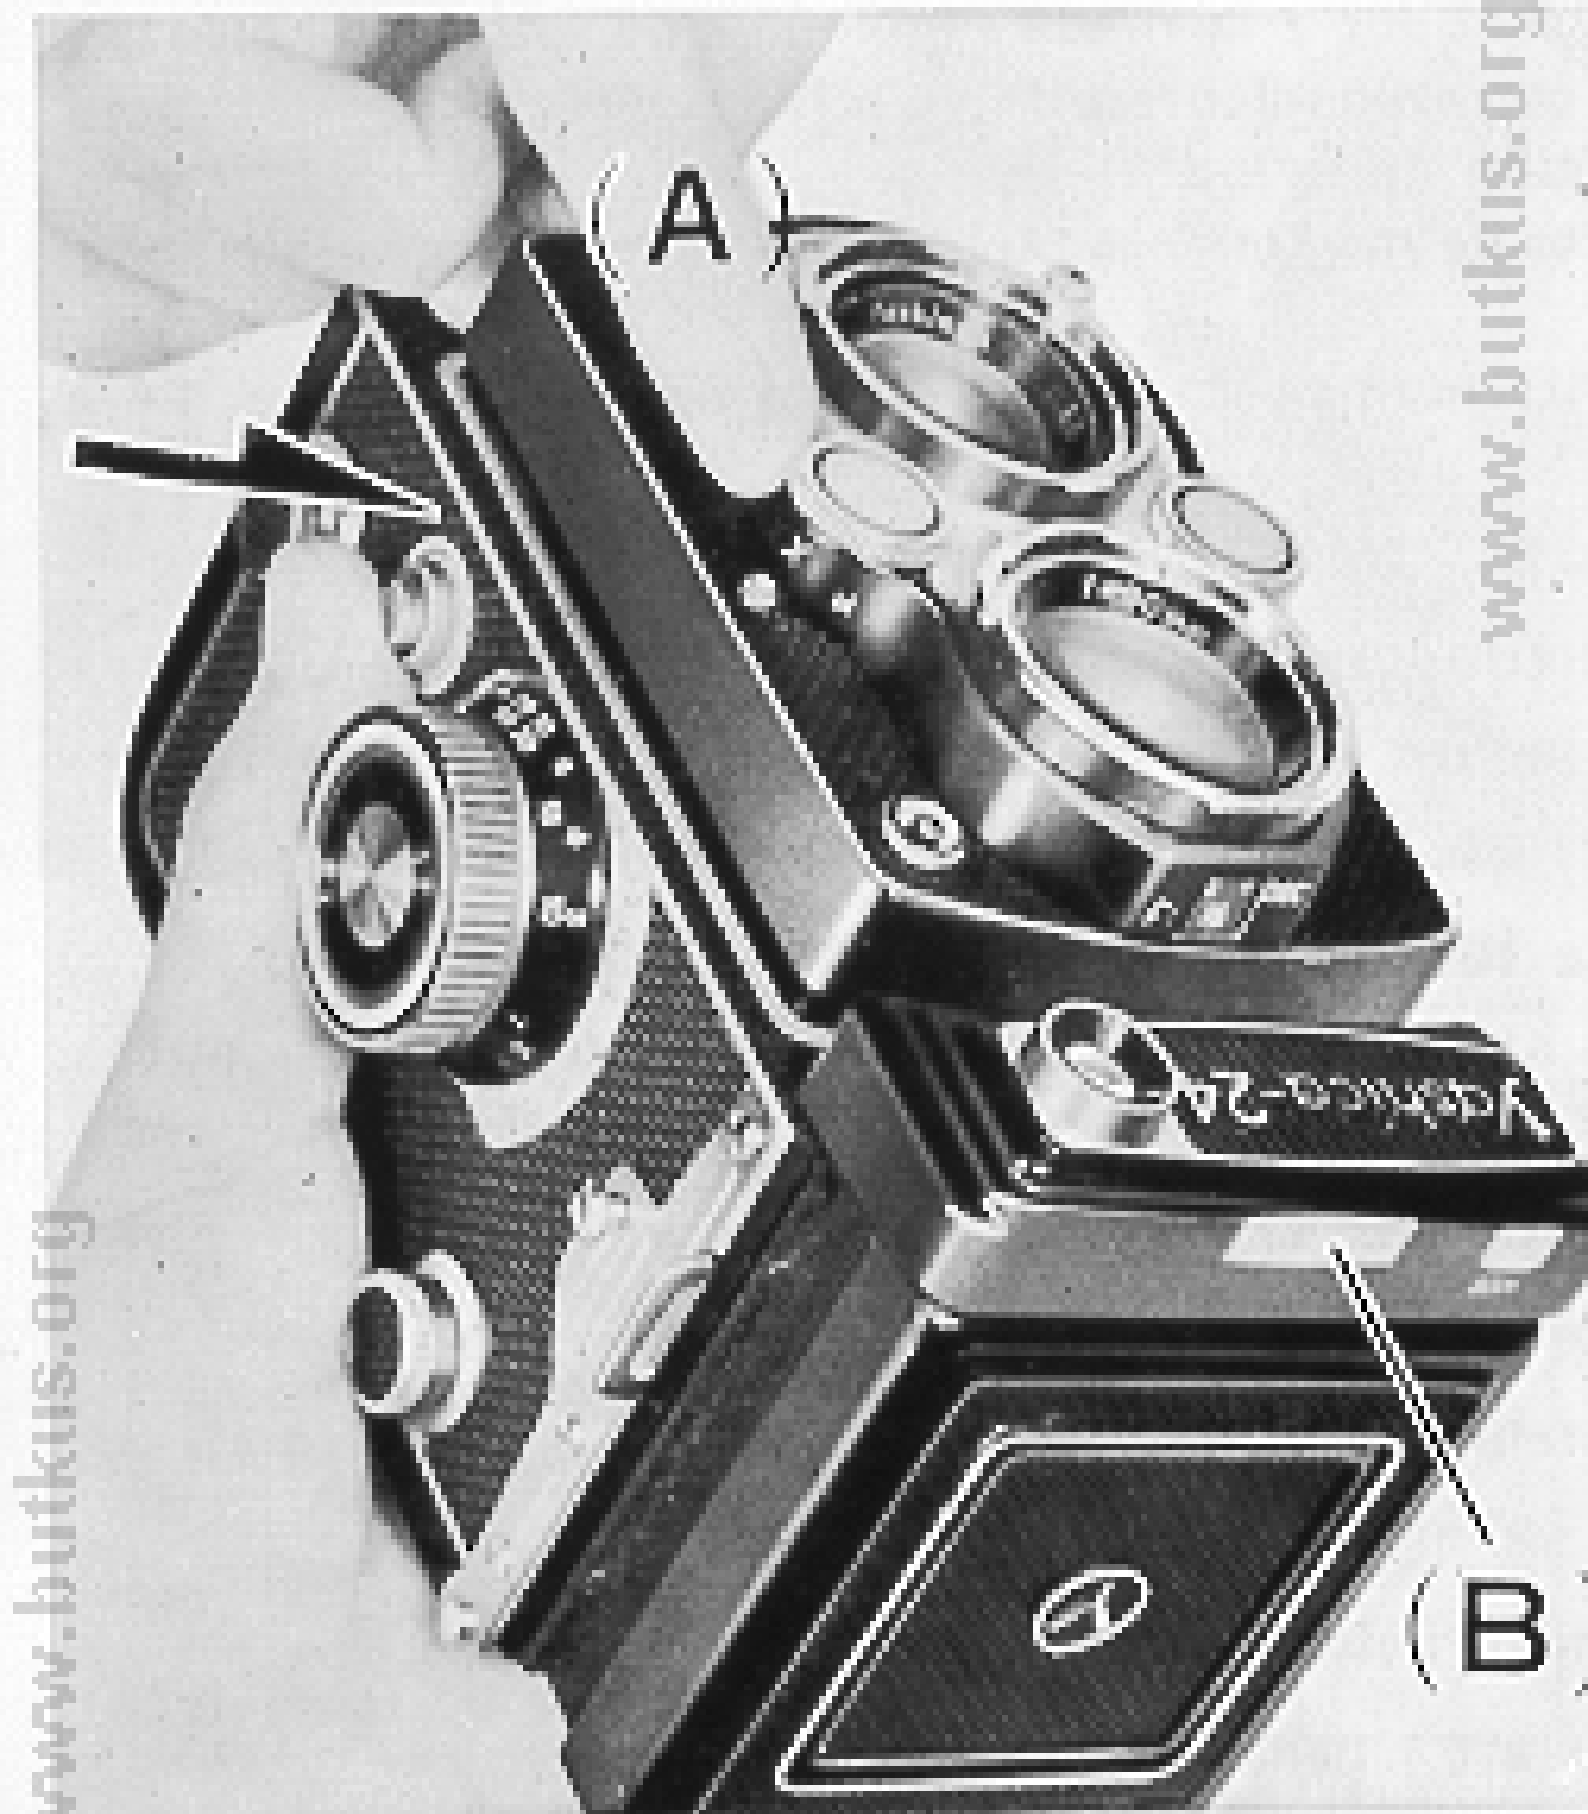 


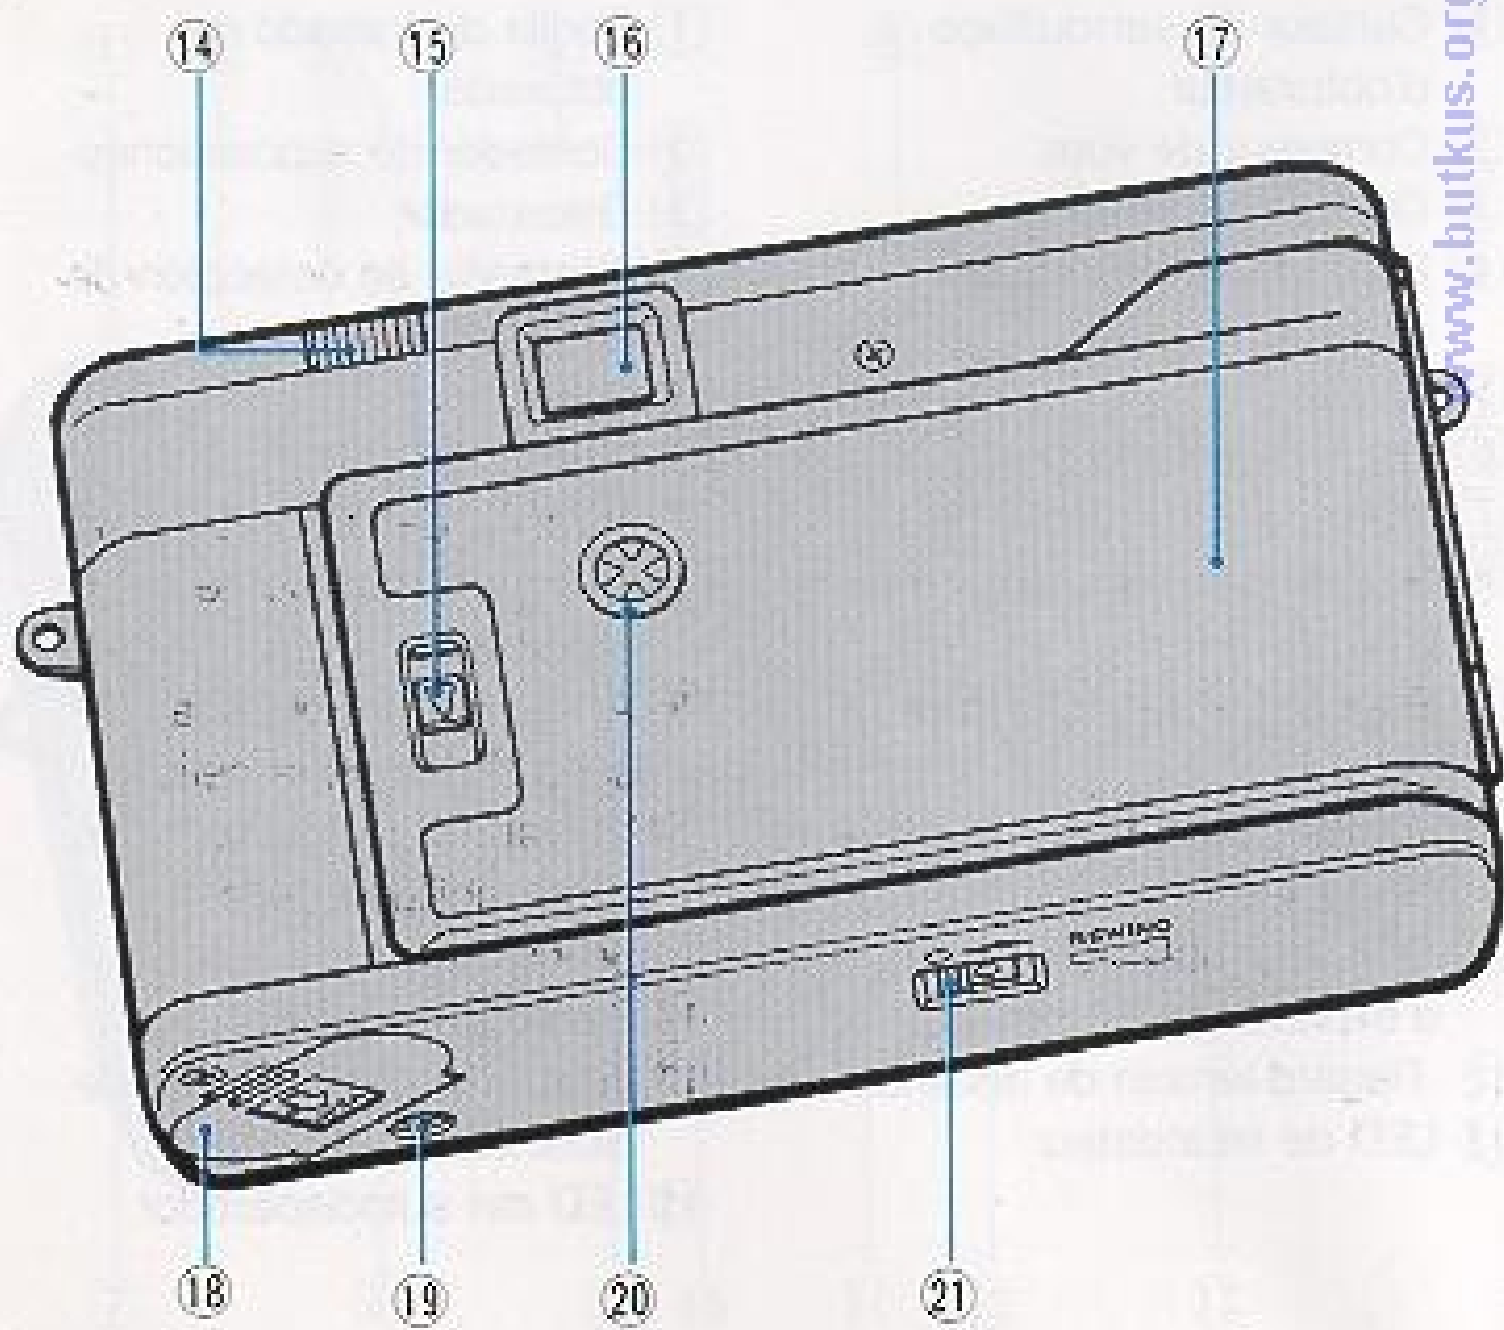 


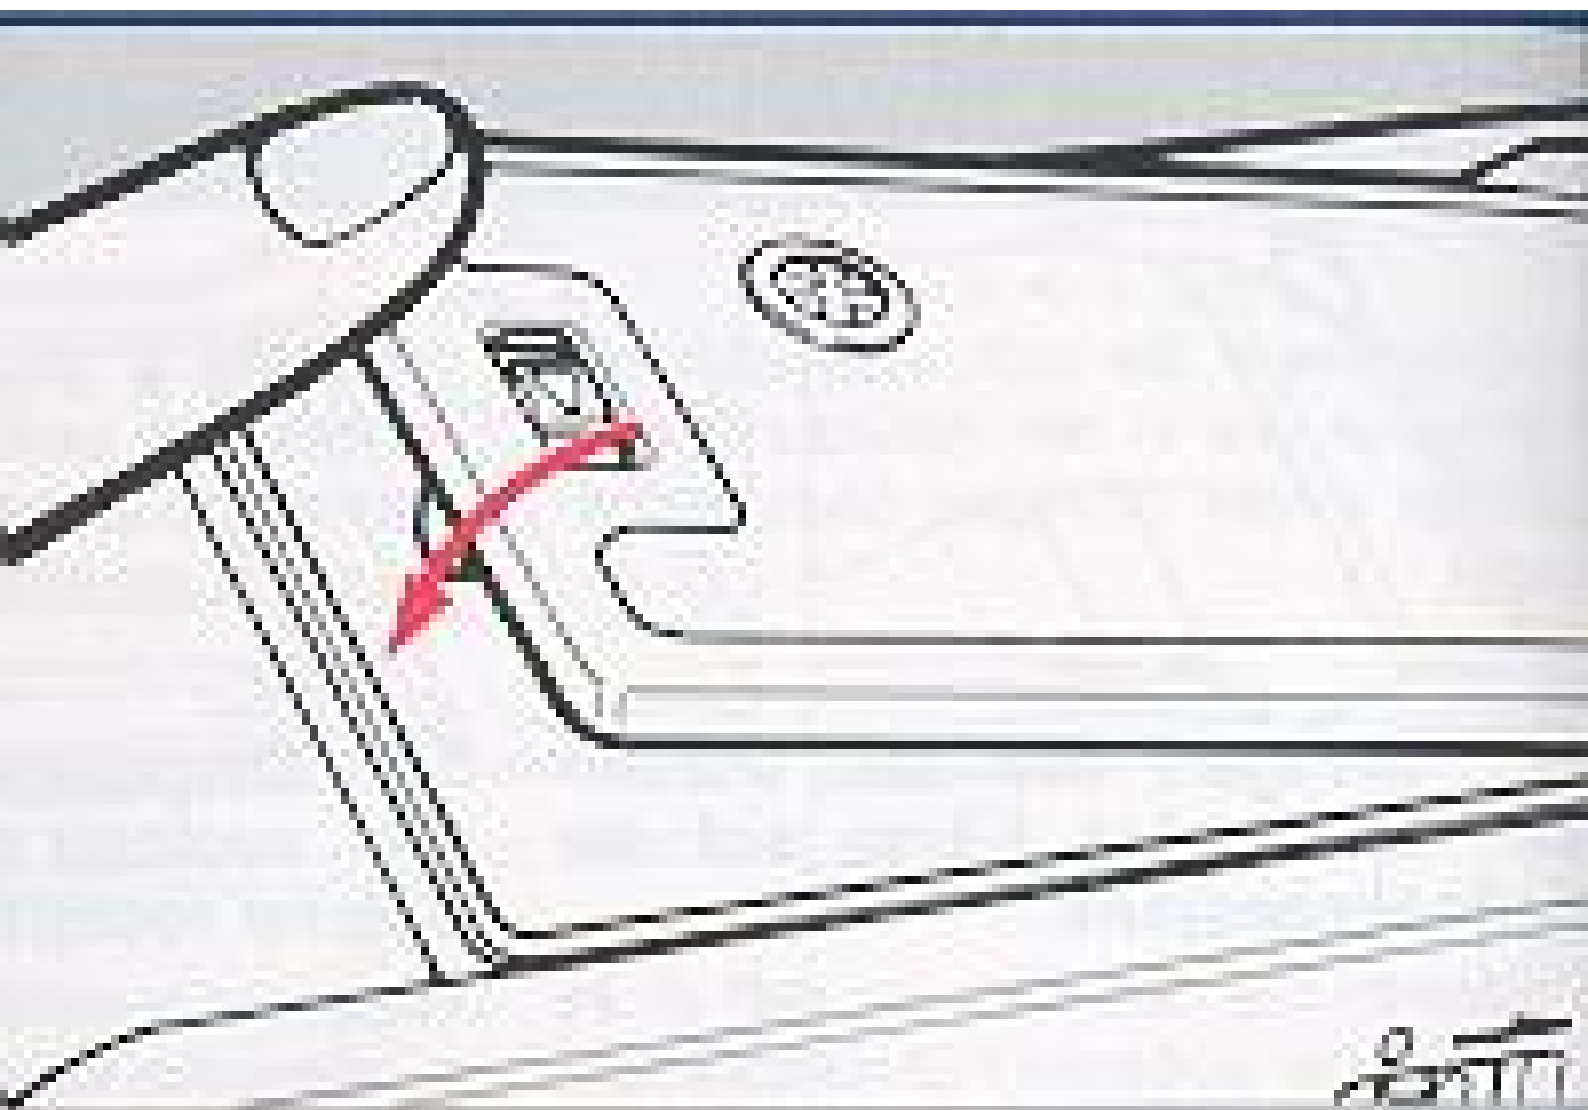 


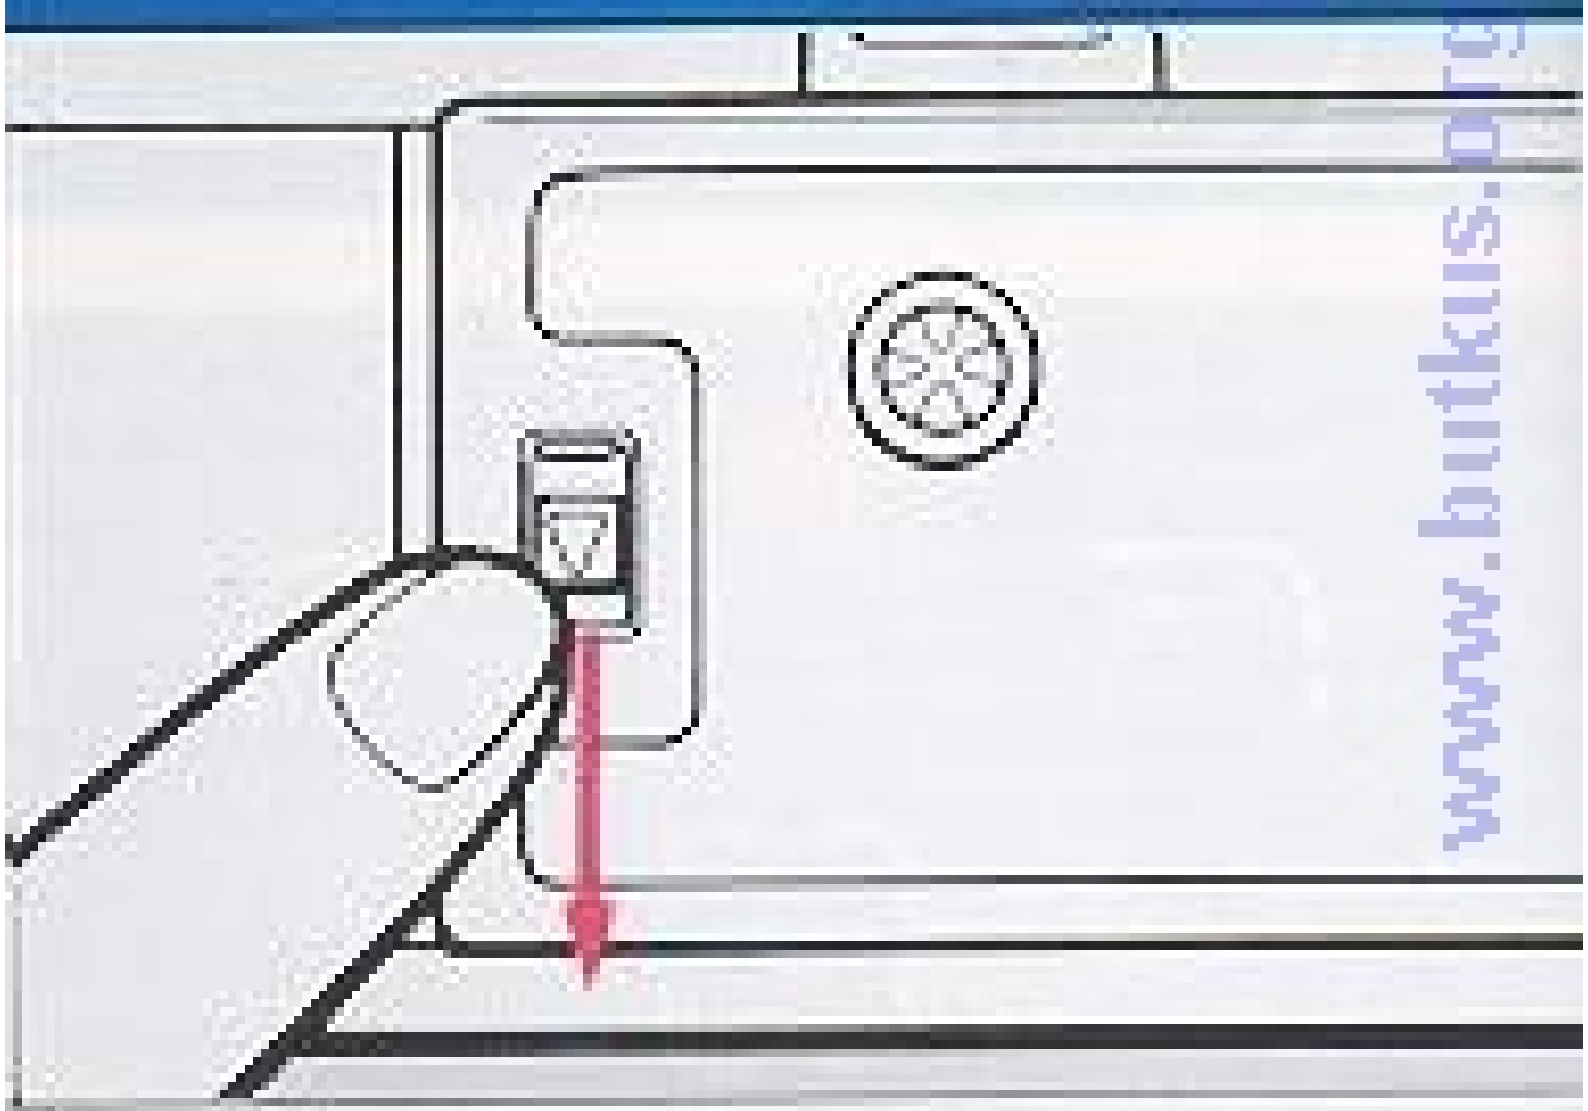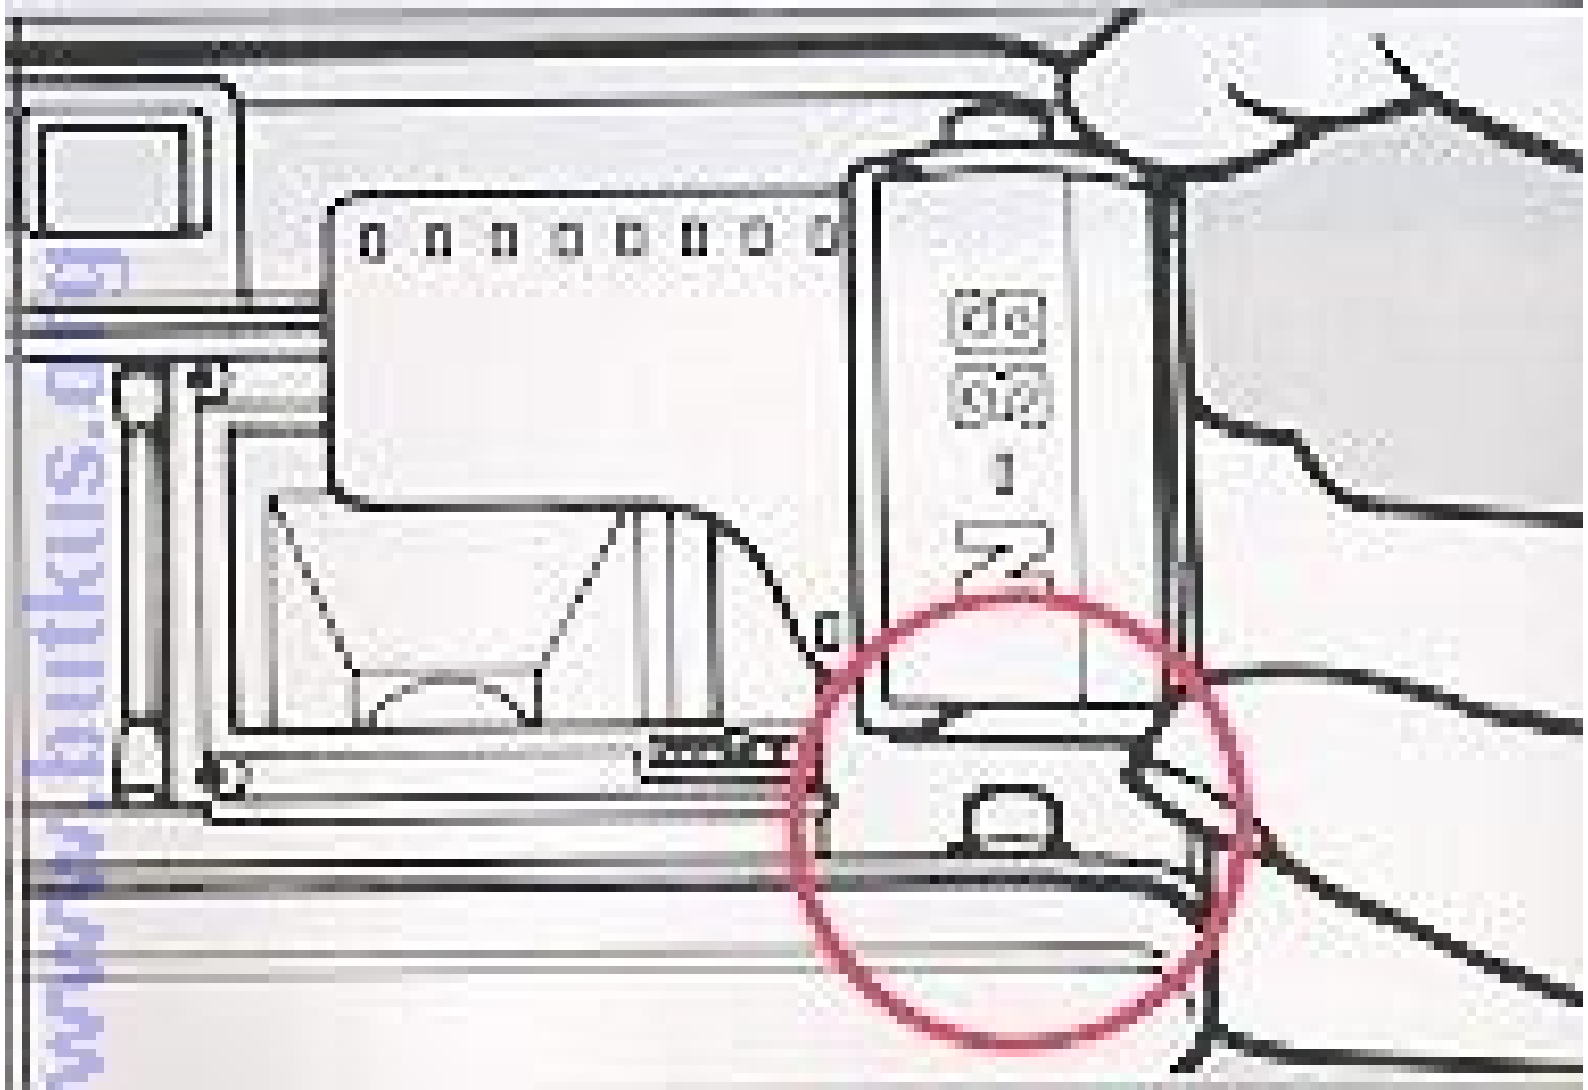

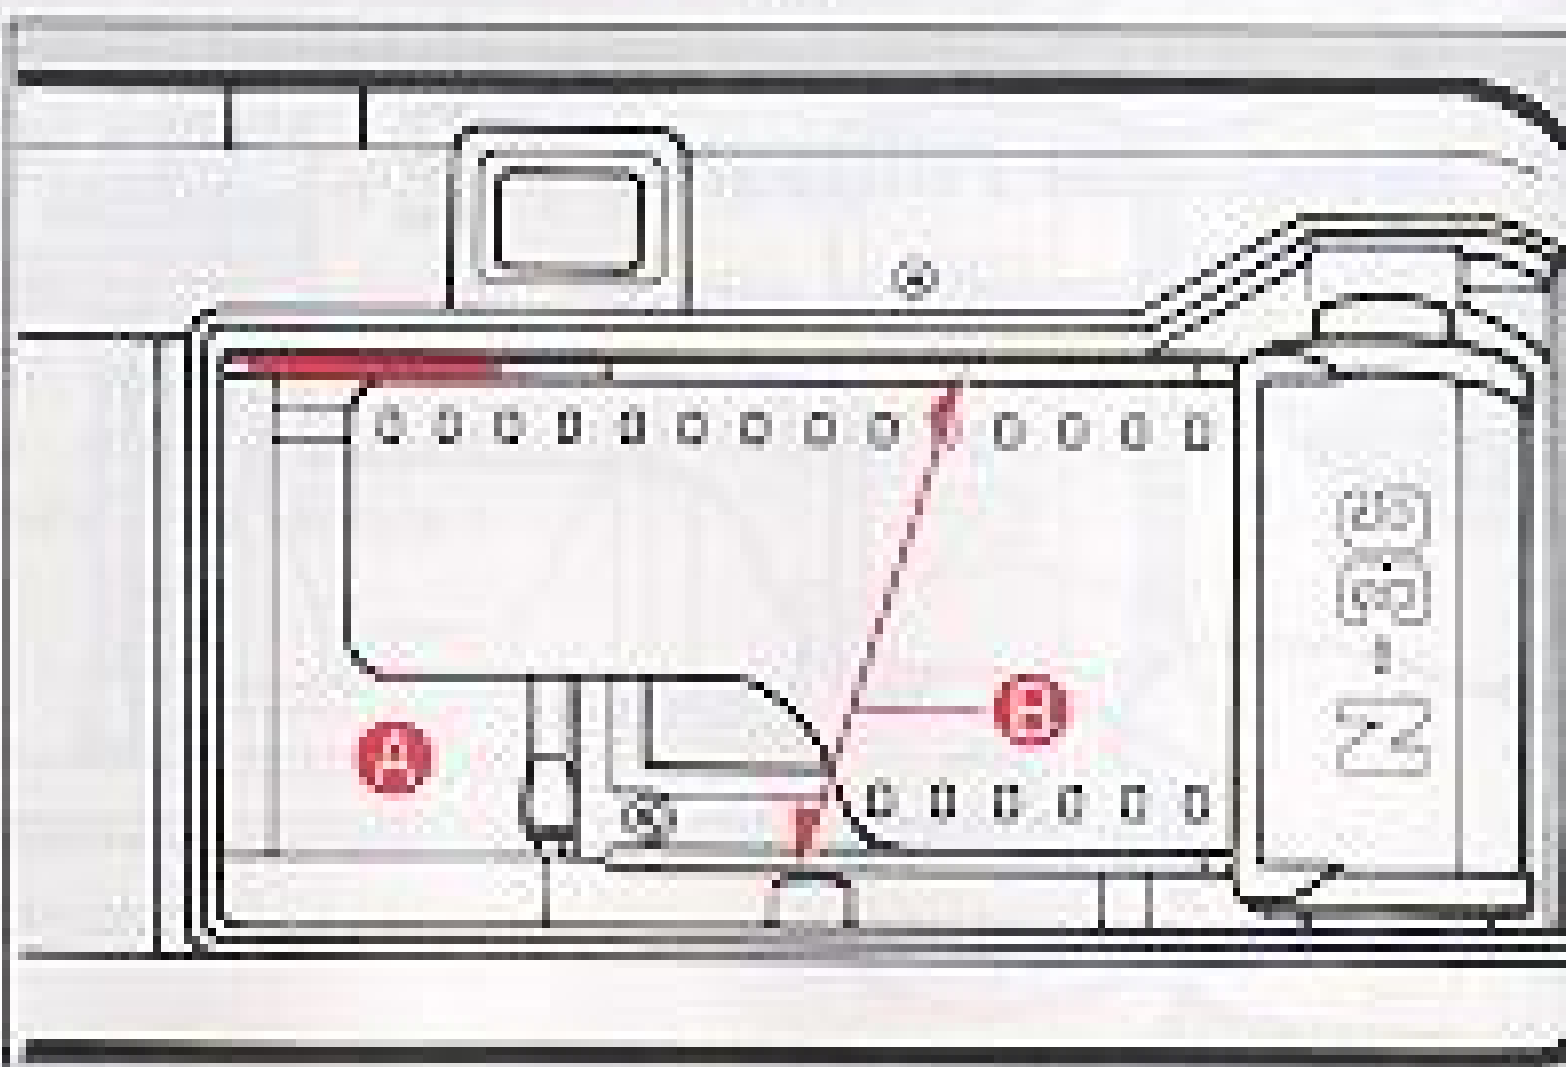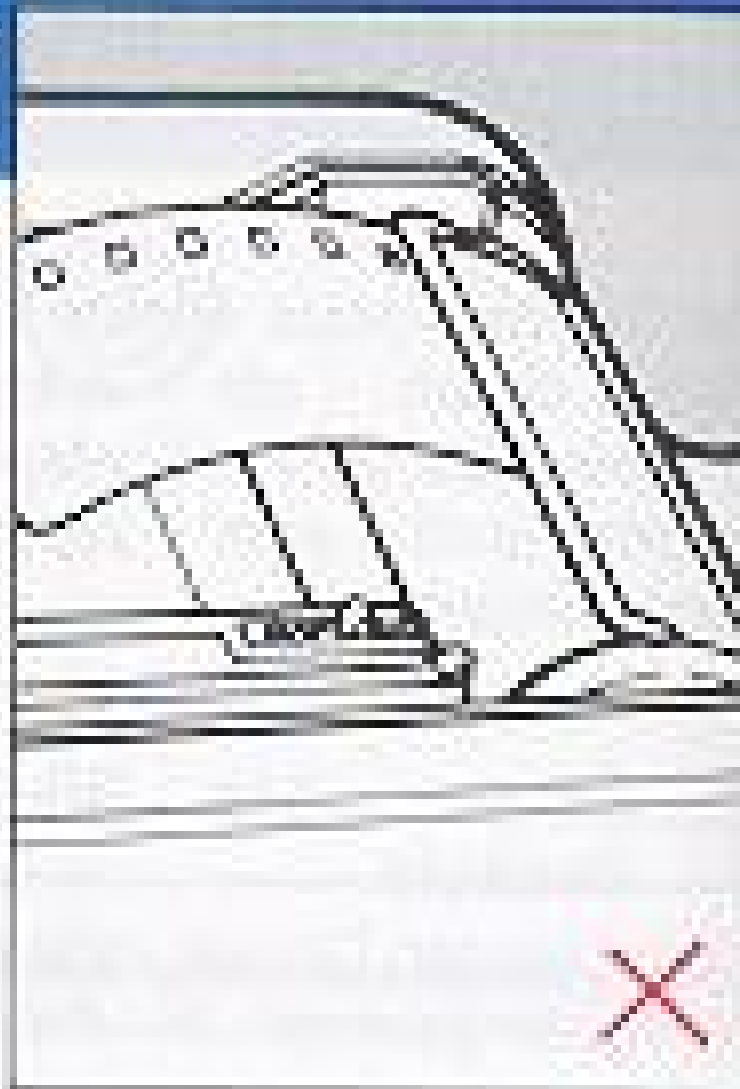 


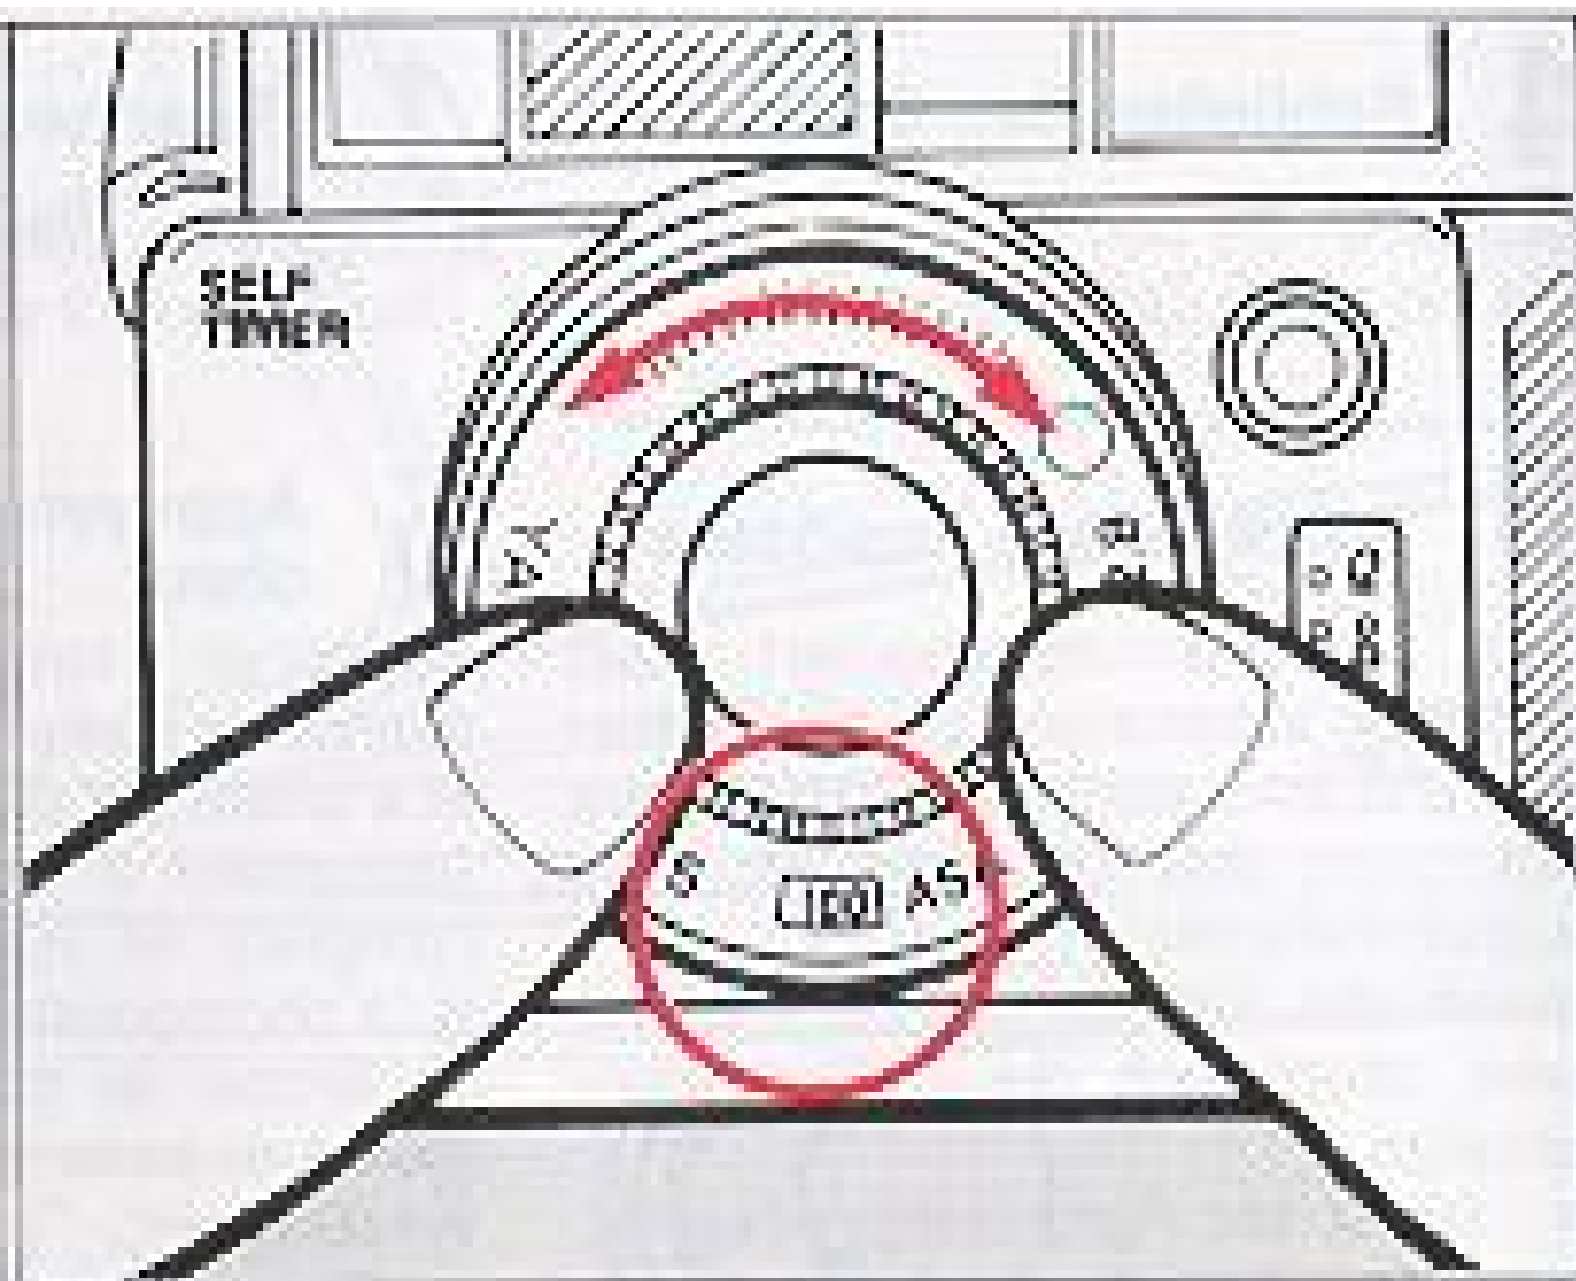

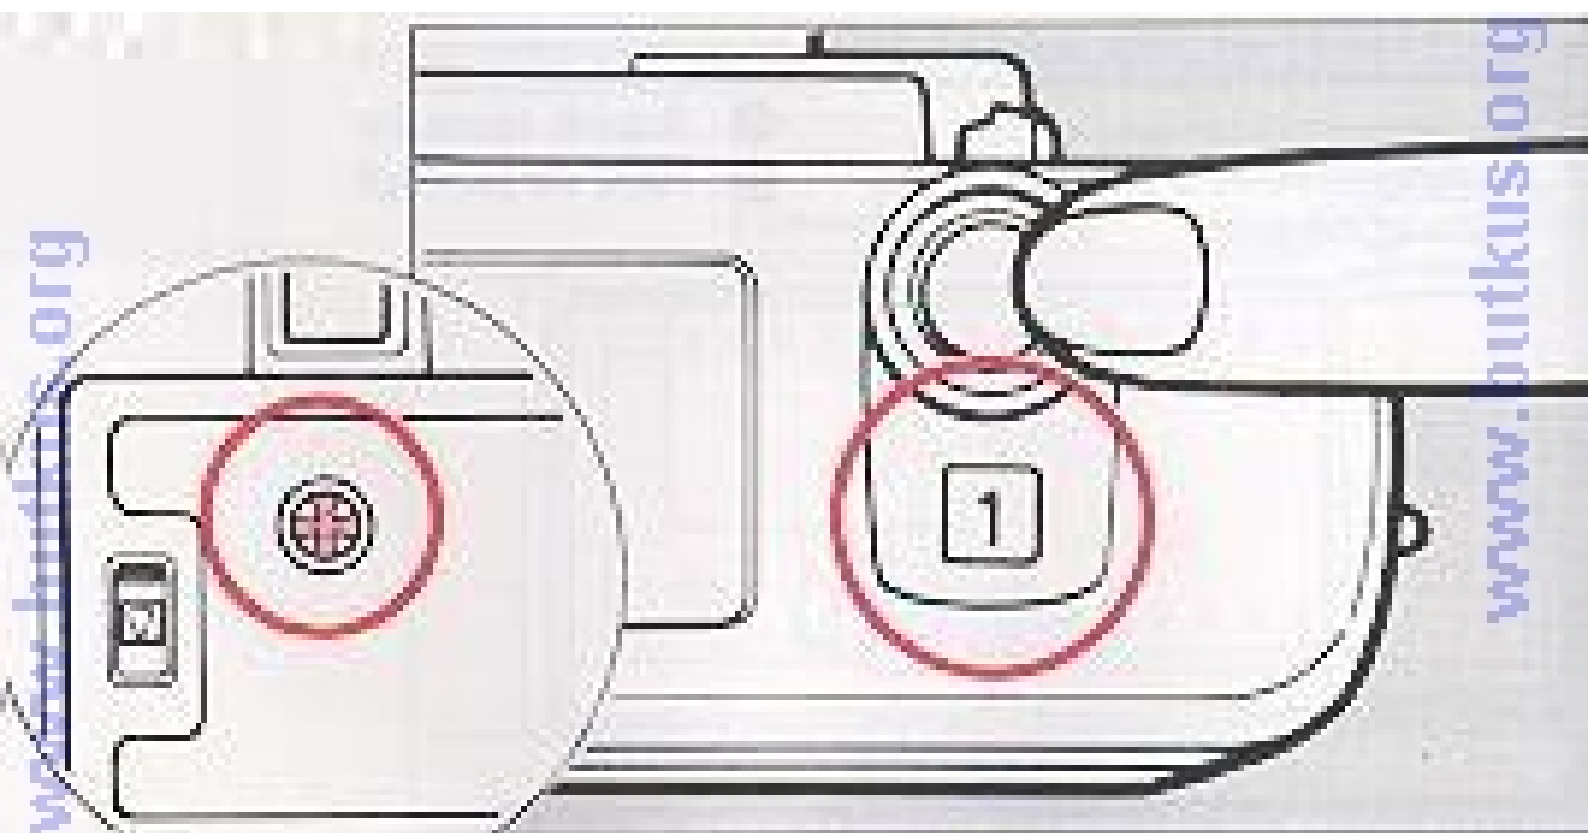

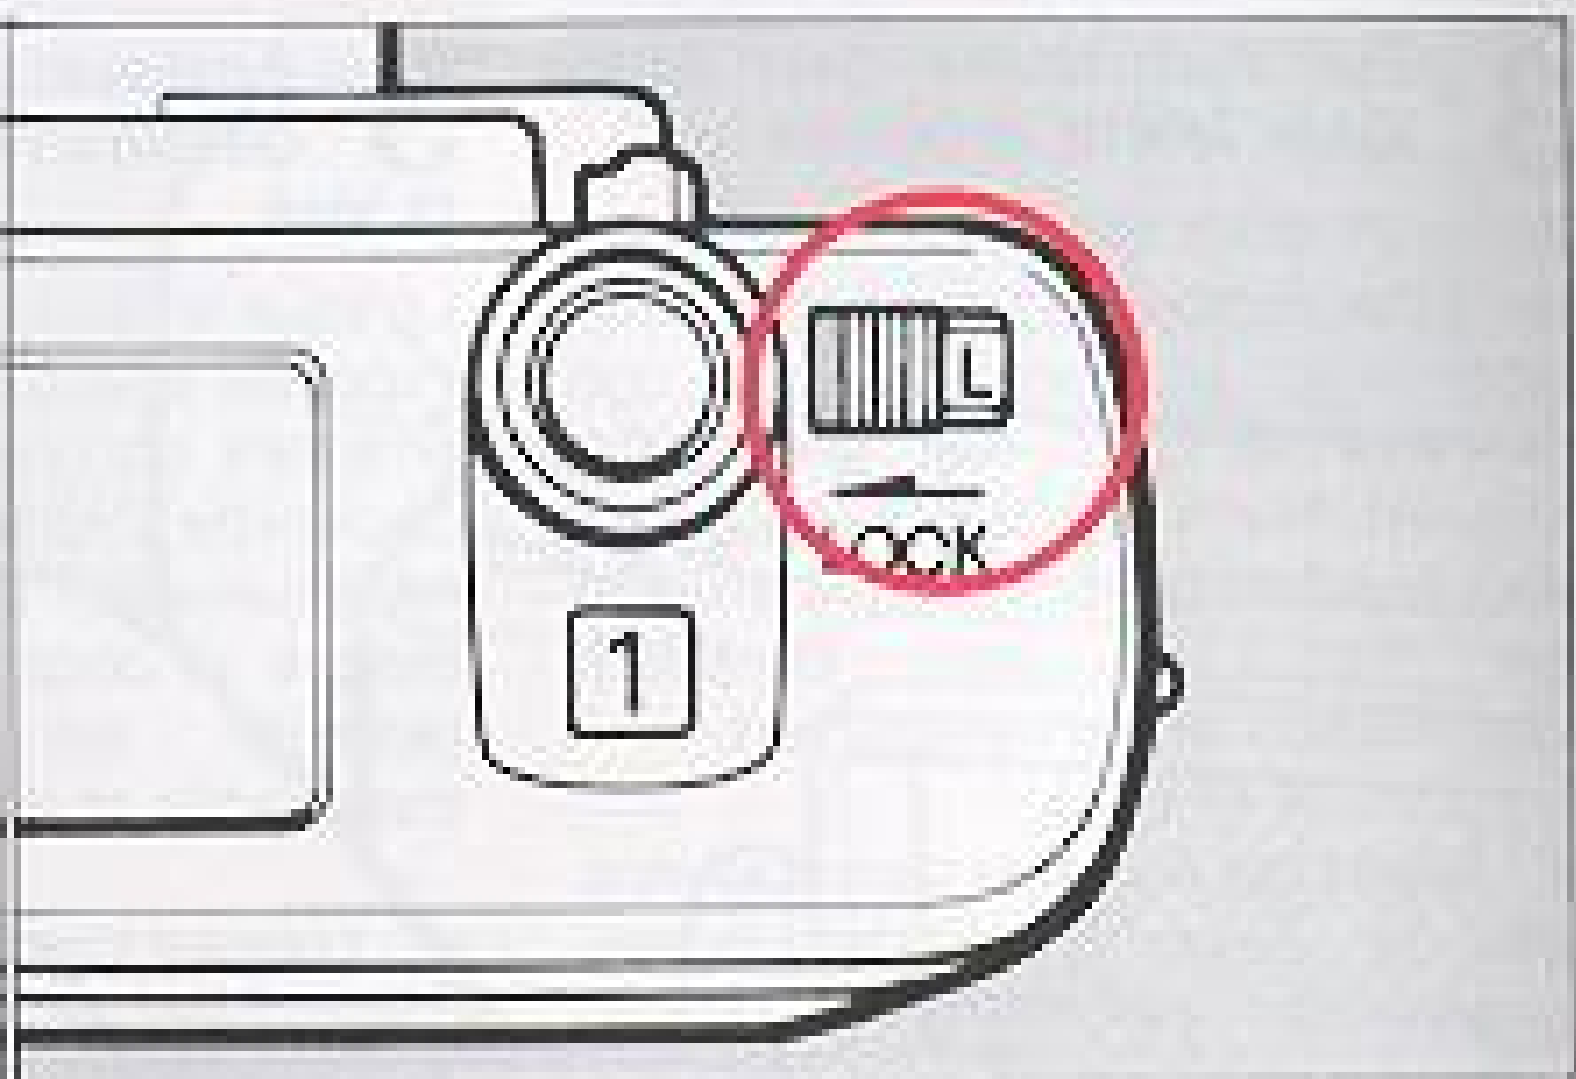



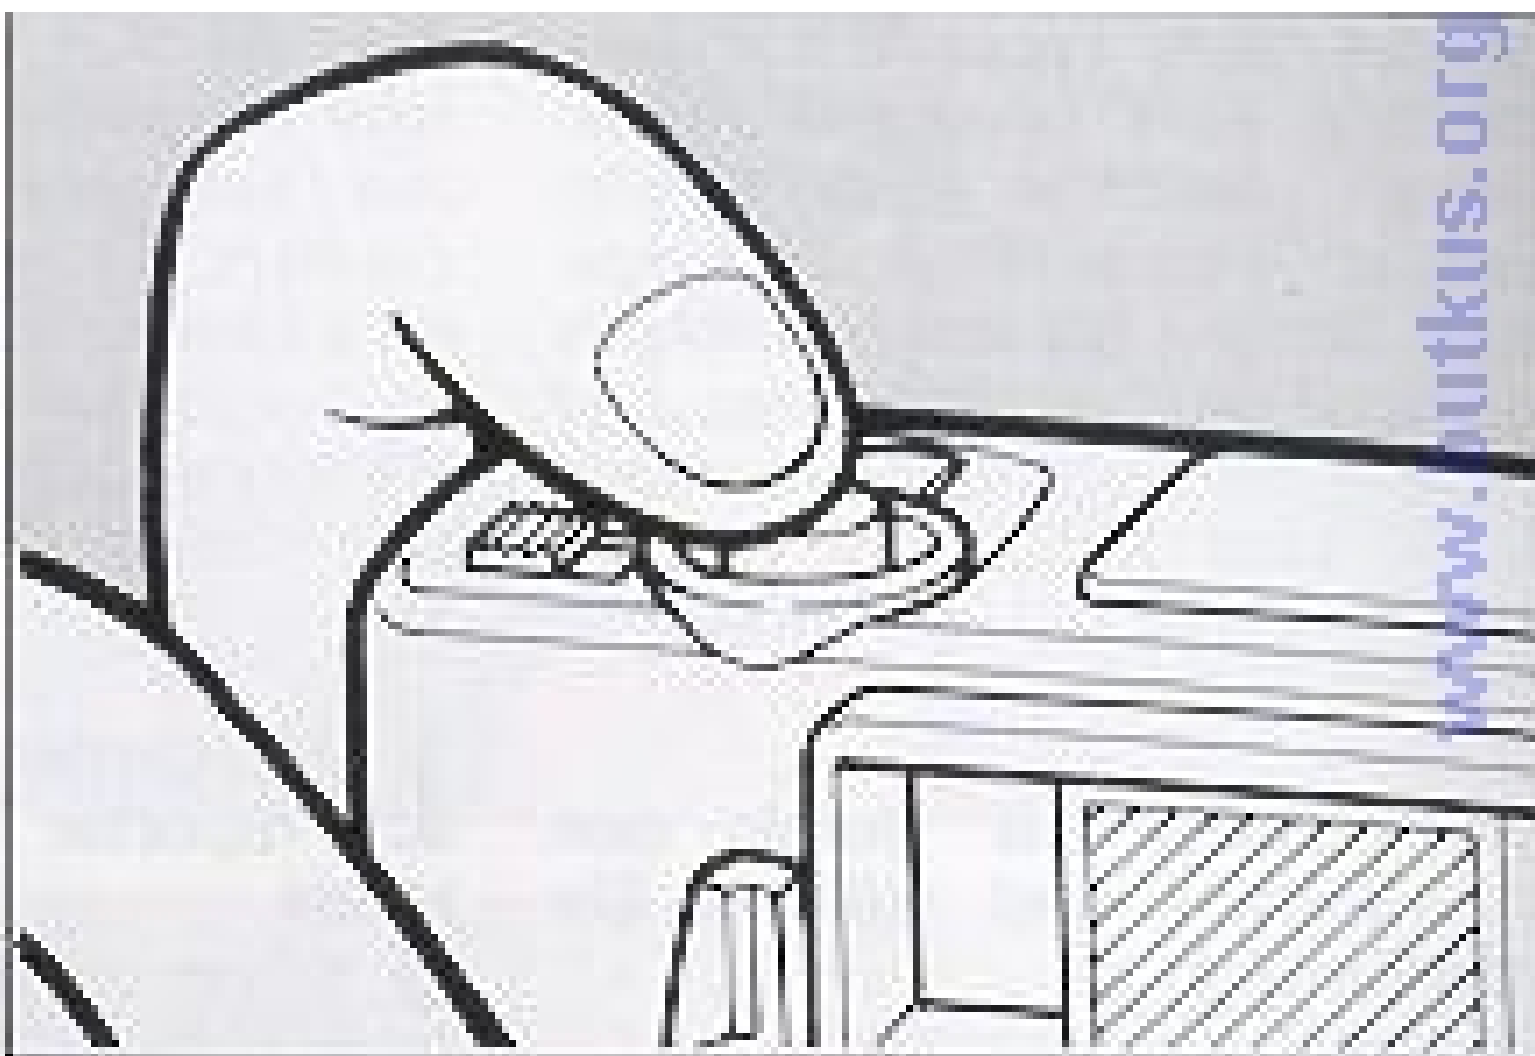



Approx. 1.1 m
Etwa 1,1 m
Env. 1,1 m
Aprox. 1,1 mts


Approx 1.5 m
Etwa 1,5 m
Env. 1,5 m
Aprox. 1,5 mts


Approx. 3 m
Etwa 3 m
Env. 3 m
Aprox. 3 mts

     
Infinity
Unendlich
Infini
Infinito

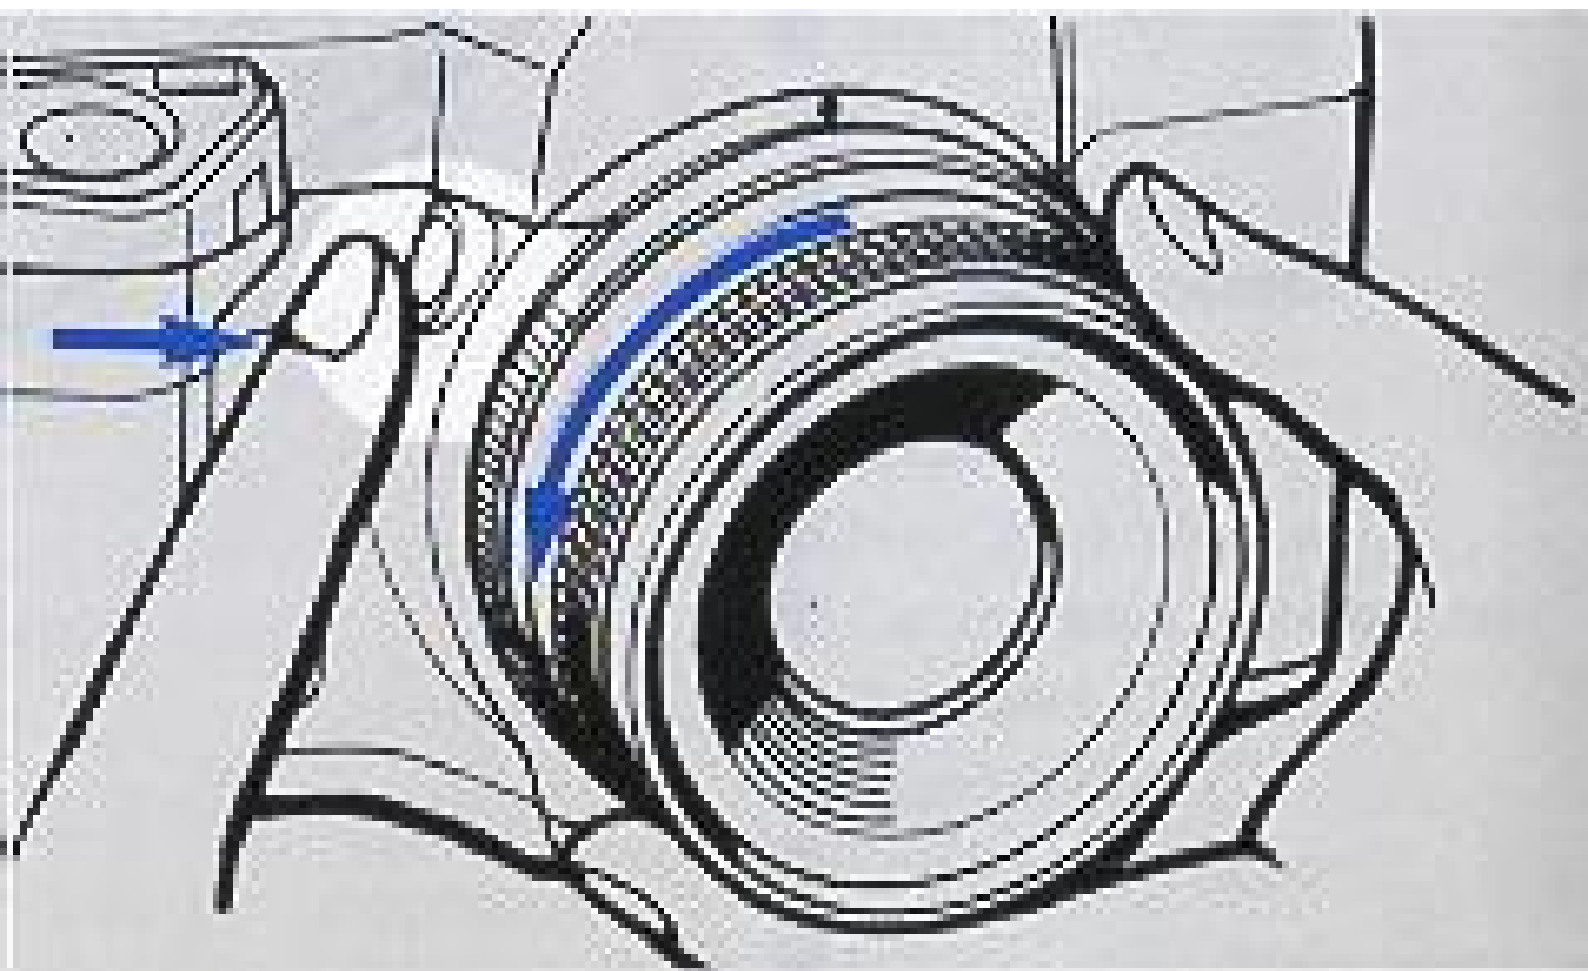 


 
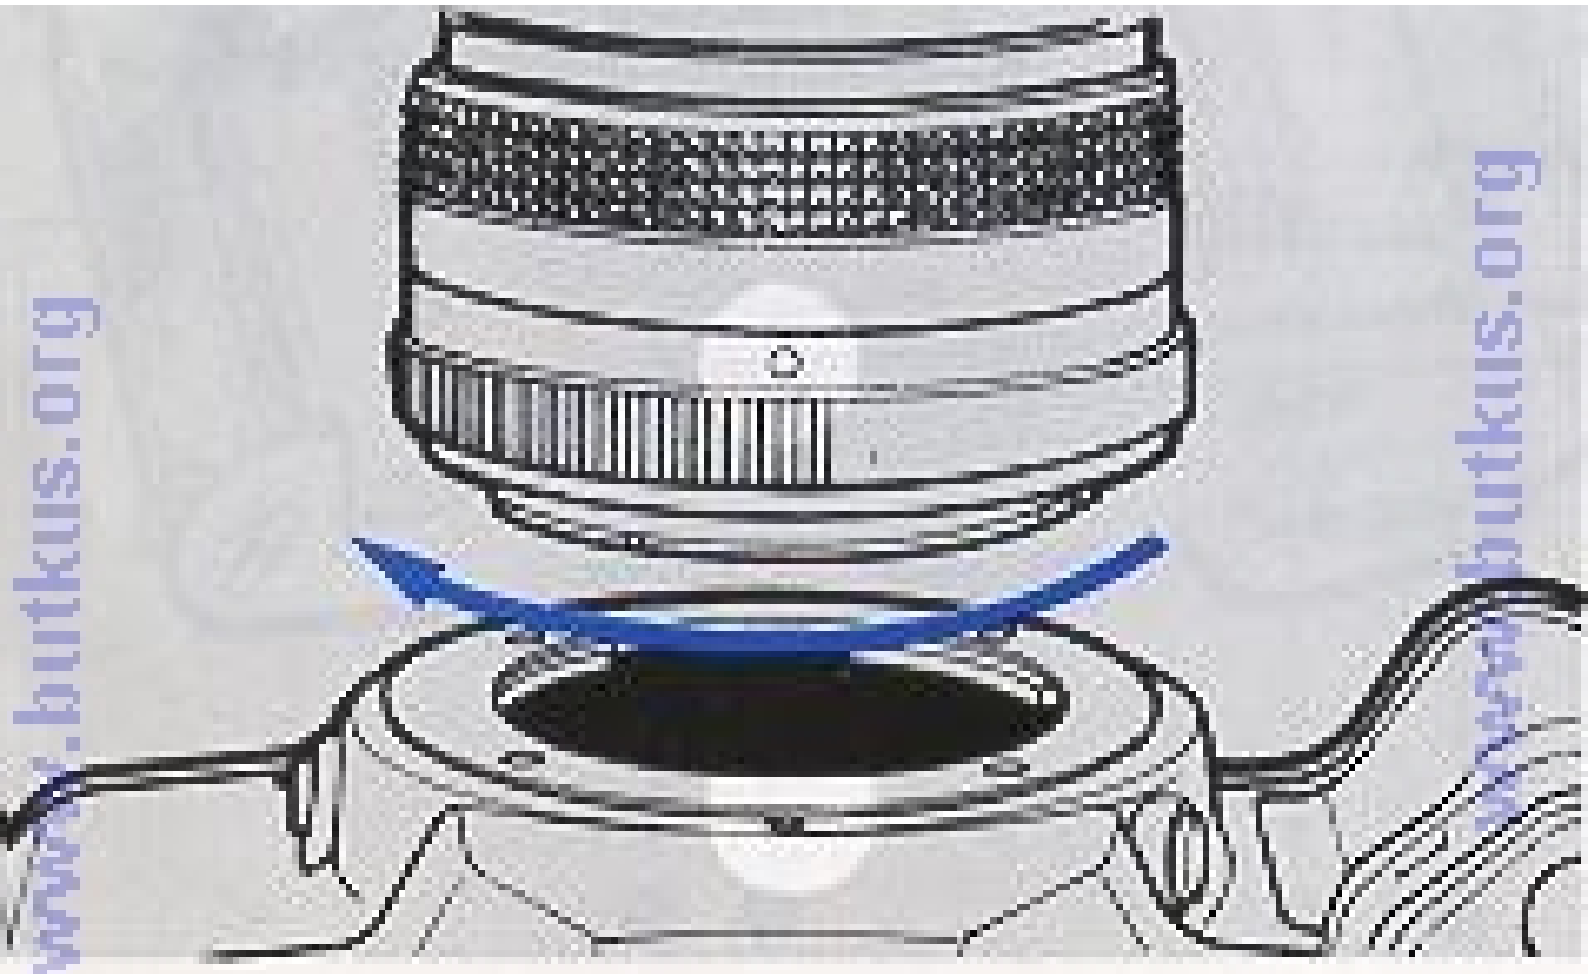 


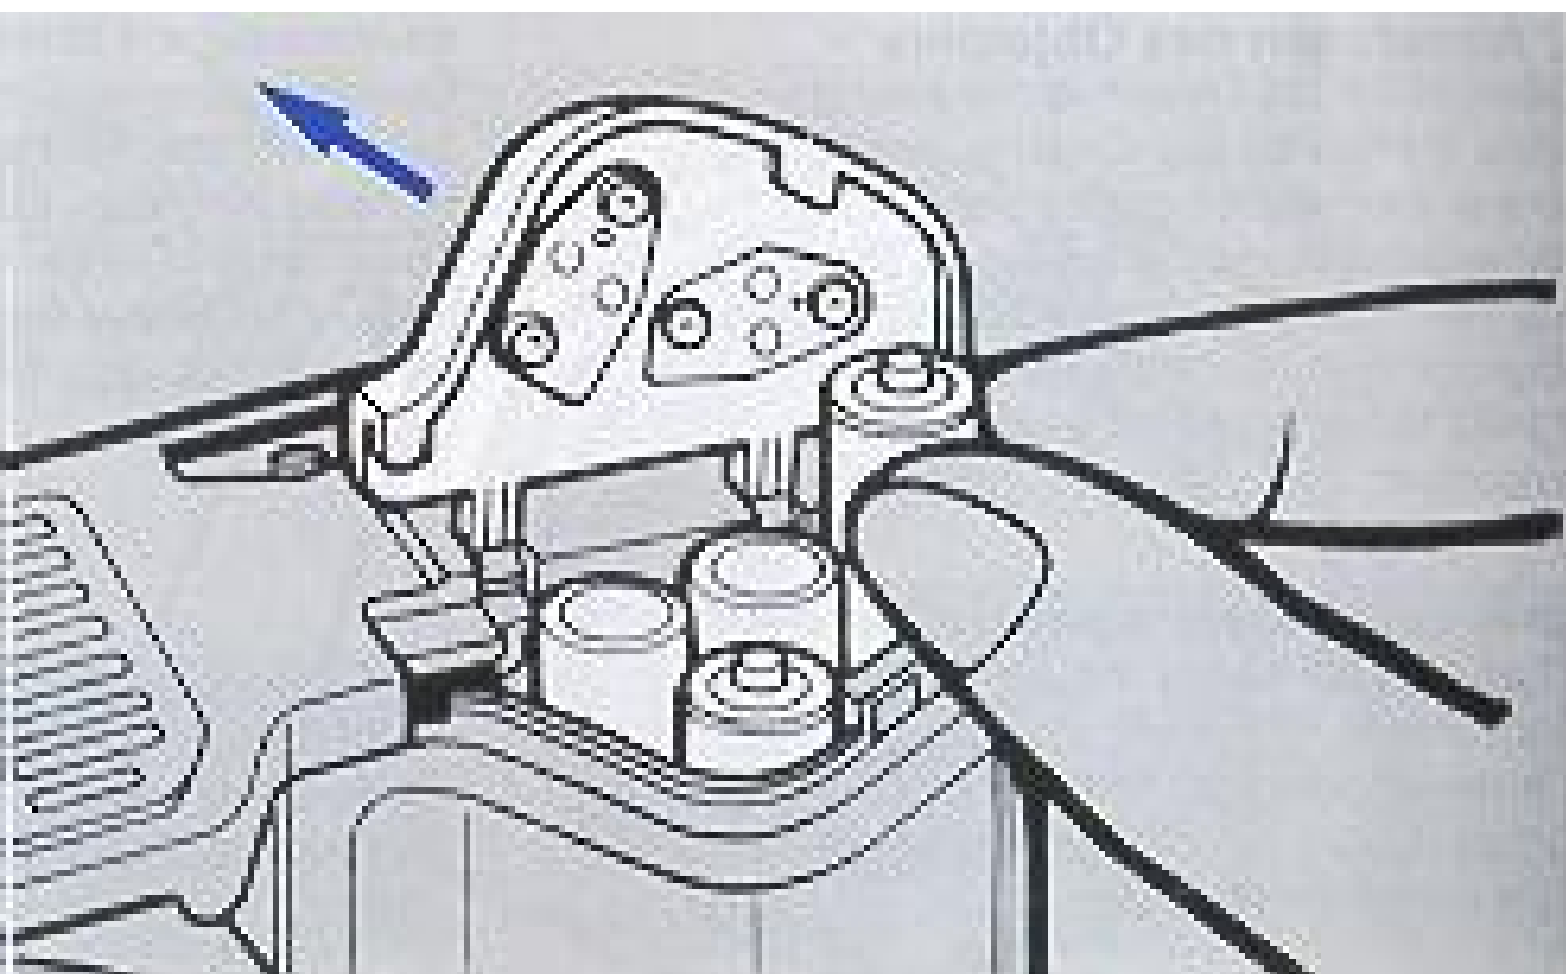

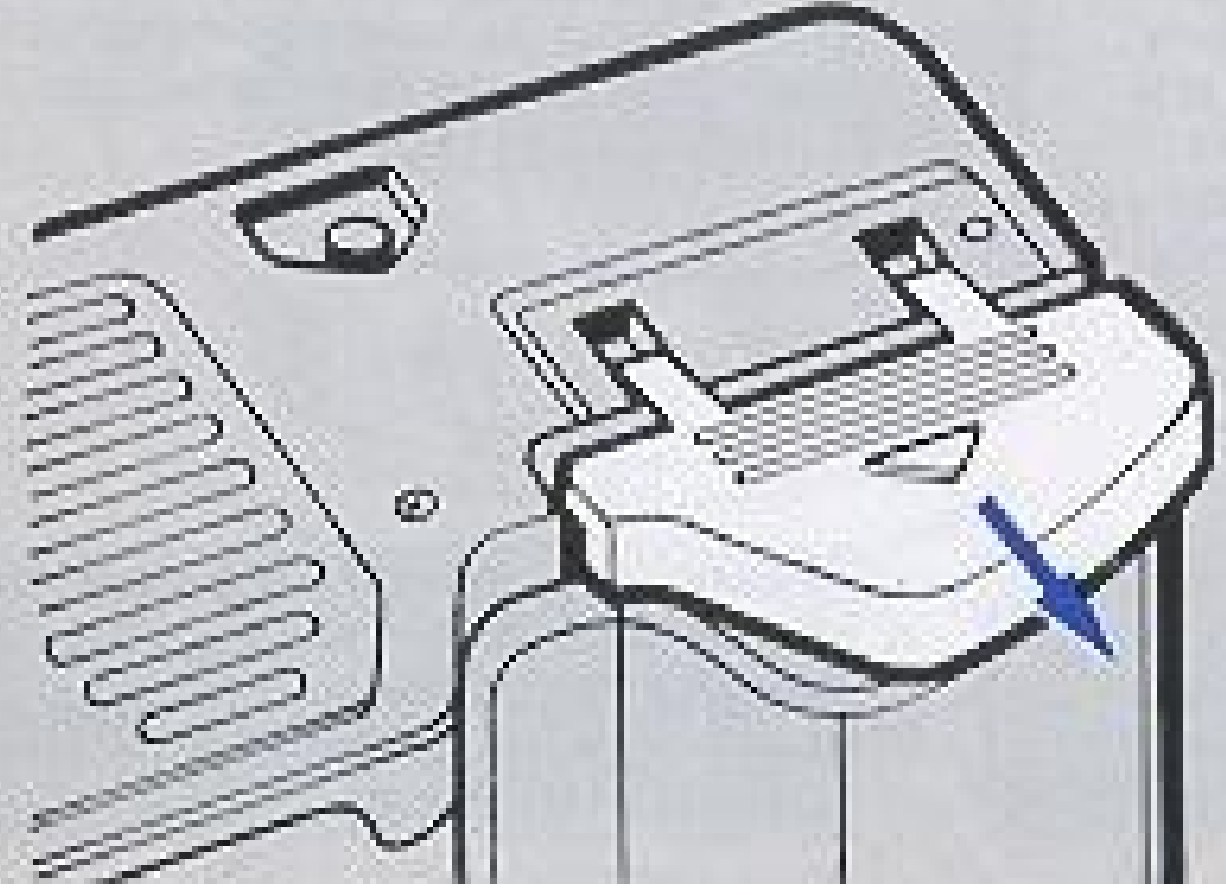


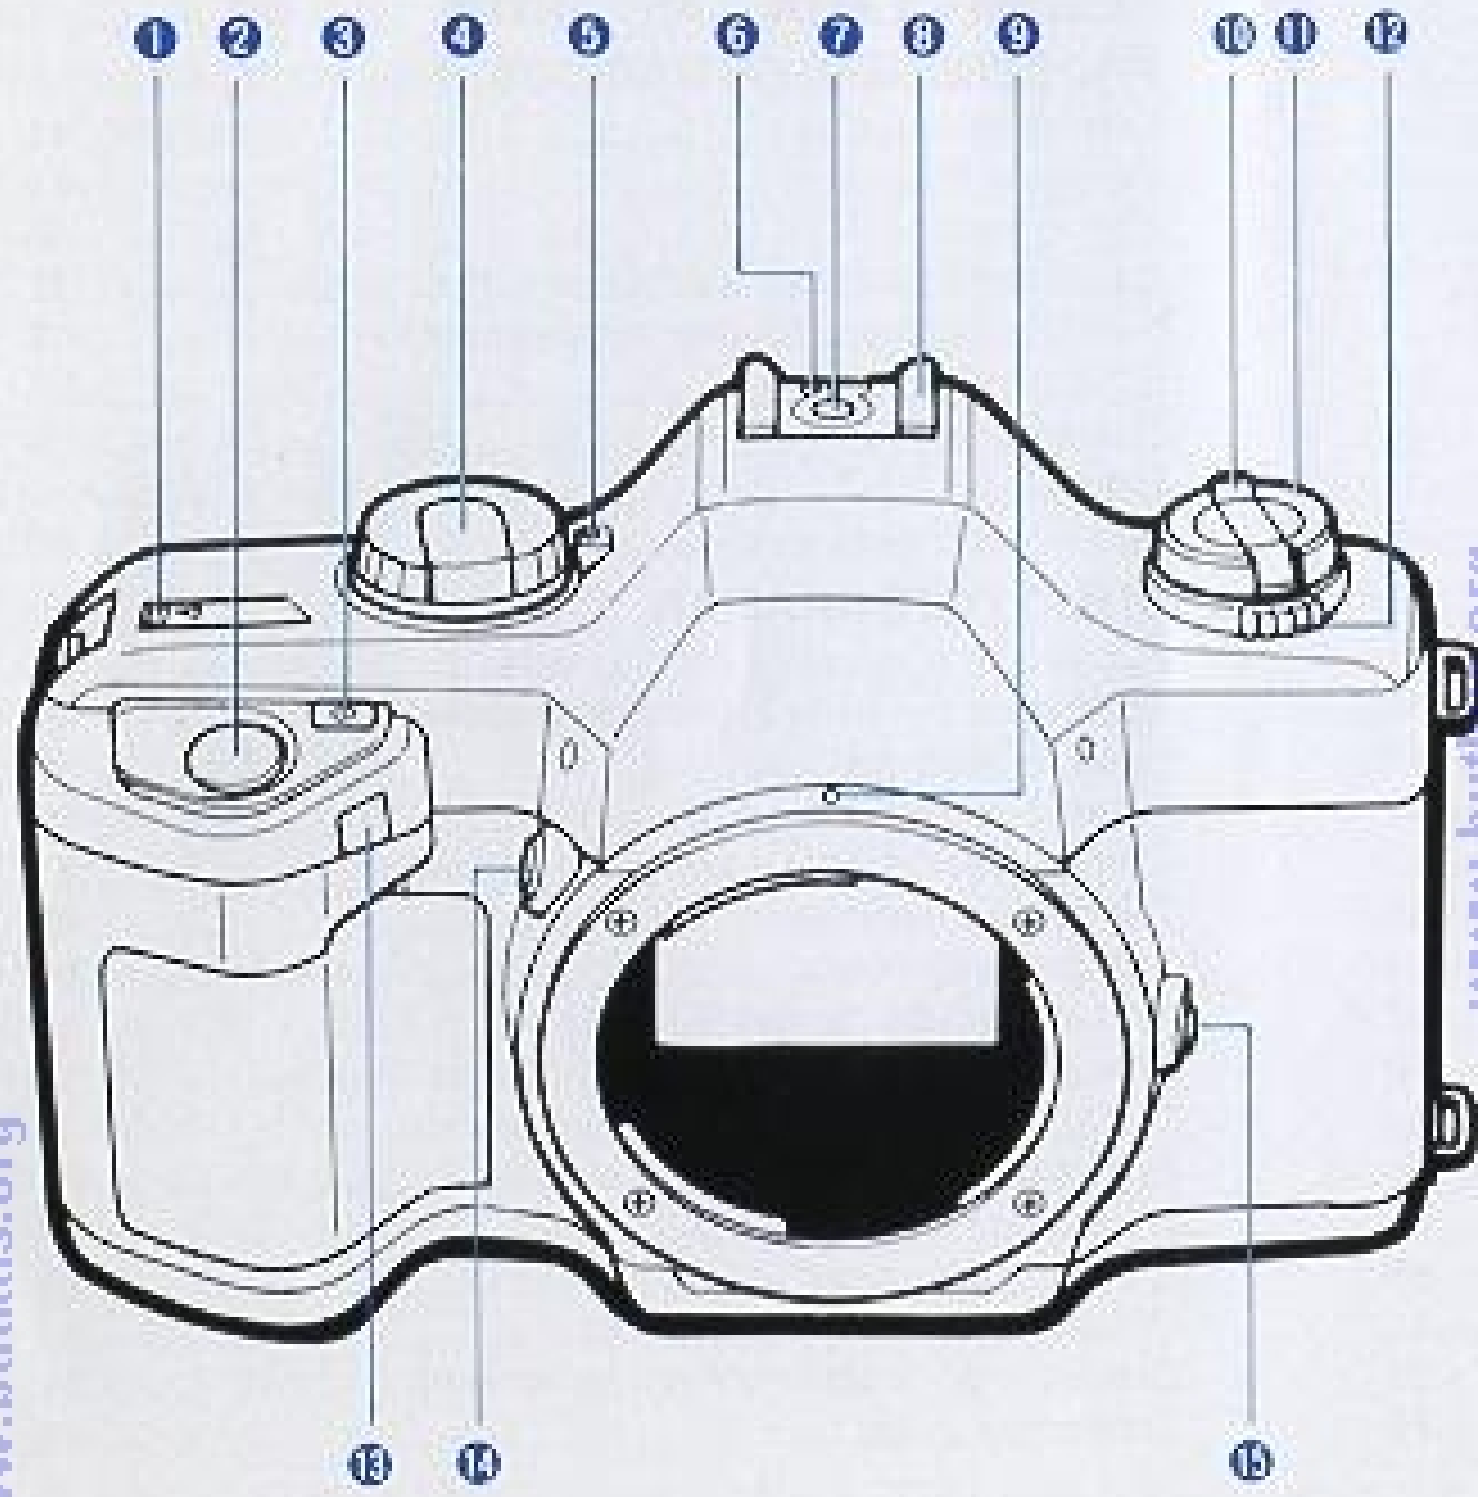

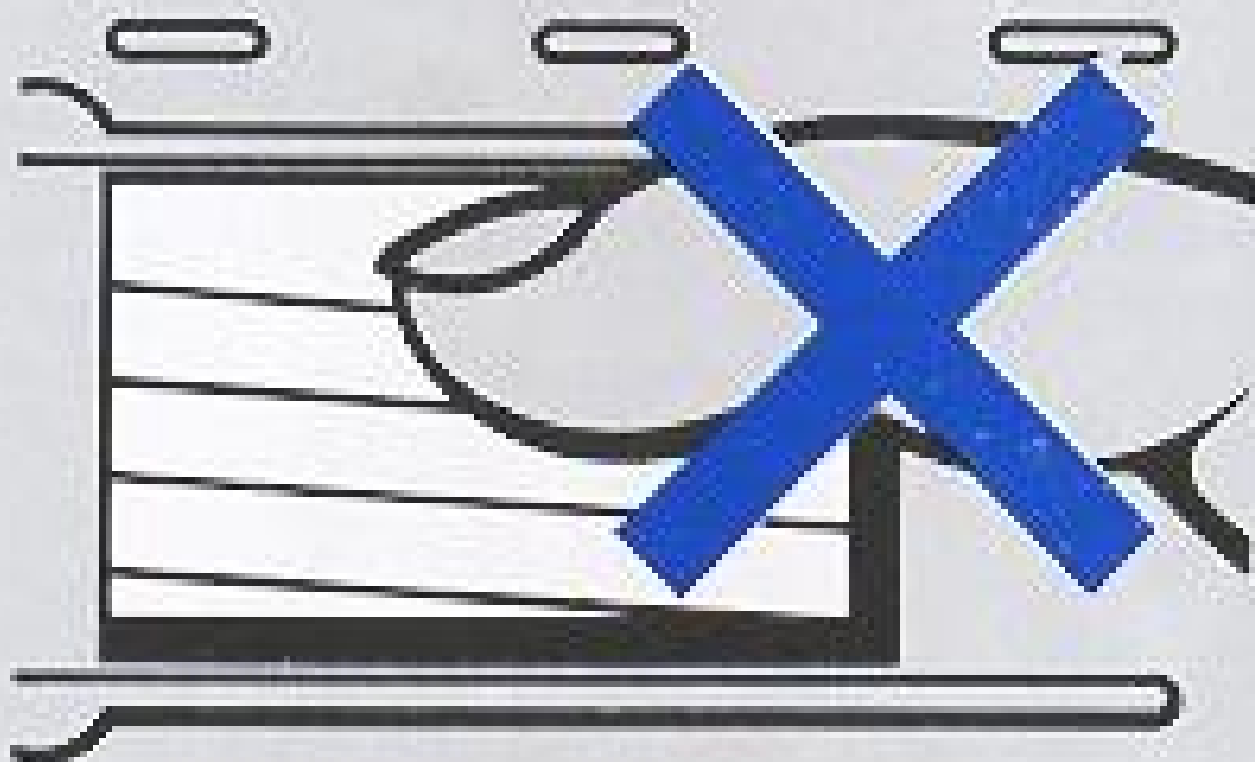


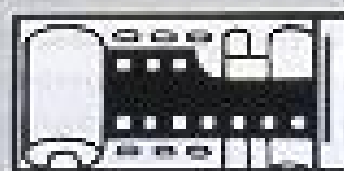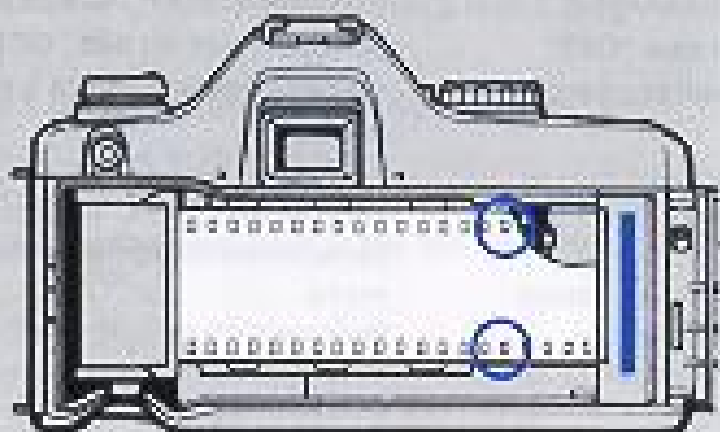



○ Yes
Ja
Oui
Si

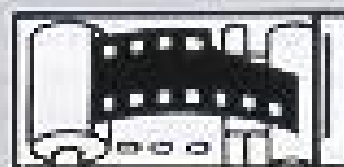 



✗ No
Nein
Non
No

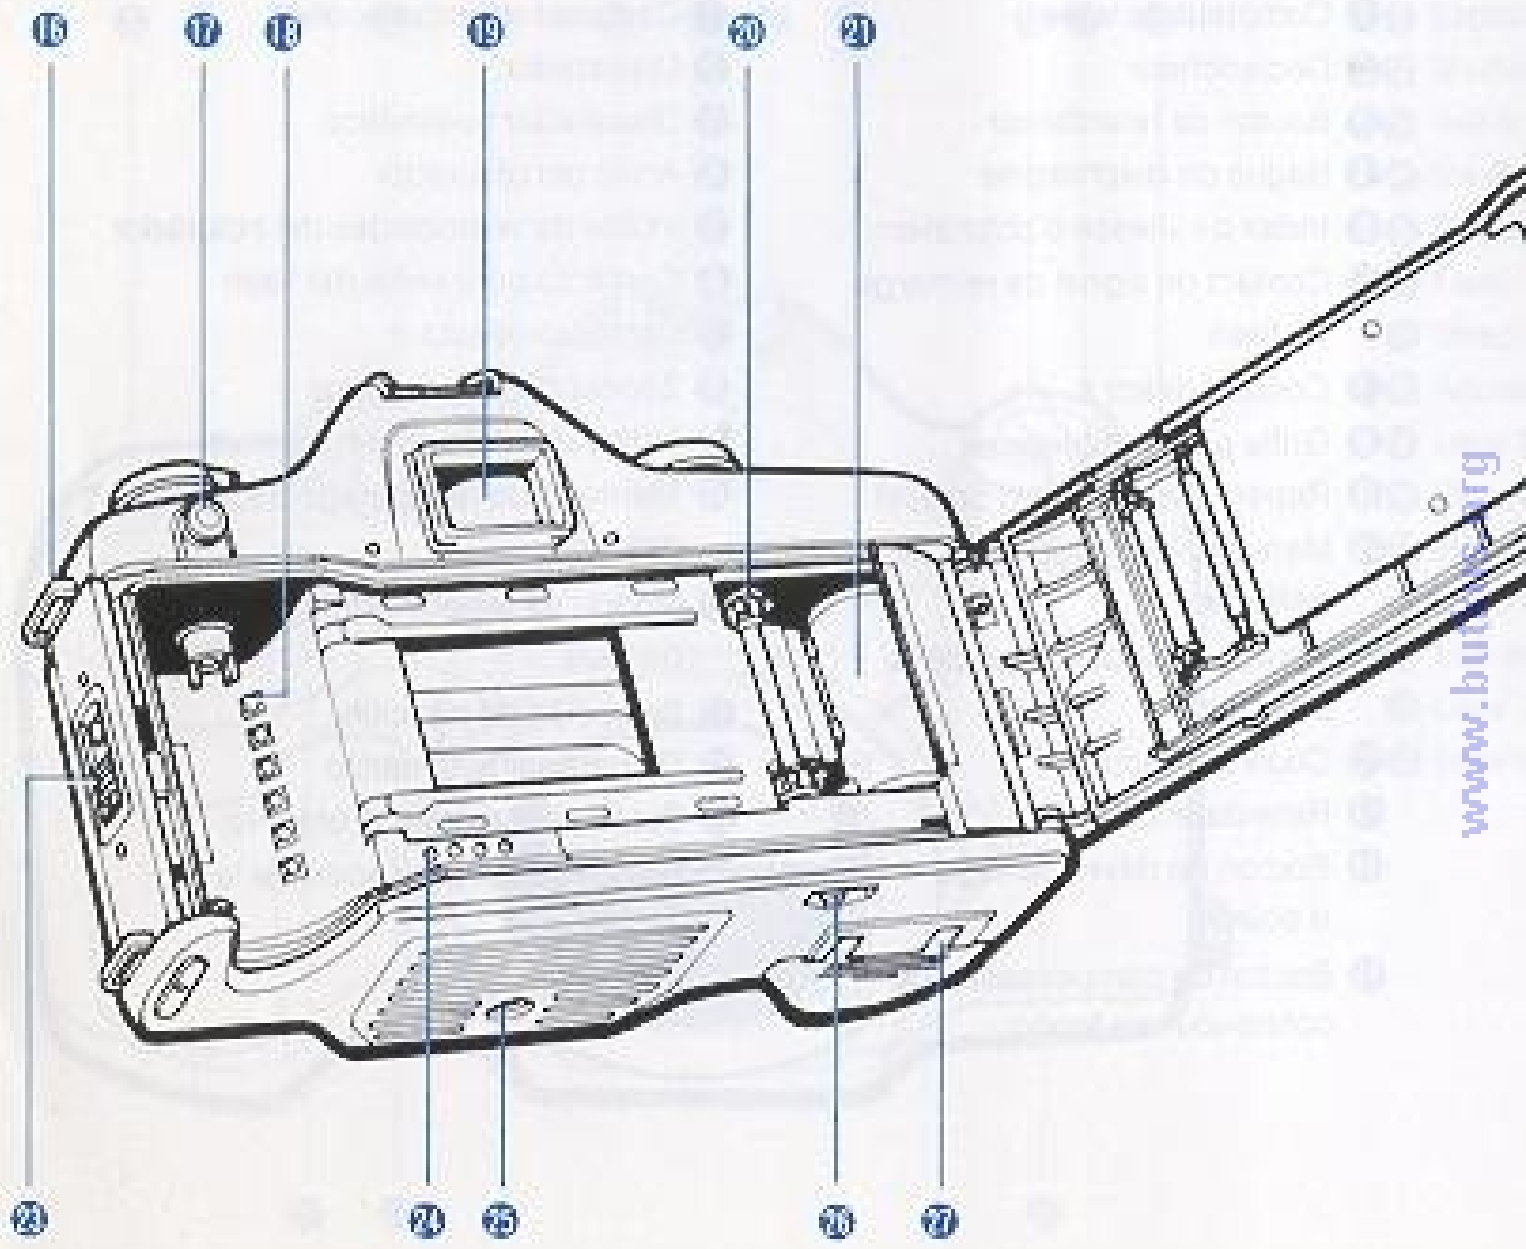 


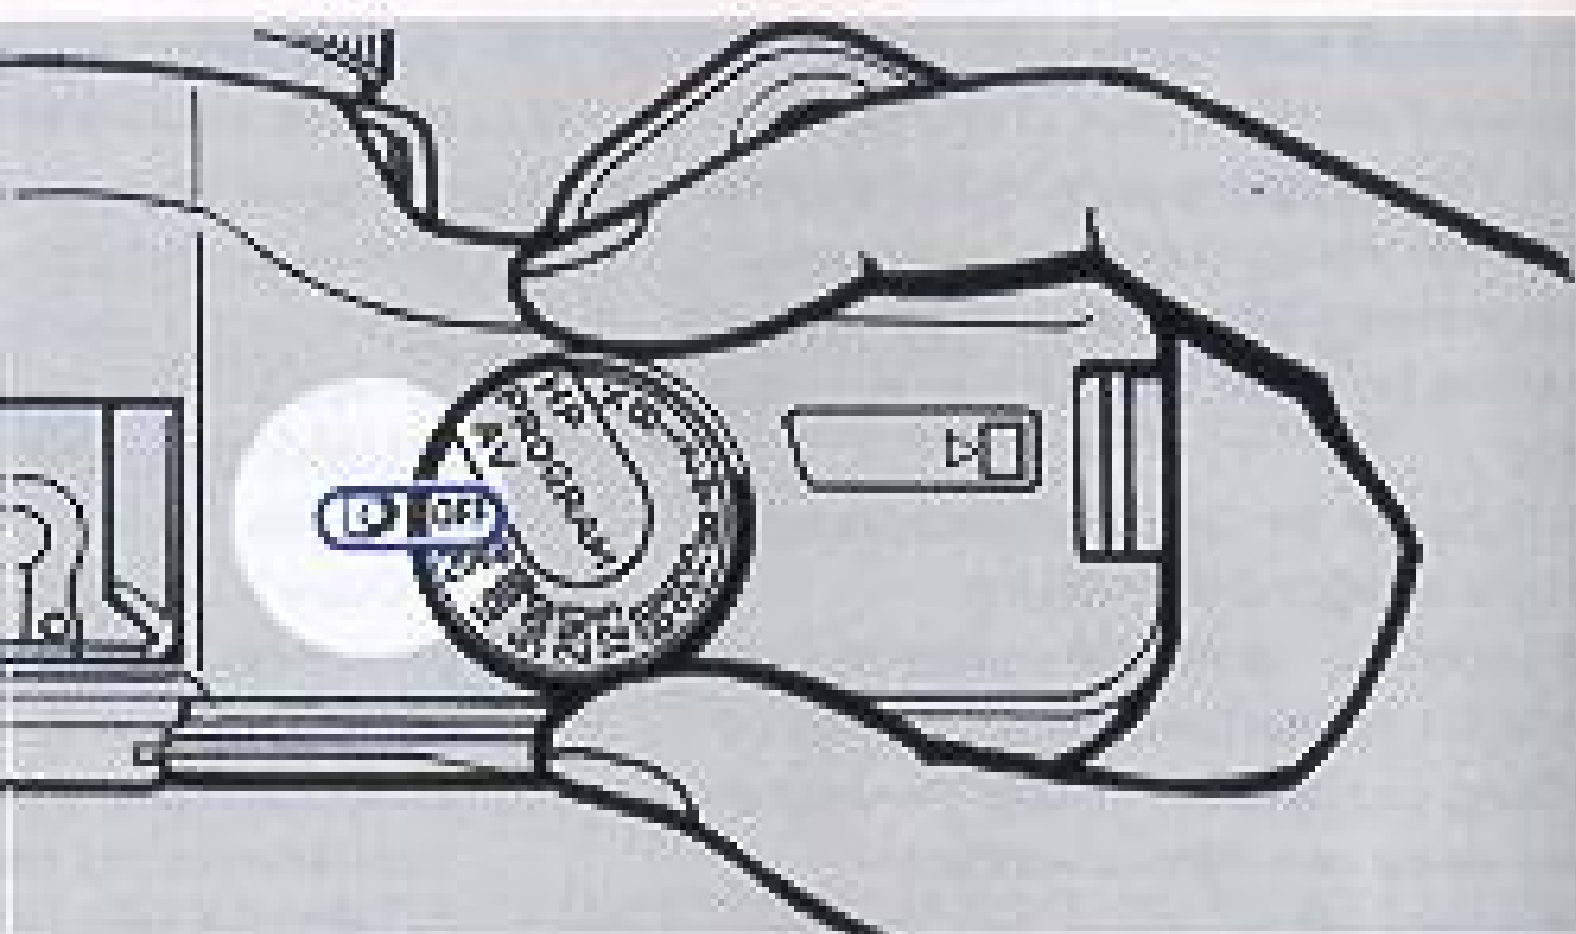 


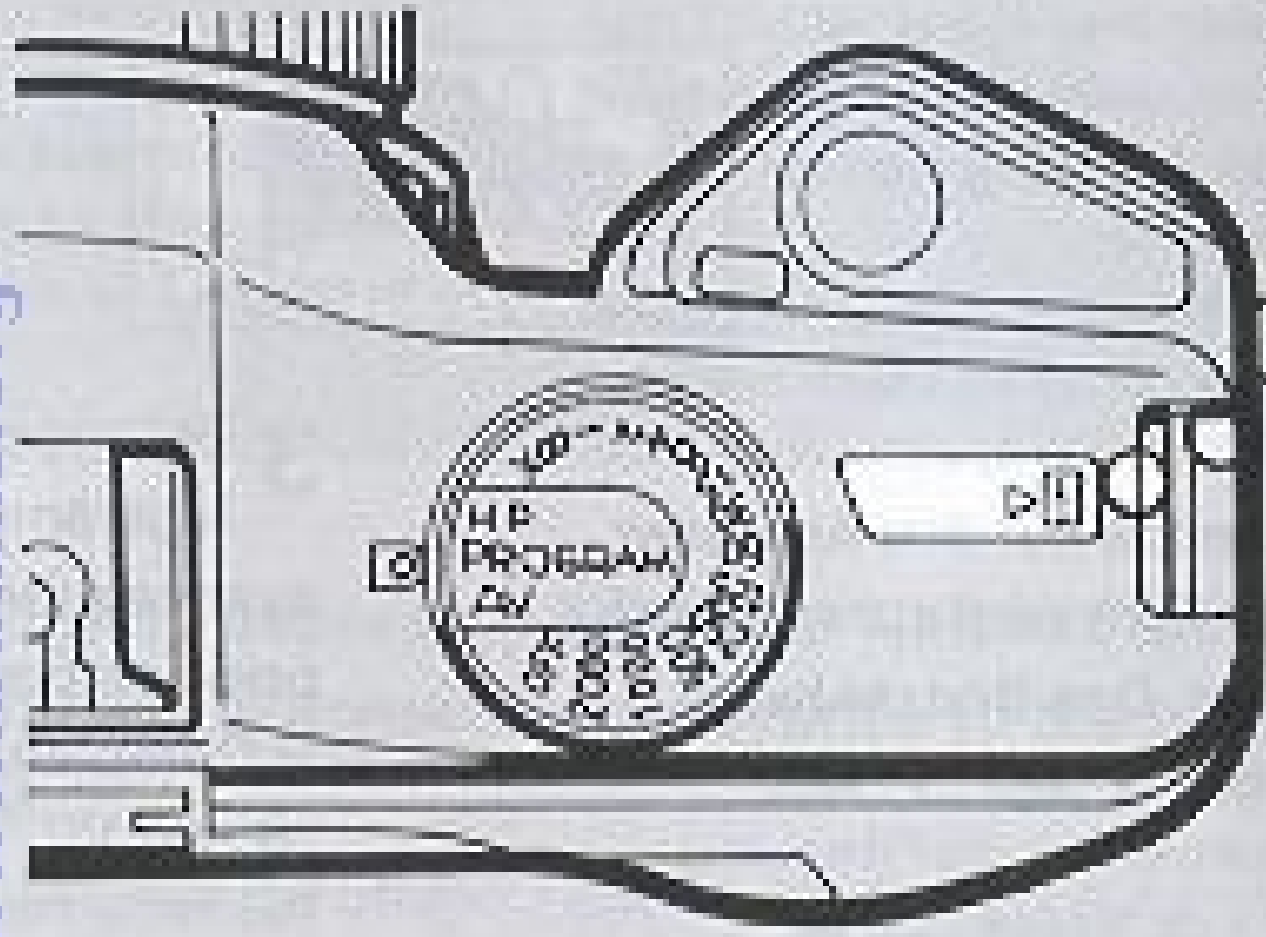 

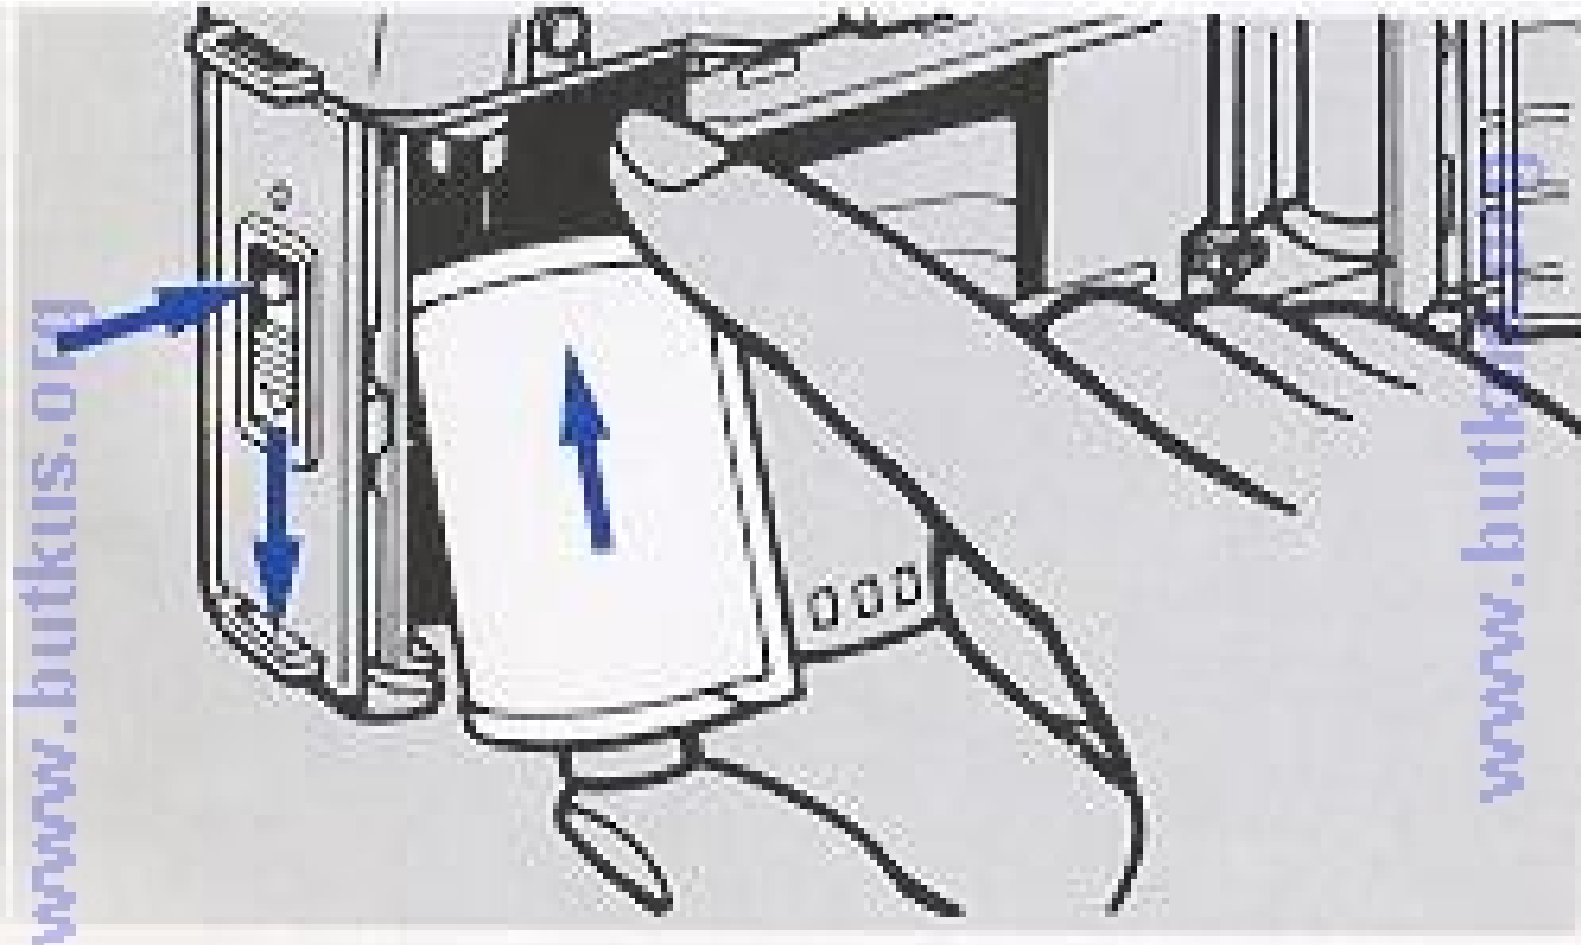 

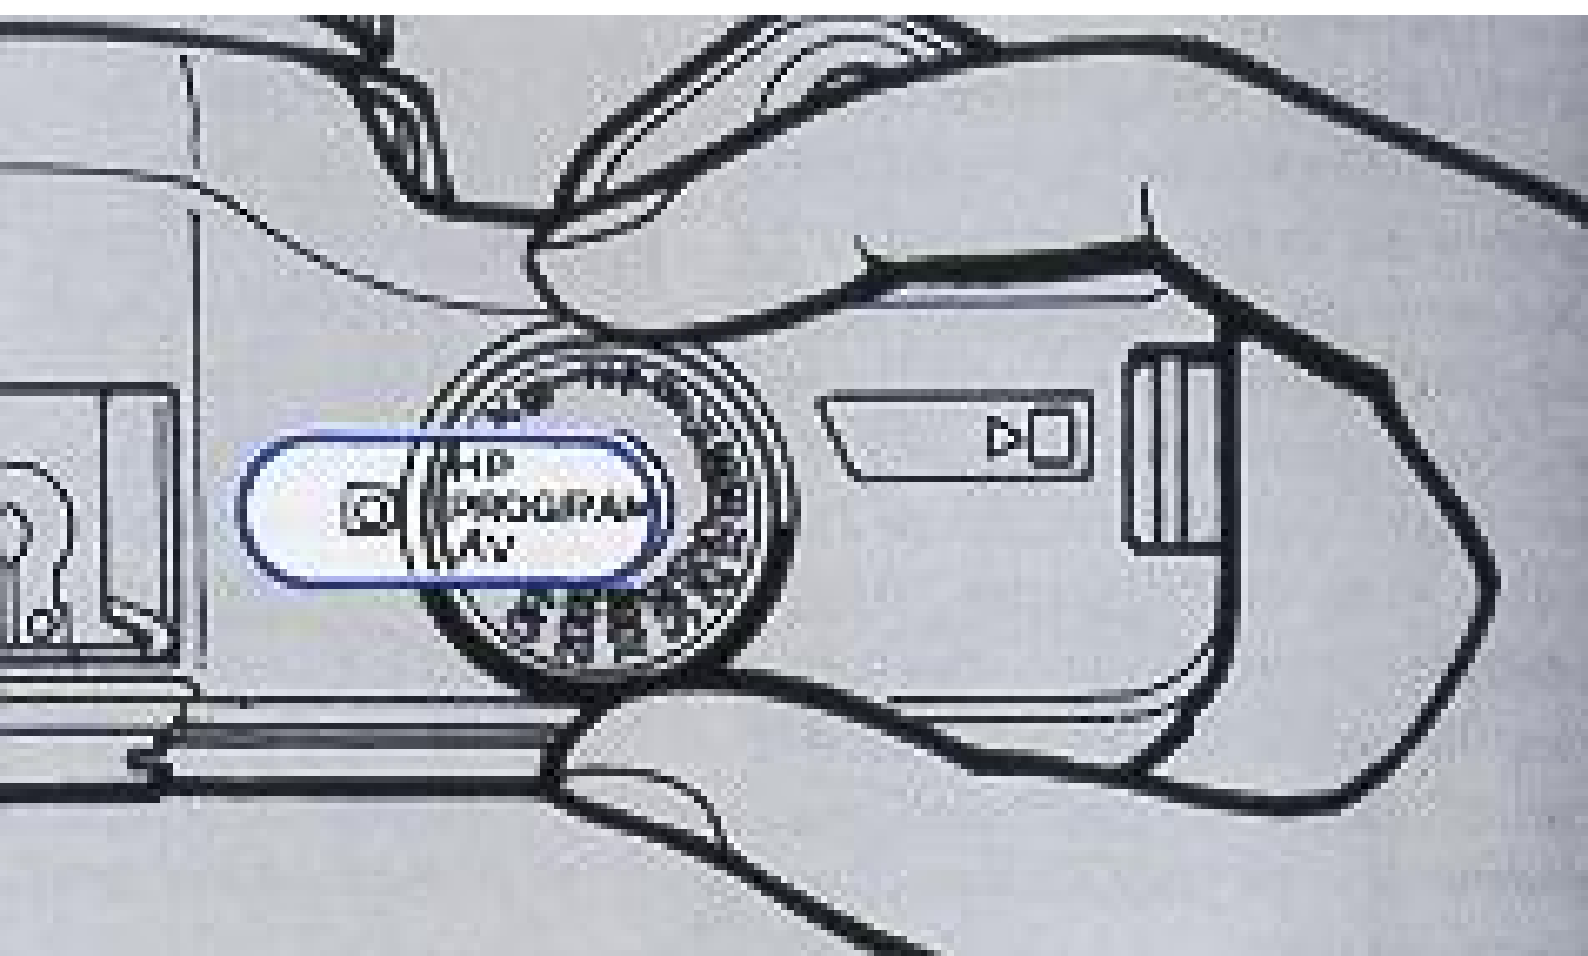   

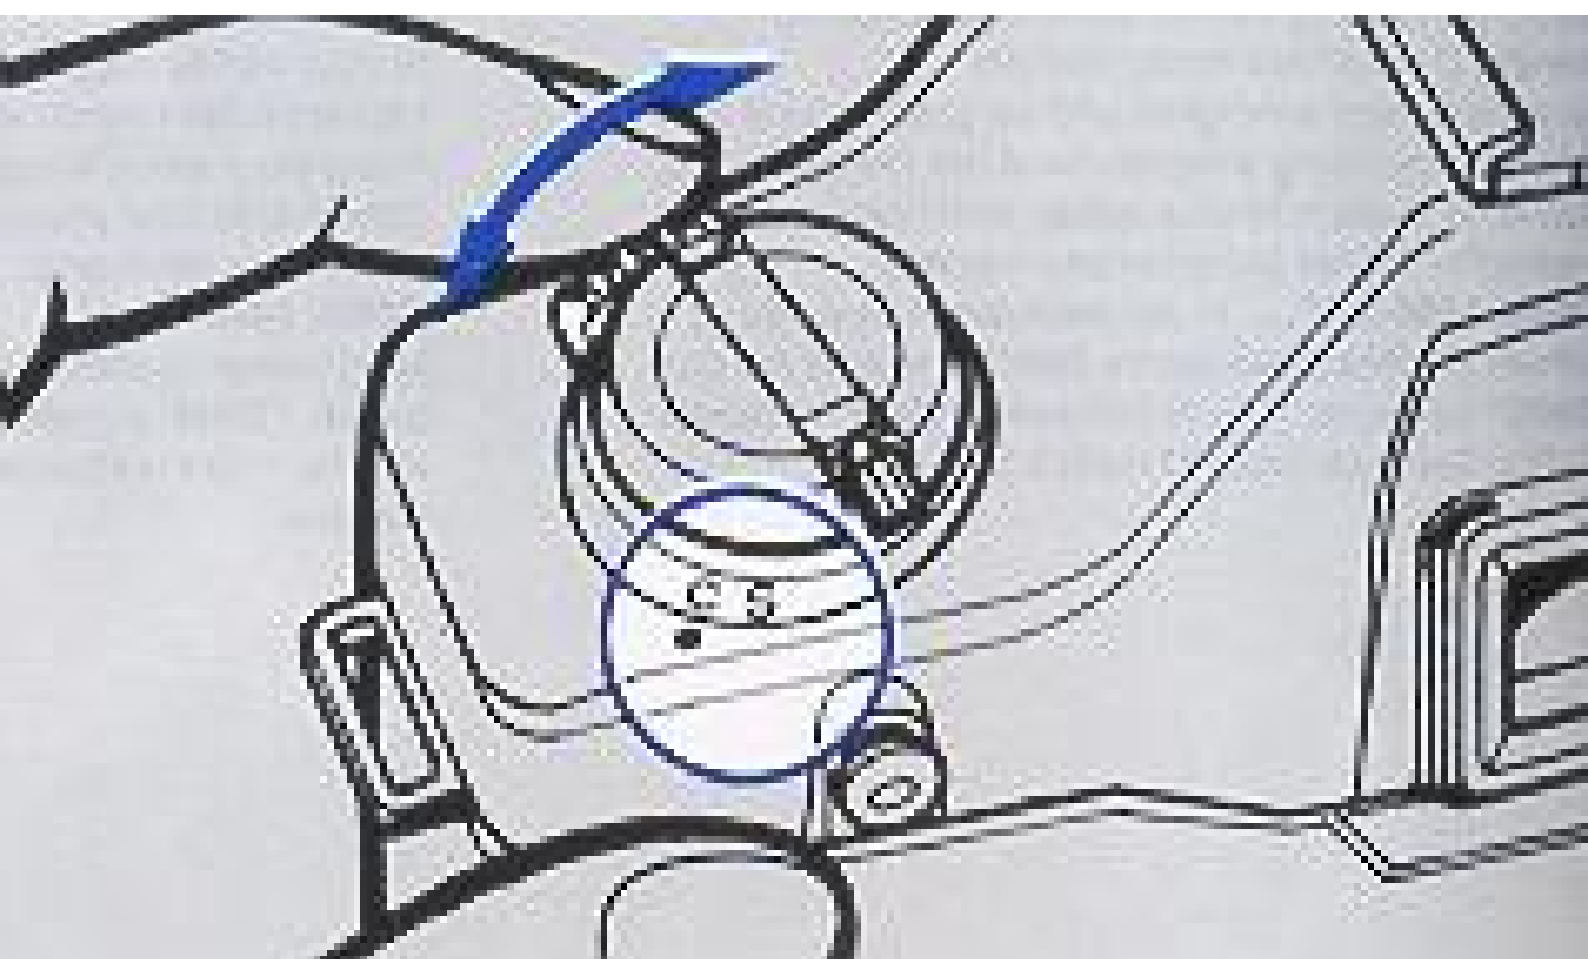

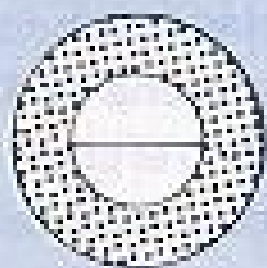




In Focus


Schärfe/Mise au point correcte/Enfocado




Out of Focus

    
Unschärfe/Mise au point incorrecte/Desenfocado

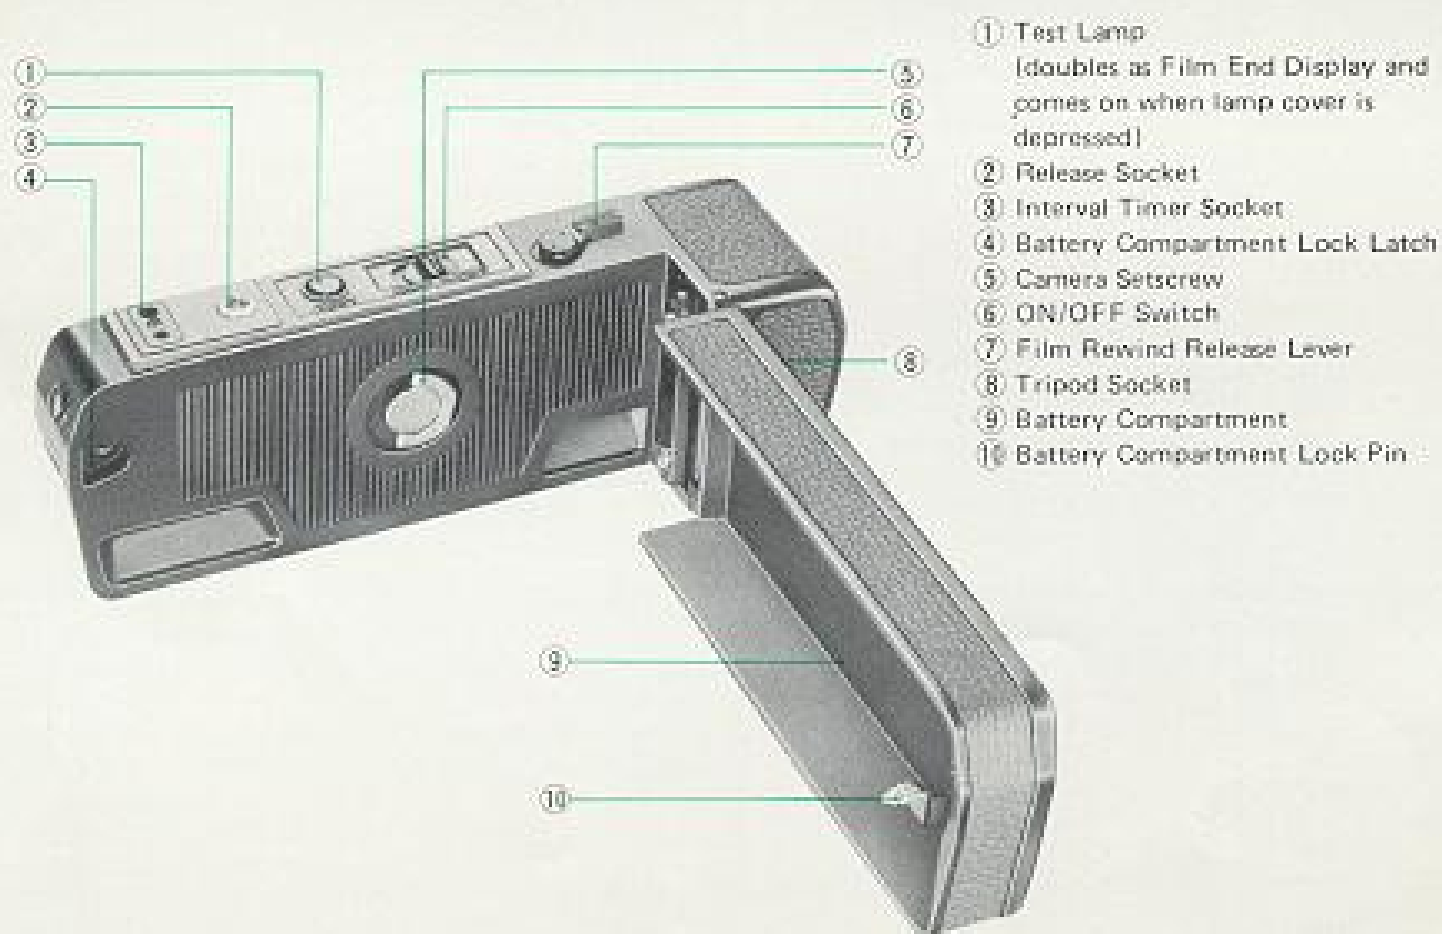

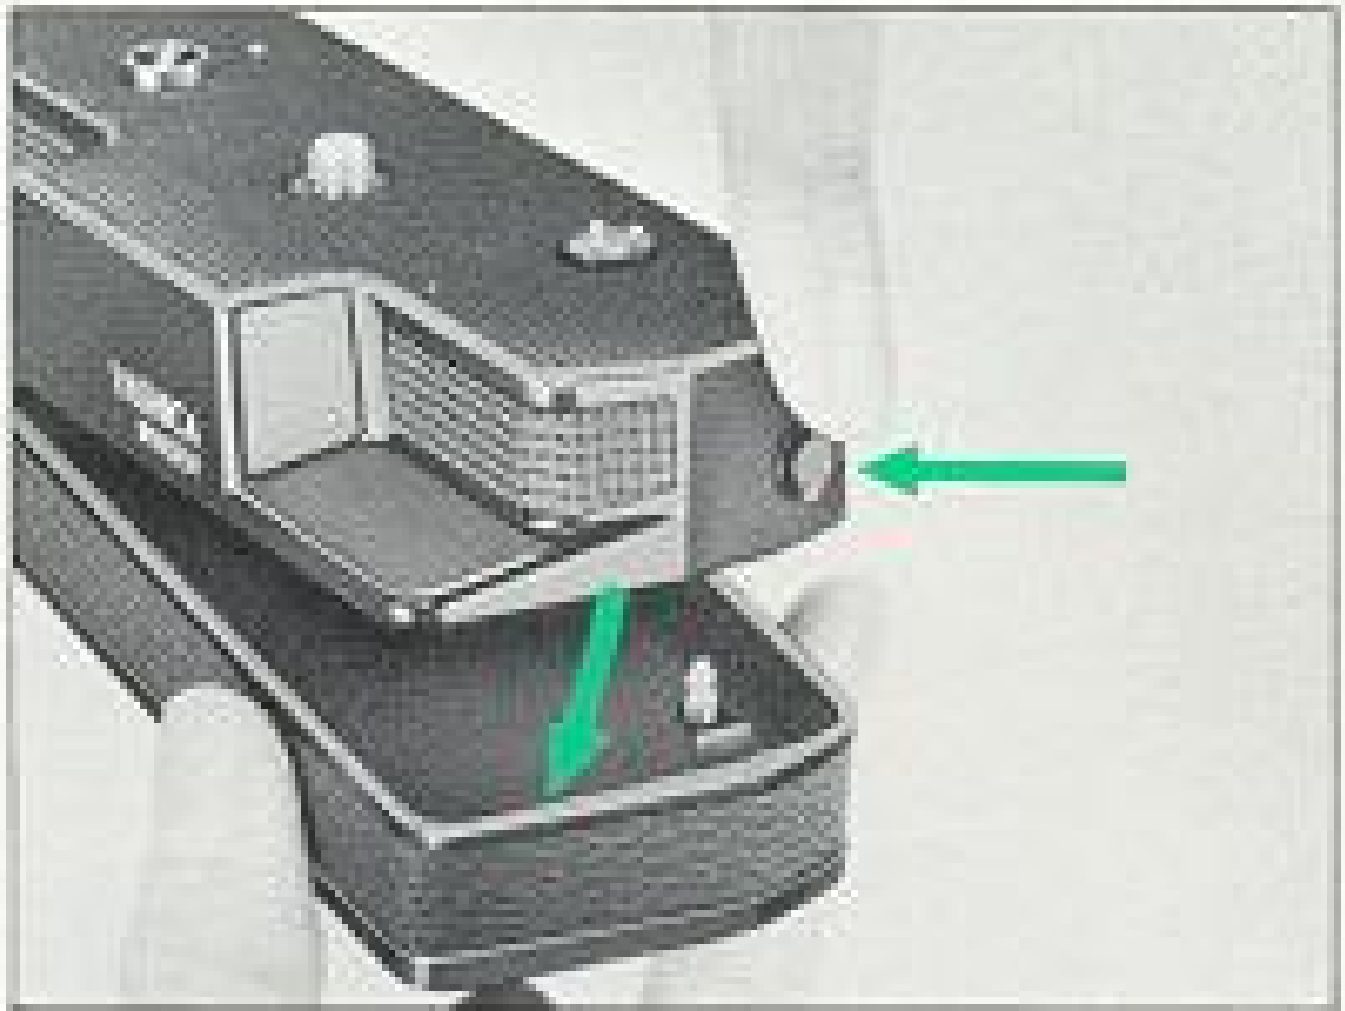






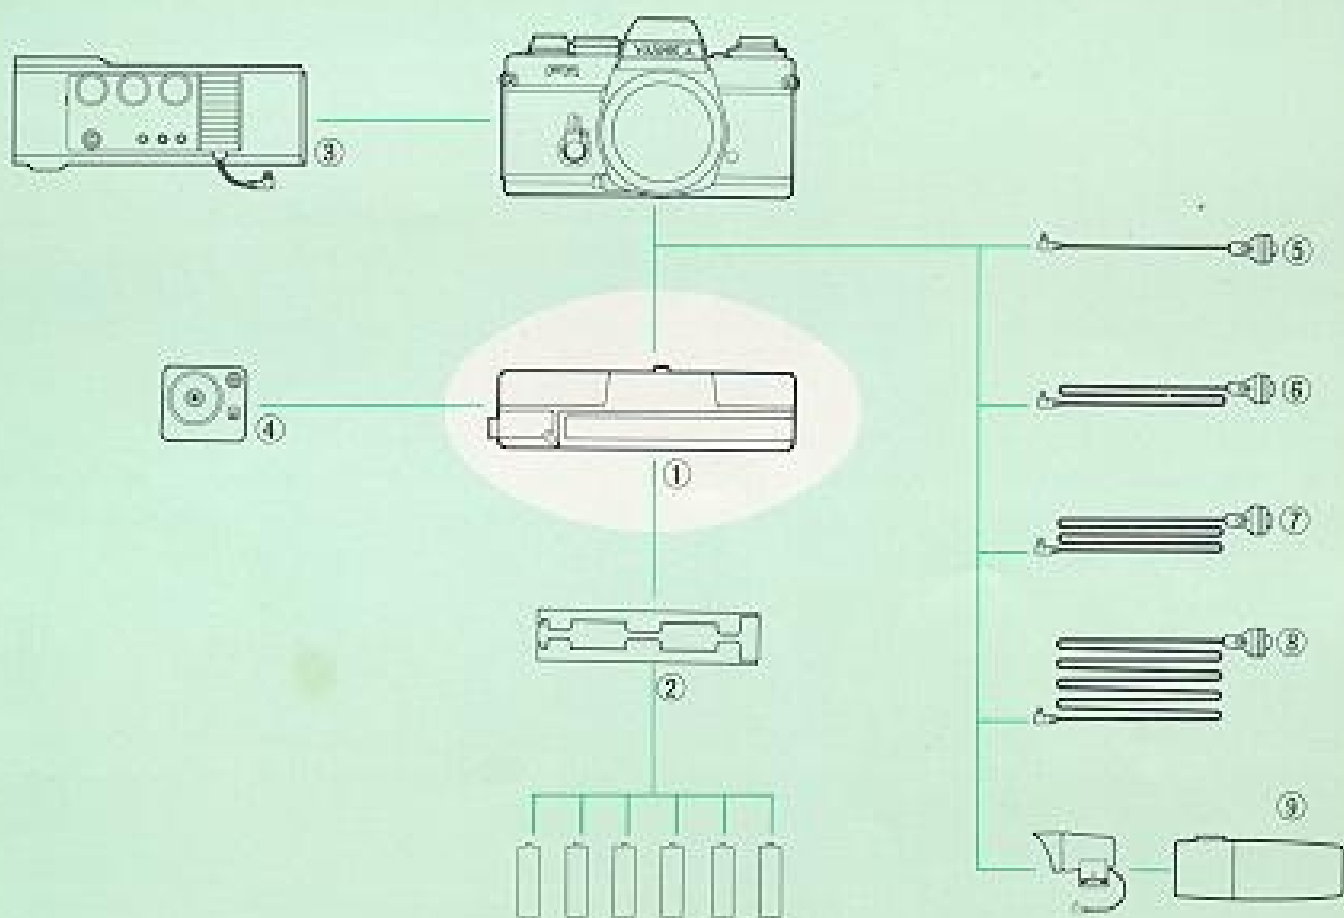


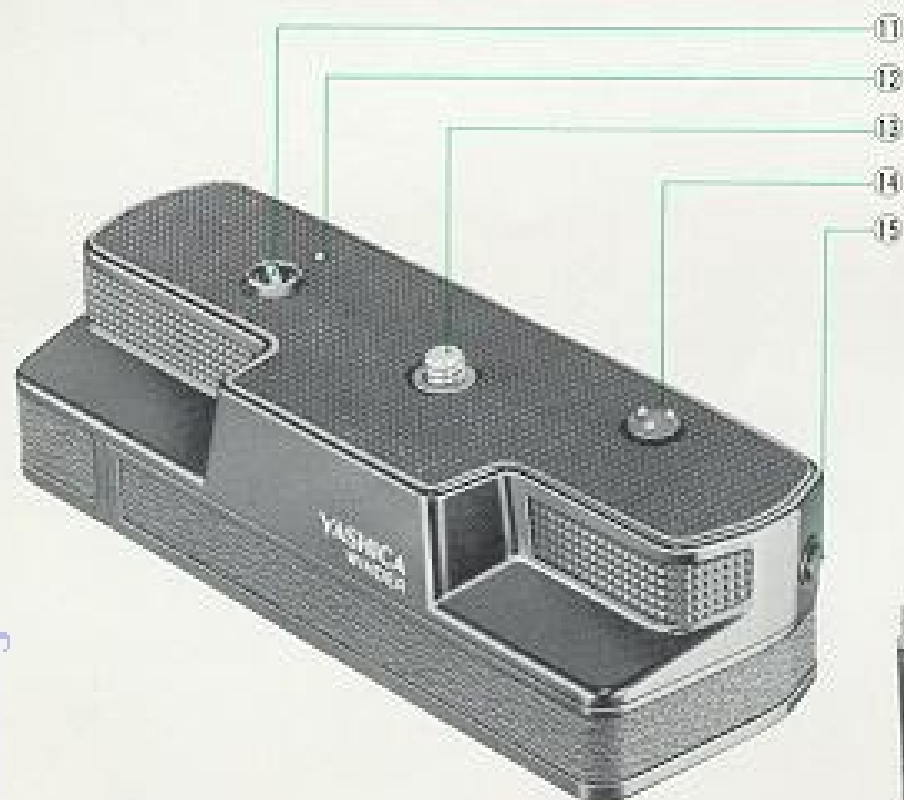

     
- ⑪ Film Drive Stud
- ⑫ Film Rewind Release Coupling Pin
- ⑬ Camera Setscrew
- ⑭ Film Drive Signal Terminal
- ⑮ Battery Compartment Lock Release
- ⑯ Battery Case

 


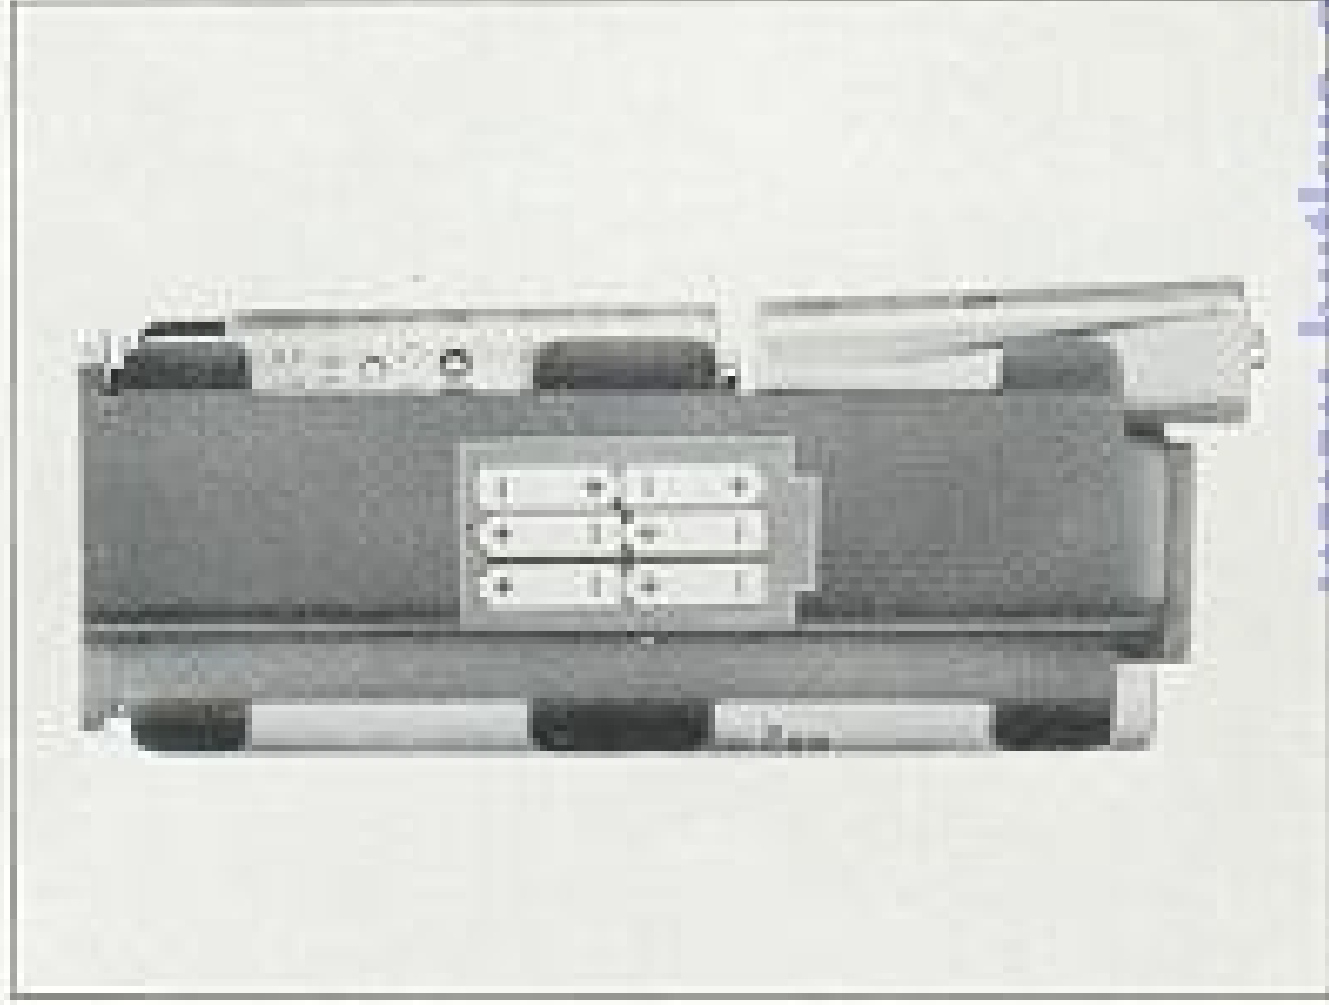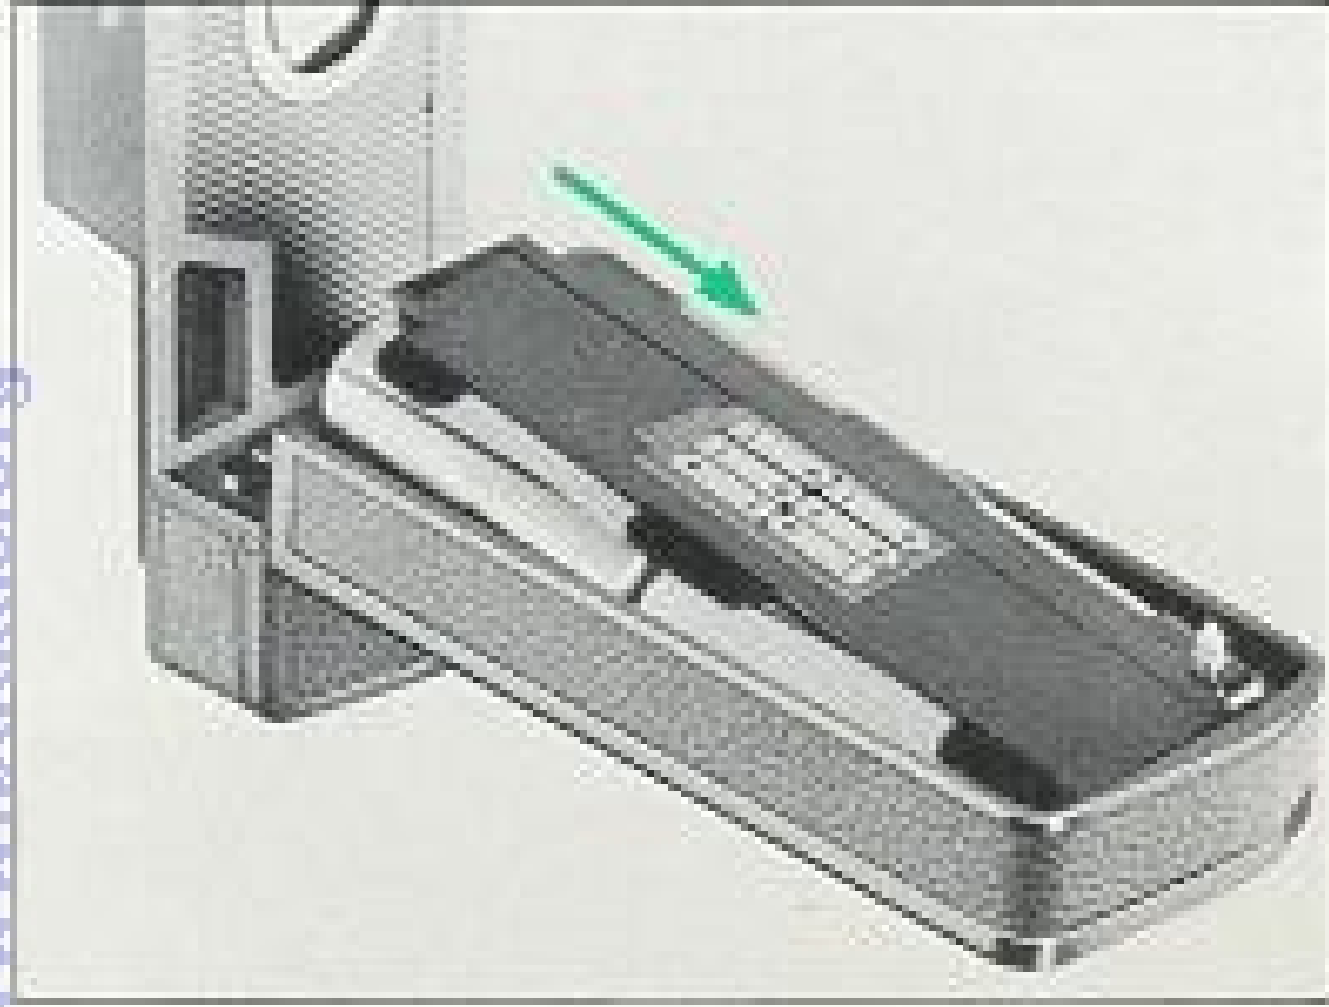 


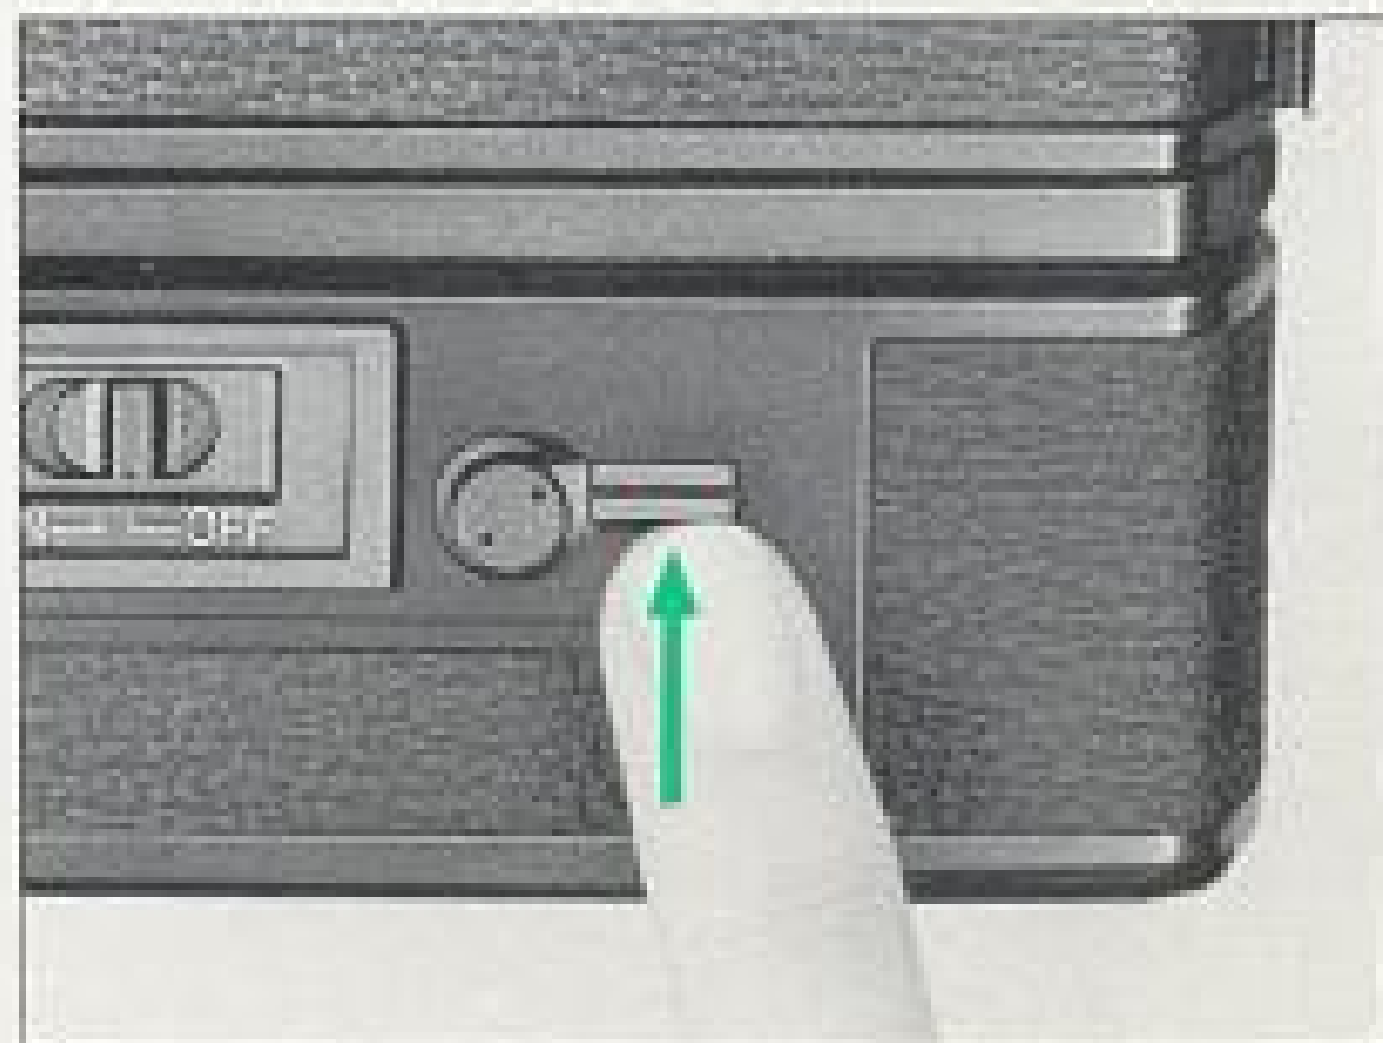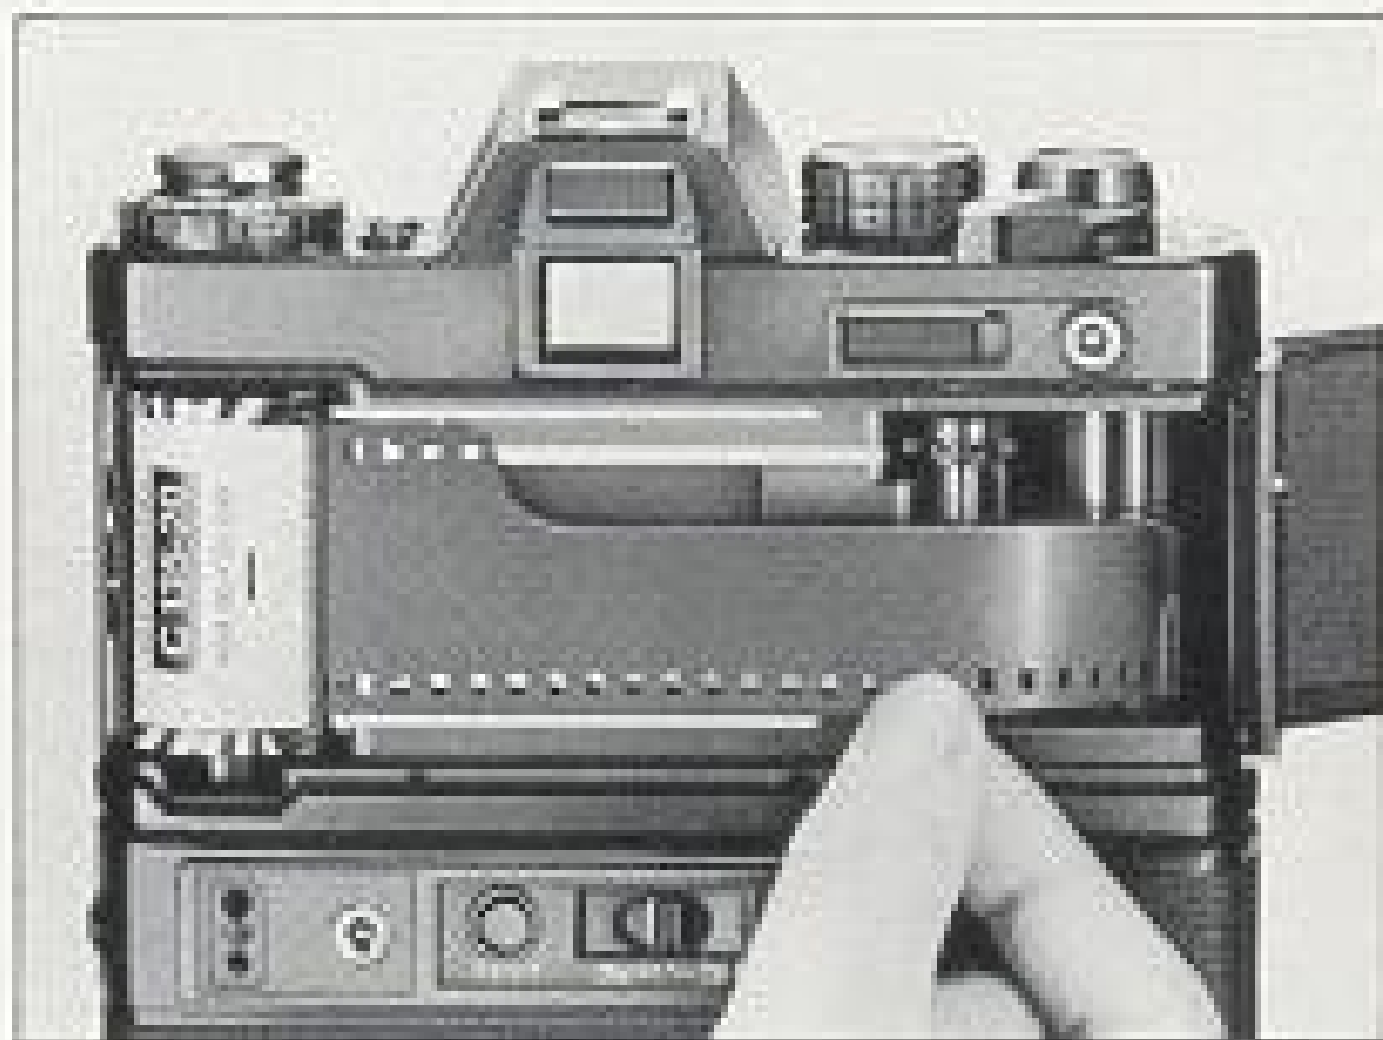 


 


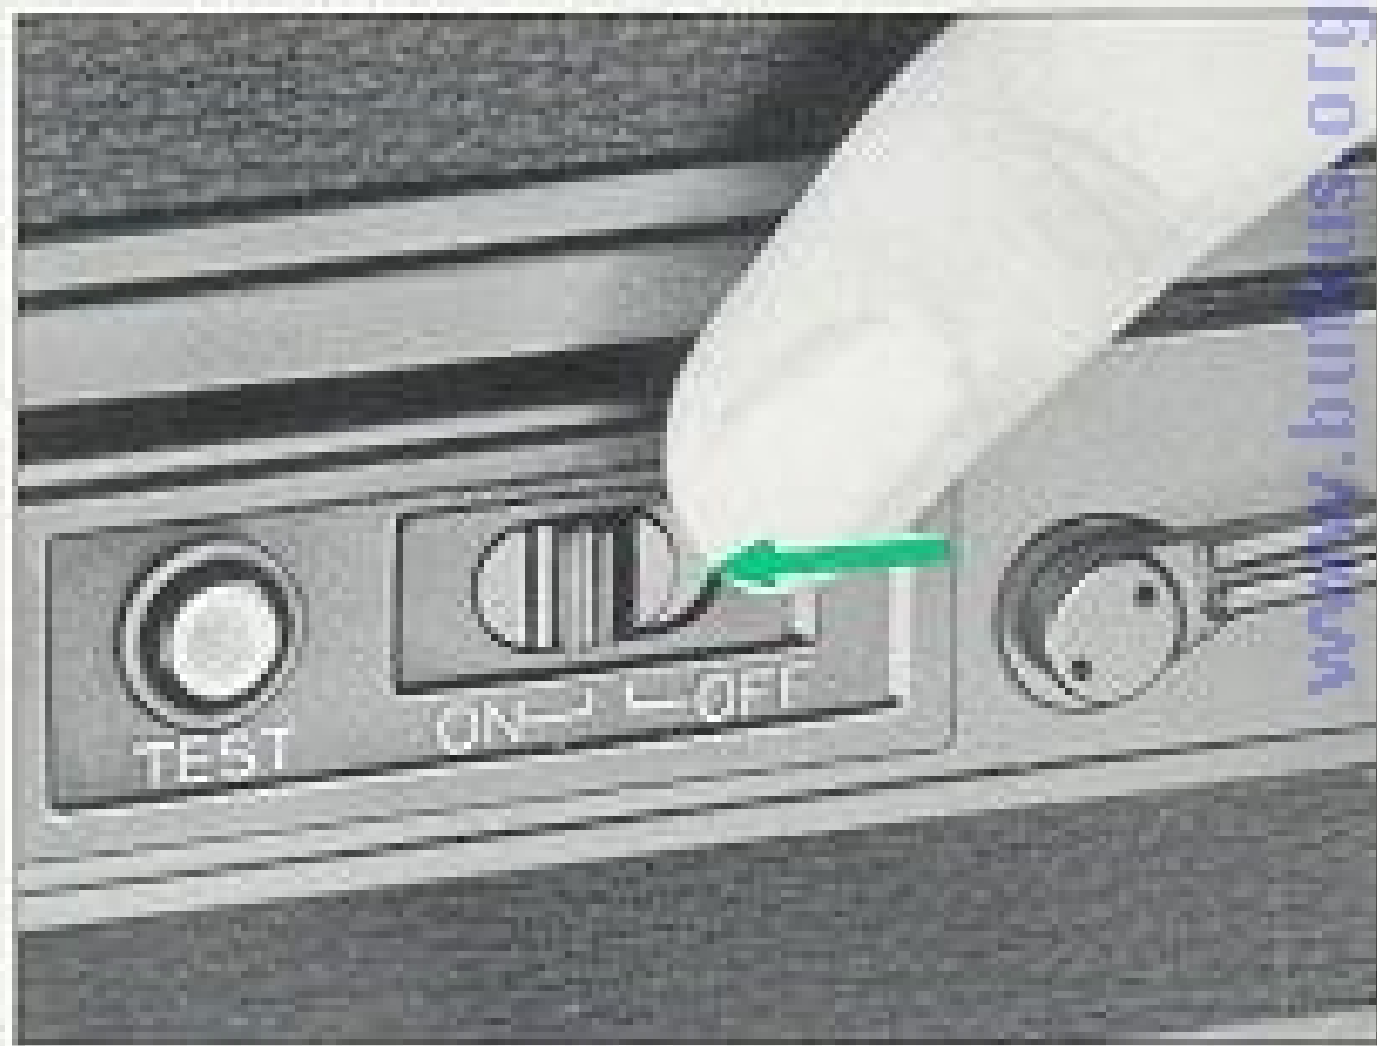 


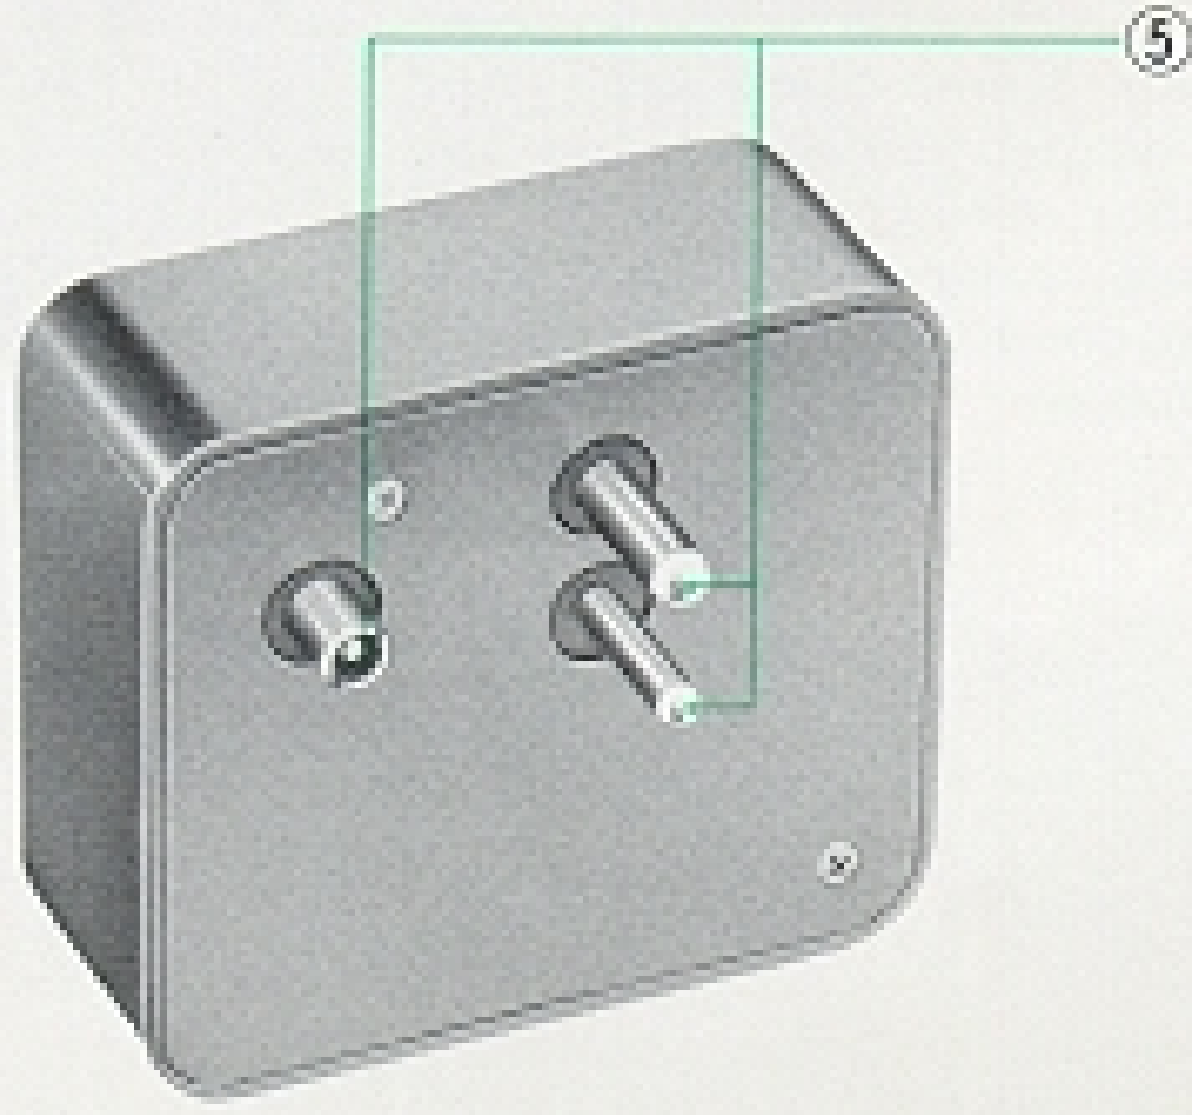 


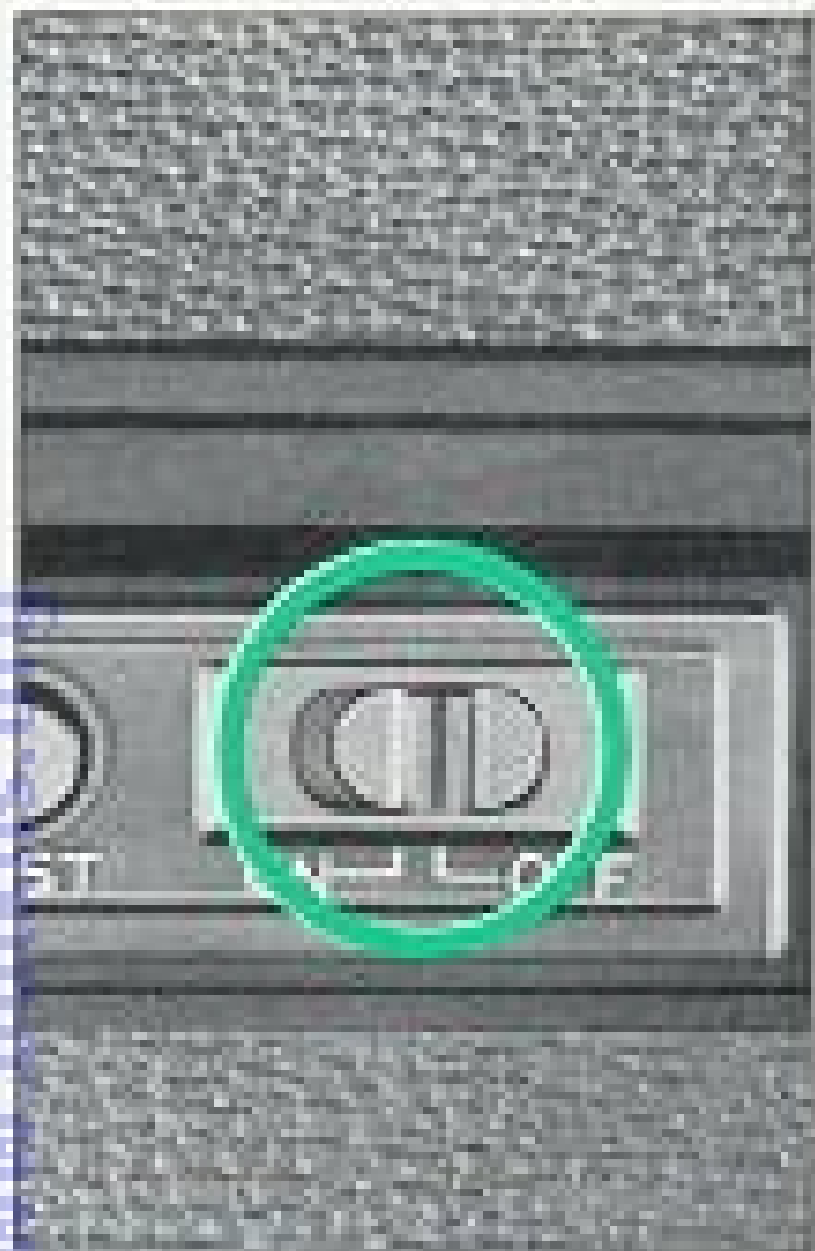 


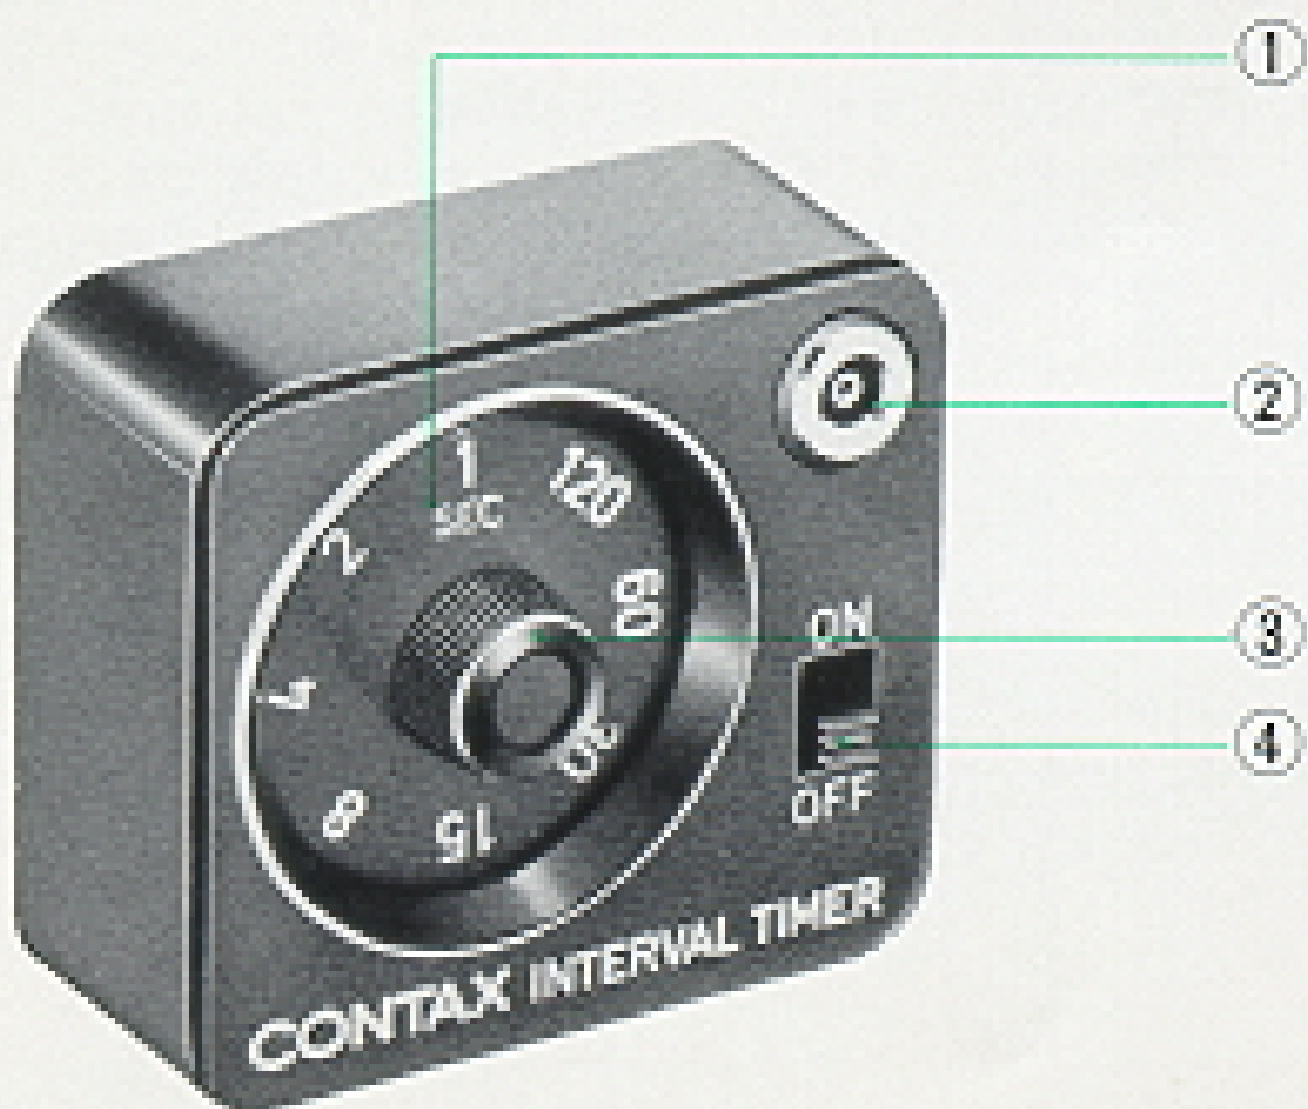

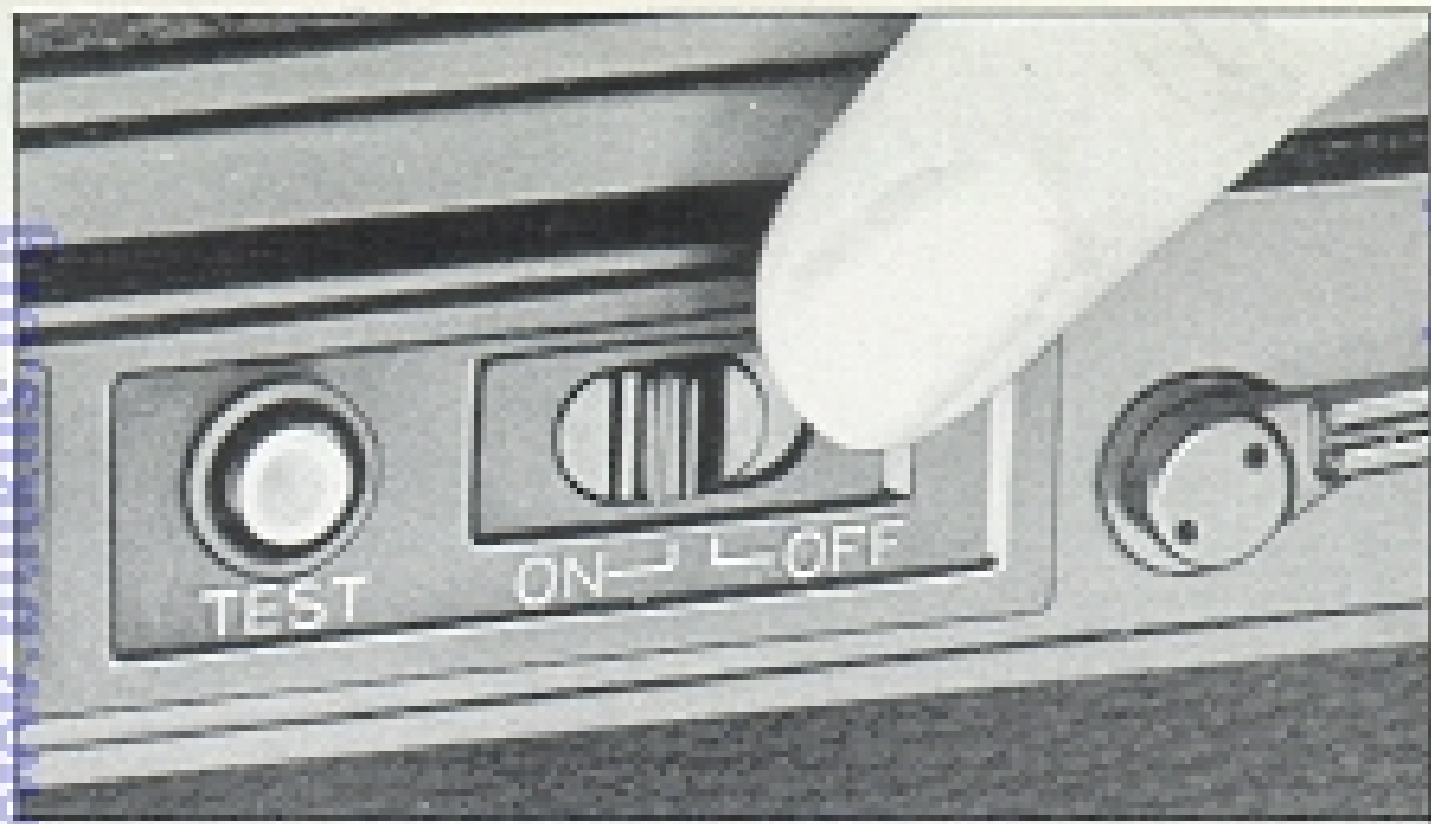 


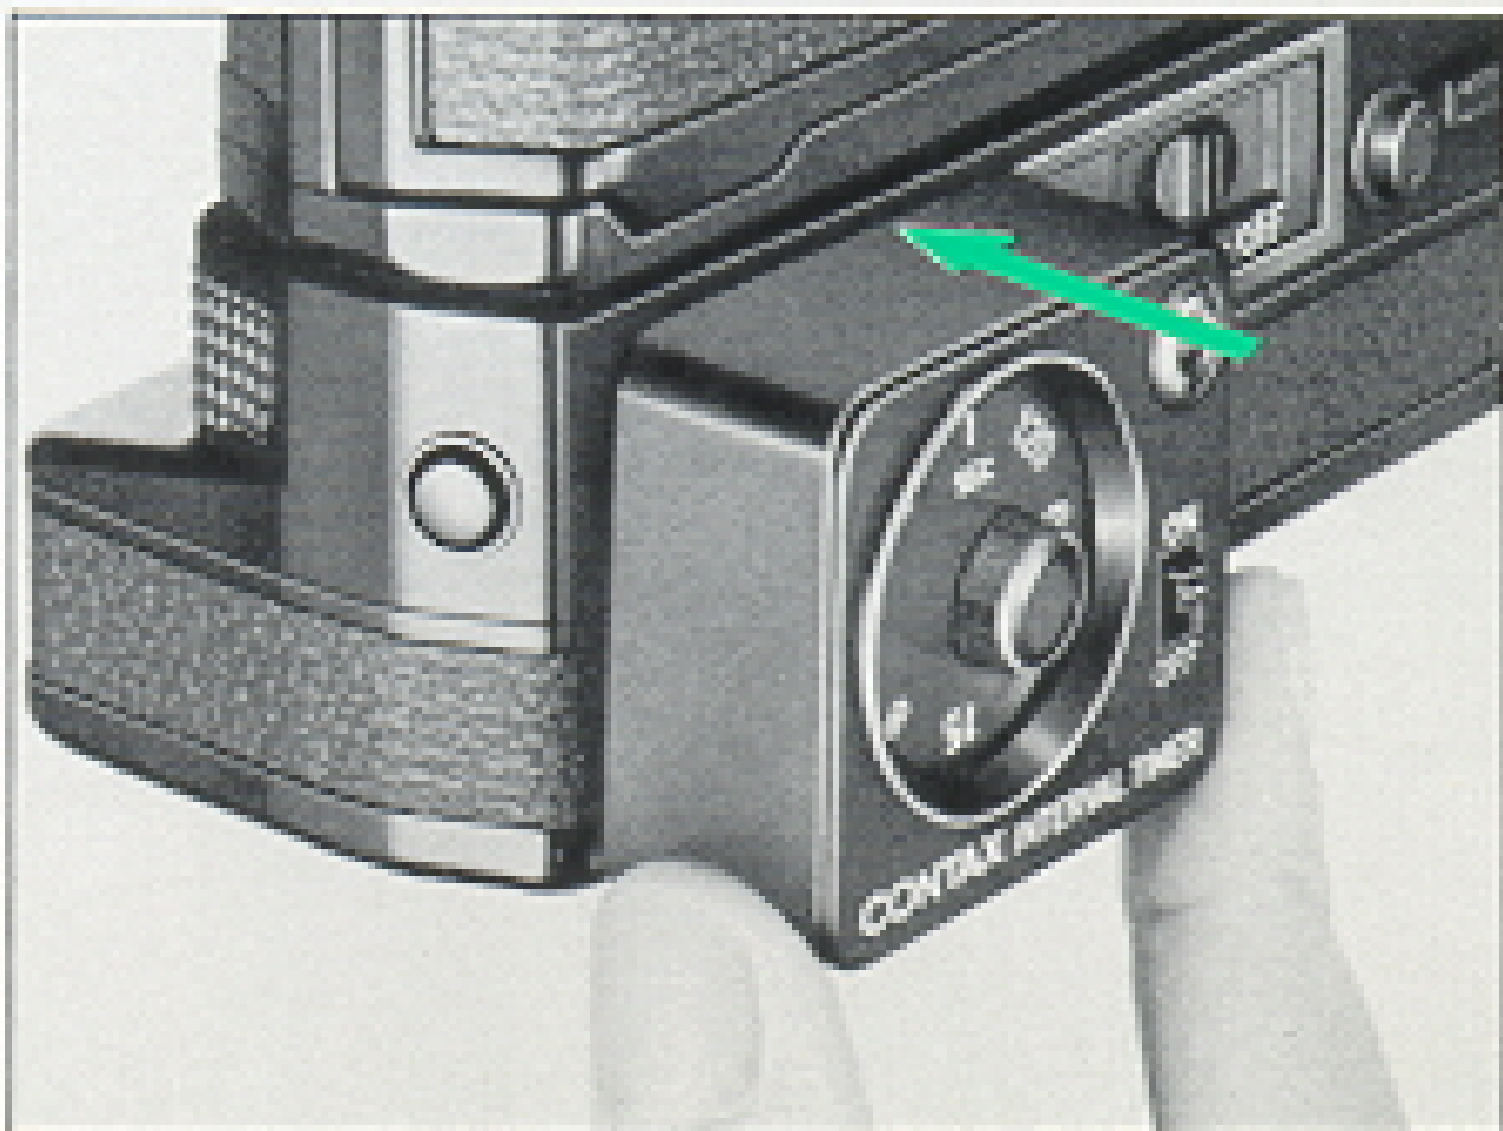

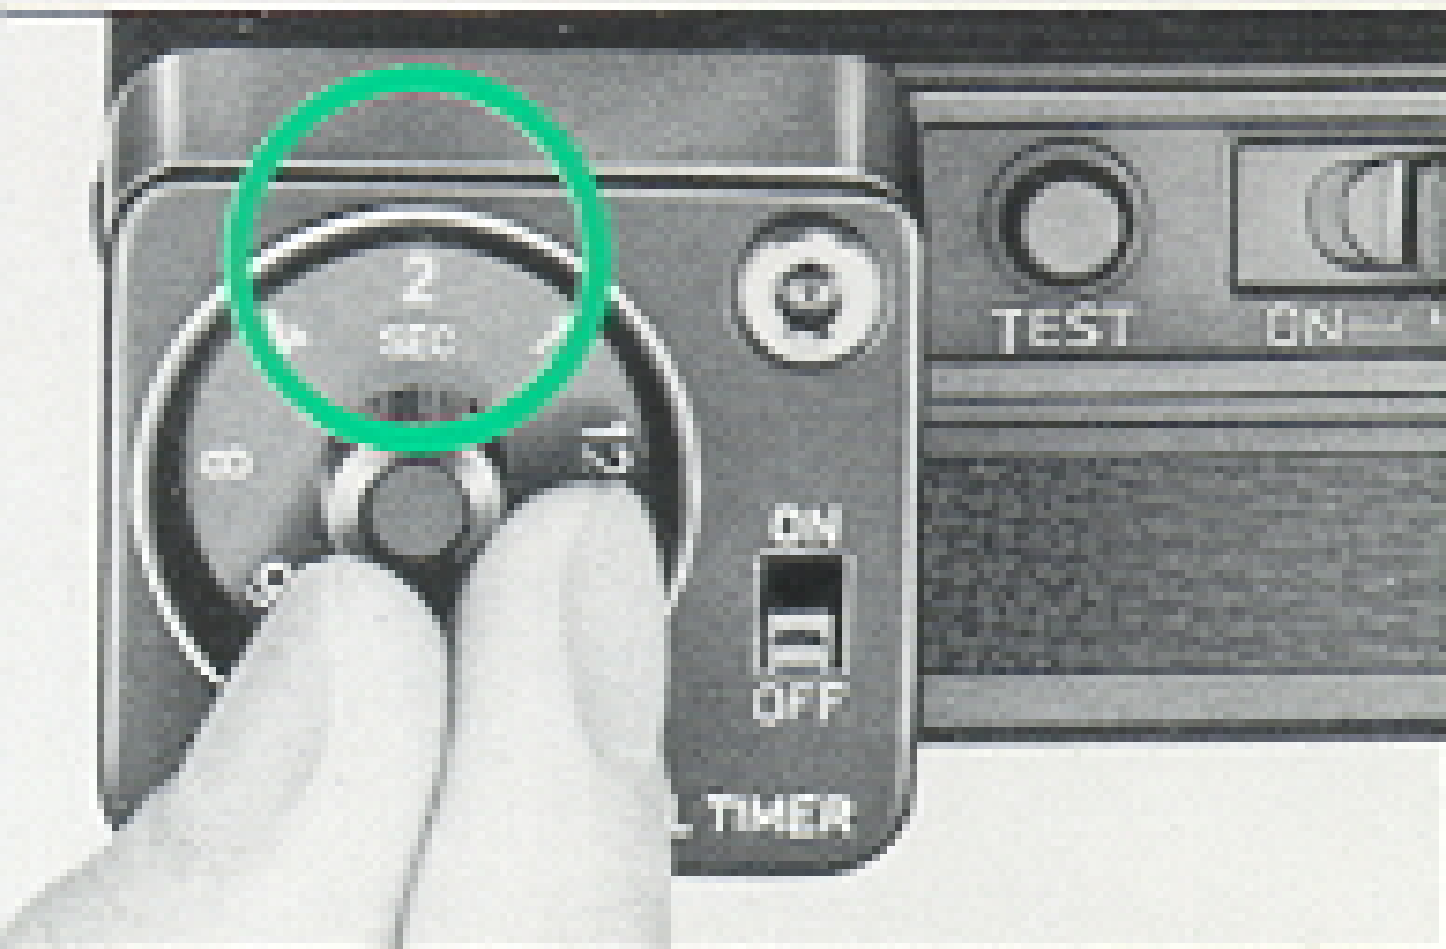

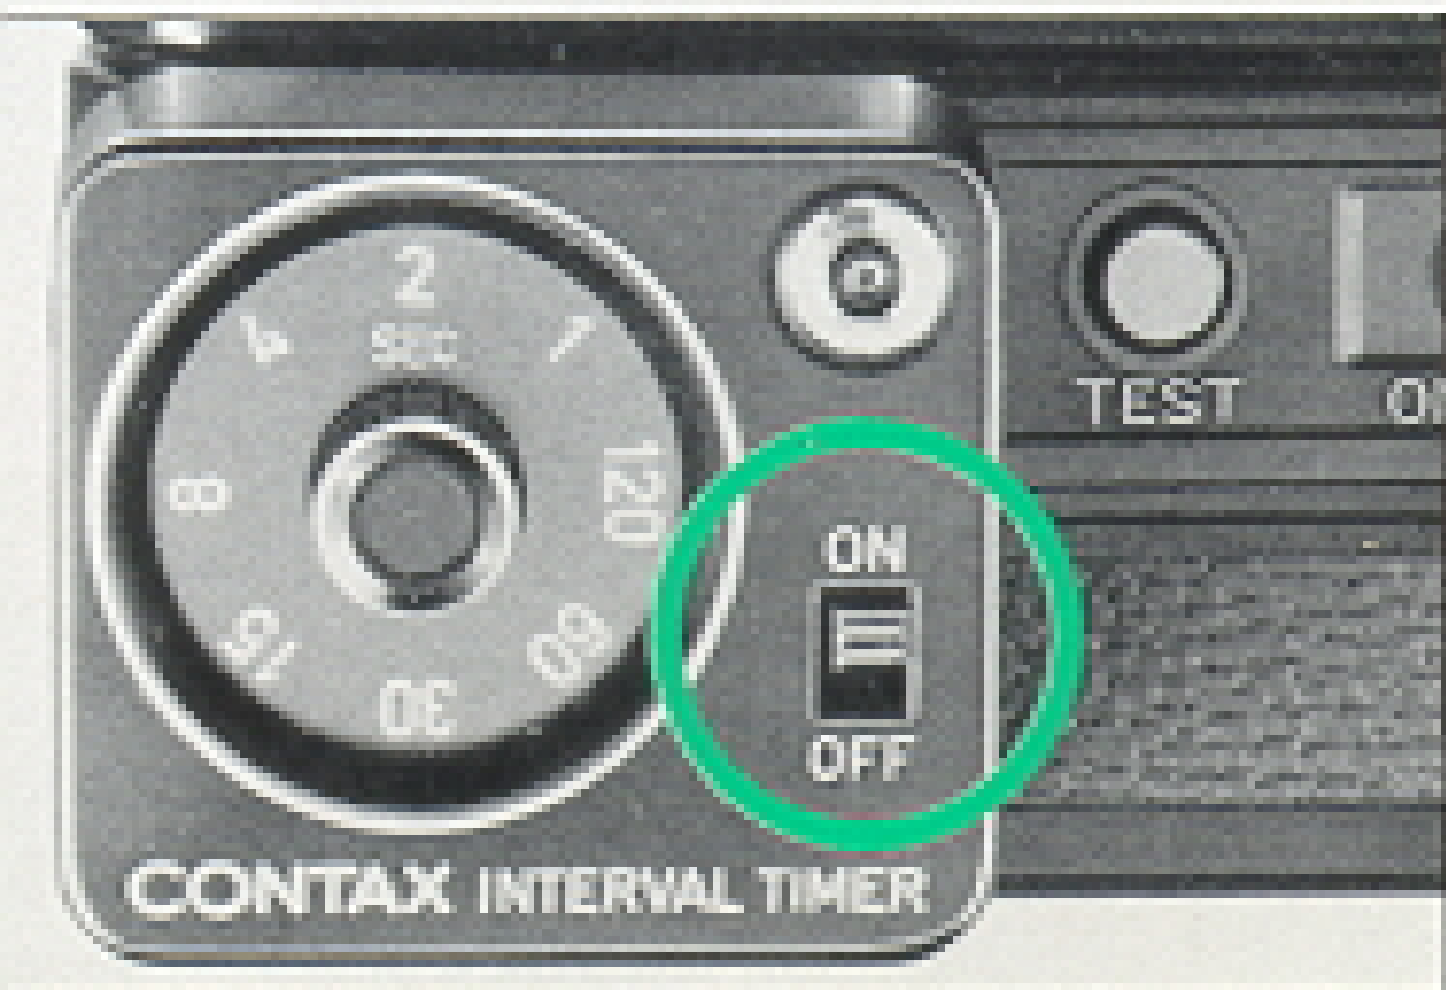




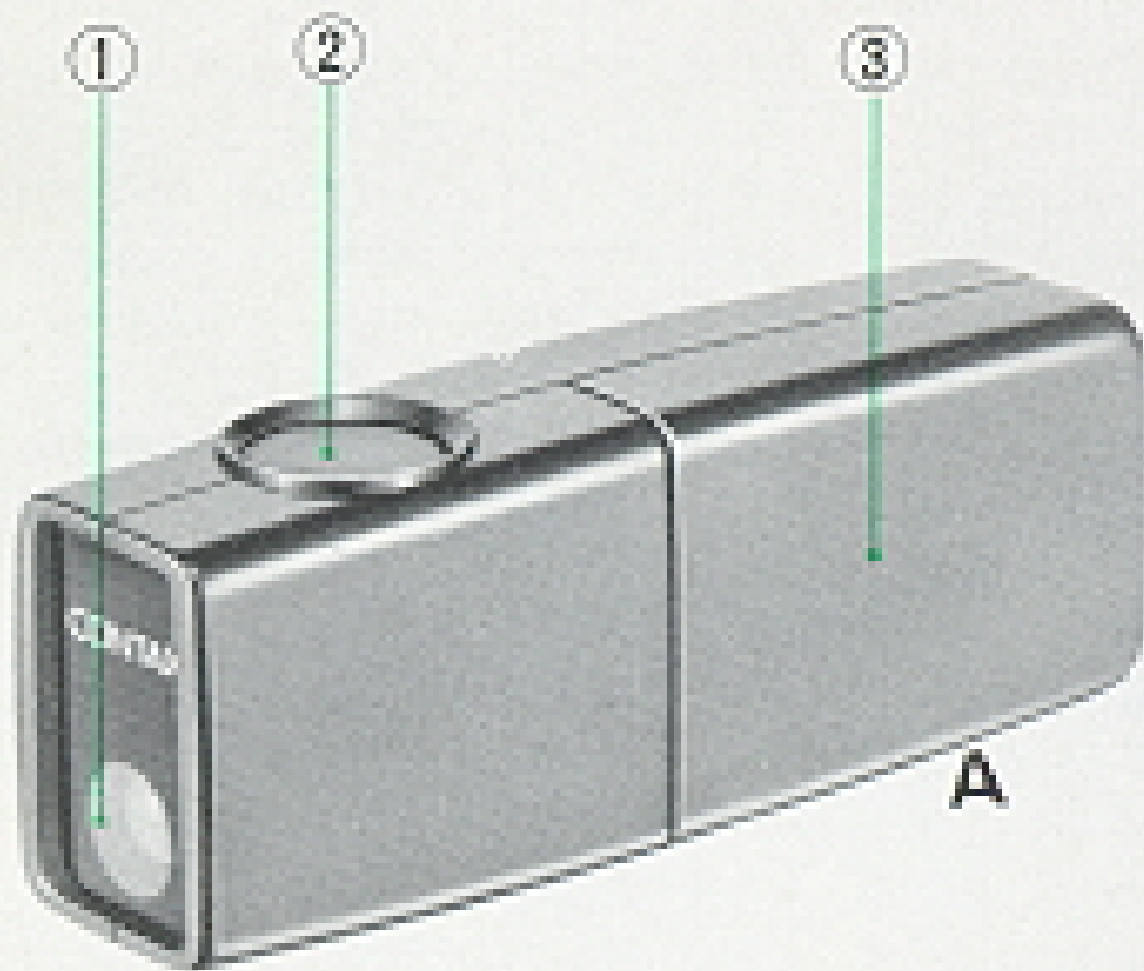

B. Receiver

 ④ Connector Cord

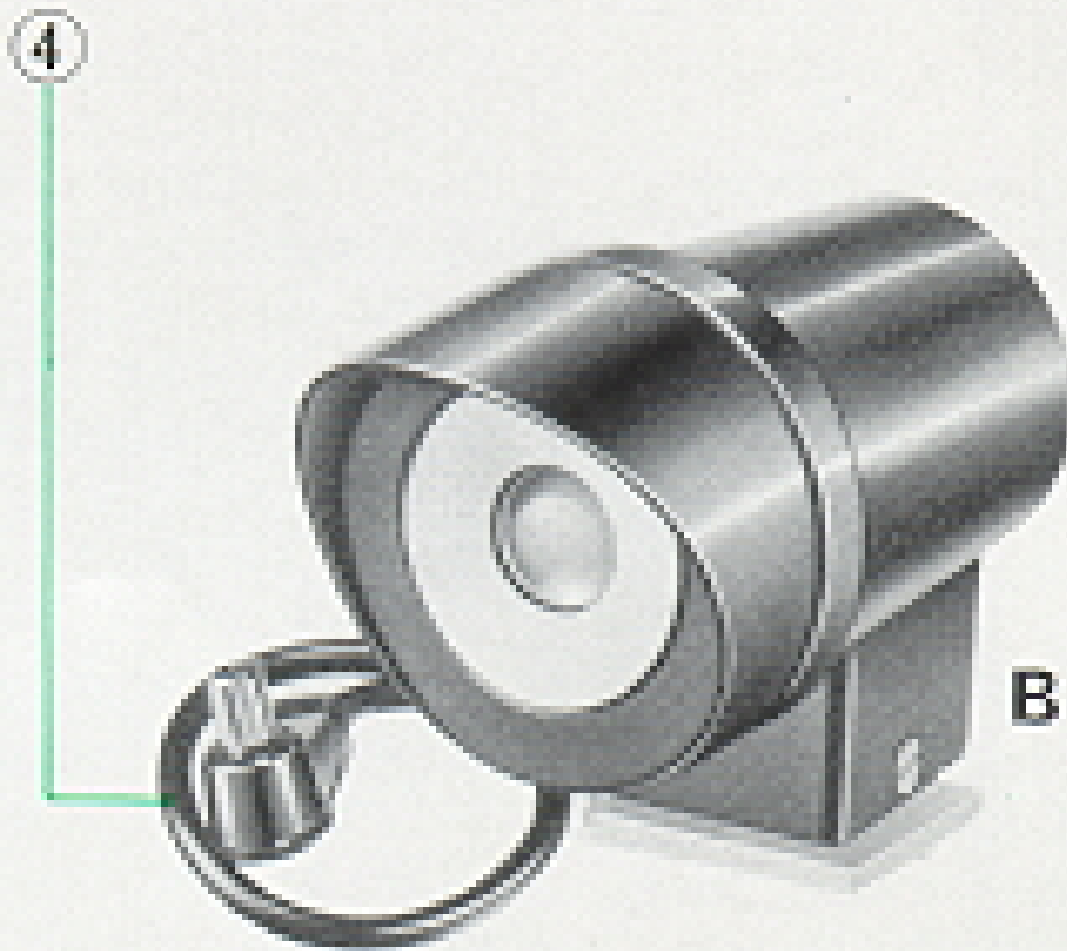

Note

