

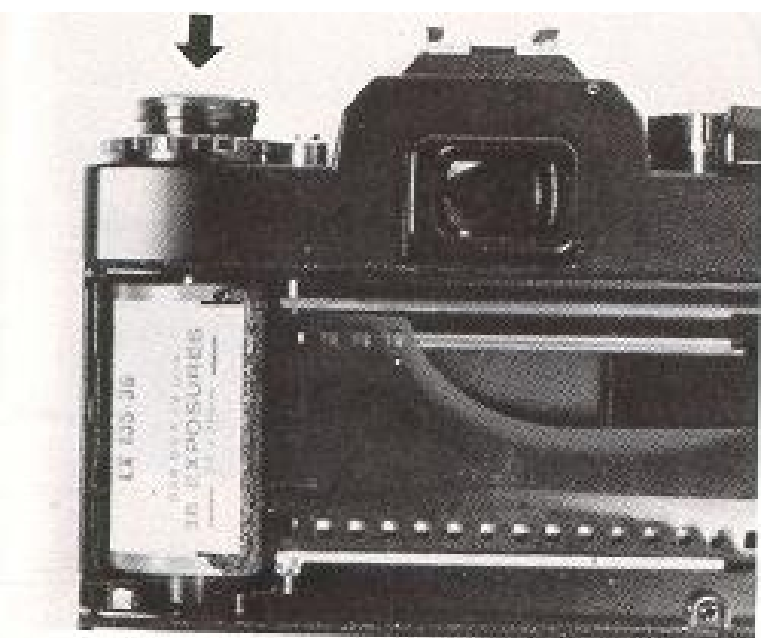


Fig. 5

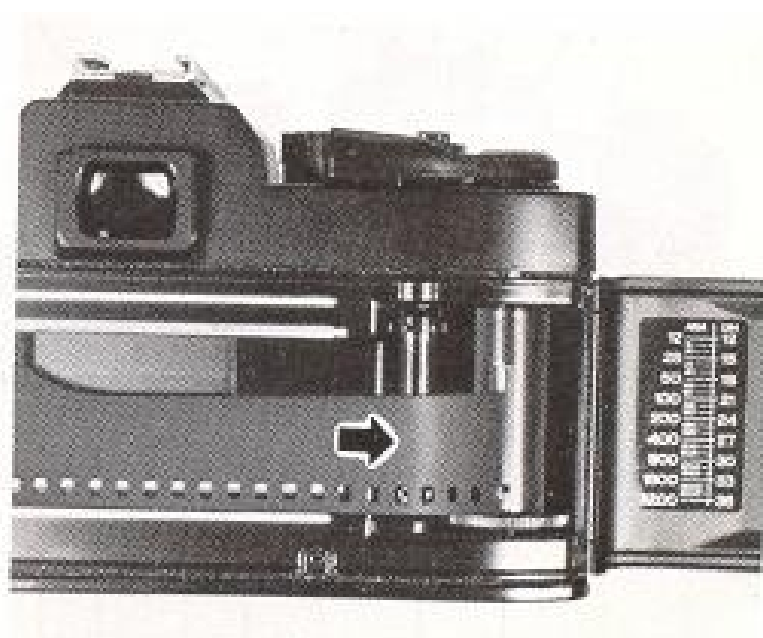


Fig. 6

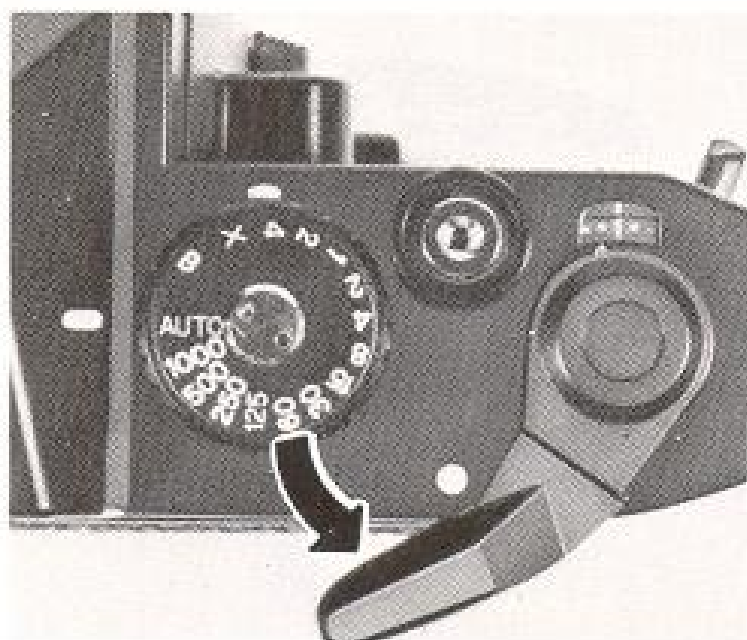


Fig. 13

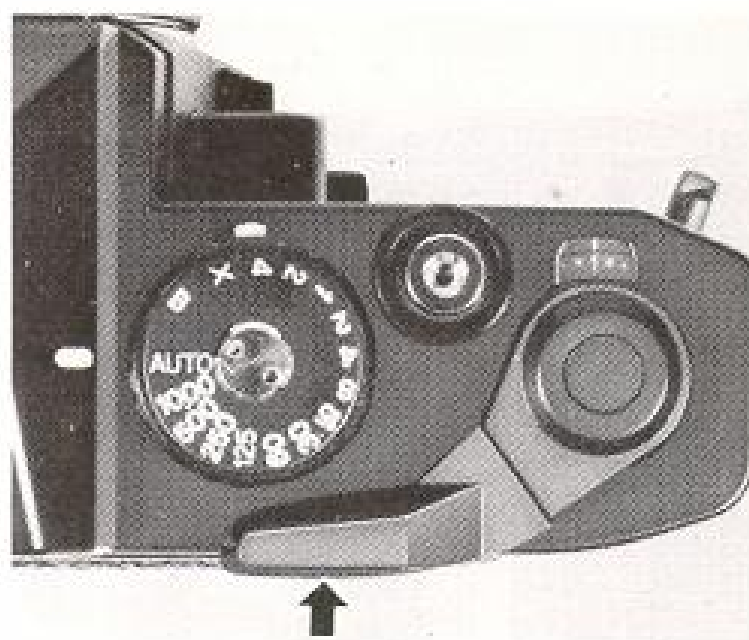


Fig. 14

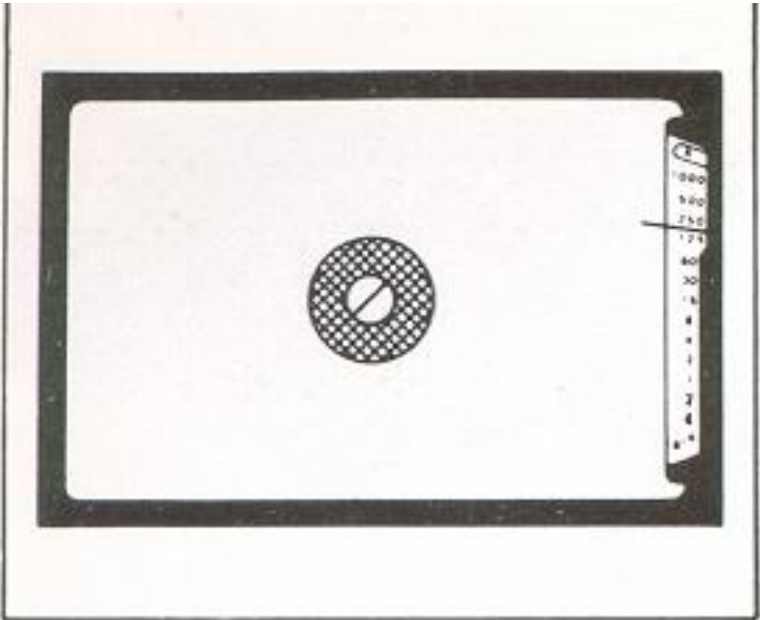


Fig. 18

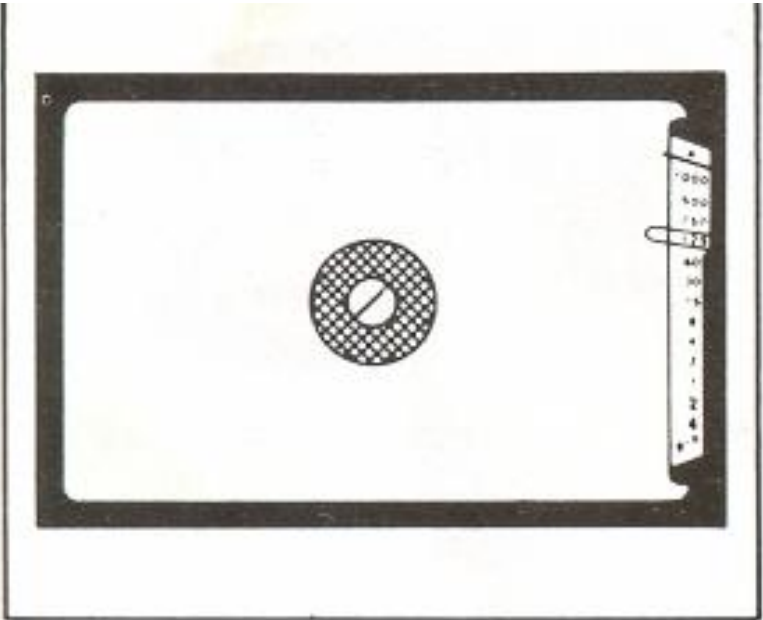


Fig. 19

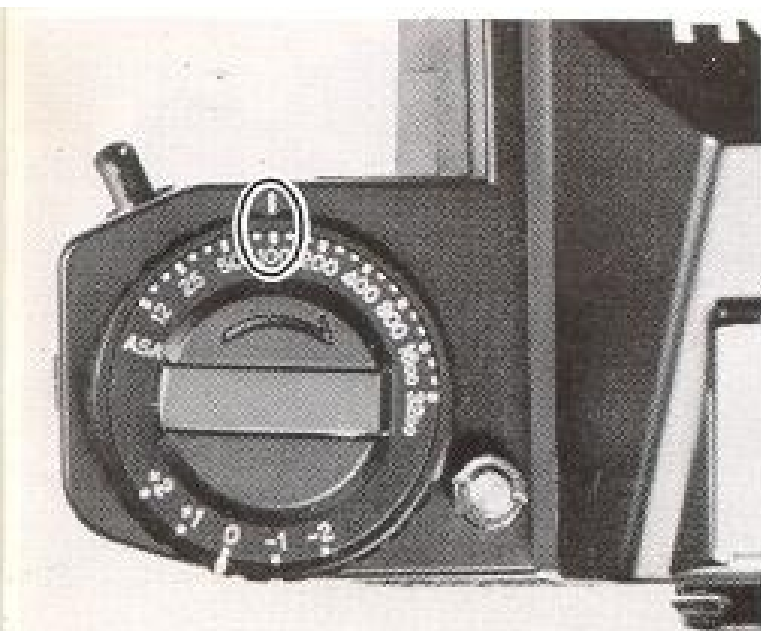


Fig. 11

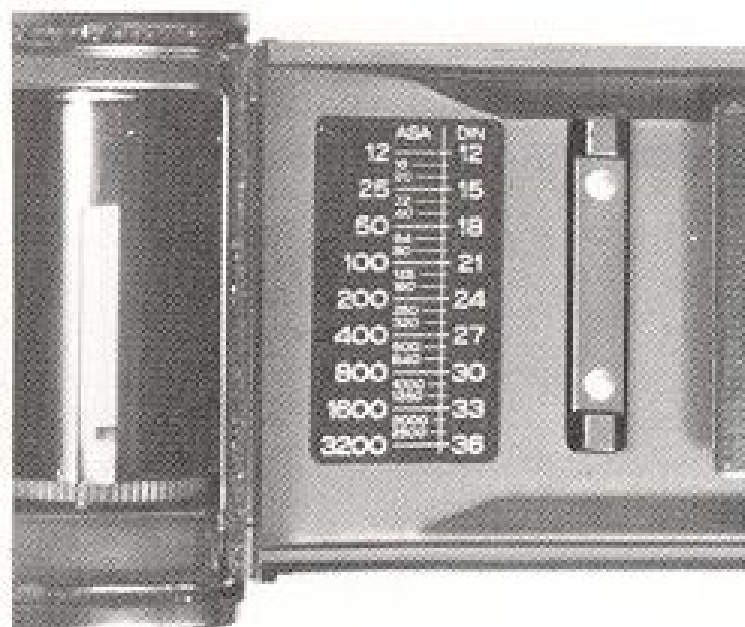


Fig. 12



Fig. 23

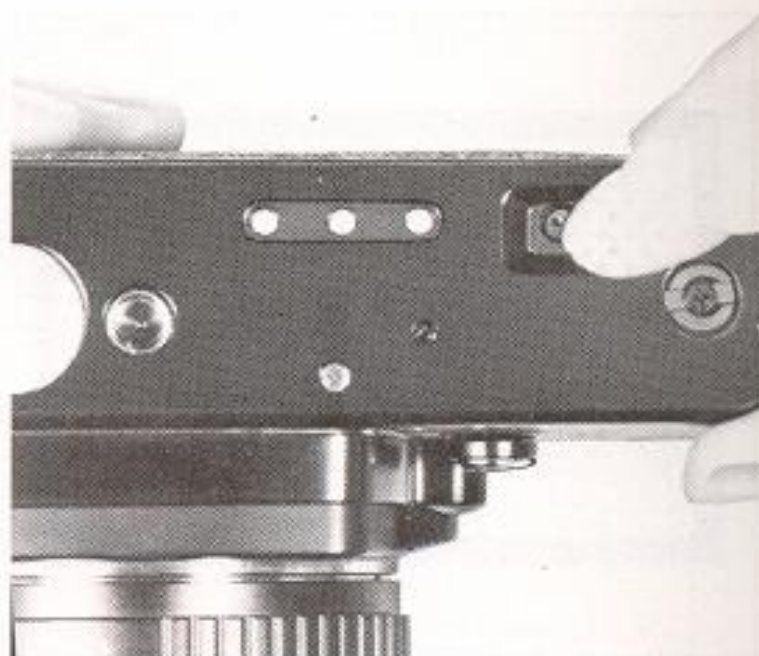


Fig. 25



Fig. 16



Fig. 17

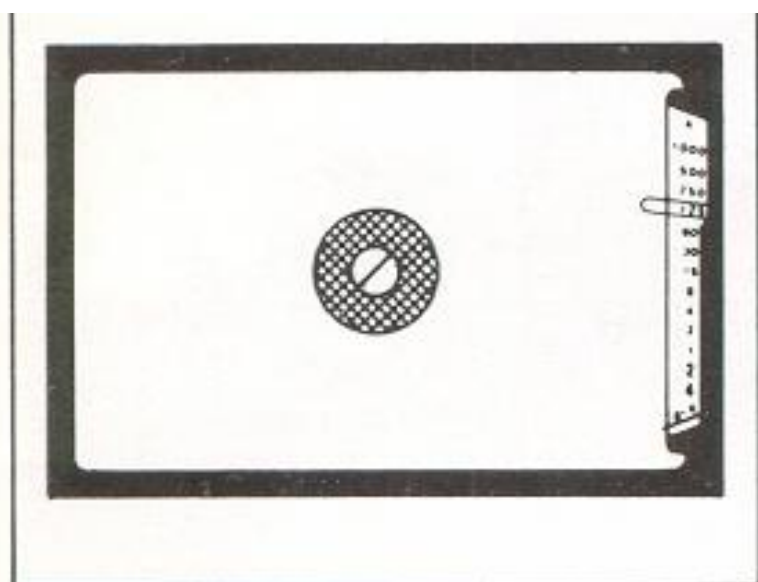


Fig. 20

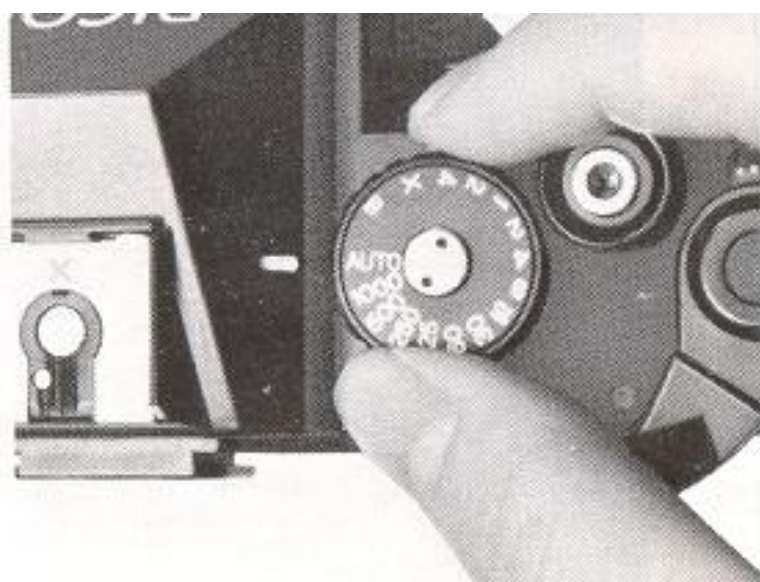


Fig. 21


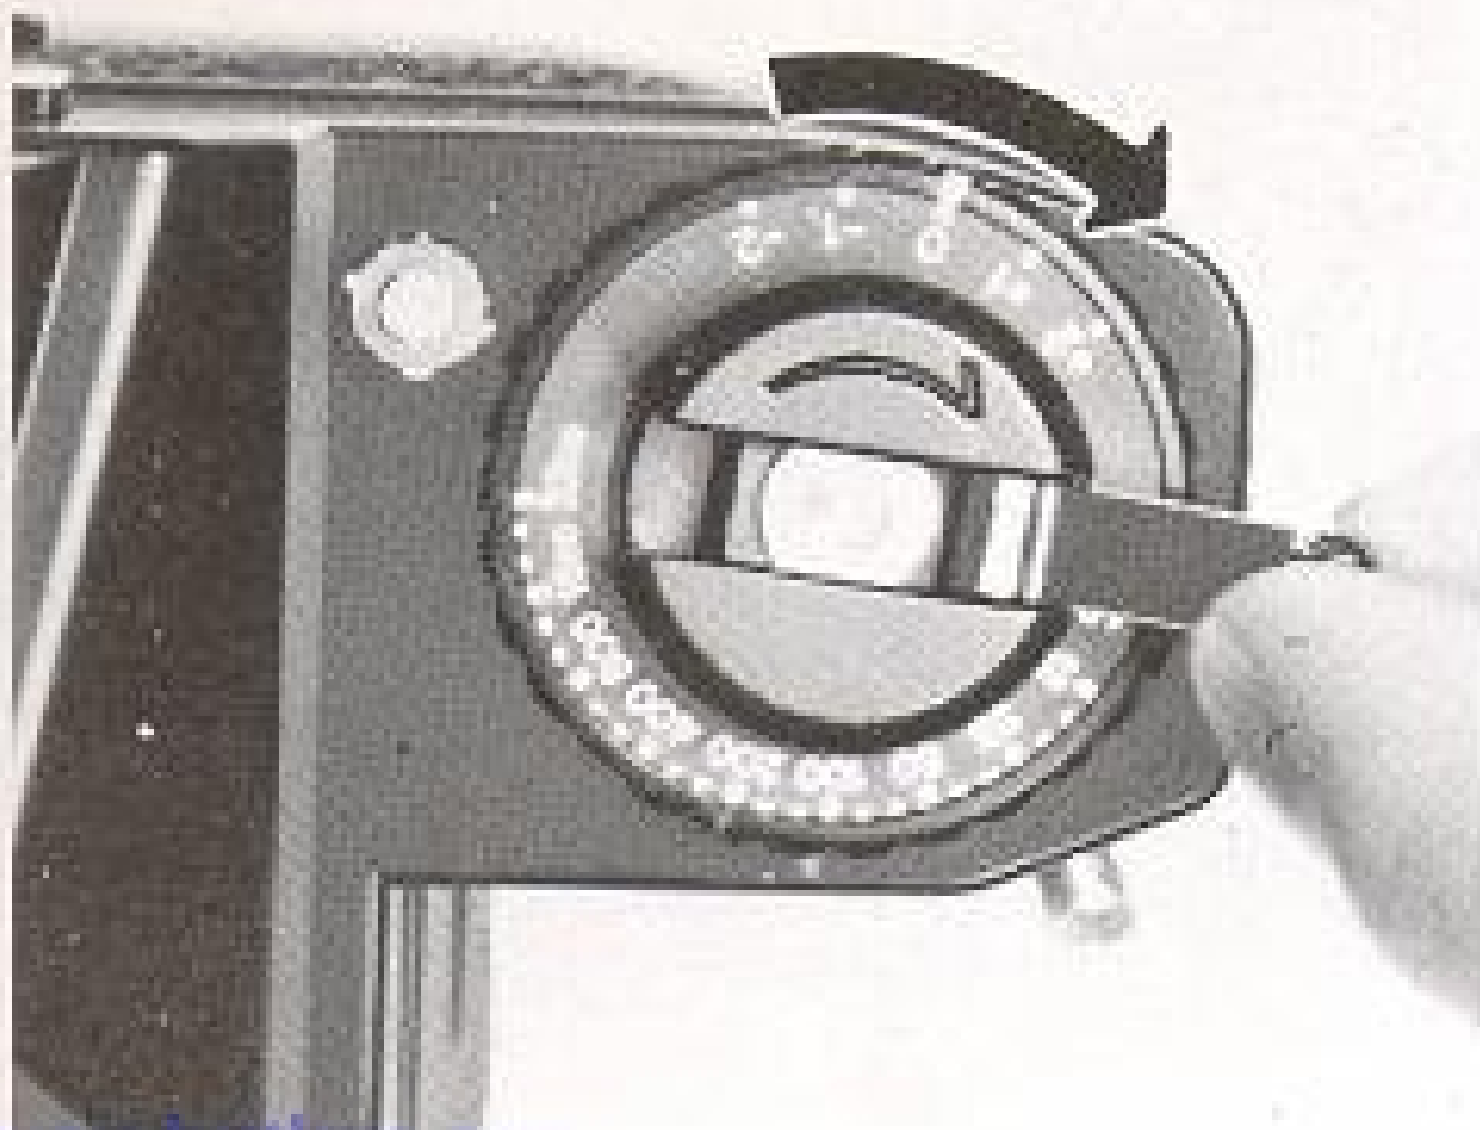


Fig. 26

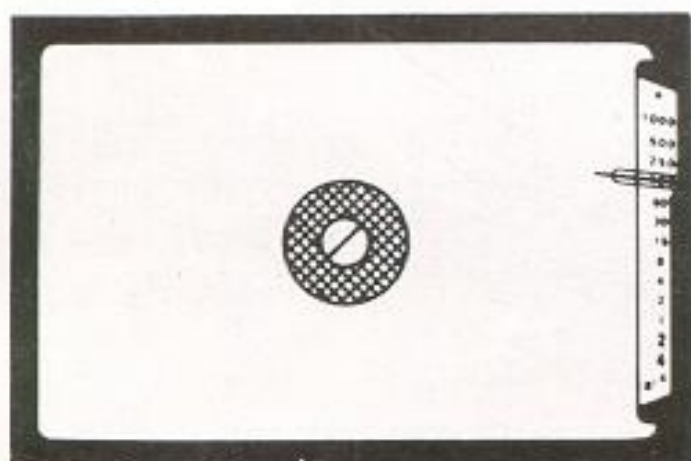

Correct exposure
Exposition correcte
Richtige Belichtung
Exposición correcta

Fig. 22



Infocus
Image precise
Richtig
Enfocado



Out of focus
Image brouillée
Falsch
Fuera de foco

Fig. 24

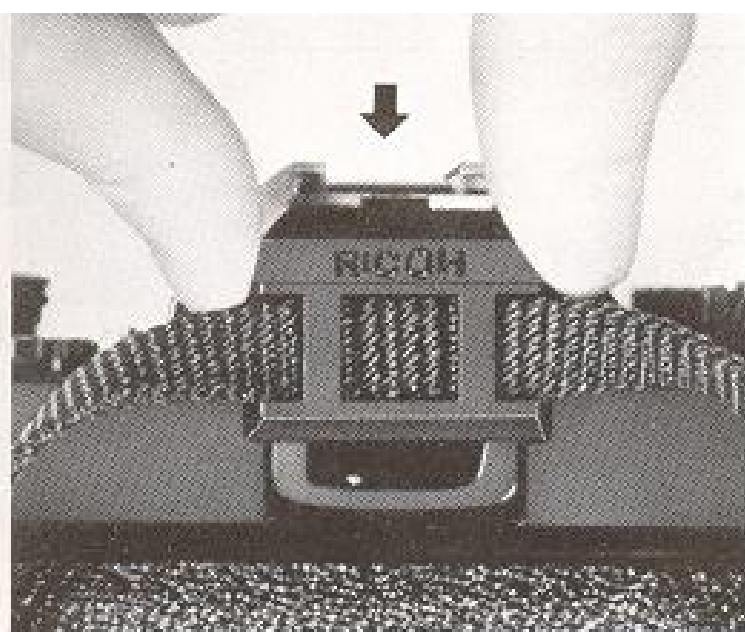


Fig. 27



Fig. 28



Fig. 29

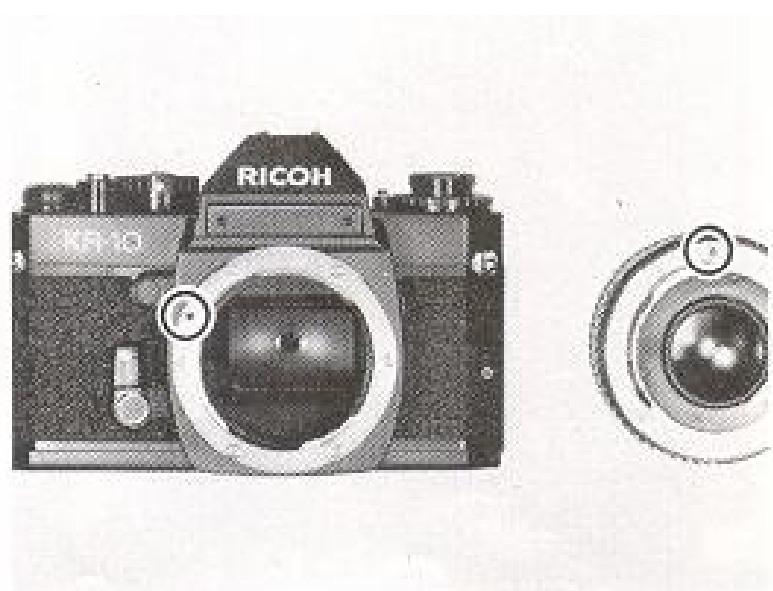


Fig. 30



Fig. 33





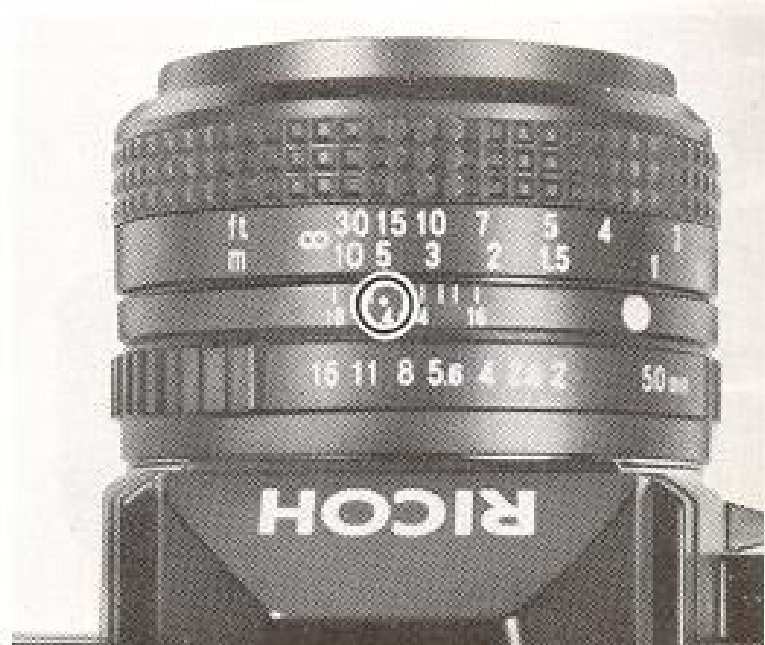


Fig. 34

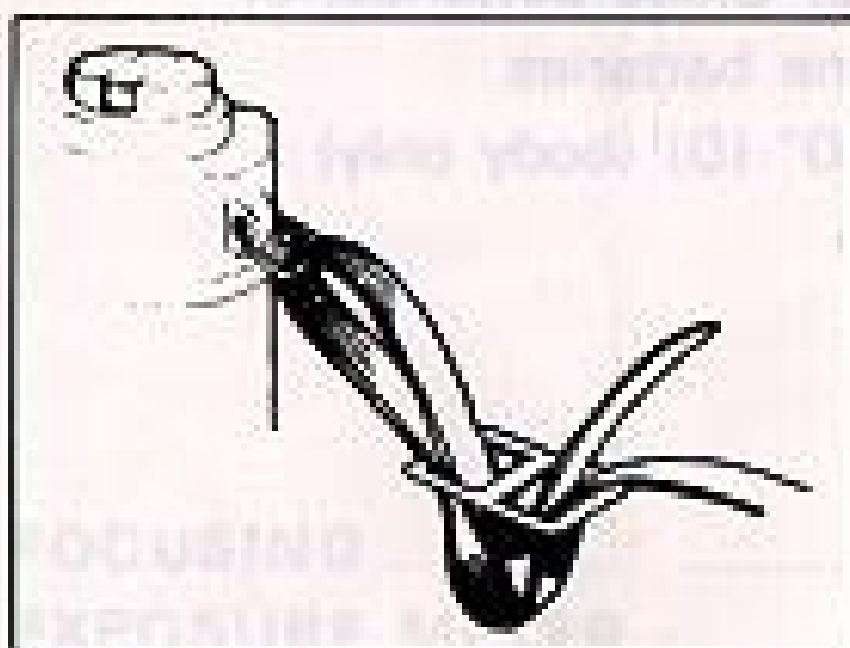

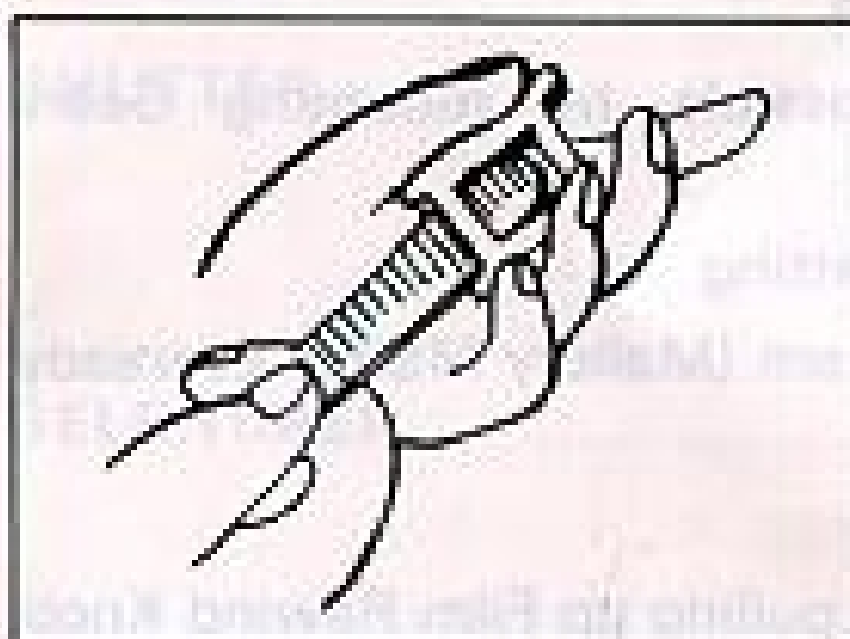

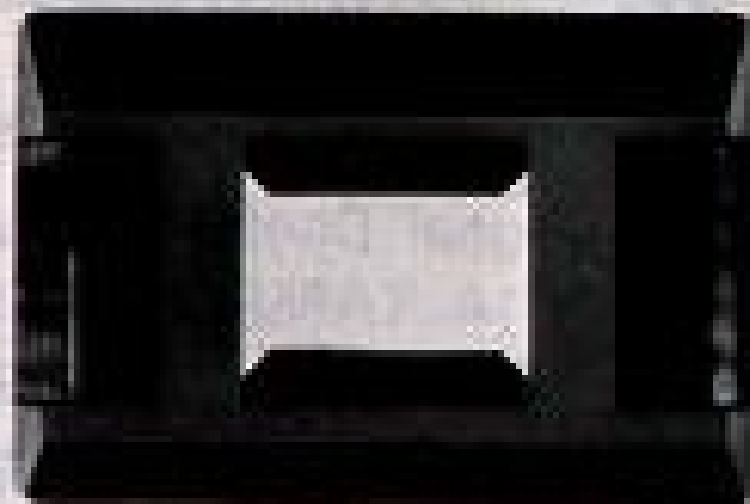

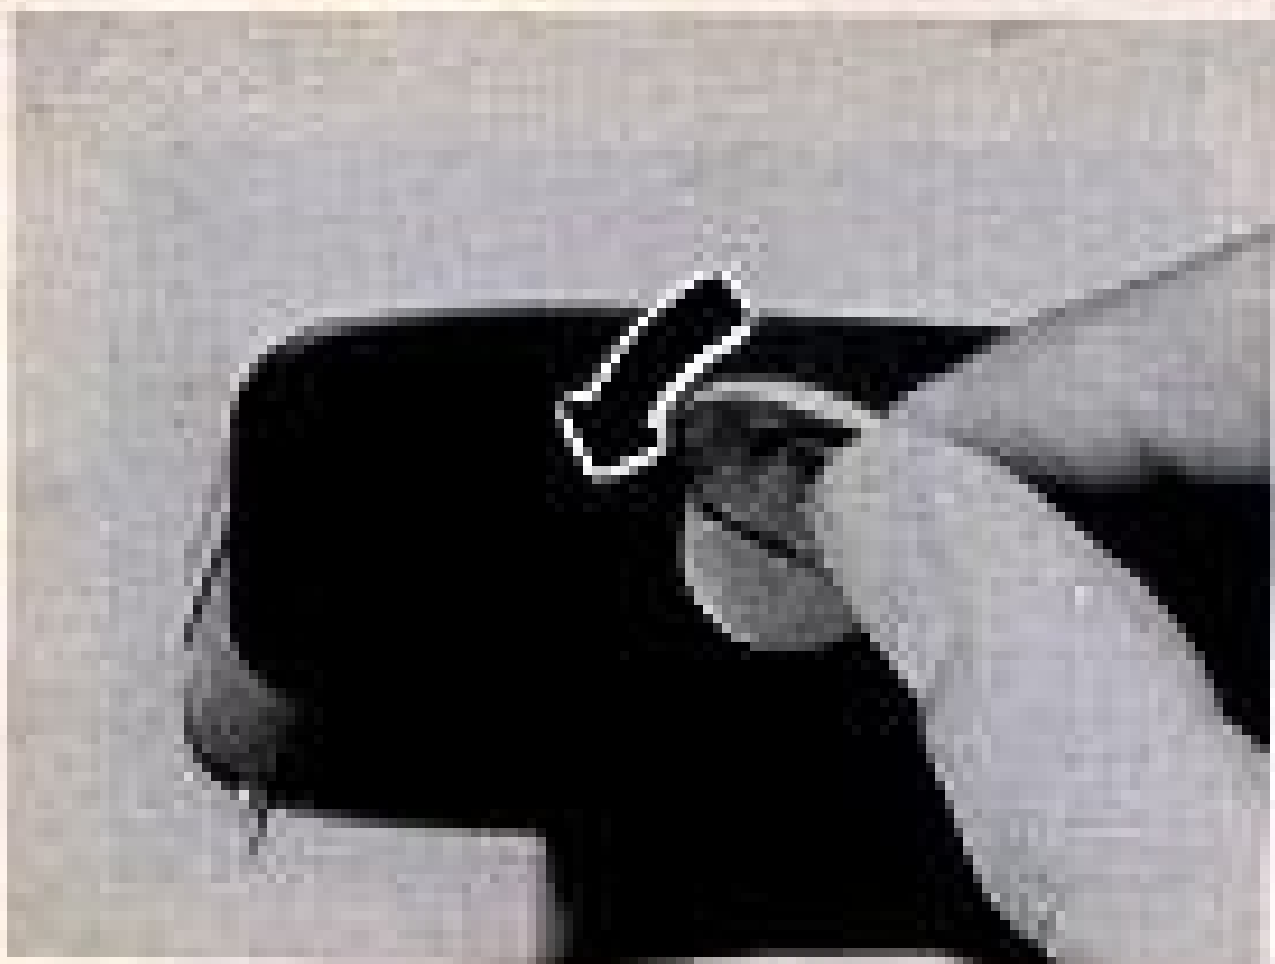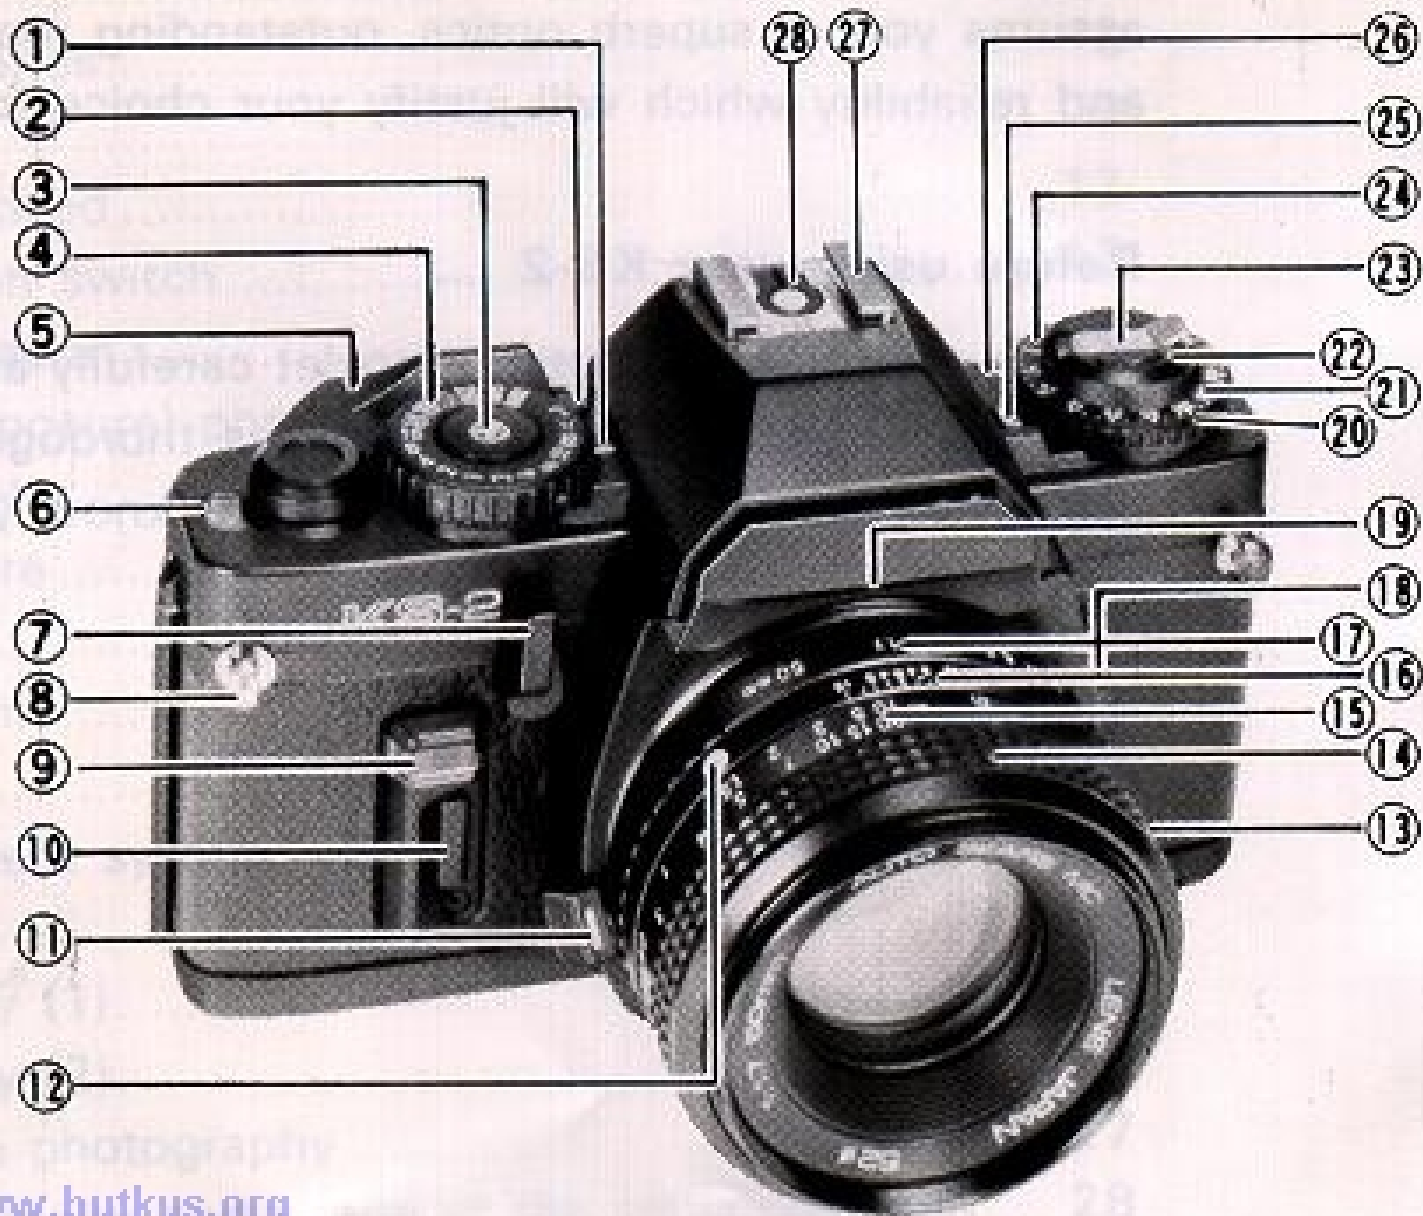 




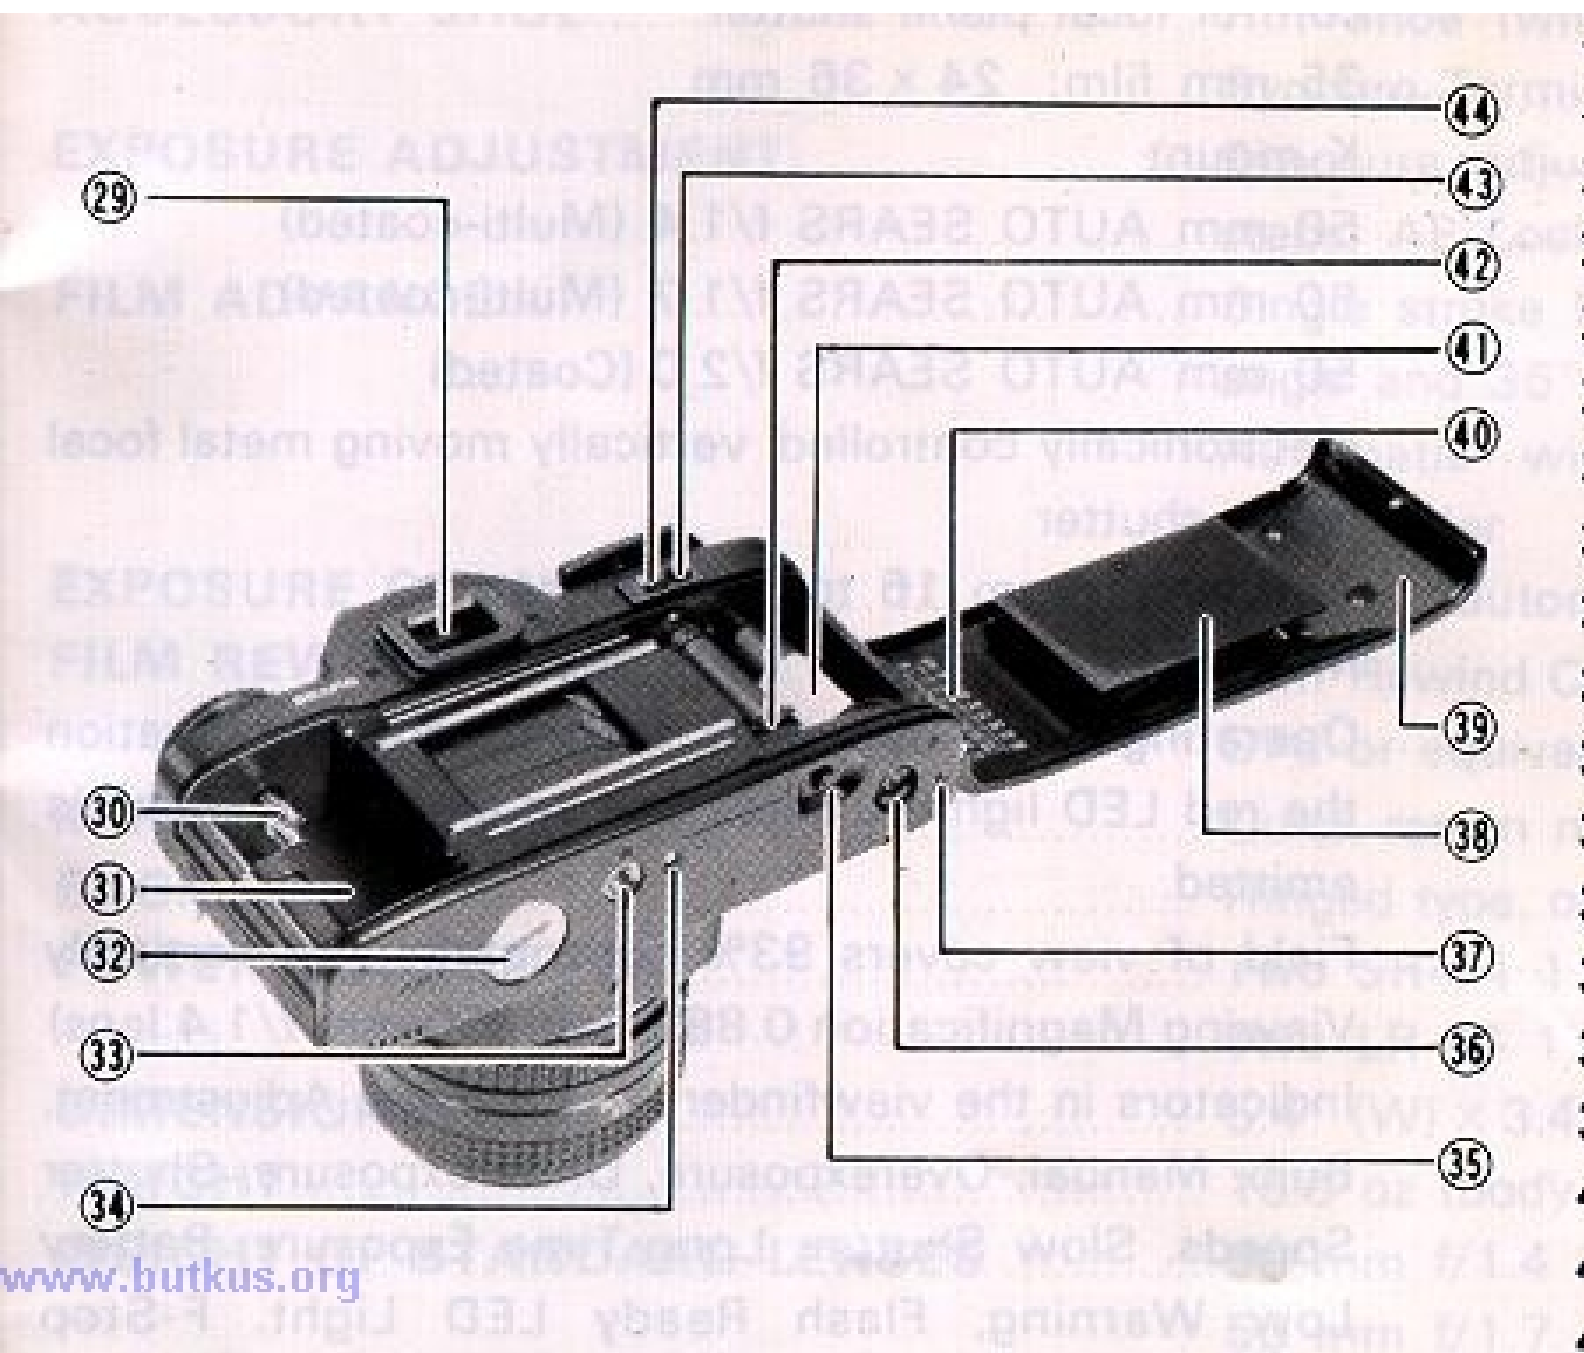 
www.butkus.org
Fig. 31

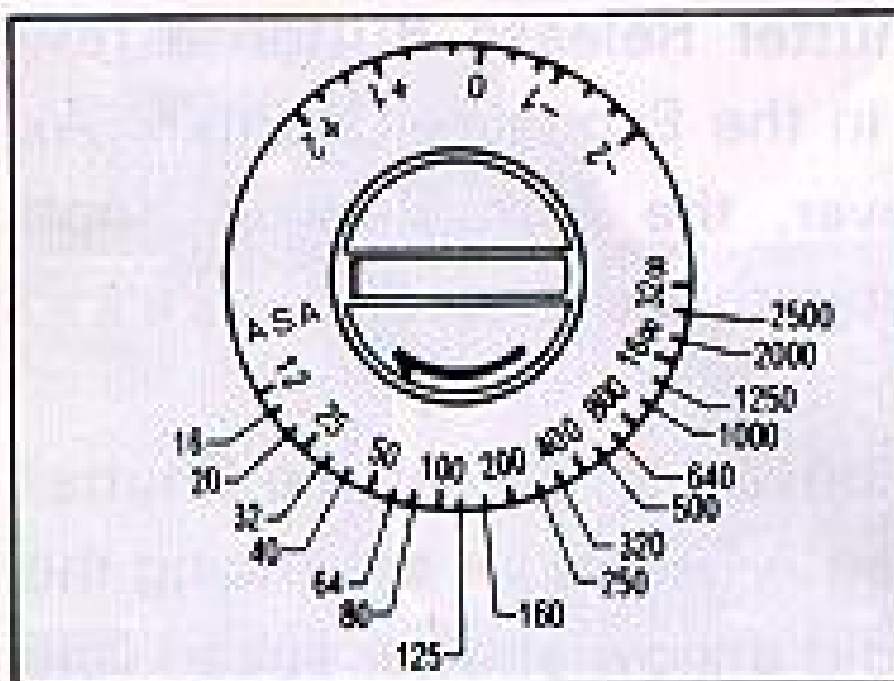


Fig. 32





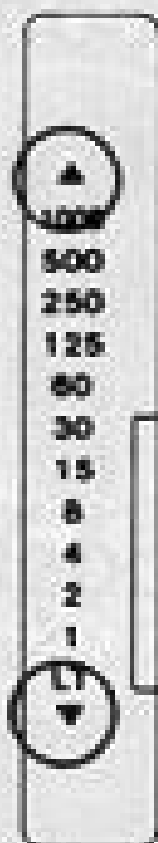
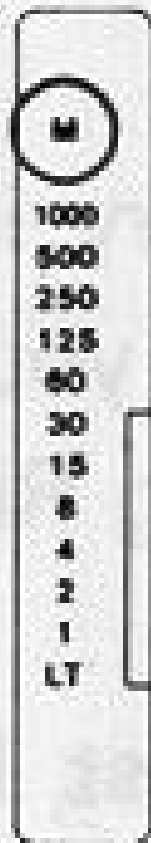












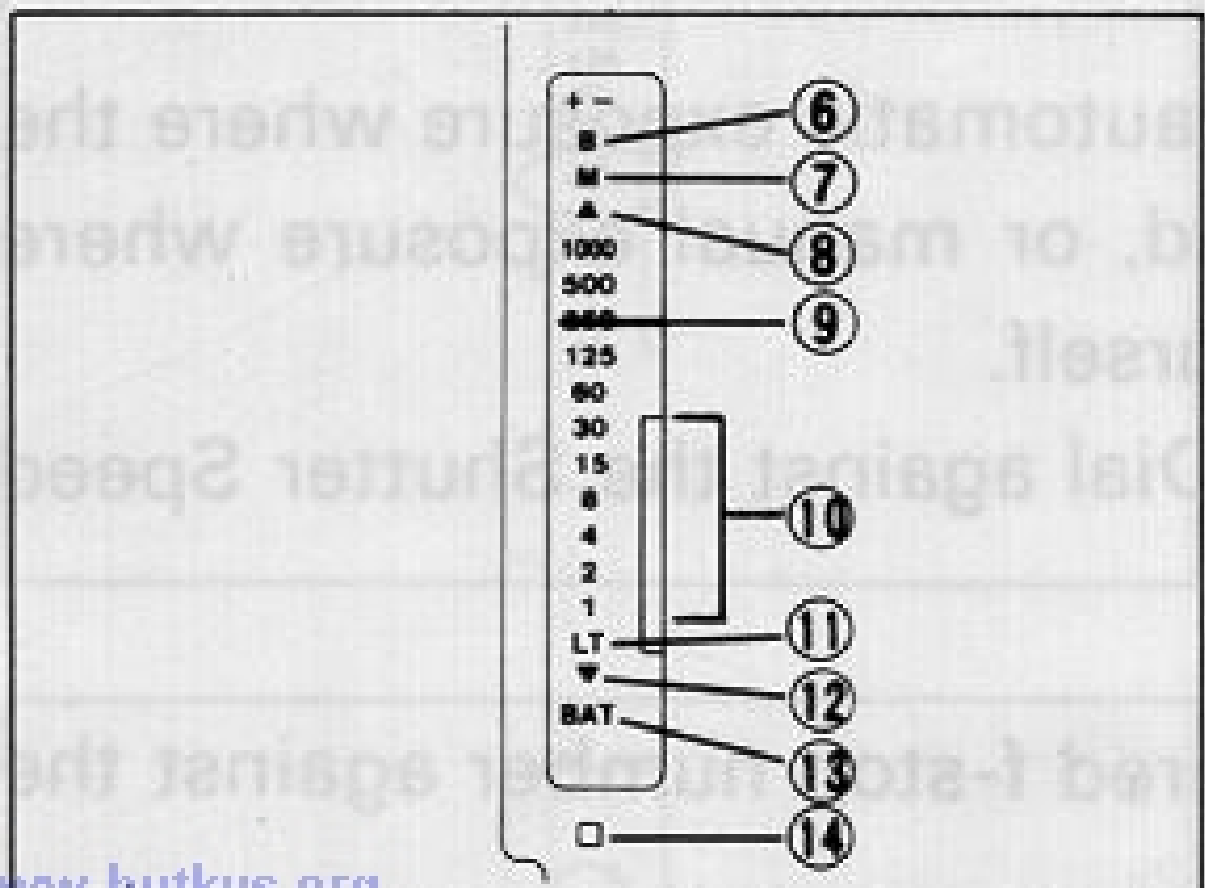
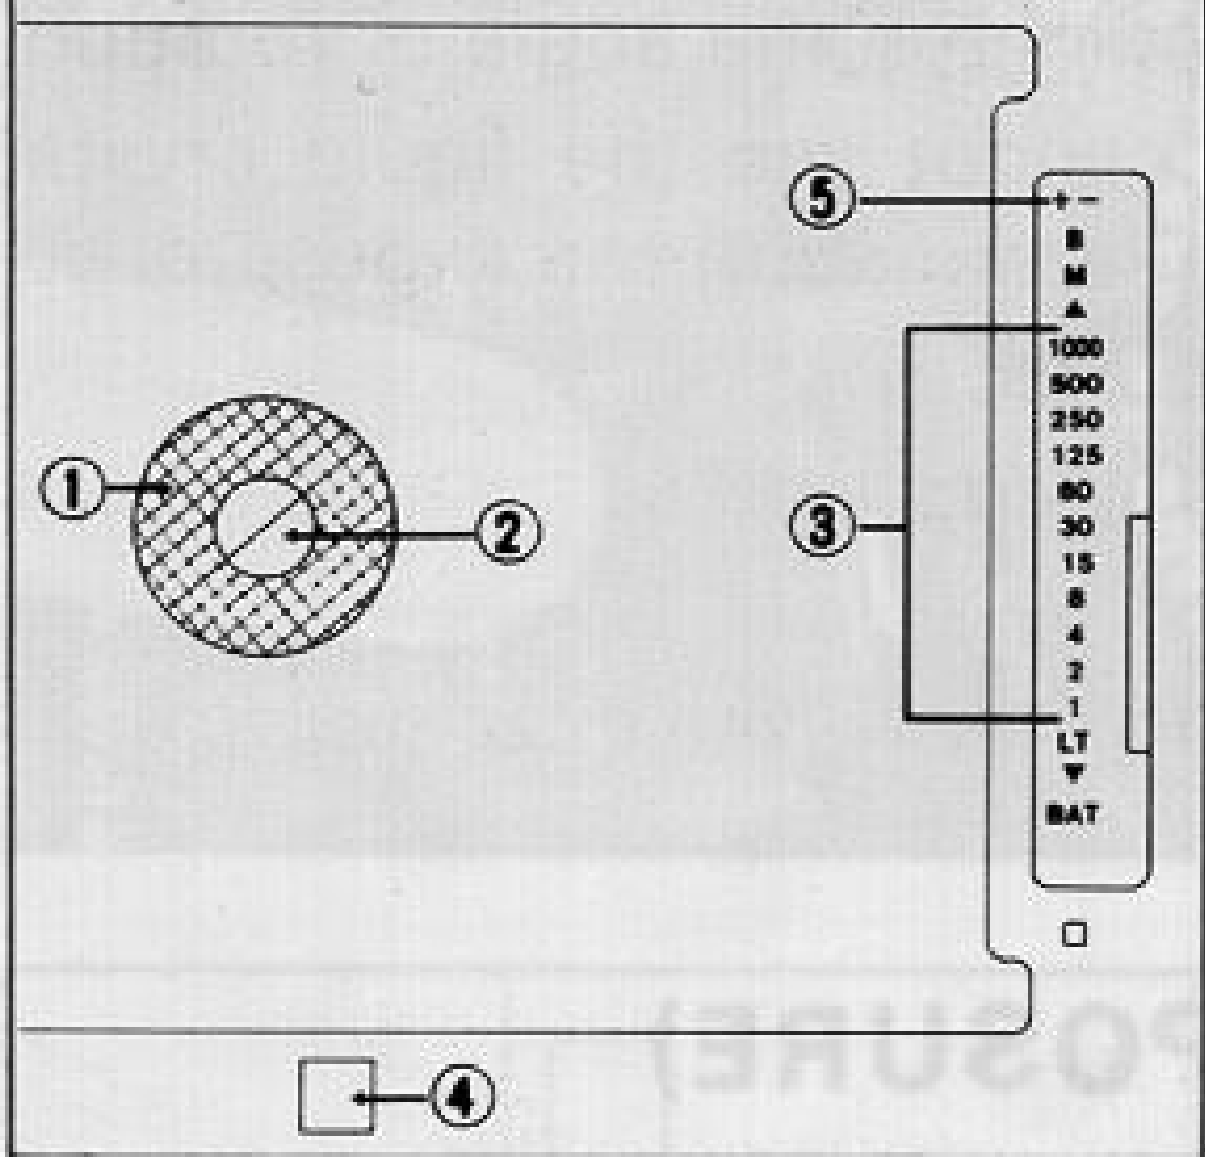
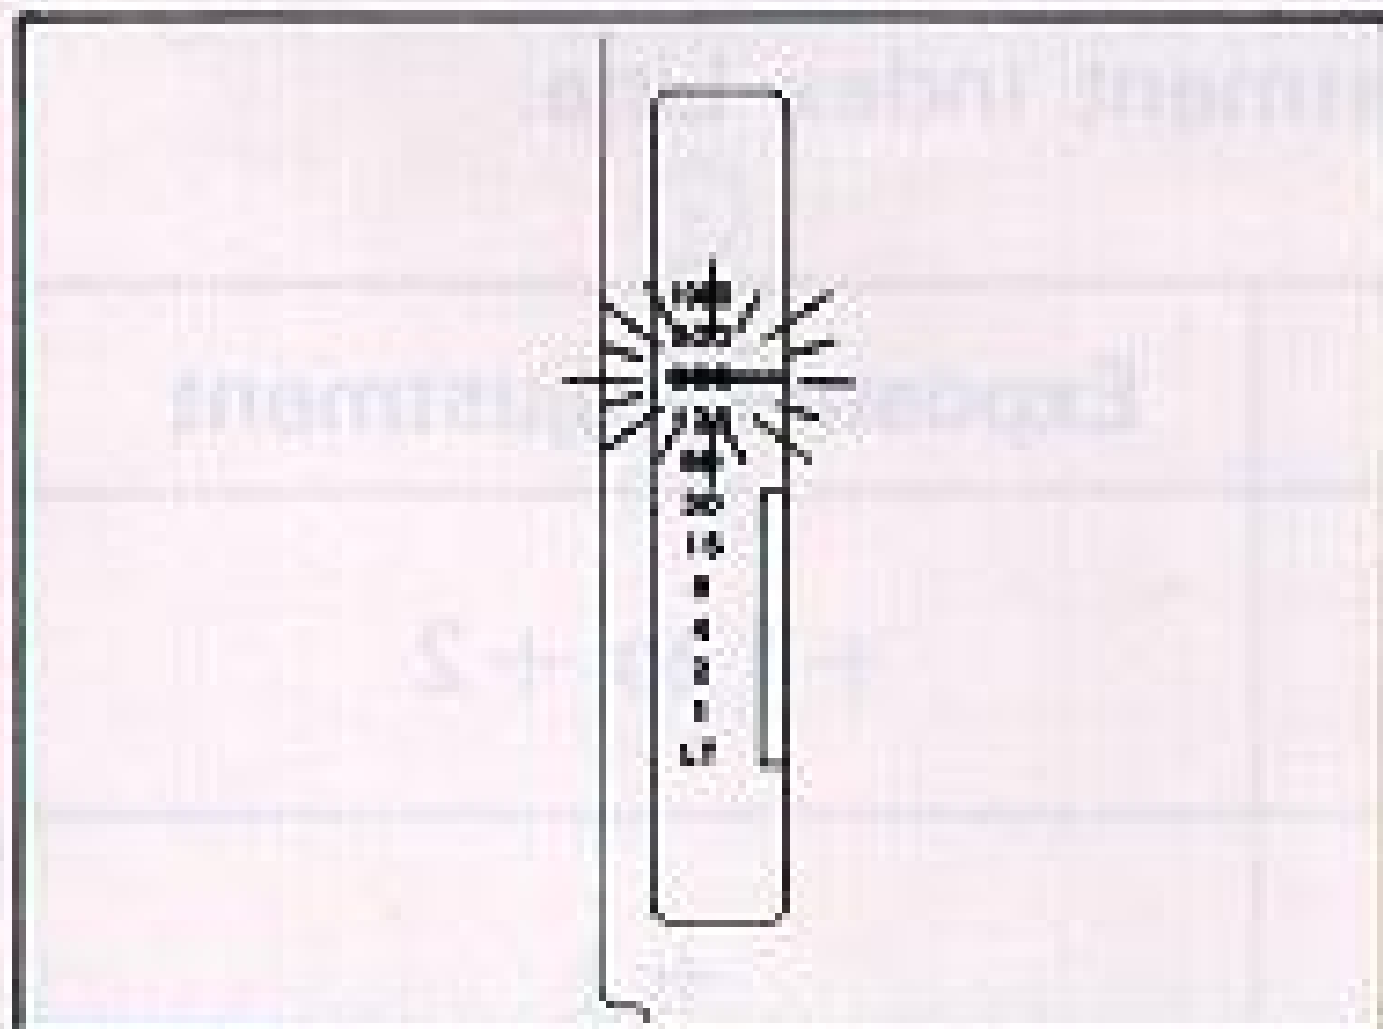
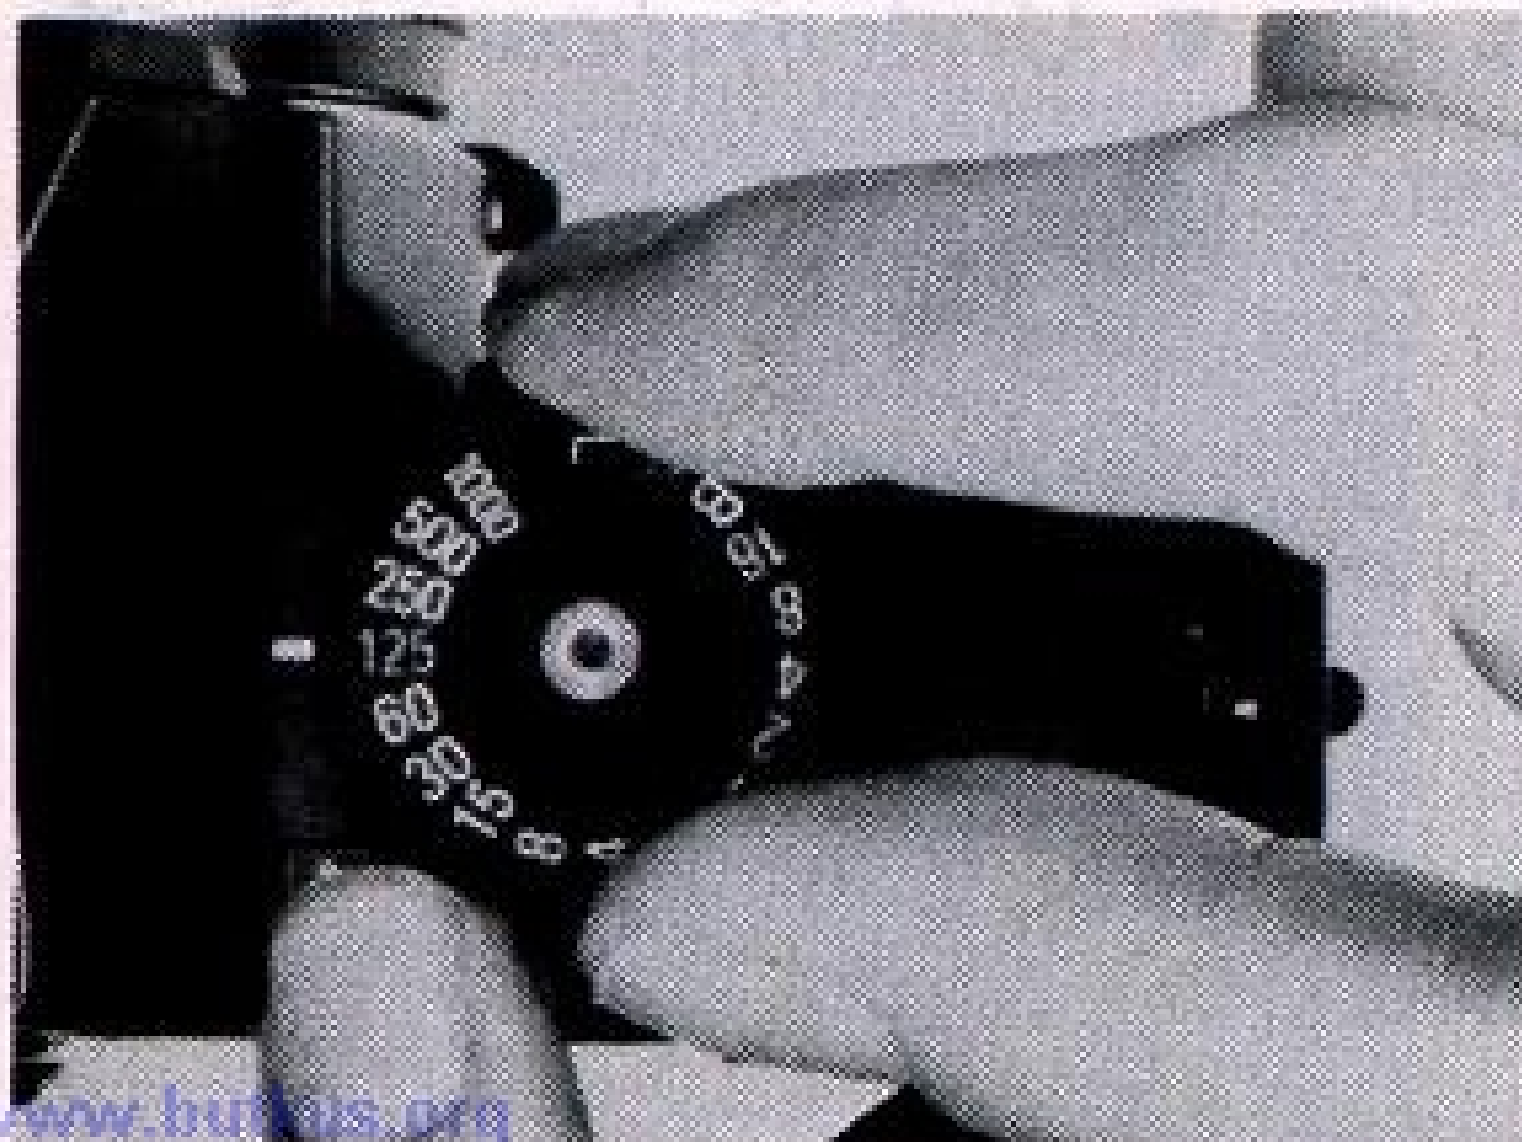


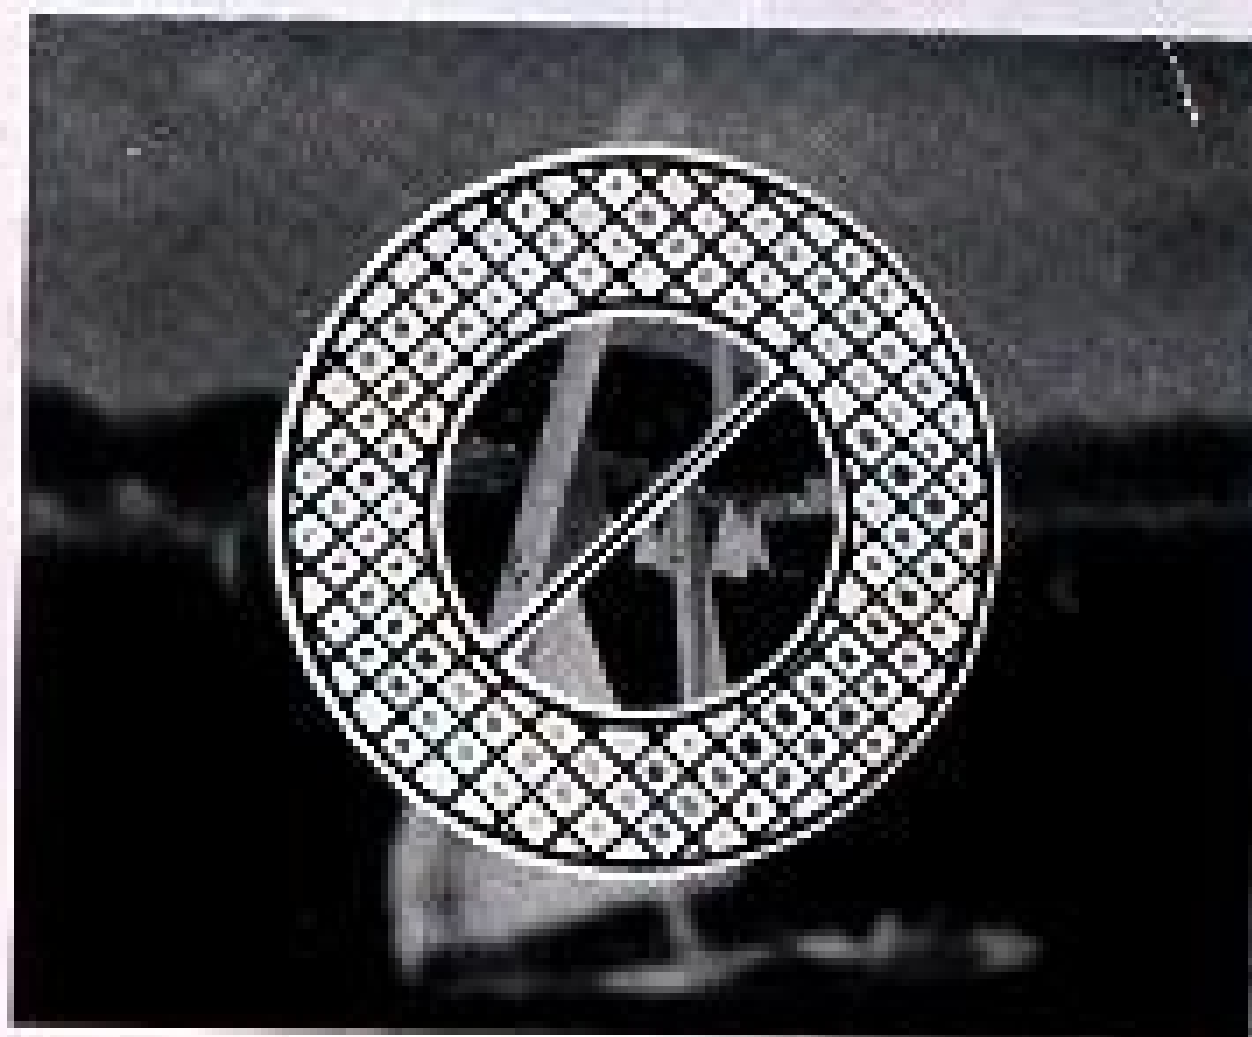


Diagram of the piston rod assembly.

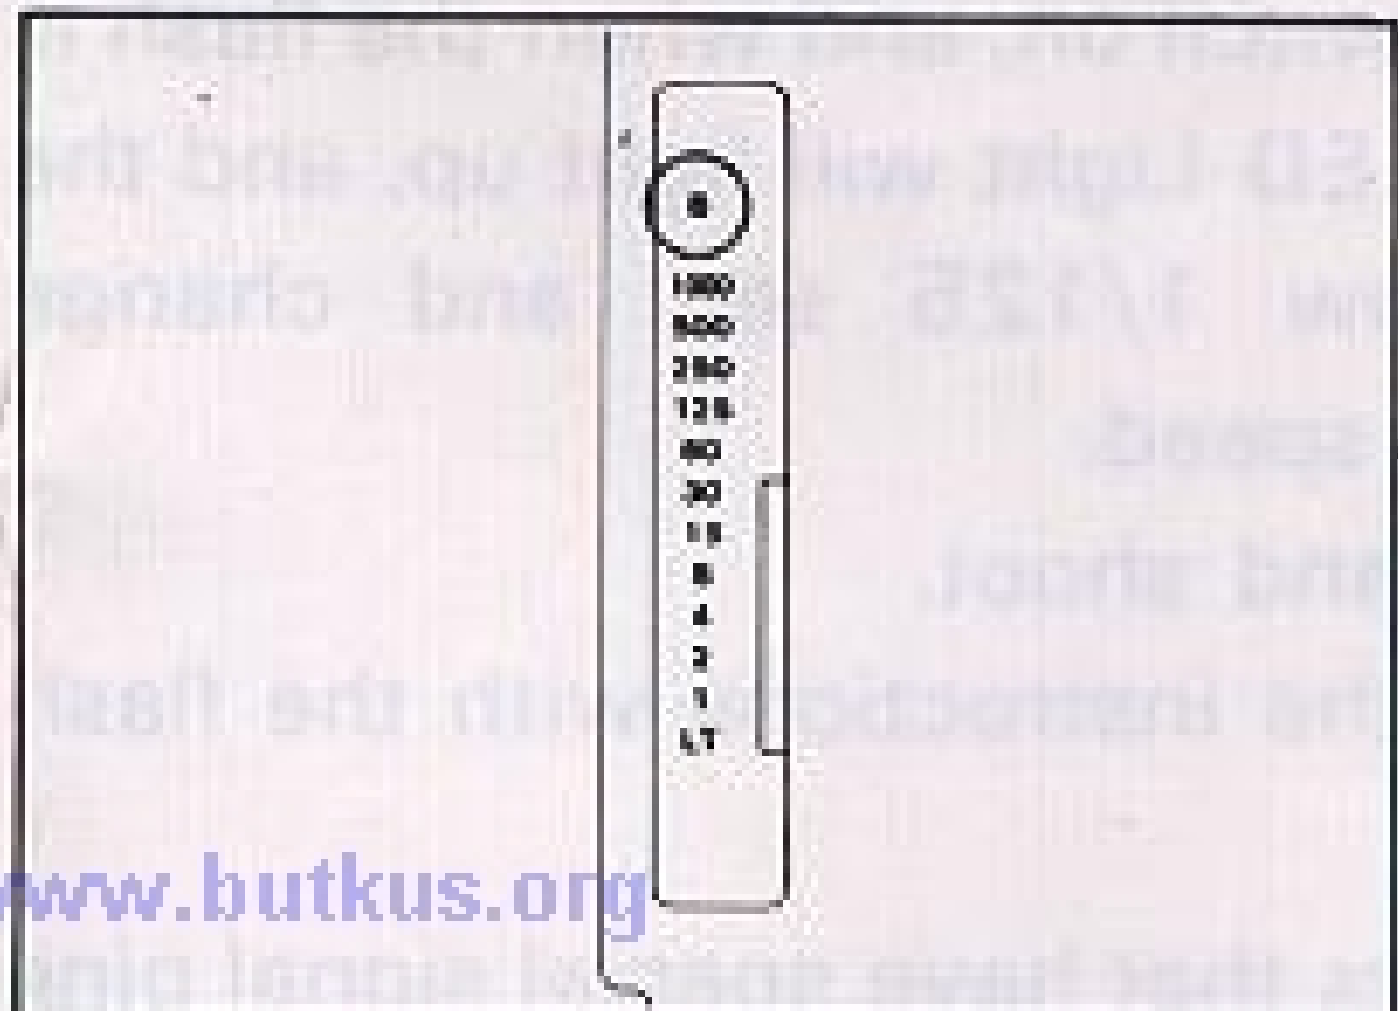


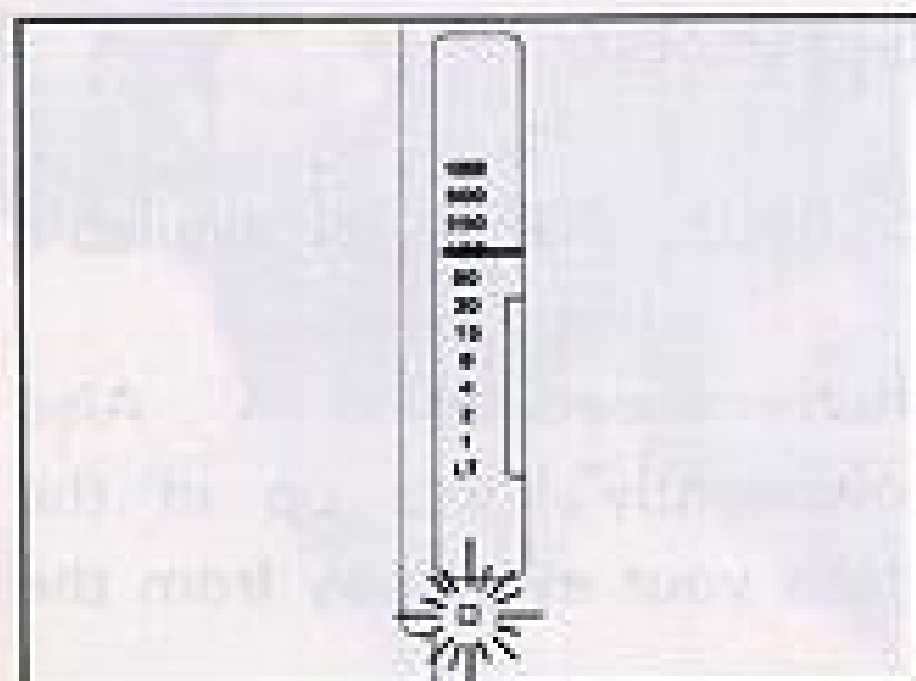






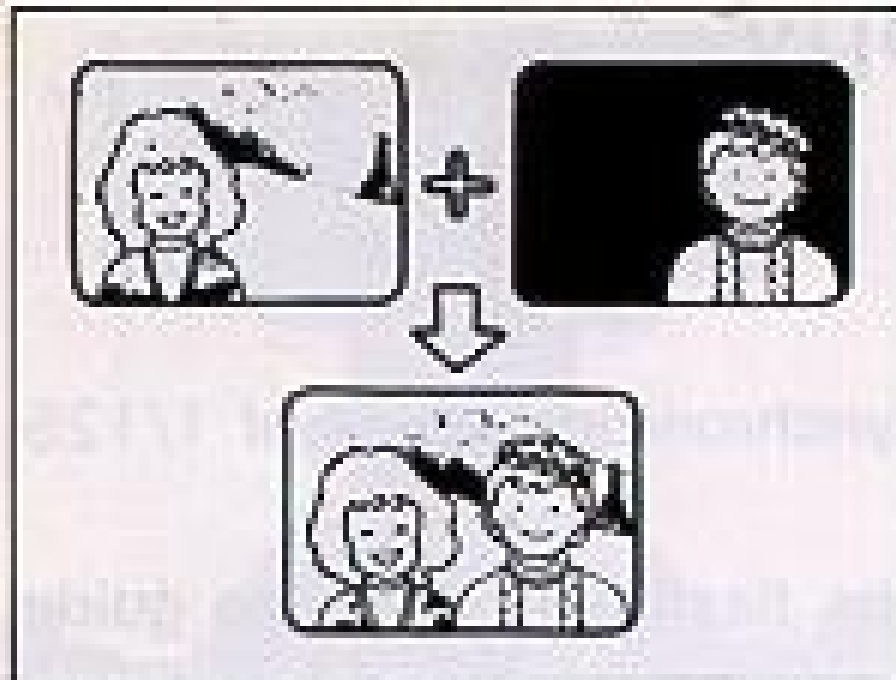















Underexposure





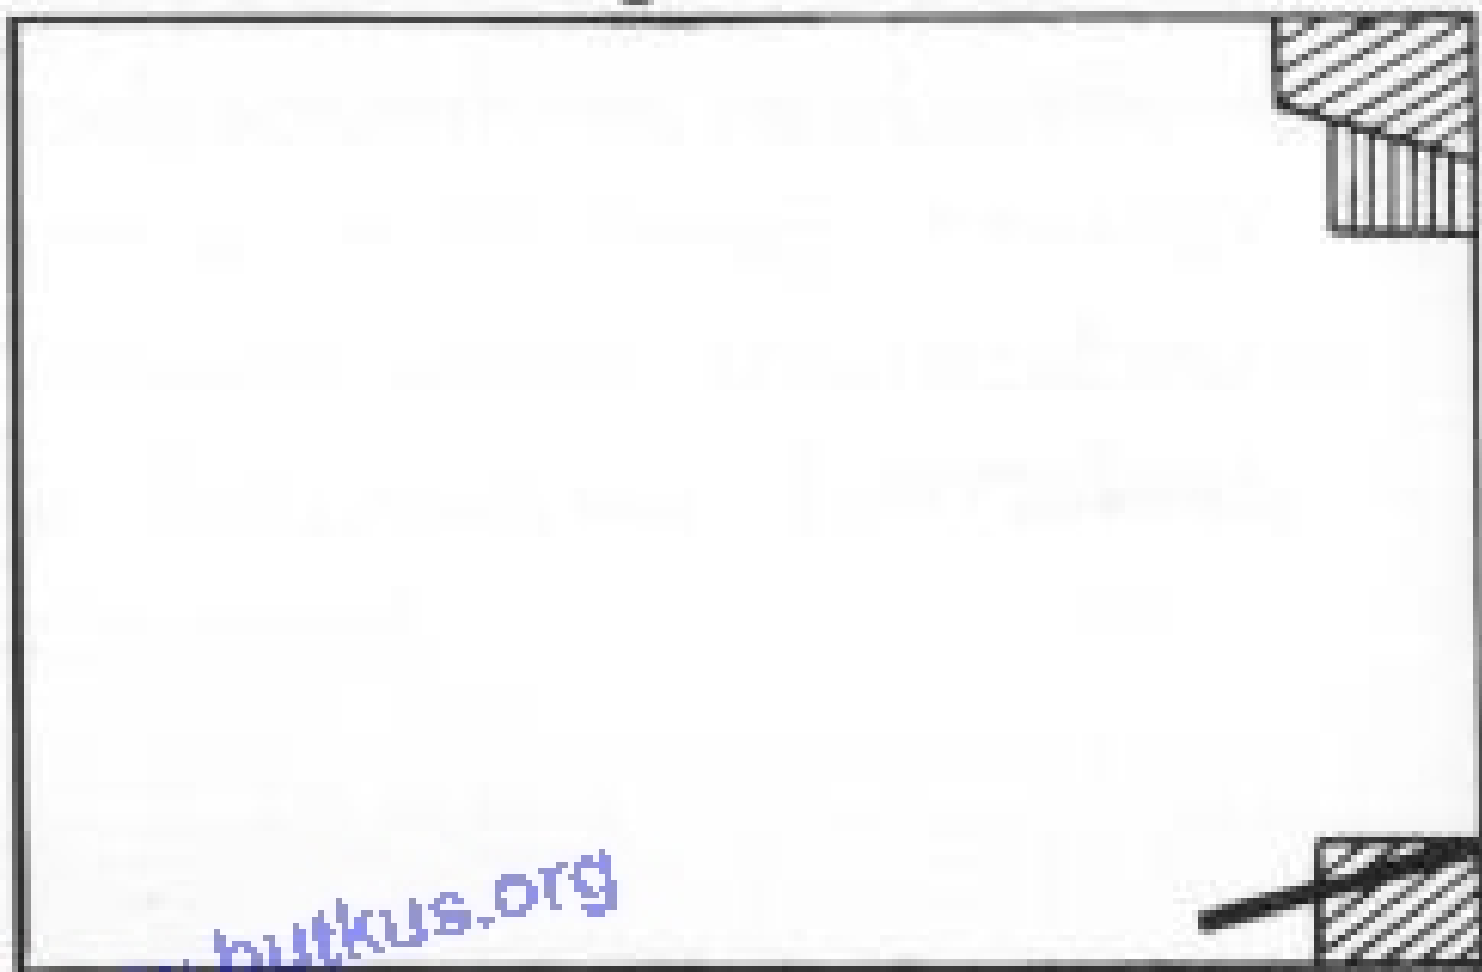insuficiente exposicion




Overexposure



www.putkus.org

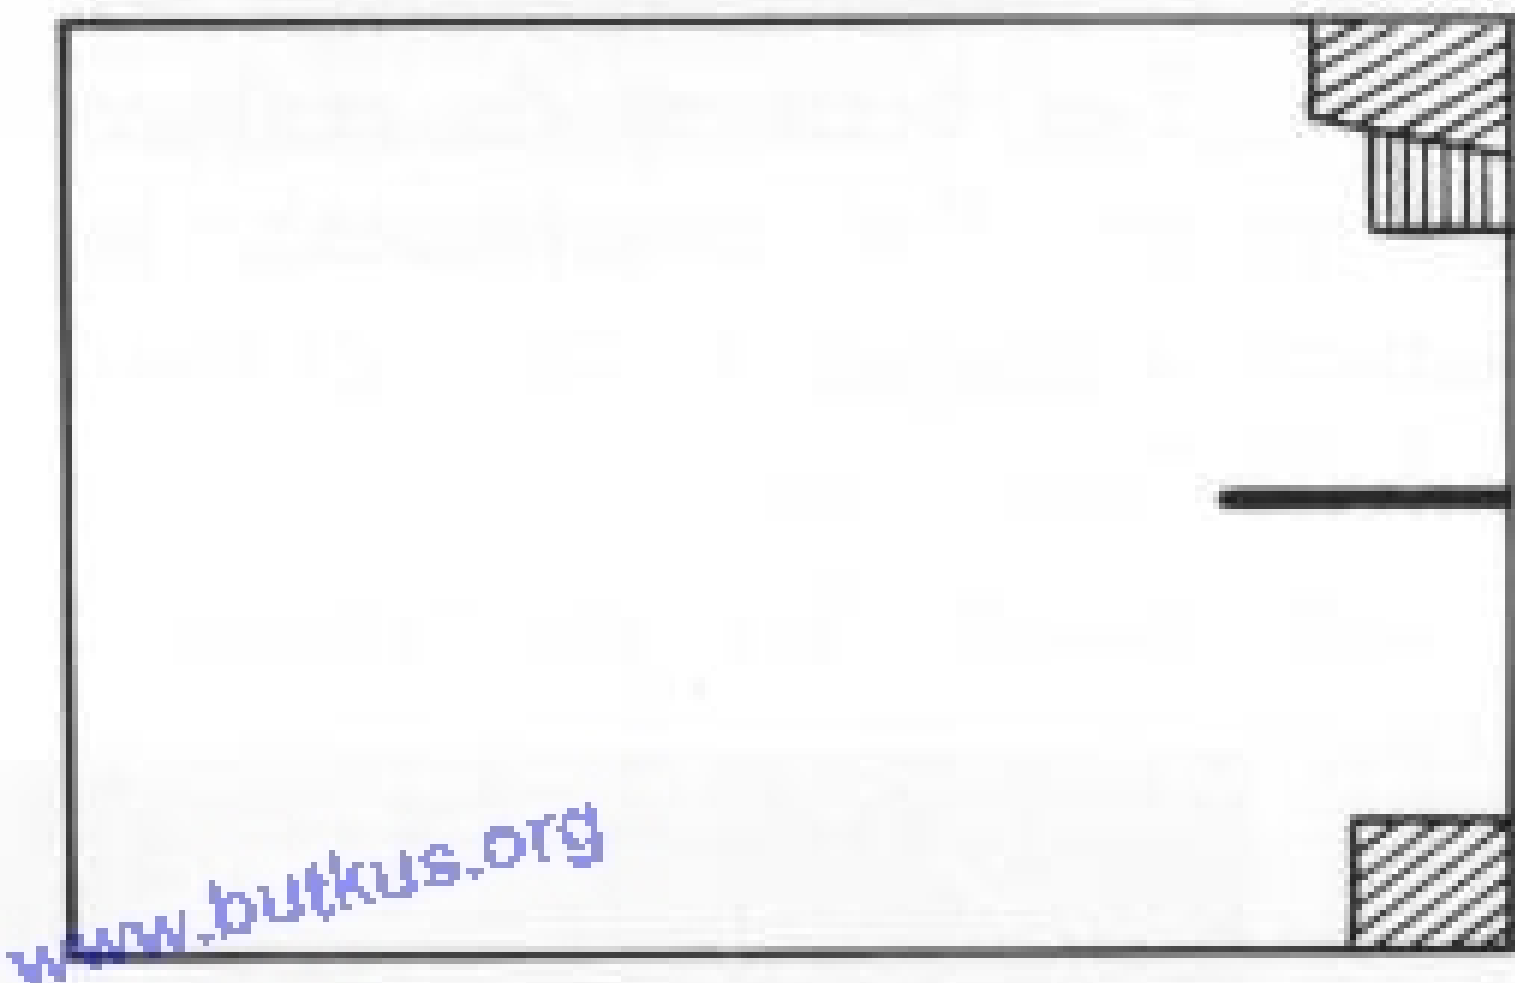arrida mencionadas. Señal de





Proper exposure

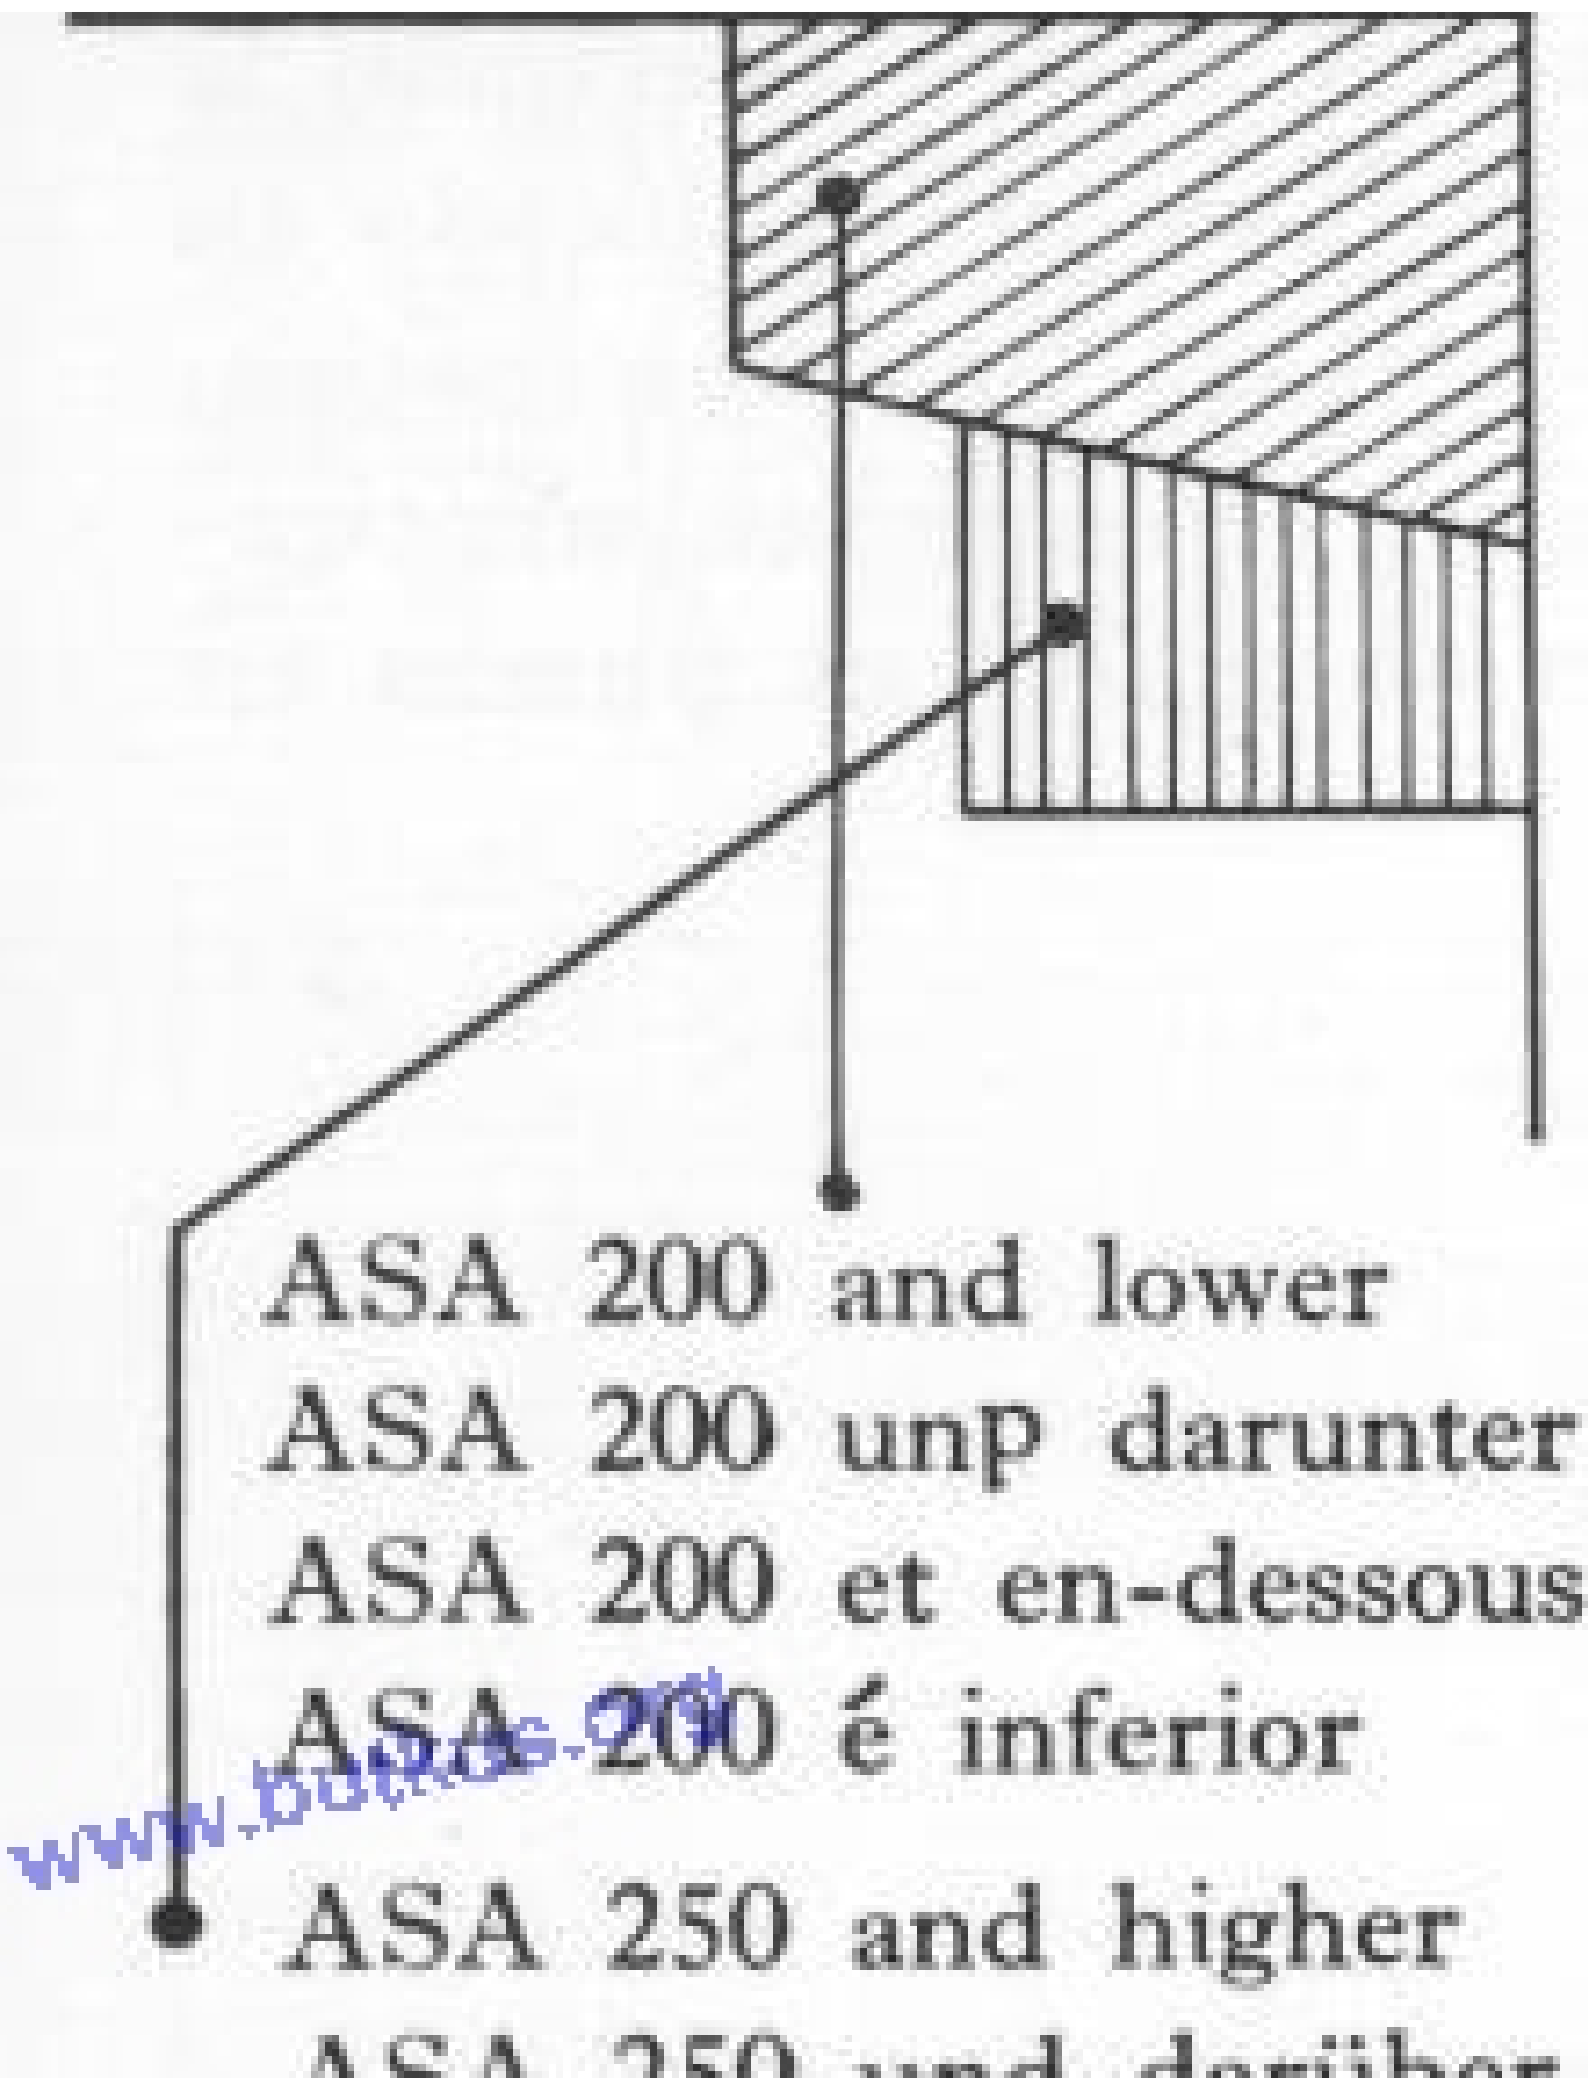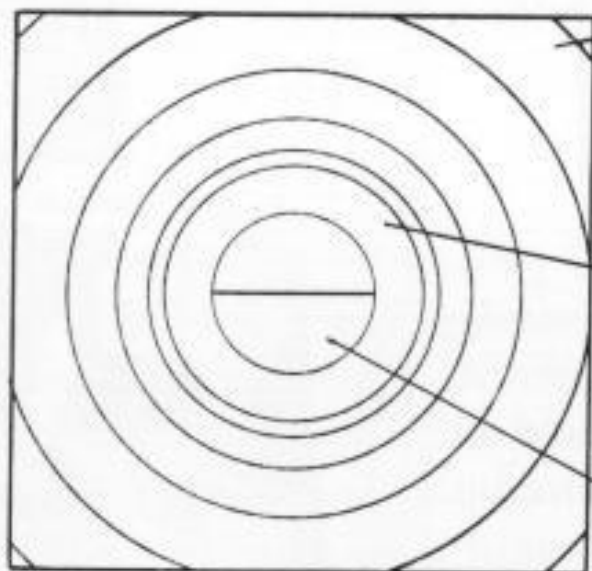  www.putkus.org









Fresnel lens
Fresnel linse
Lentille fresnel
Lentes "fresnel"

Sharpness ring
Einstellring
Anneau de mise au point
Anillo de enfoque

Split image.
Schnittbildentfernungsmesser.
L'image dedoublee.
Desdoblamiento de imagen.



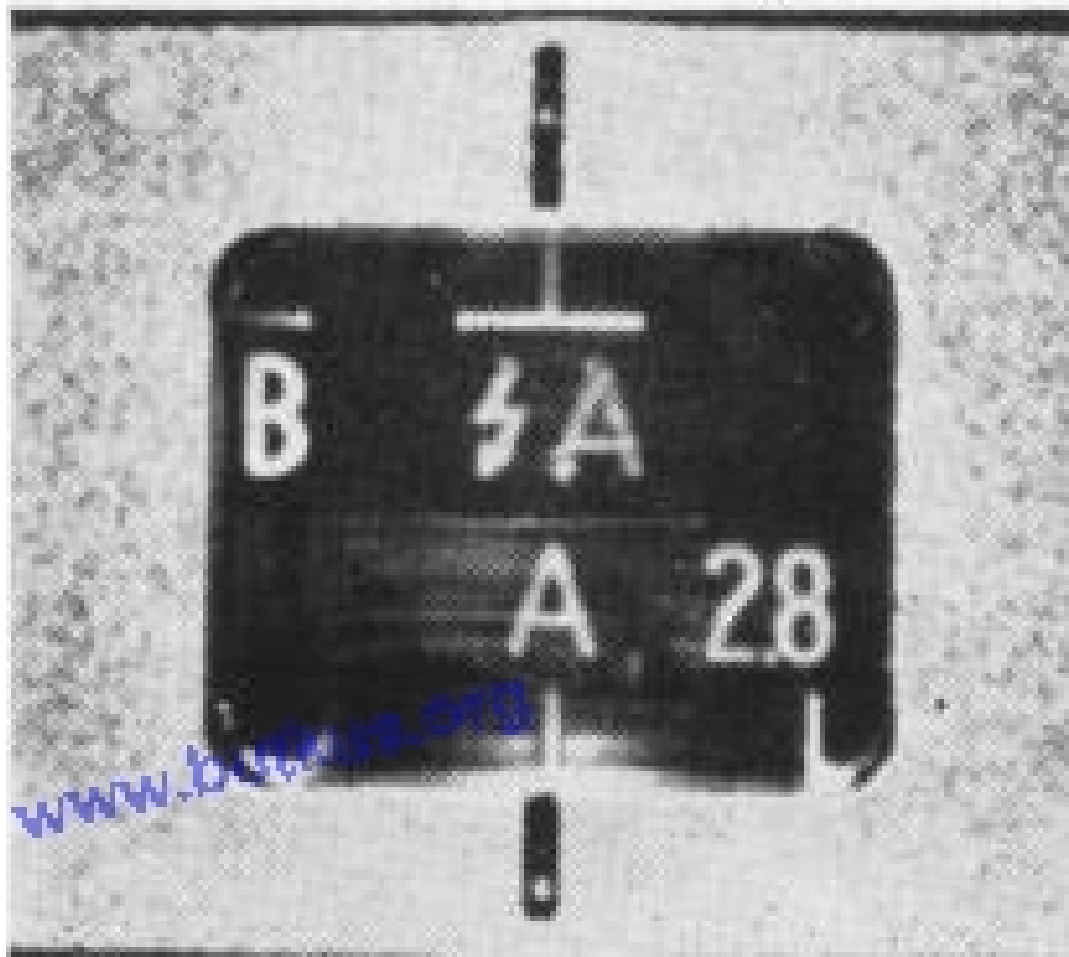 
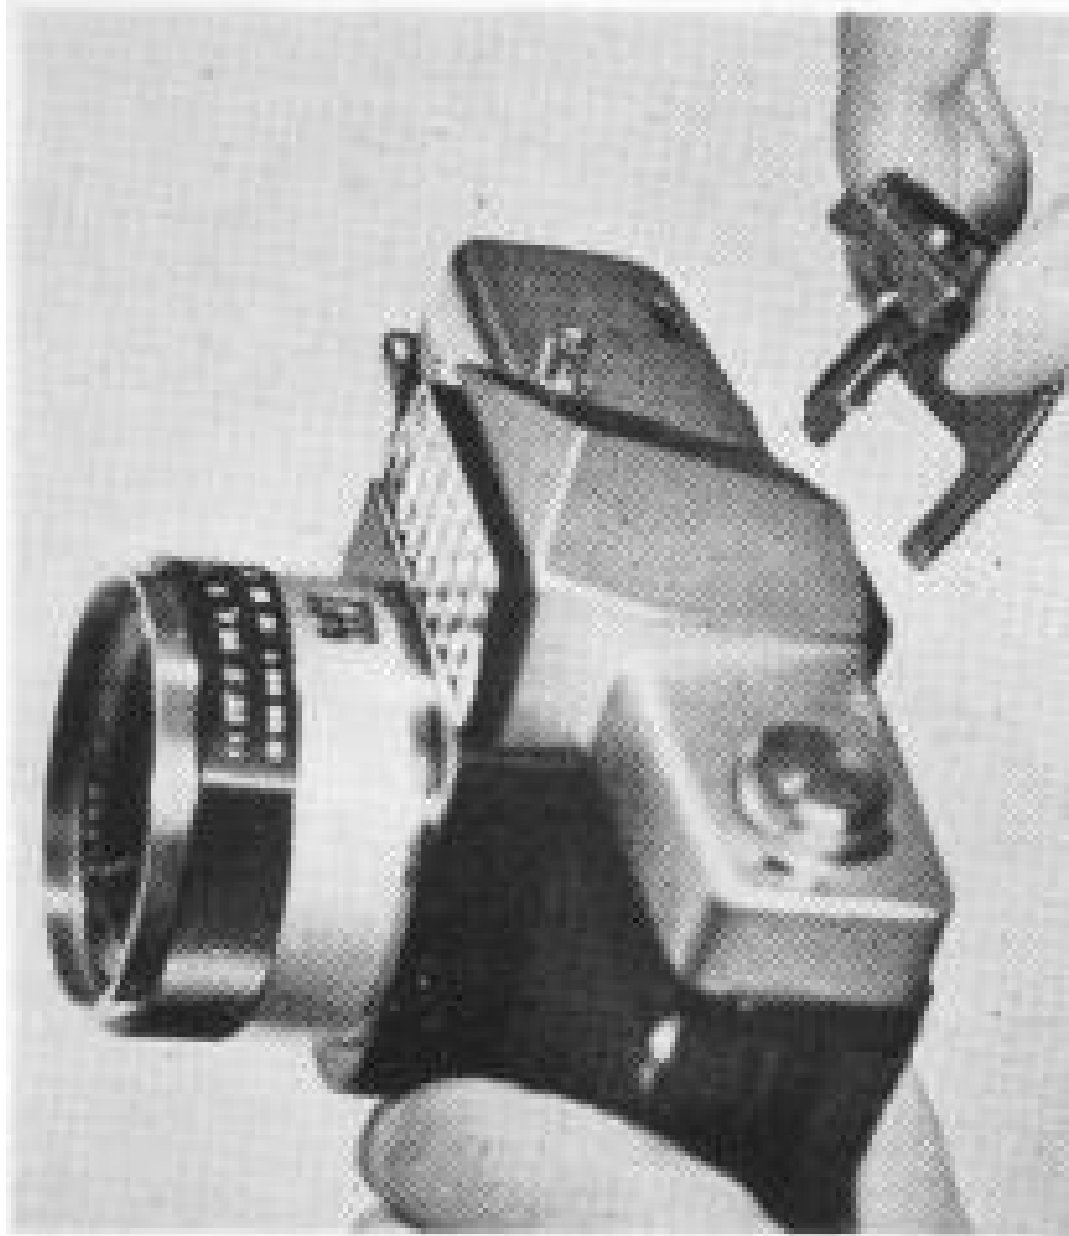 






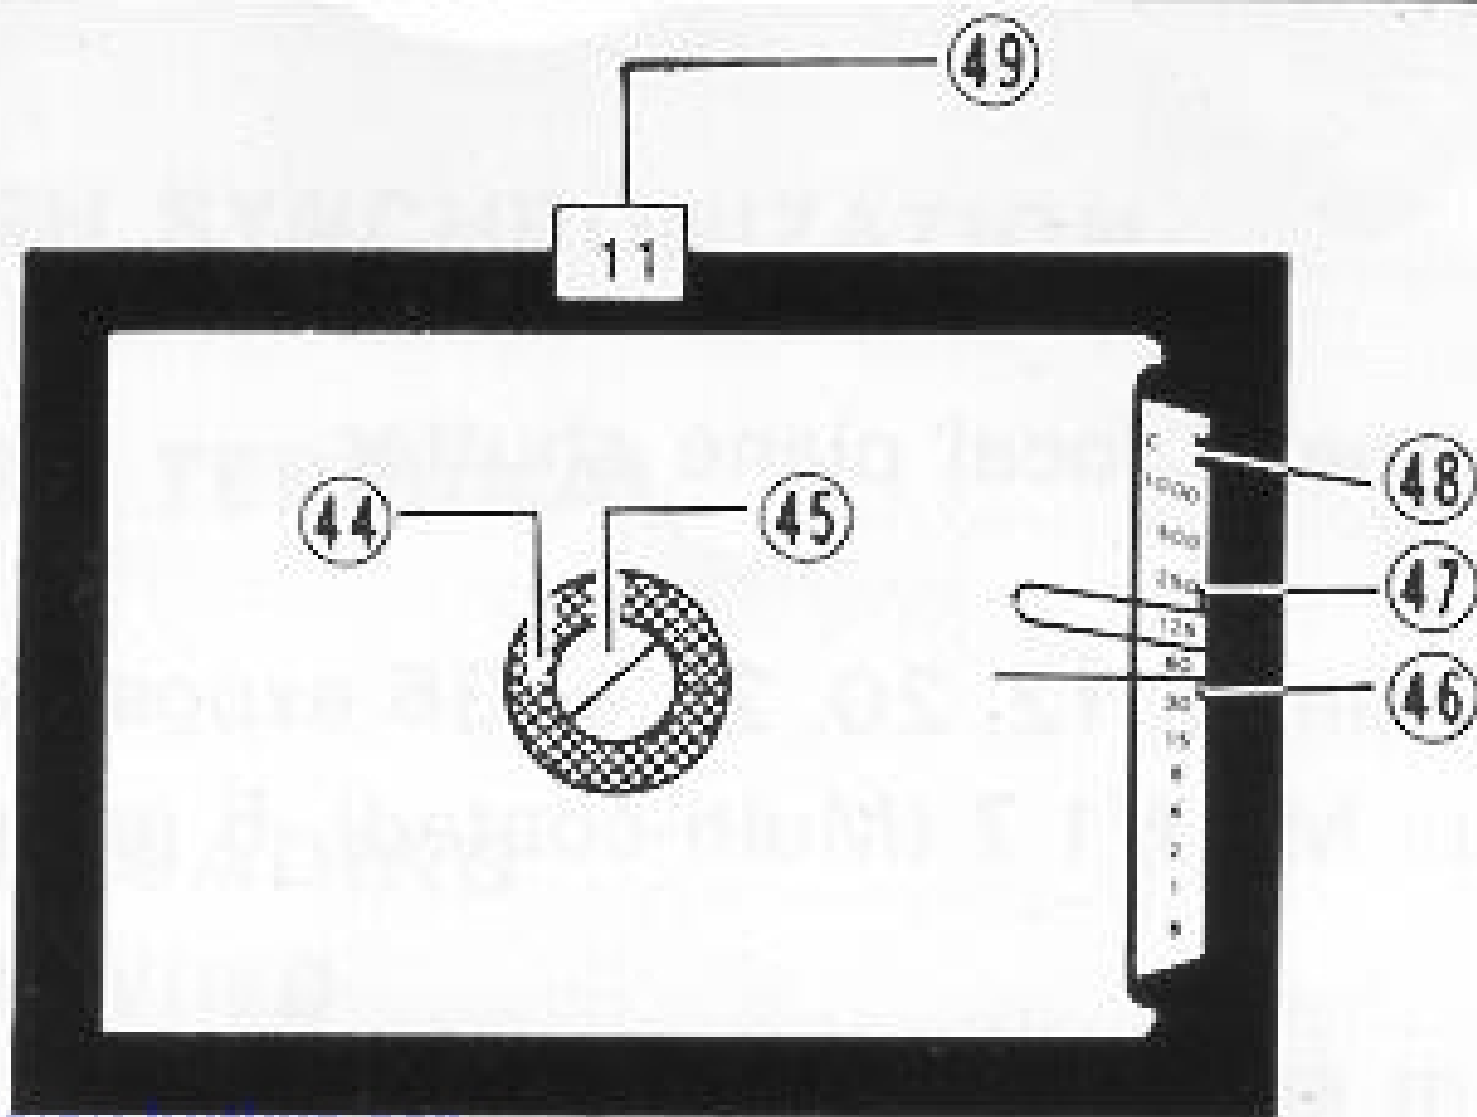 




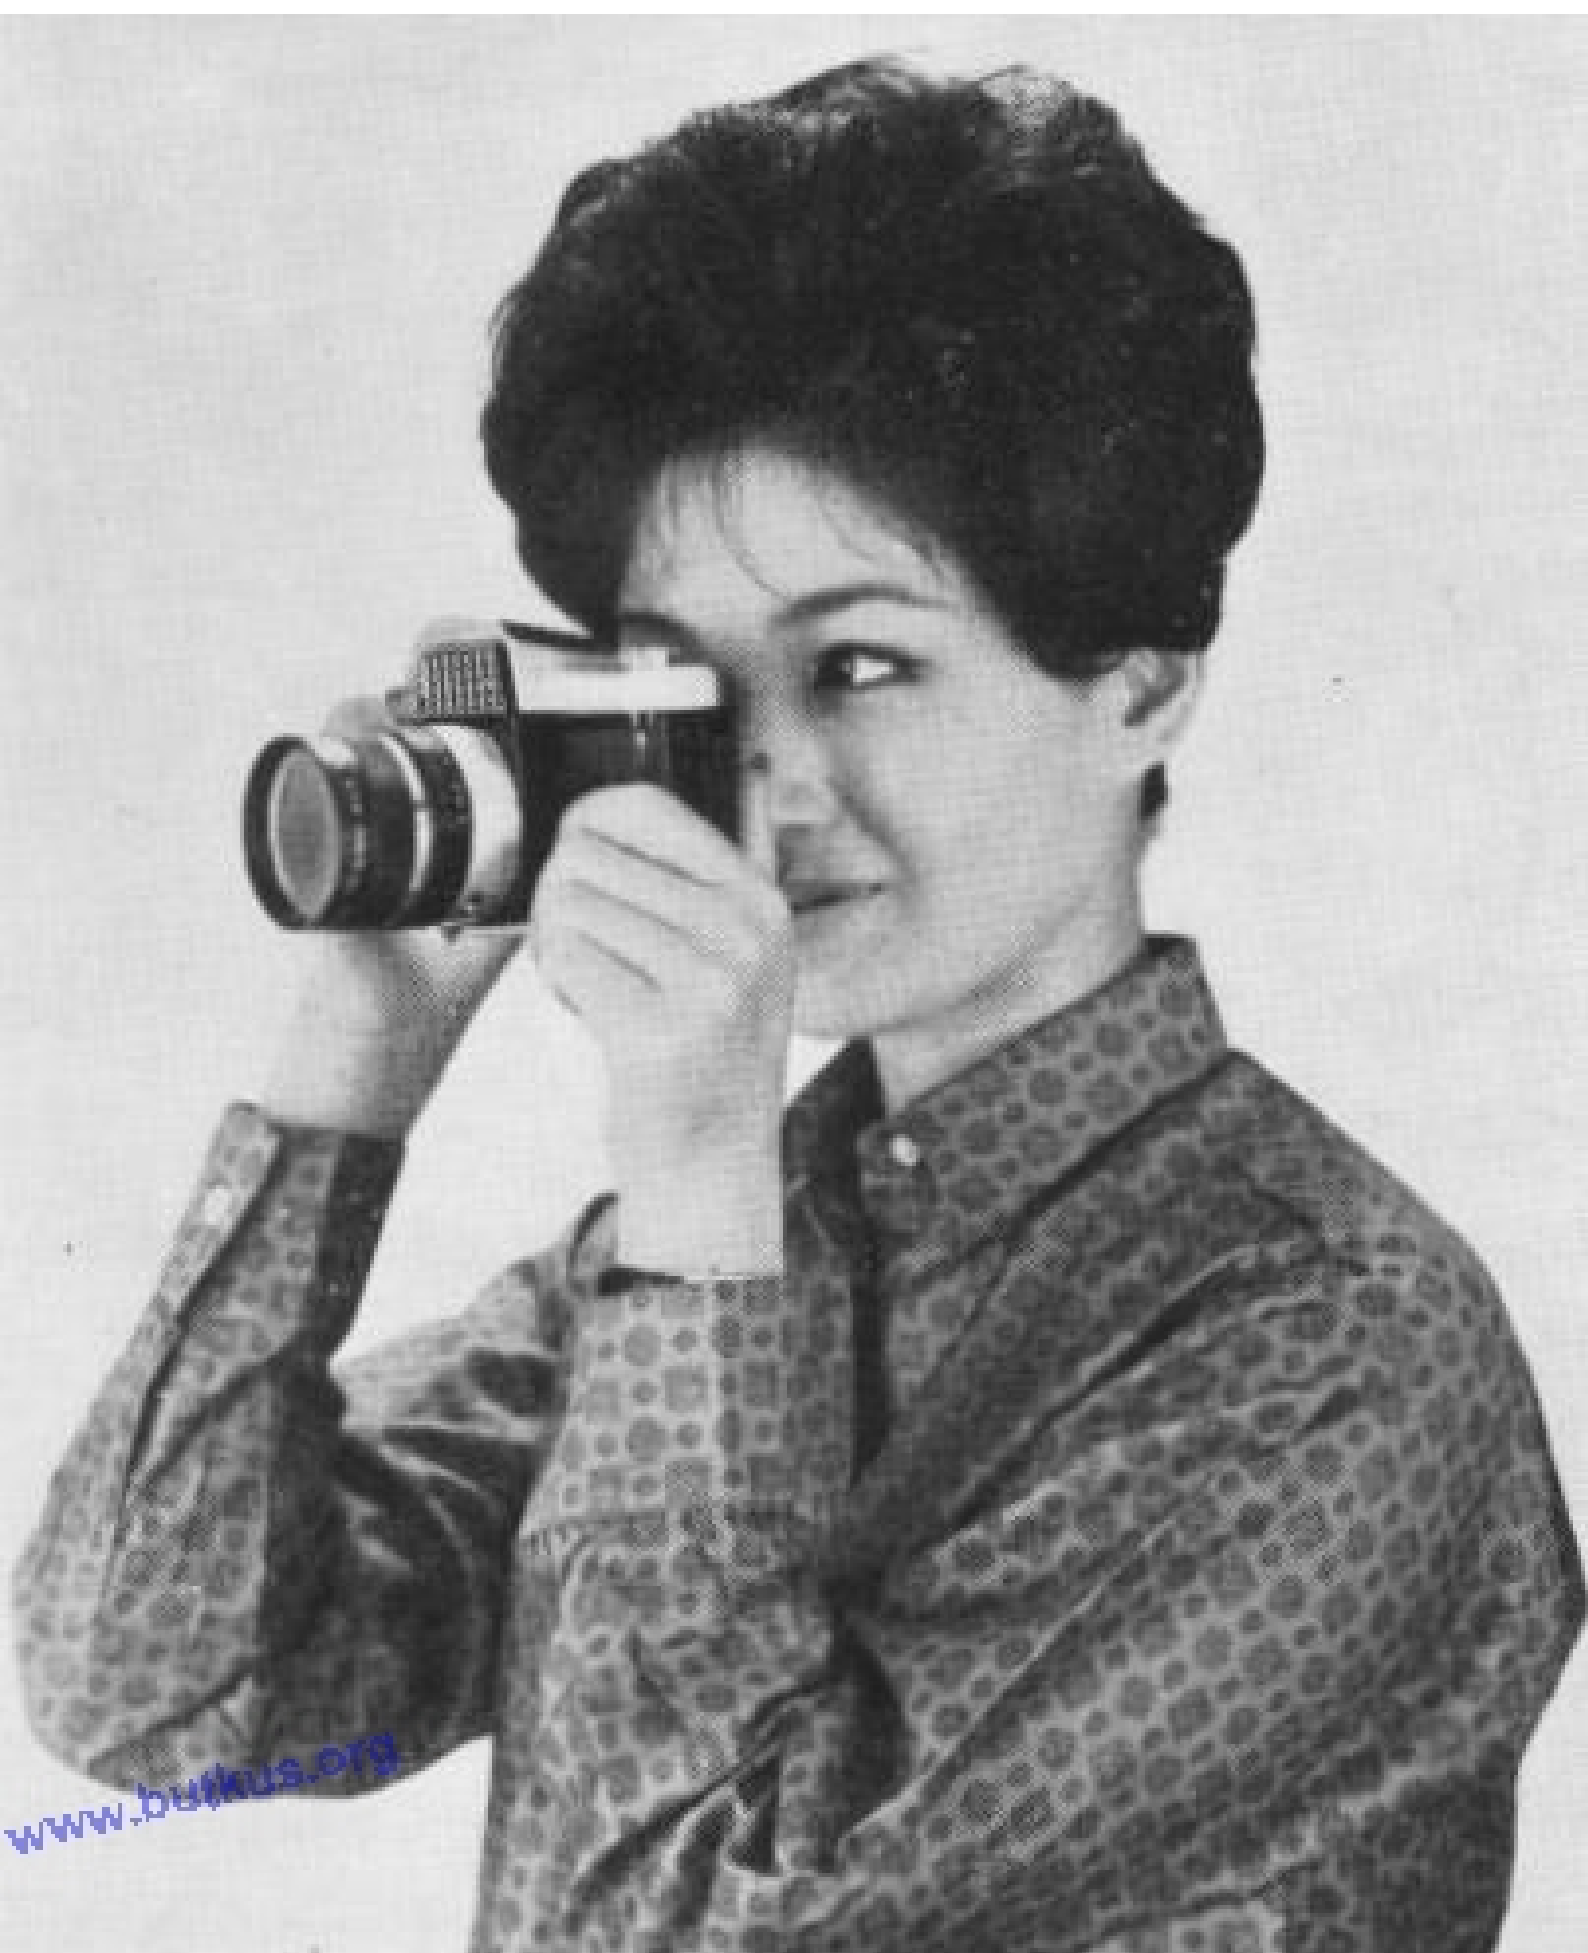 


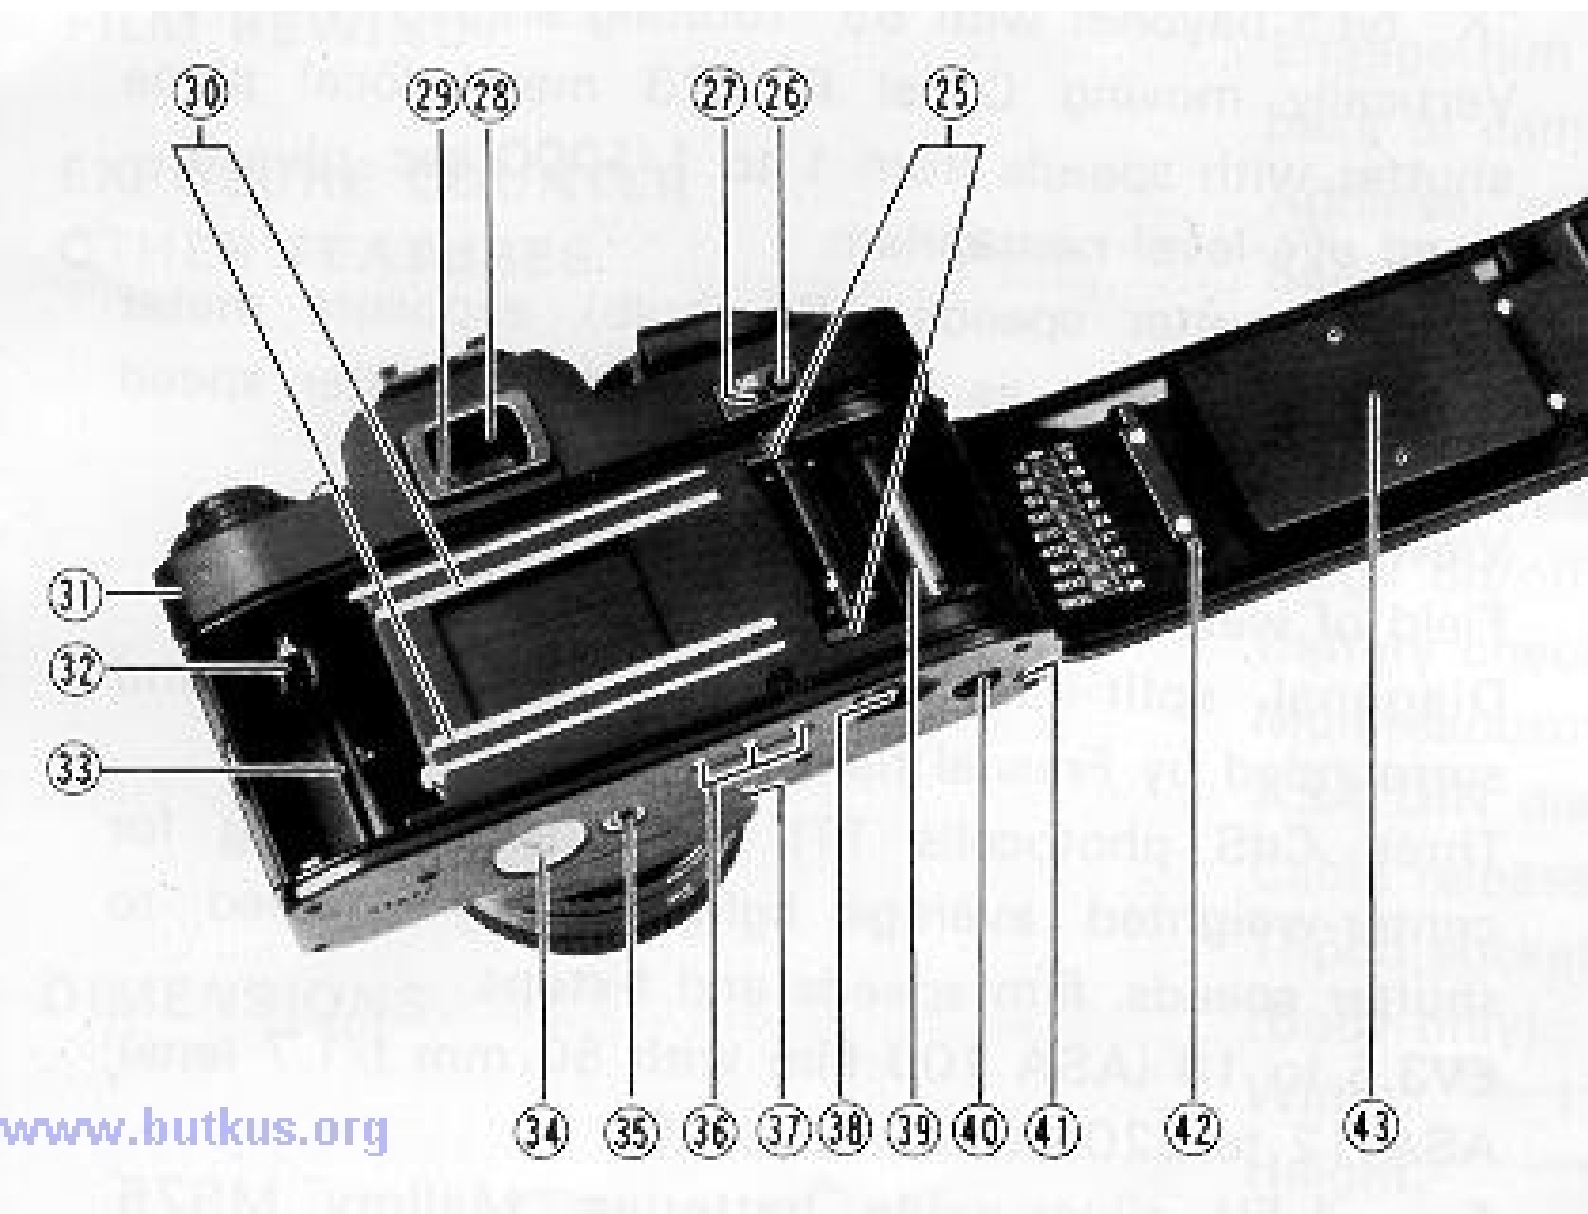 


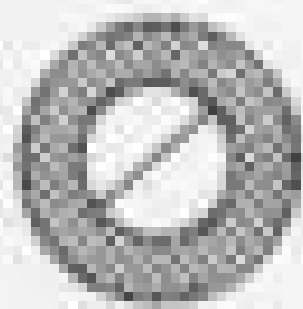 













www.butkus.org




www.buthous.org




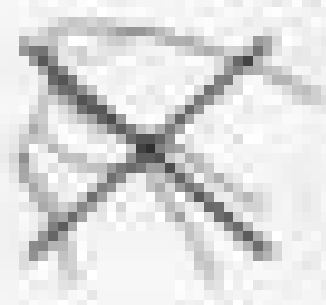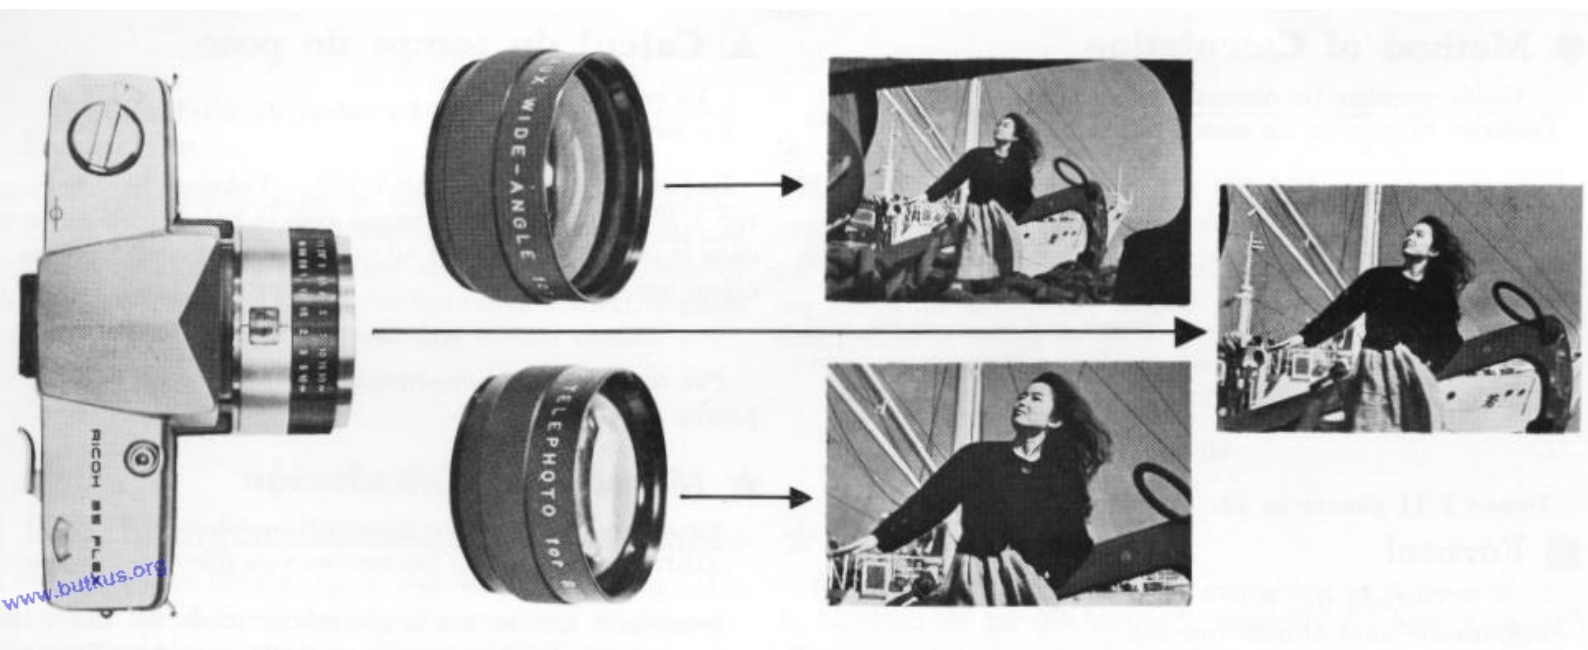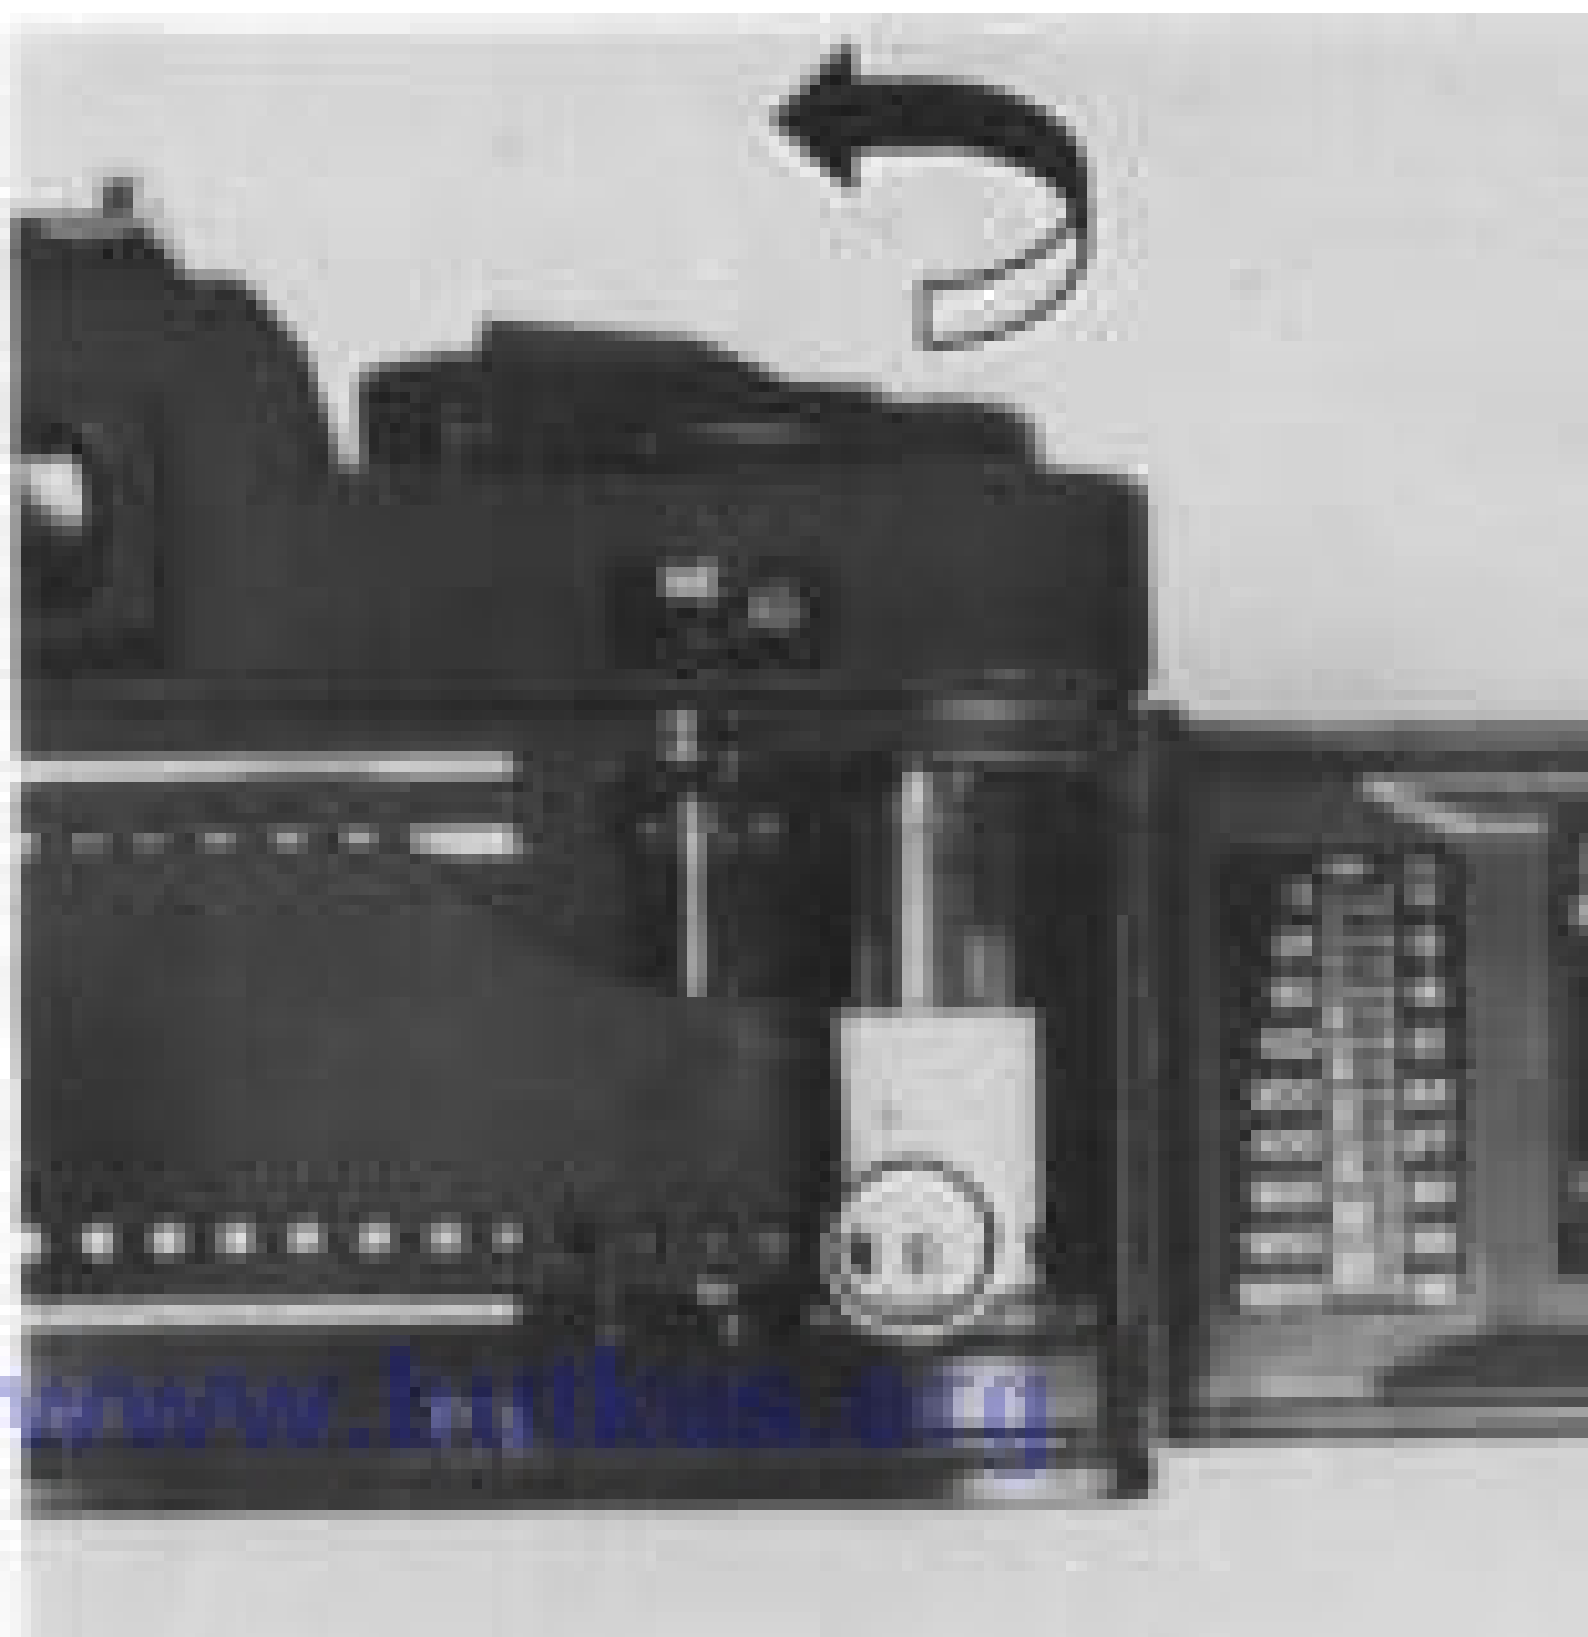   www.butkus.org













www.butkus.org





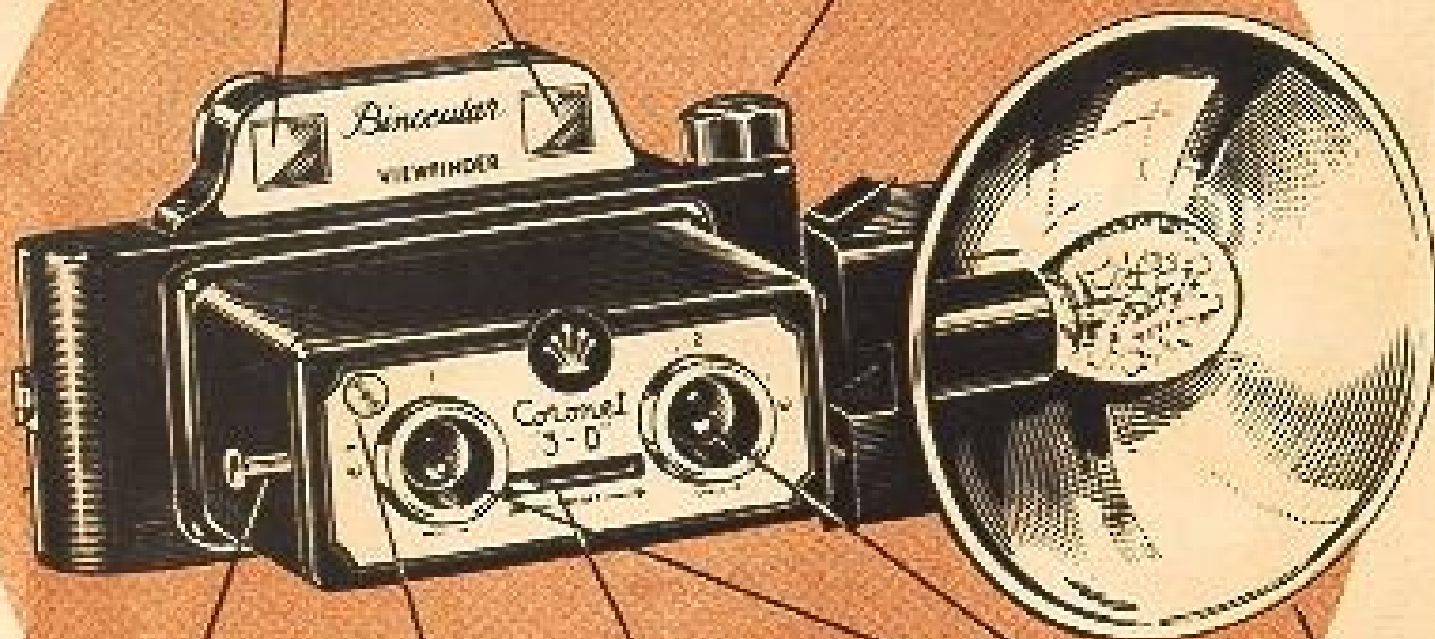 
www.butkin.org



www.brickus.org

FILM WINDING KNOBS

BINOCULAR TYPE VIEWFINDER



SHUTTER RELEASE LEVER

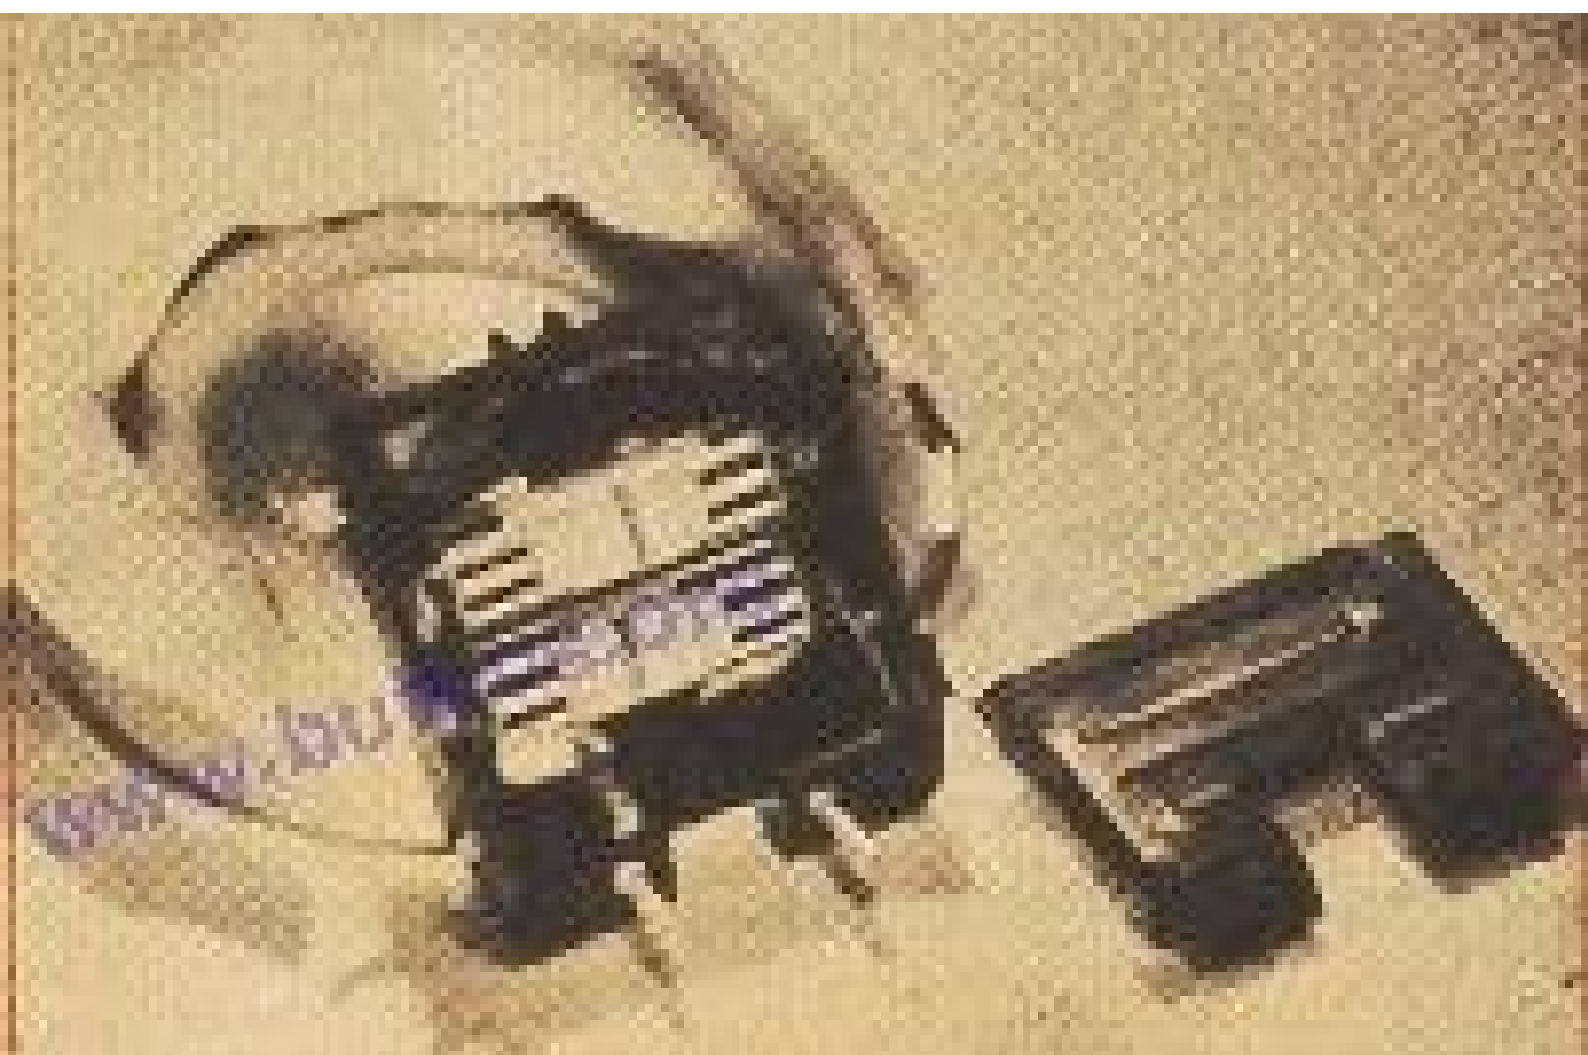
MATCHED OPTICAL LENSES

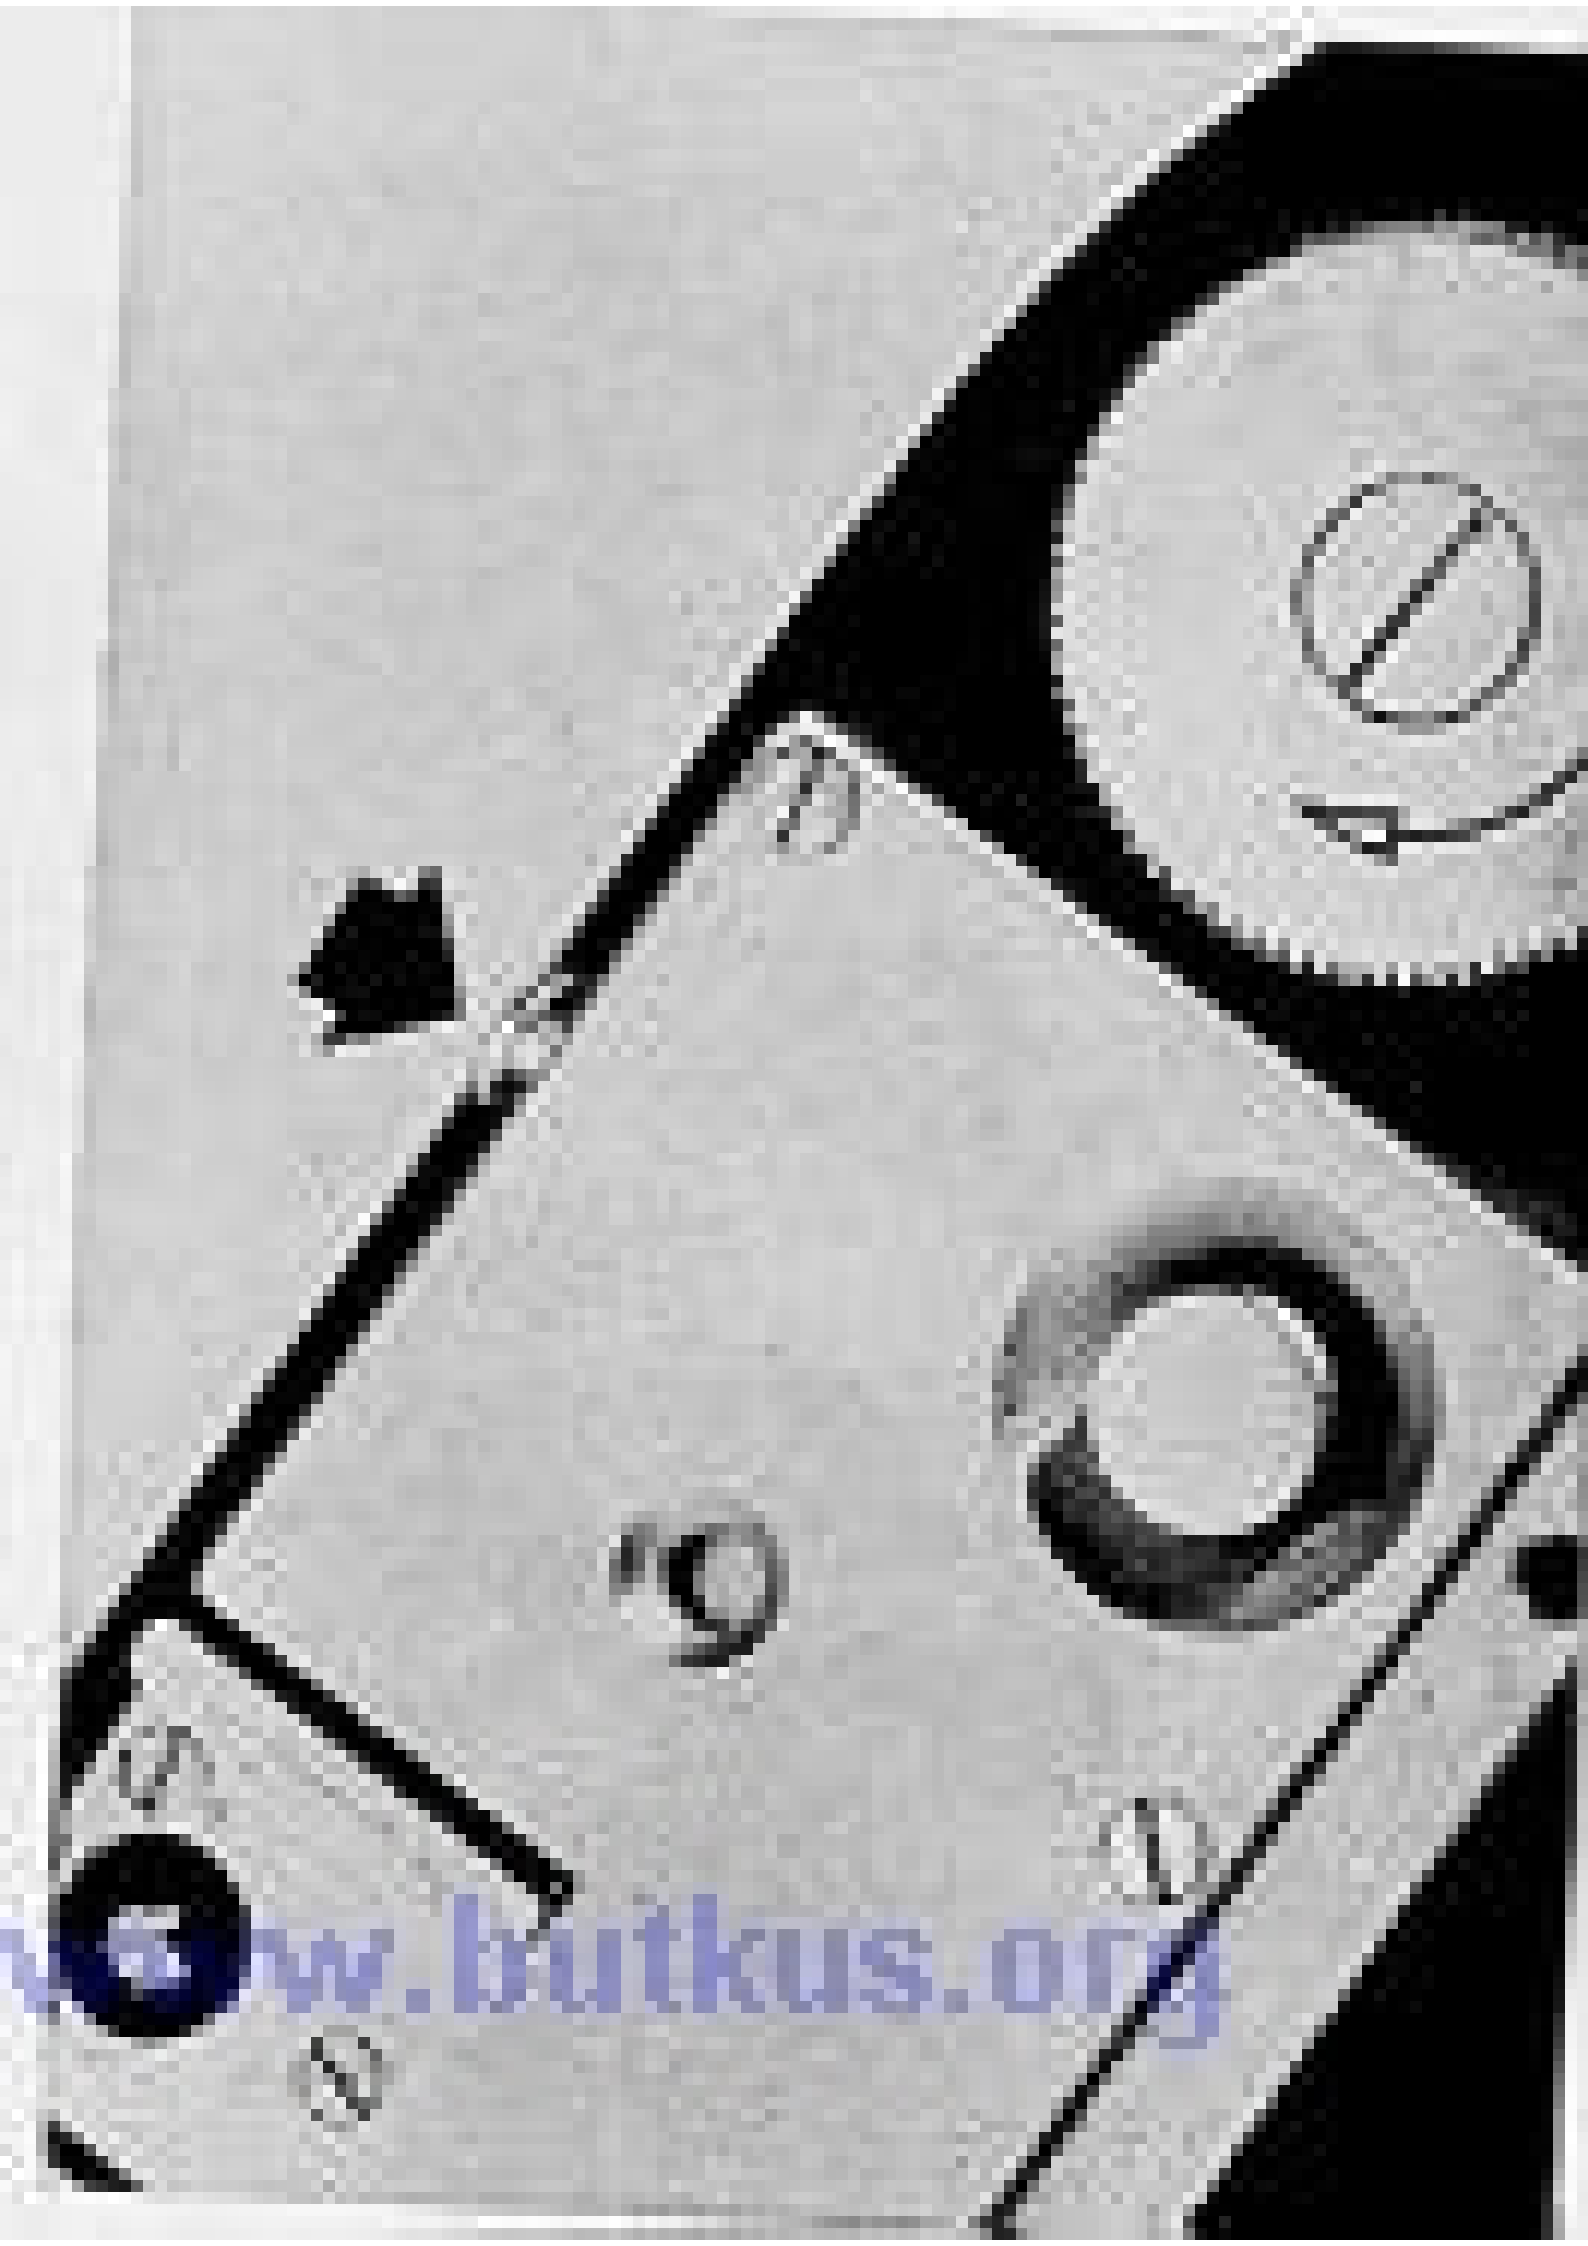
FLASH UNIT

SELECTOR KNOB

PRE-SET SHUTTER LEVER









www.butkus.org



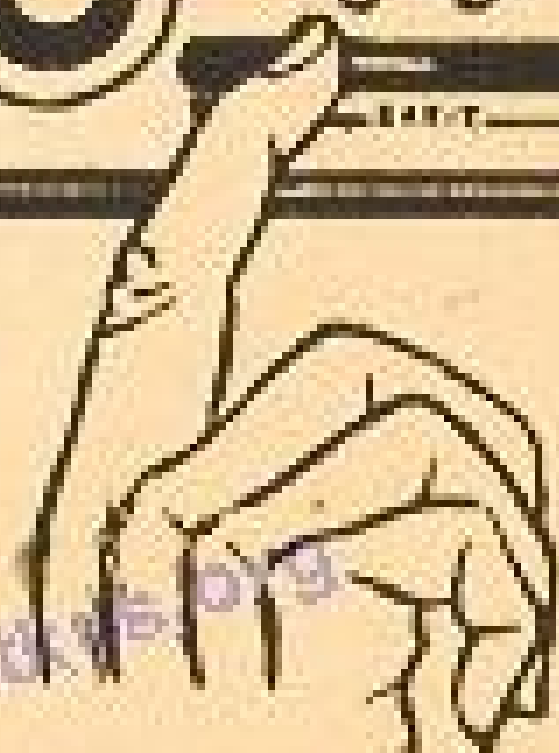

www.buckys.org
PRE-SET SHUTTER LEVER

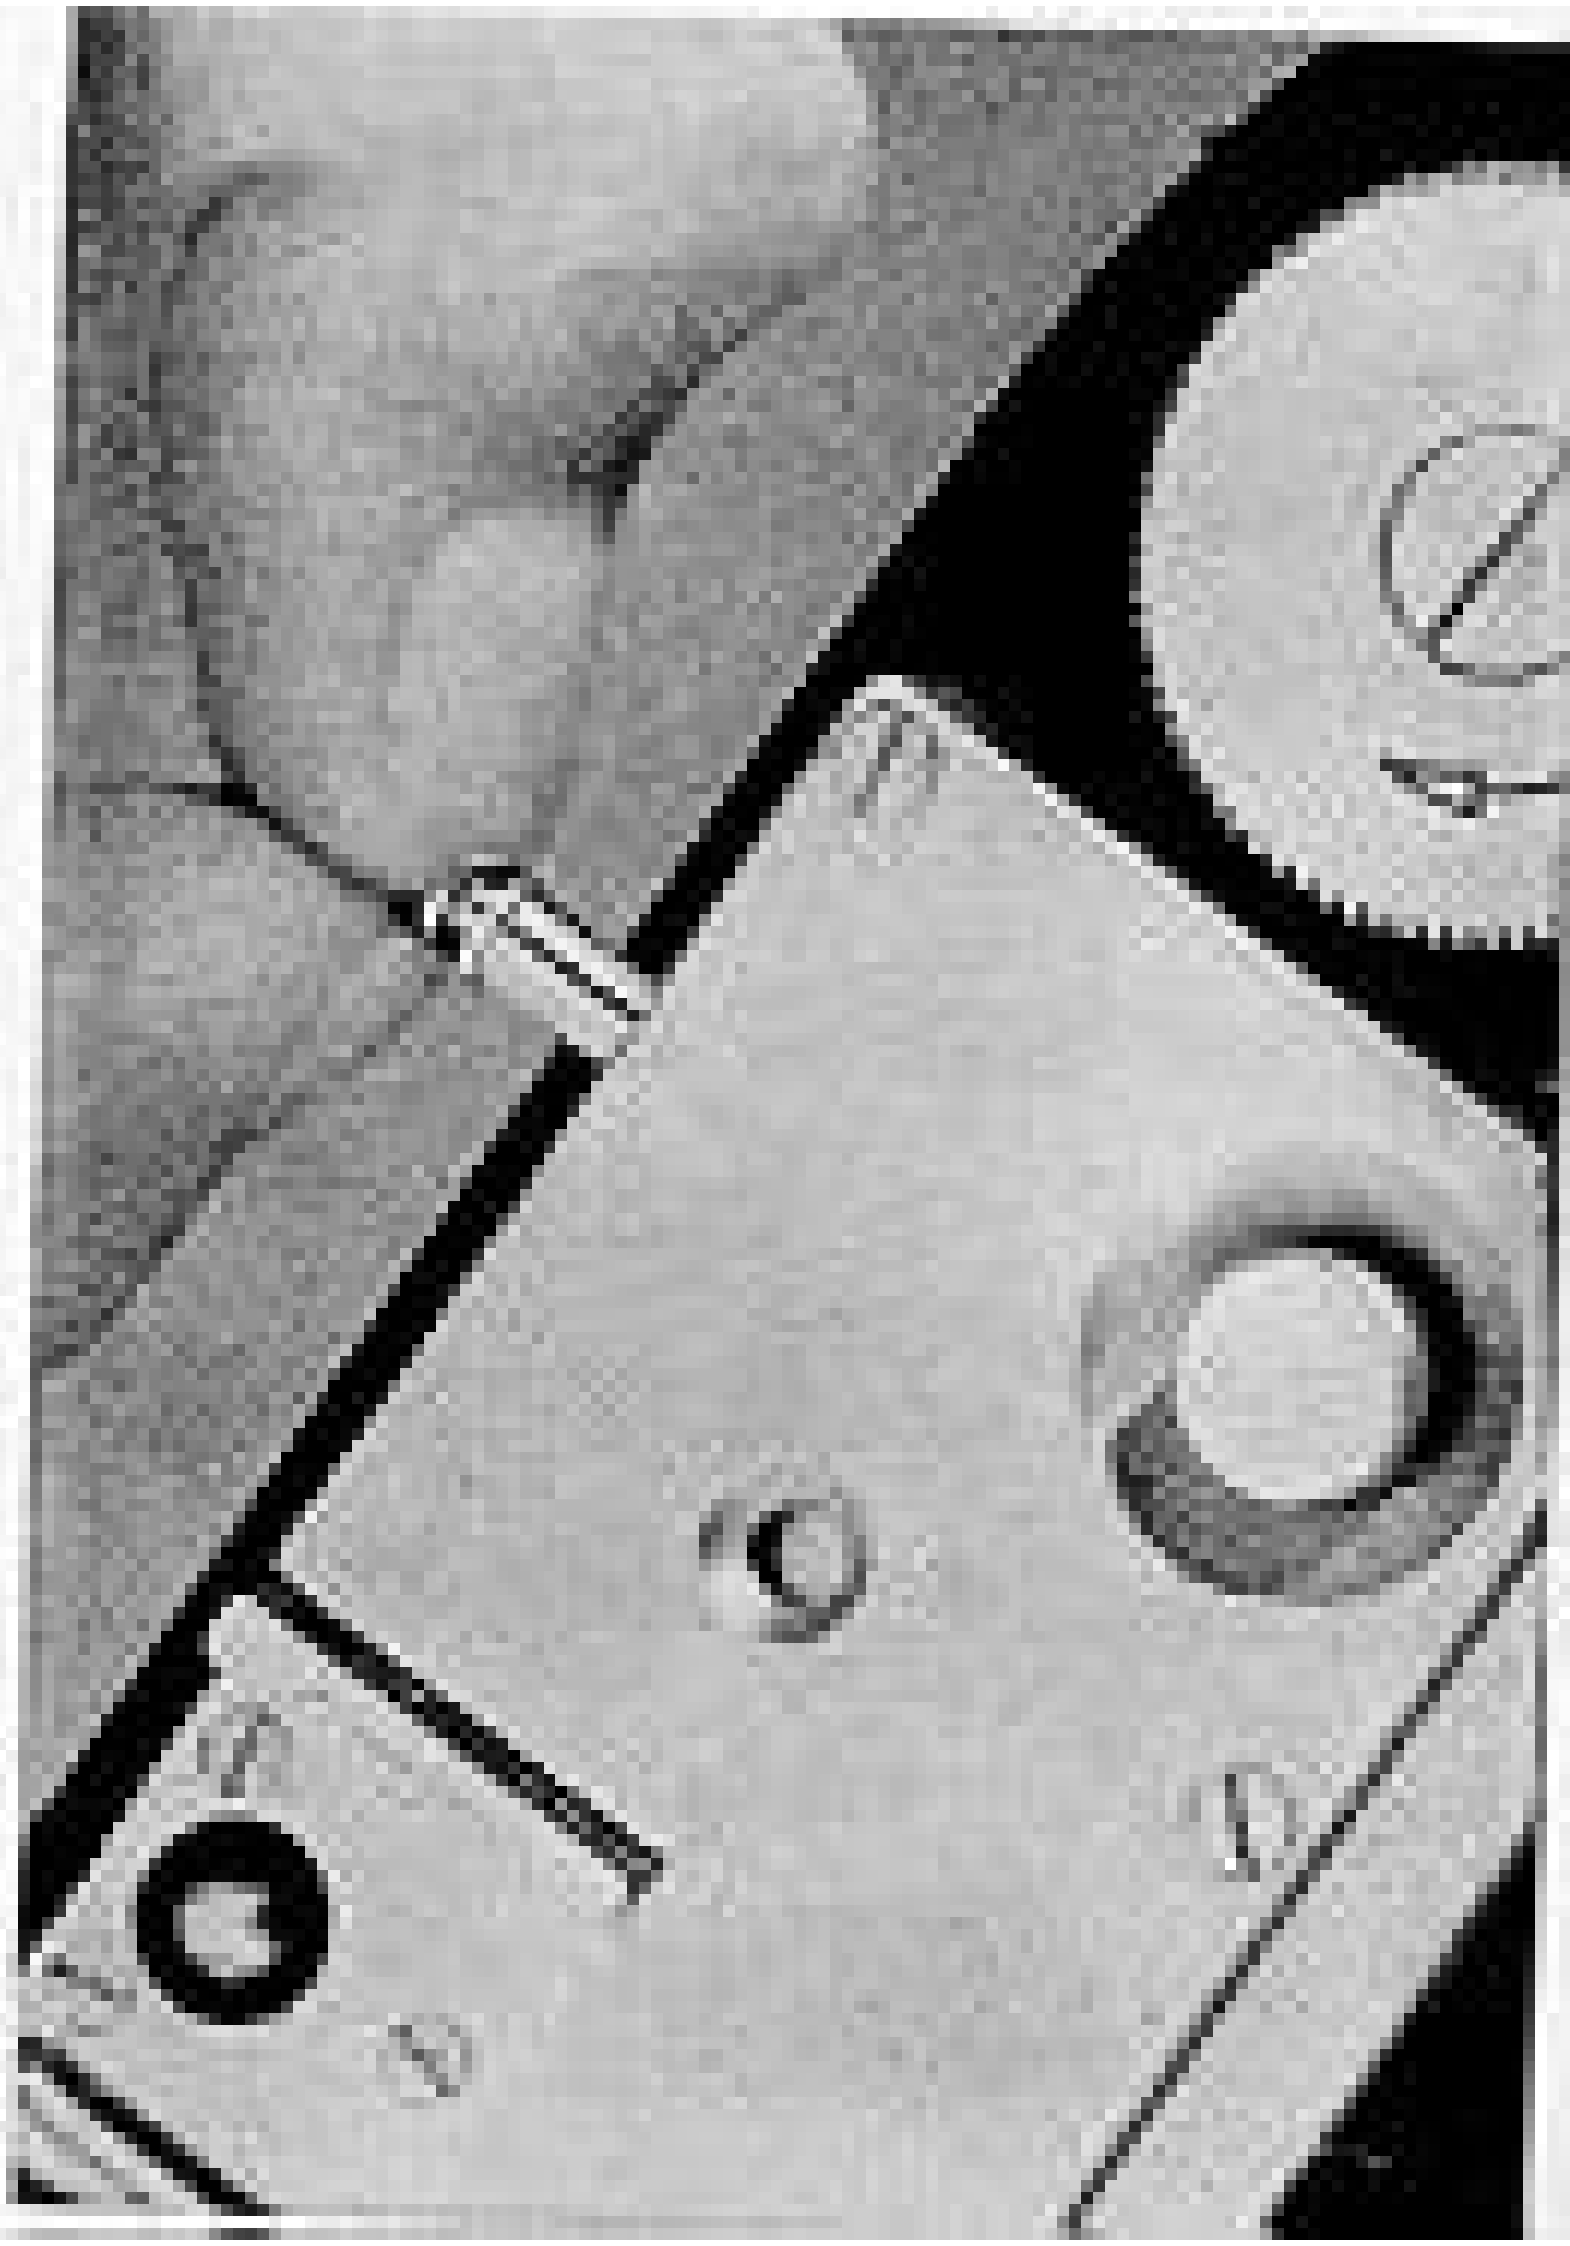


WINDING
KNOB

TOP SPOOL
CHAMBER


PICTURE
OPENING

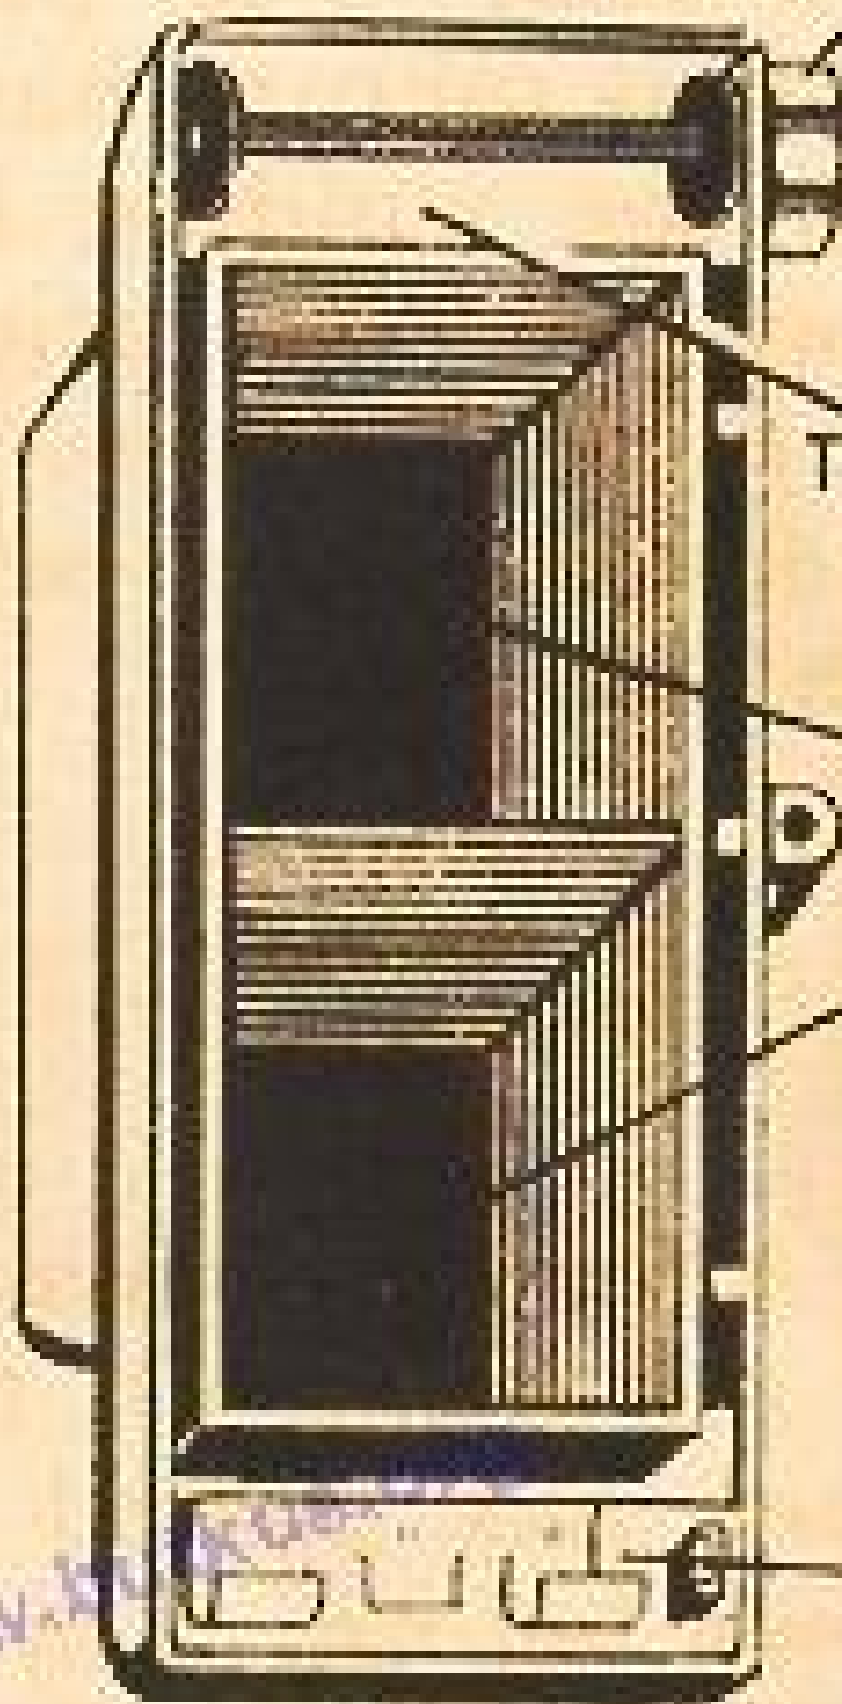LOWER
CHAMBER





(CAUTION!

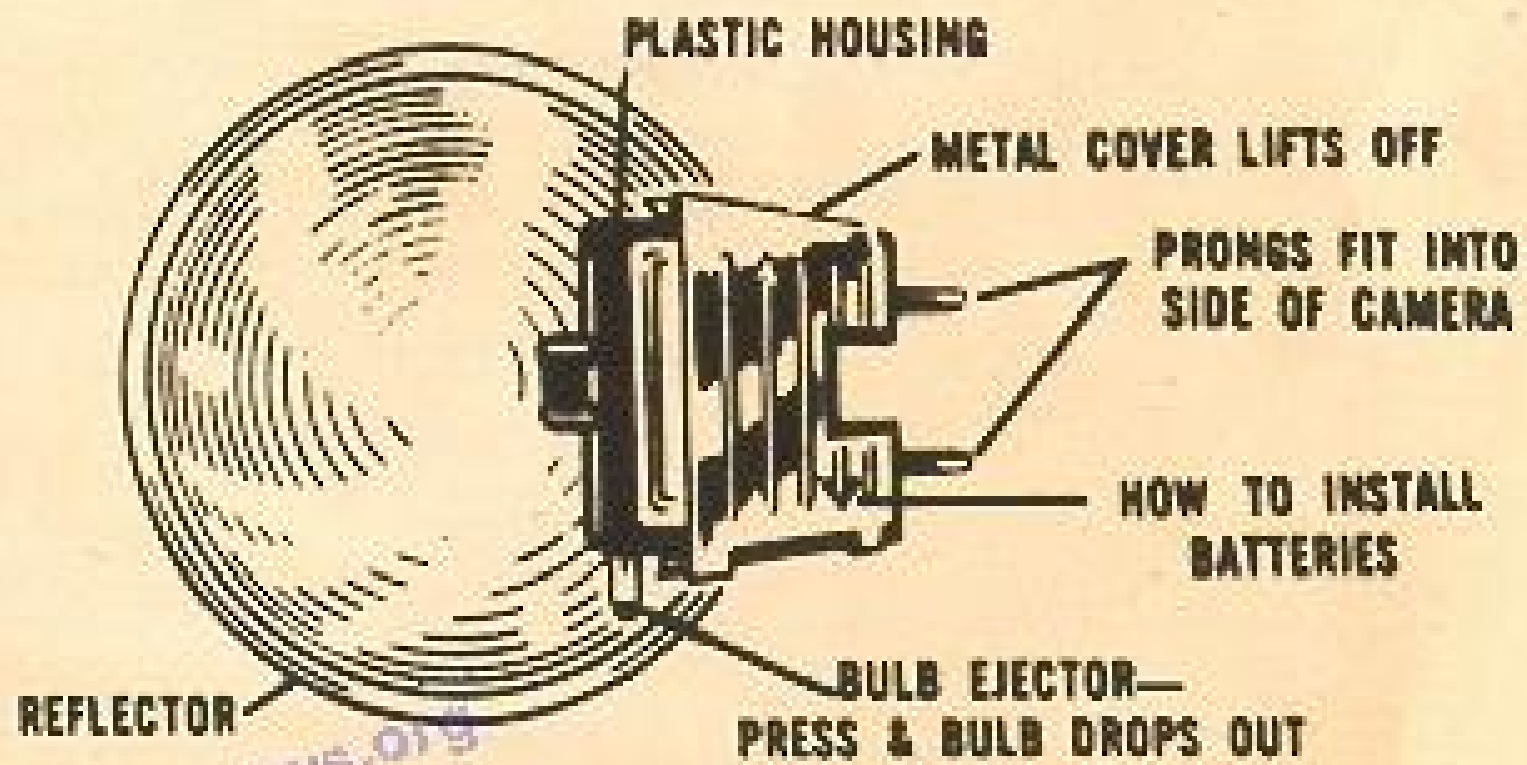**Remove batteries when camera
is not in use!)**



BACK OF FLASH UNIT

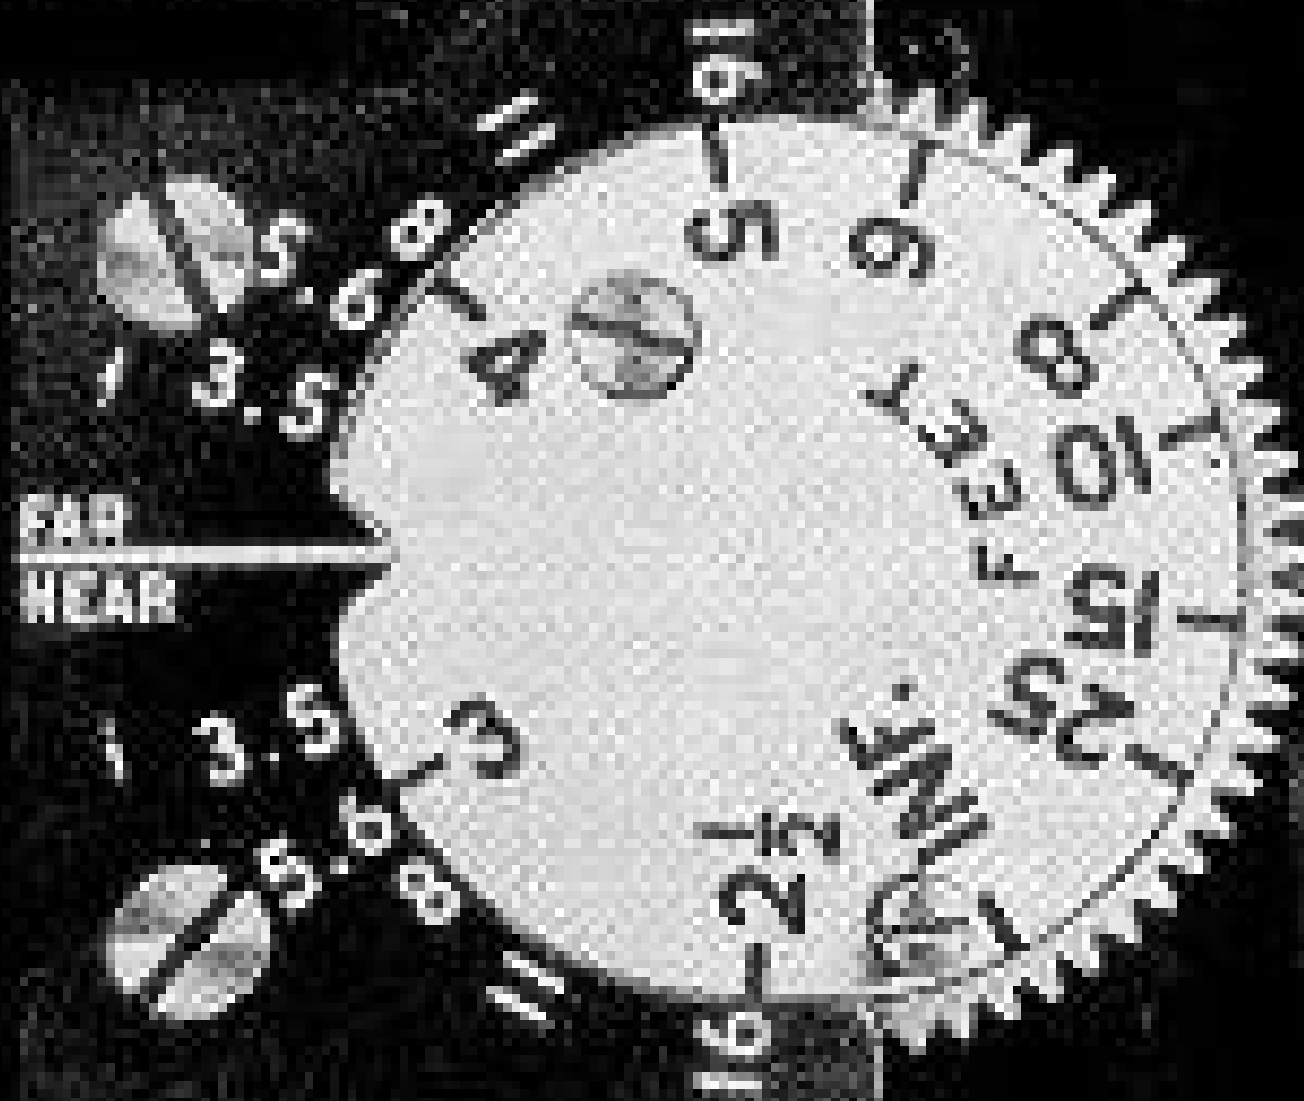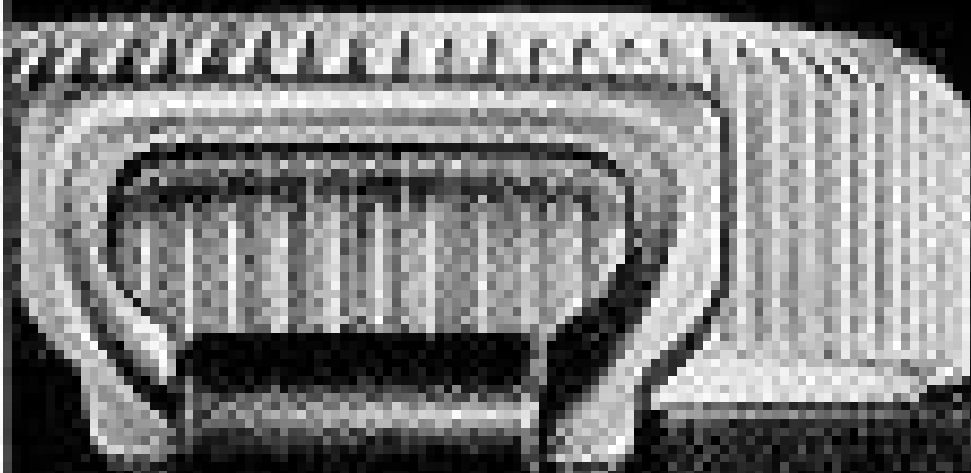

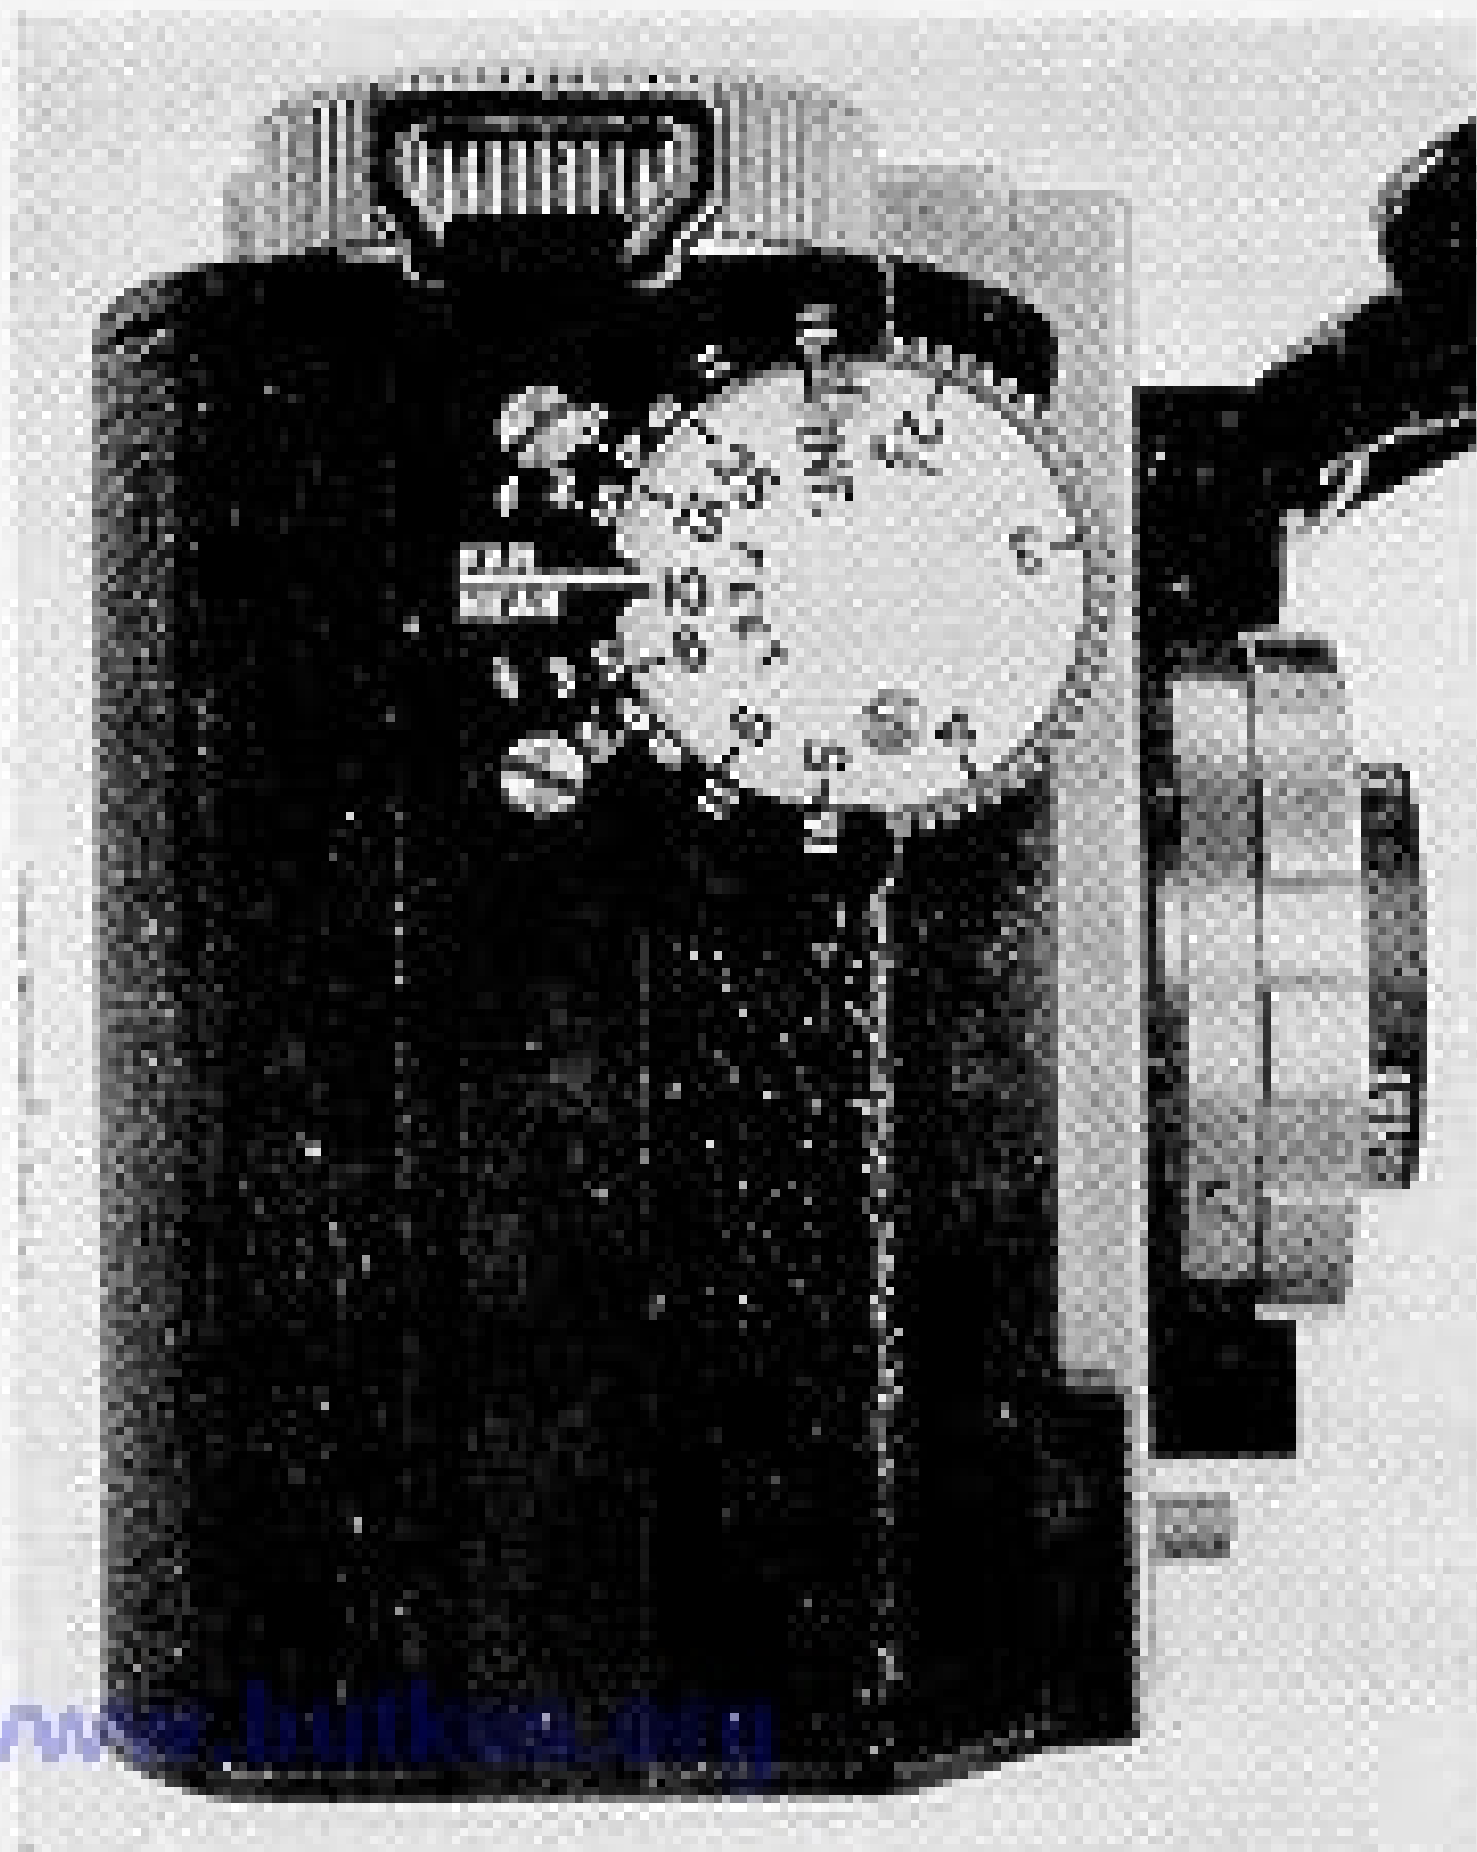


FIG. 4

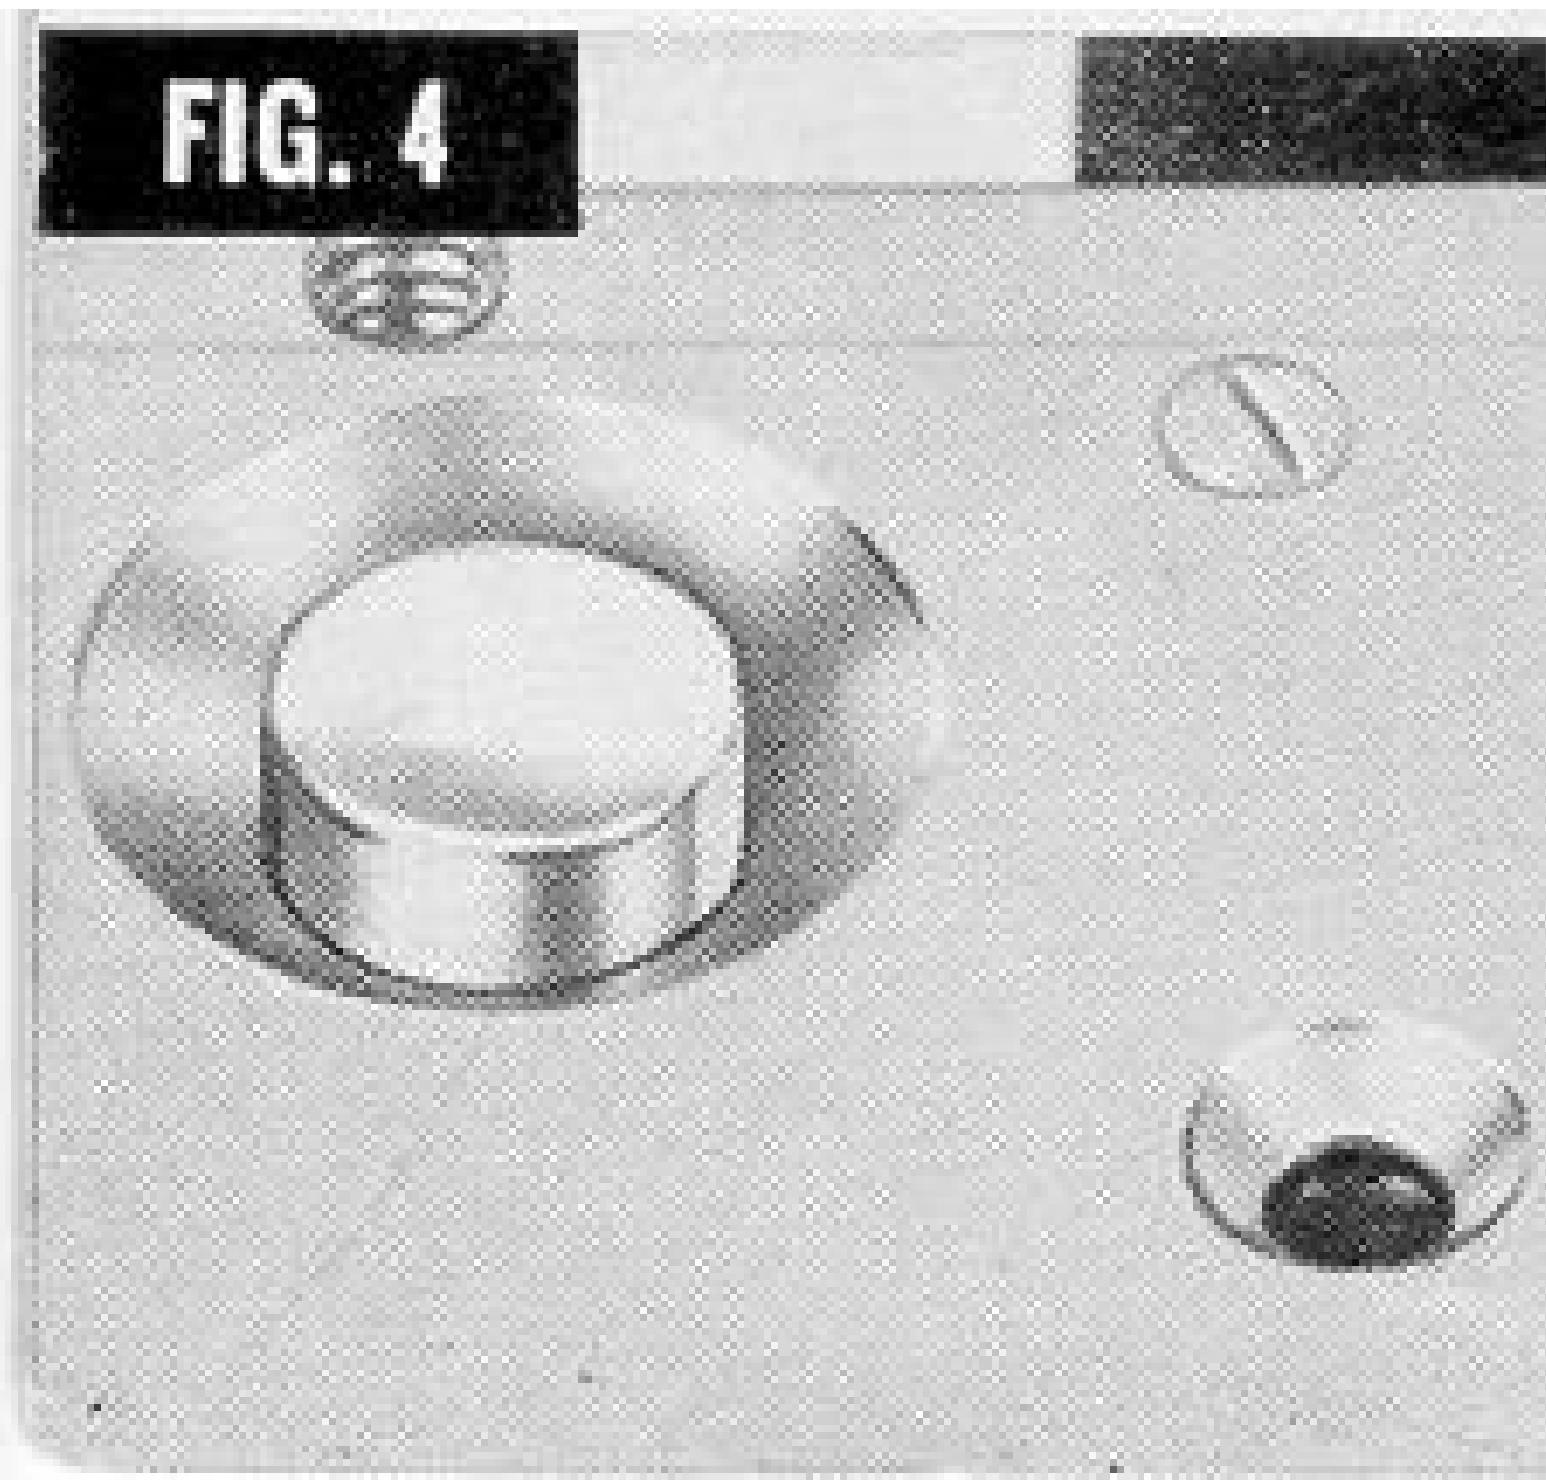


FIG. 1

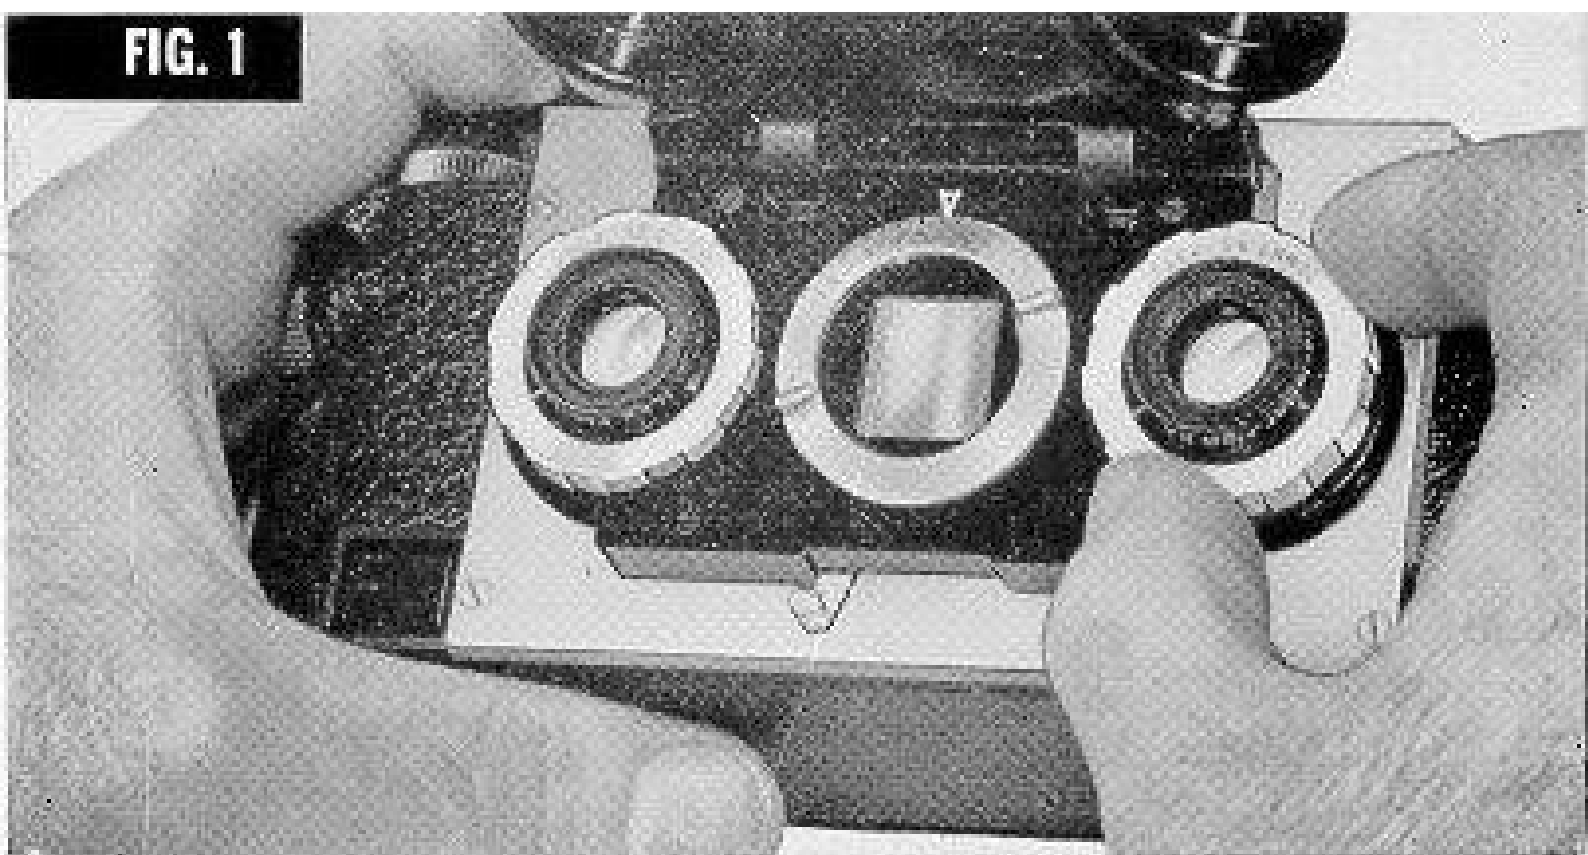


FIG. 2


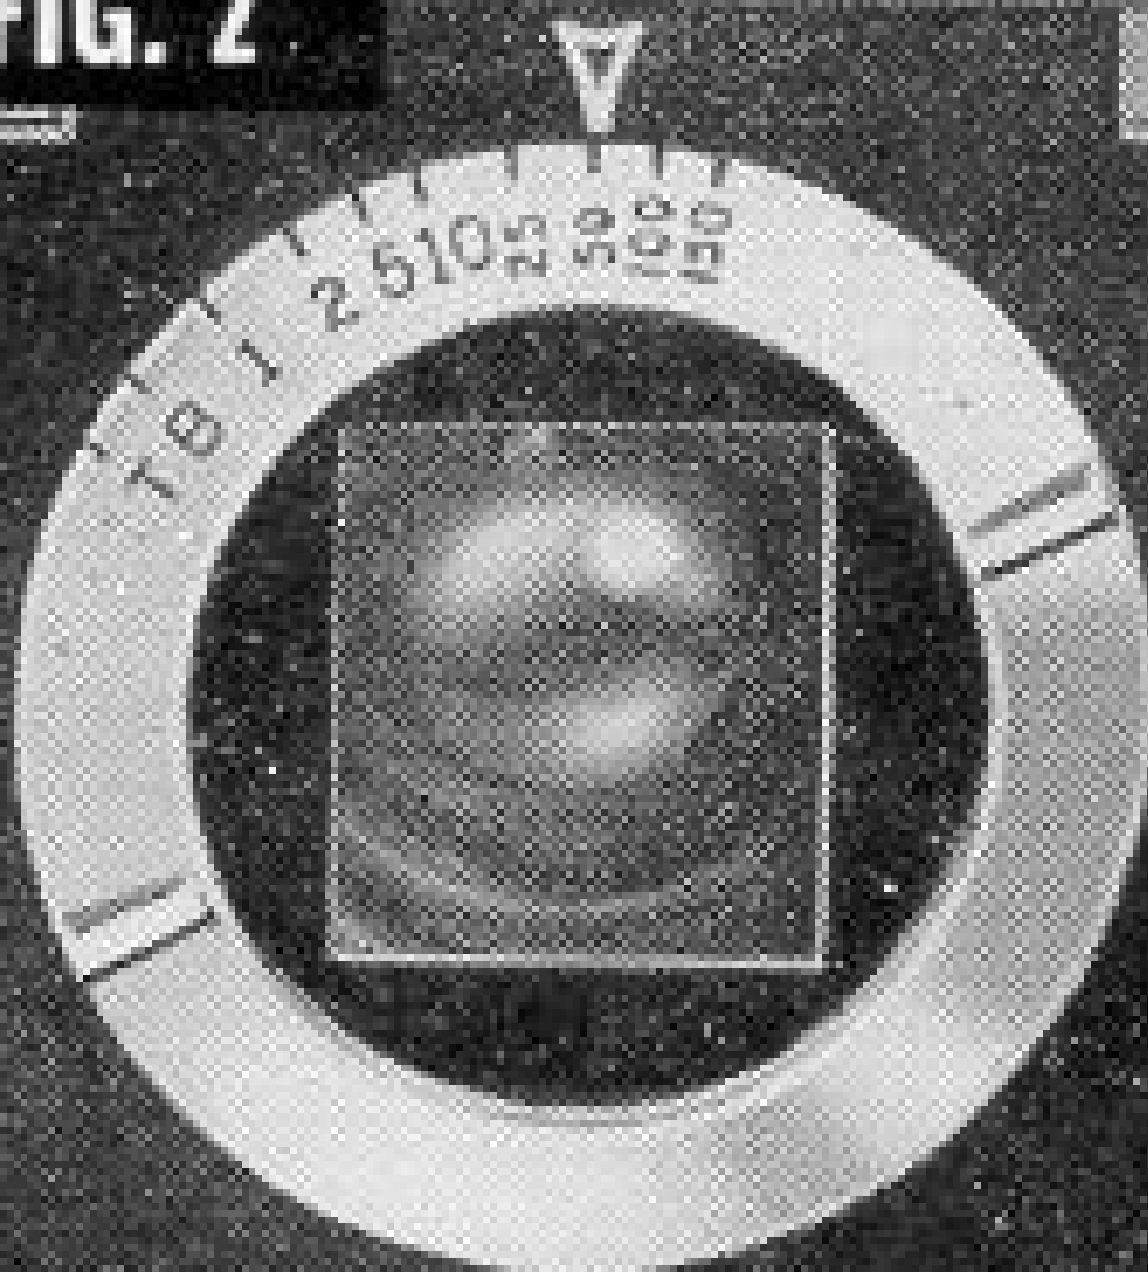


FIG. 3

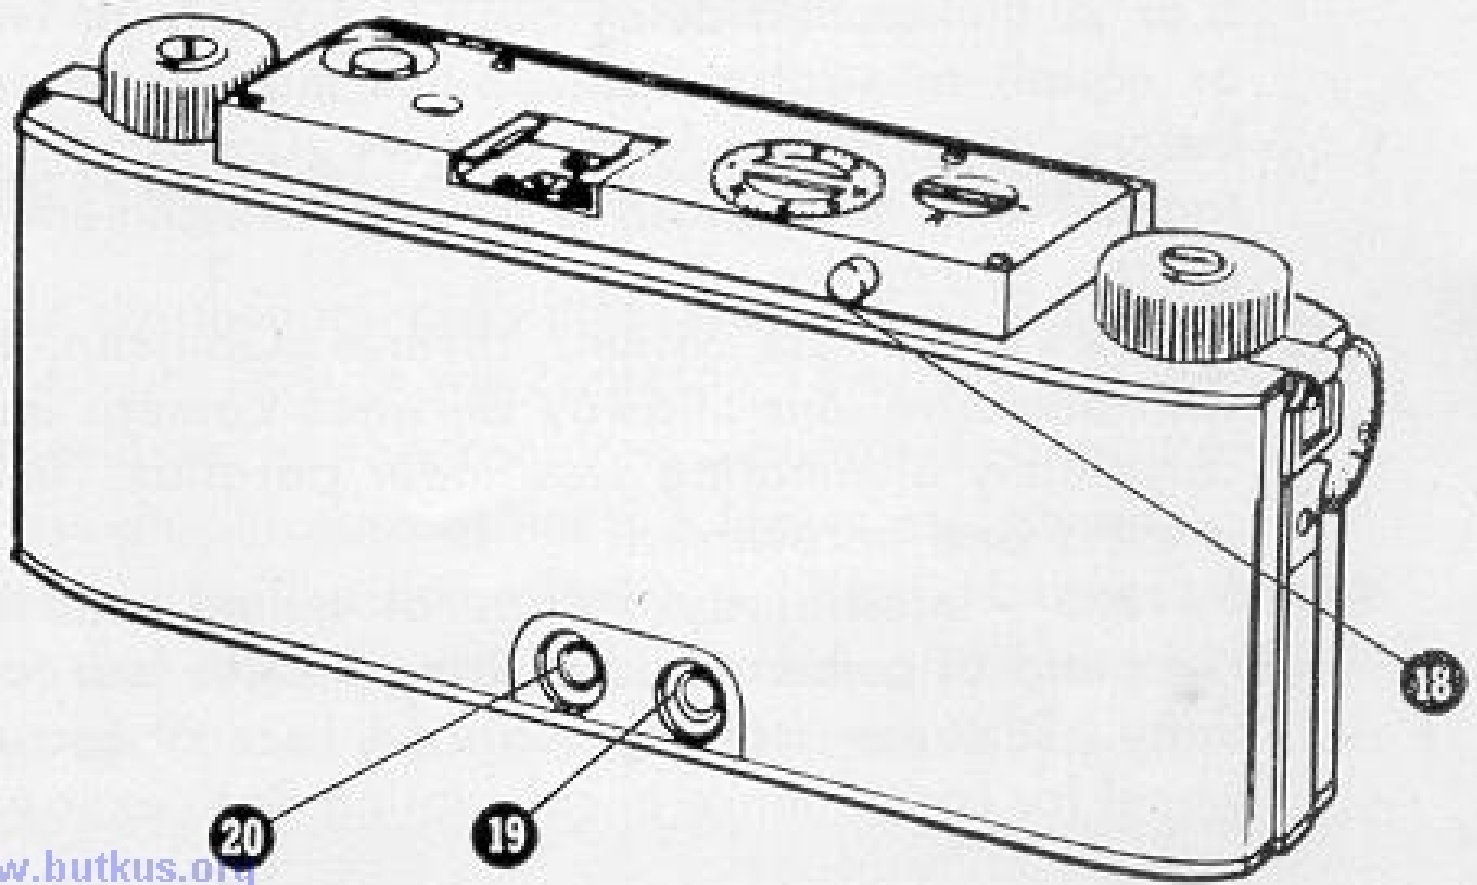

FIG. 5



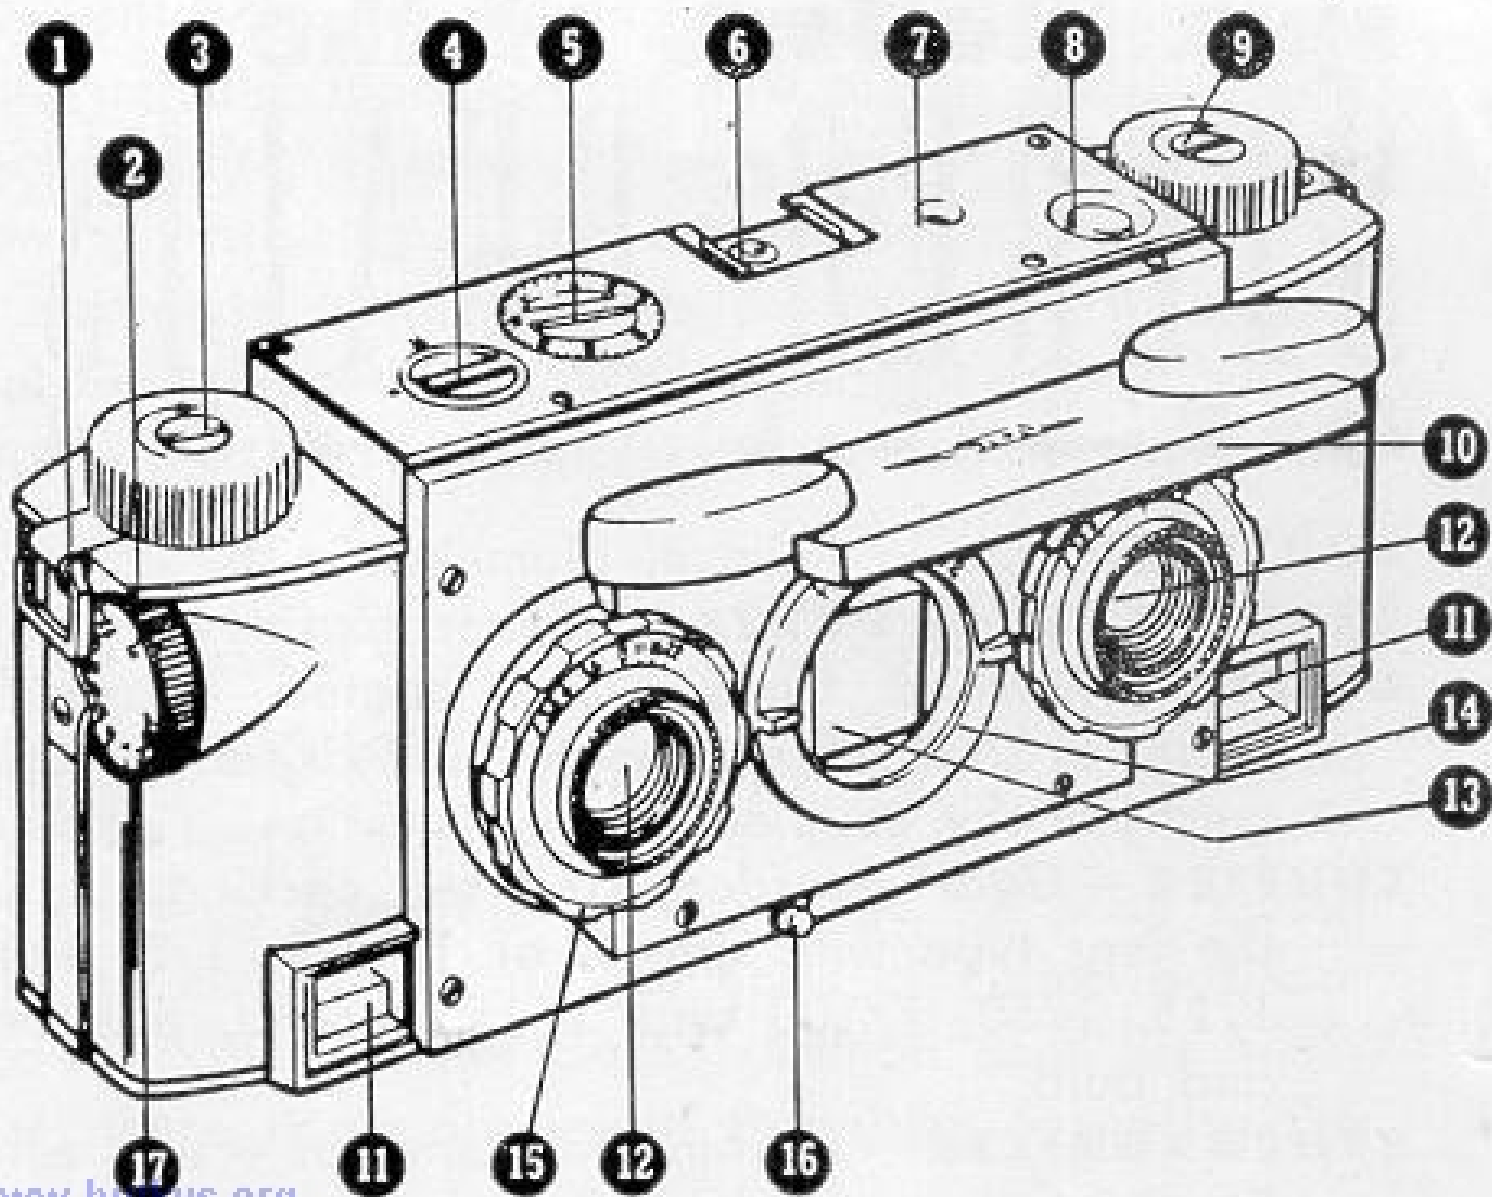


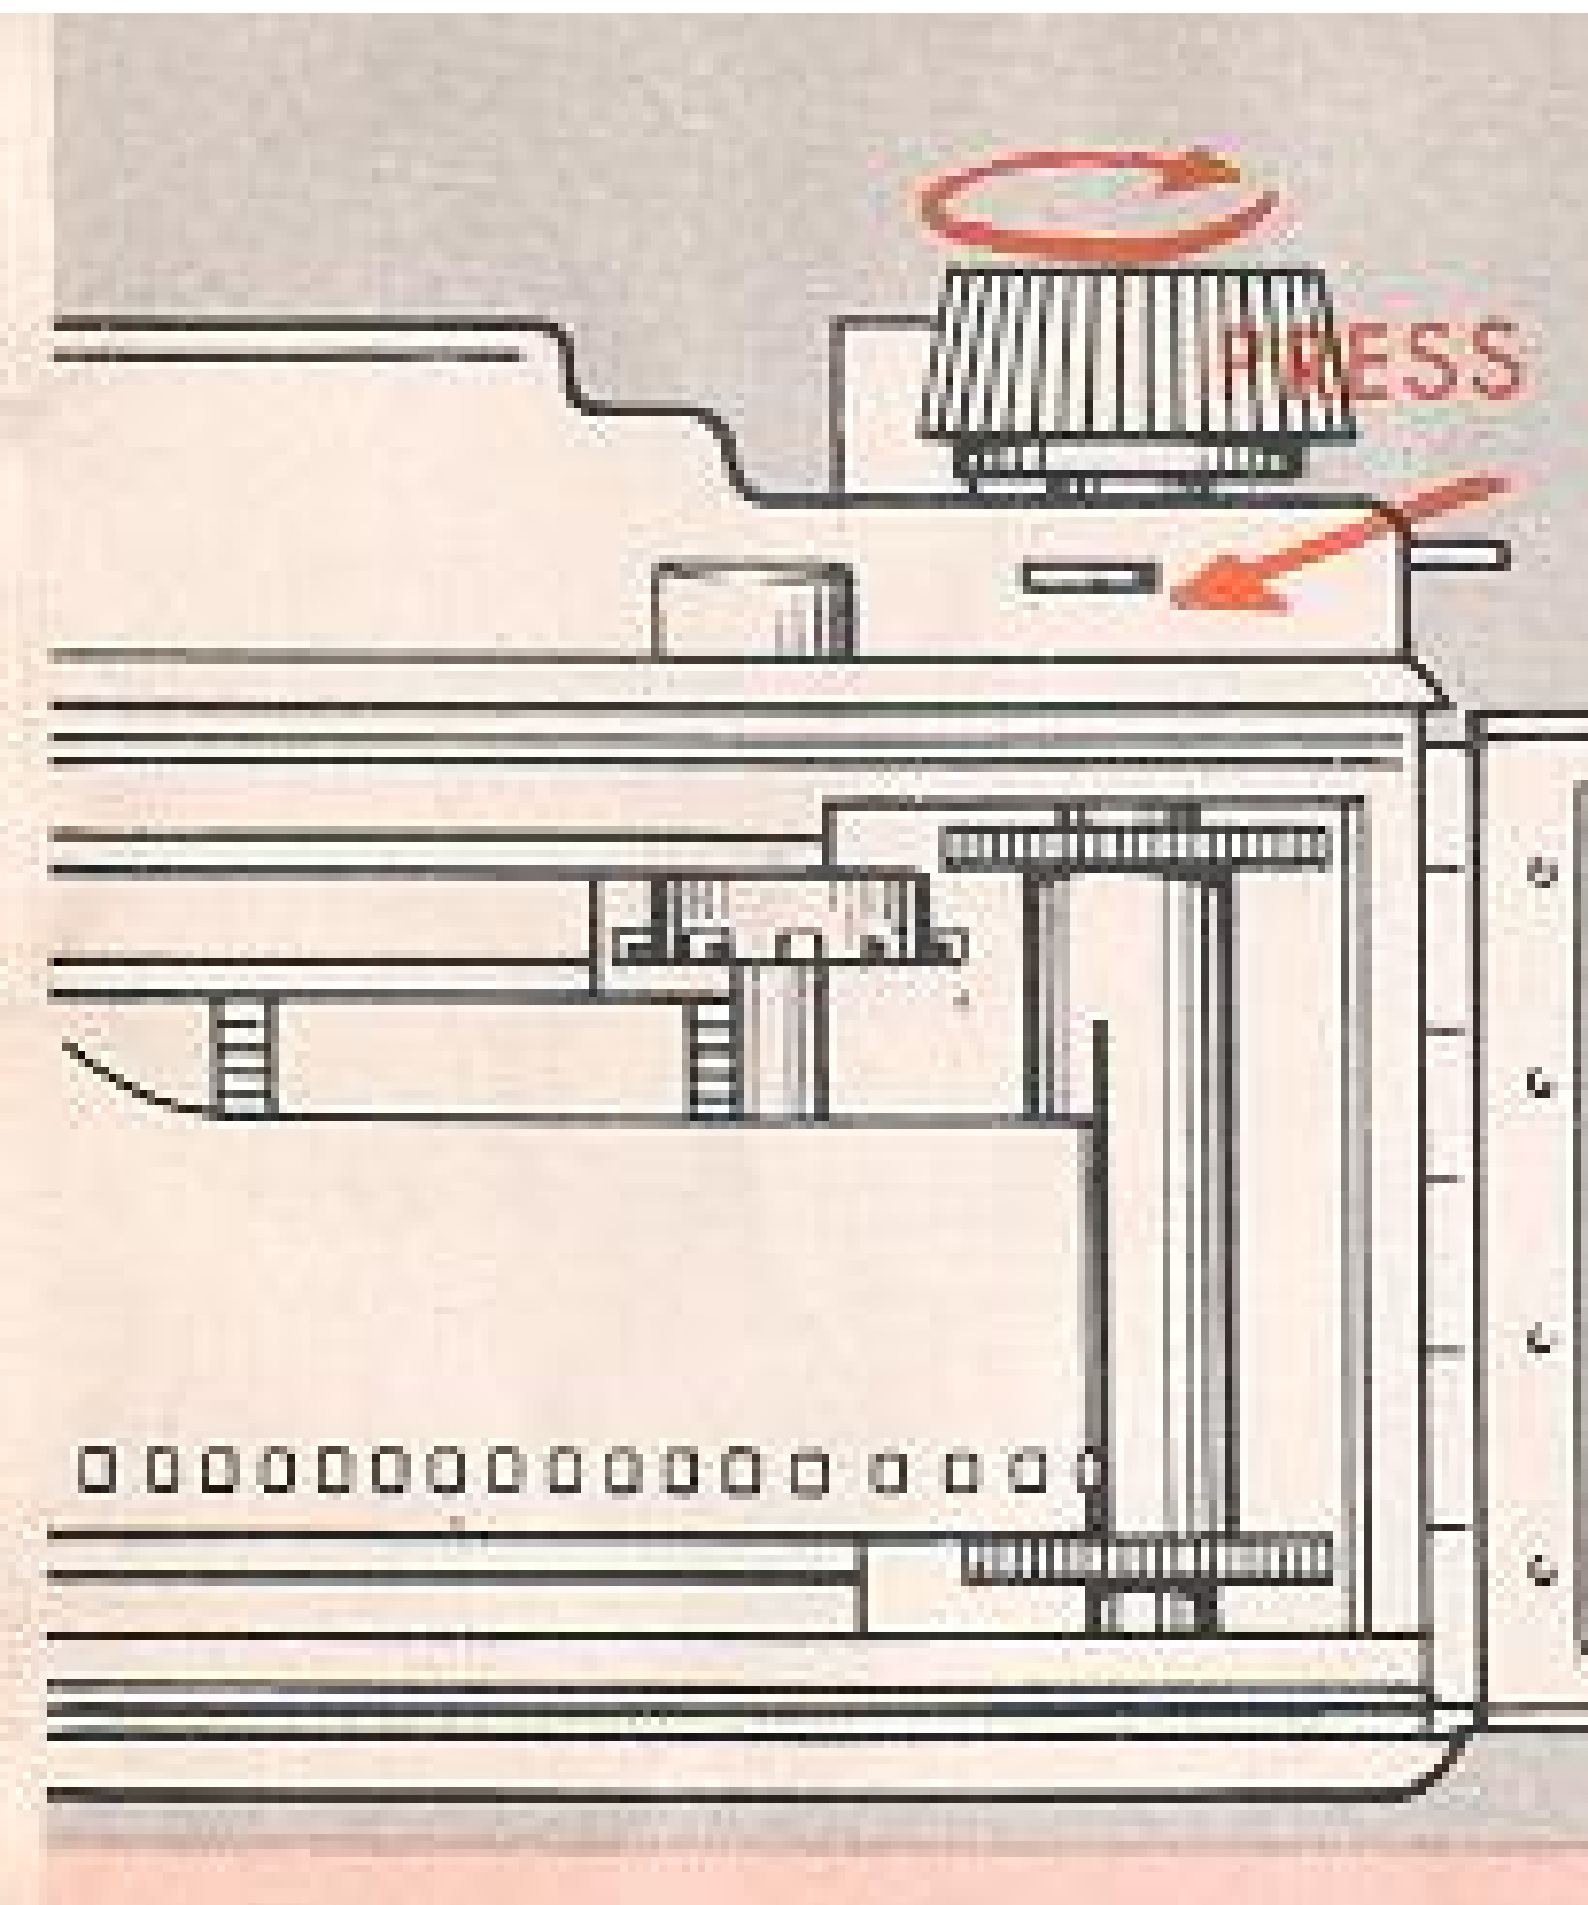


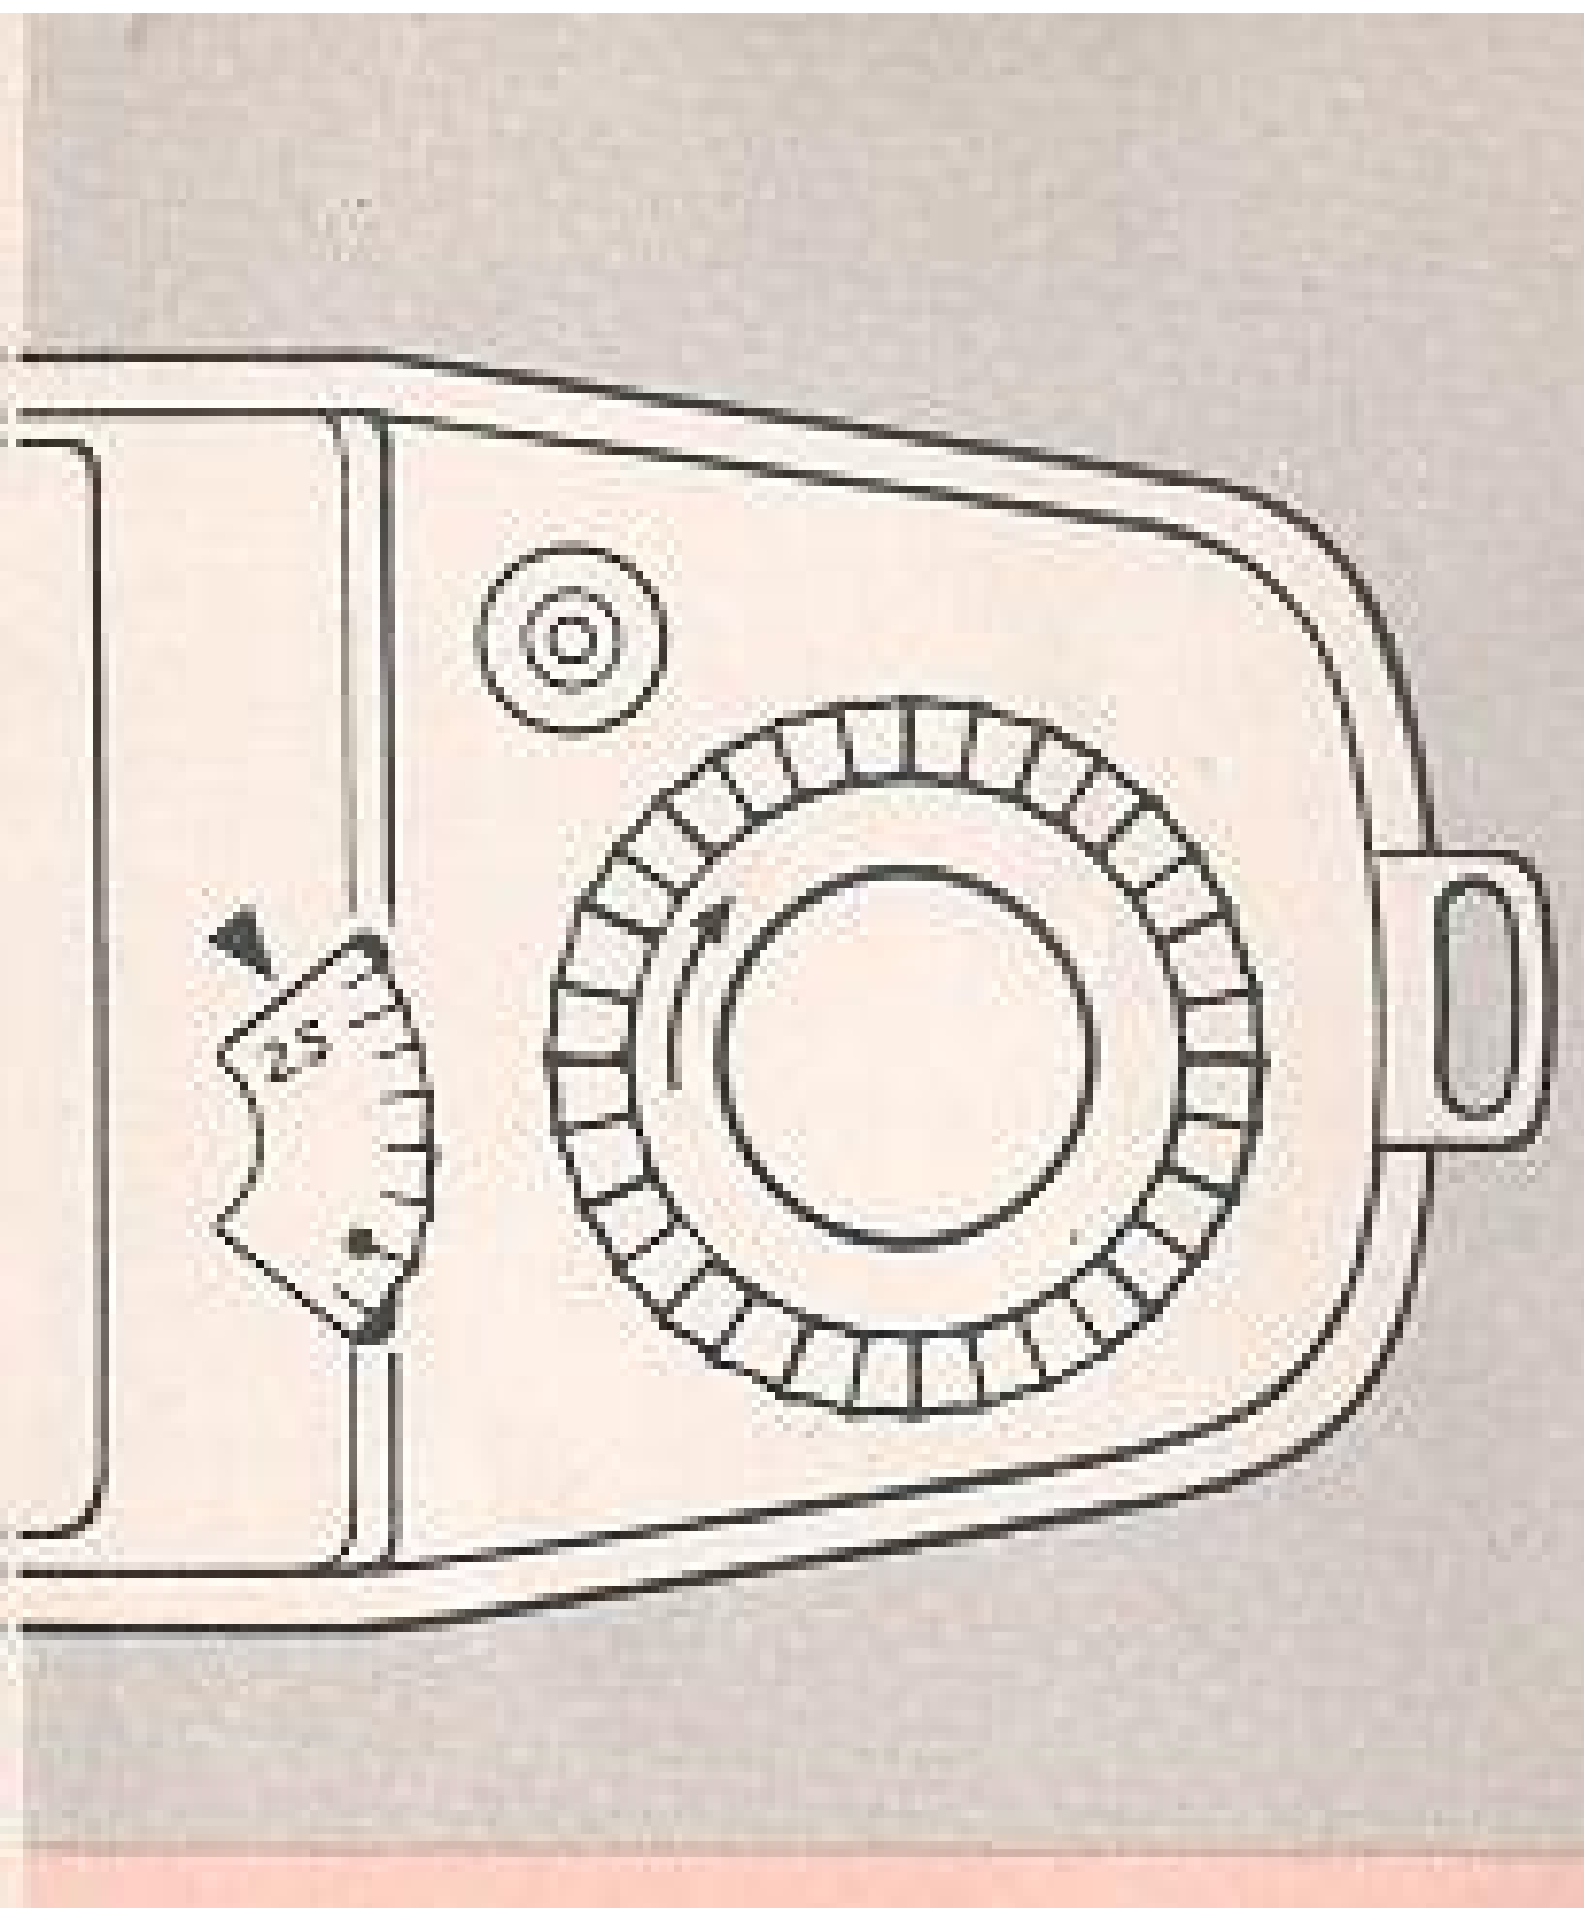
Note that vertical lines in bottom part of split field do not match those in upper part. The camera is not in focus.



A complete matched picture is seen when the rangefinder is set properly. Vertical lines in the top of the split field match the same lines in the bottom portion.







LOADING



OPEN the camera by pressing cover lock down and swinging cover back.

FIG. 6

