















Out of focus (too far)

 


In focus




Out of focus (too near)



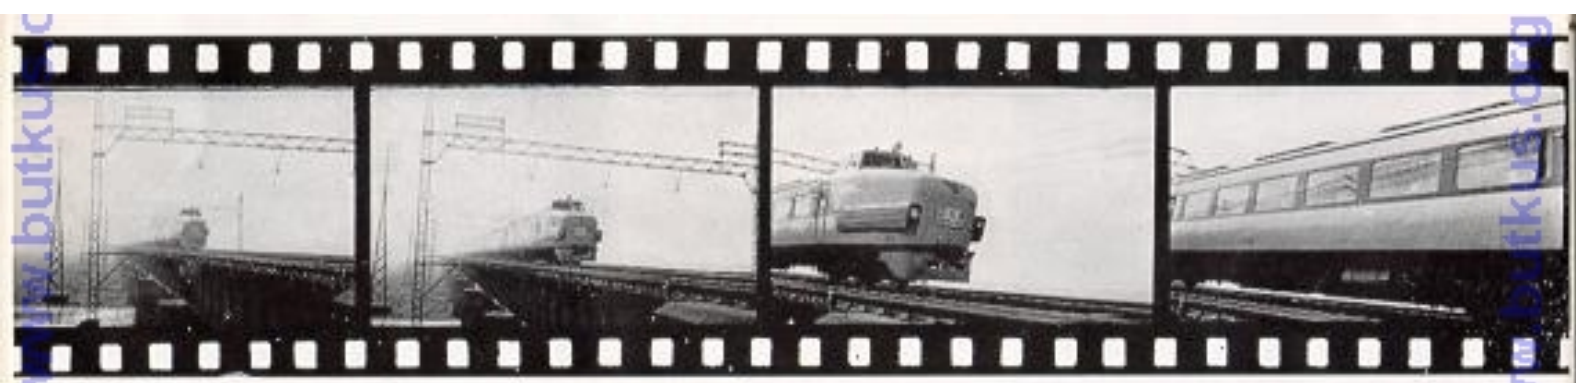


completing the repair

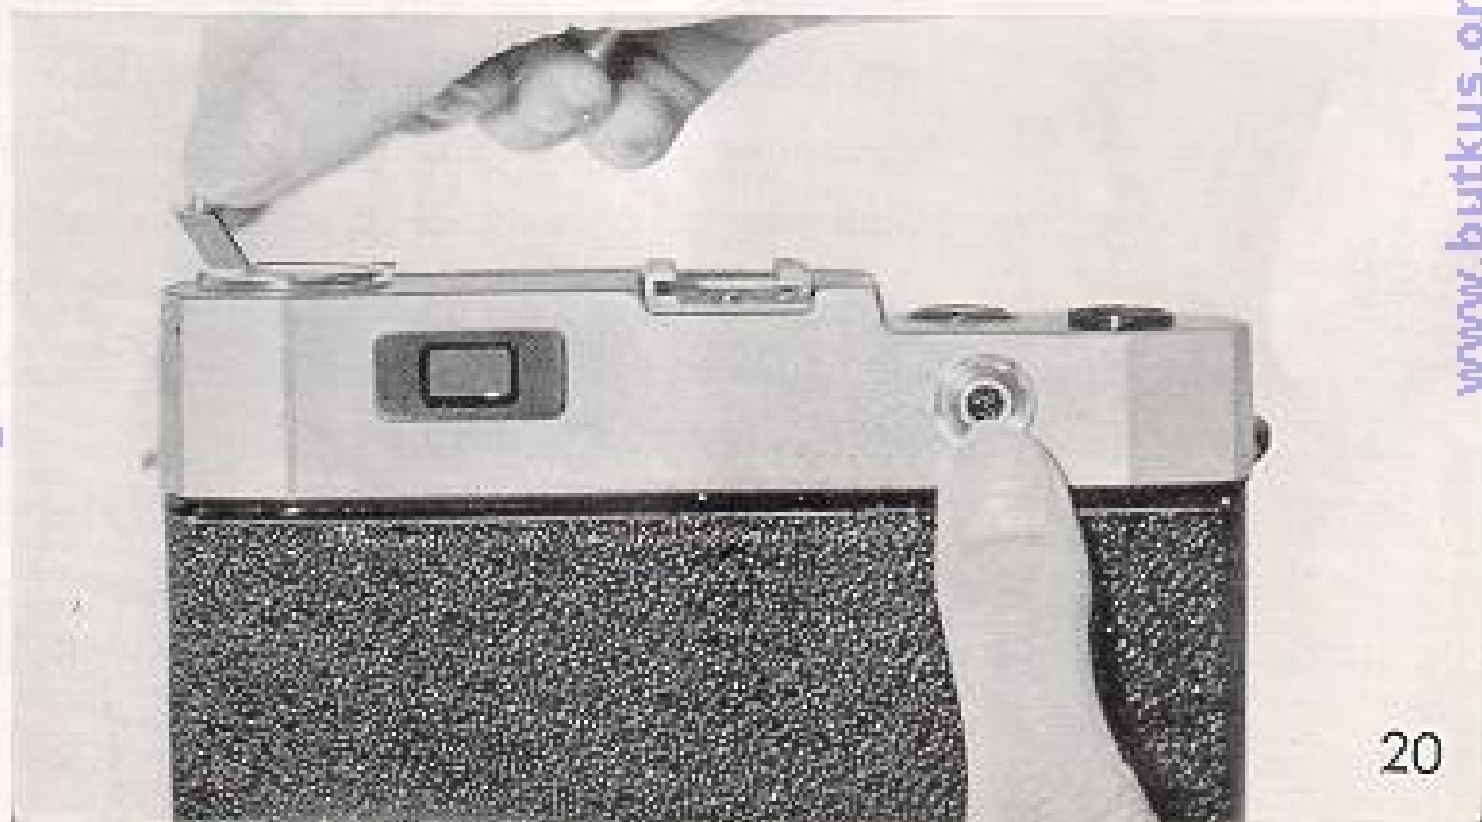 











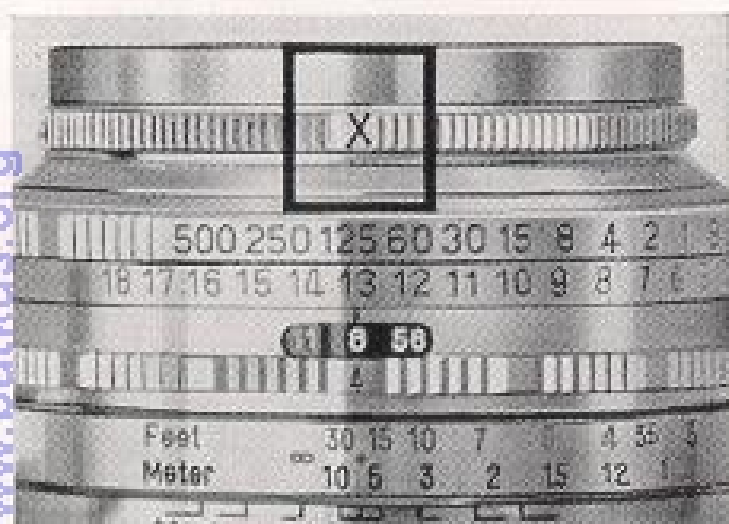      


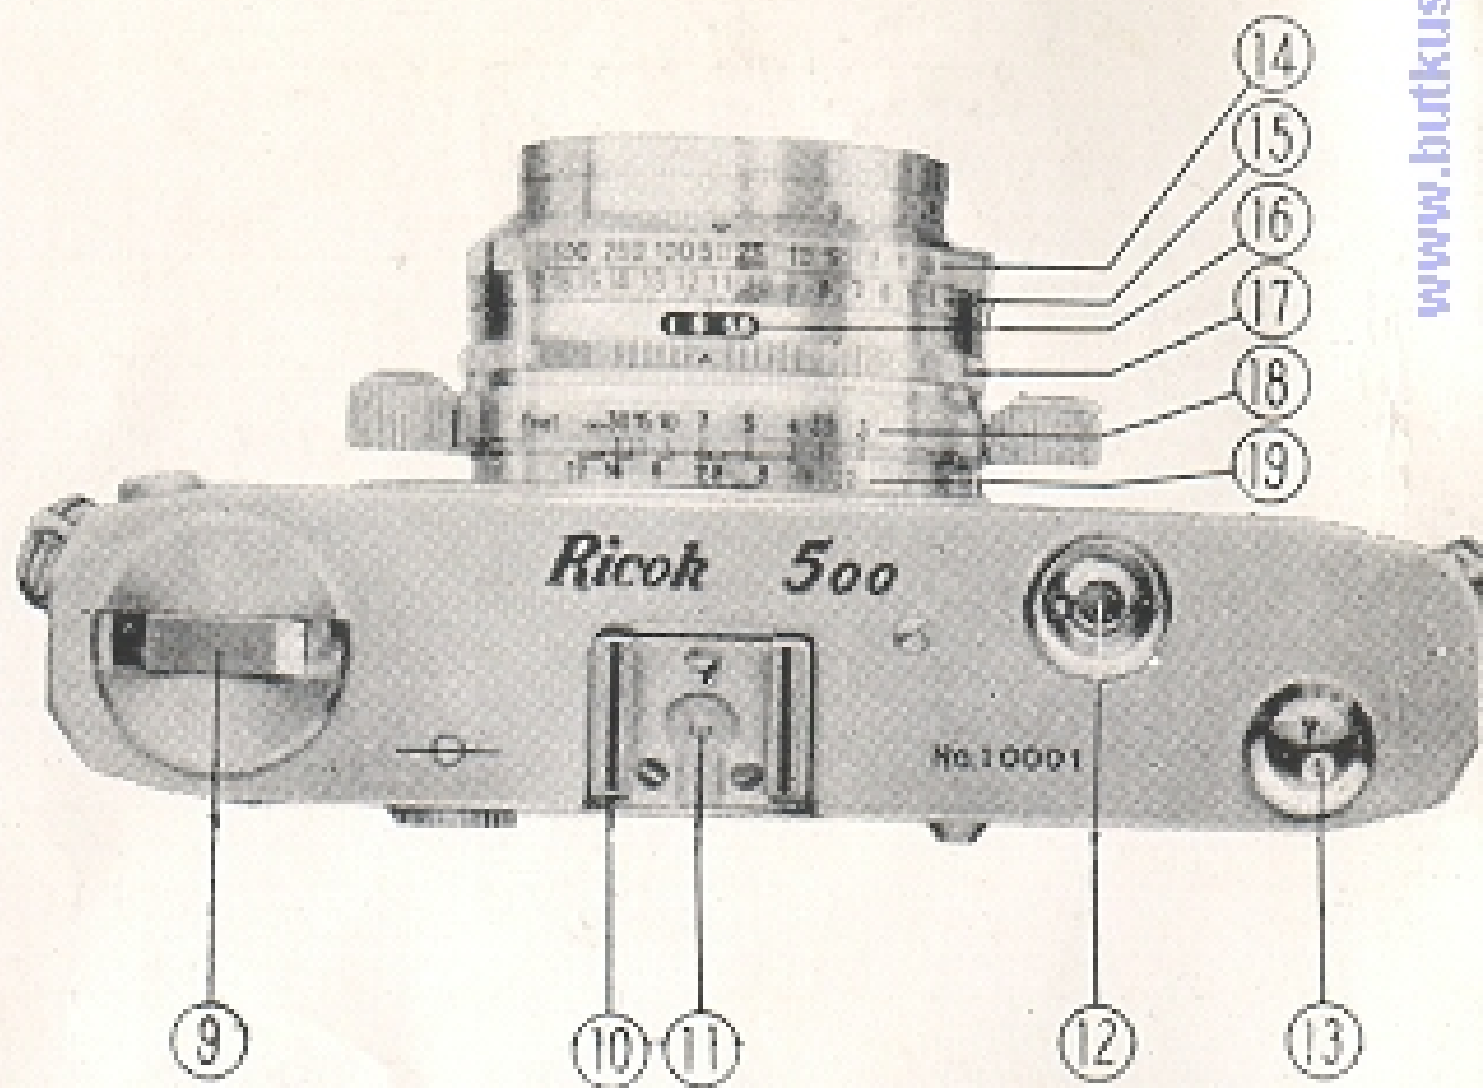 


 
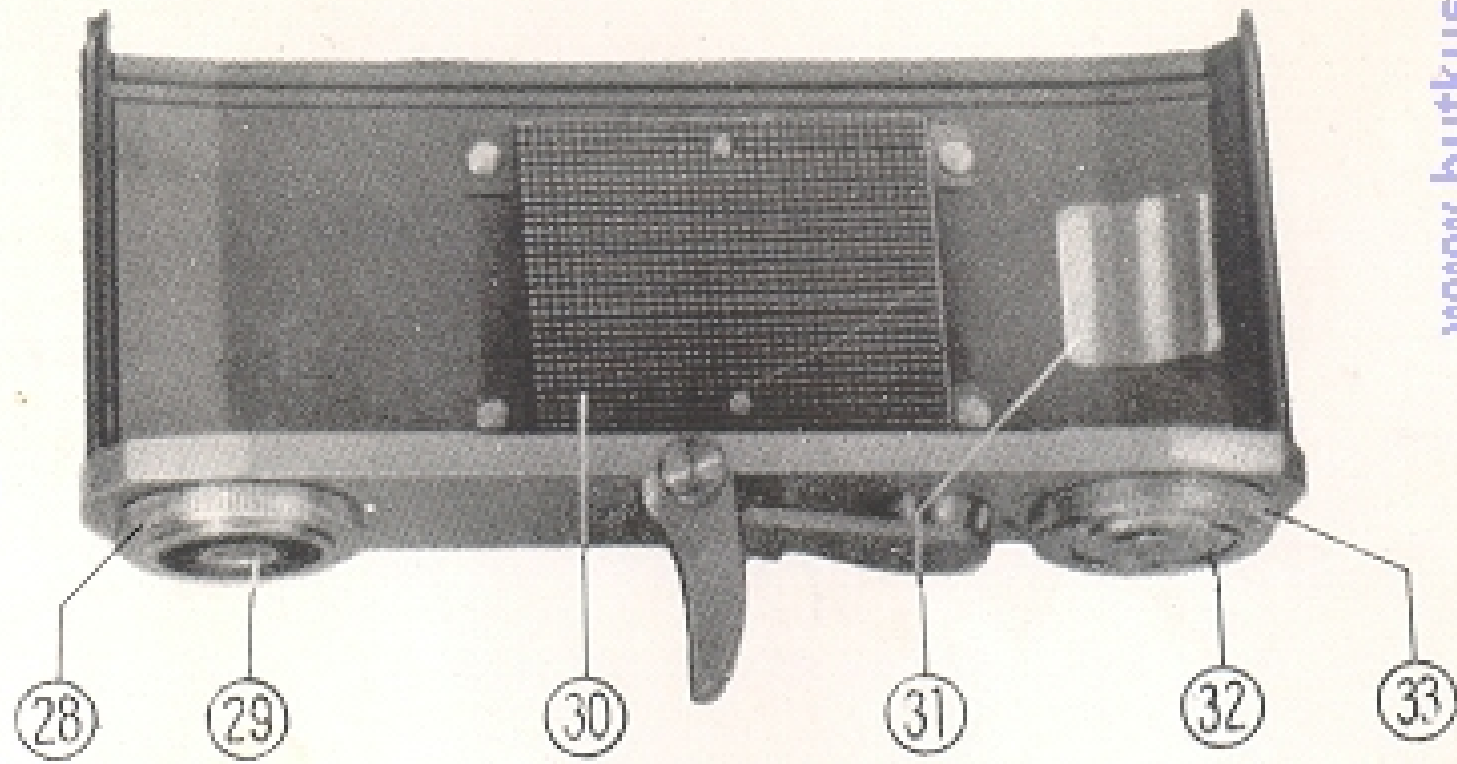 


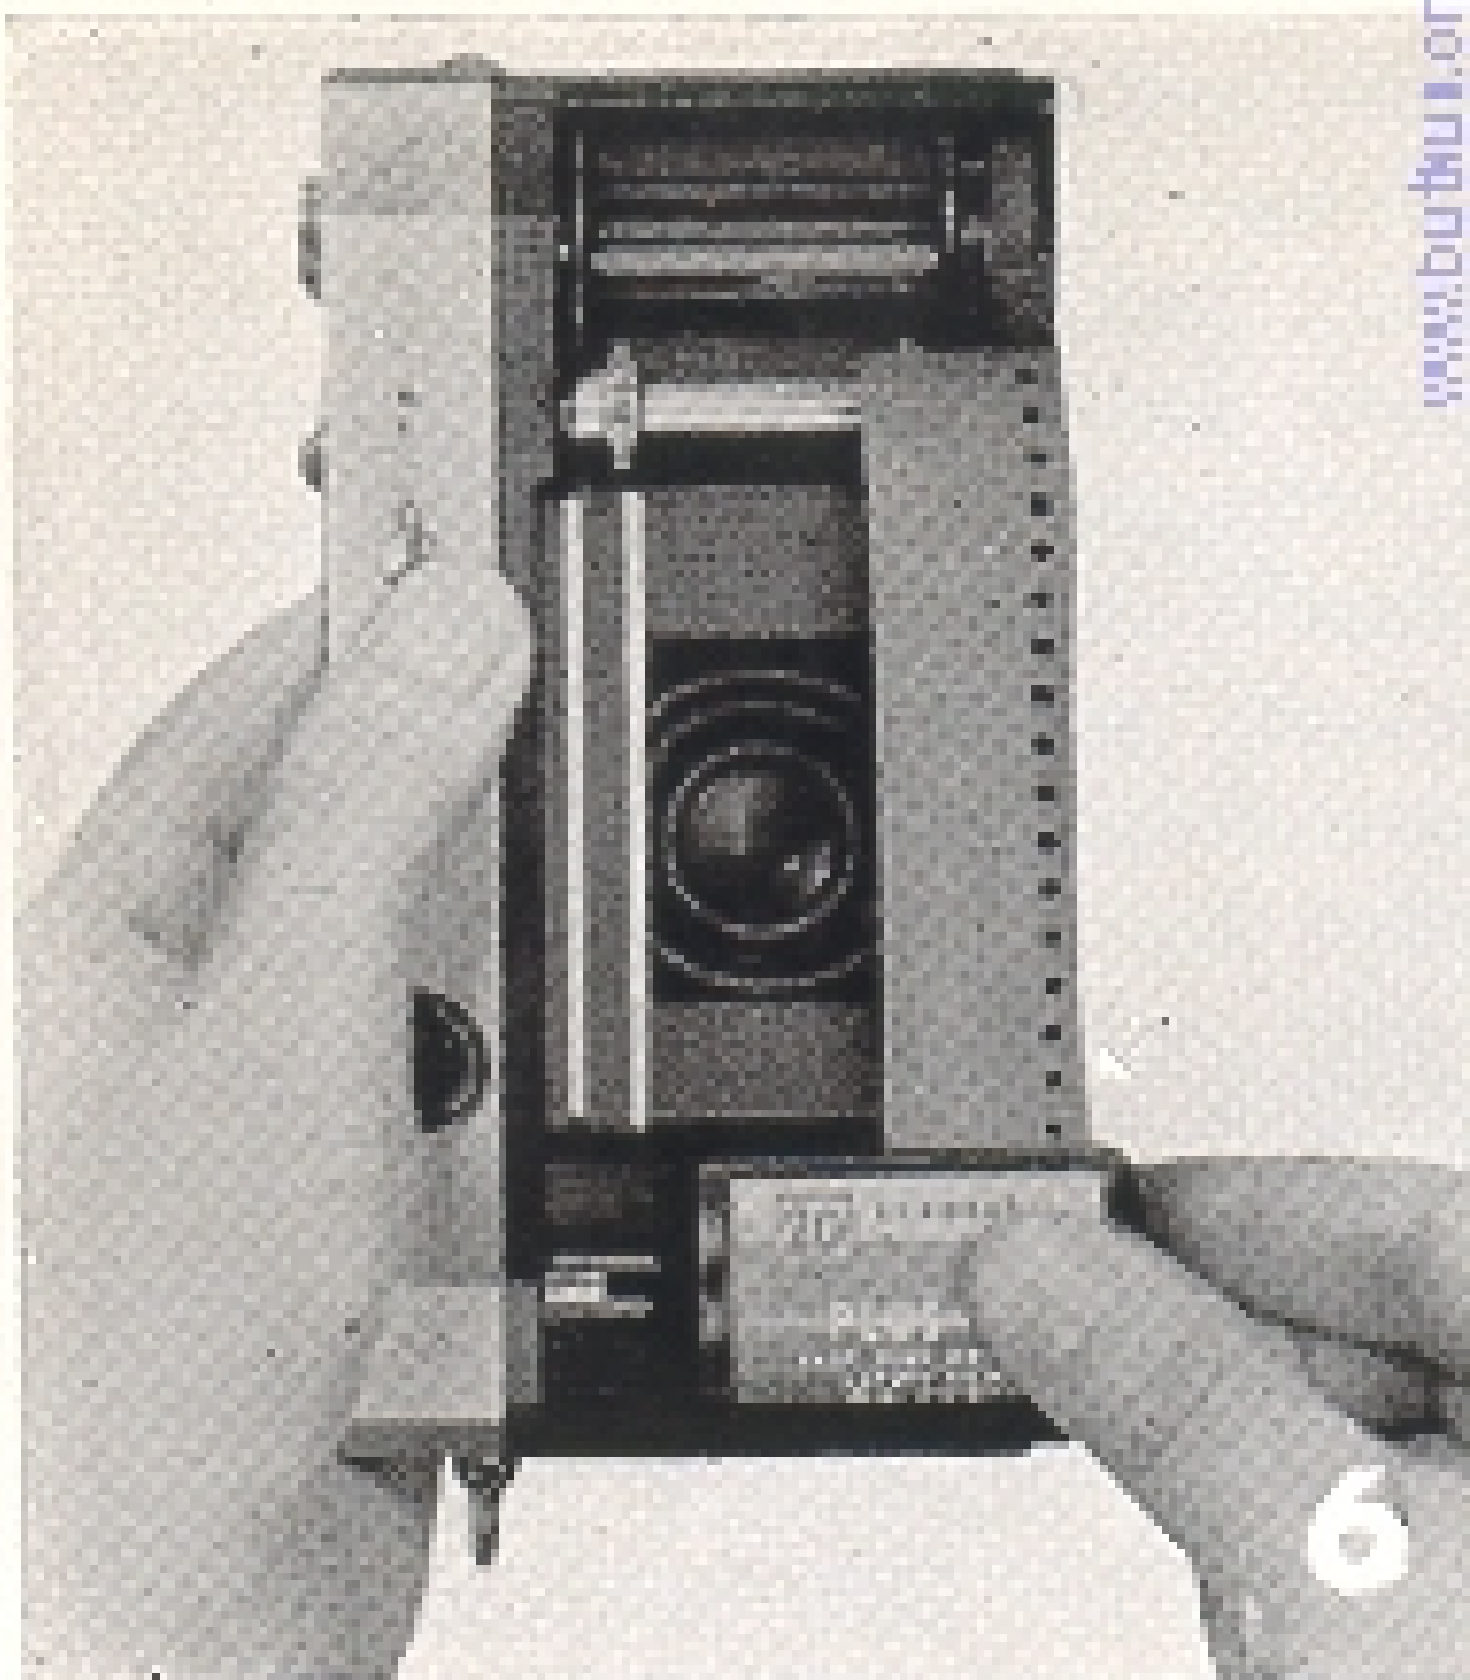 


 
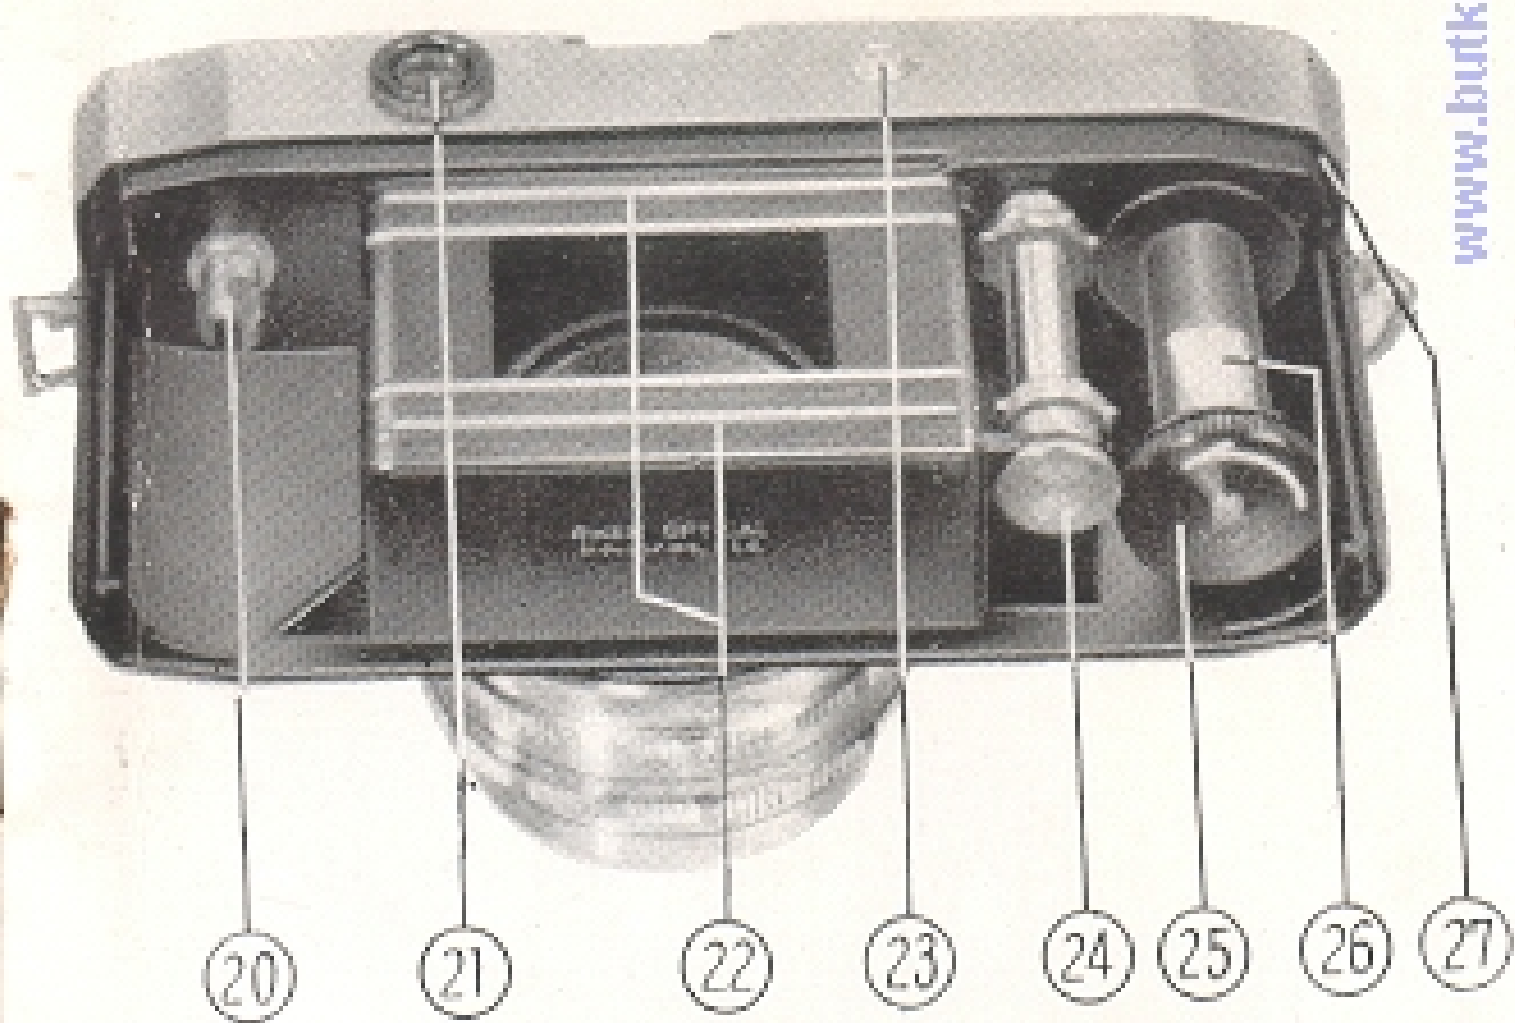 


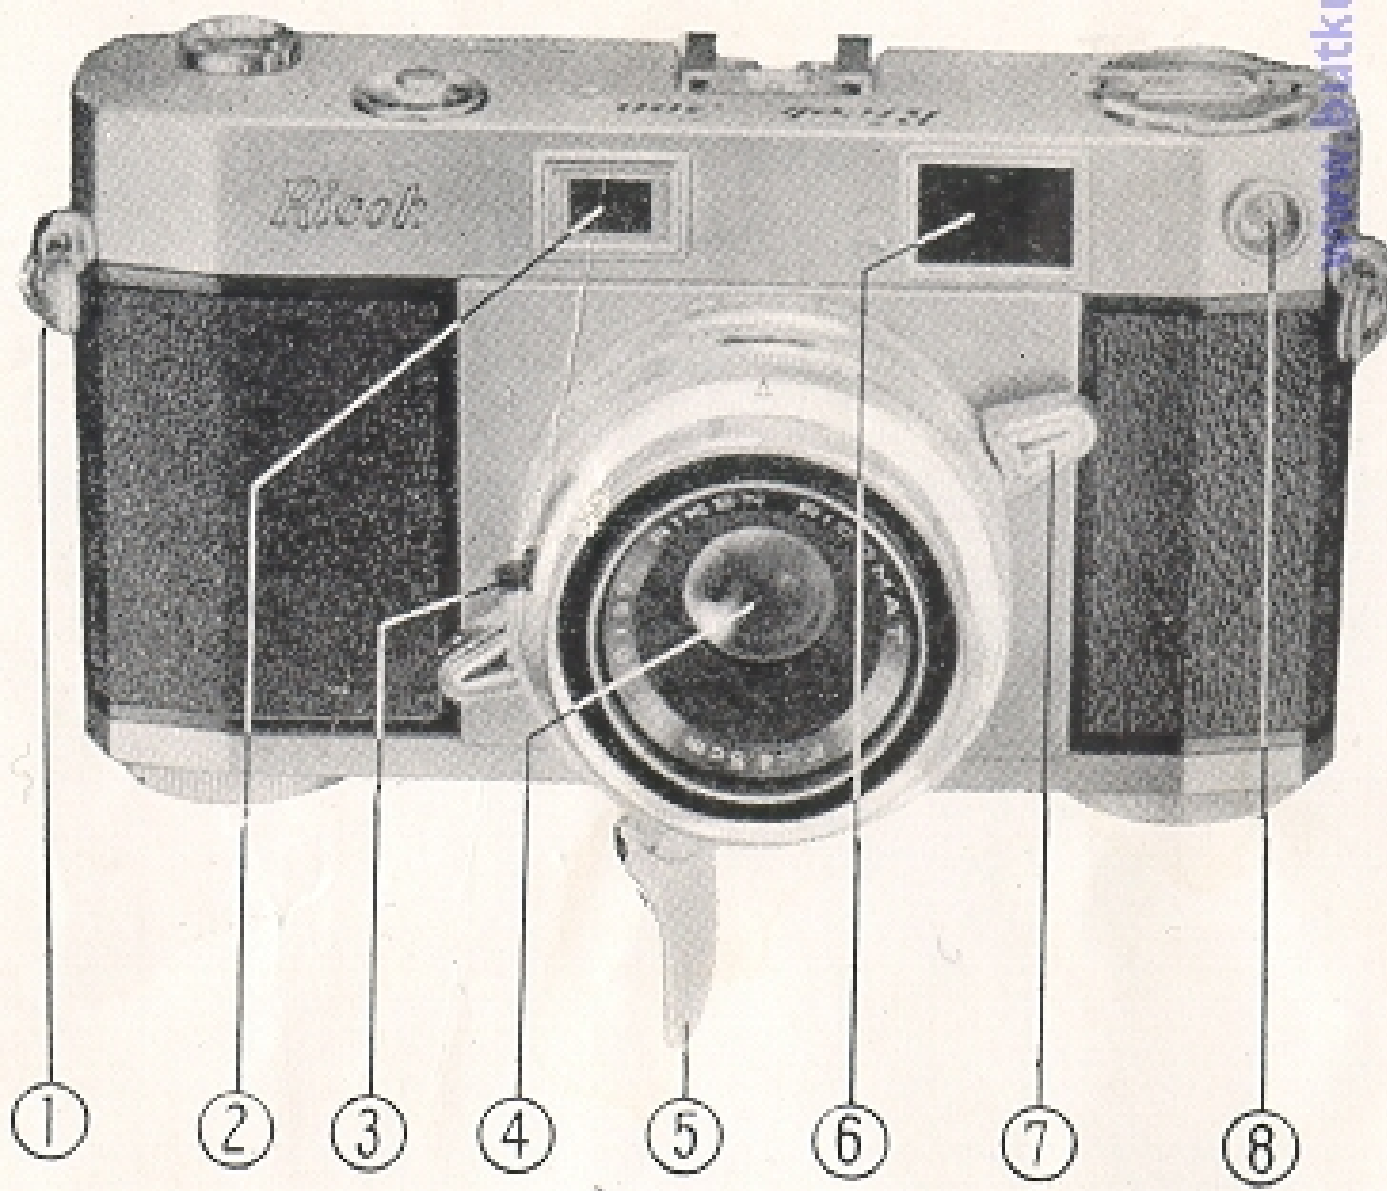

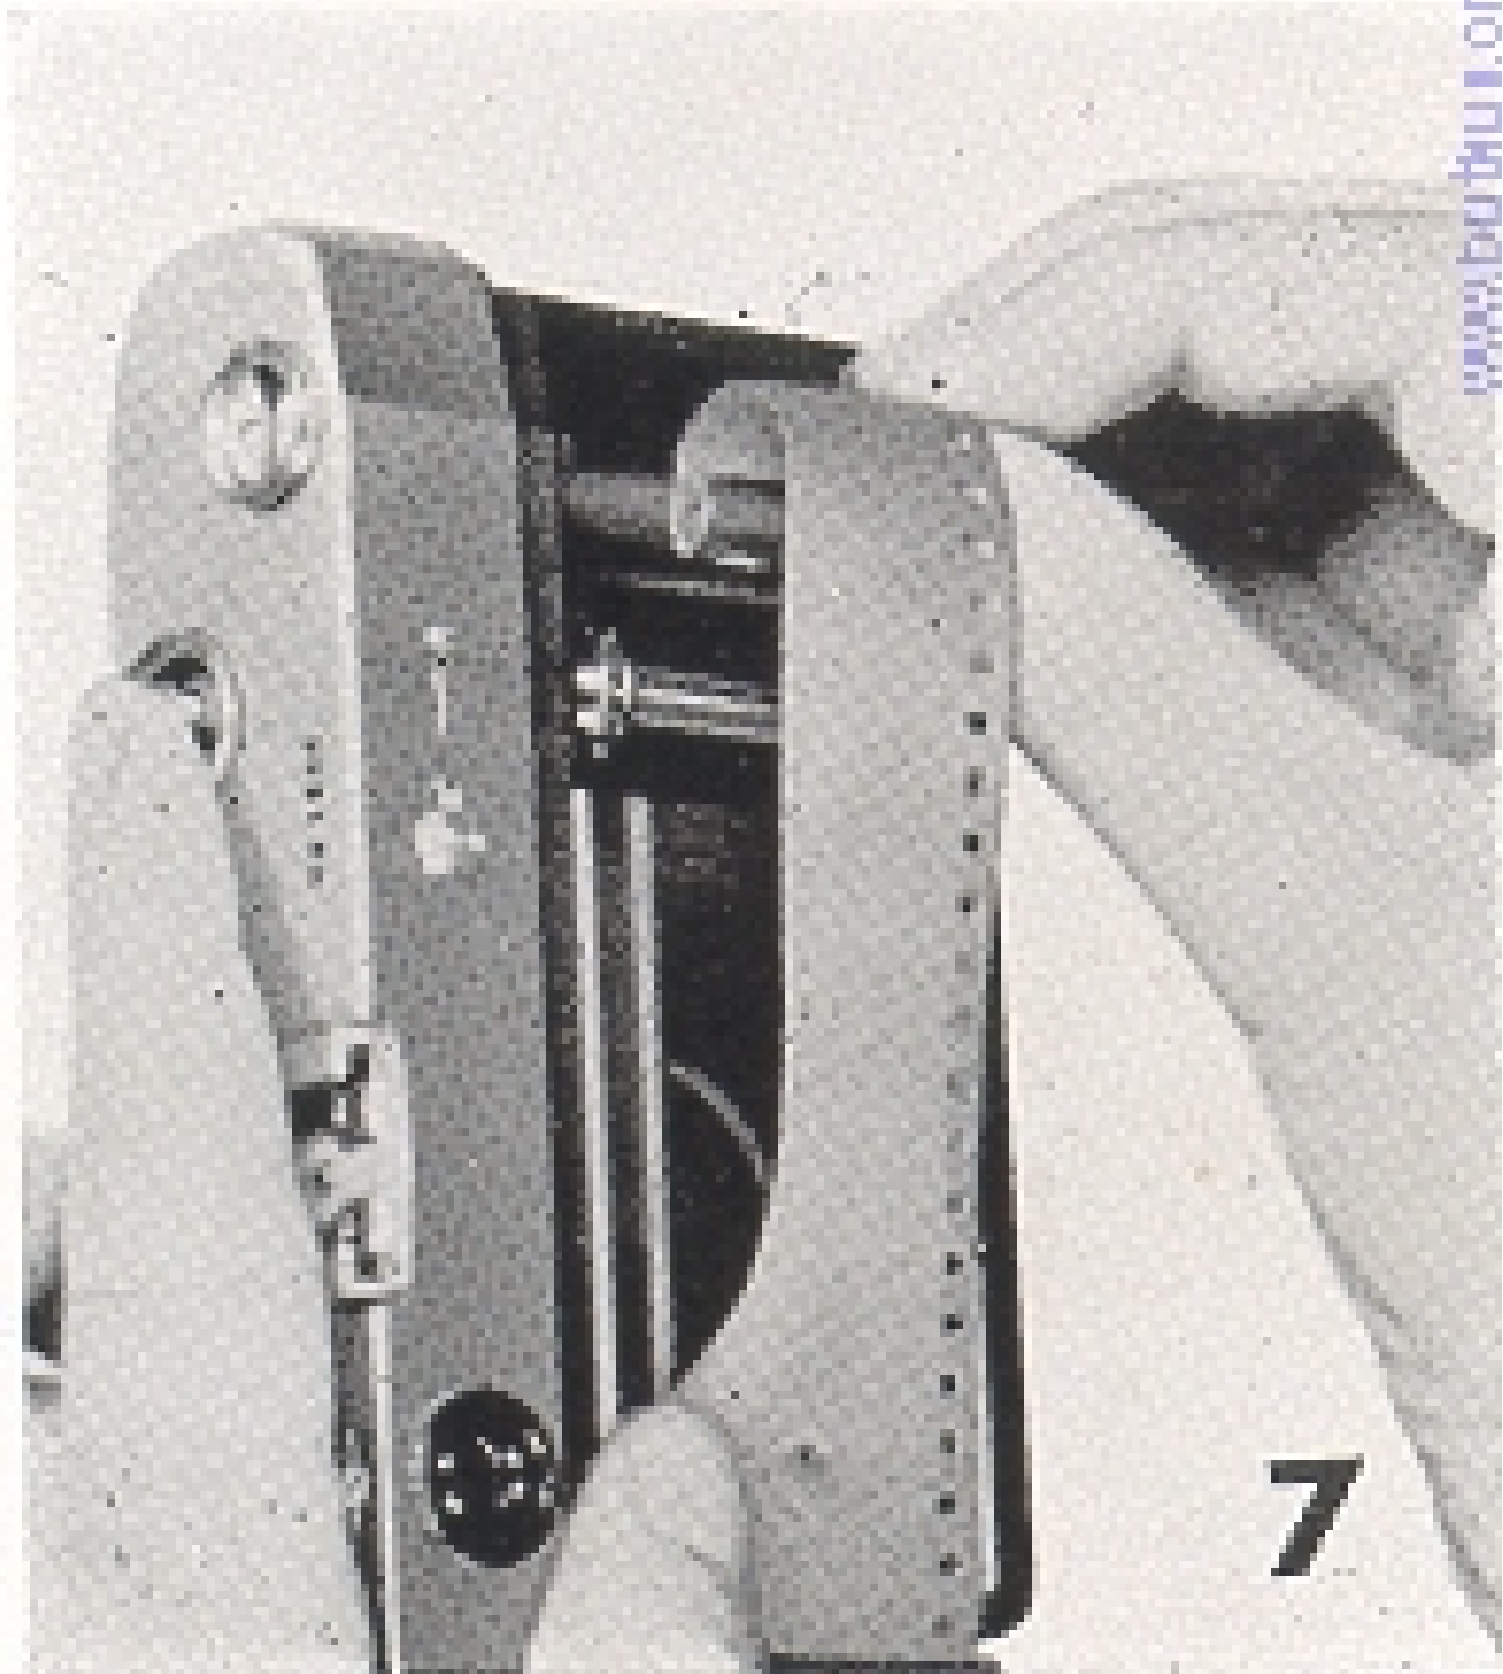

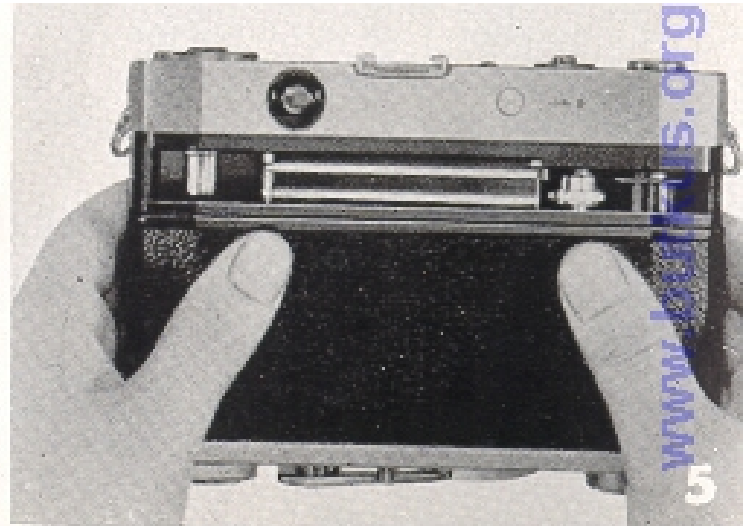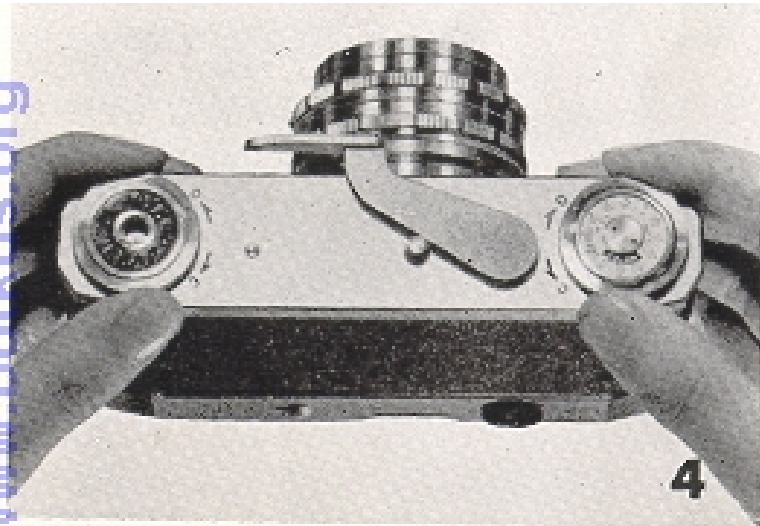

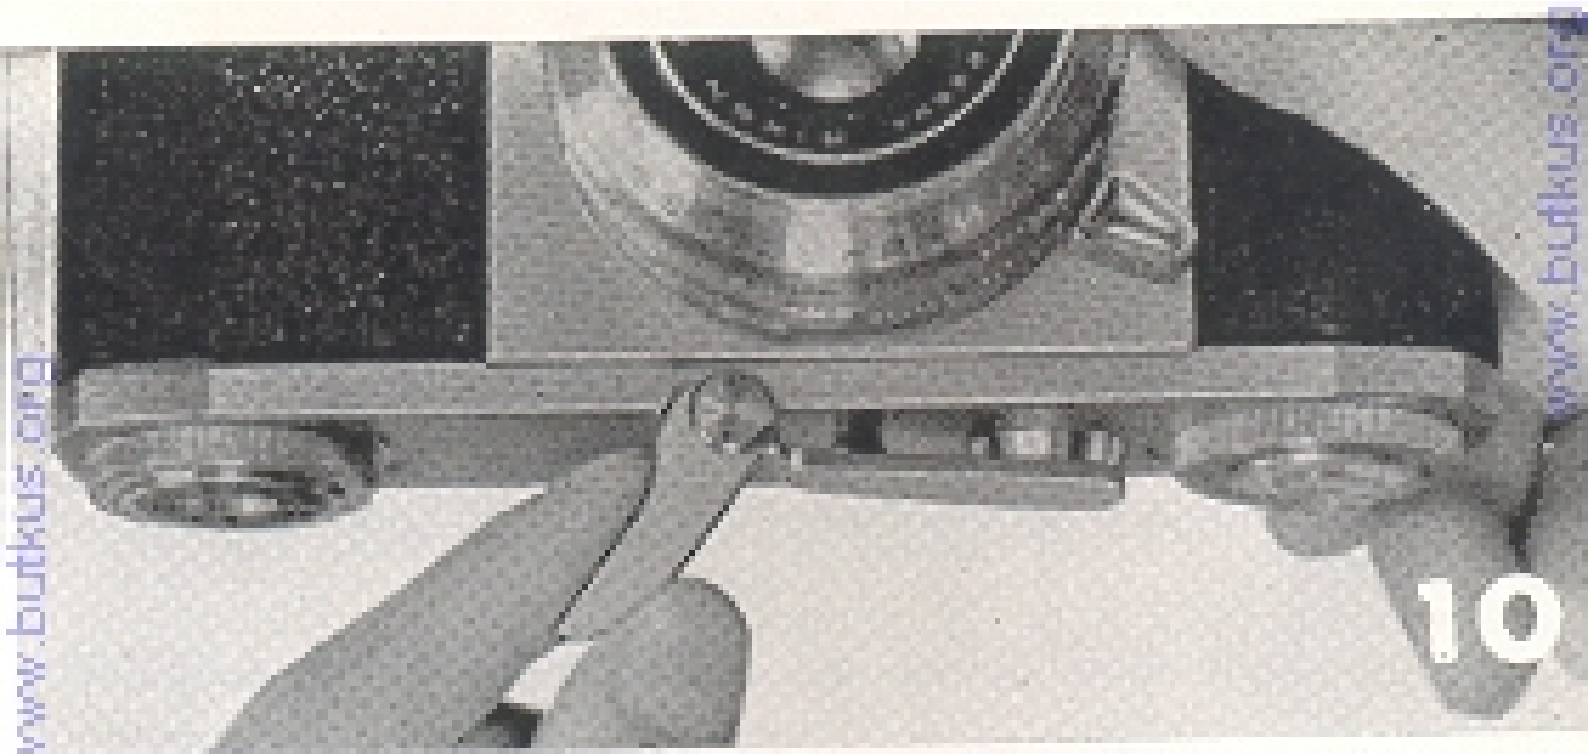

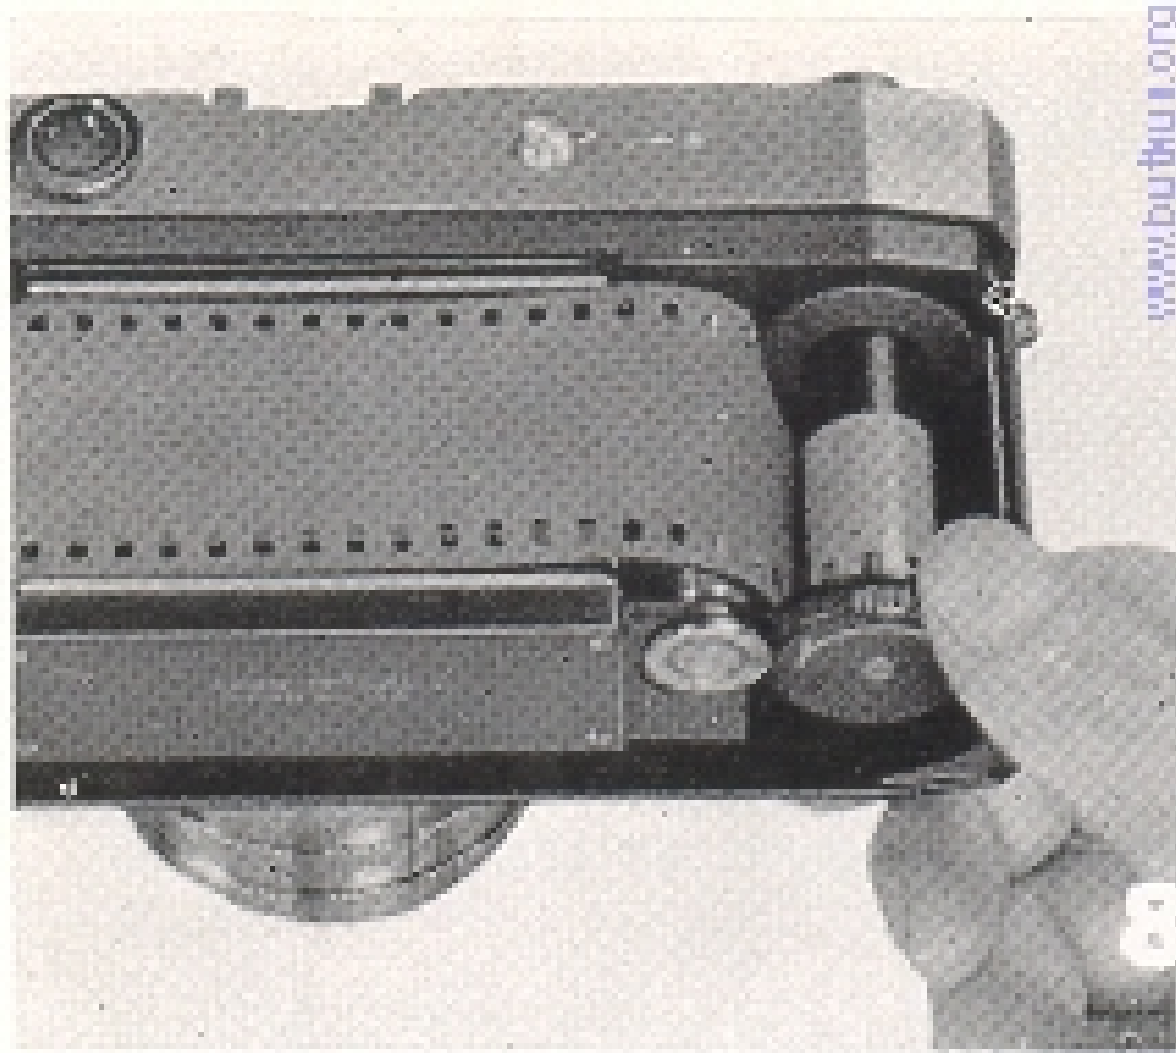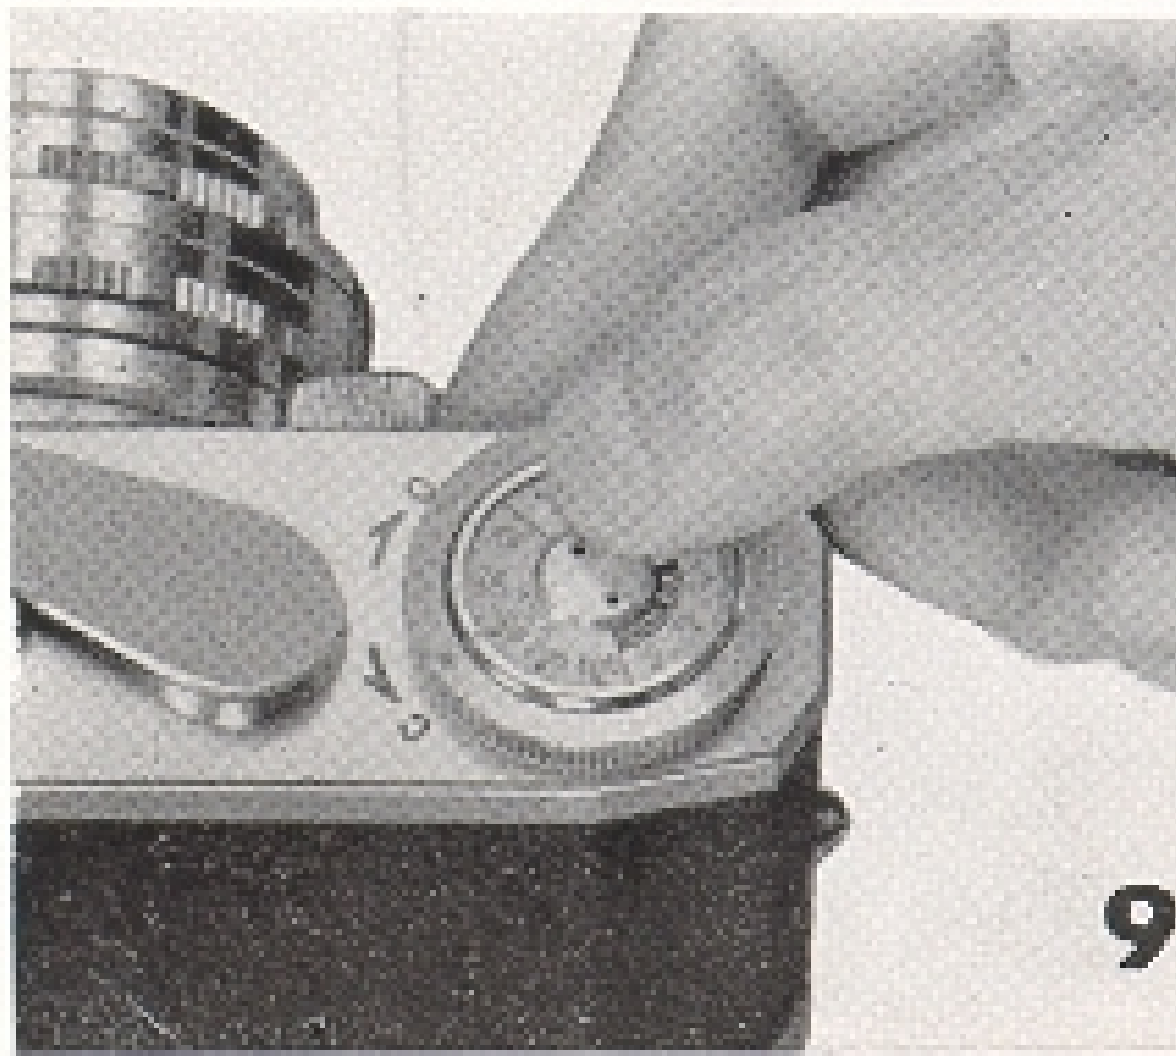




RICOH

E E_s F D


MIRAI ZOOM 3

 Owner's Manual
Manual de instrucciones
Mode d'emploi
Bedienungsanleitung





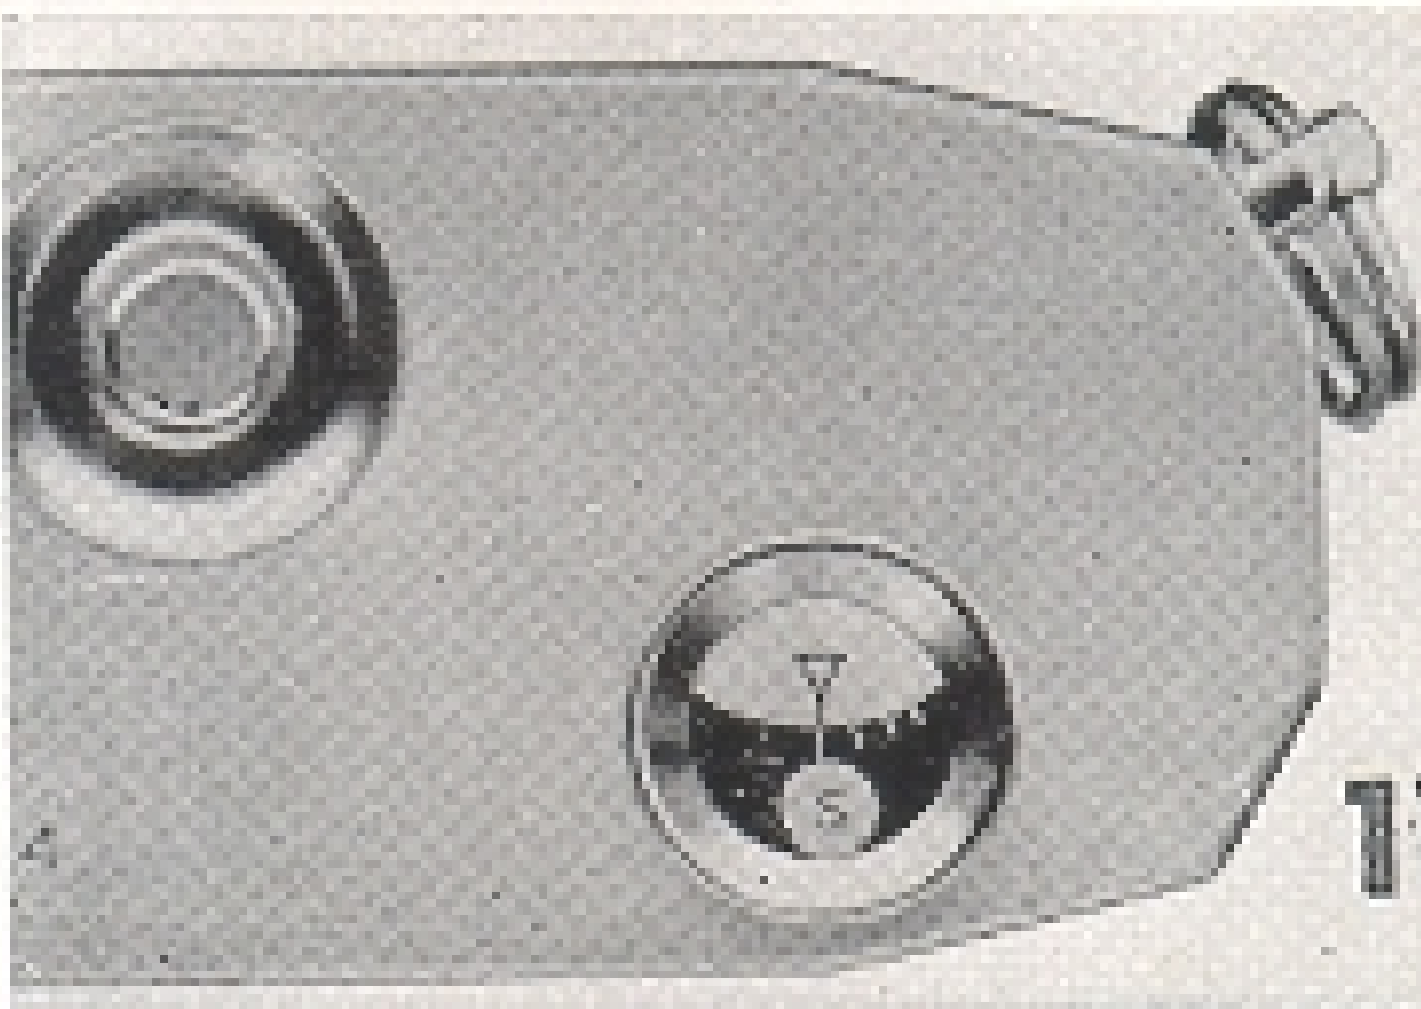

11

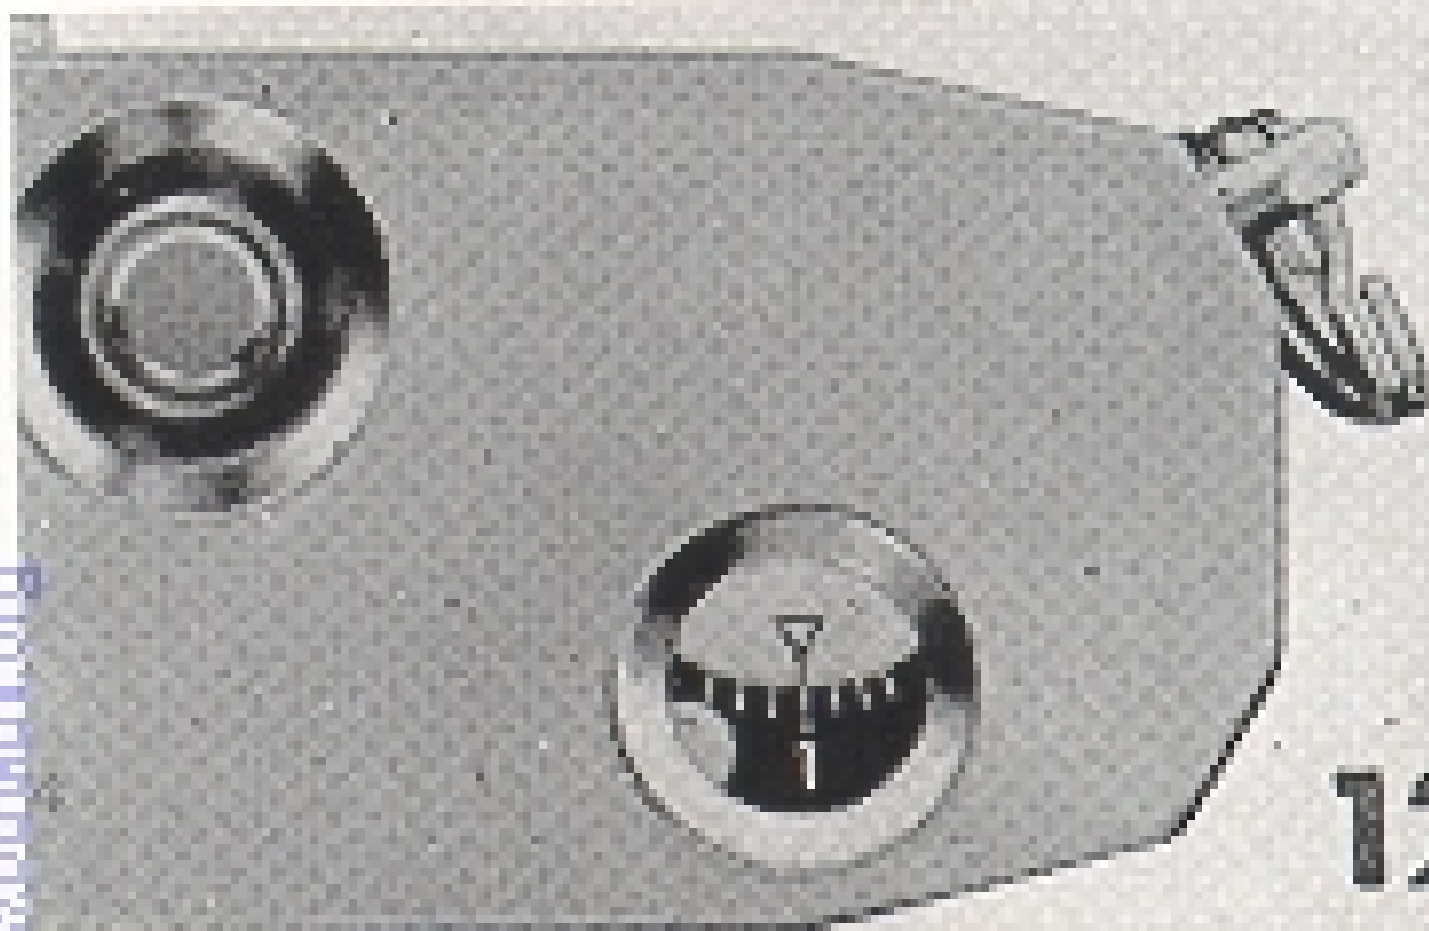 

12

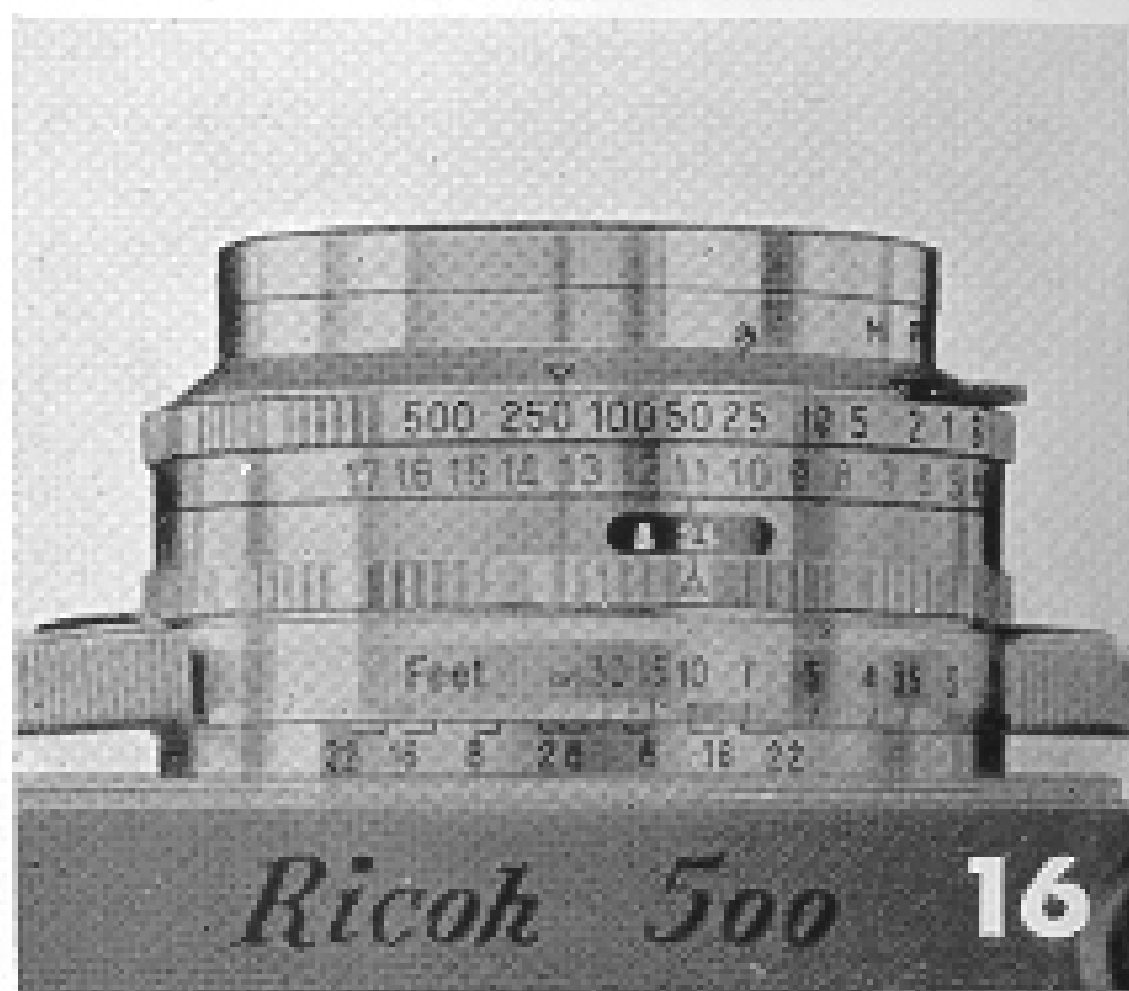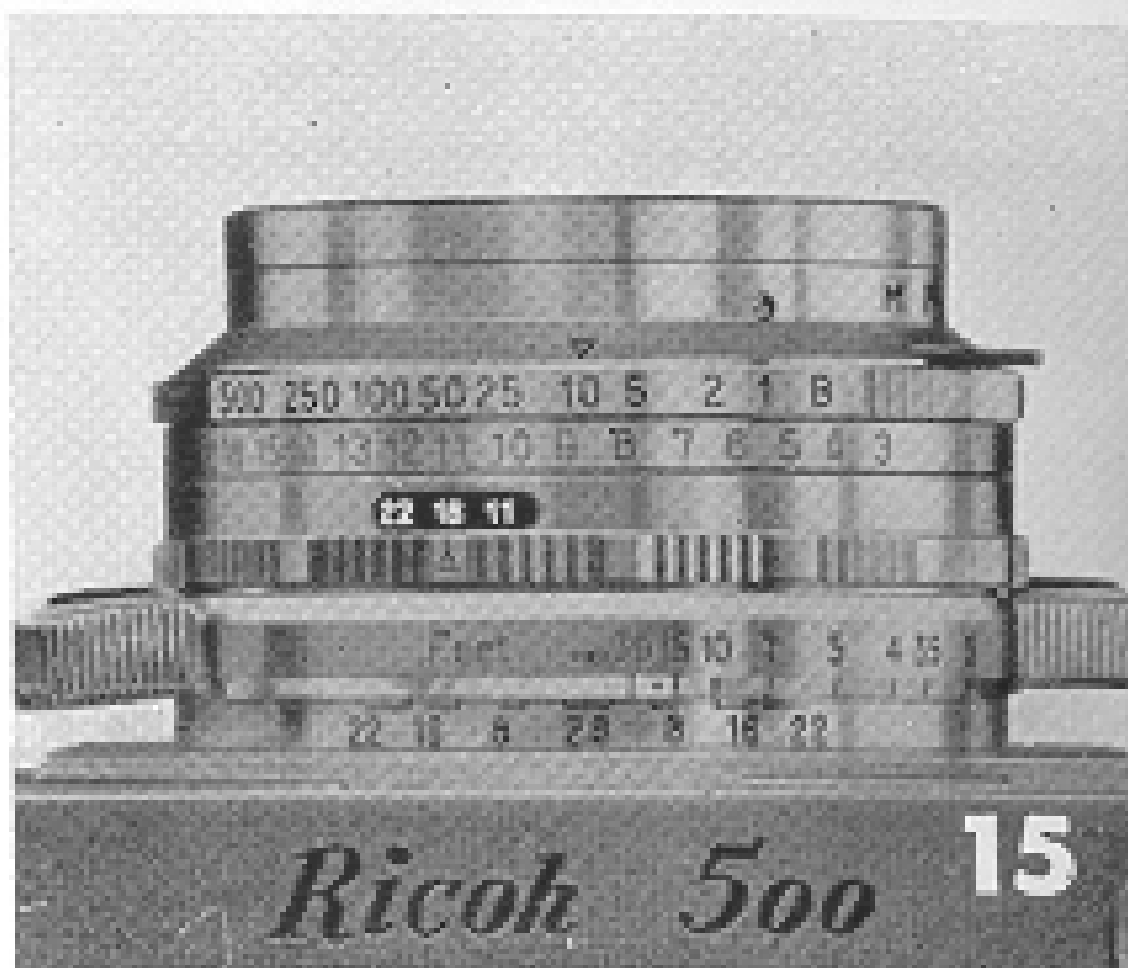  



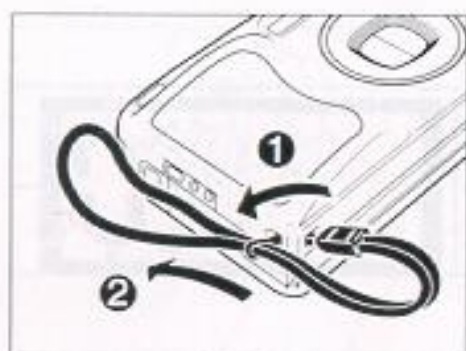 


Fig. 1 Abb. 1

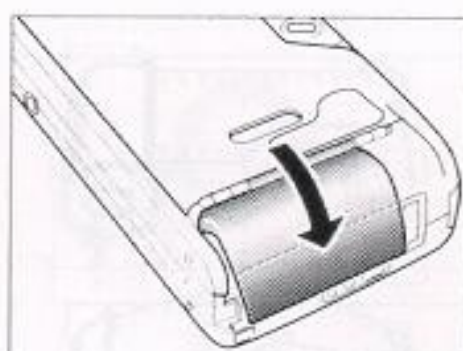 


Fig. 4 Abb. 4

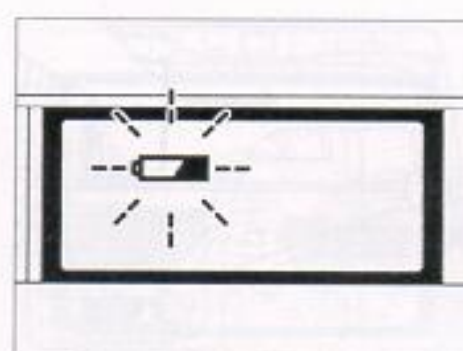 


Fig. 7 Abb. 7

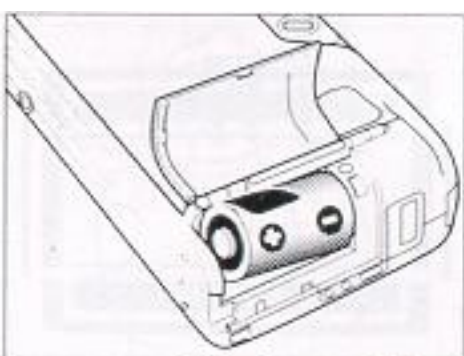 


Fig. 3 Abb. 3

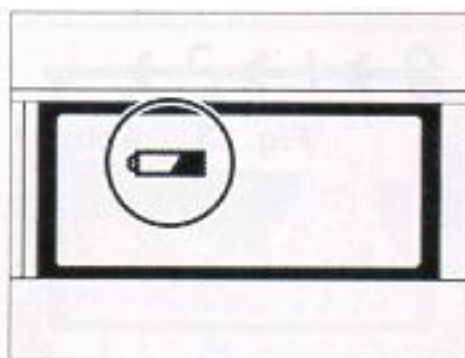 


Fig. 6 Abb. 6

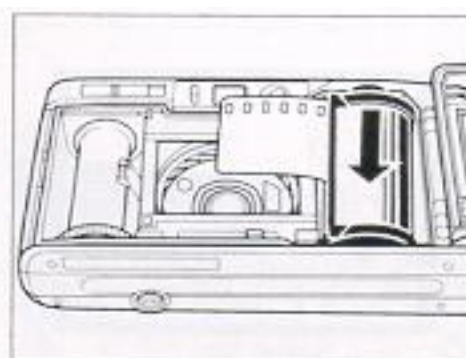 


Fig. 9 Abb. 9

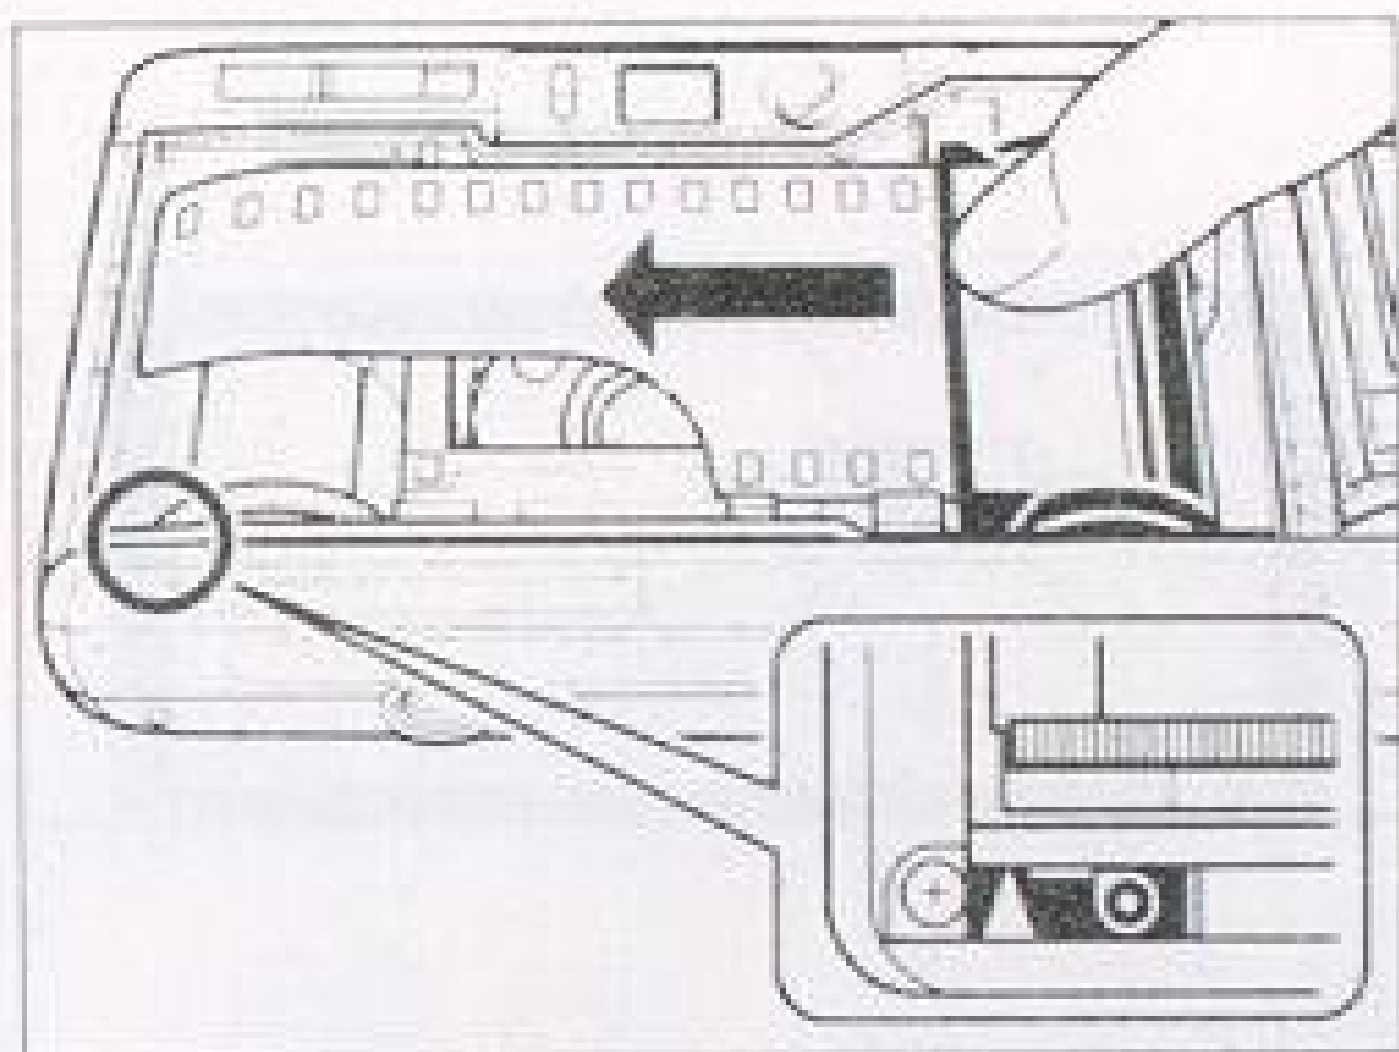 


Fig. 10

Abb. 10

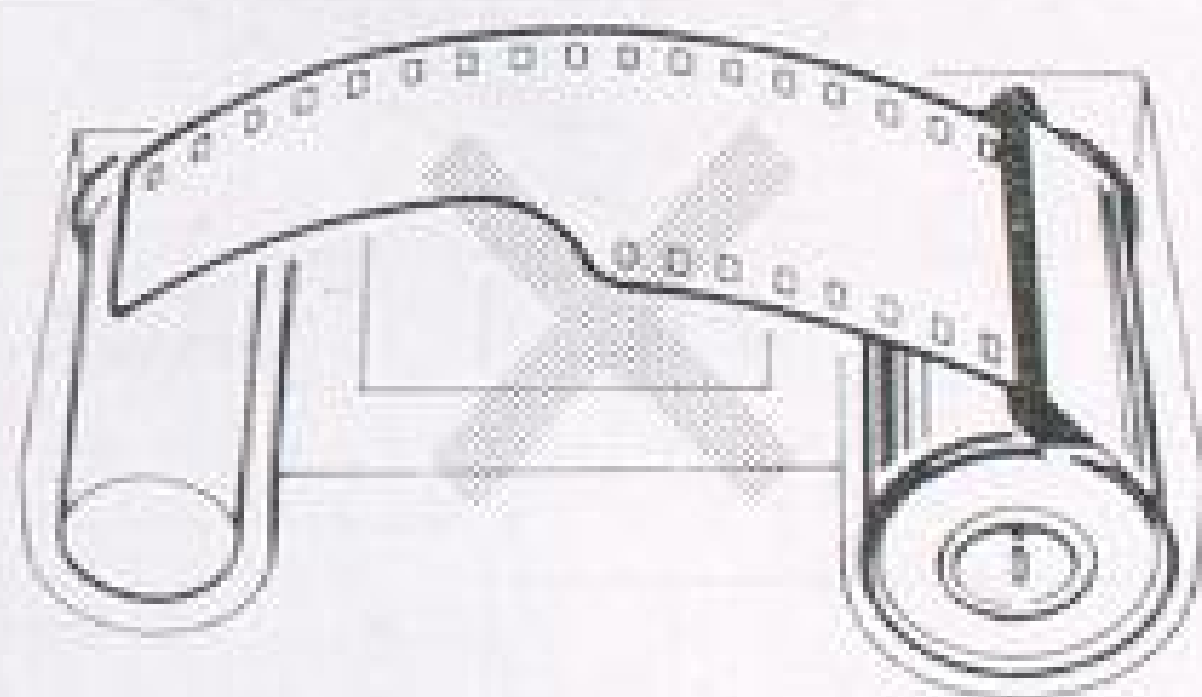 
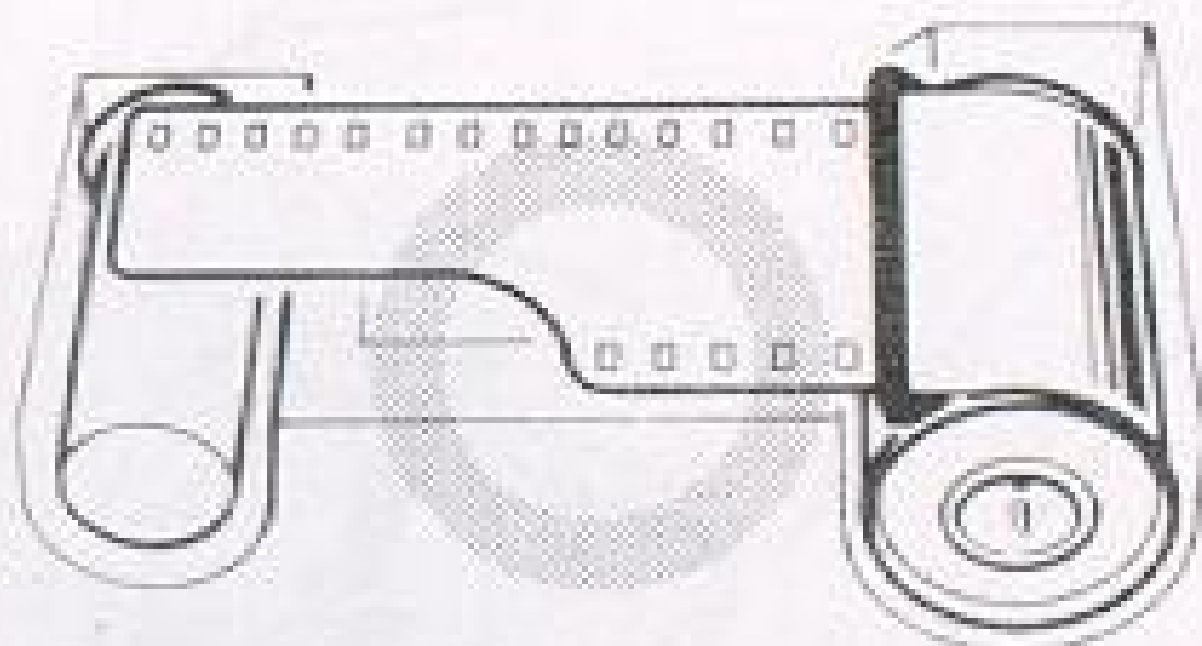 


Fig. 12 Abb. 12

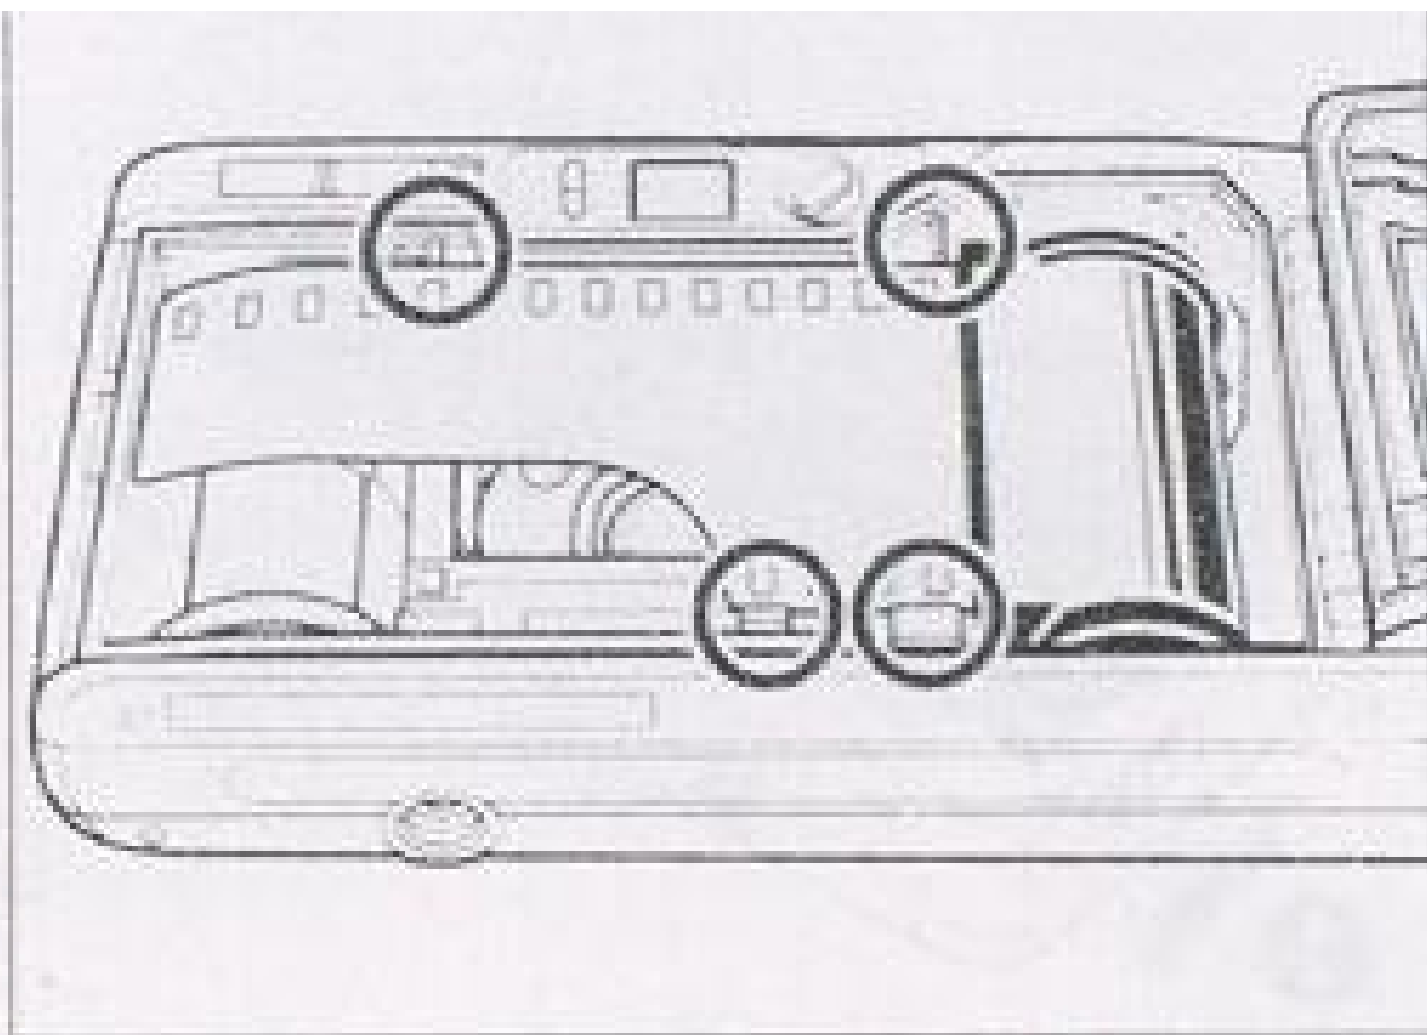 


Fig. 11 Abb. 11

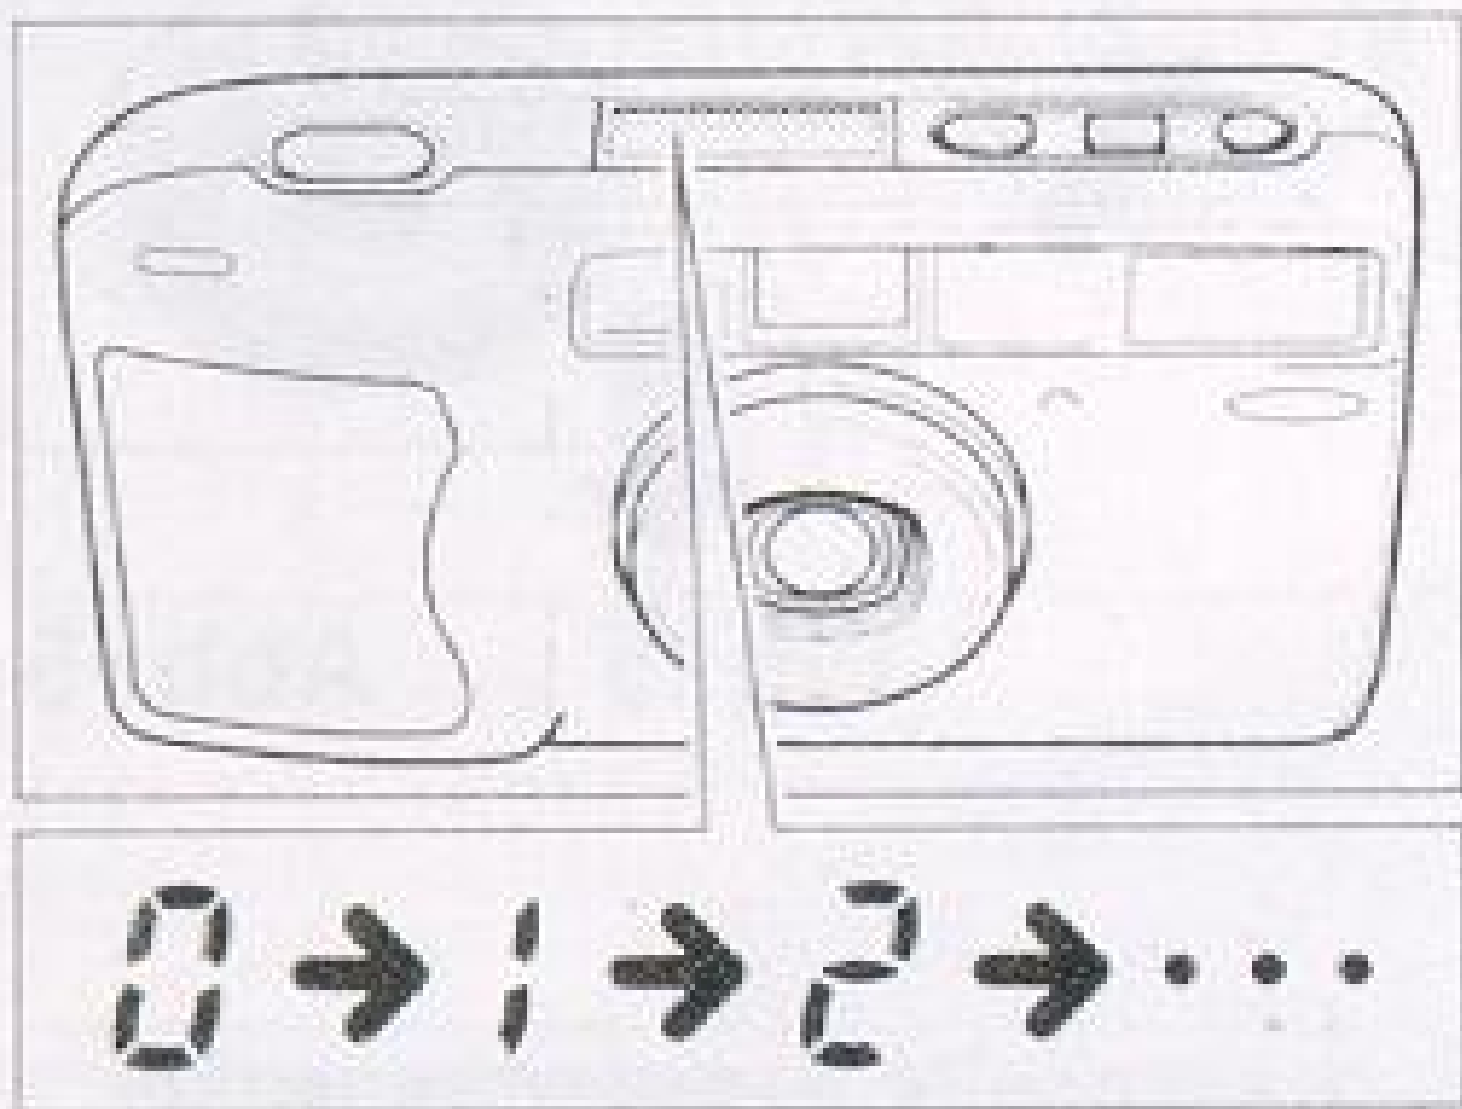
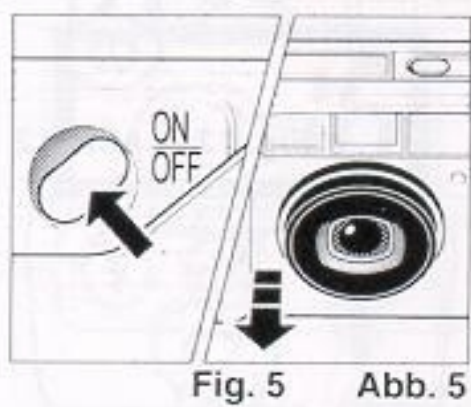 
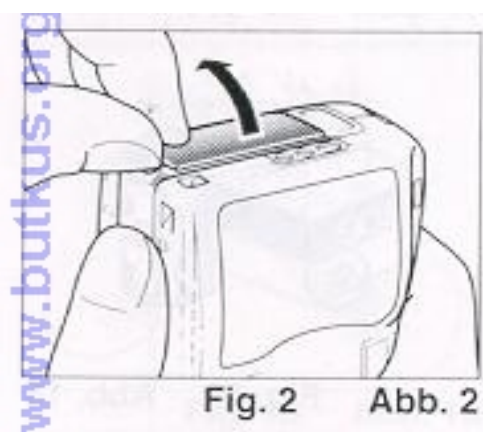 


Fig. 13 Abb. 13

 

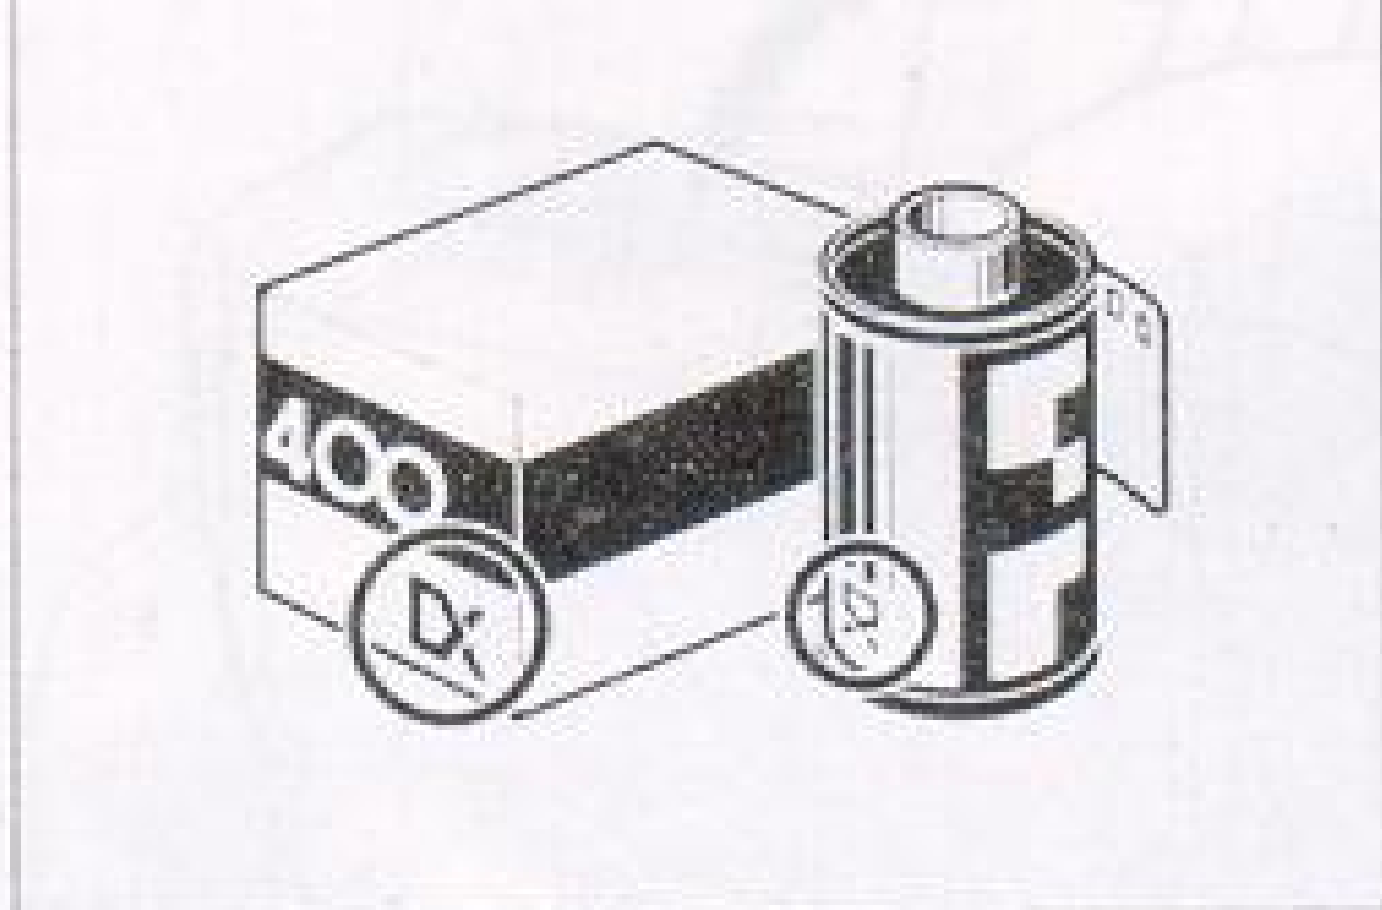 


Fig. 15 Abb. 15



Fig. 16 Abb. 16



Fig. 17 Abb. 17

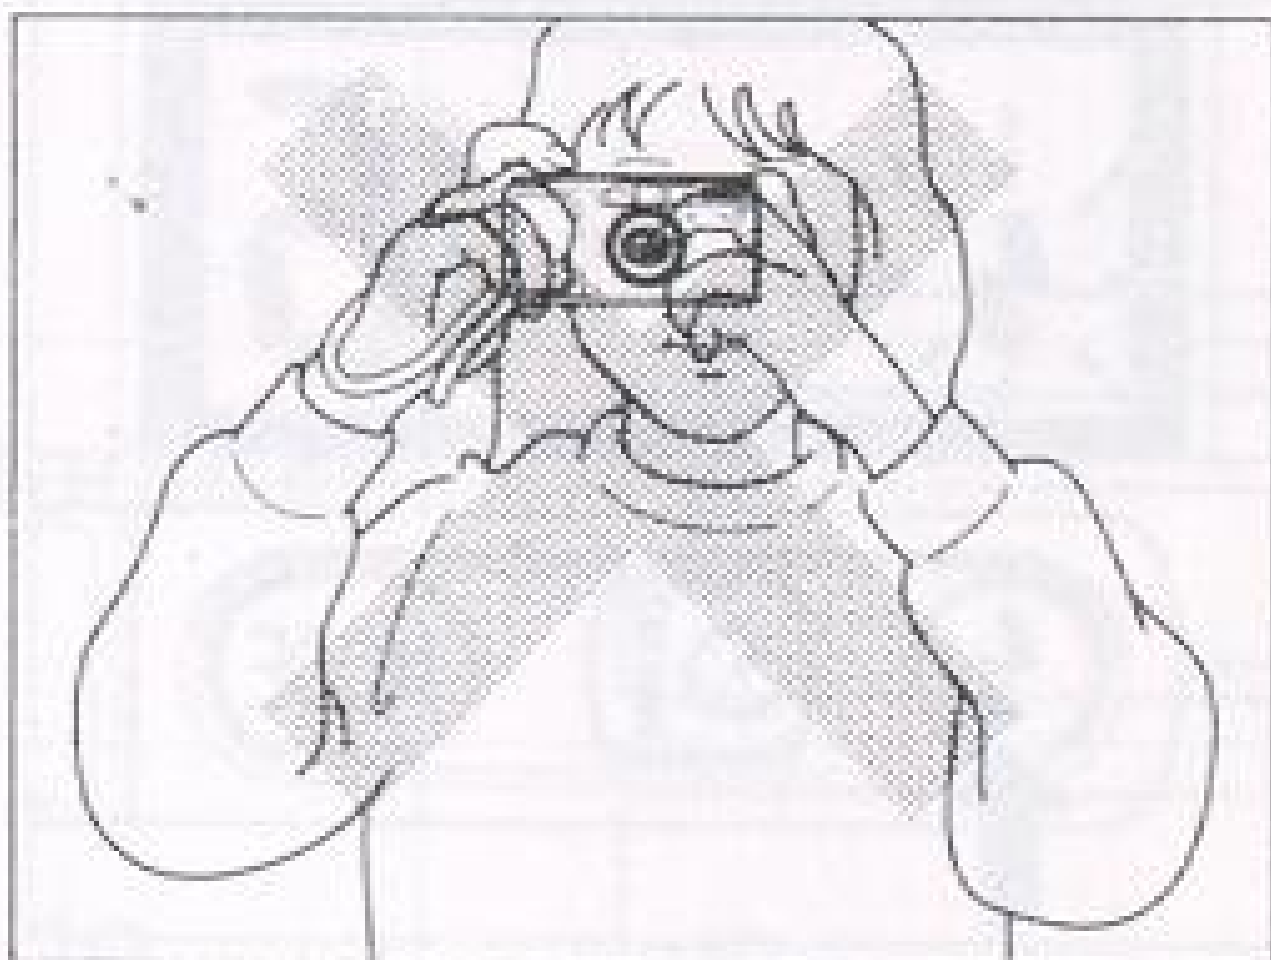 


Fig. 18 Abb. 18

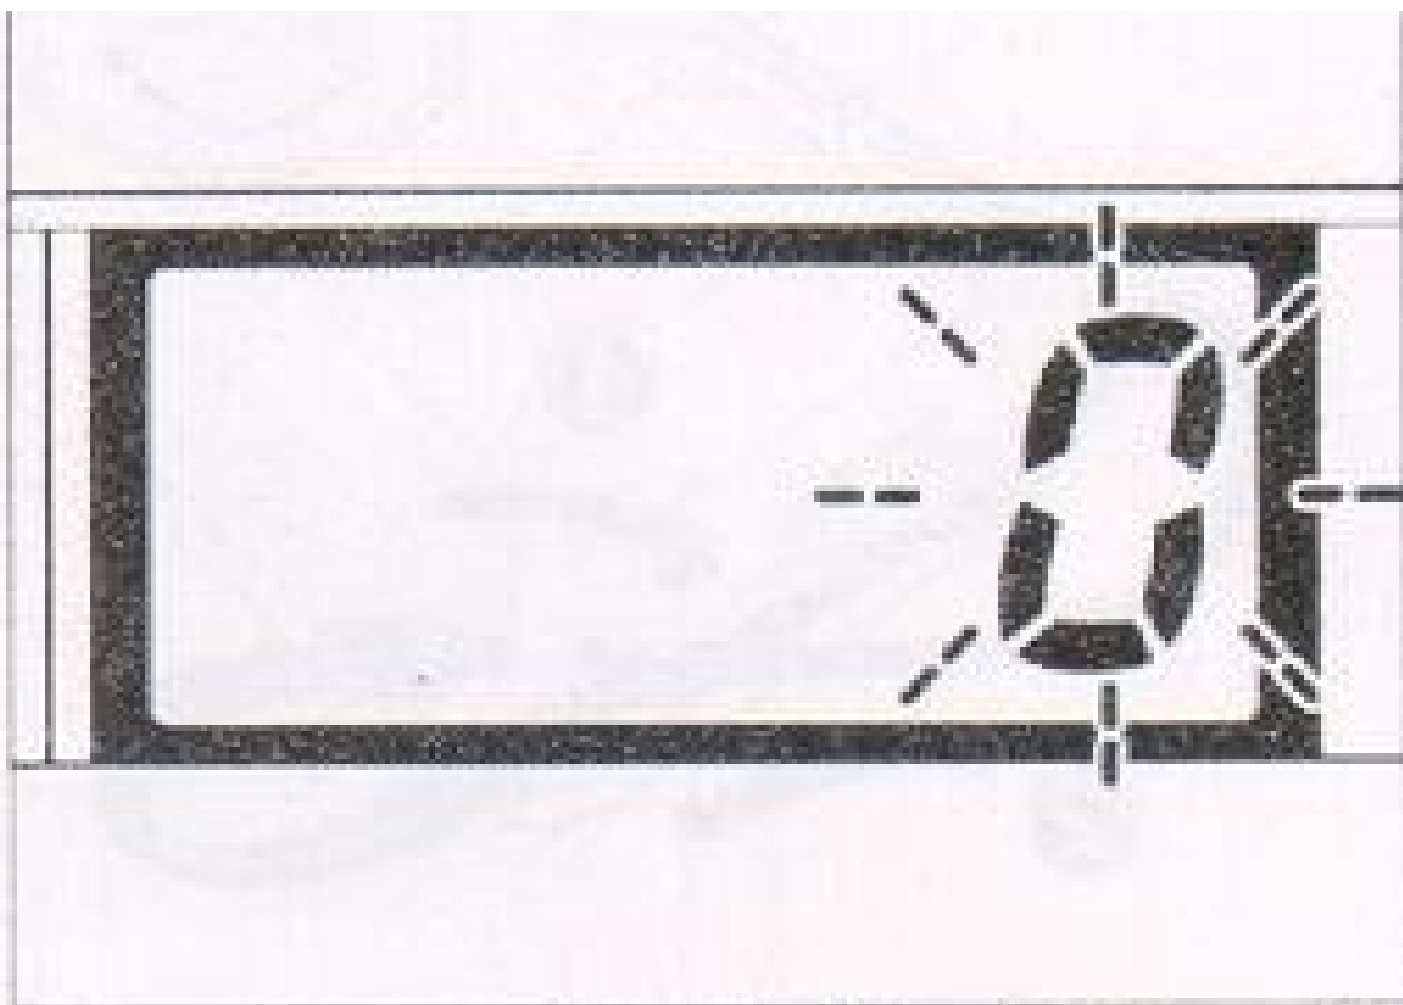 


Fig. 14 Abb. 14



Fig. 22 Abb. 22

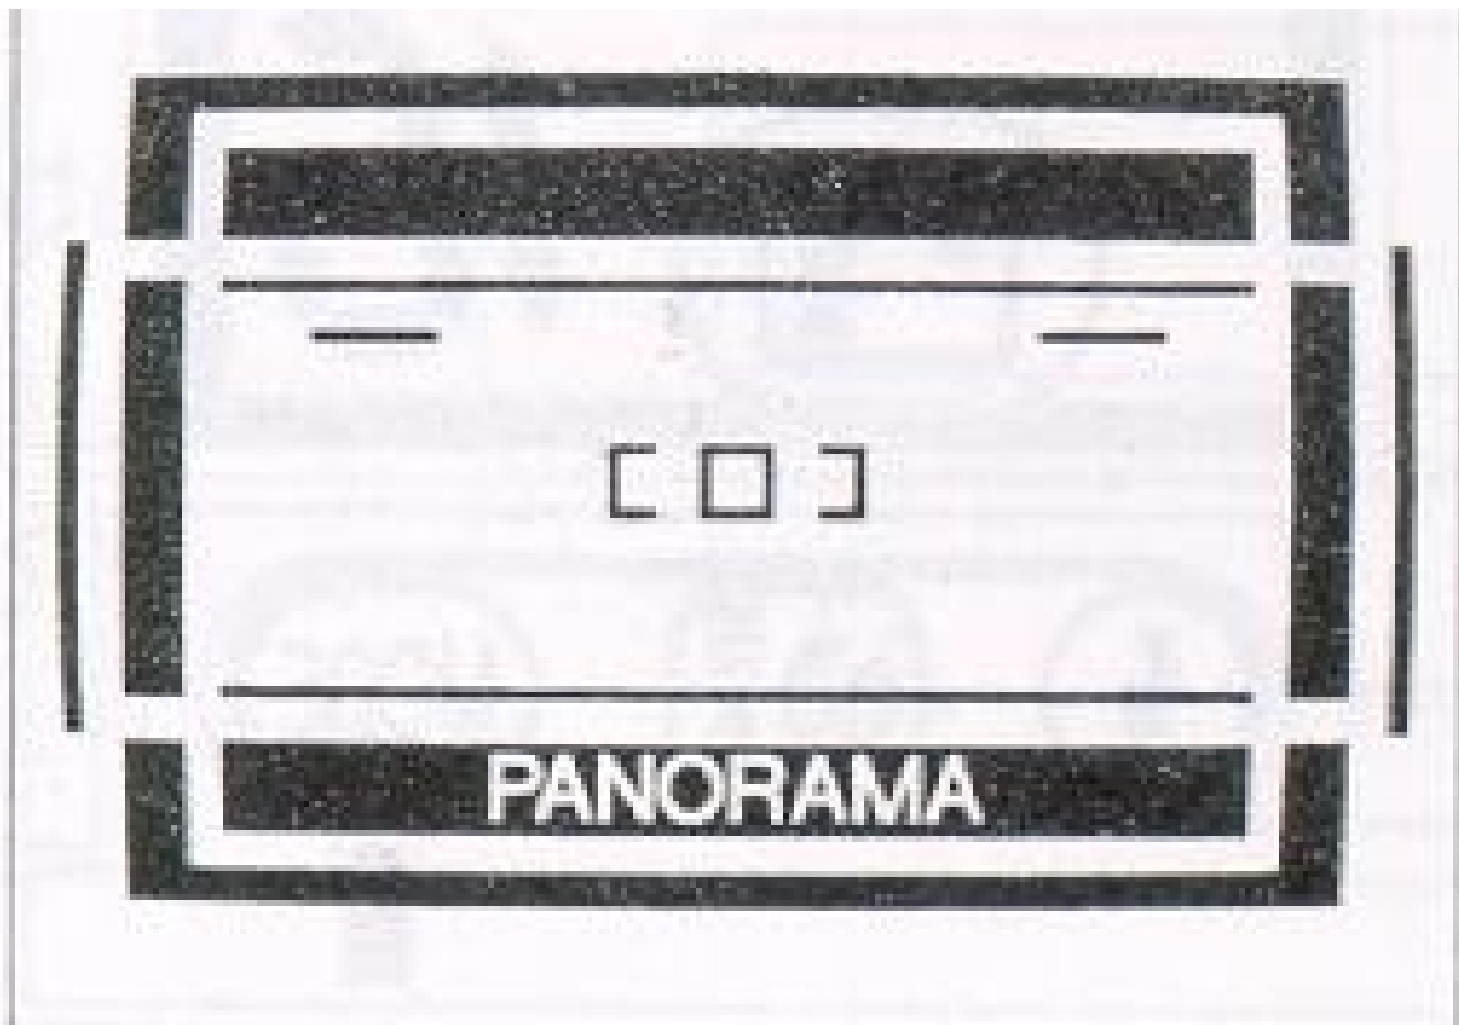 


Fig. 19 Abb. 19

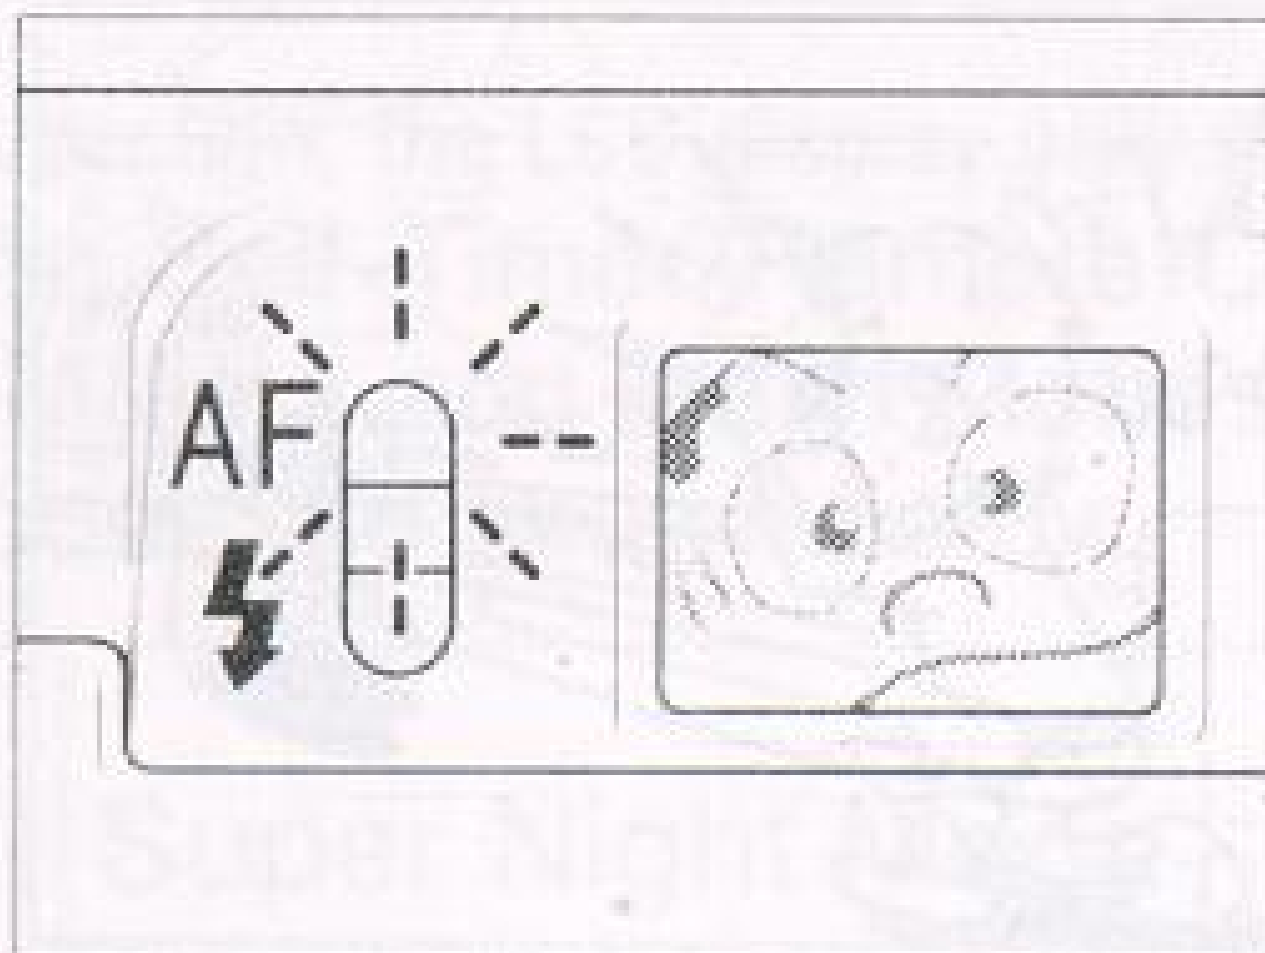 


Fig. 20 Abb. 20

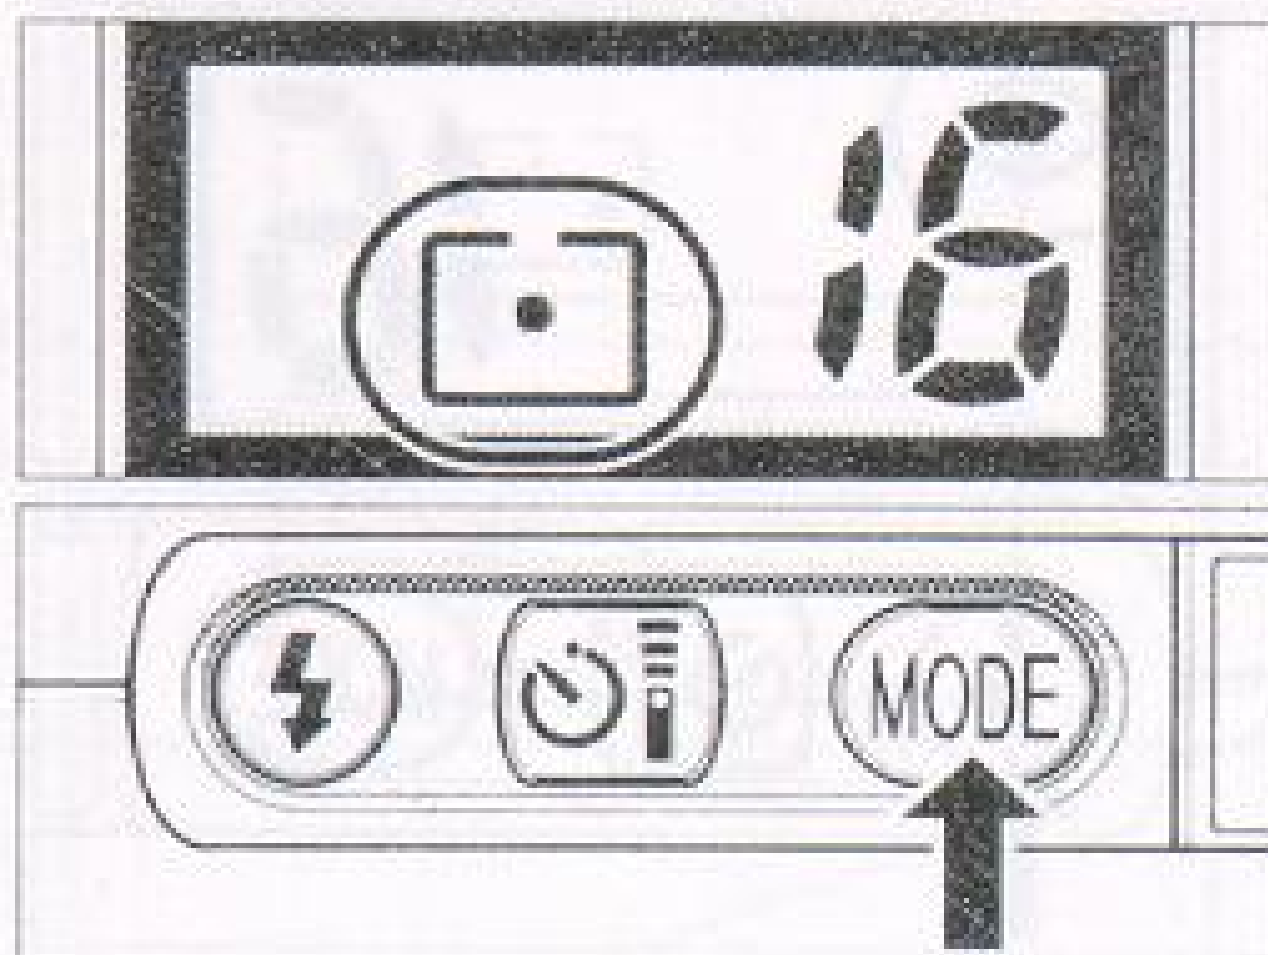 


Fig. 21 Abb. 21

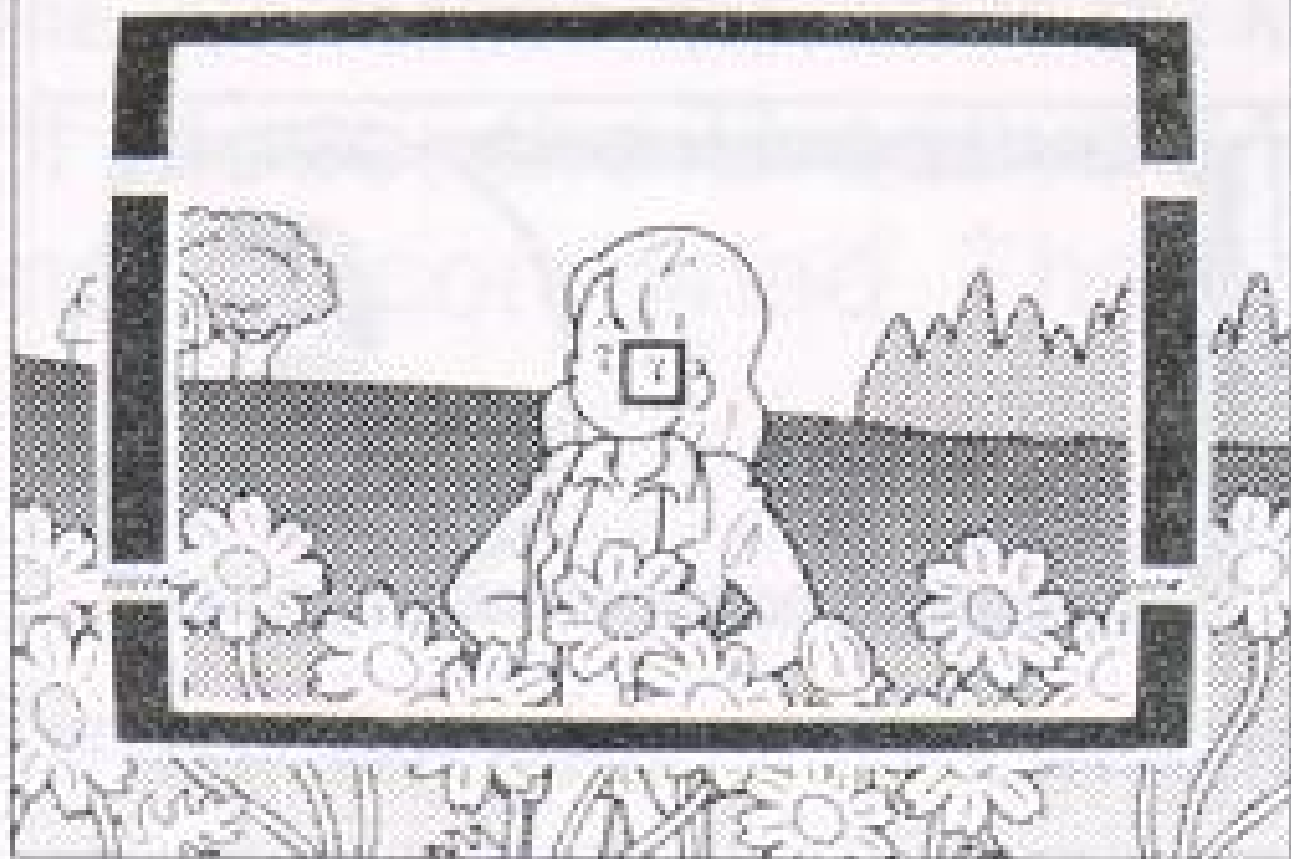 


Fig. 23 Abb. 23

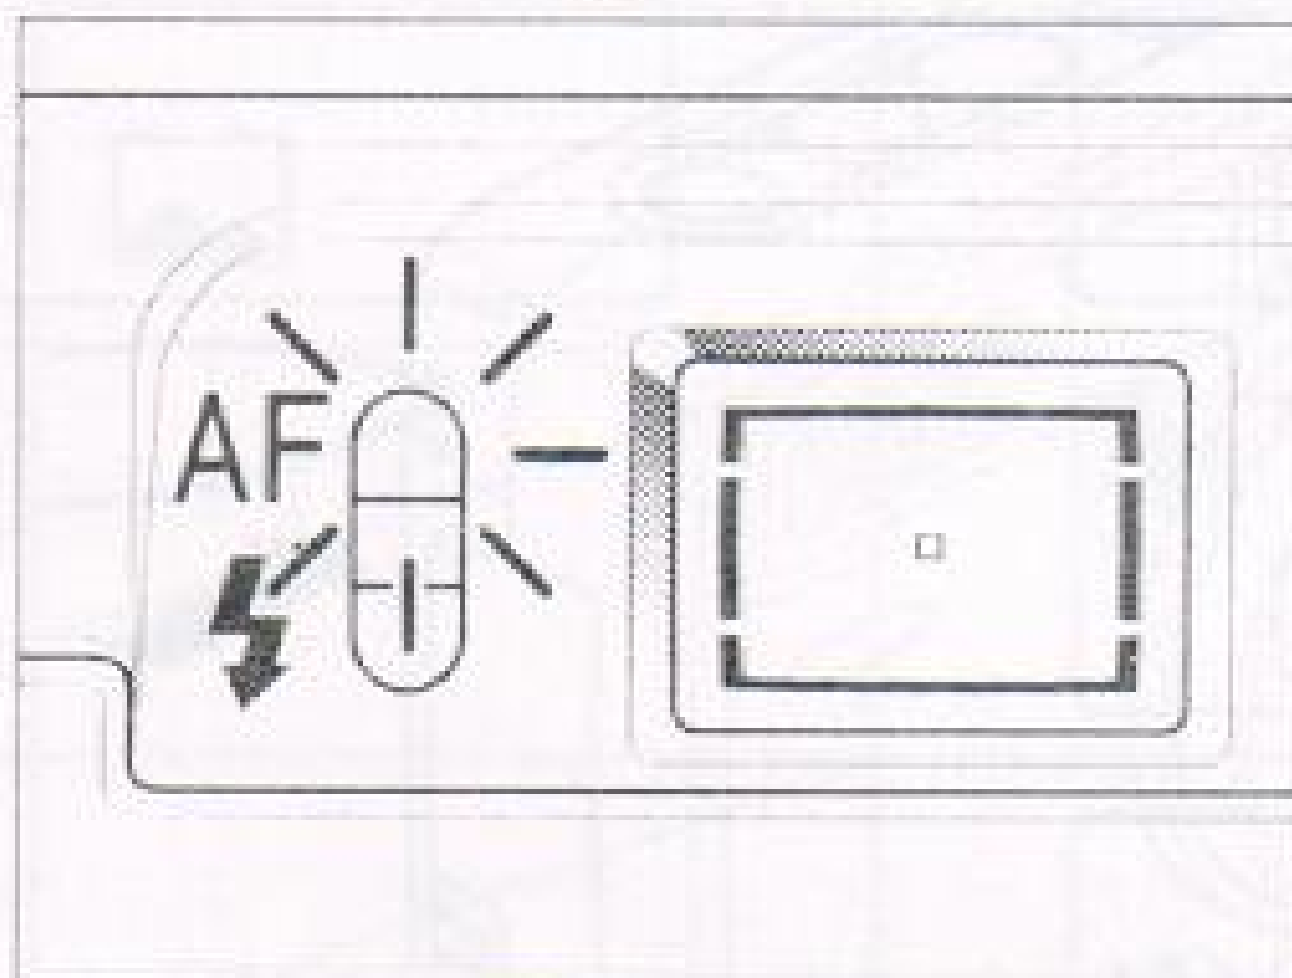 


Fig. 24 Abb. 24

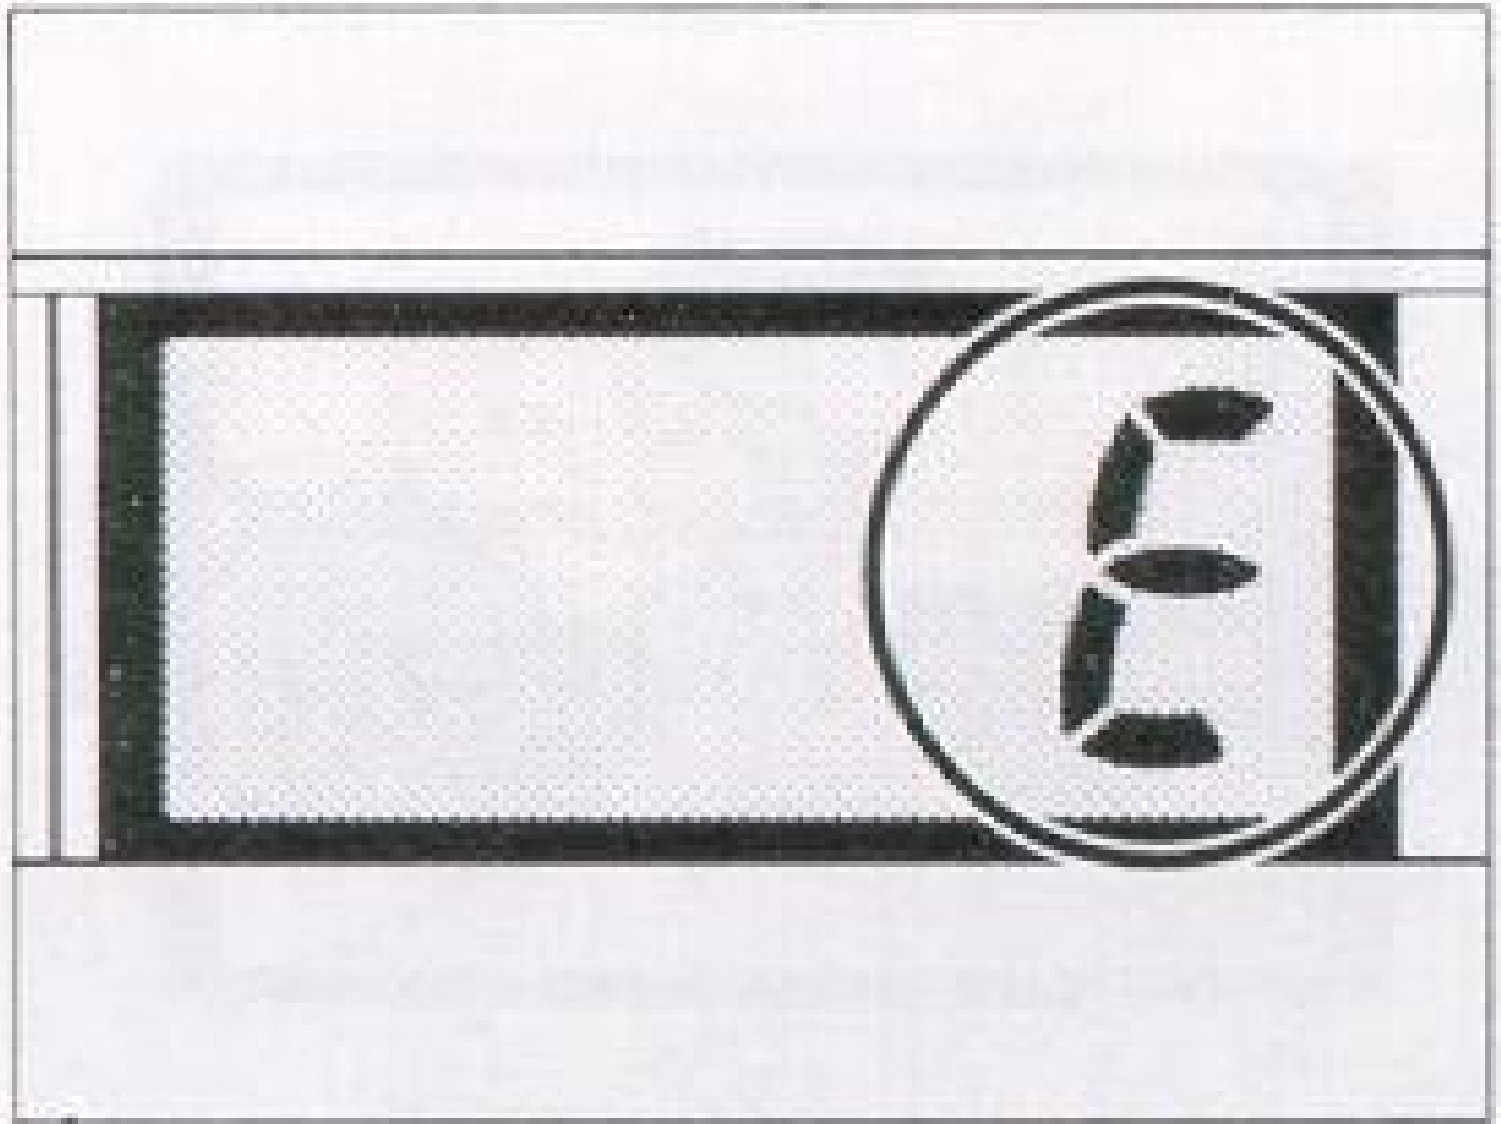 


Fig. 26

Abb. 26

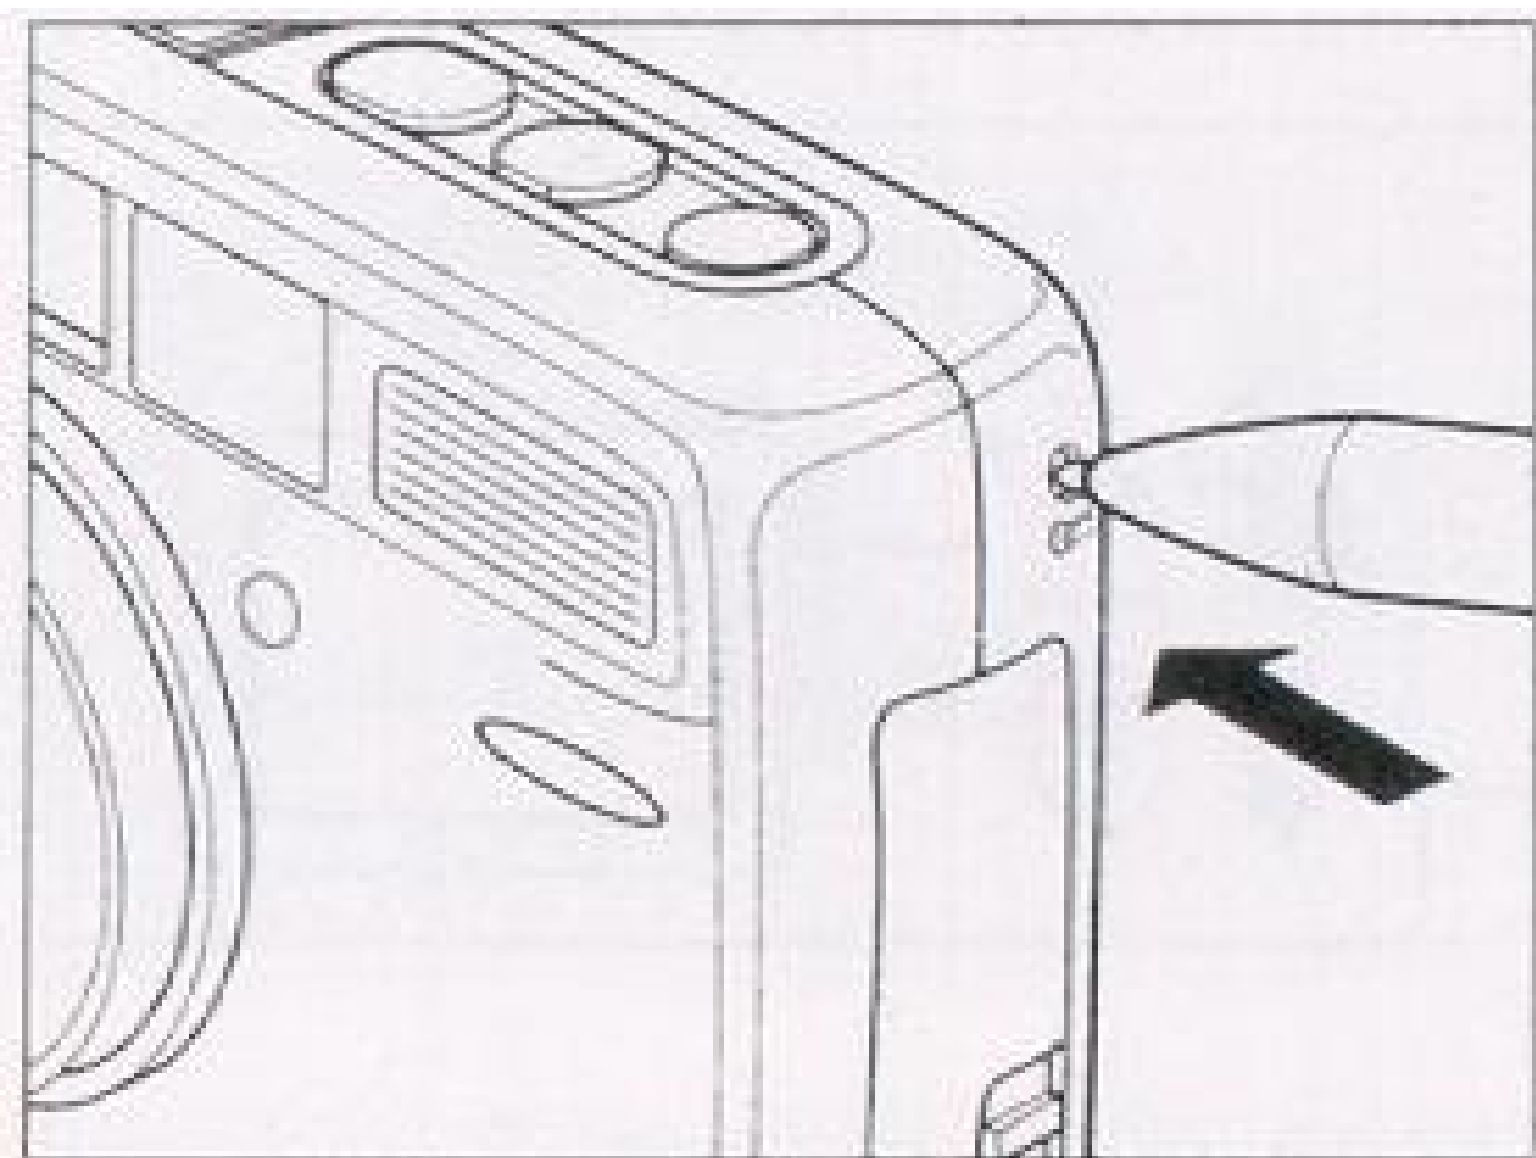 


Fig. 27

Abb. 27

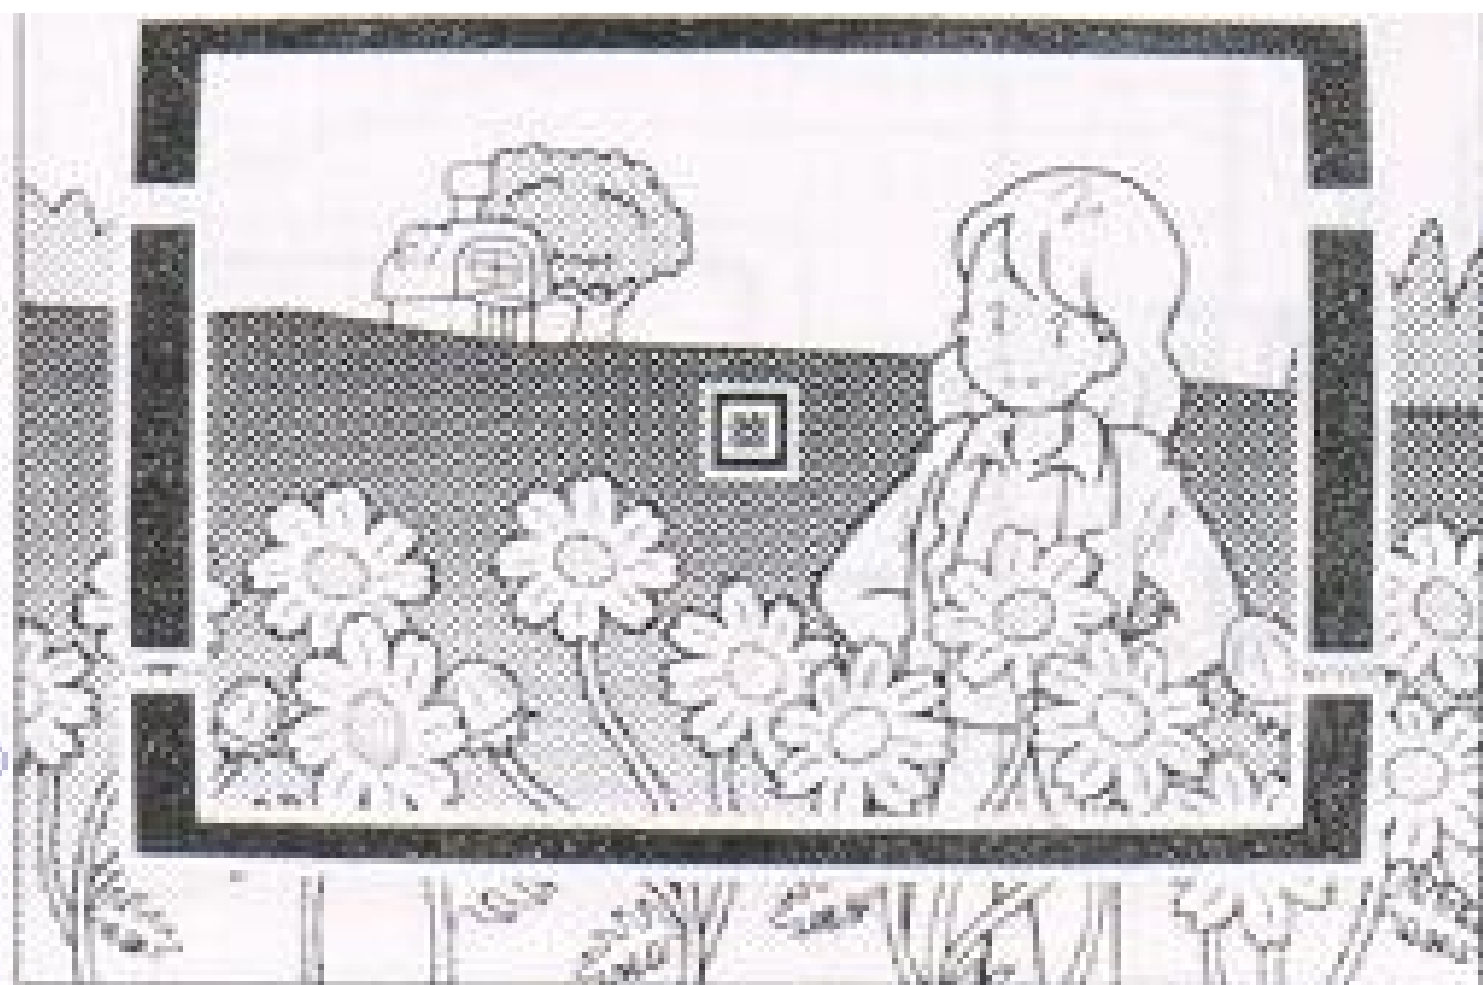 
 
 
 
 
 
 
 
 
 


Fig. 25

Abb. 25

Creative Modes Flash Modes	Off	Super Night Mode	Infinity Mode	Single AF Mode	
Normal					
Red Eye Reduction Mode					
Flash-Off Mode					
Flash-On Mode					
Slow Synchro Mode					

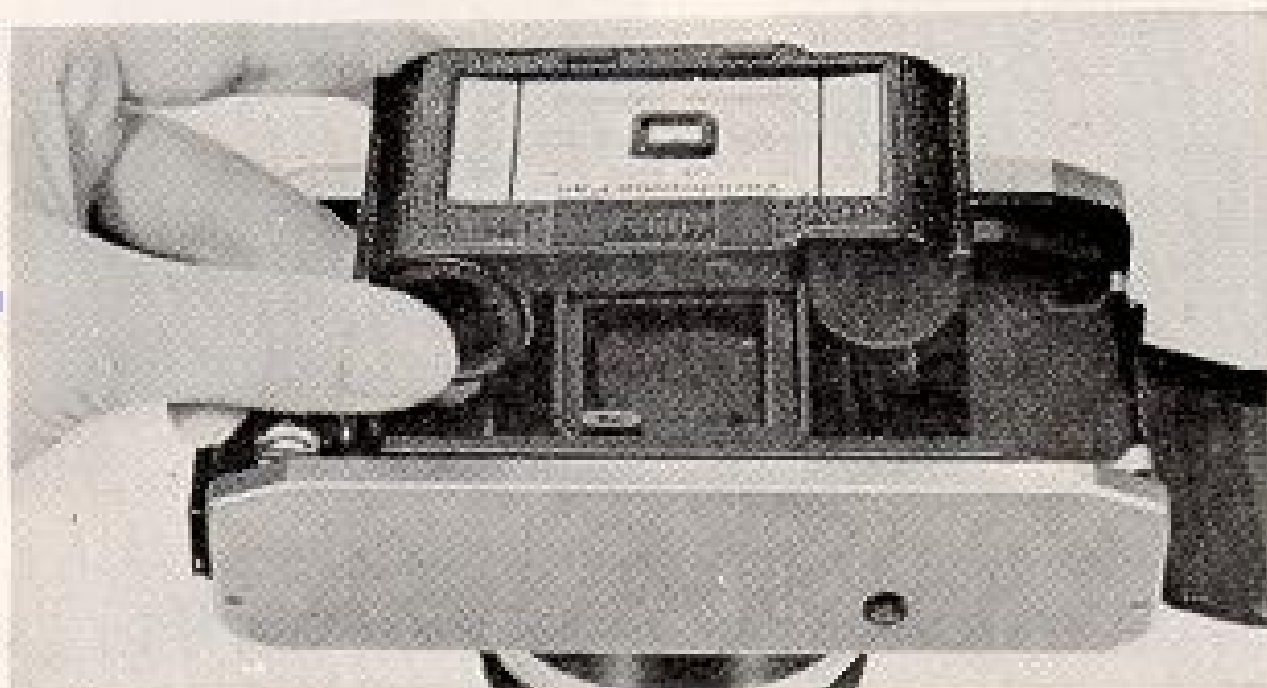
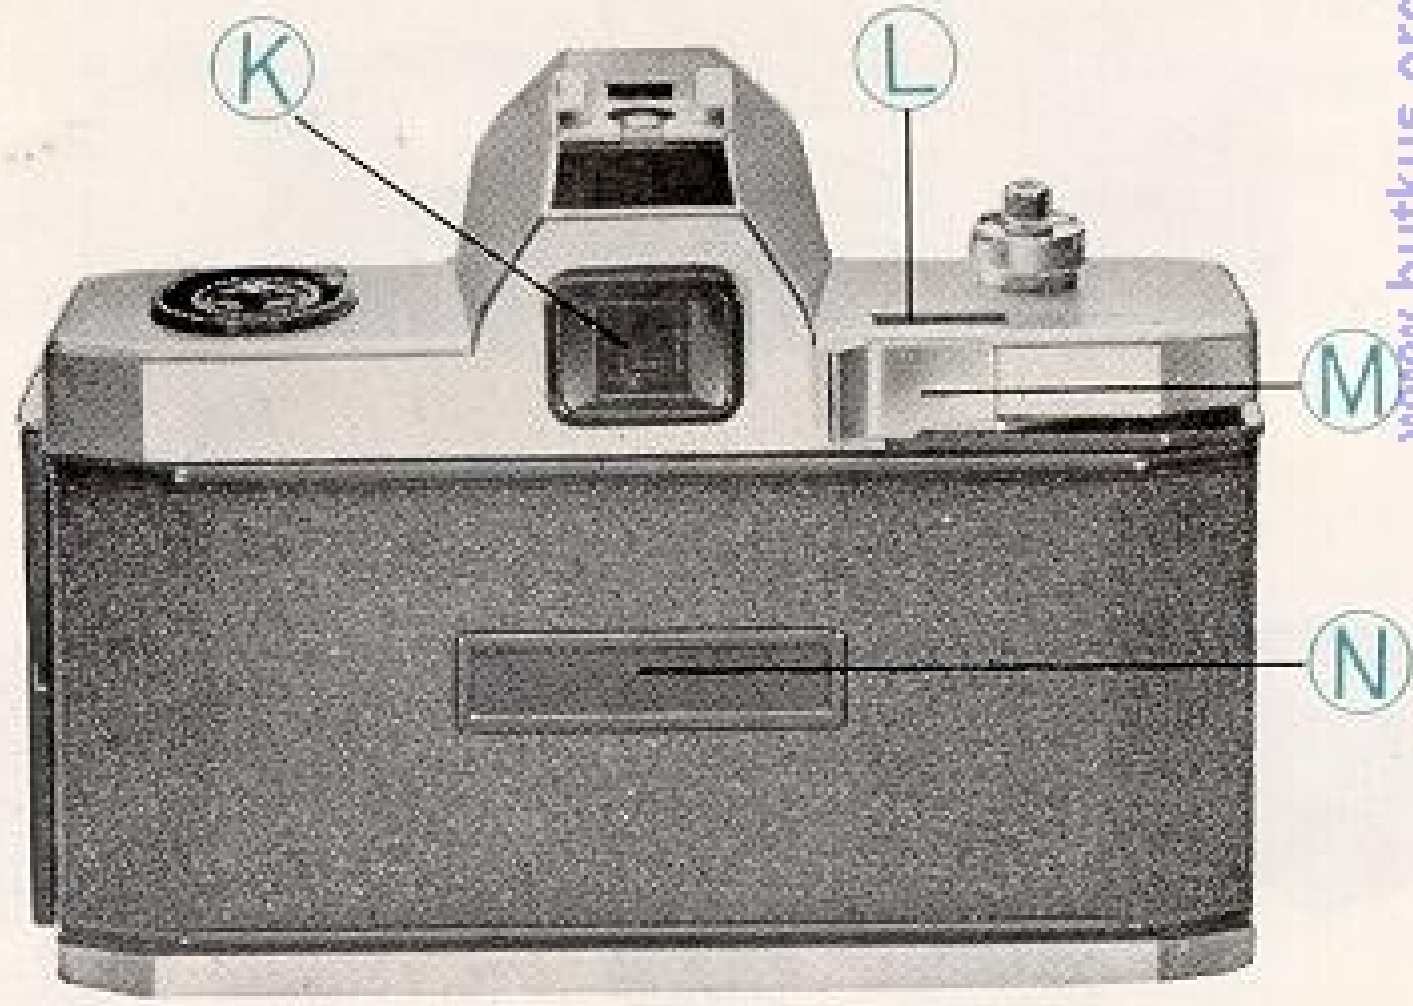
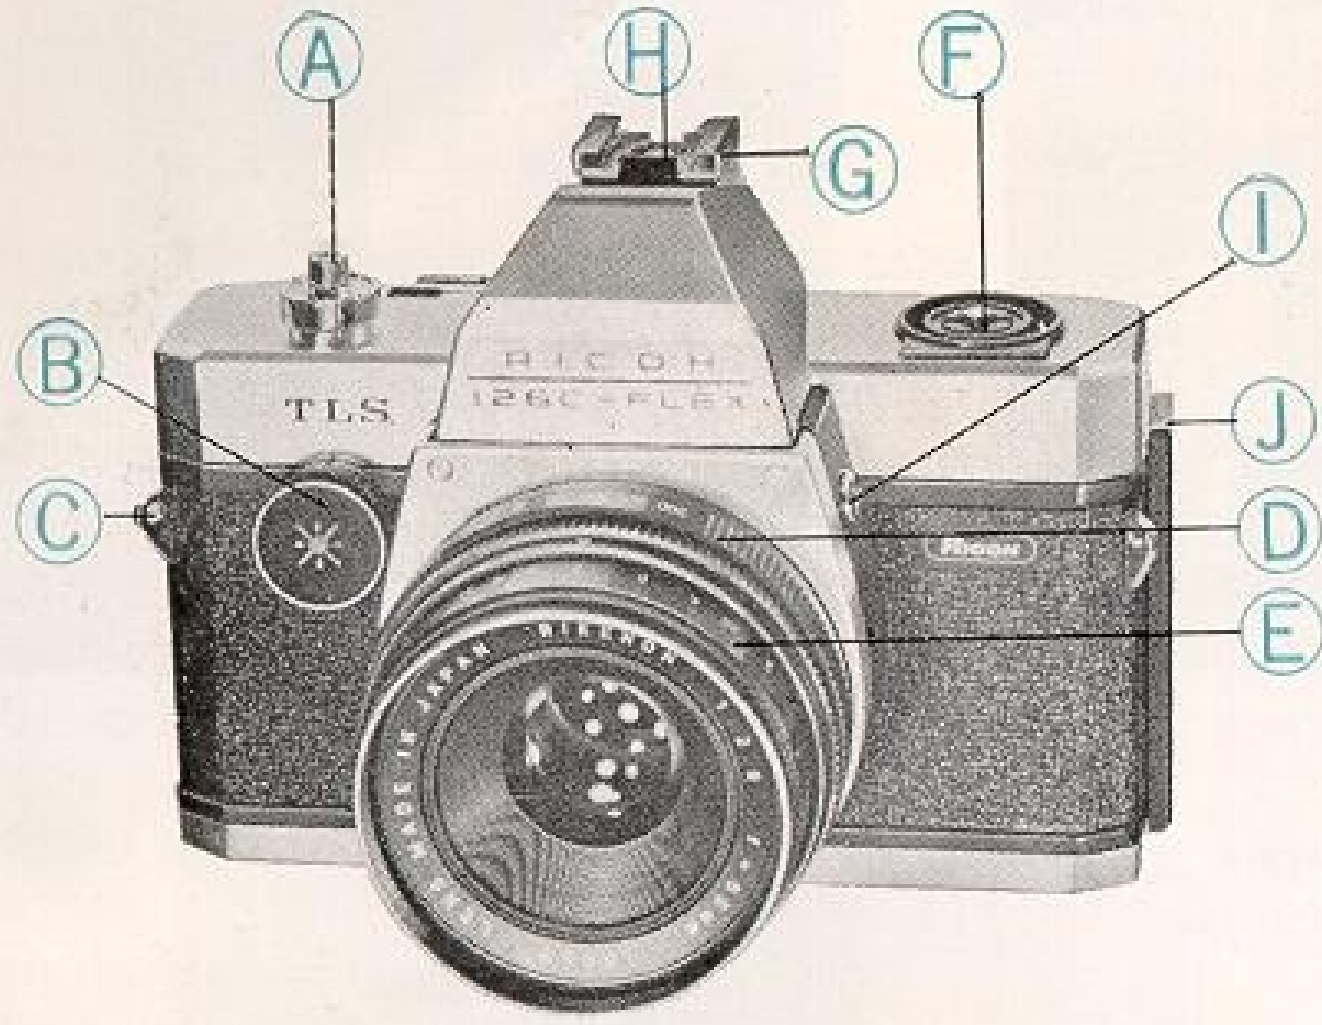
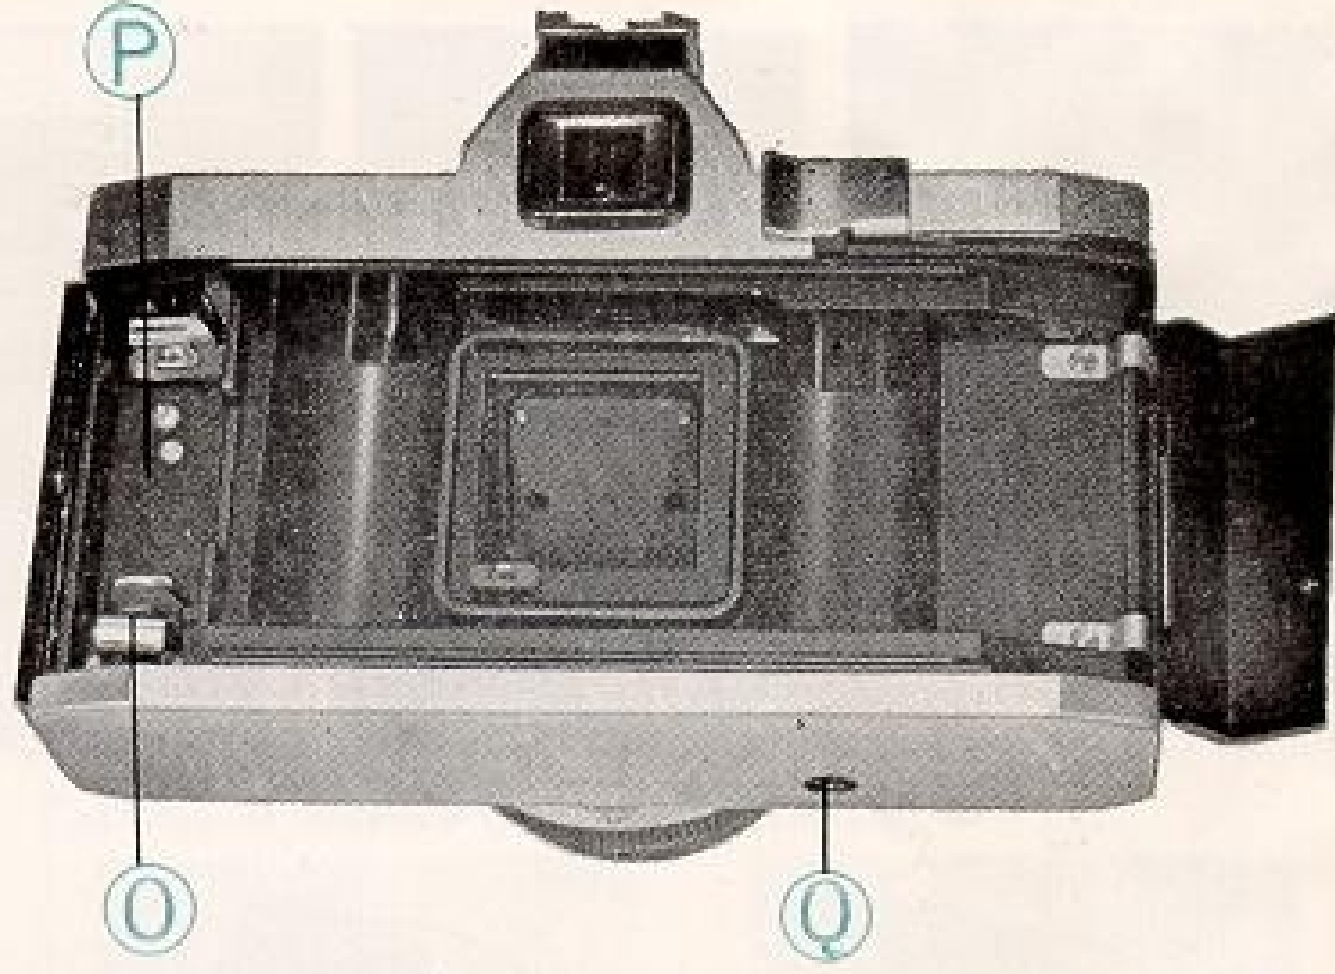 


Fig. 1

 

 

 

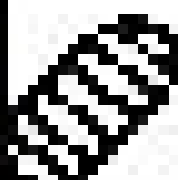
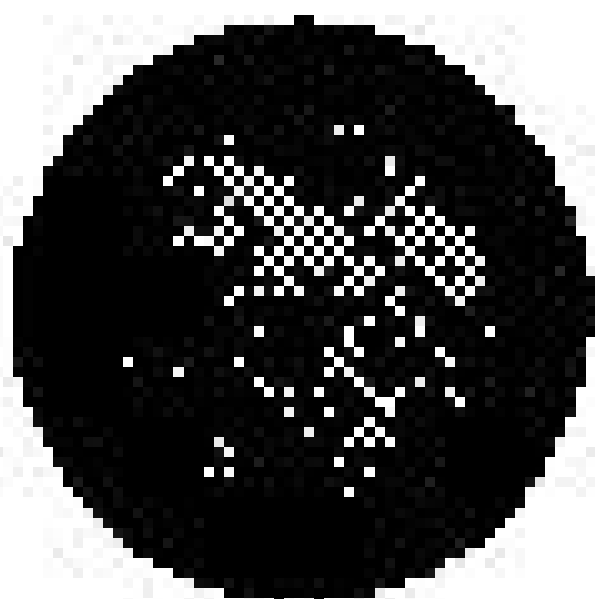 




Fig. 2

 

Fig. 3



Fig. 4

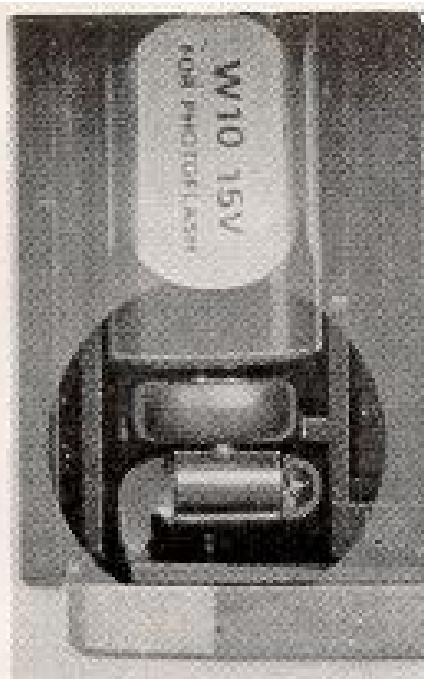 


Fig. 5



Fig. 6



Fig. 8



In focus
Richtig
Image precise
Enfocado



Out of focus
Falsch
Image brouillee
Fuera de foco

Fig. 7



Fig. 12



Fig. 9



Fig. 10

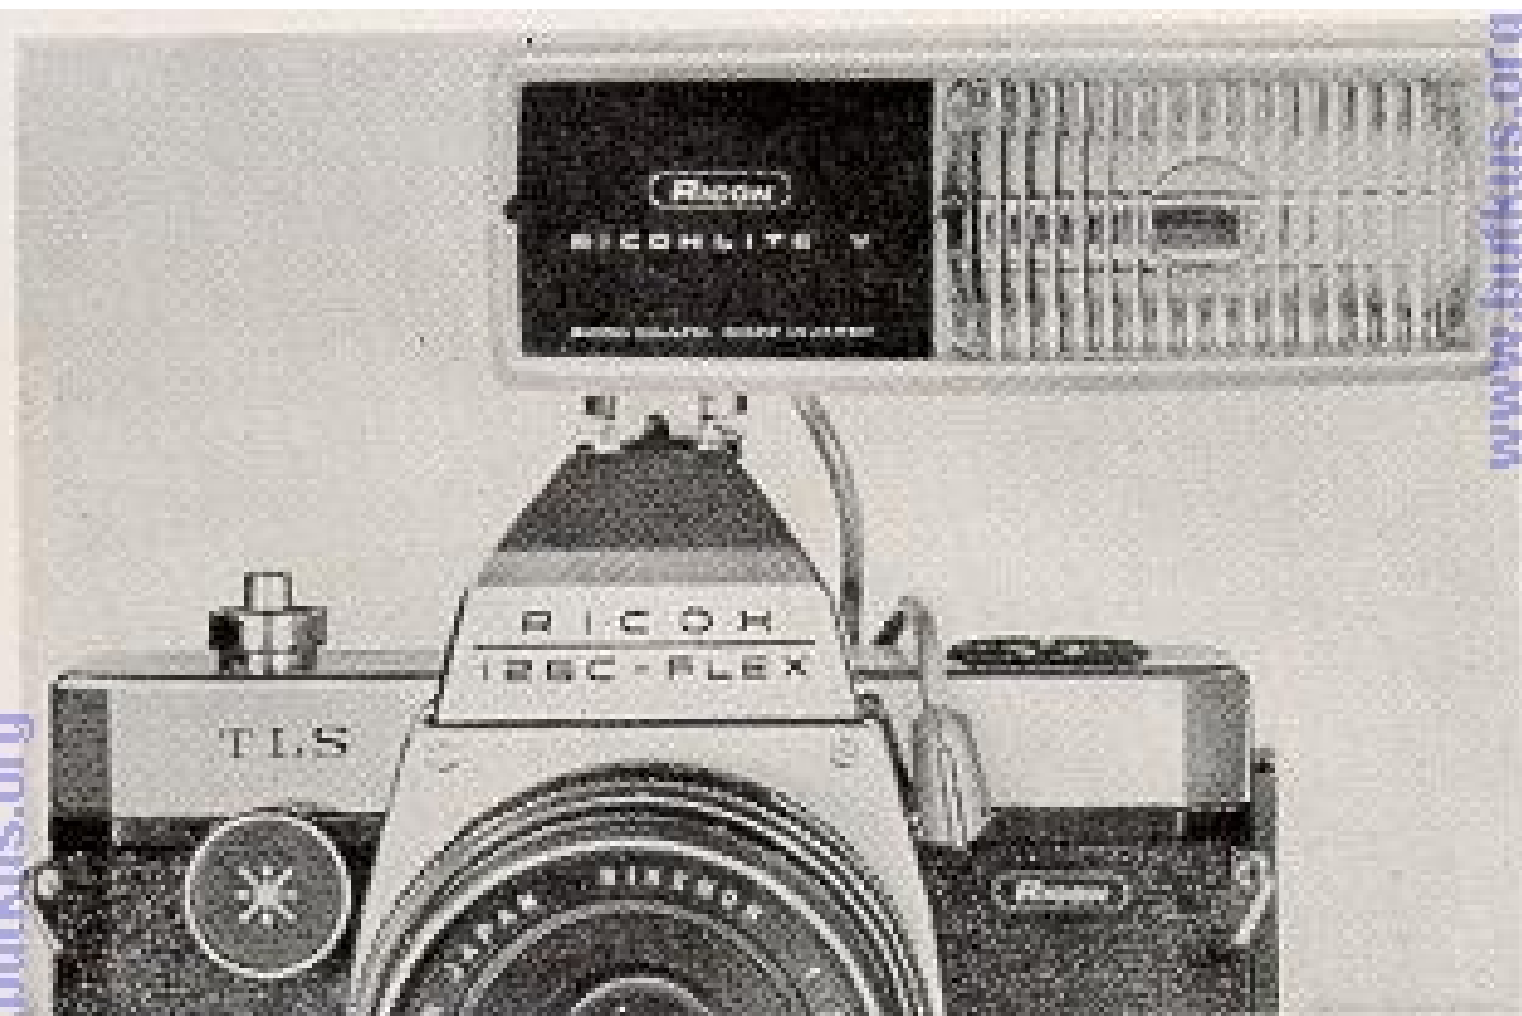
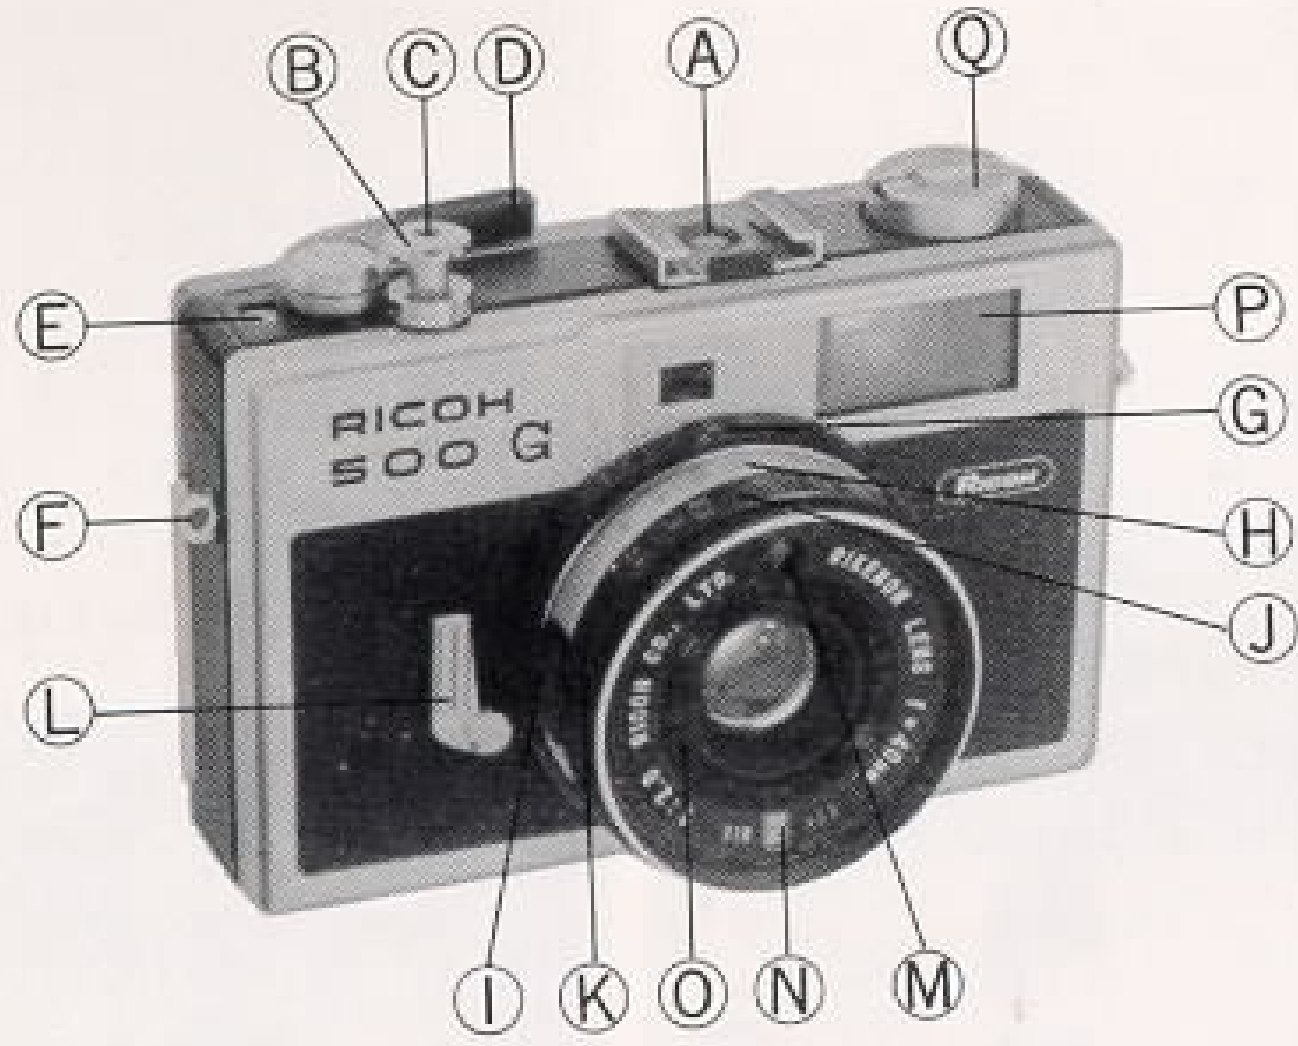 


Fig. 11

 

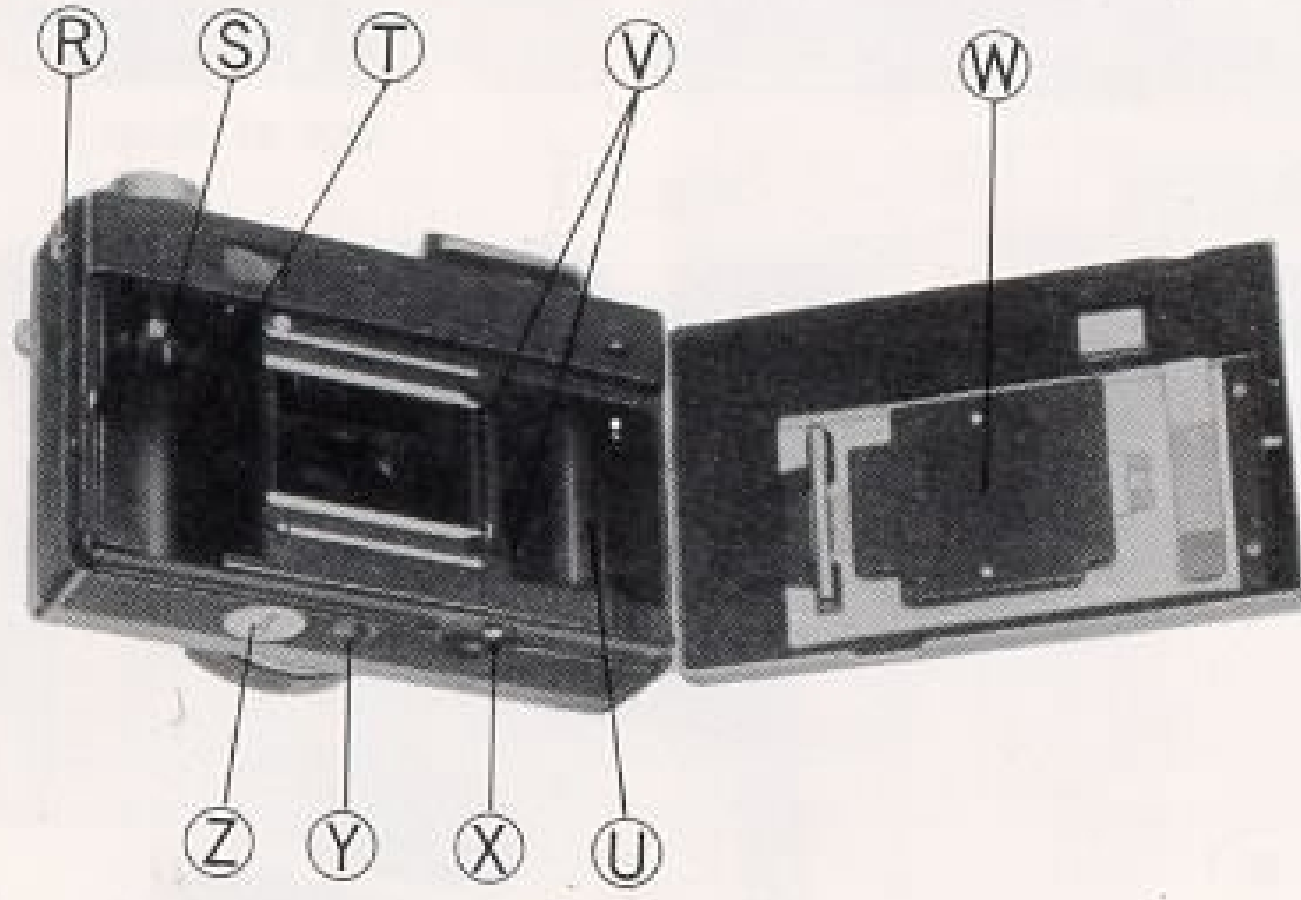




 Fig. 1

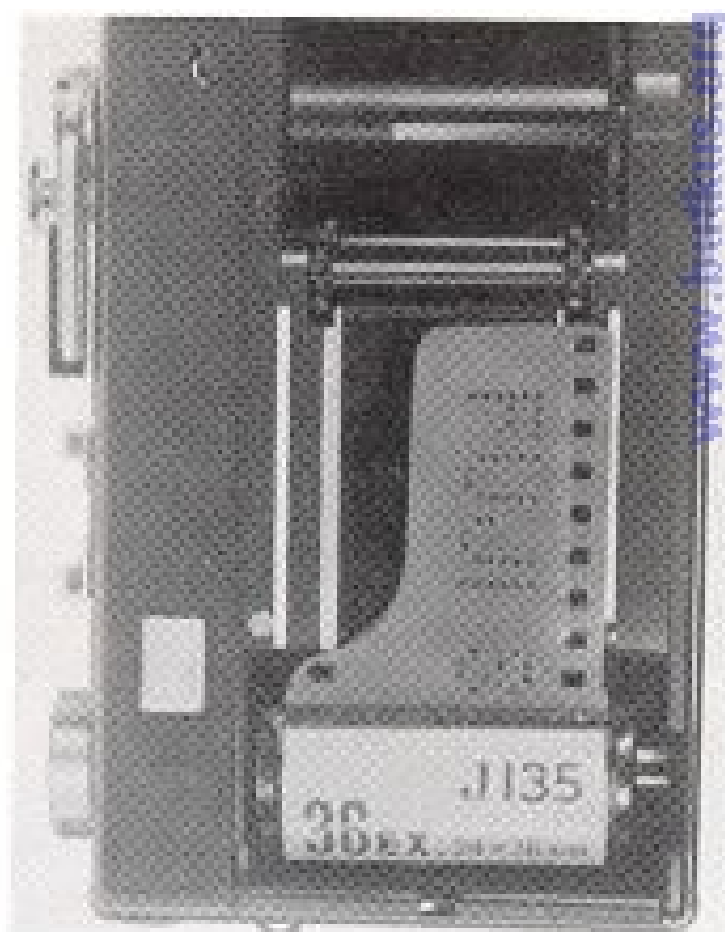 


Fig. 2



Fig. 7

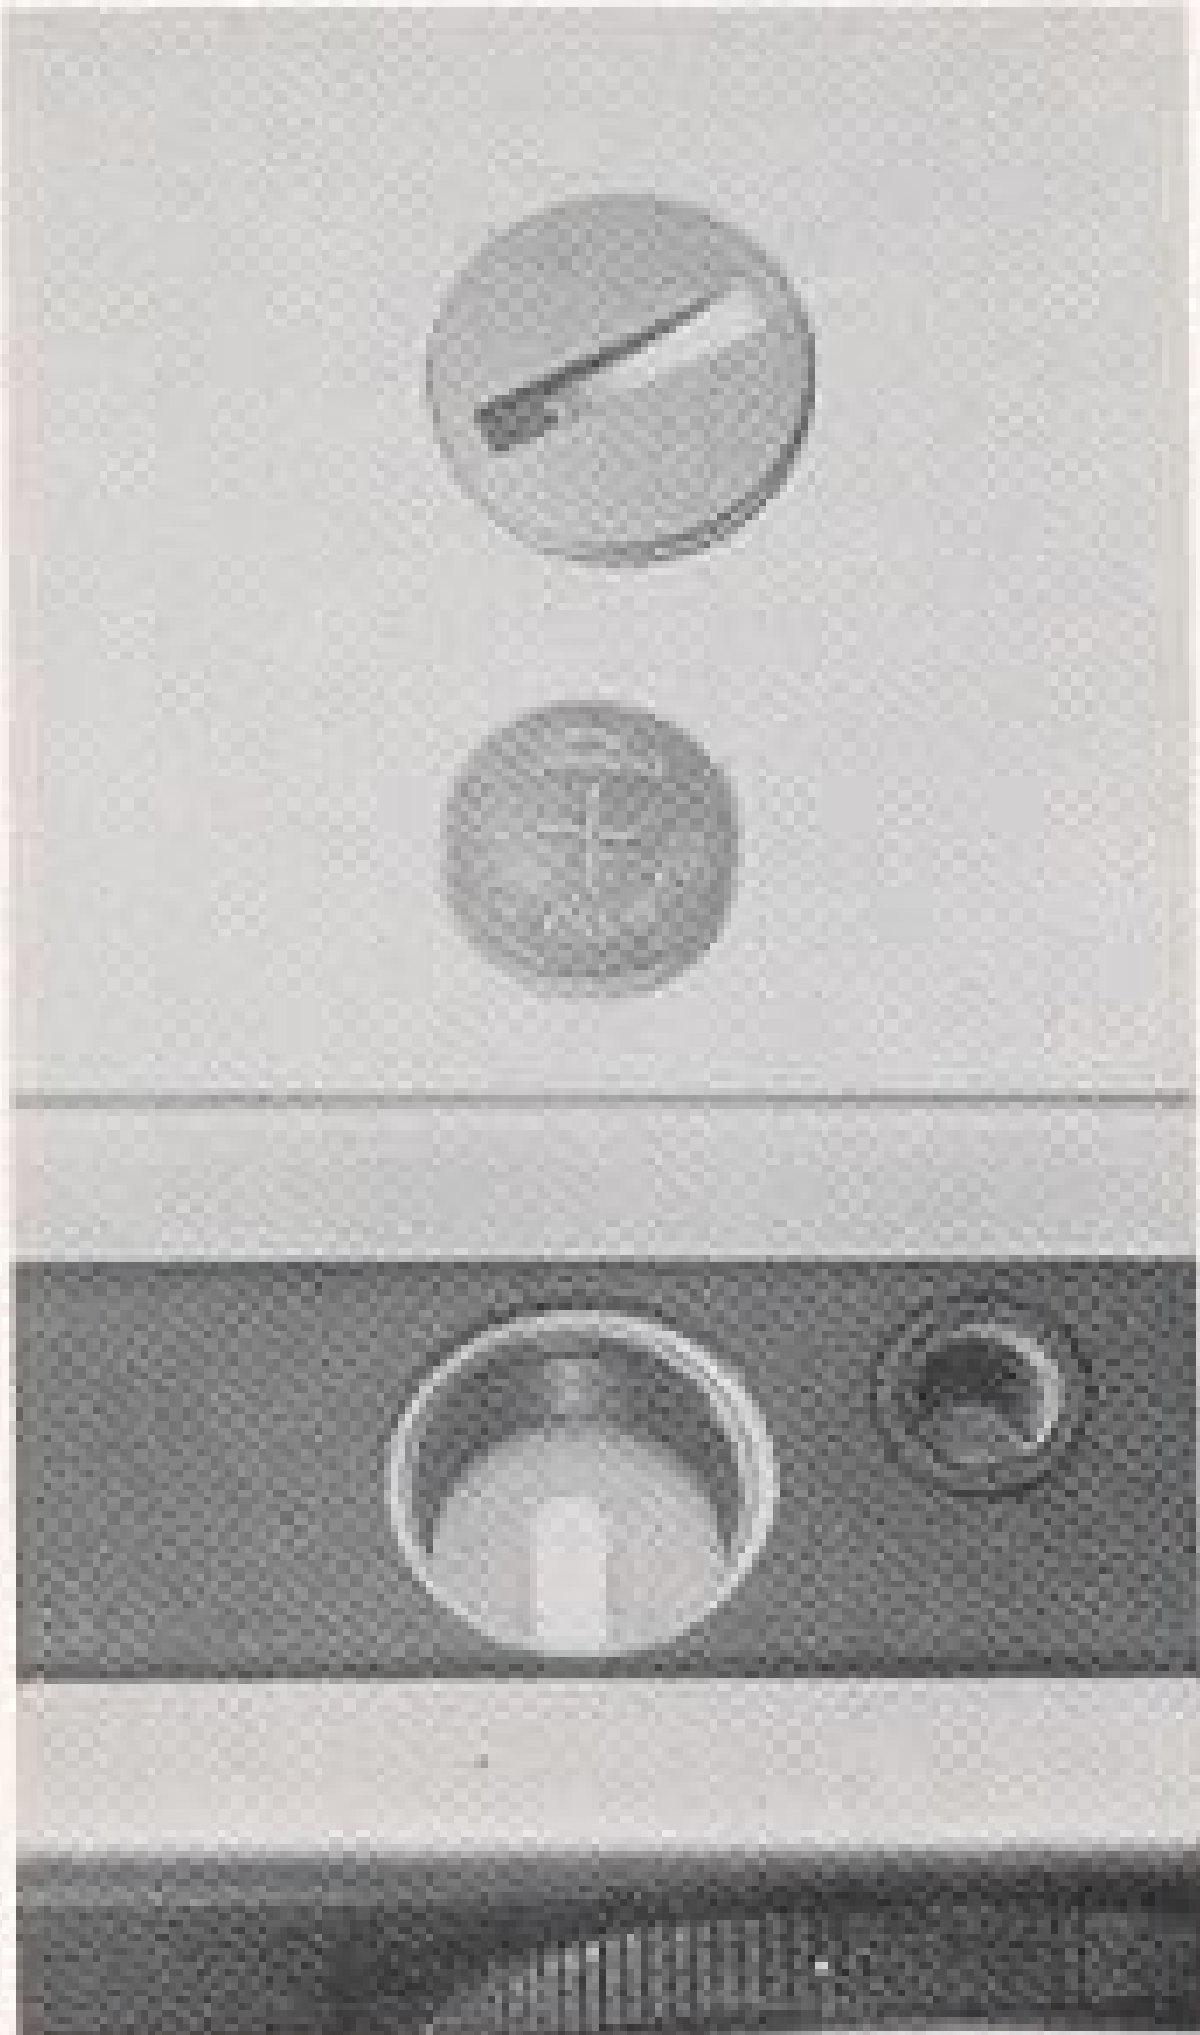 


Fig. 5



Fig. 6

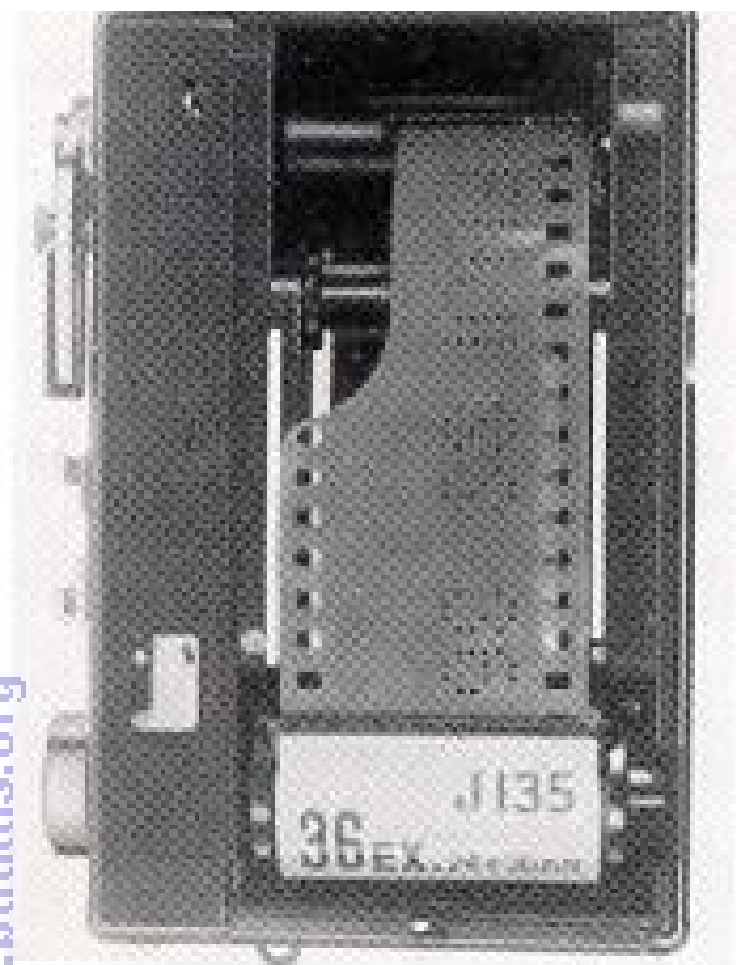 


Fig. 3



Fig. 4



Fig. 8

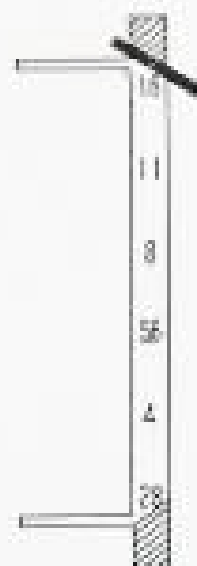 


Fig. 9



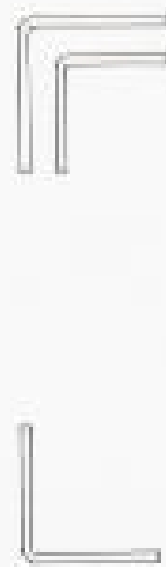 


Fig. 10

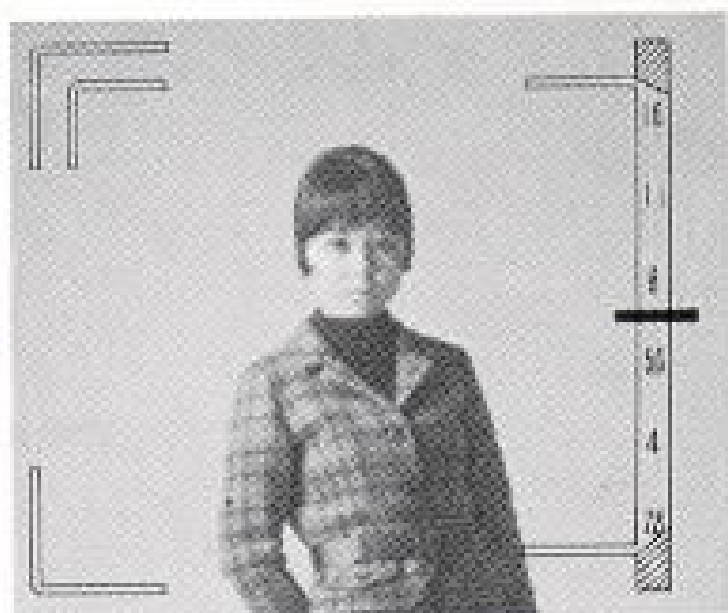 



In focus

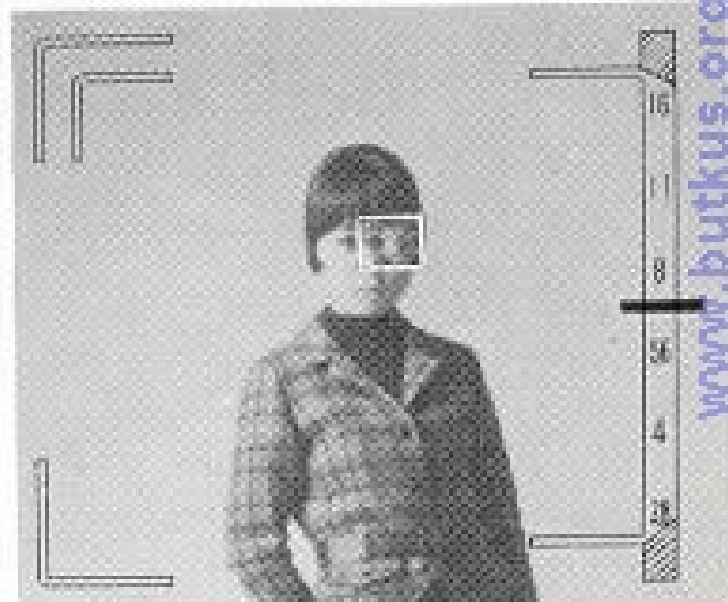 



Out of focus

     
Fig. 11

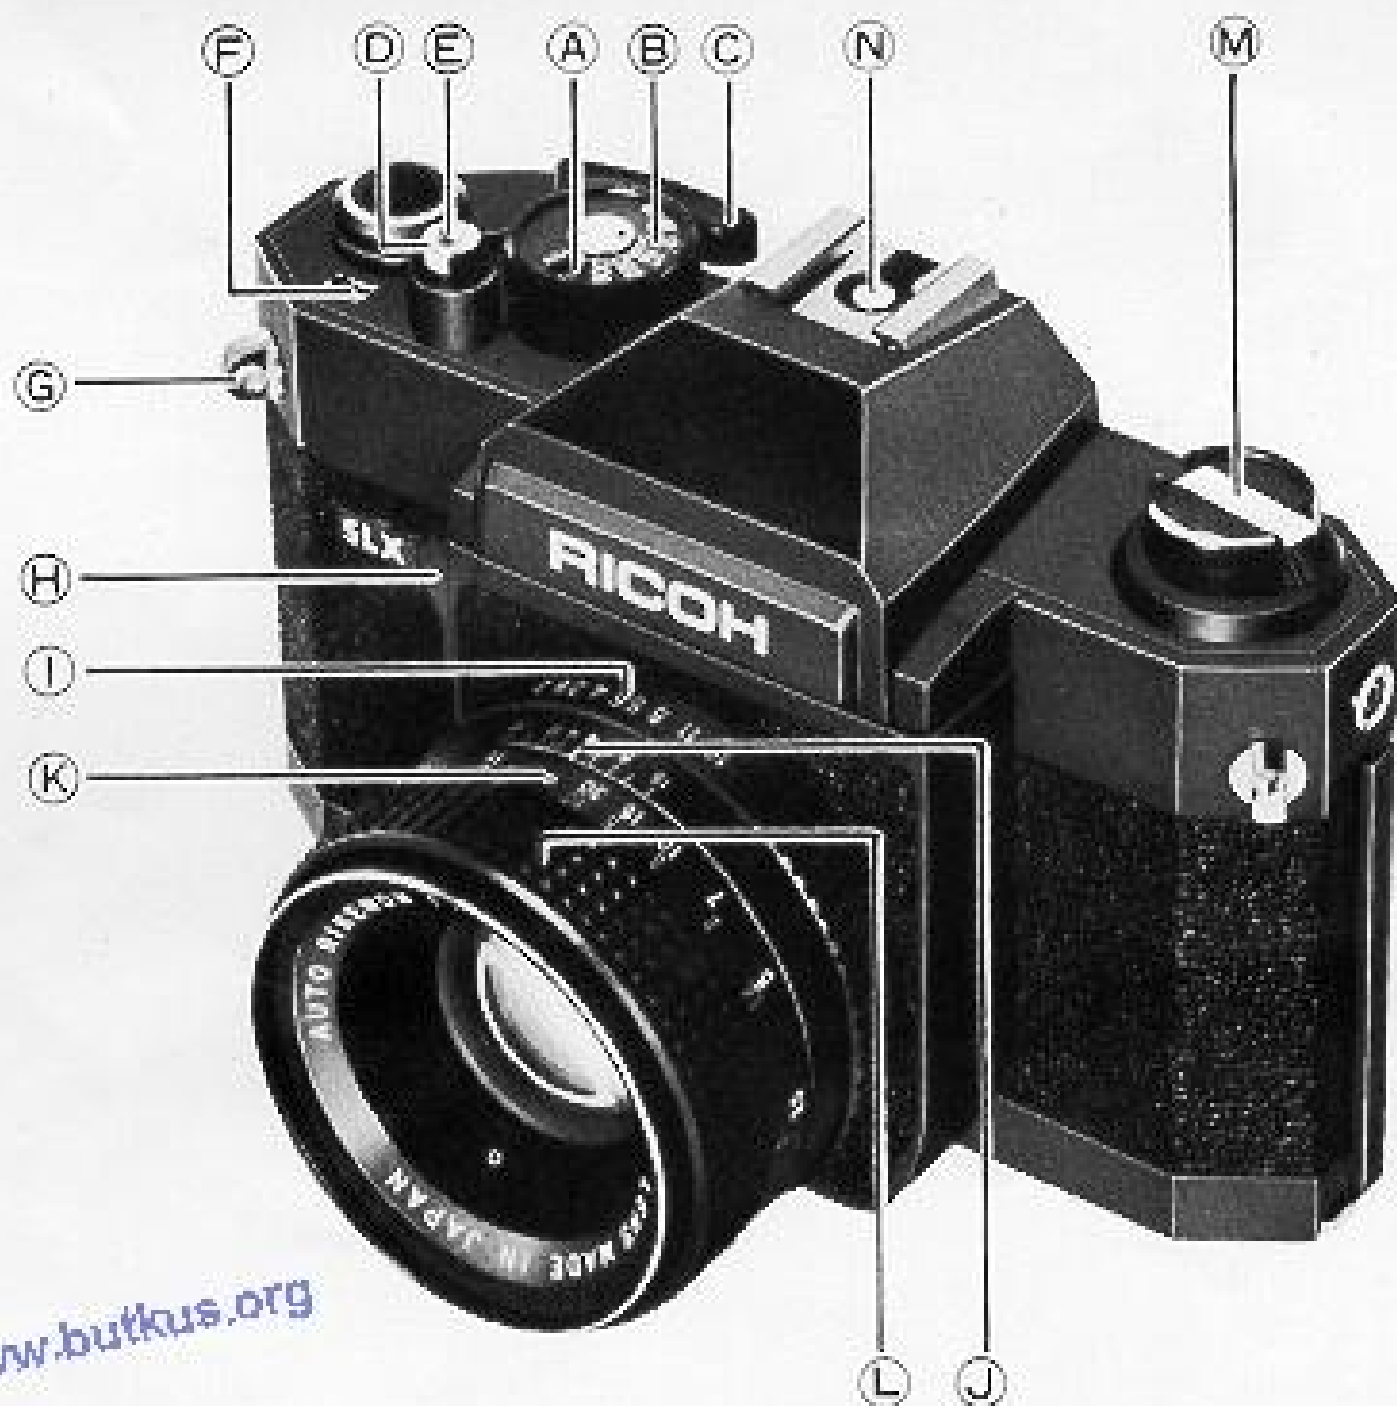 


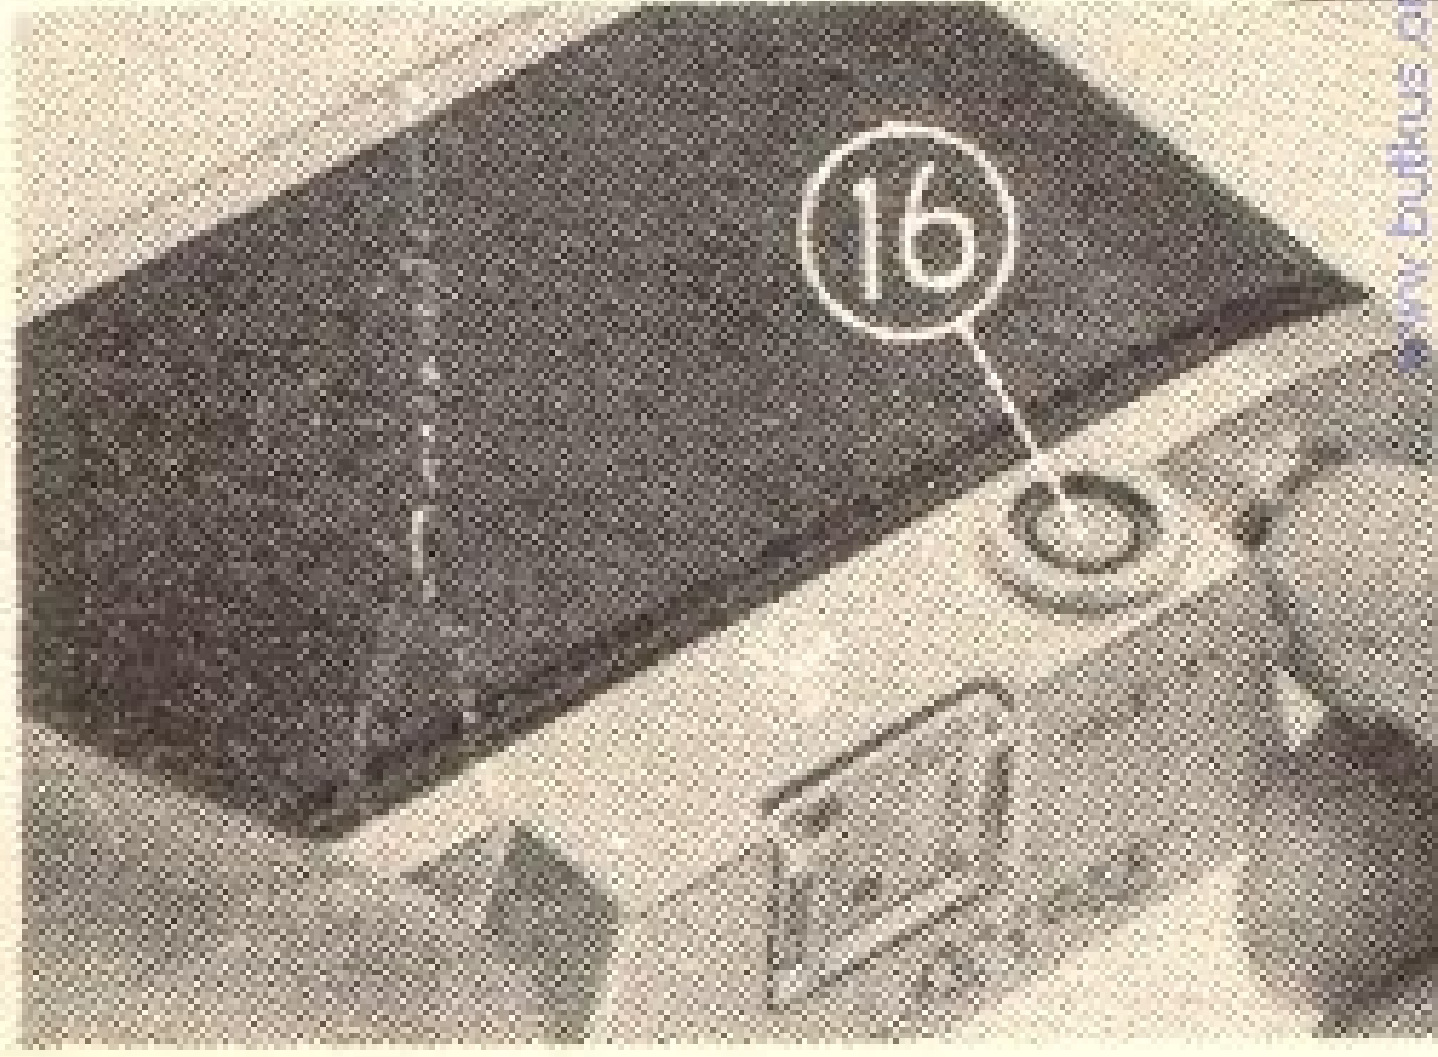

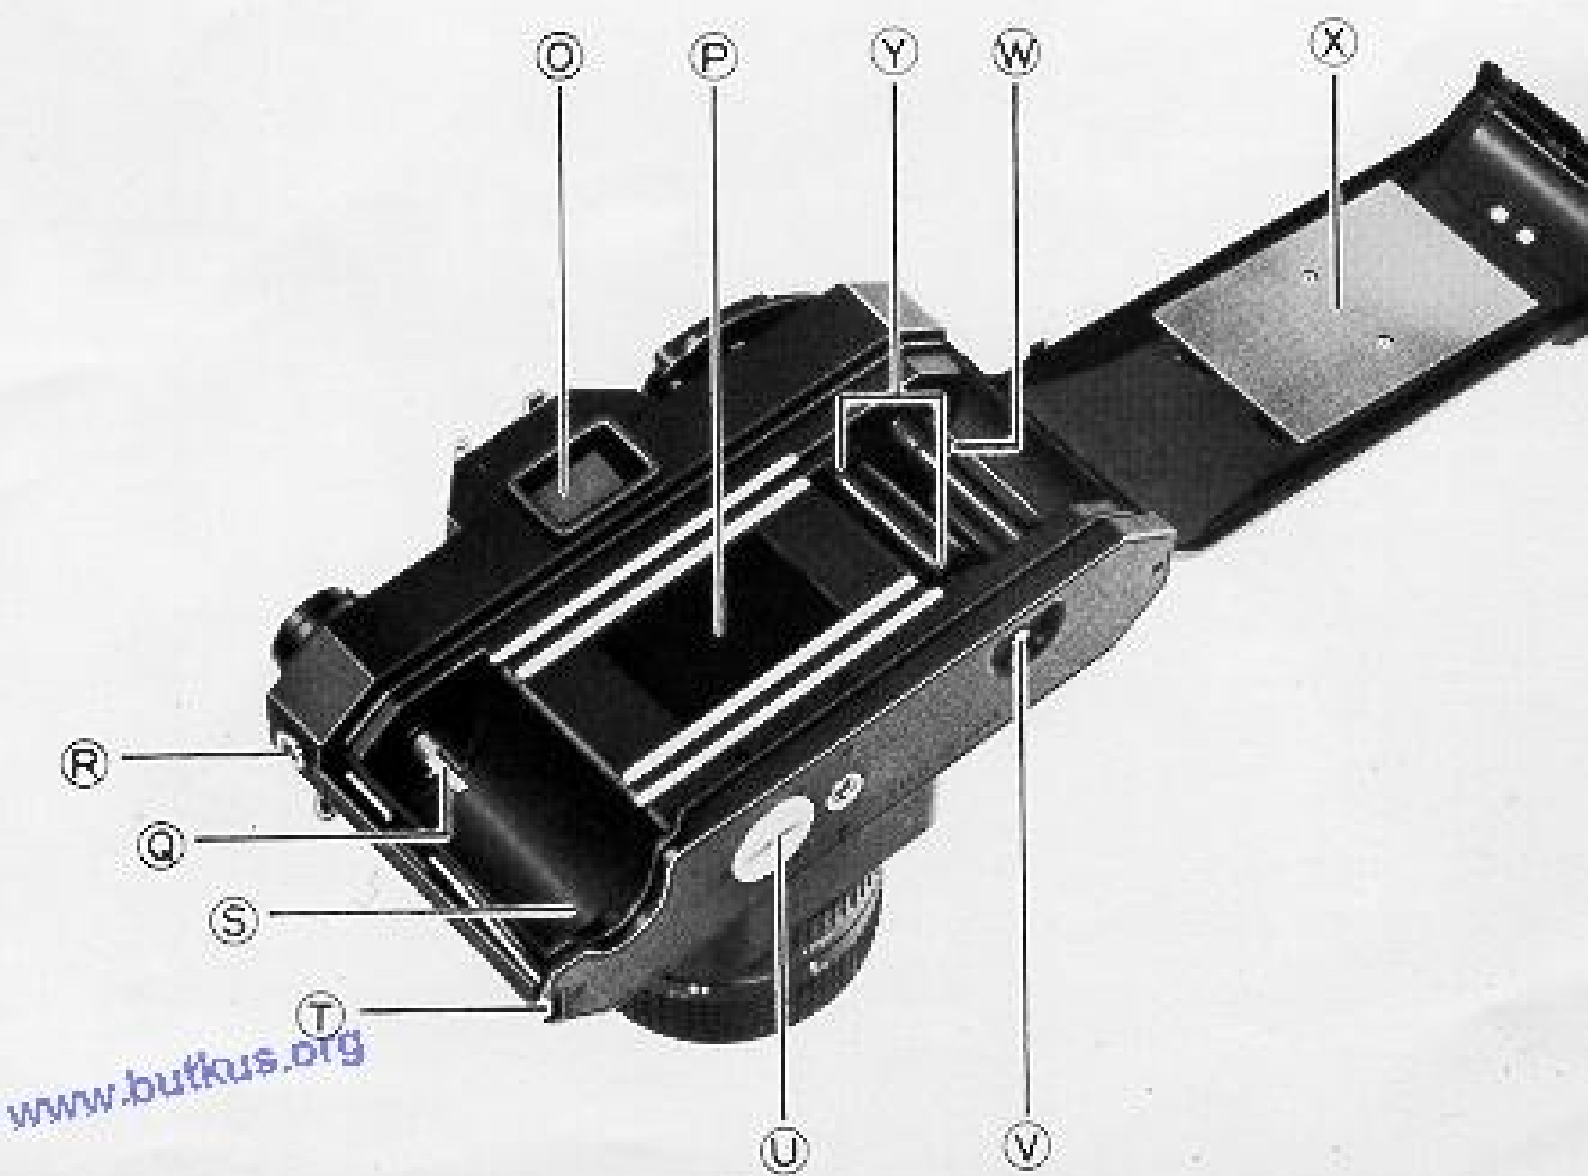 


 
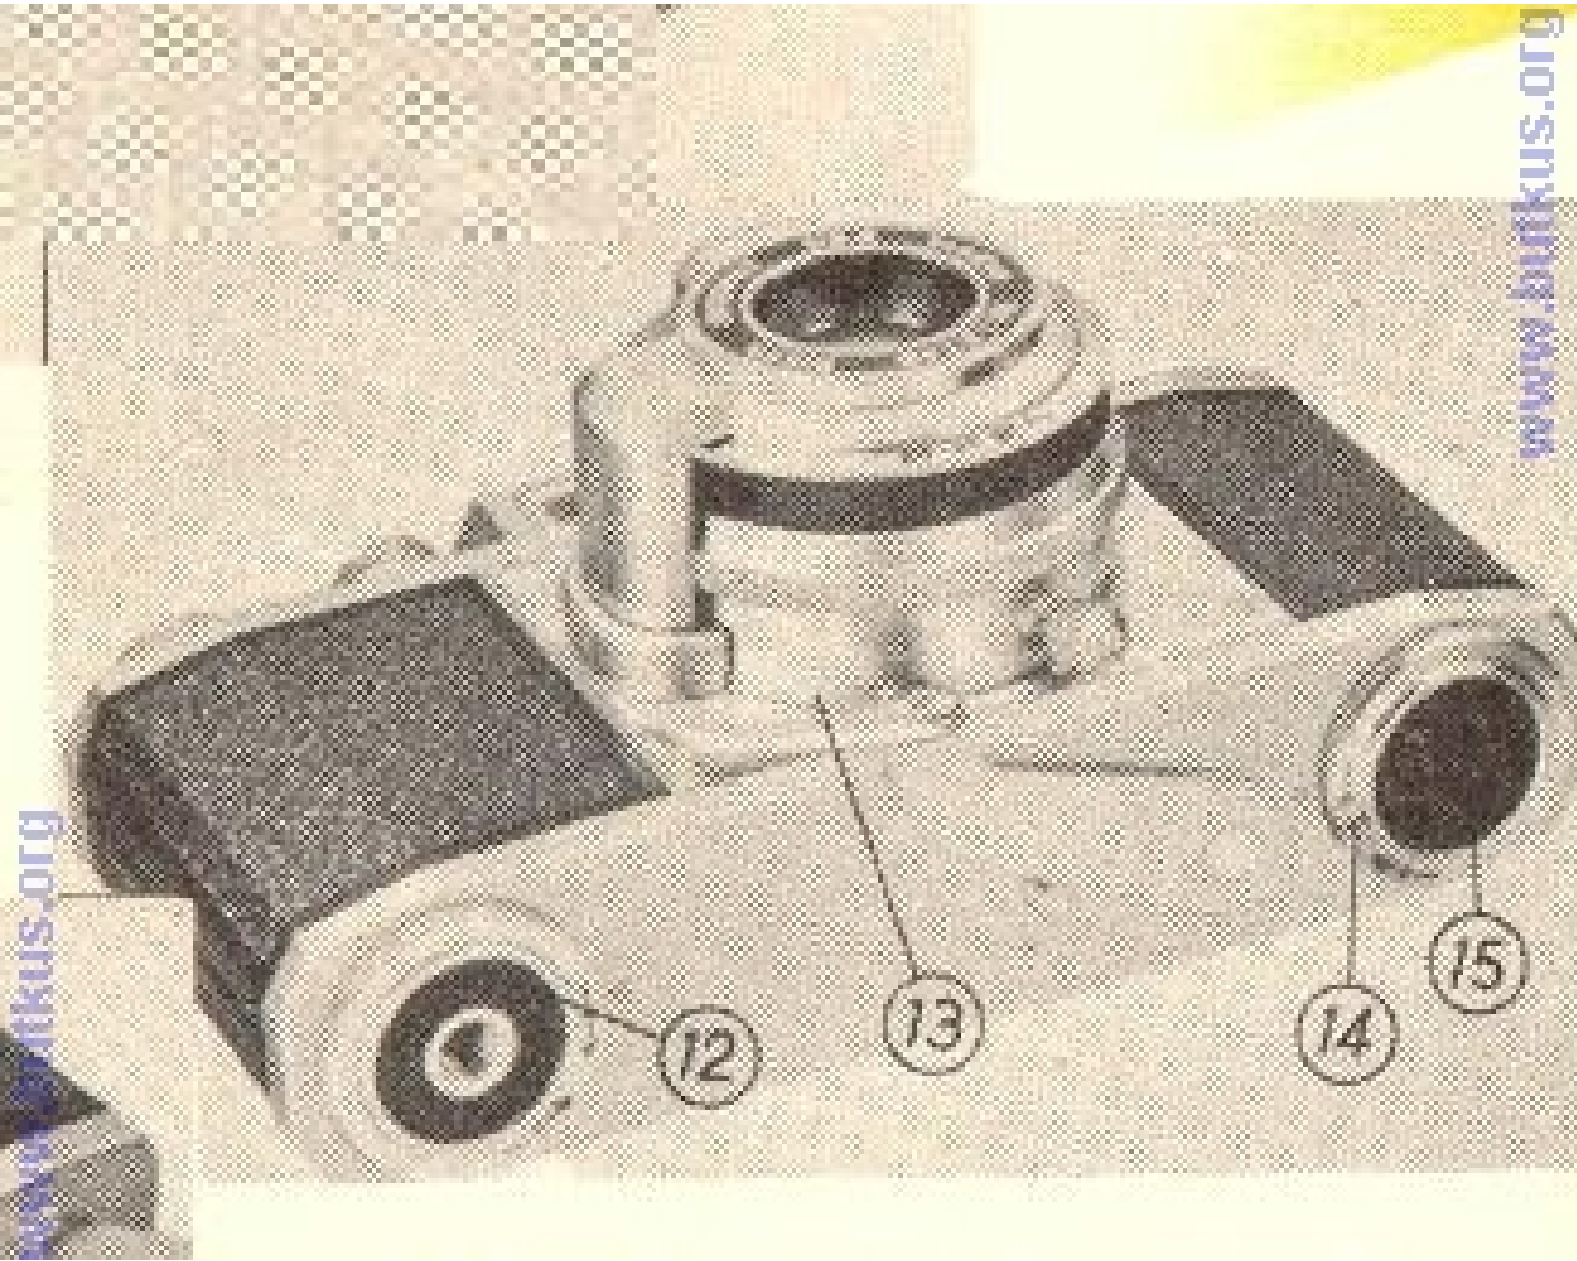 


 
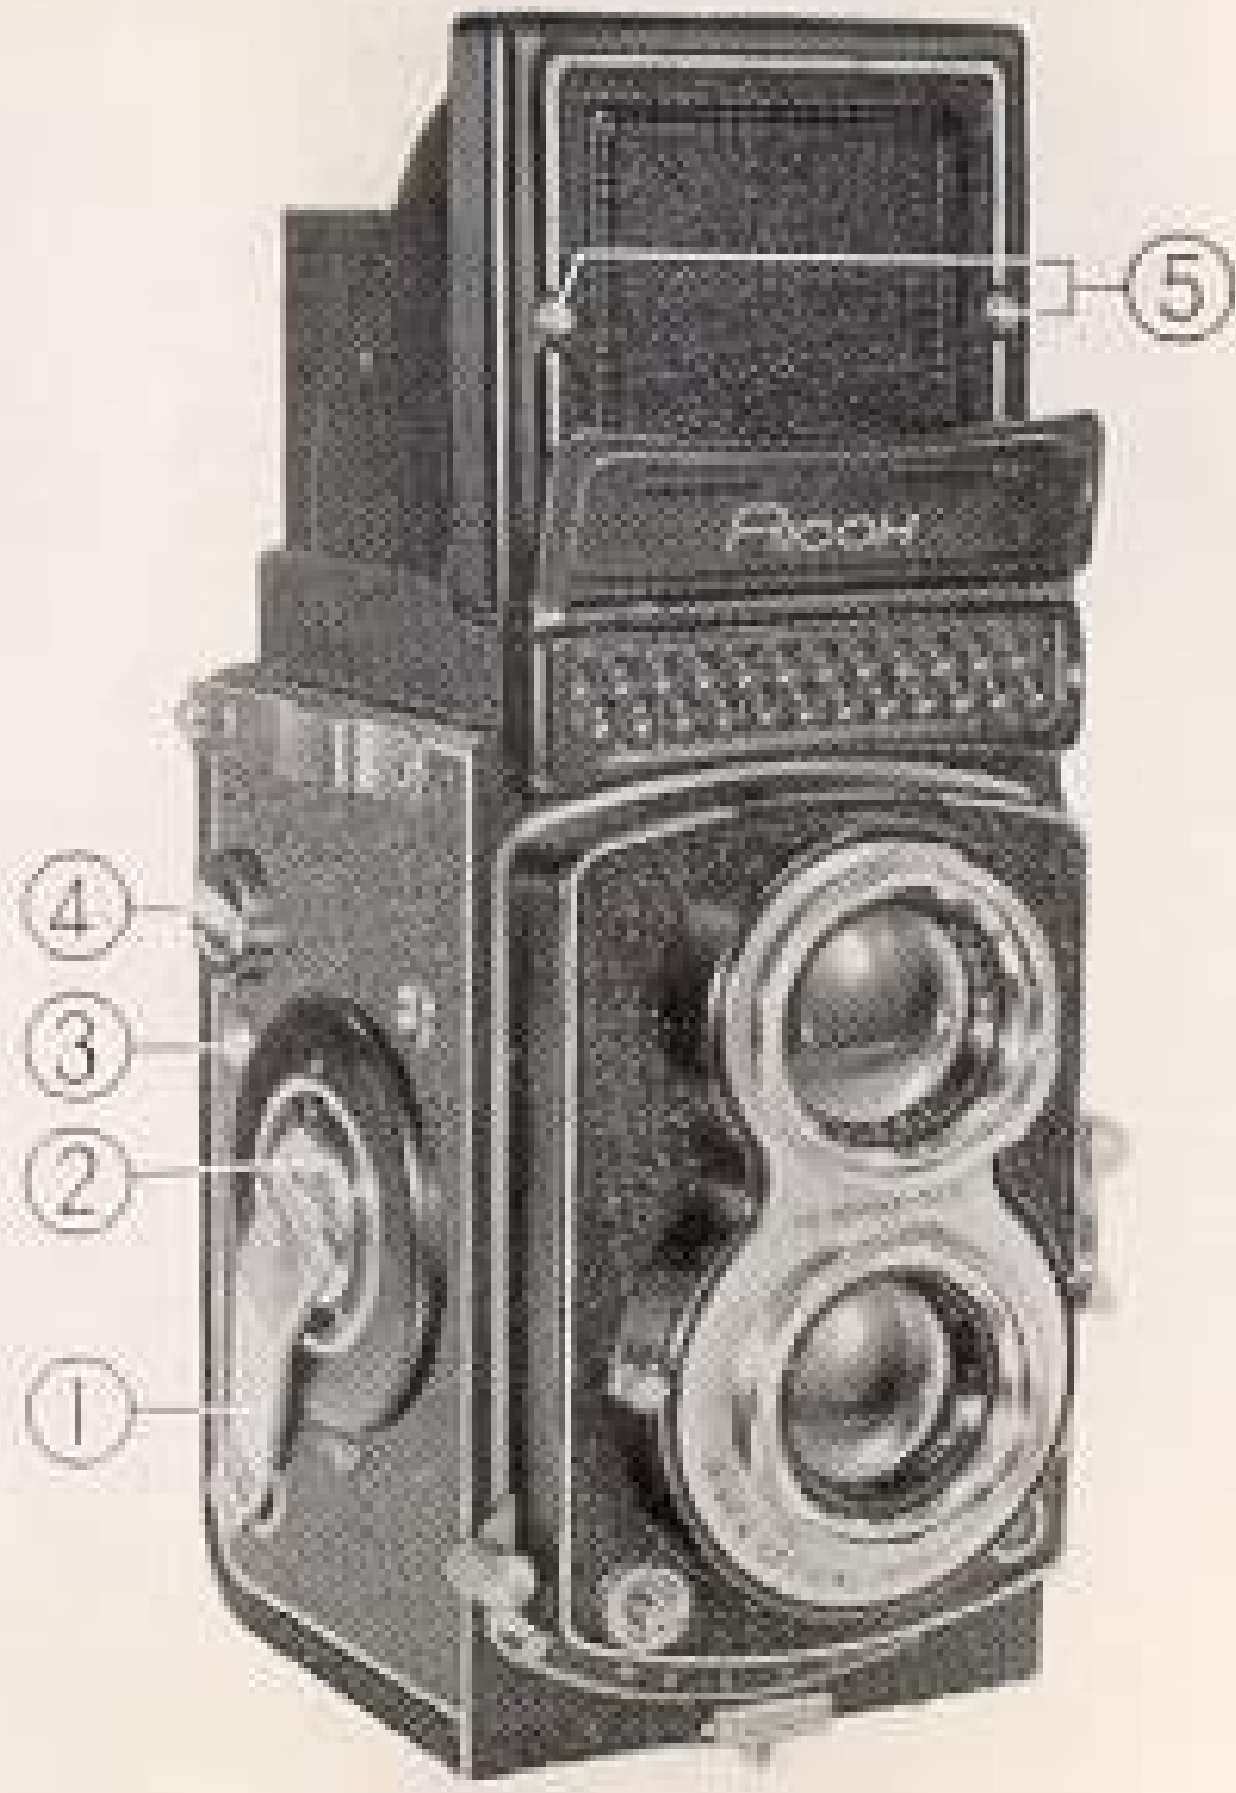 


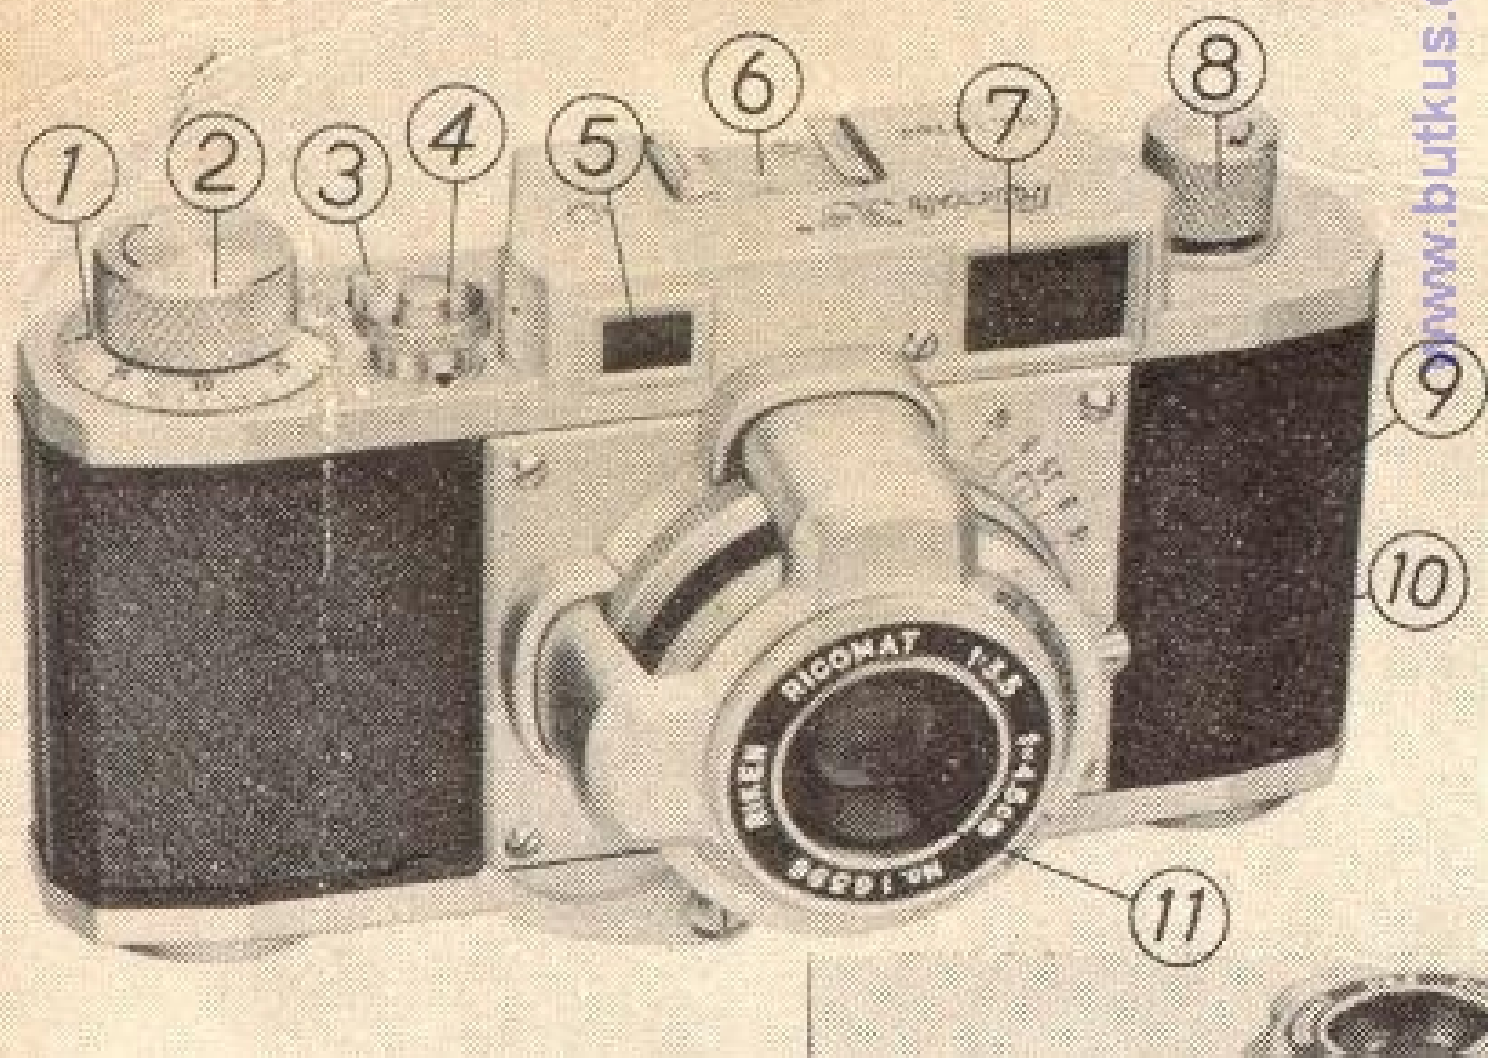 





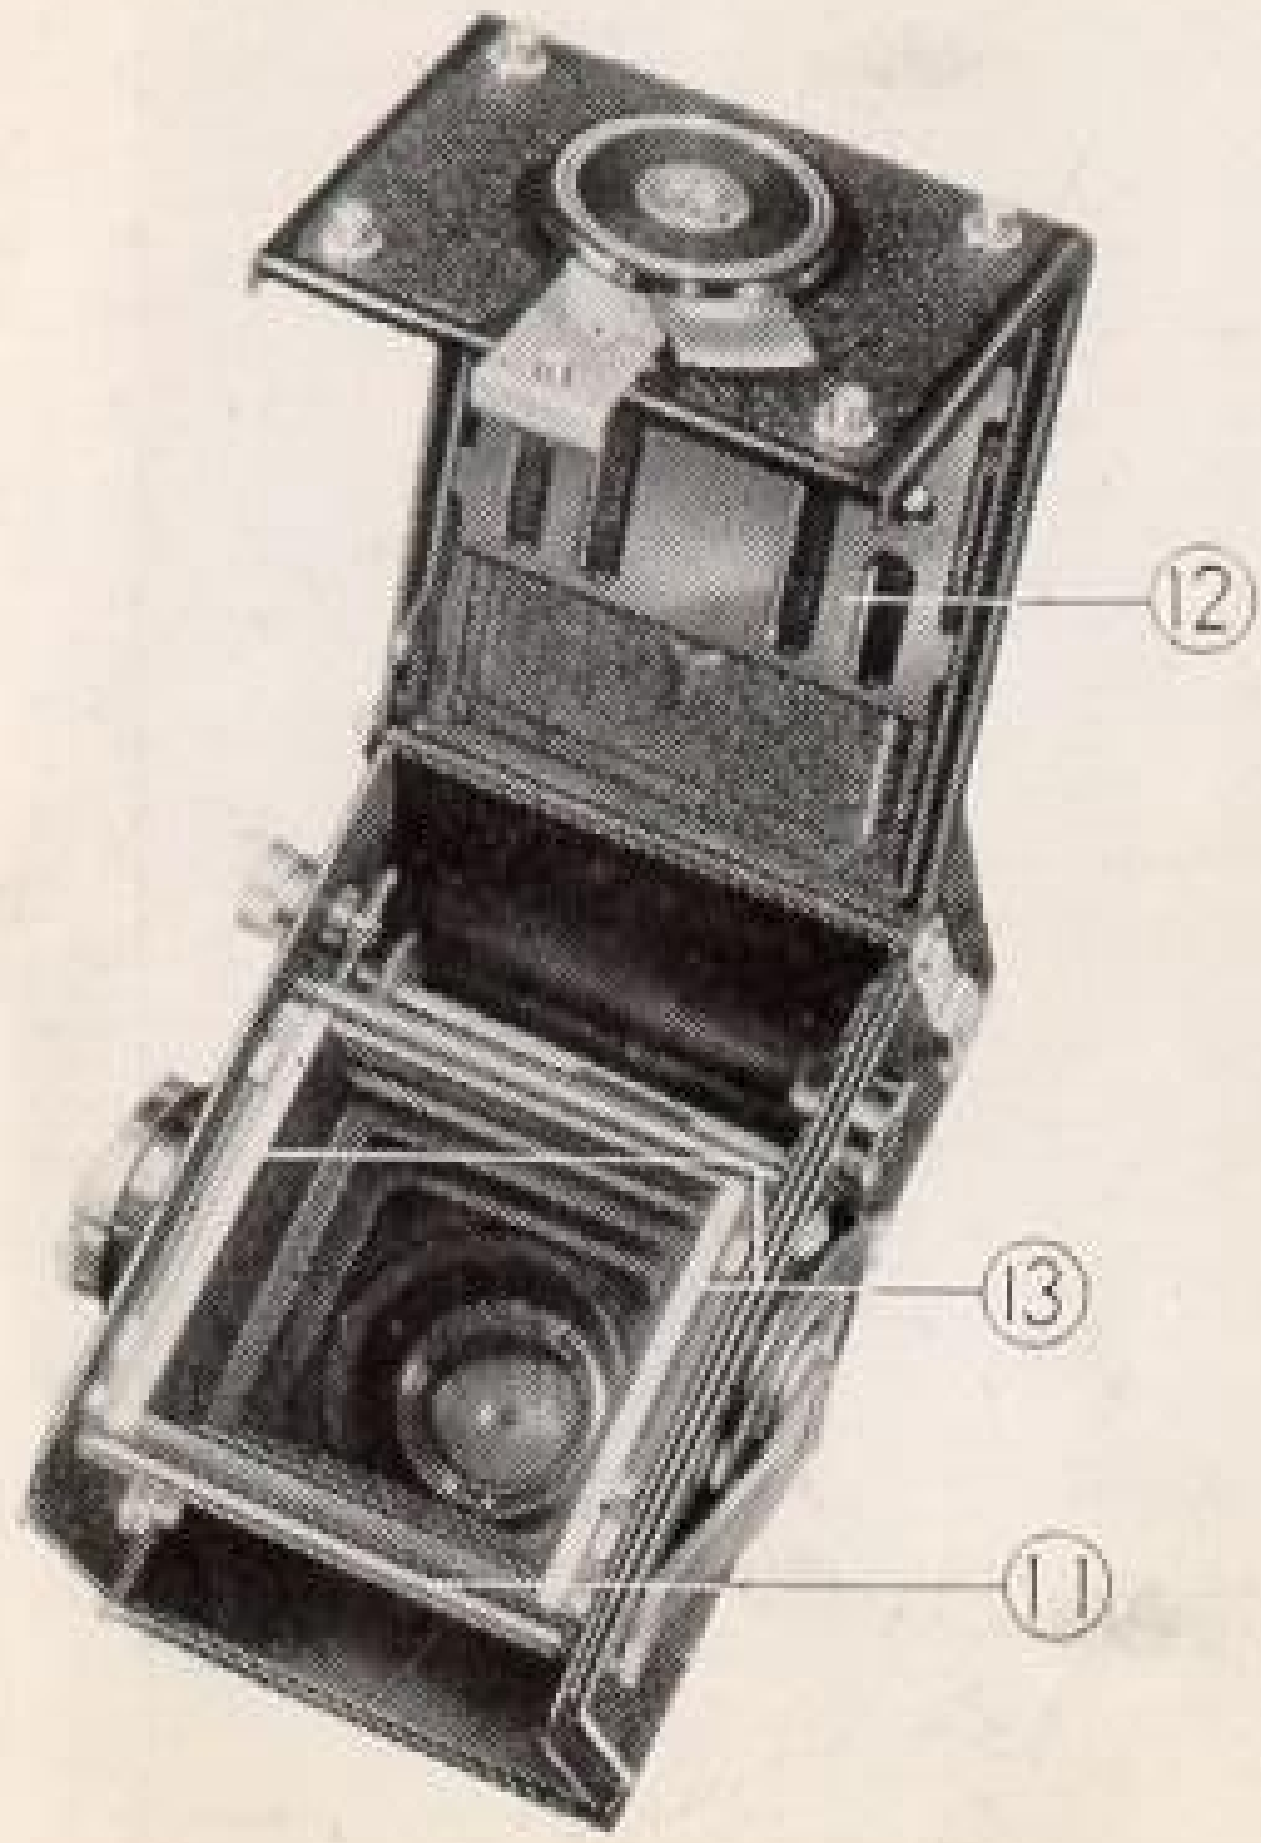


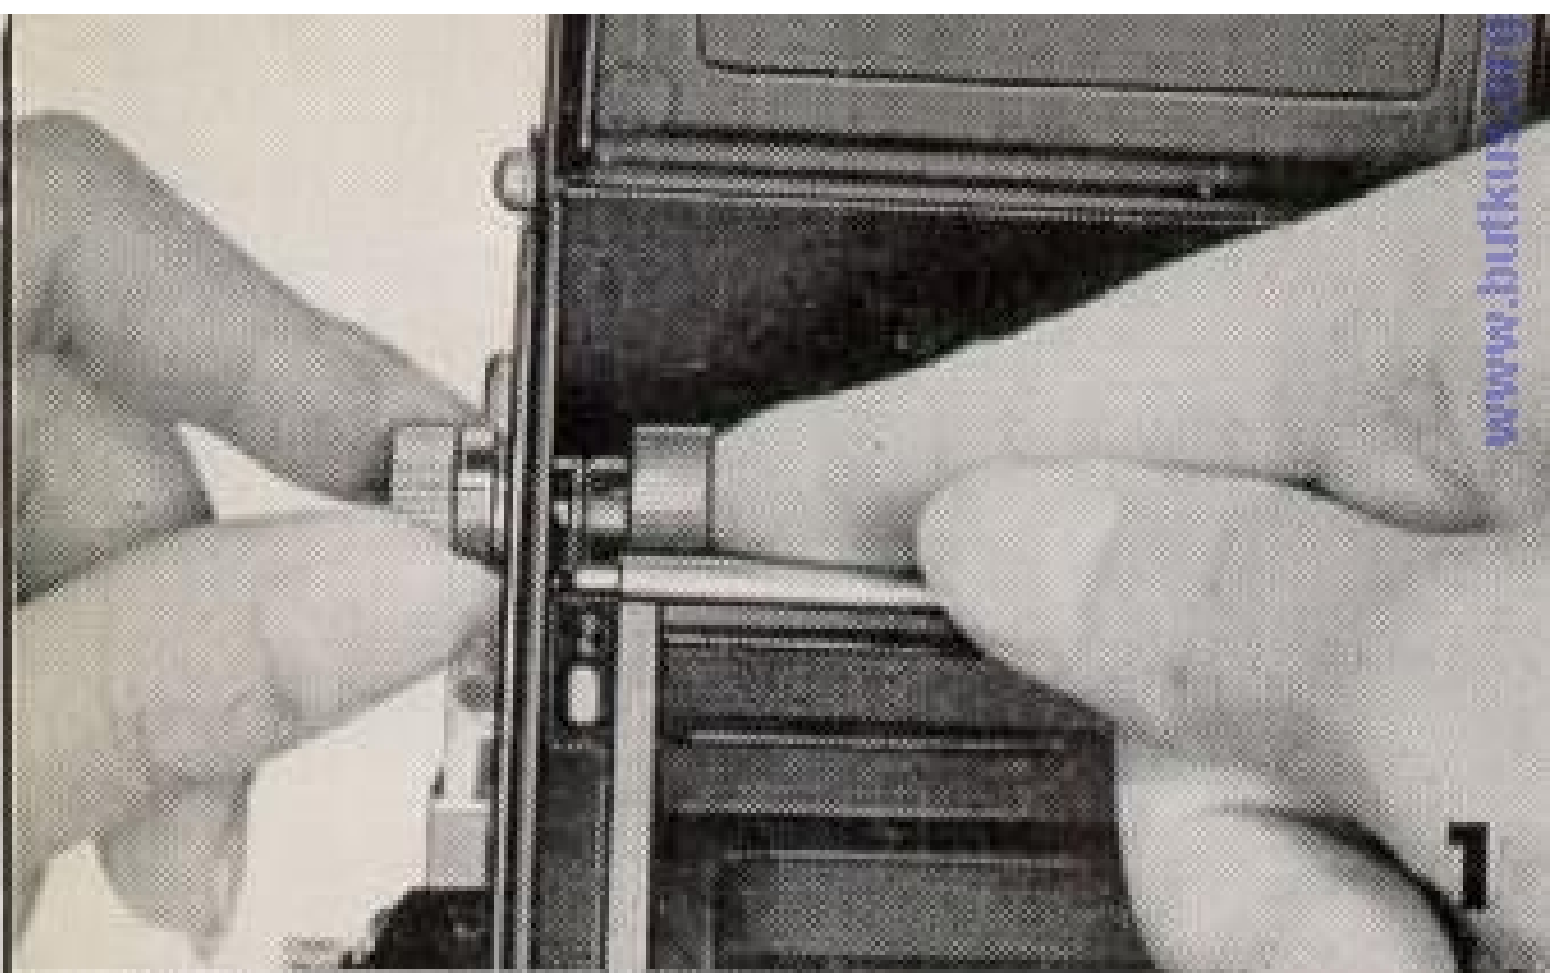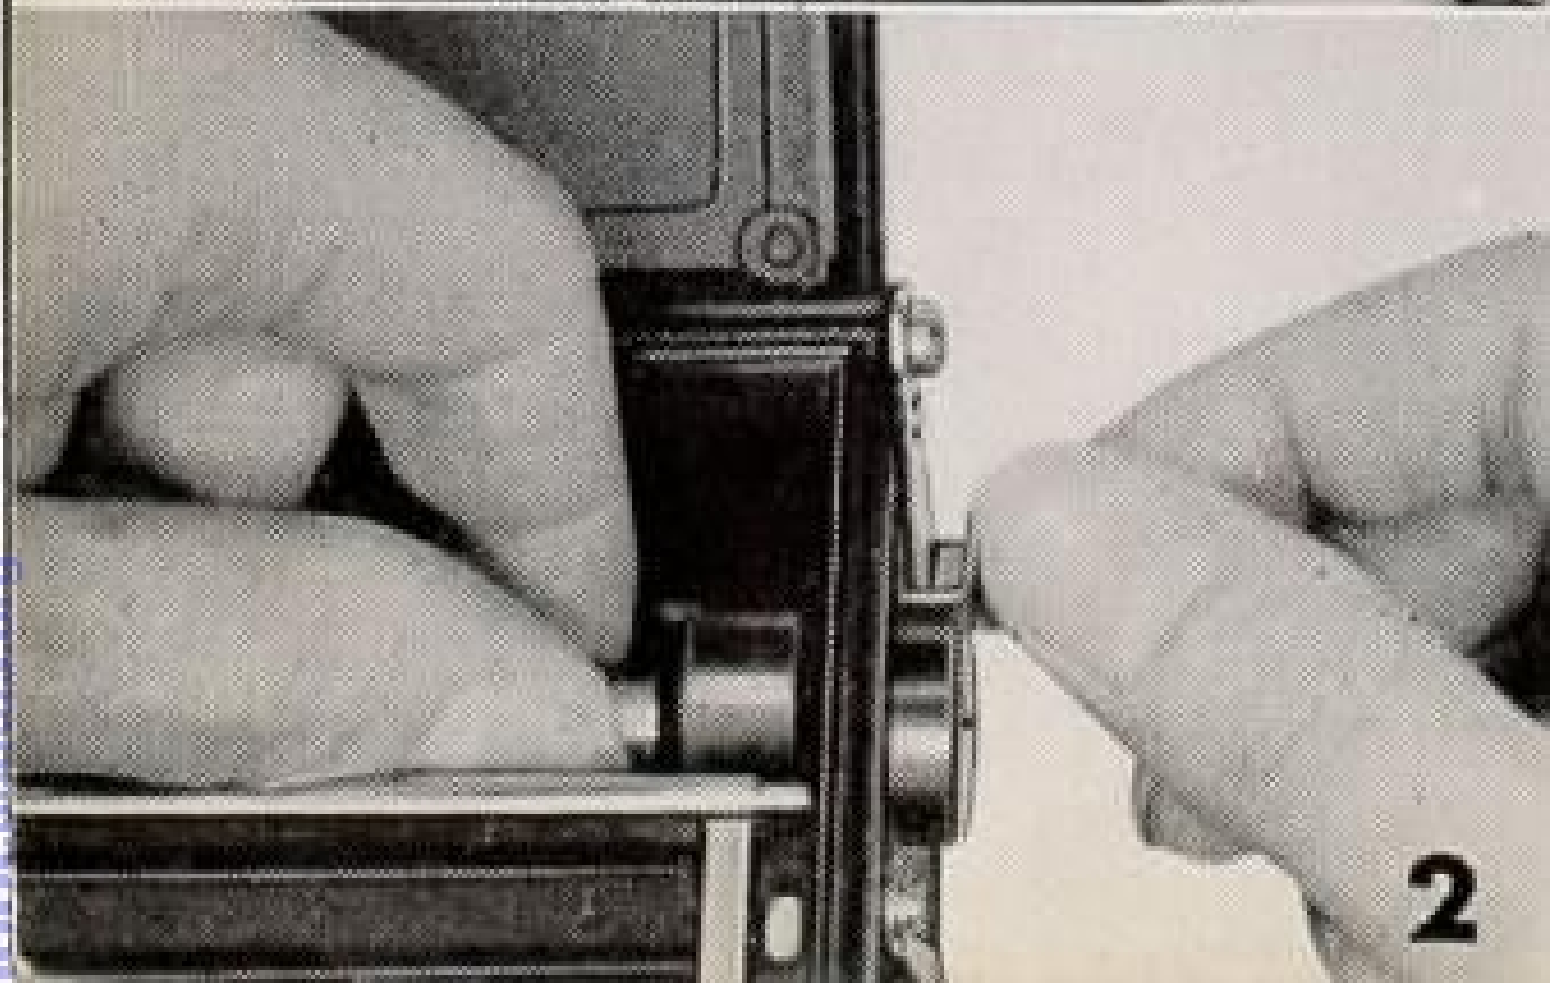


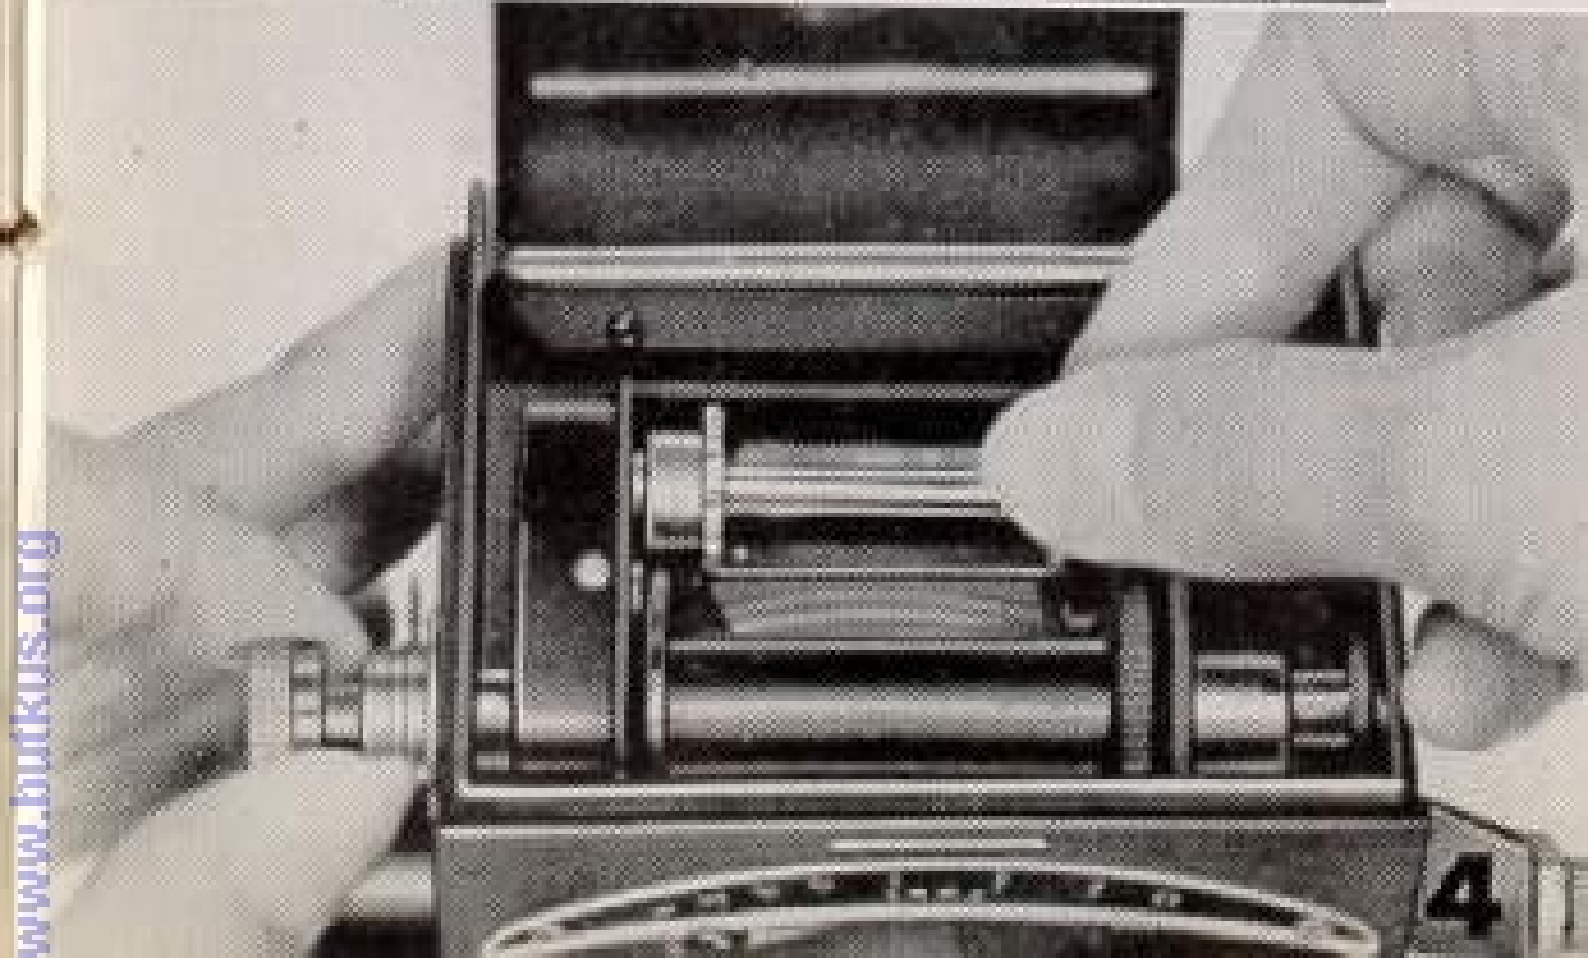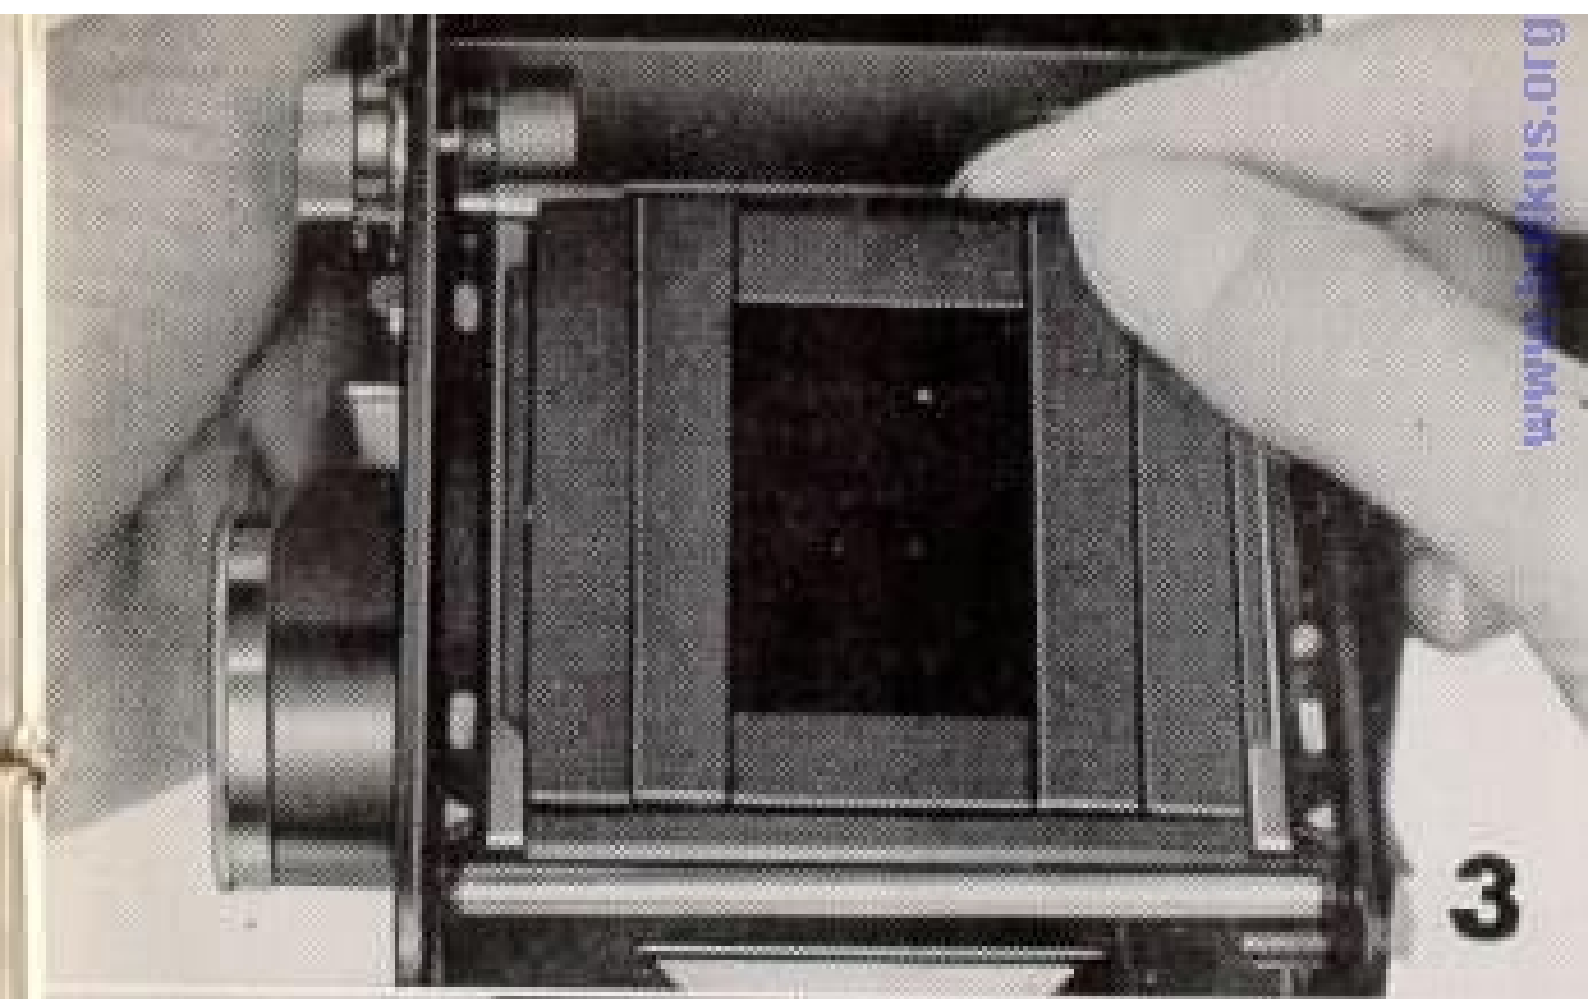


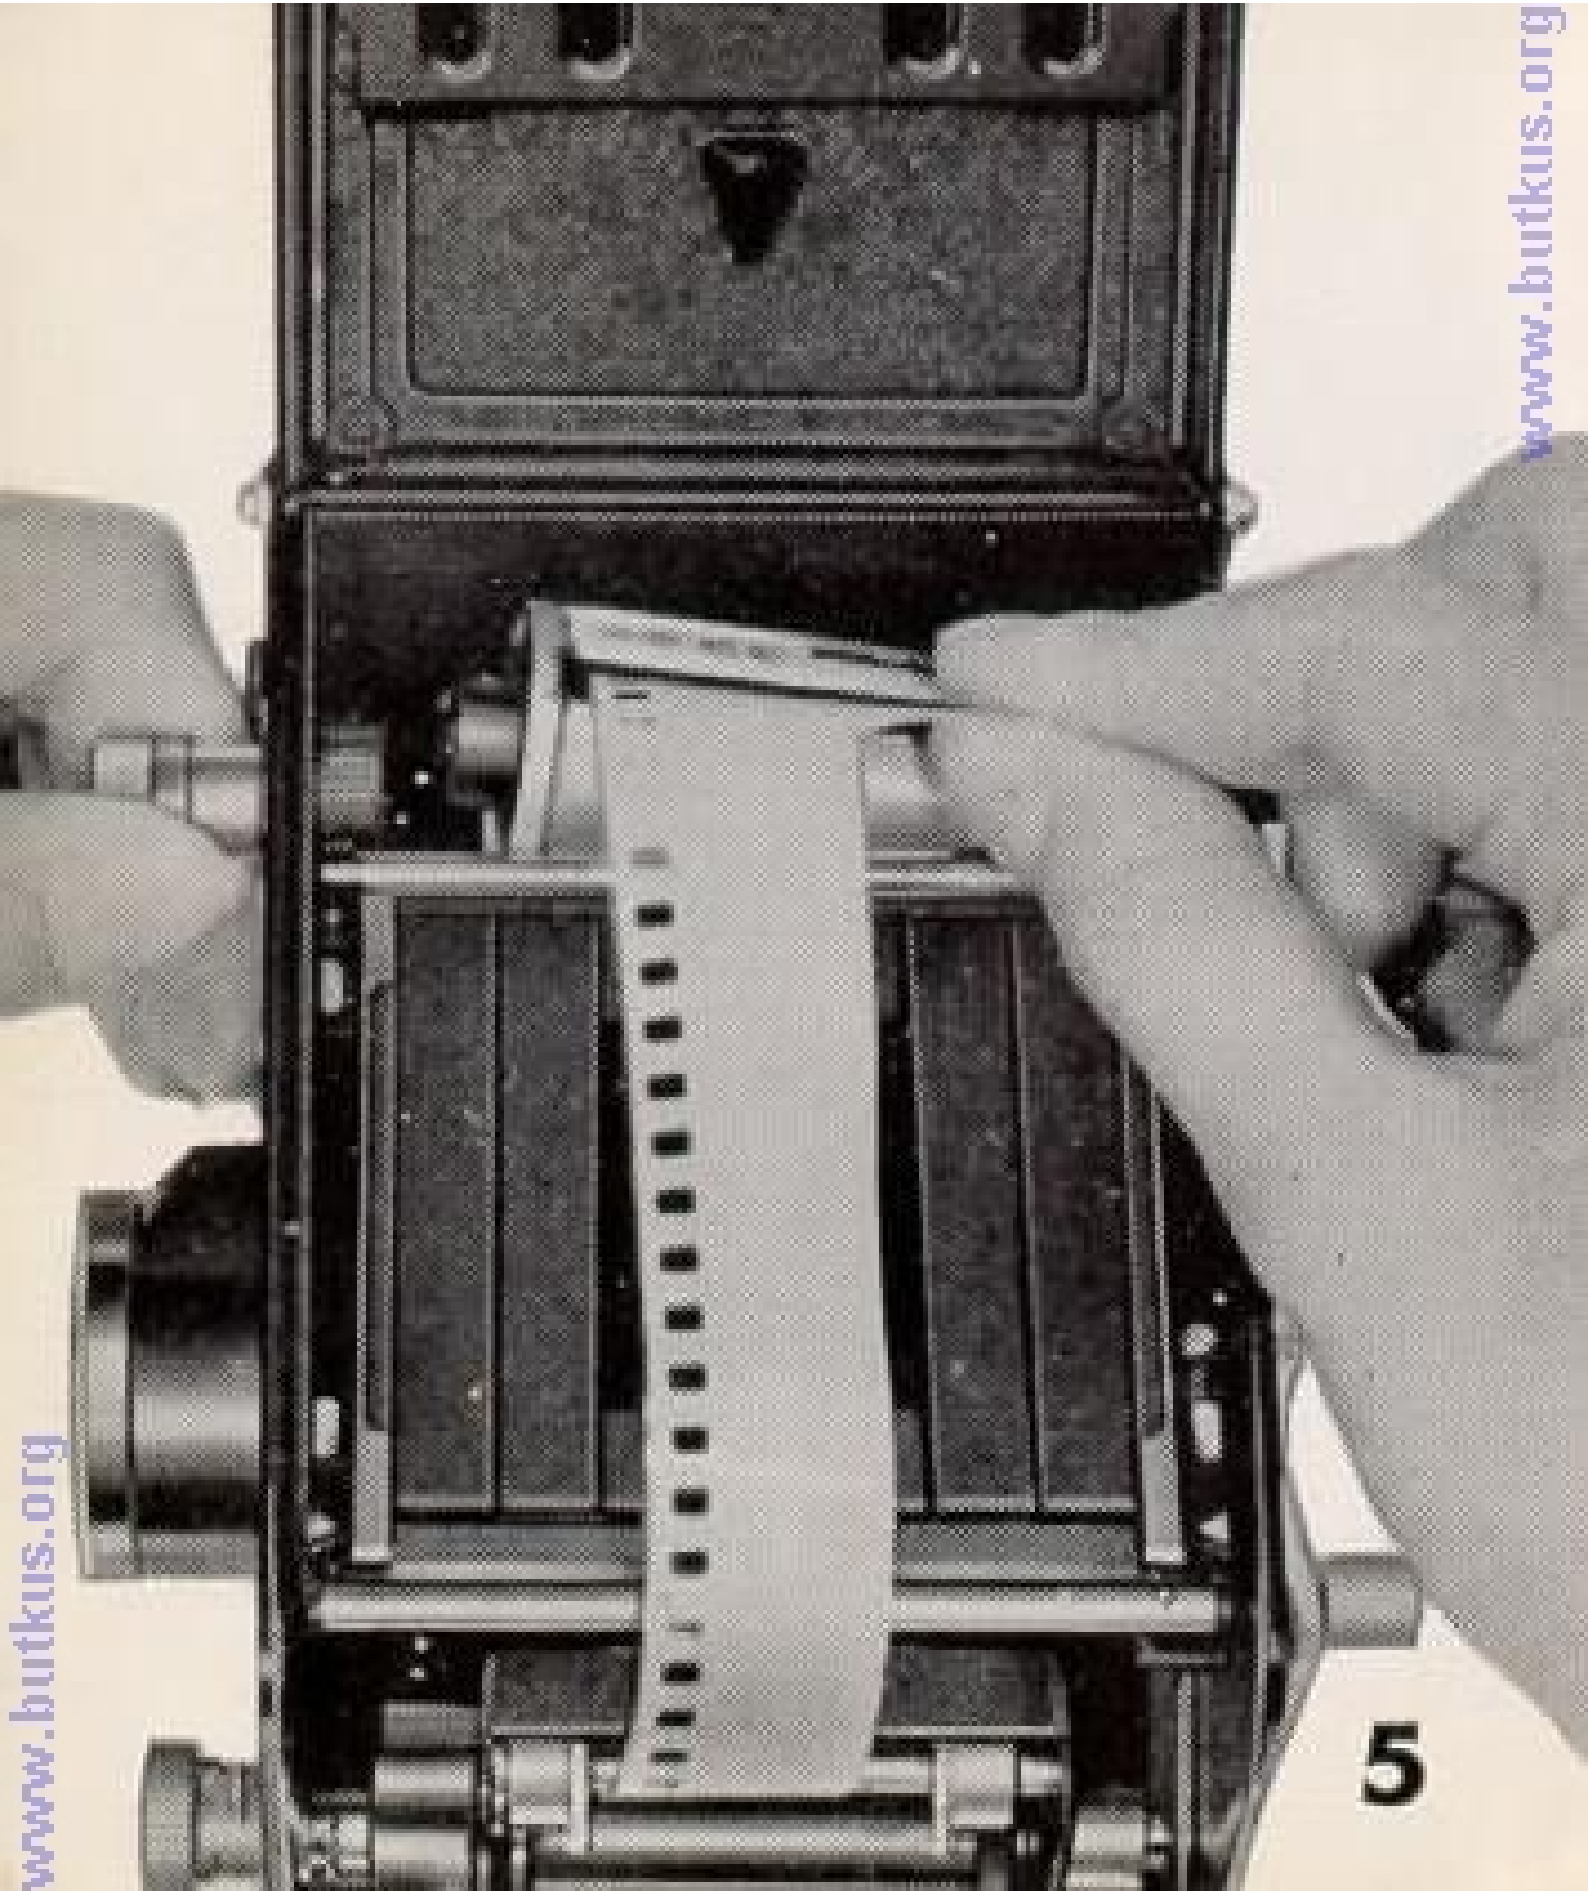



5

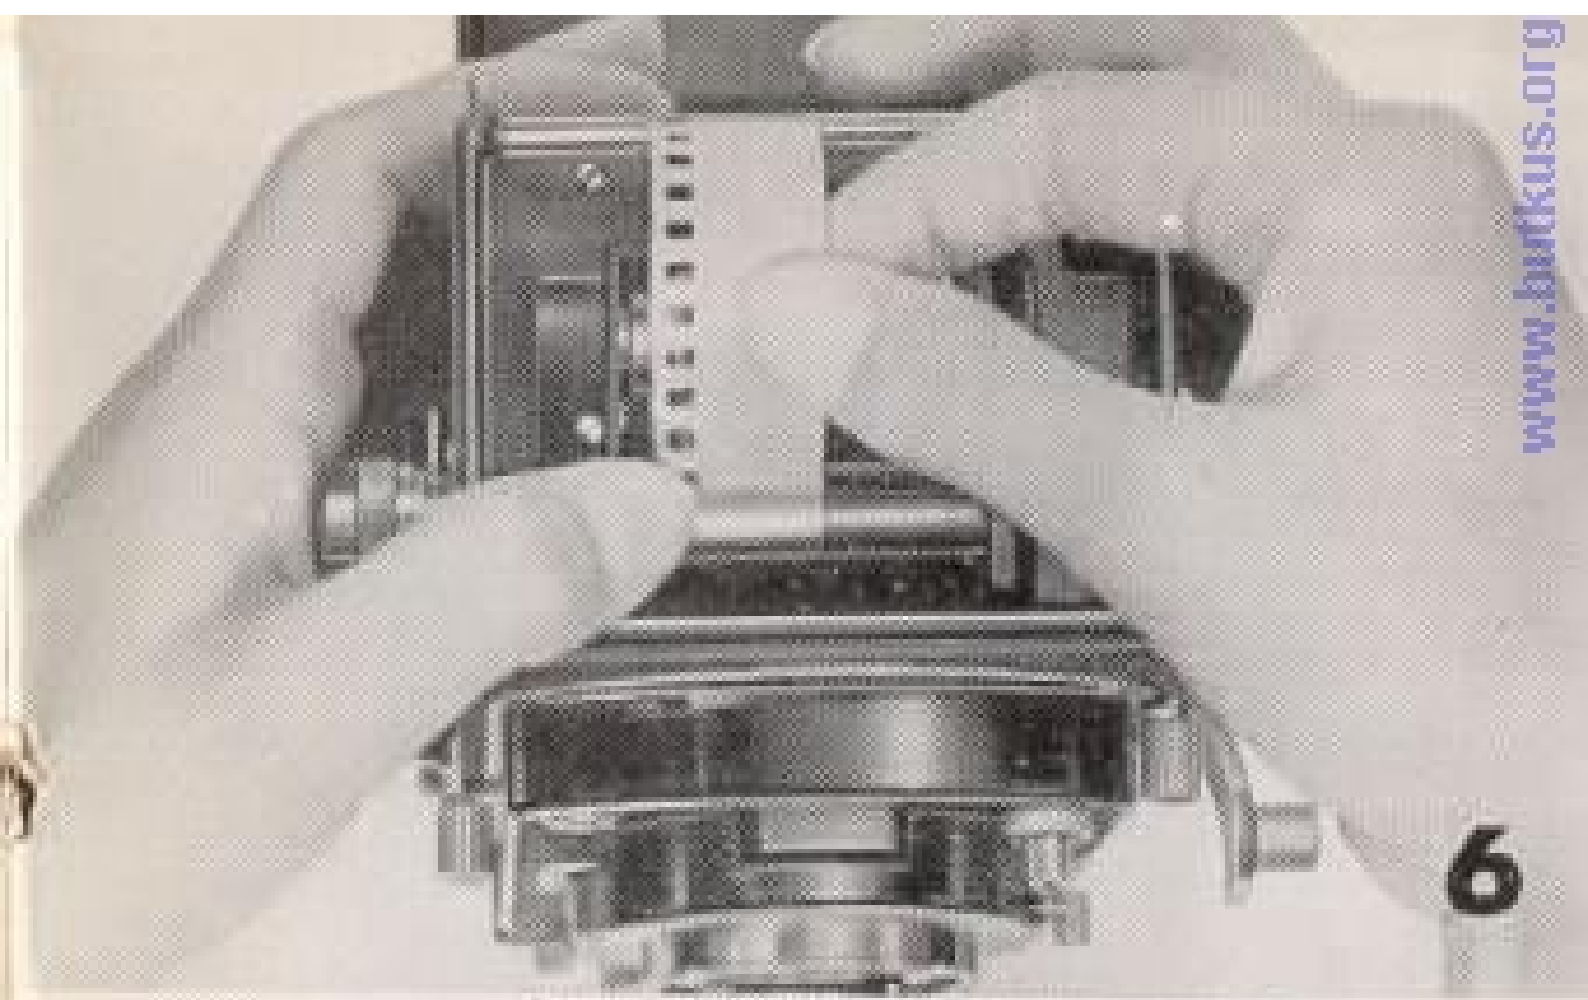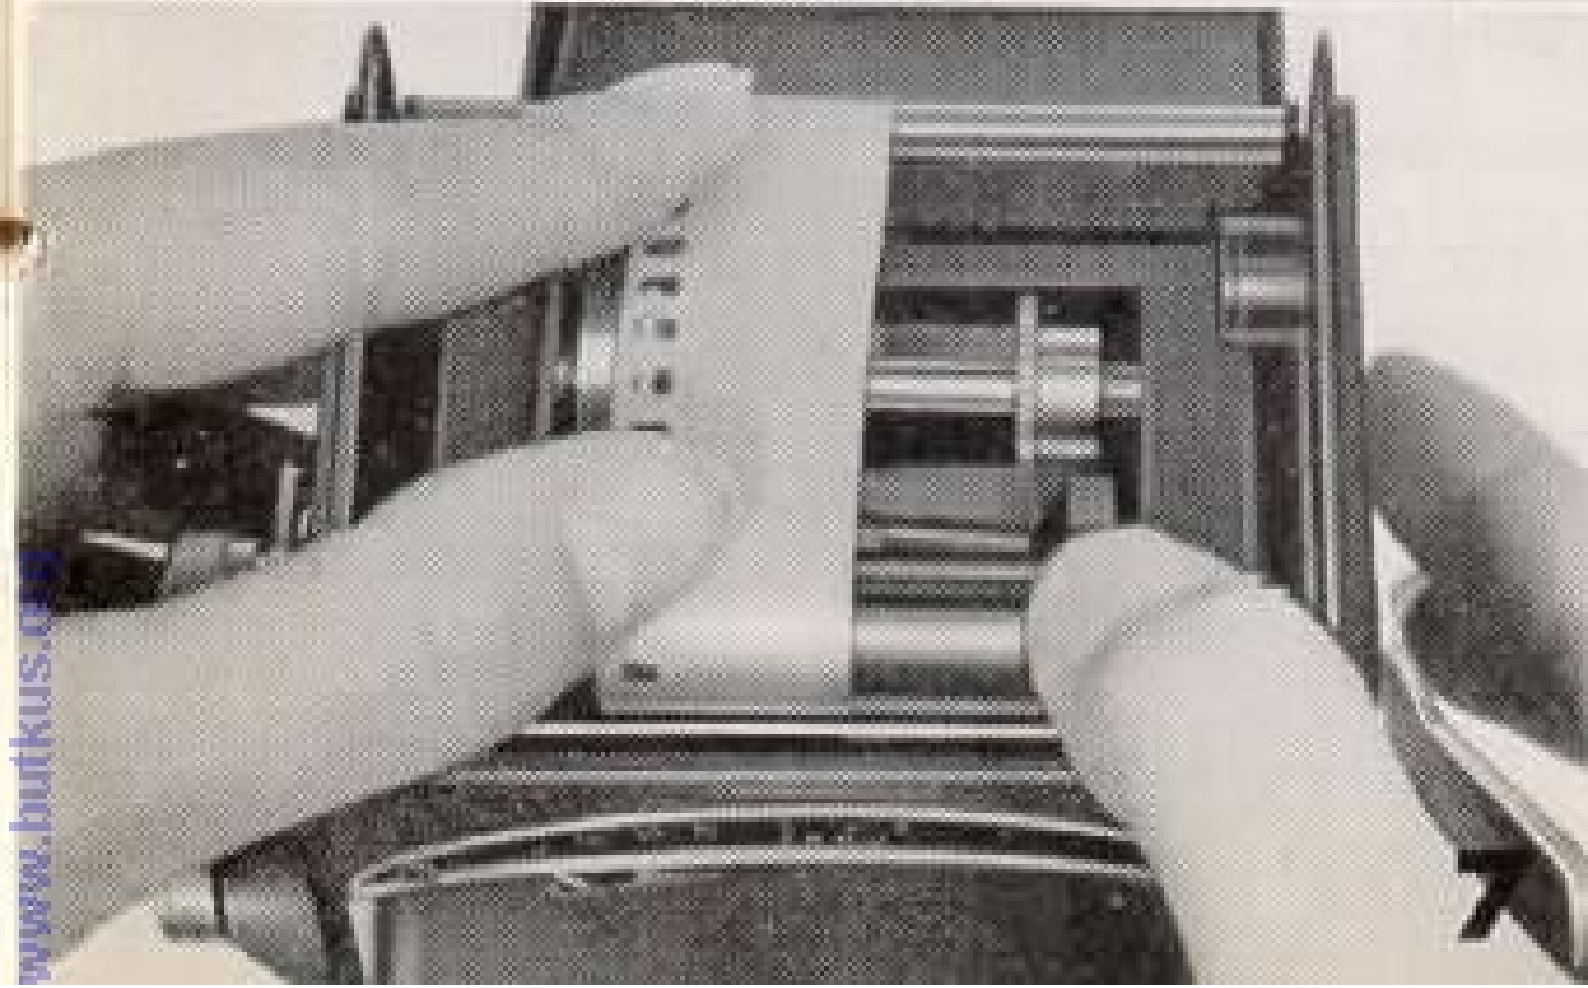  

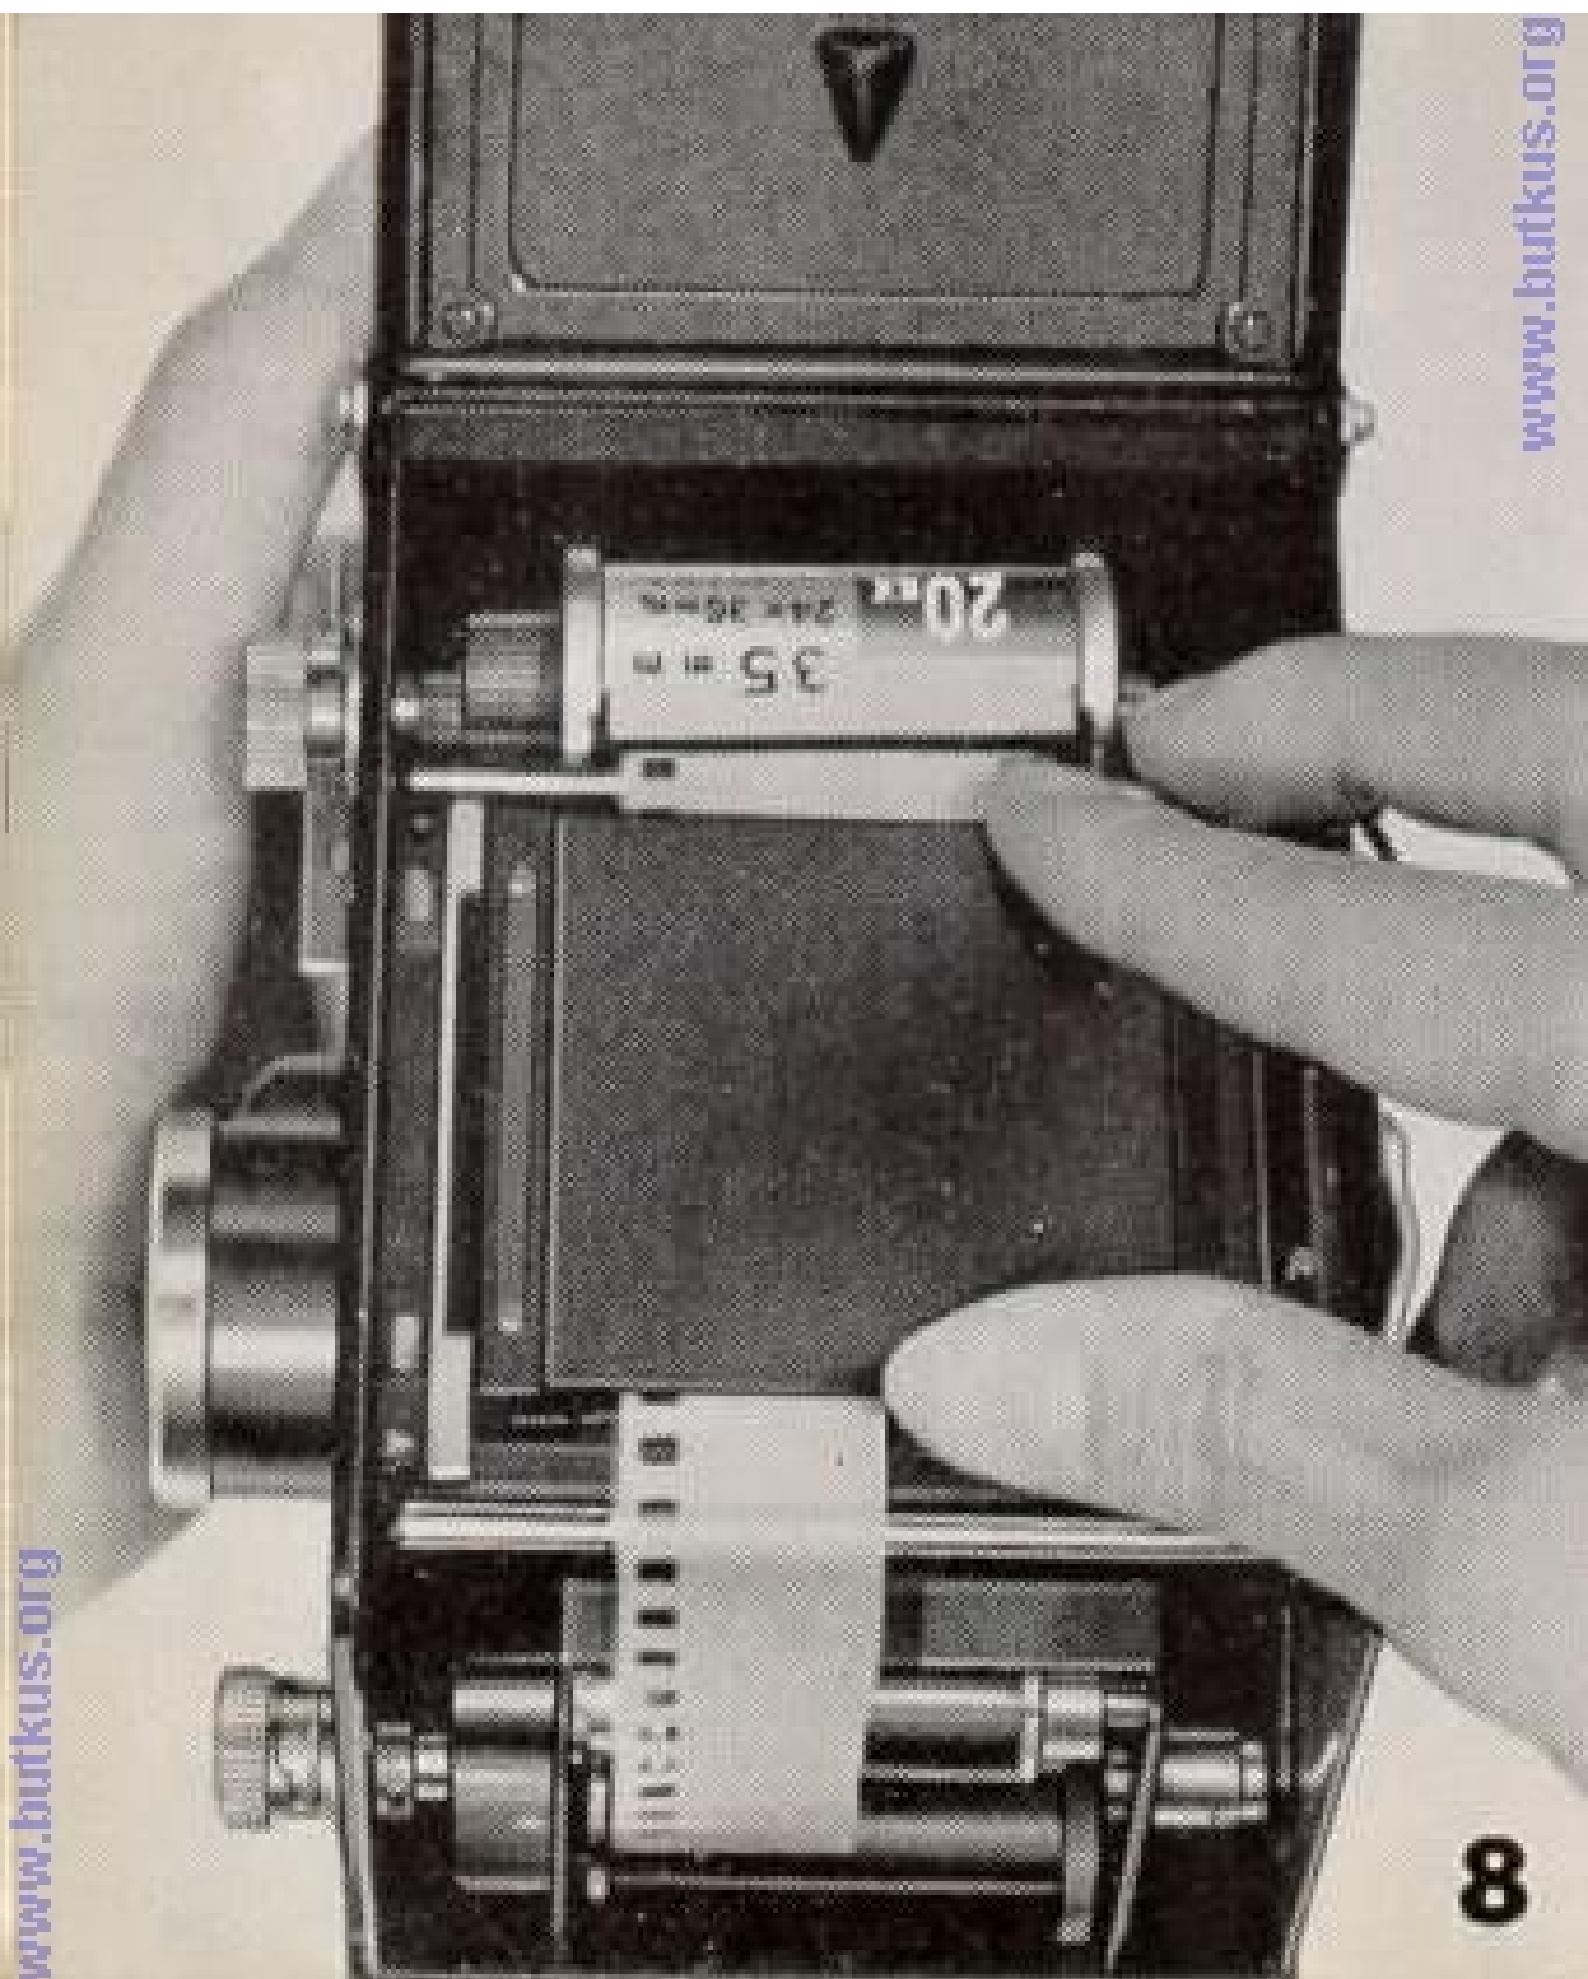 

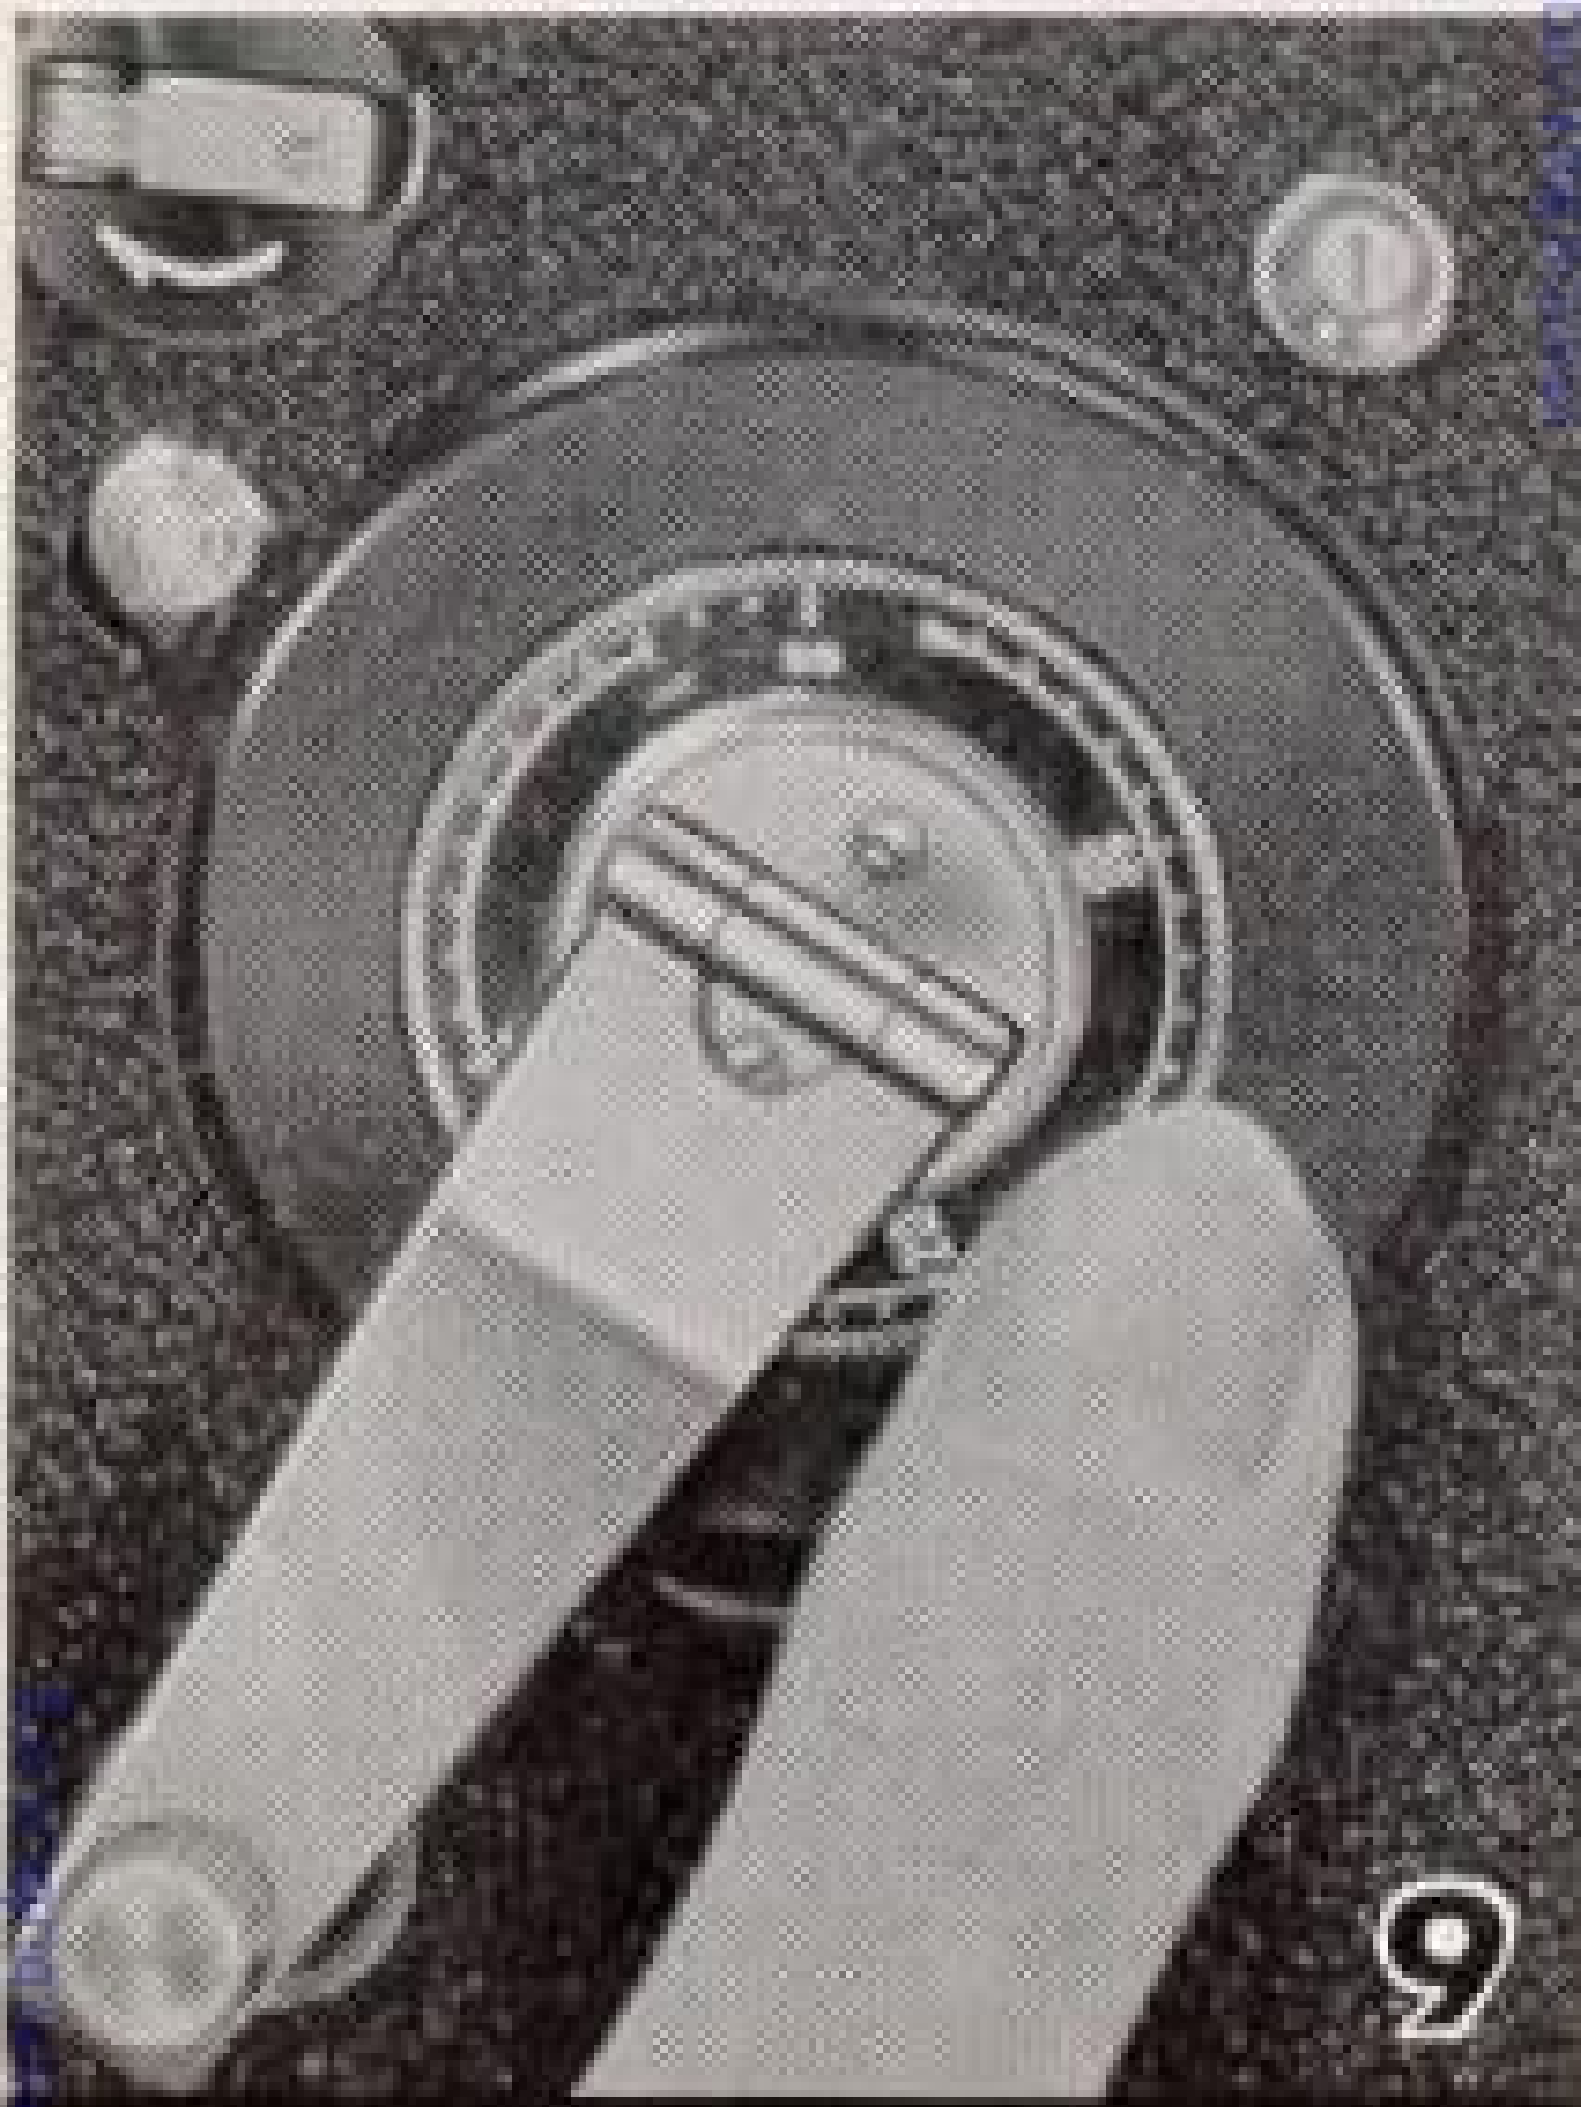 

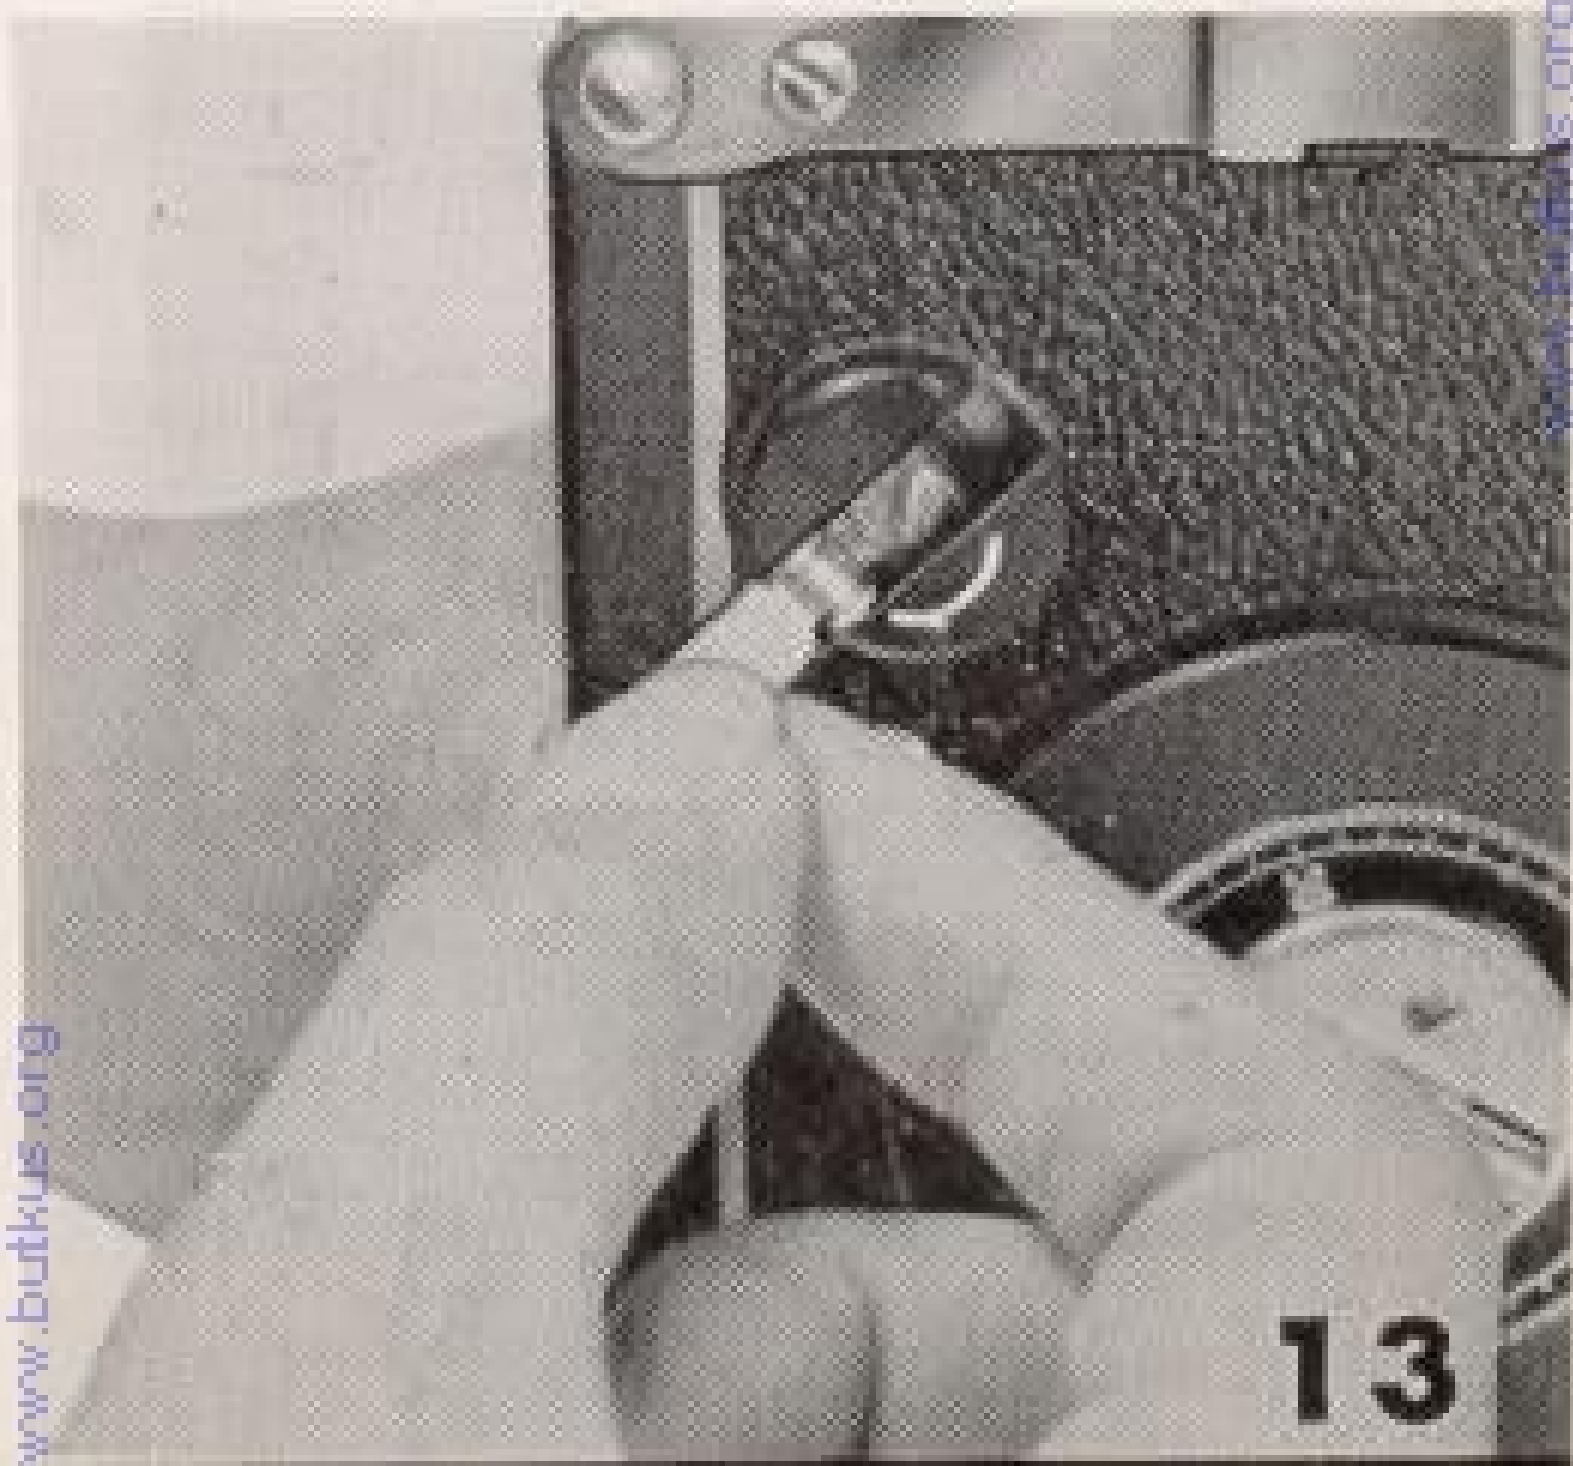 

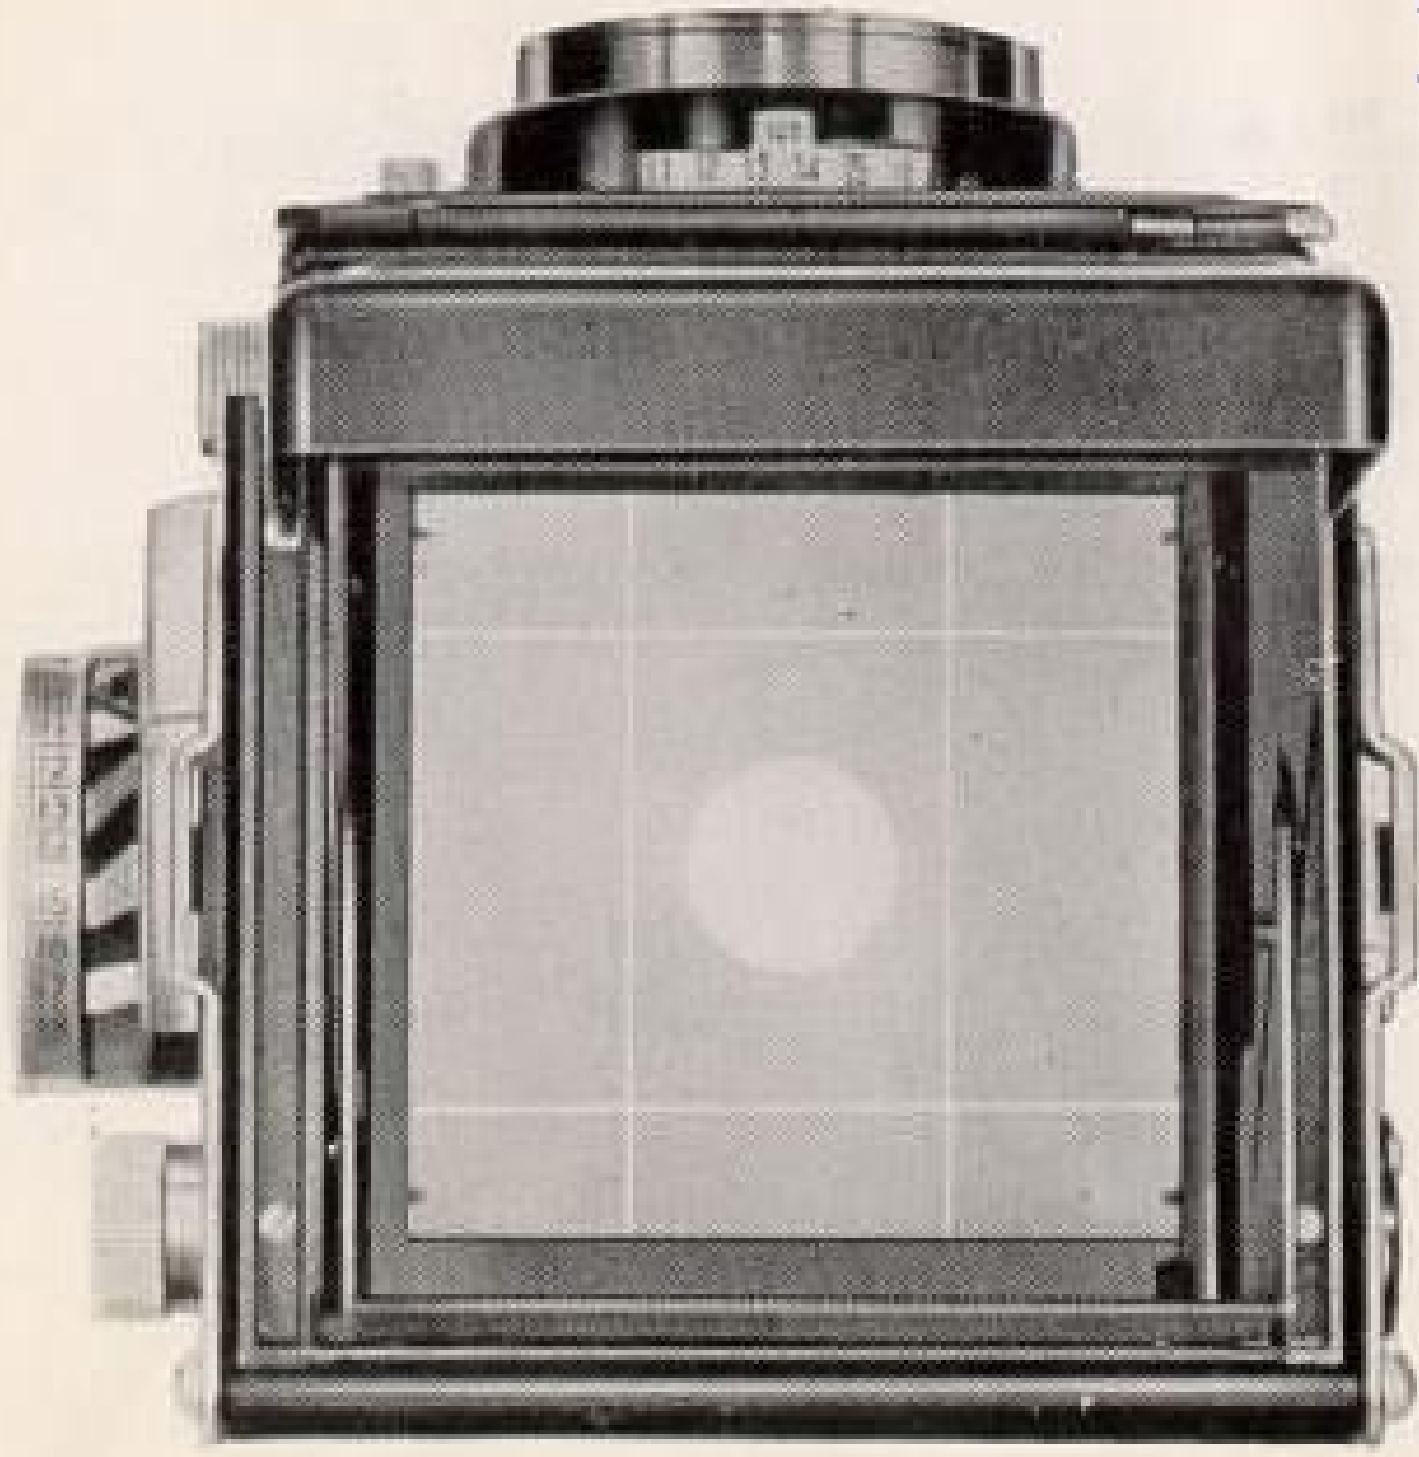 








MEMO·W MEMO·B ┐ HAPPY BIRTHDAY!


S·MODE

 REMOTE




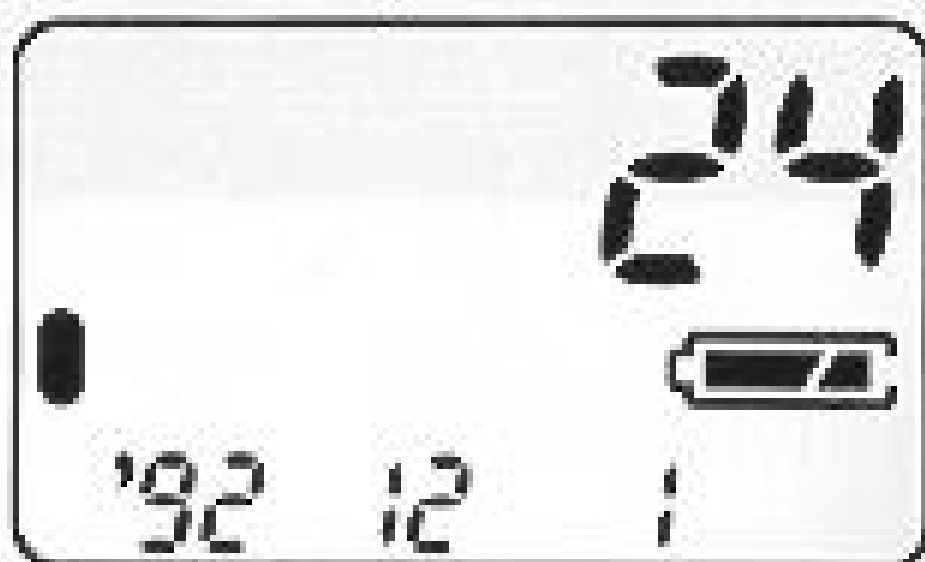



EXP.
LEFT

      T.SET

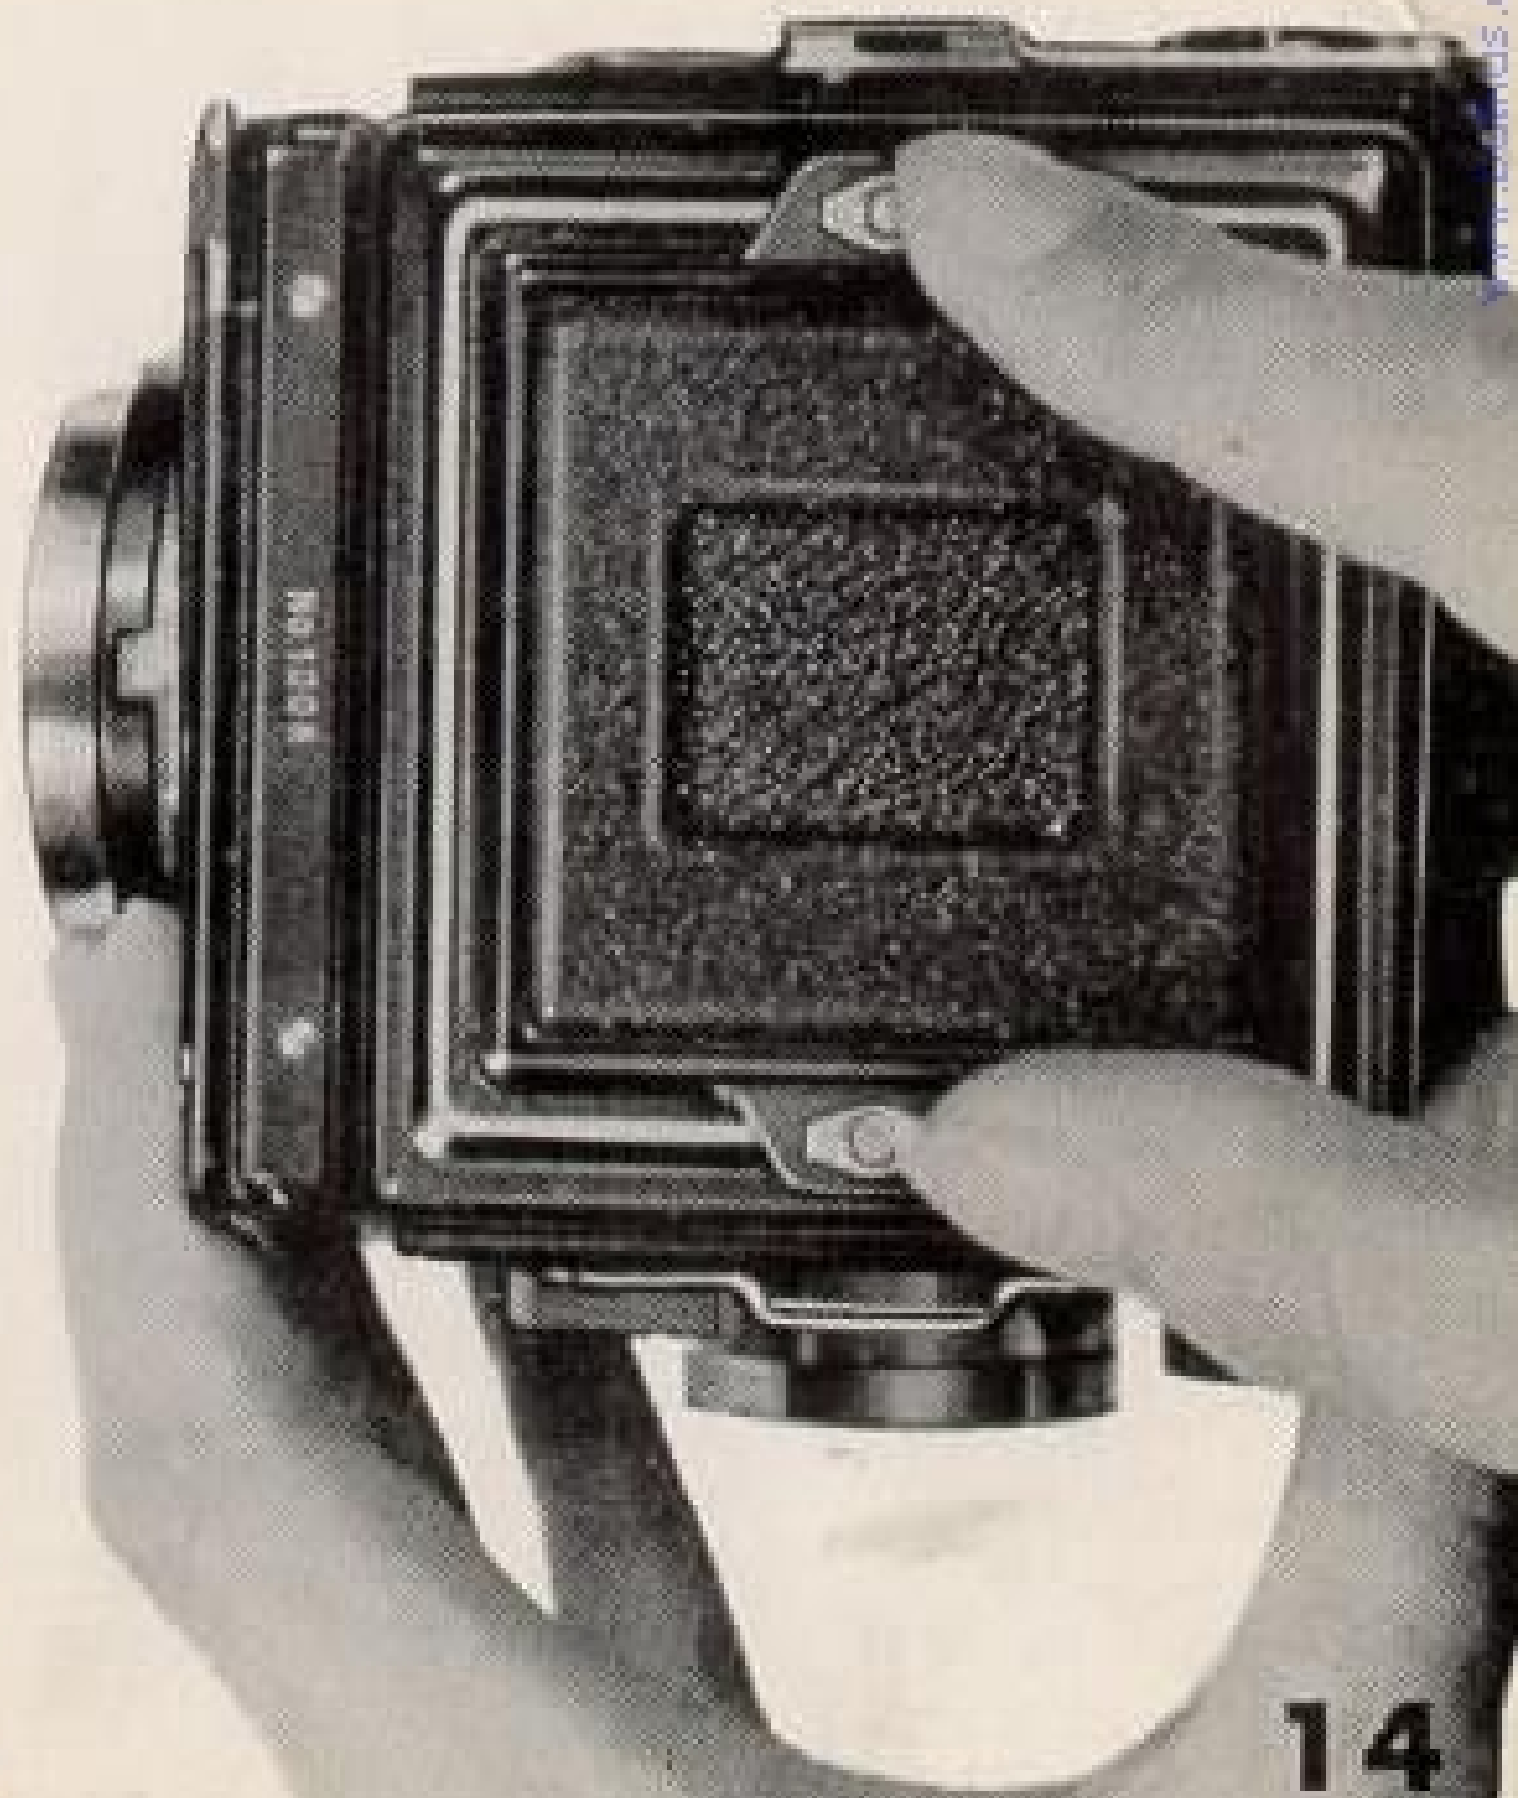





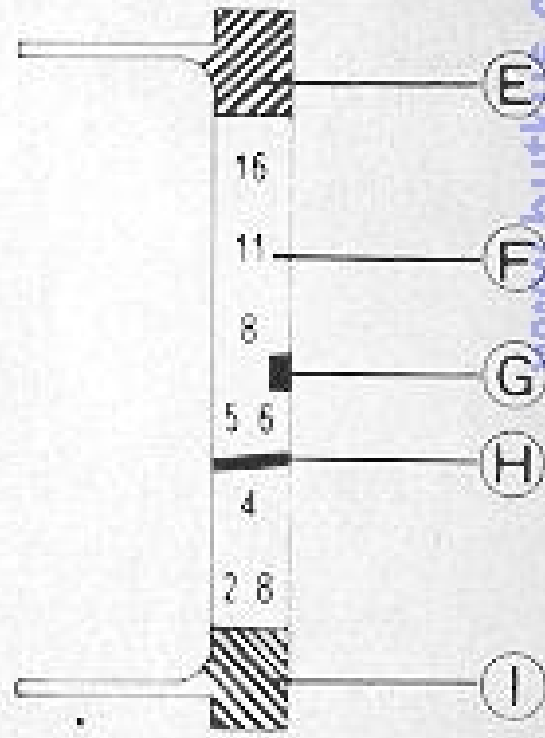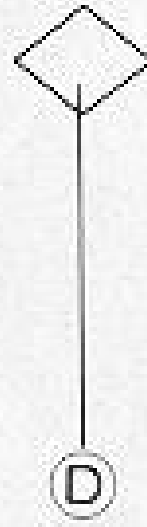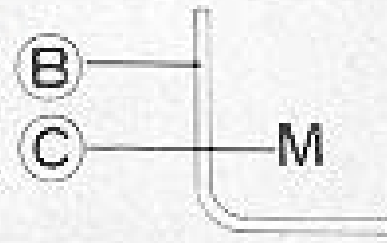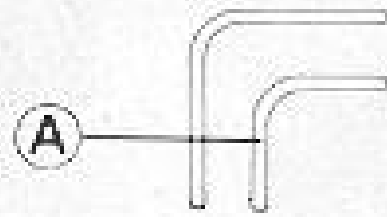

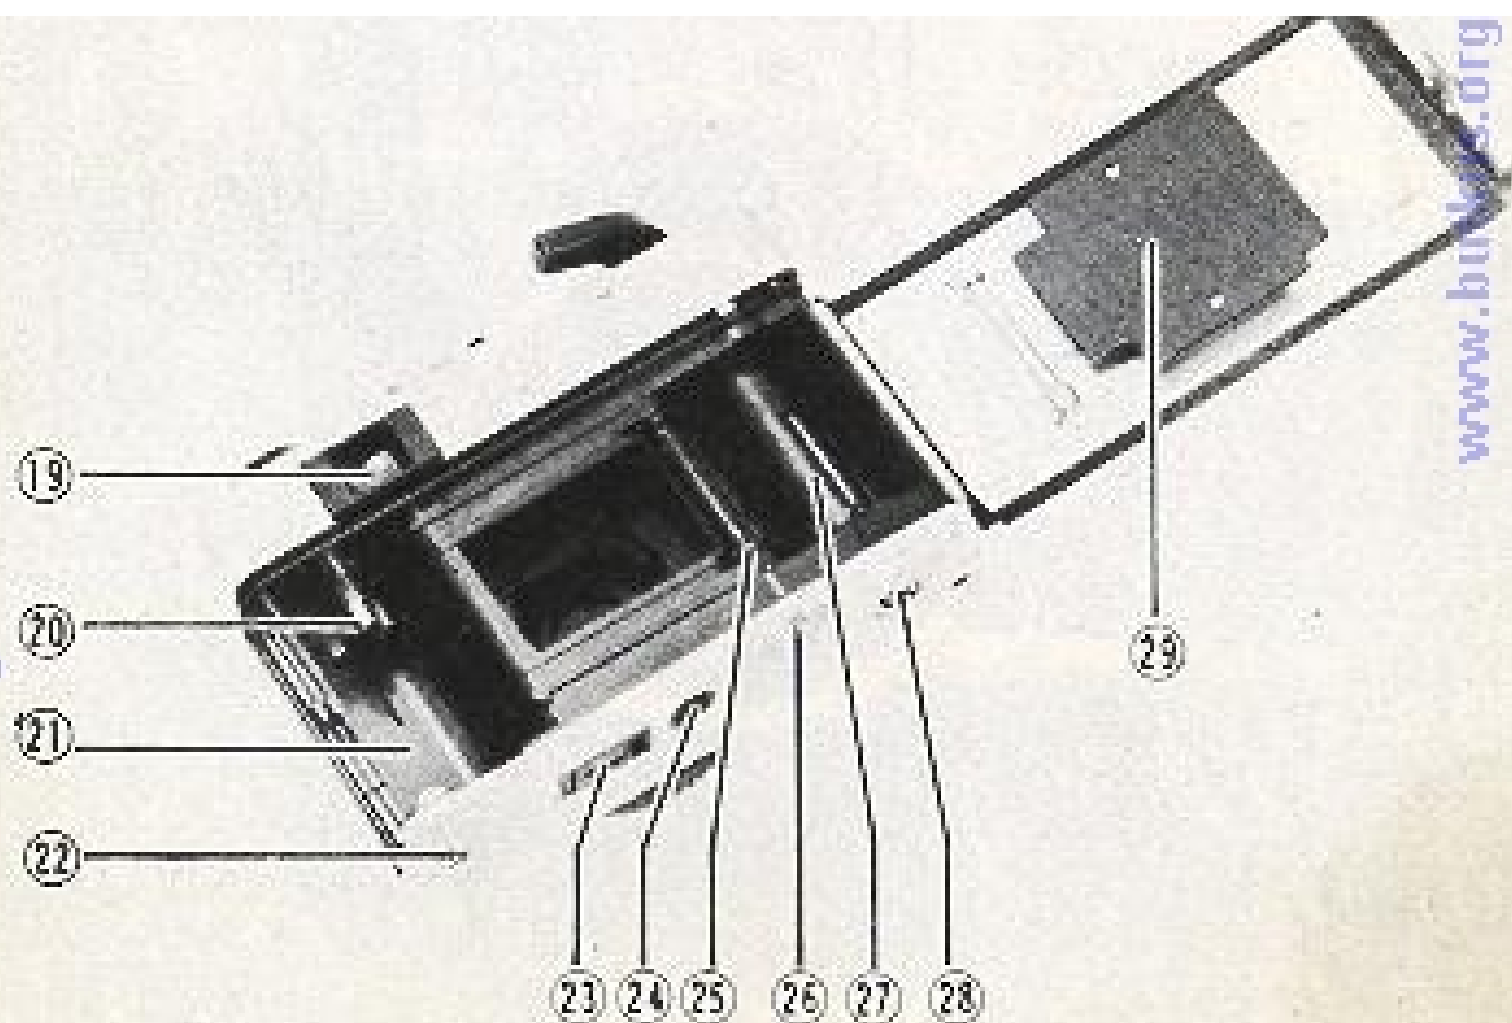



Display on the LCD Panel

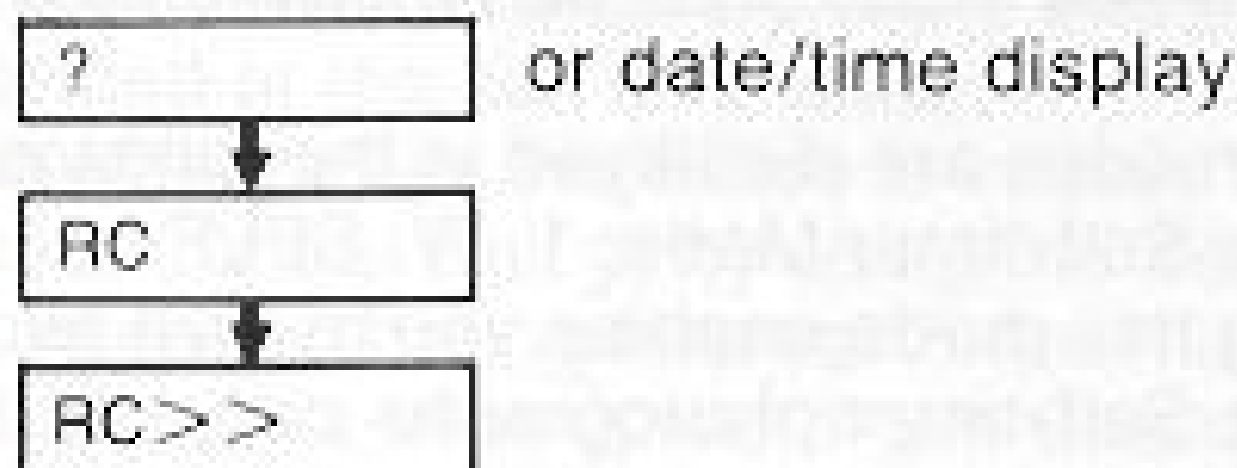 

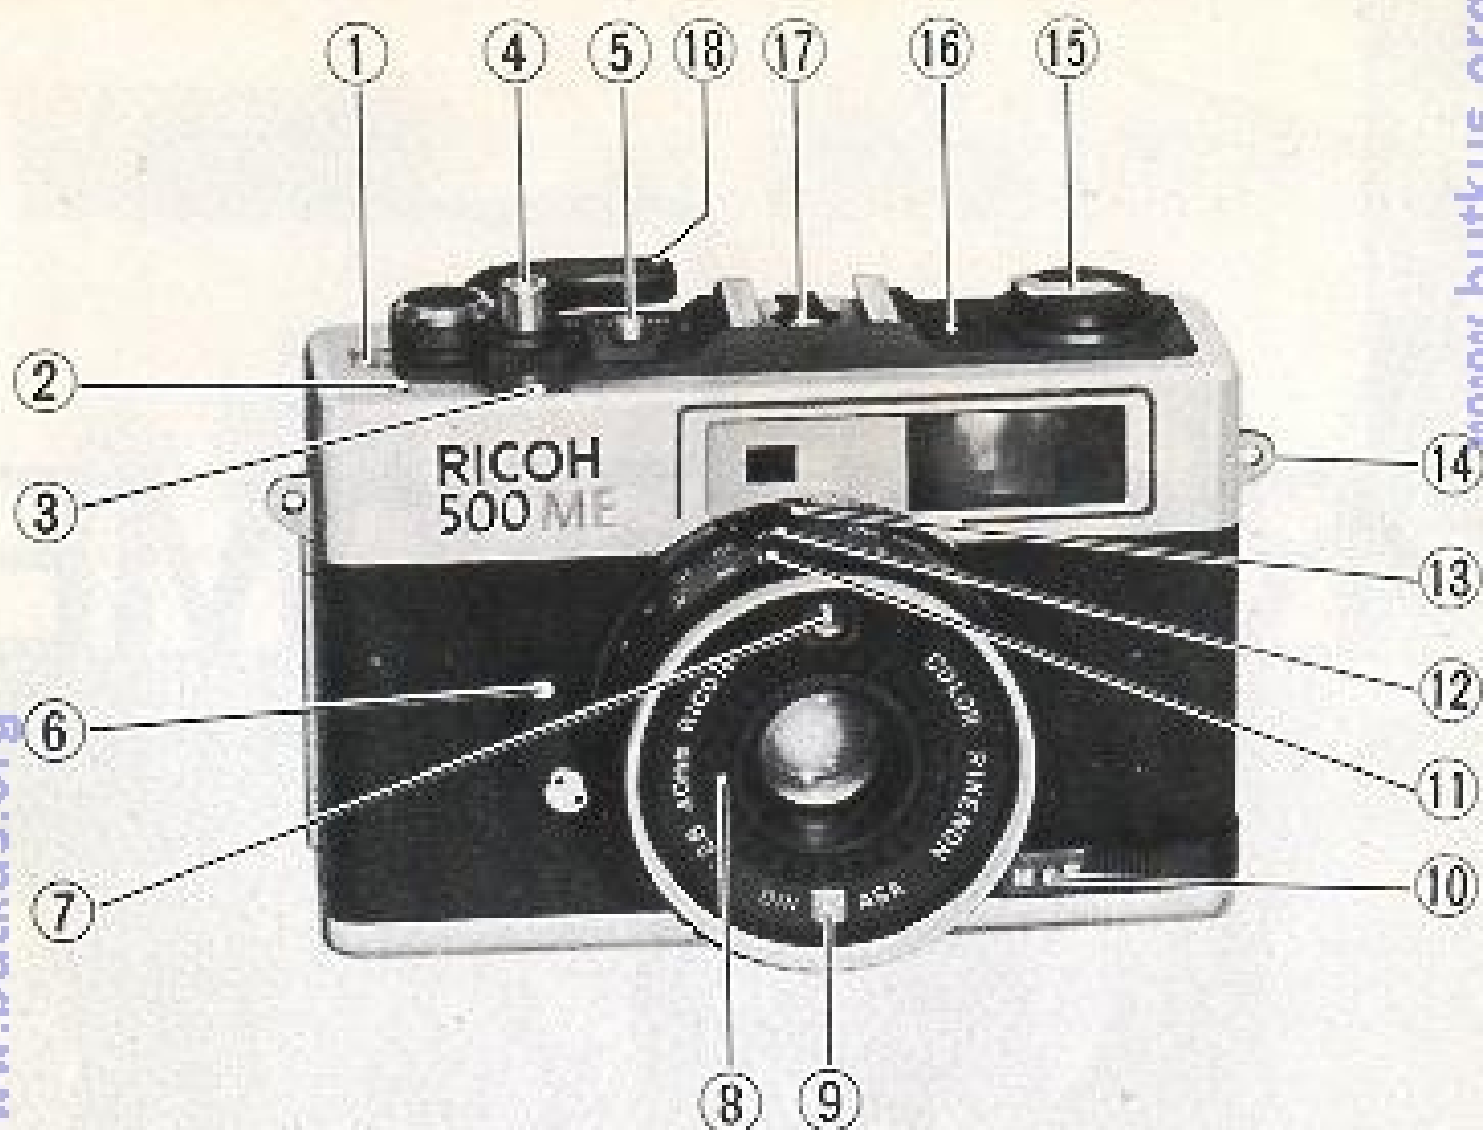 


Display on the LCD Panel

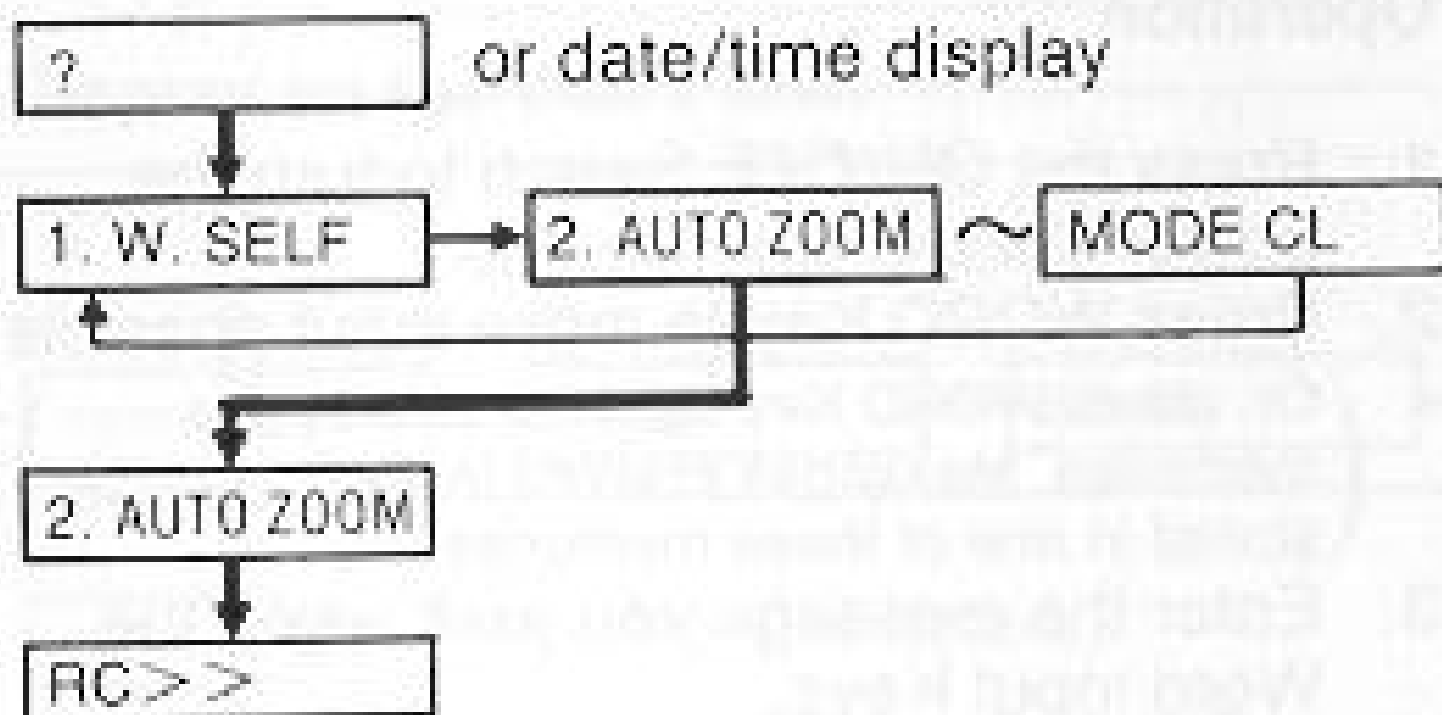 

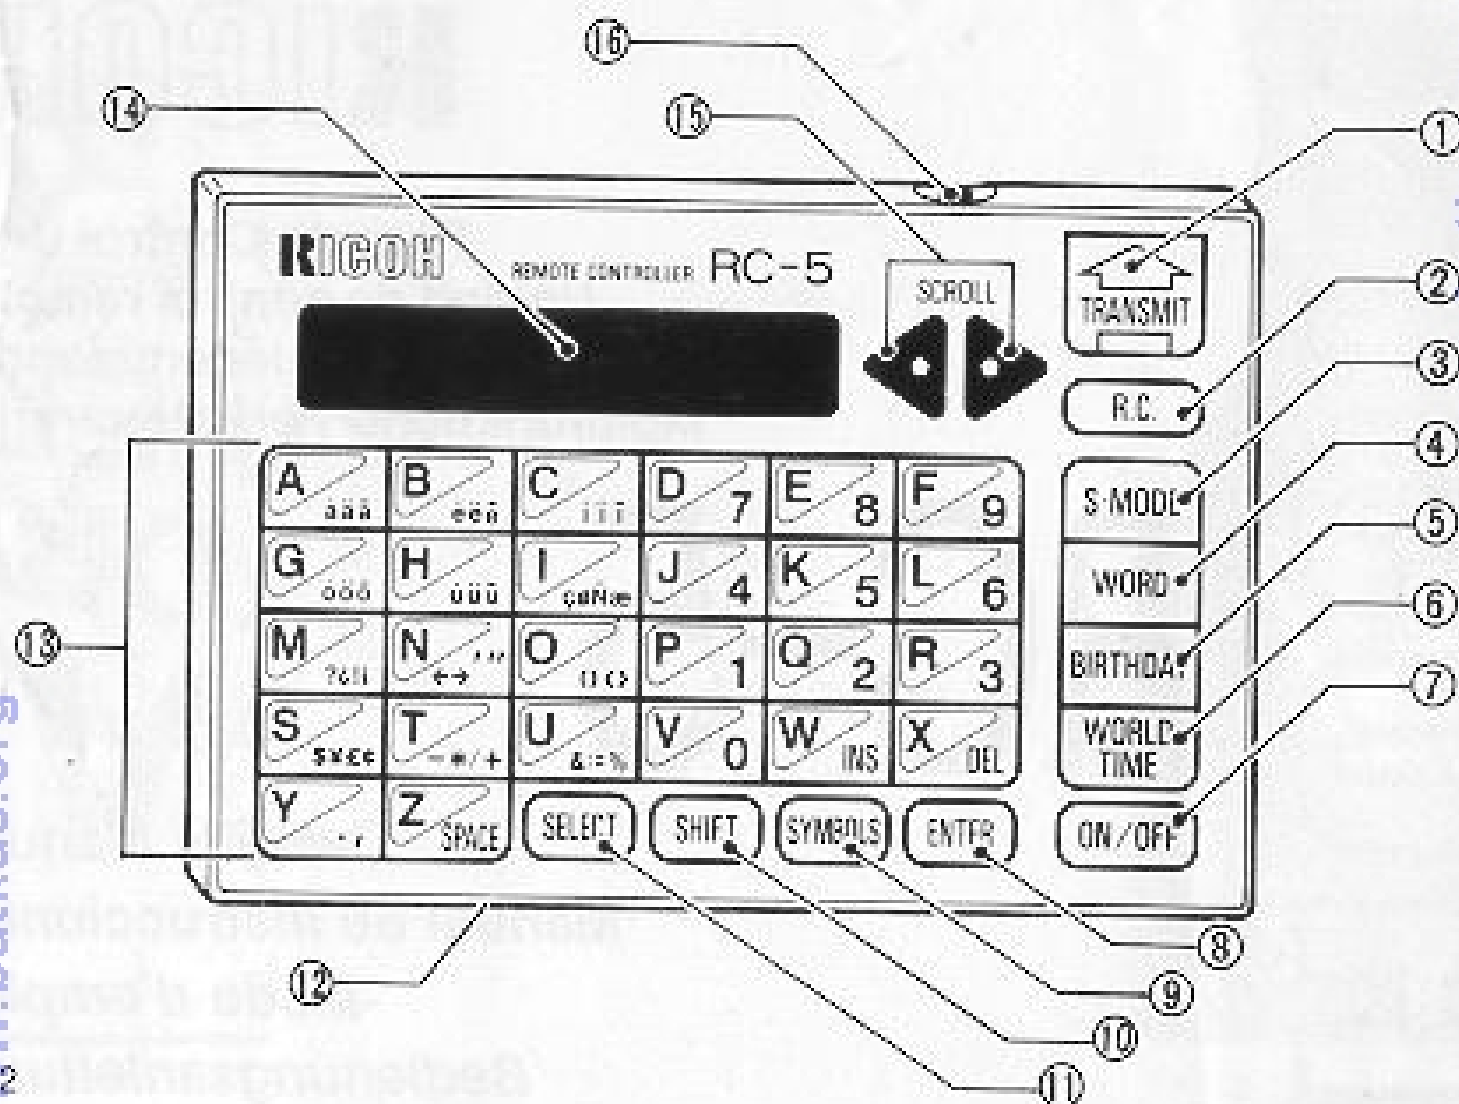 

Display on the LCD Panel

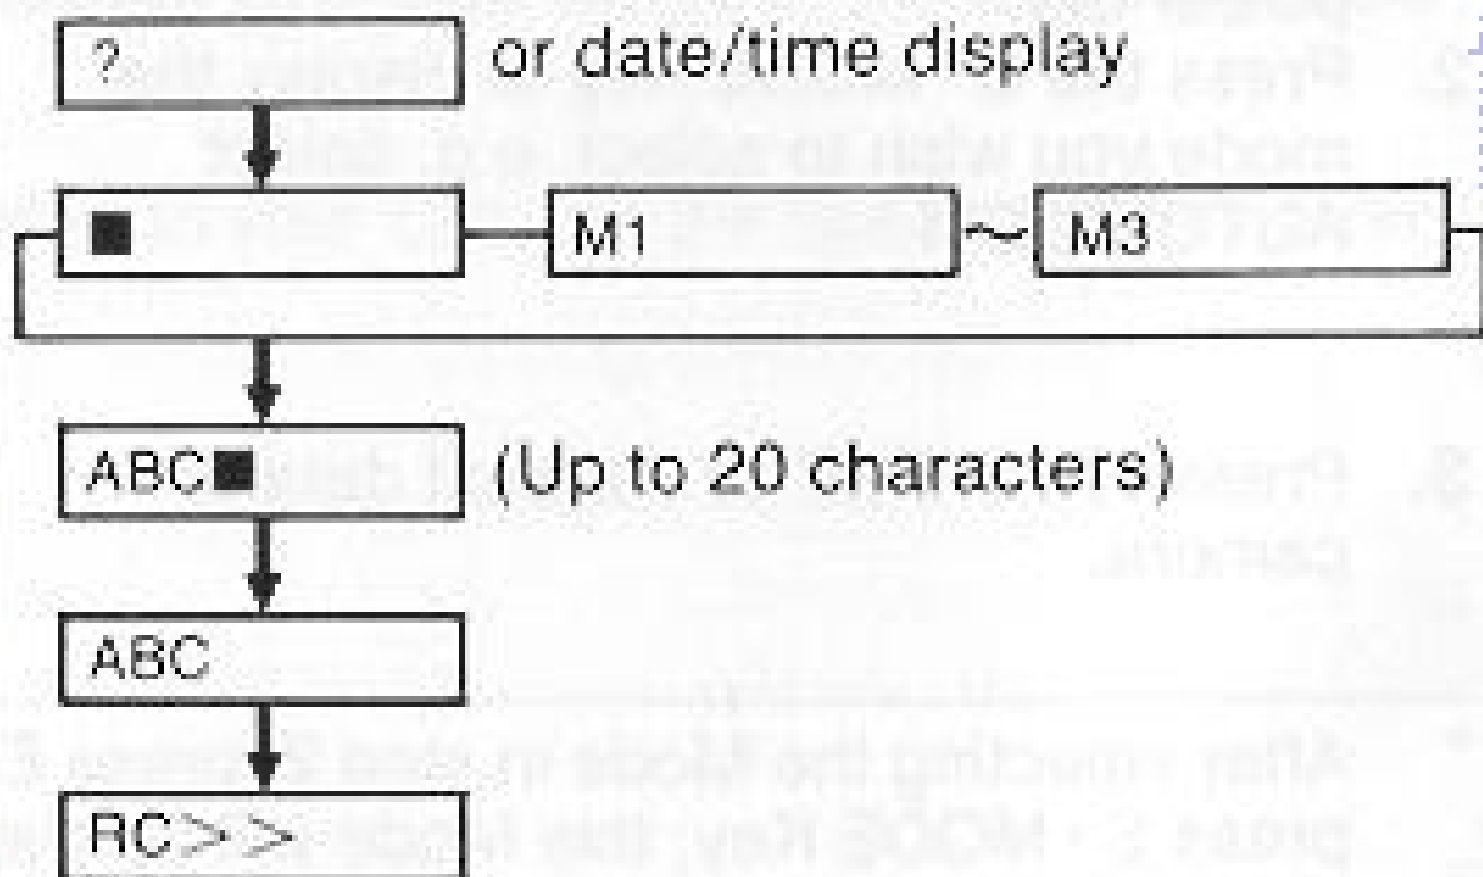 

?

or date/time display

 
No 10 10:22

No 18 18:22

(Time Zone can also be
changed using the Scroll
Keys)

RC>>

Display on the LCD Panel

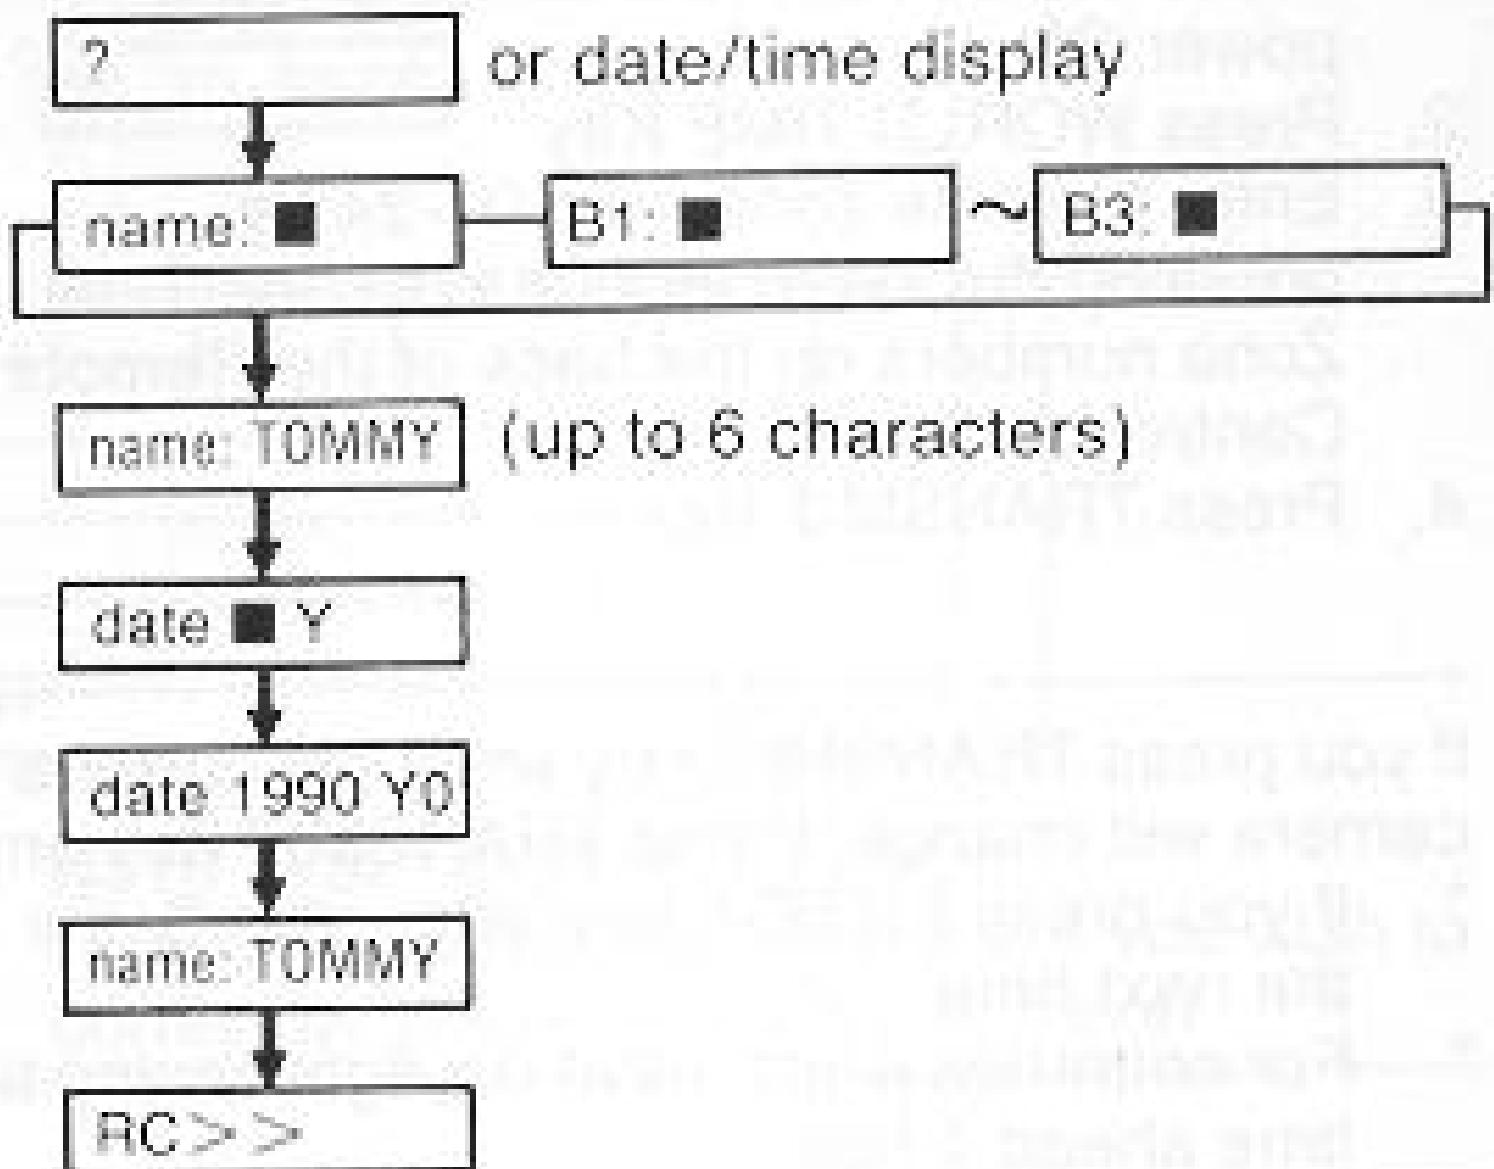

2. Message Input

Input "Do you ♥ me?" here as an example.

Operation	Display on the LCD Panel	
1. Press WORD Key to input characters.	➤ CAP	■ (Blinking)
2. Press Word Input Key [D/]	➤ CAP	D ■
3. Press SHIFT Key and then [o]	➤	Do ■
4. Press SELECT Key and then SPACE Key		Do ■
5. Press SELECT Key and then [y]	➤	Do y ■
6. Press [o] and [u]	➤	Do you ■
7. Press SELECT Key and then SPACE Key		Do you ■
8. Press SYMBOLS Key		1 ♥ 2 ♥ 3 ♦ 4 ♦ 5 ♪
9. Press [2] and then SPACE Key		Do you ♥ ■
10. Press SELECT Key and then [m], [e]	➤	Do you ♥ me ■
11. Press SELECT Key and then [?]		Do you ♥ me [?] (Blinking)
12. Press ENTER Key		Do you ♥ me?
13. Press TRANSMIT Key to transmit to your camera		RC>>