



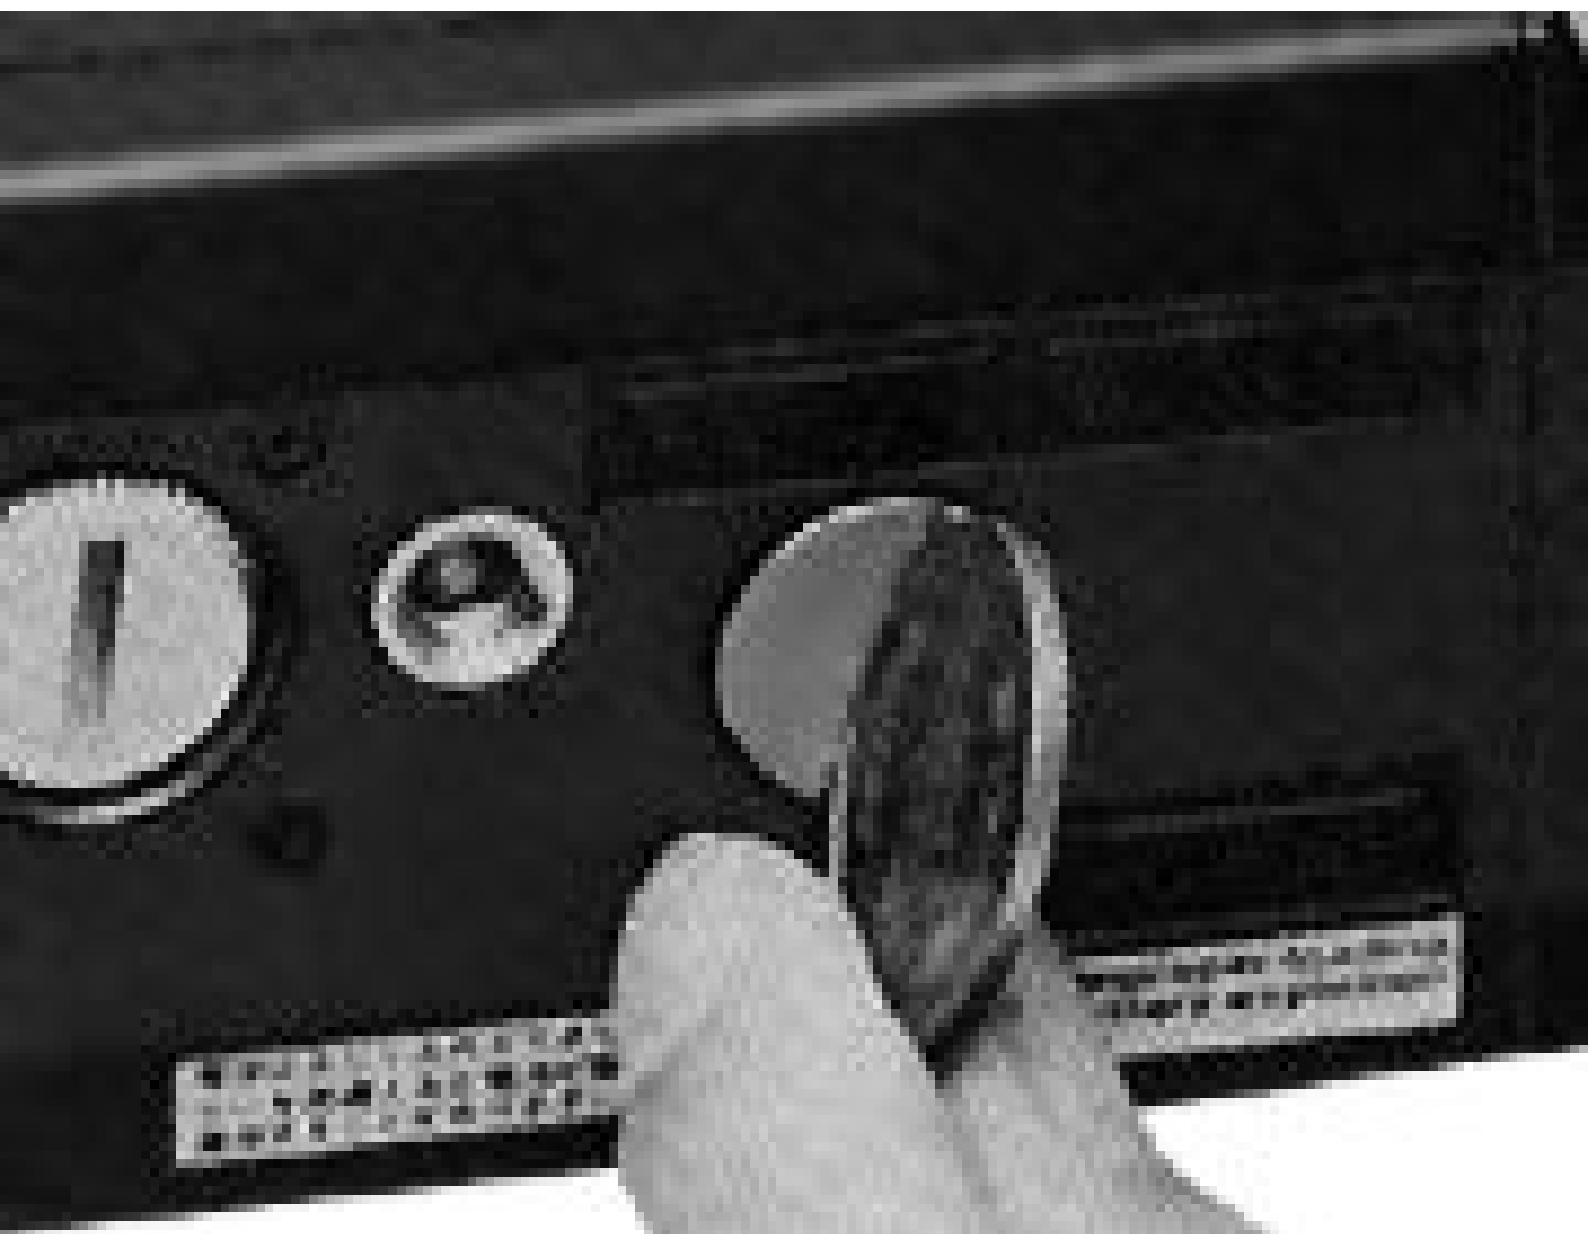

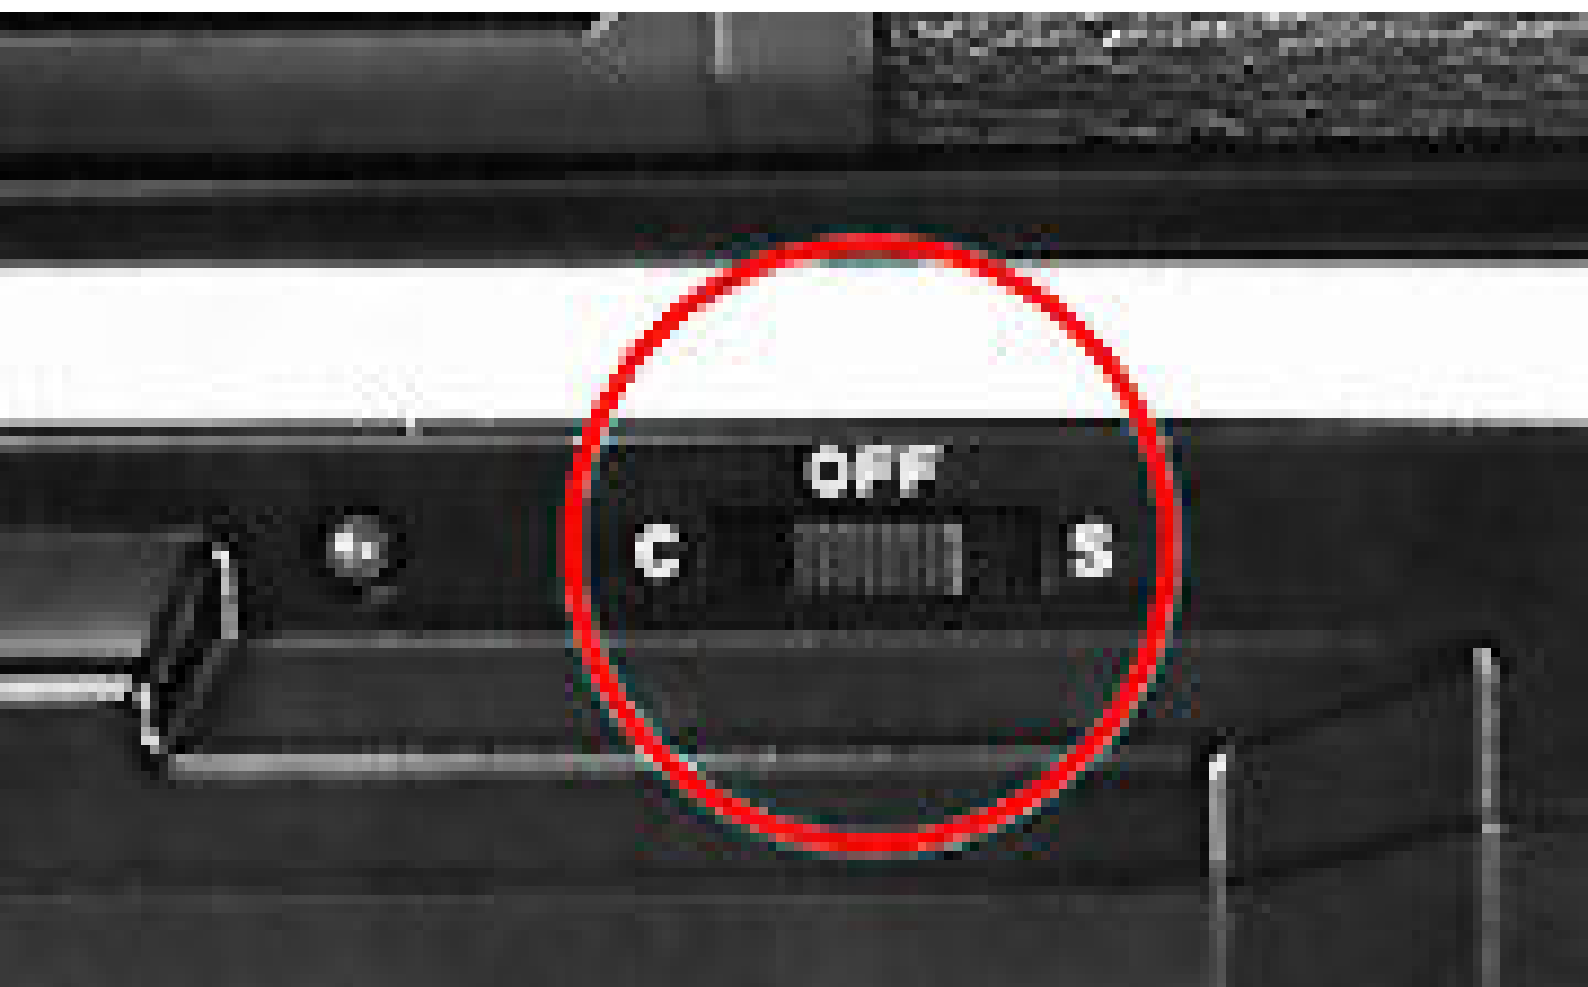











**Flash Shoe
Mount**


**Photo
Sensor**

Film Speed (ASA) Dial



Sync Contact

Ground Contact

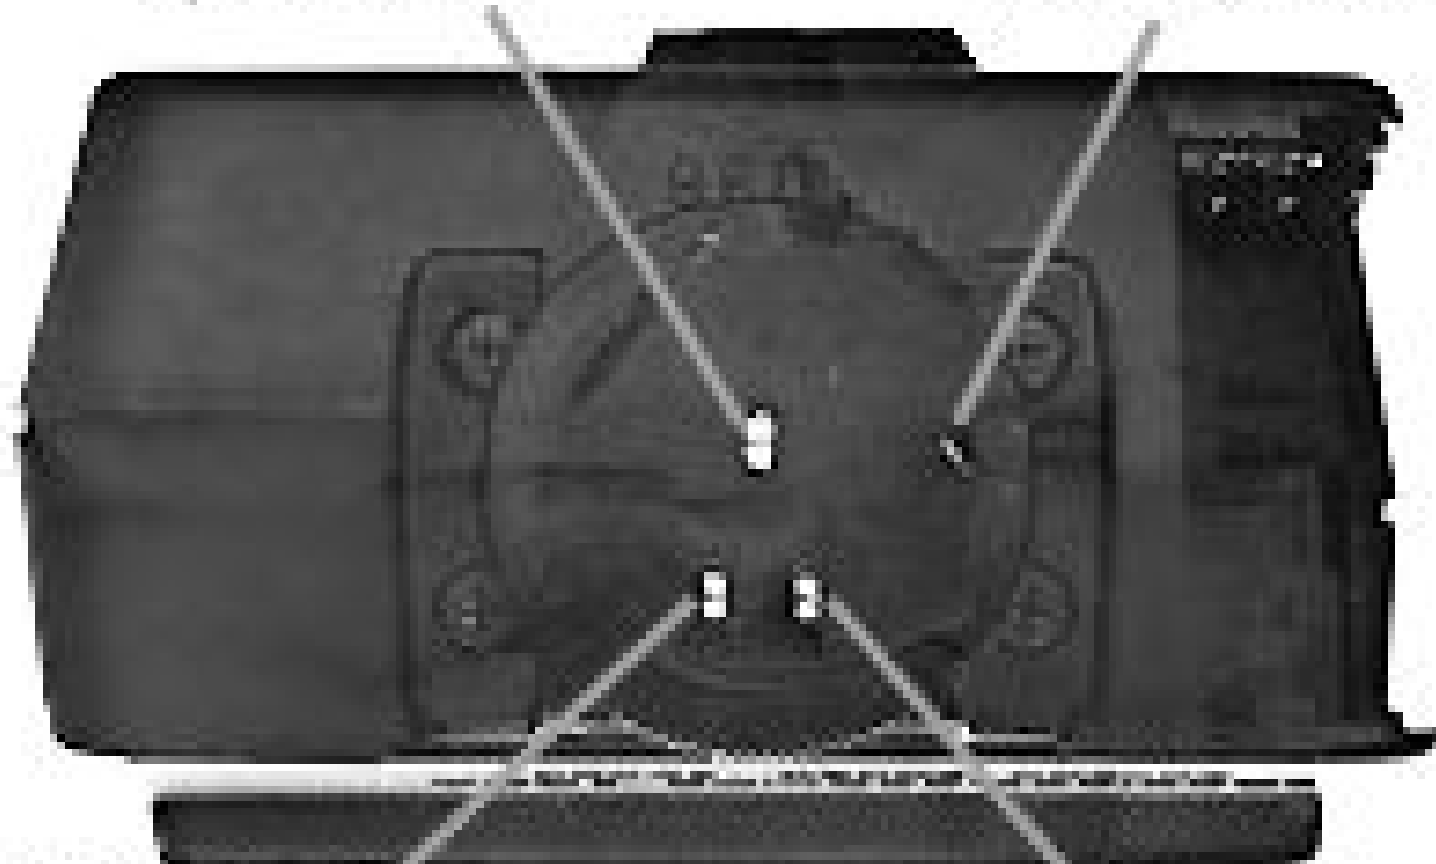


**Shutter Speed
Control**

**Aperture
Control**







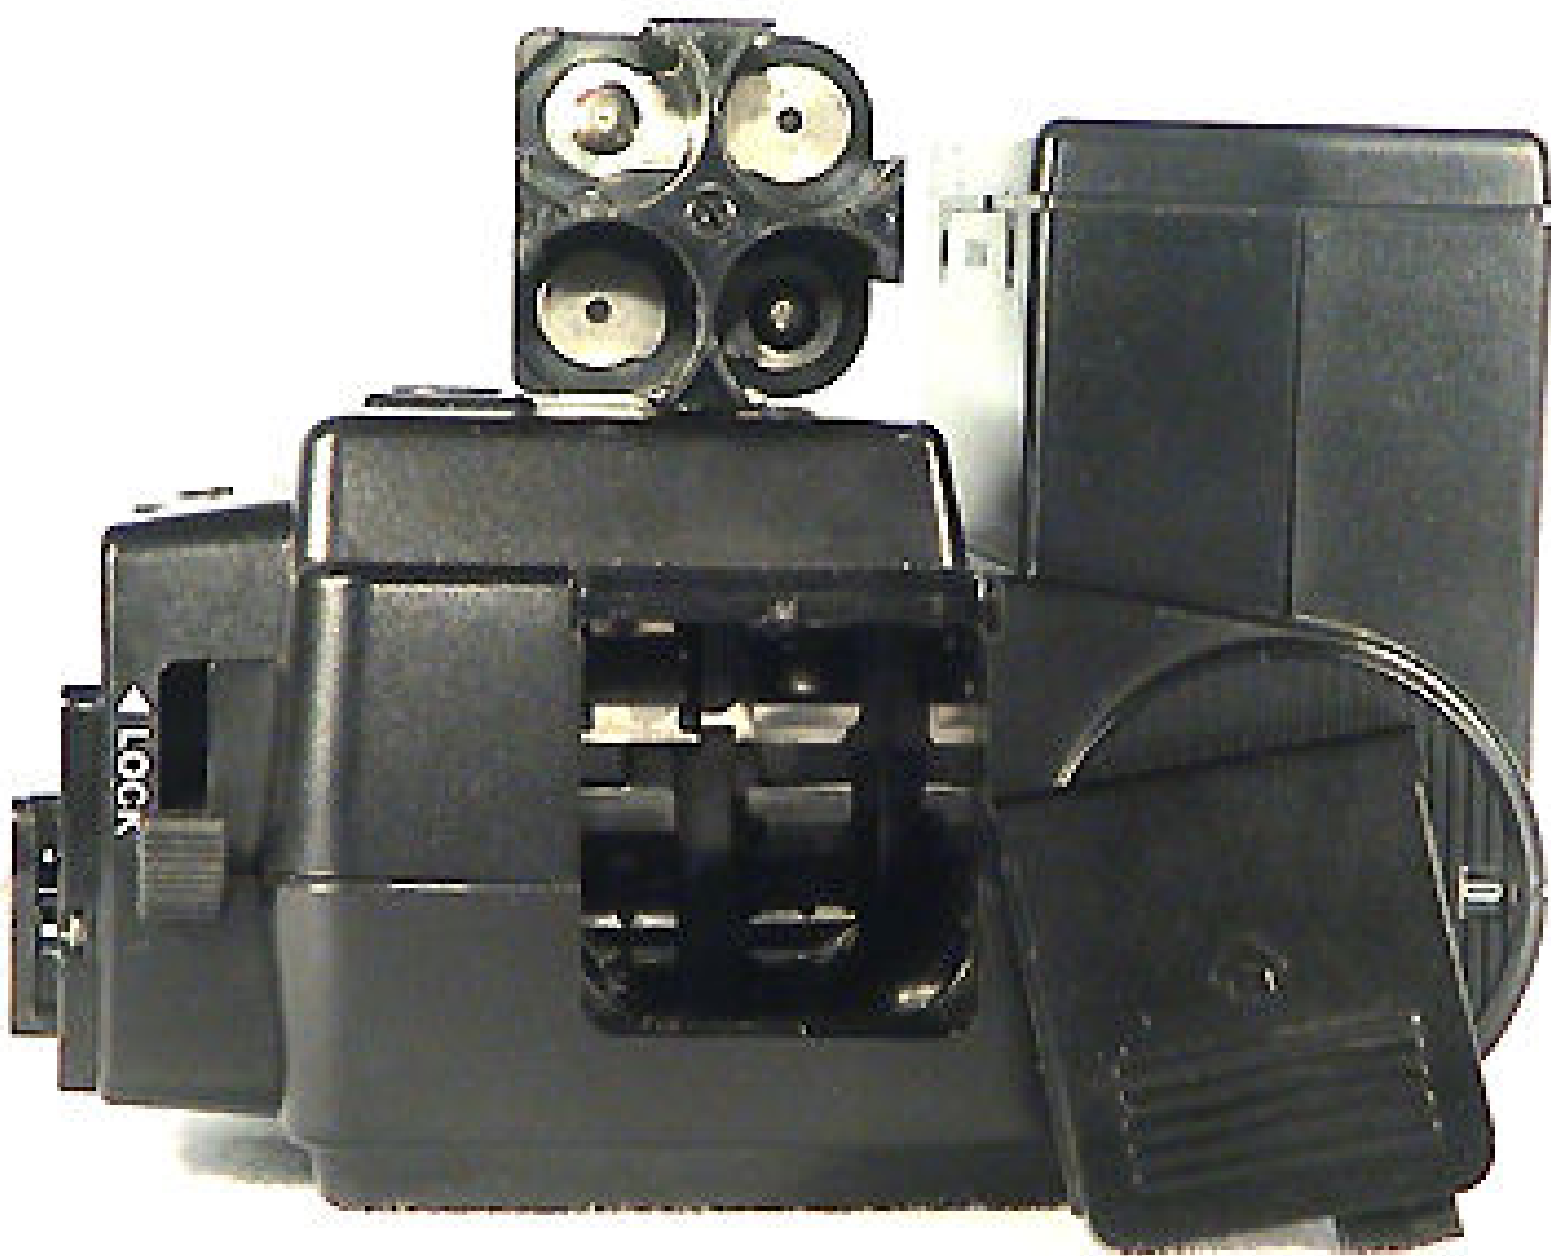










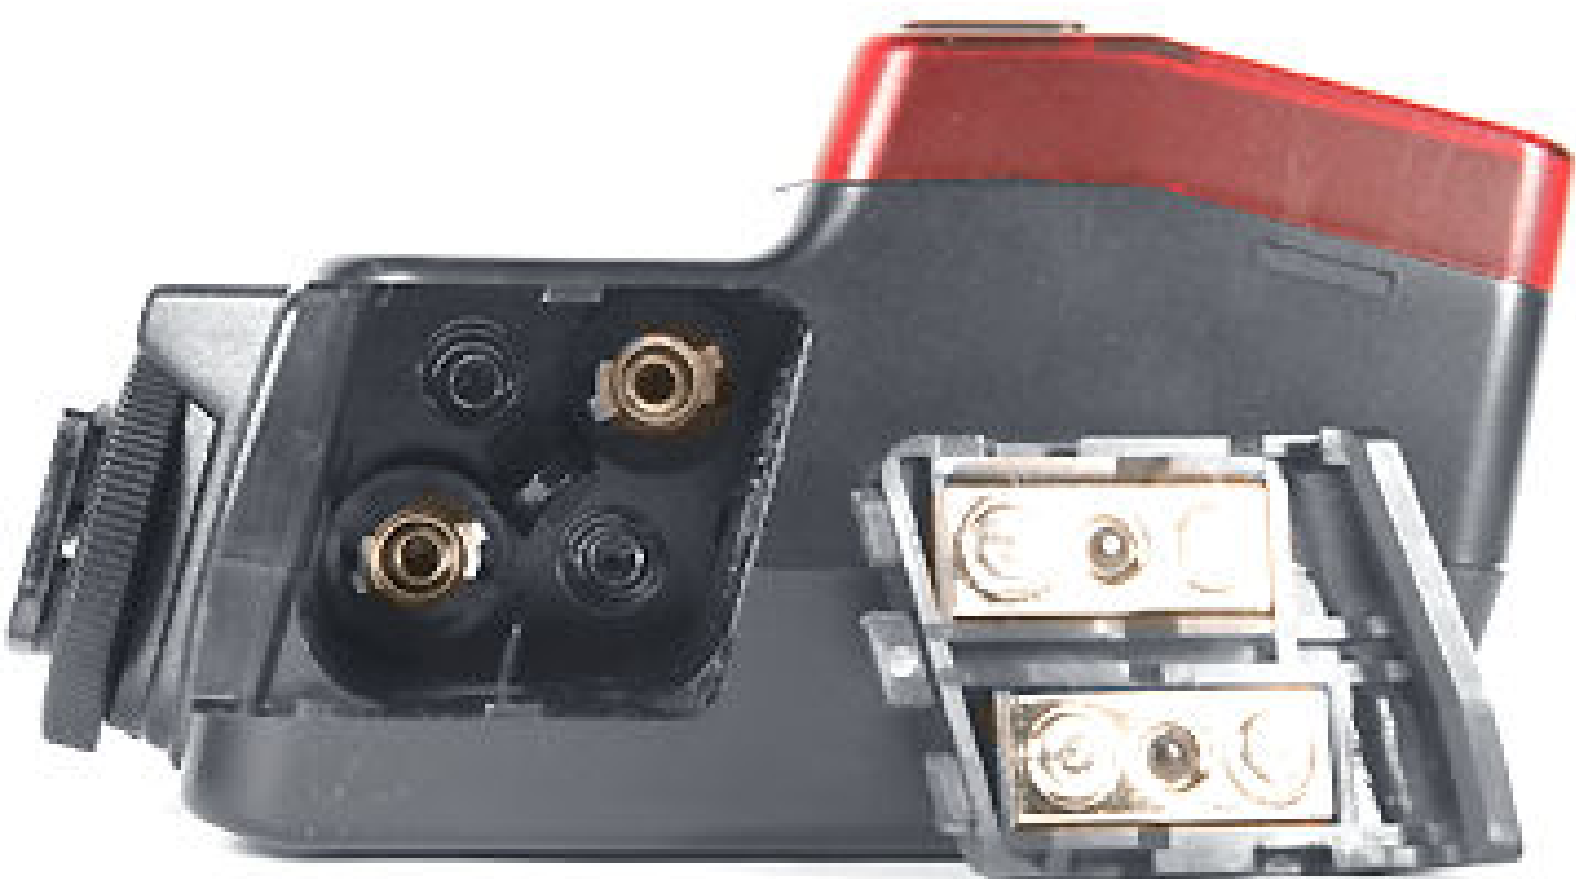















15.6 + 250


























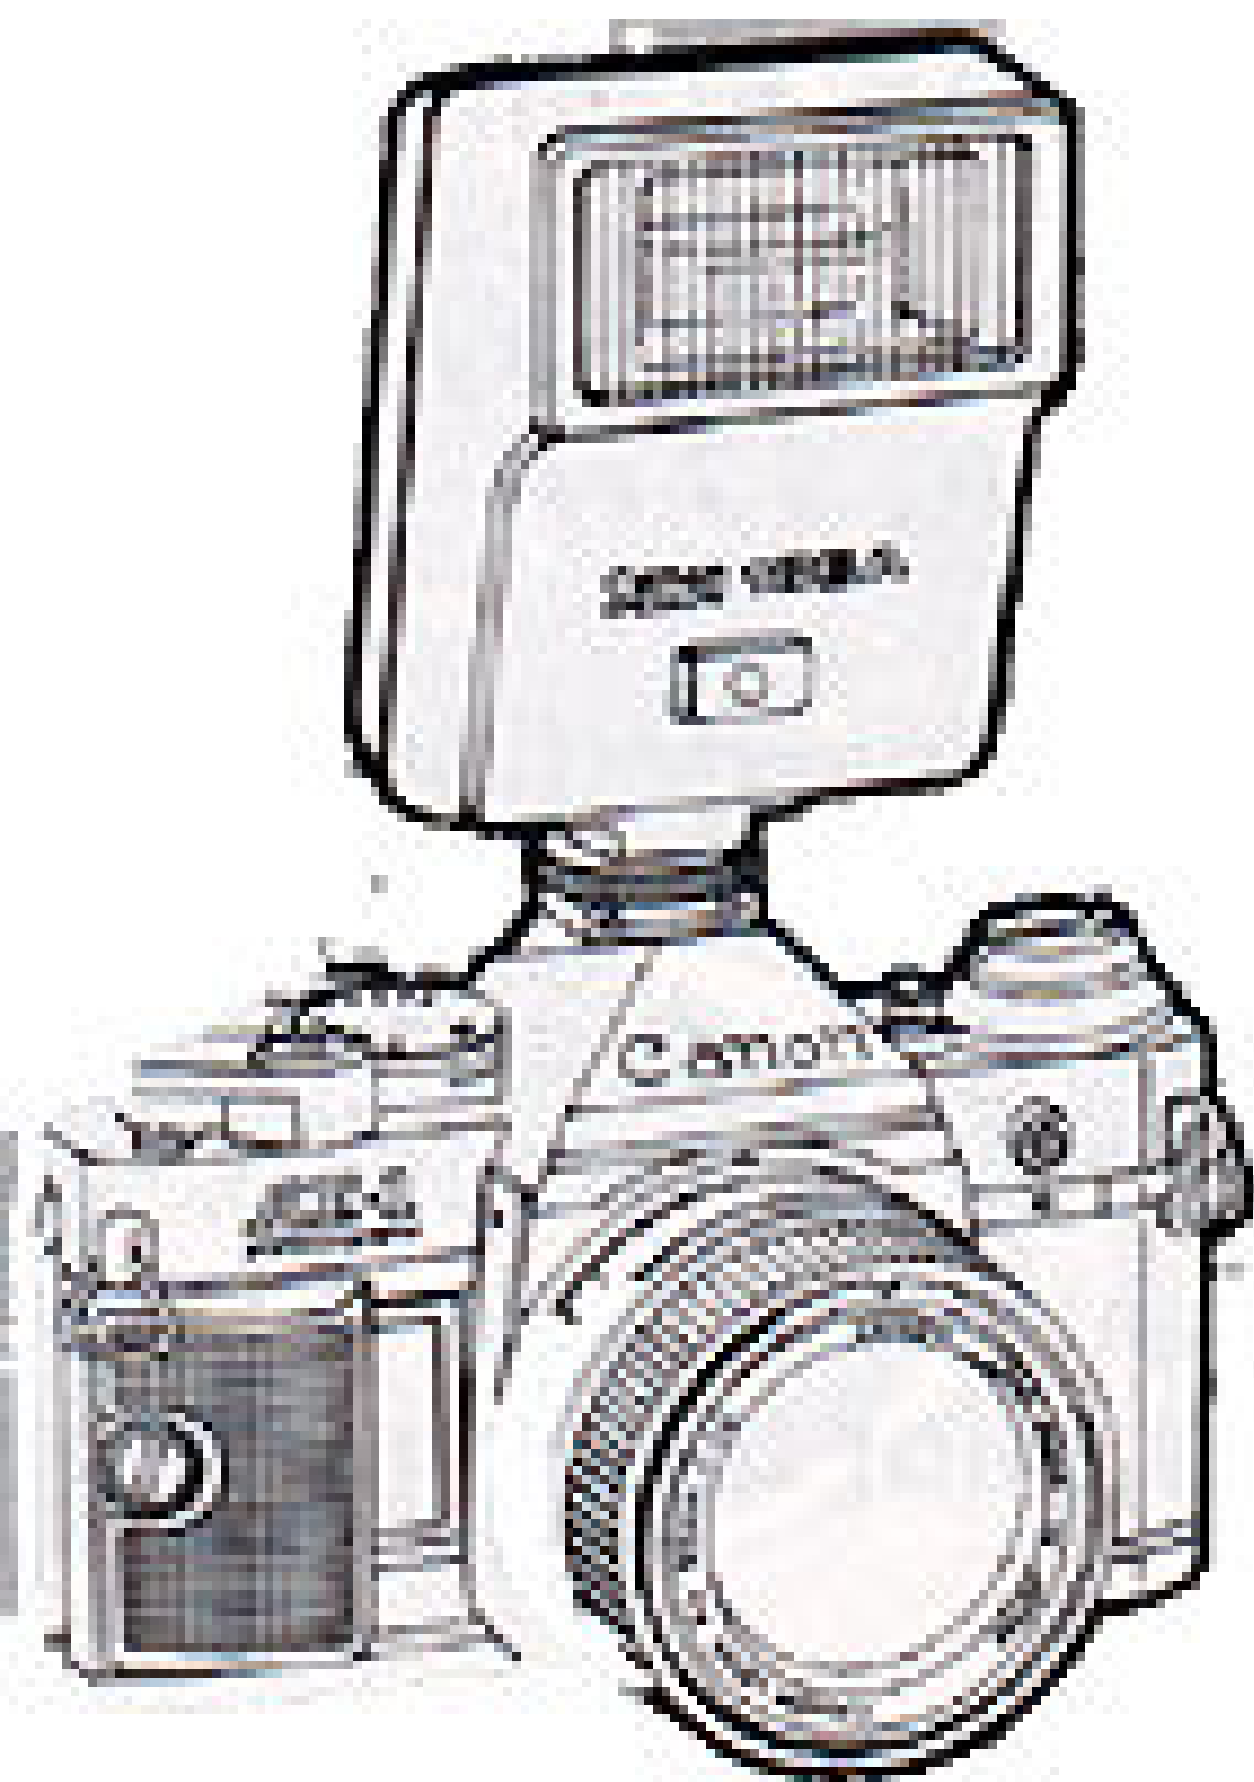

15.6

6







10 15 30 ft
3 5 10 ∞ m
16 11 8 4 2 1 1/2 1/4 1/8 1/16 1/32 1/64
6 22 A

10 15 30 ft
3 5 10 ∞ m
16 11 8 4 2 1 1/2 1/4 1/8 1/16 1/32 1/64
6 22 A

















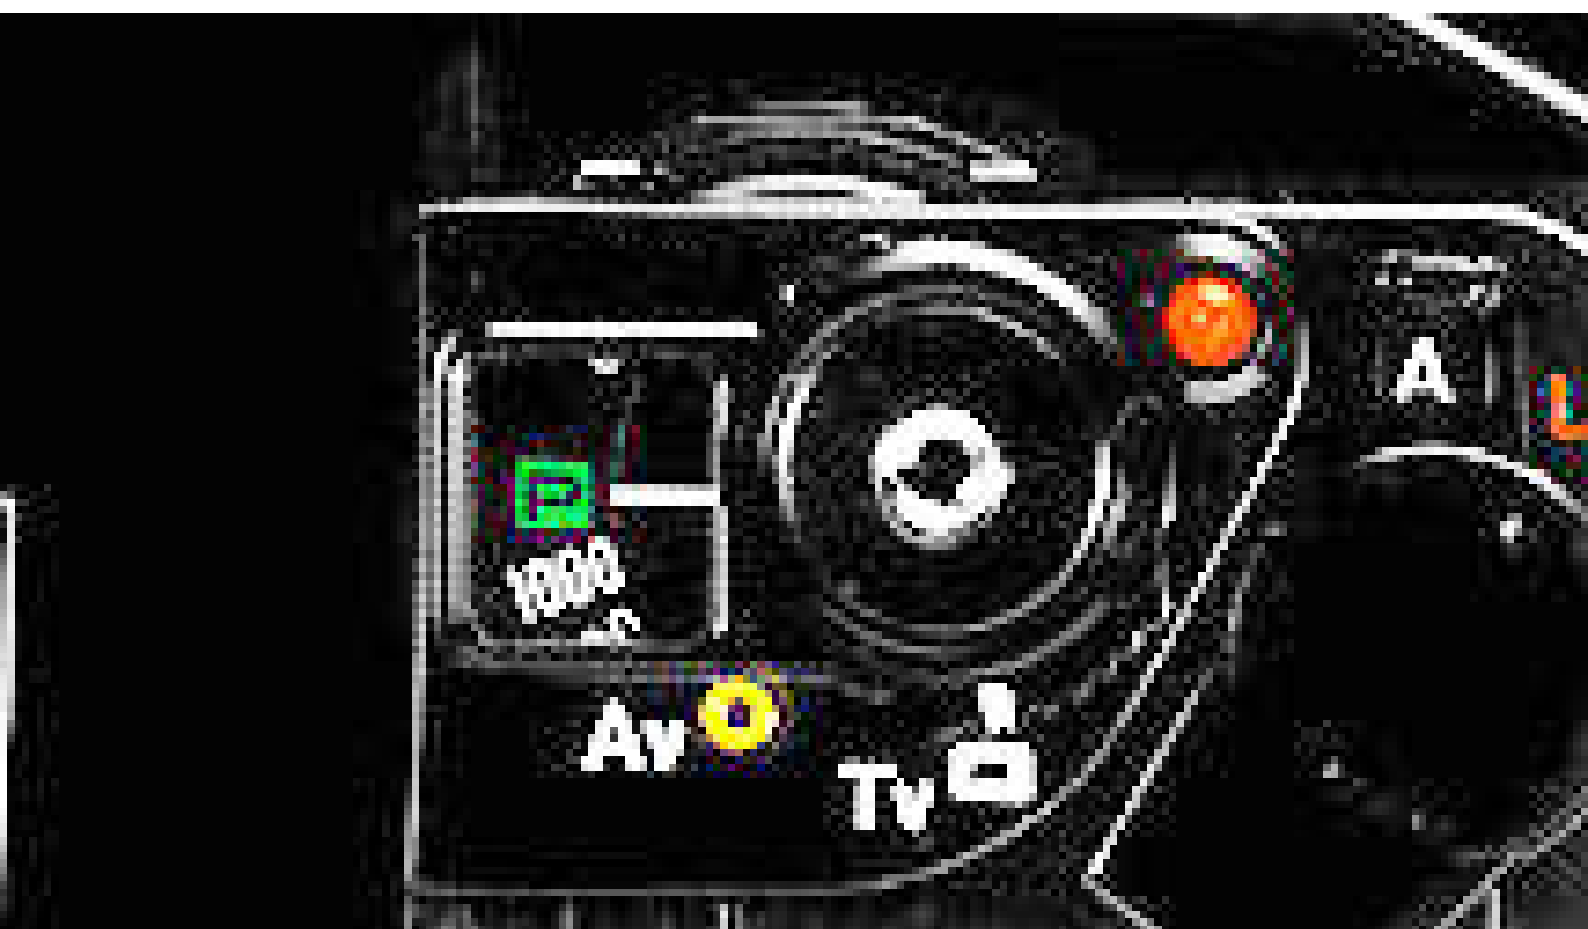

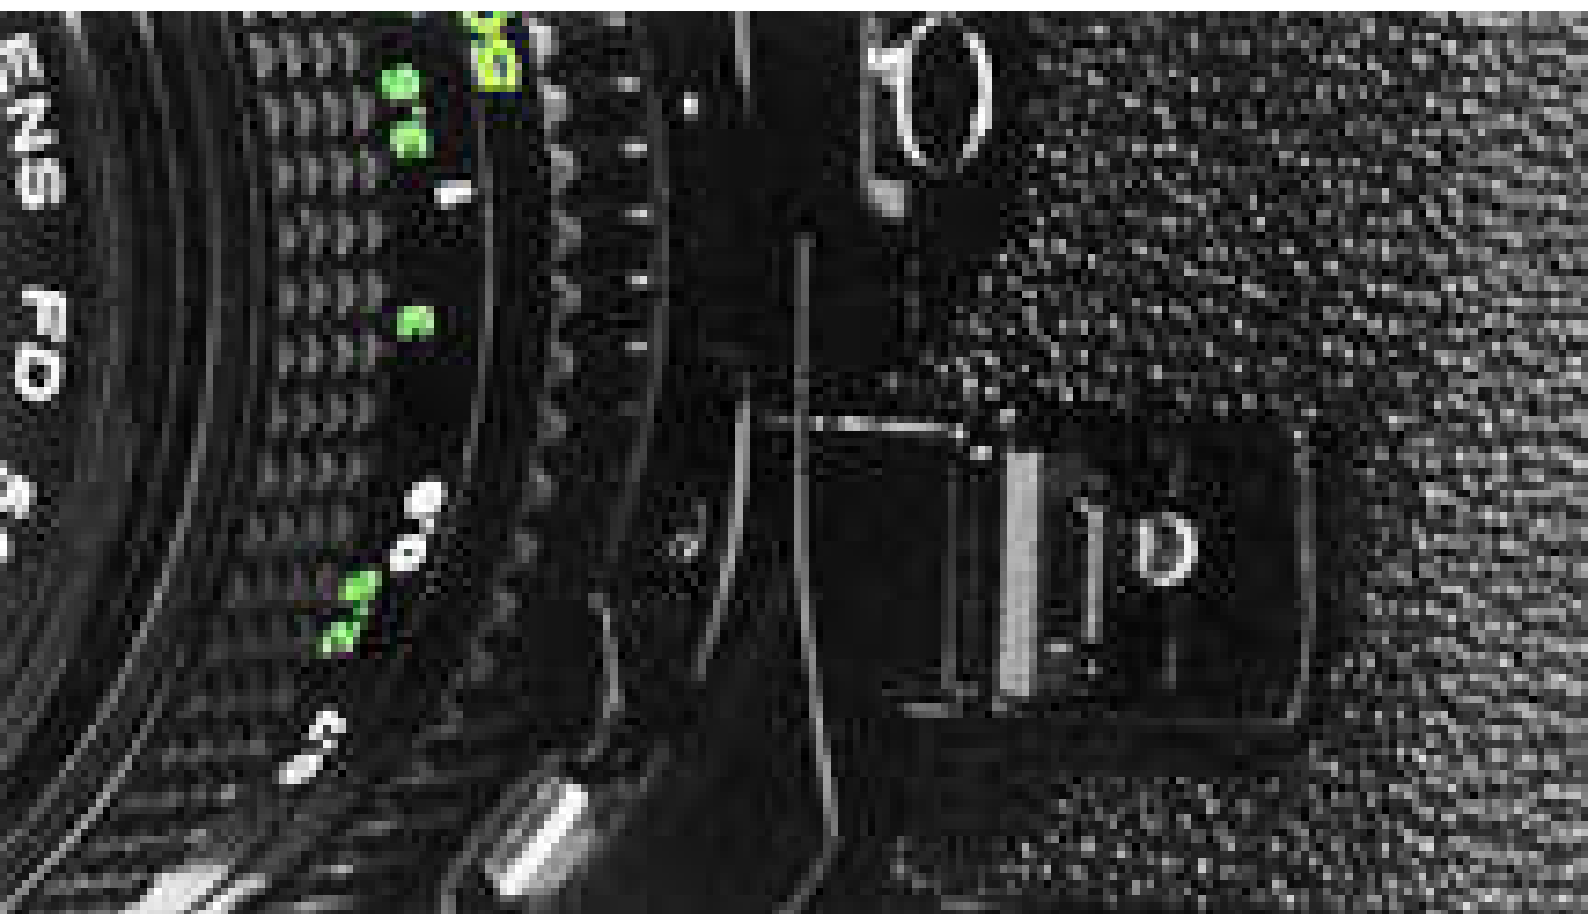




**Main
Switch**

**AUTO/
MANUAL
Switch
Confi**

**-dence
Light**

**Pilot
Lamp**

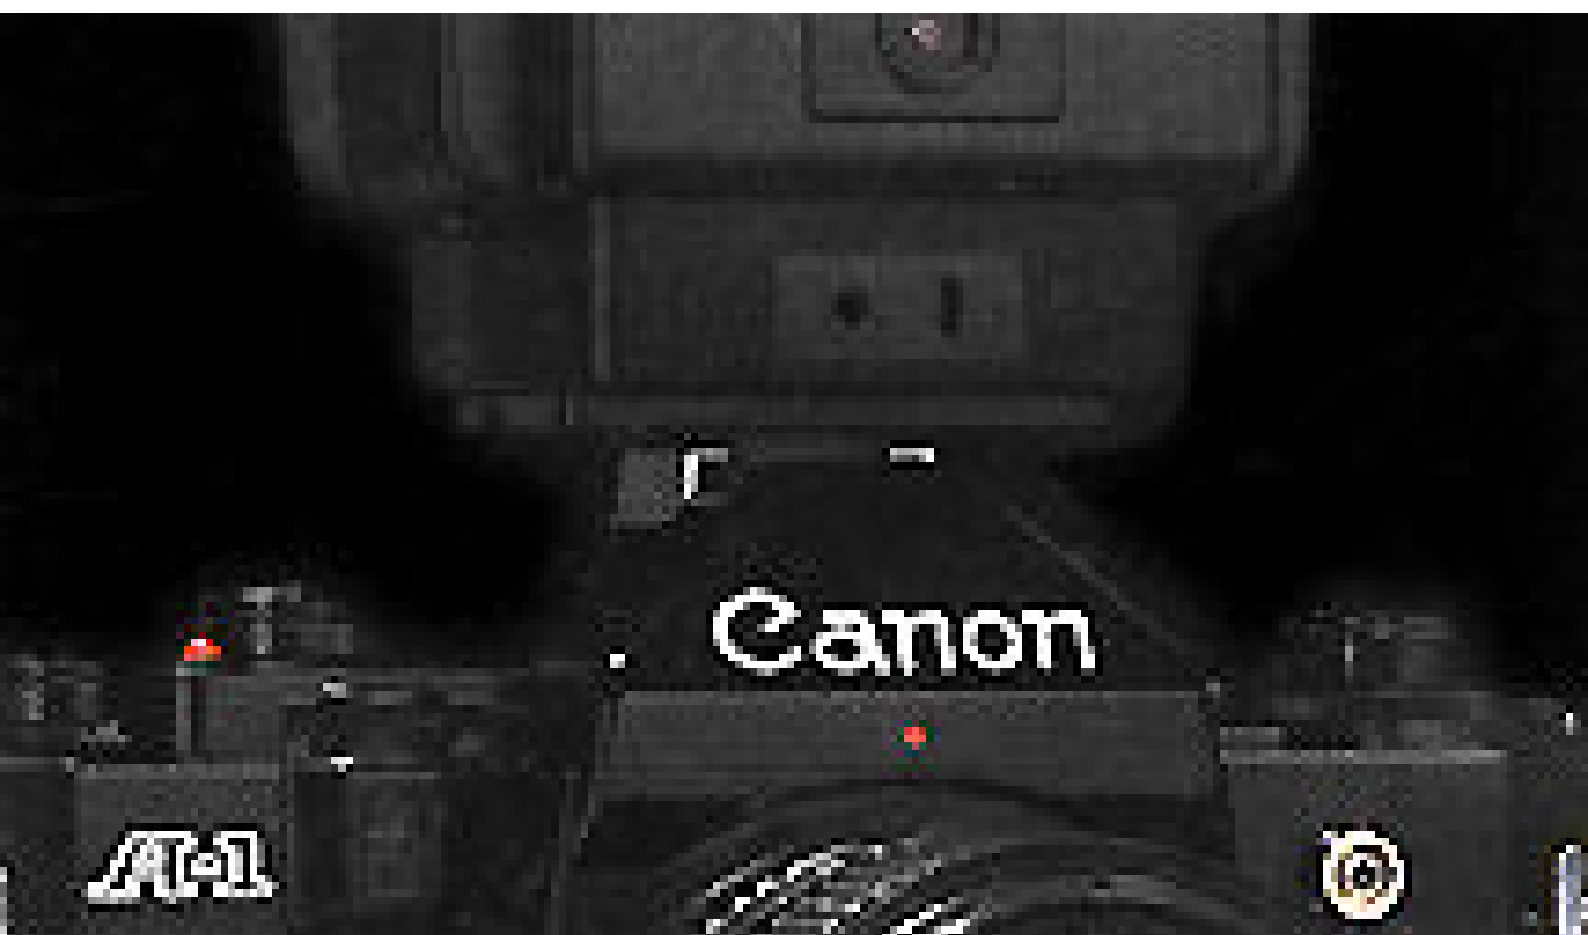












USE OF MOTOR DRIVE MA WITH BATTERY PACK MA

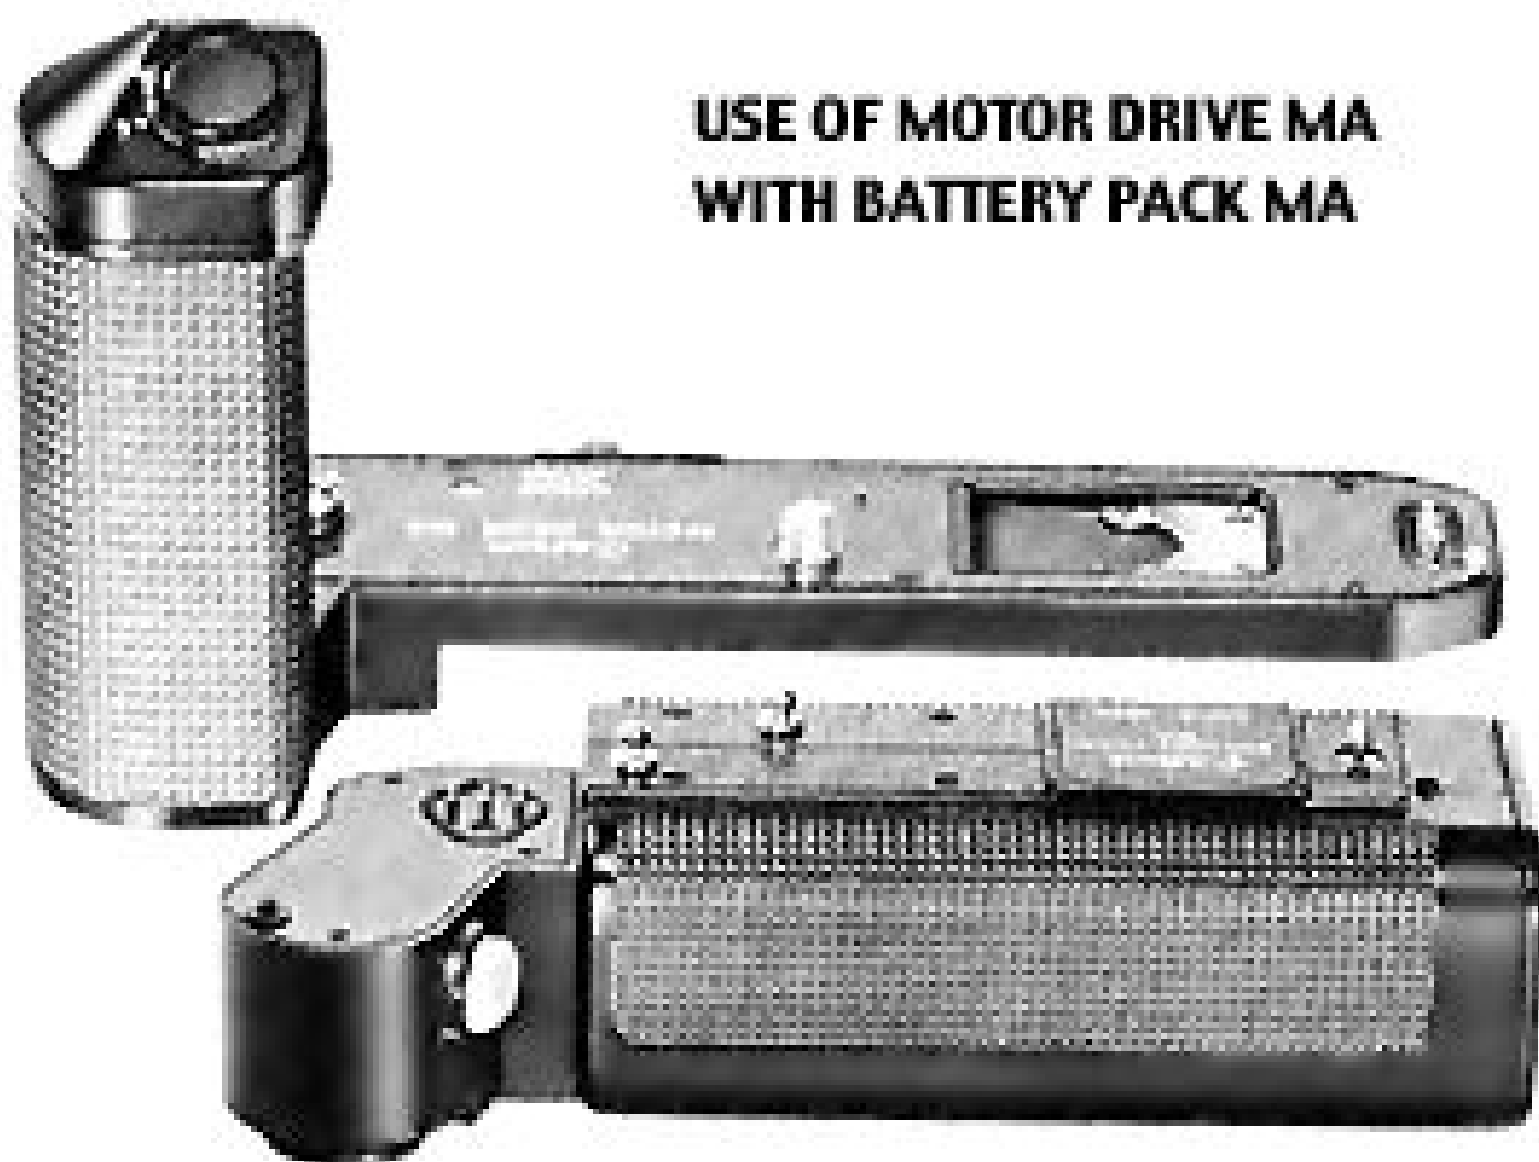









LOCK

AIR

























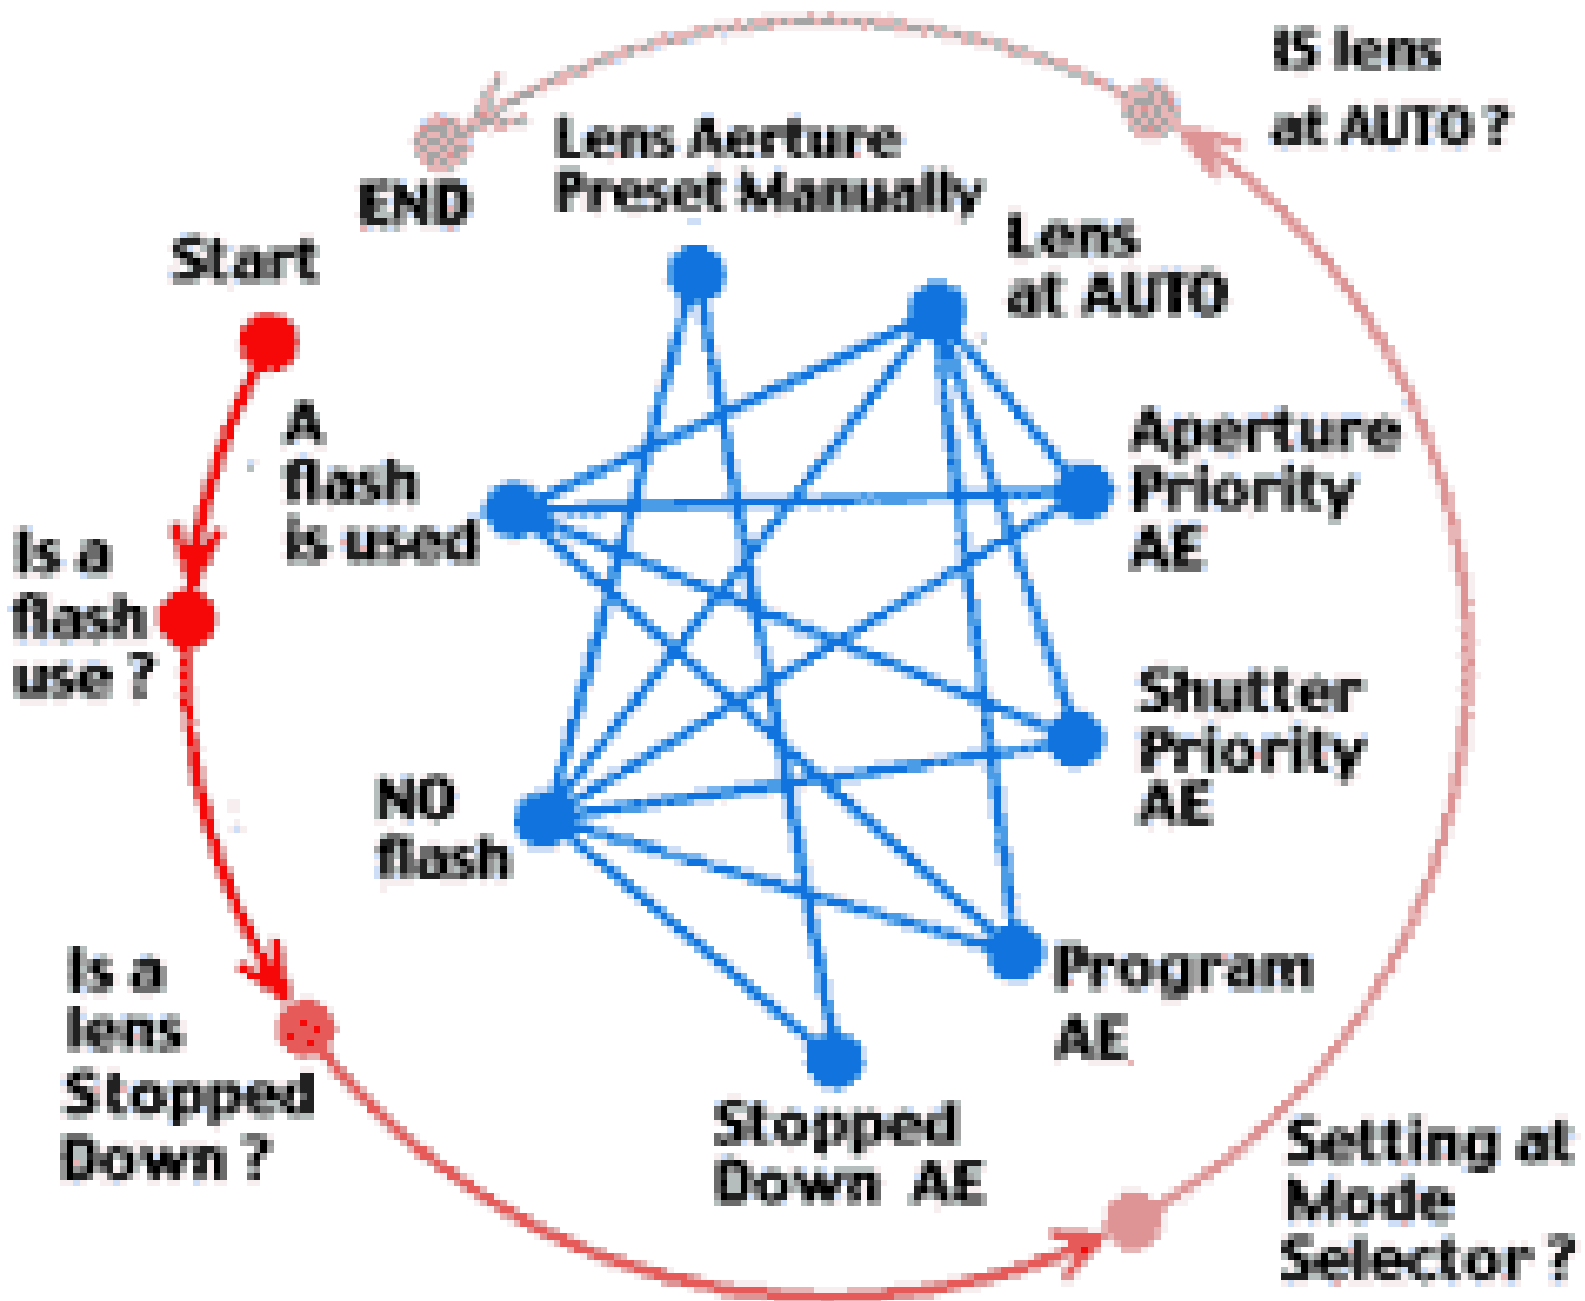


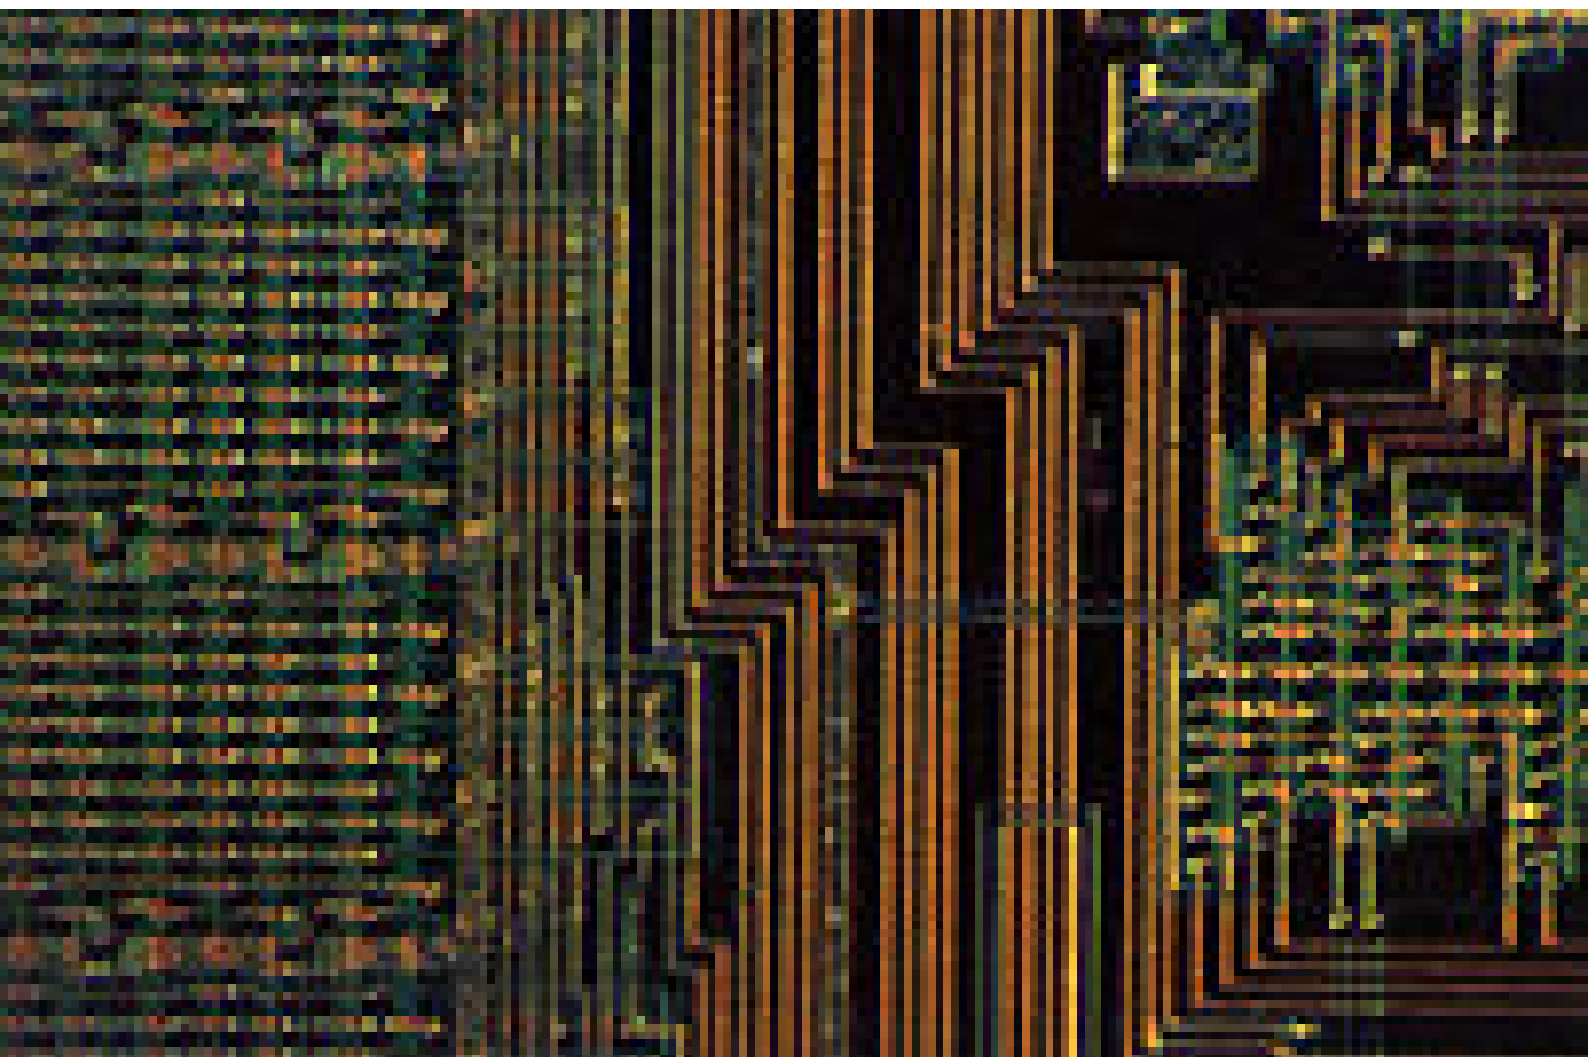



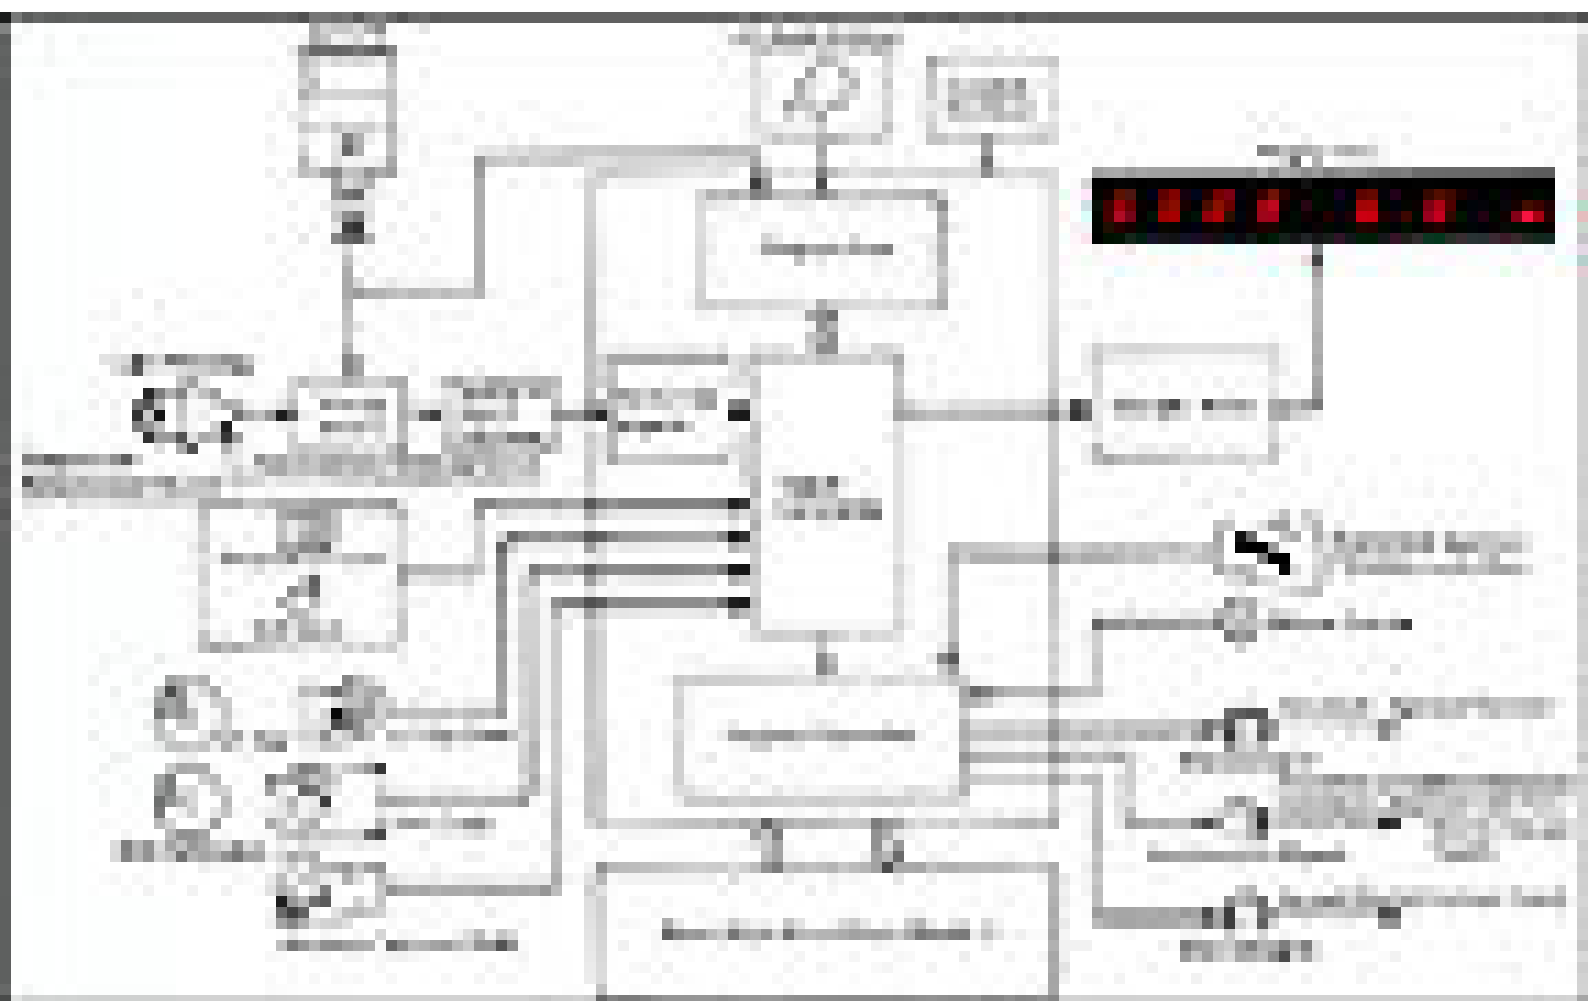

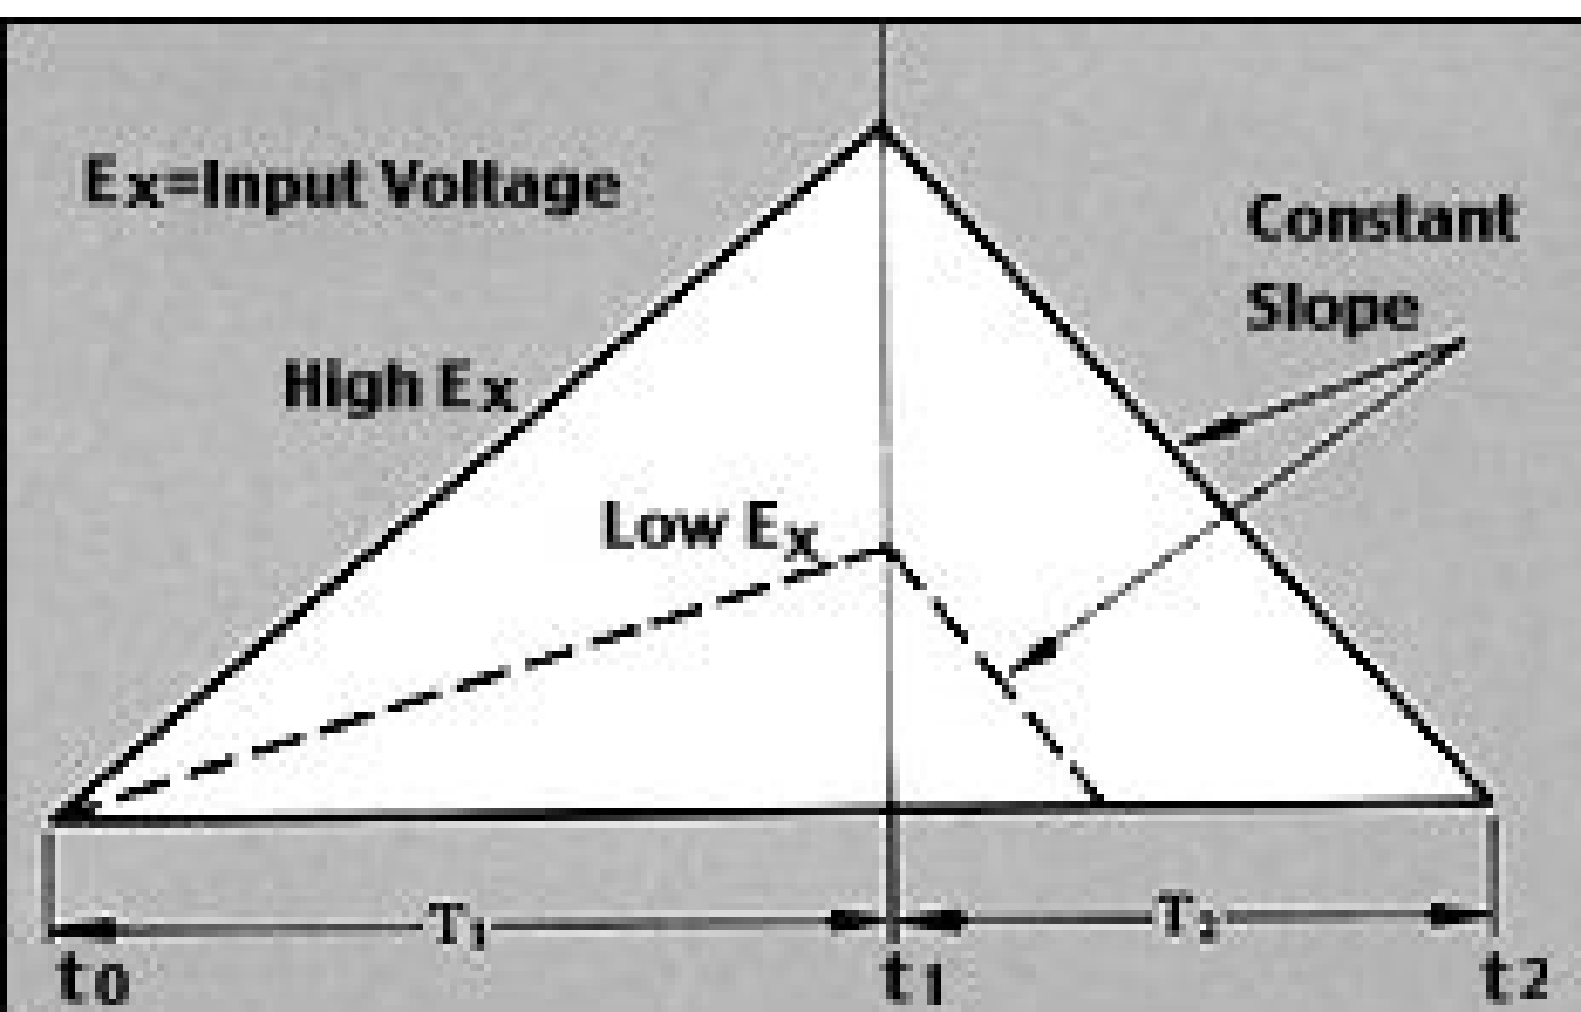

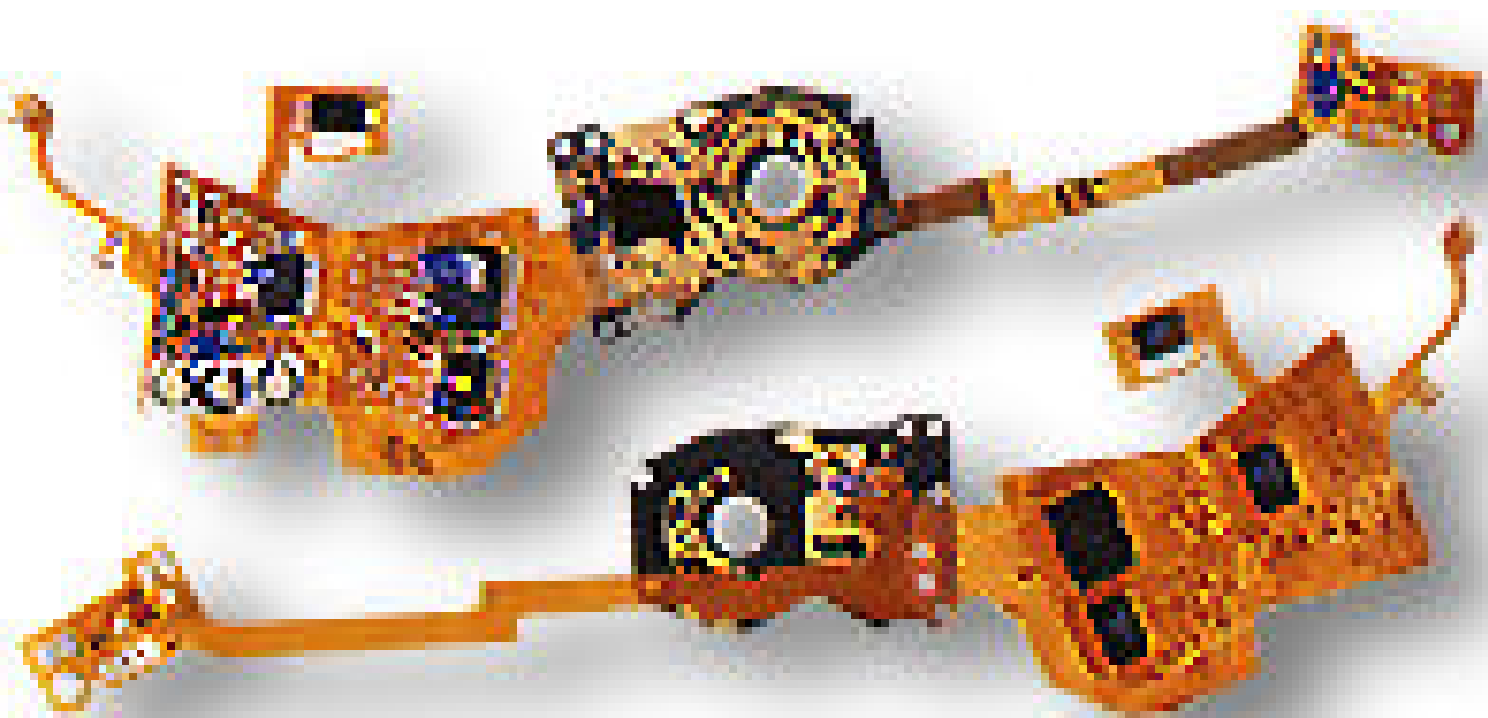











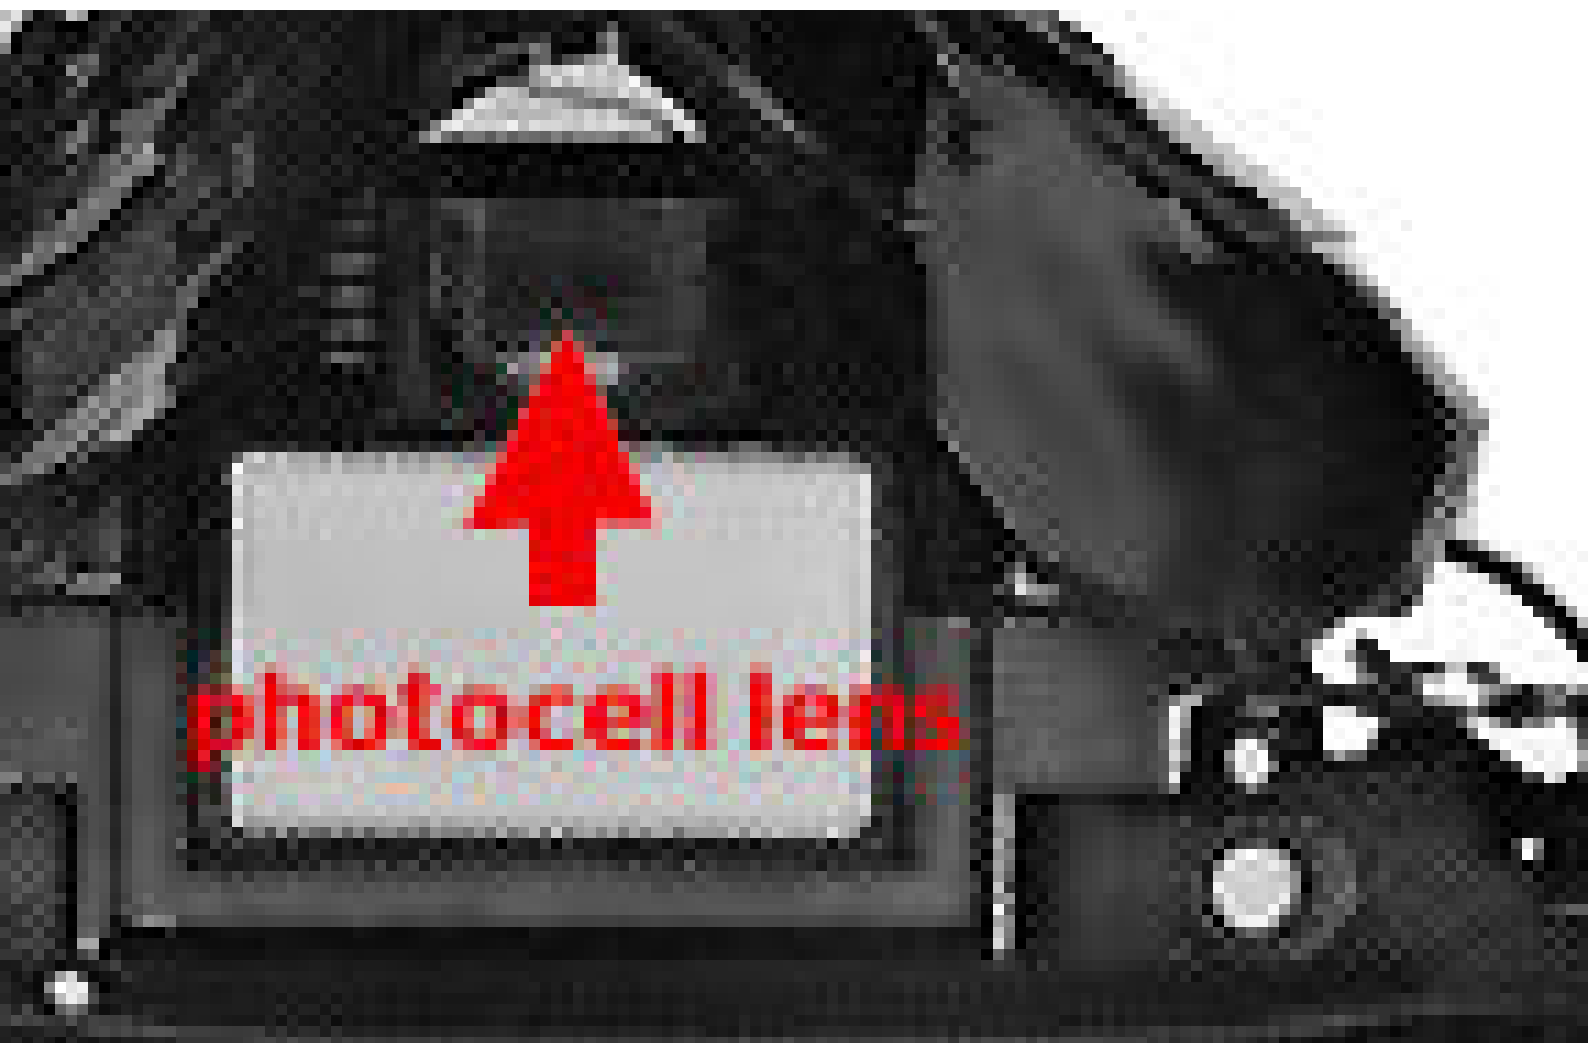



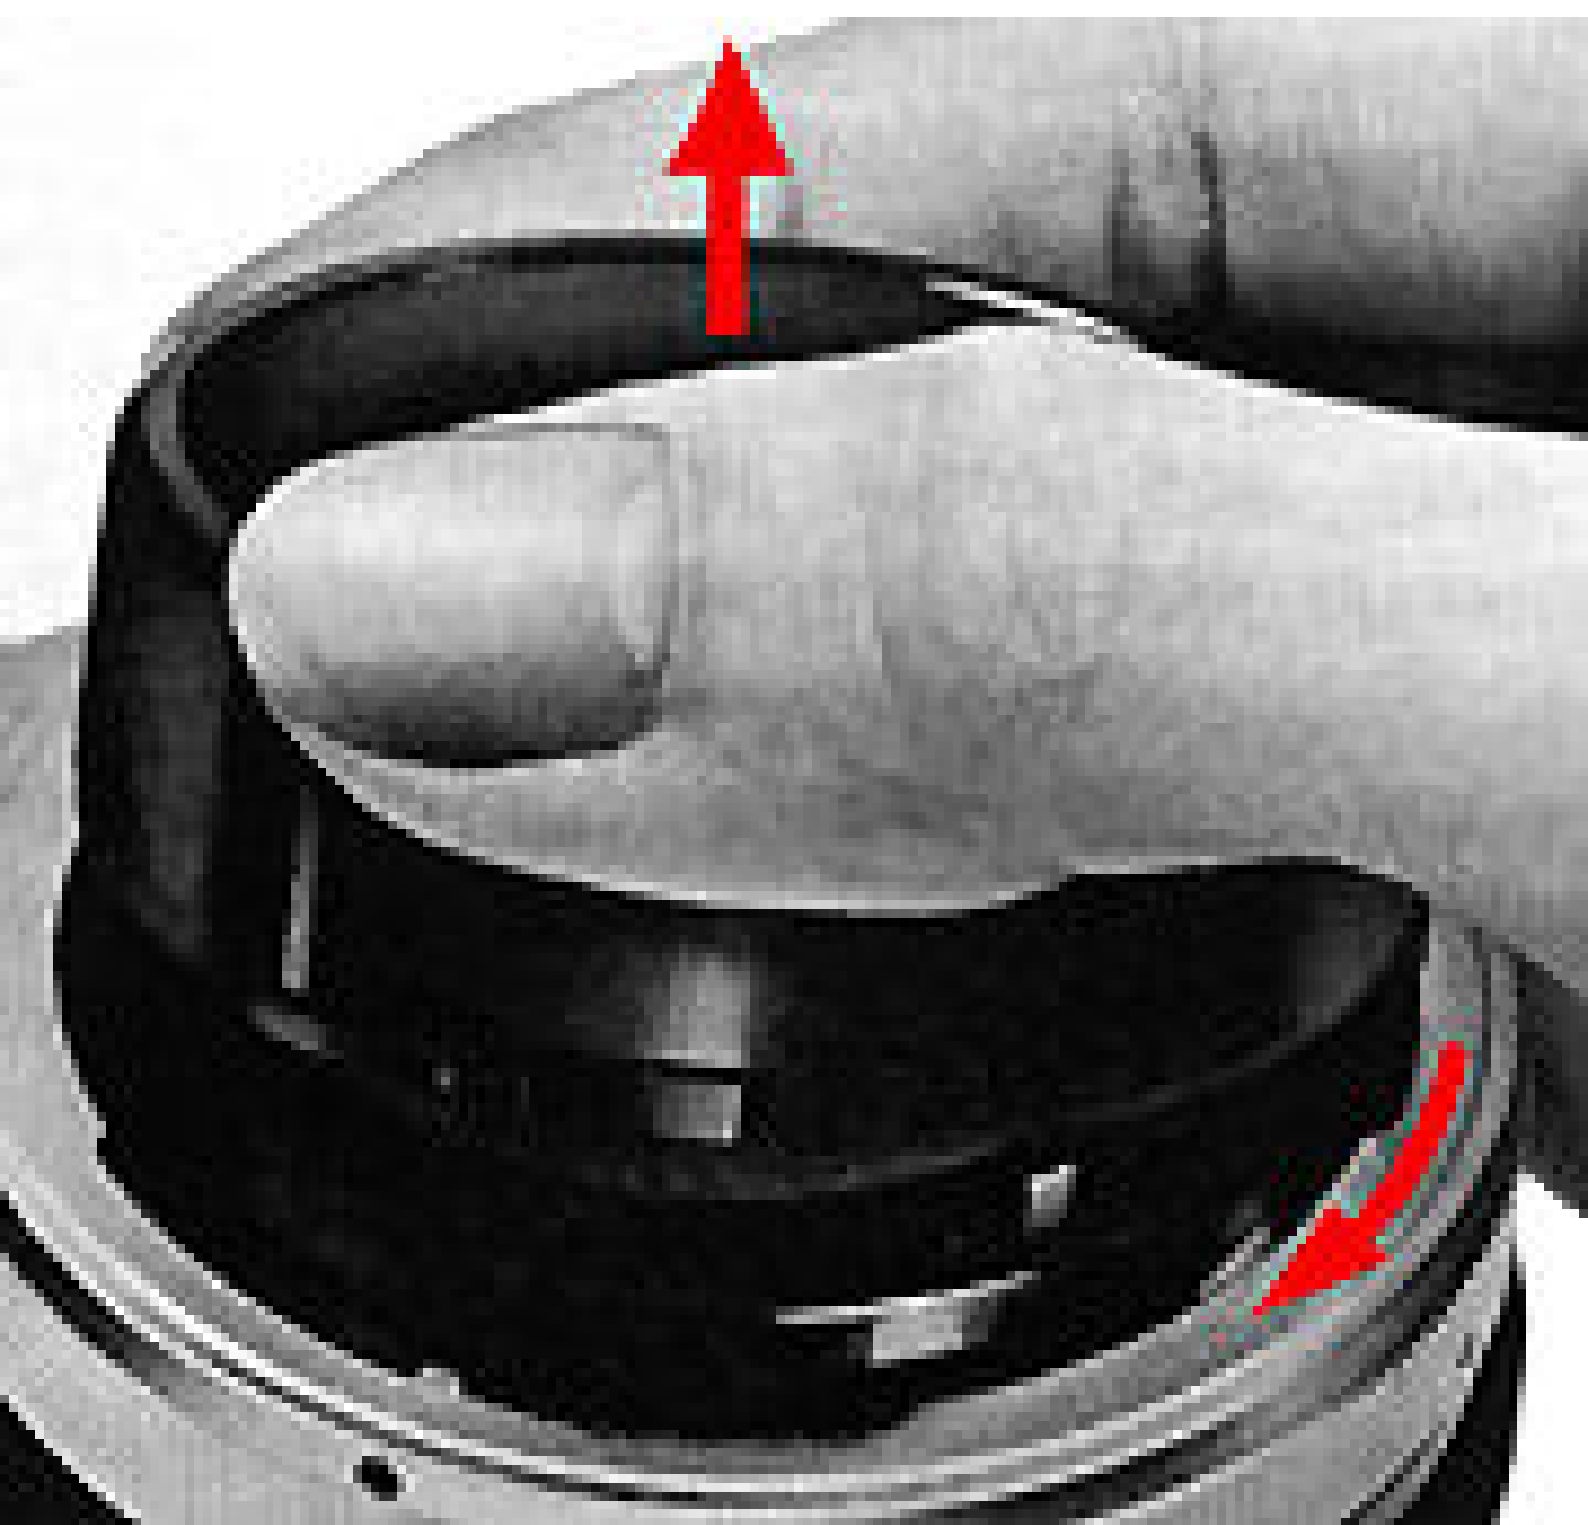











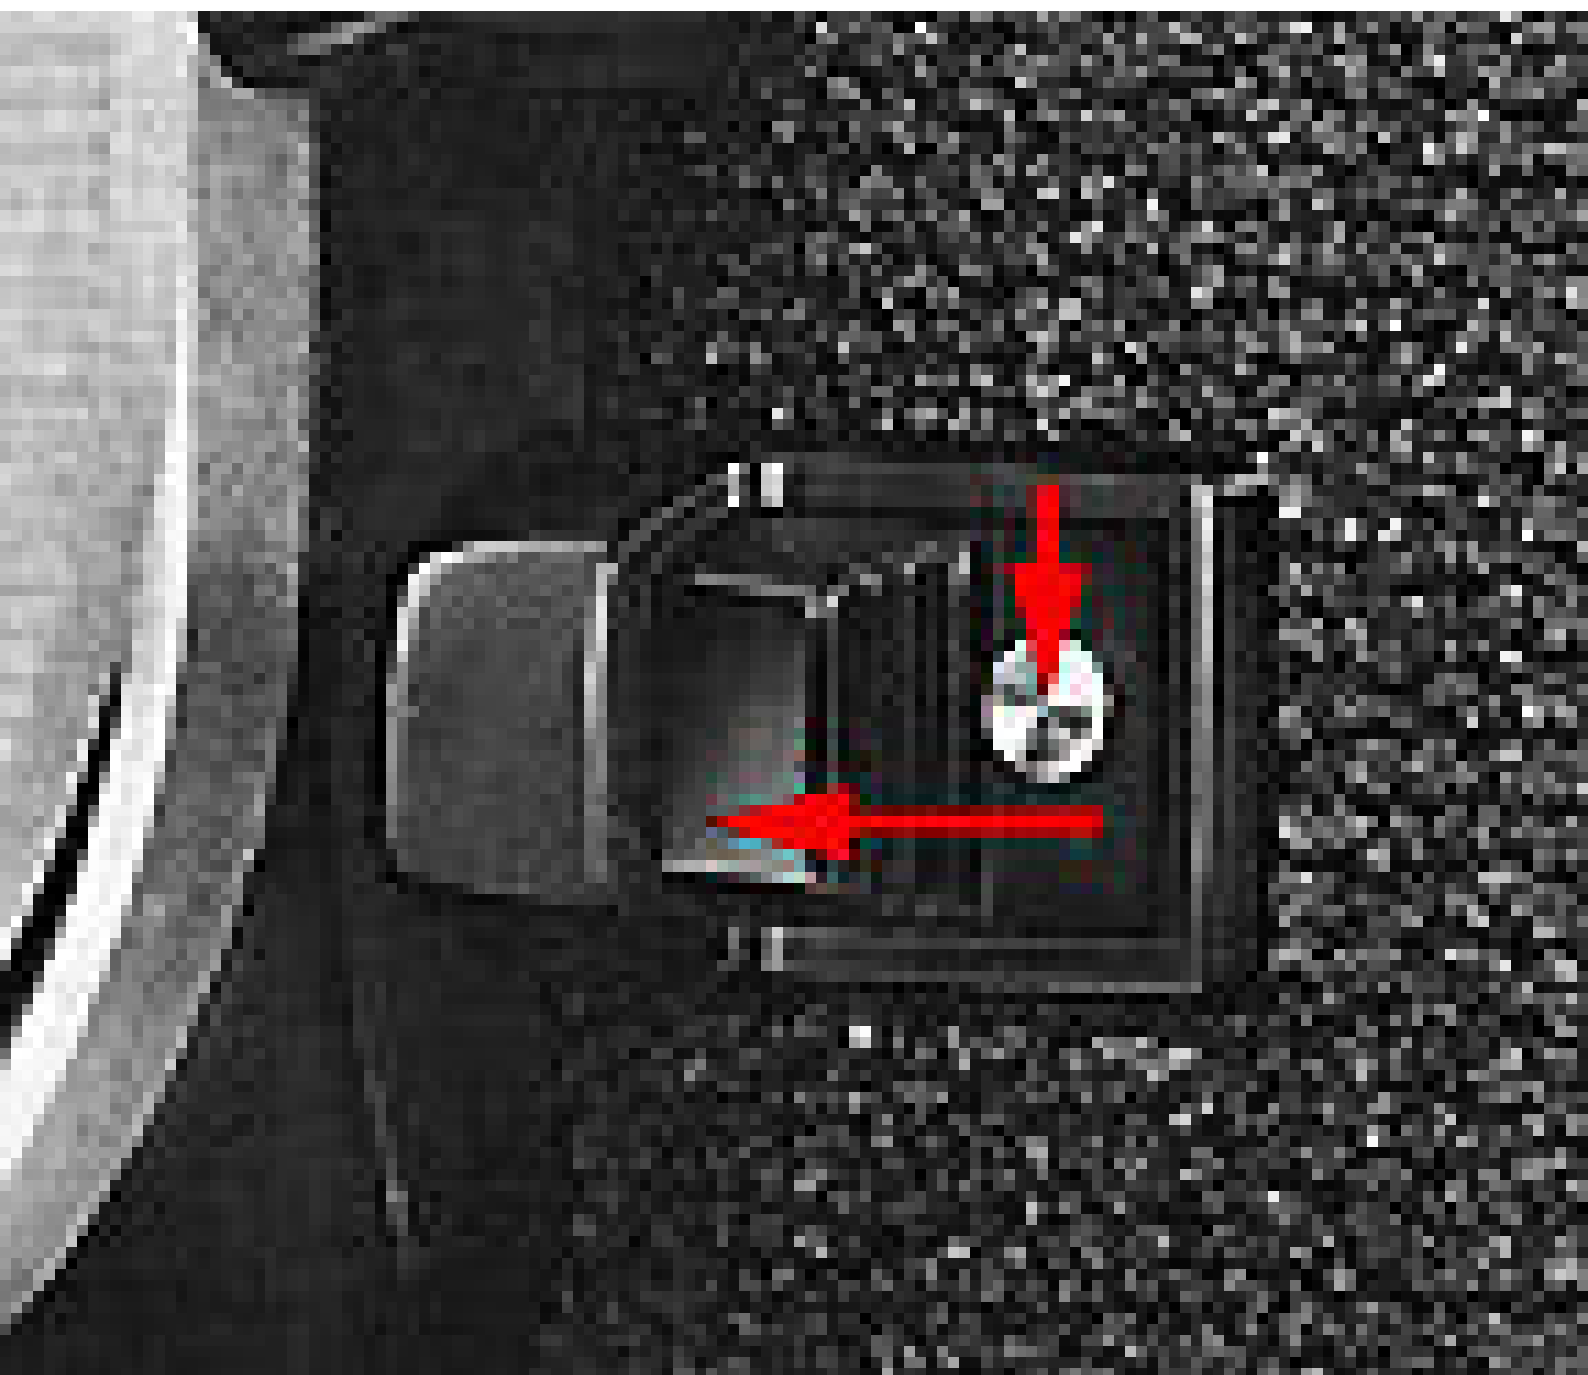



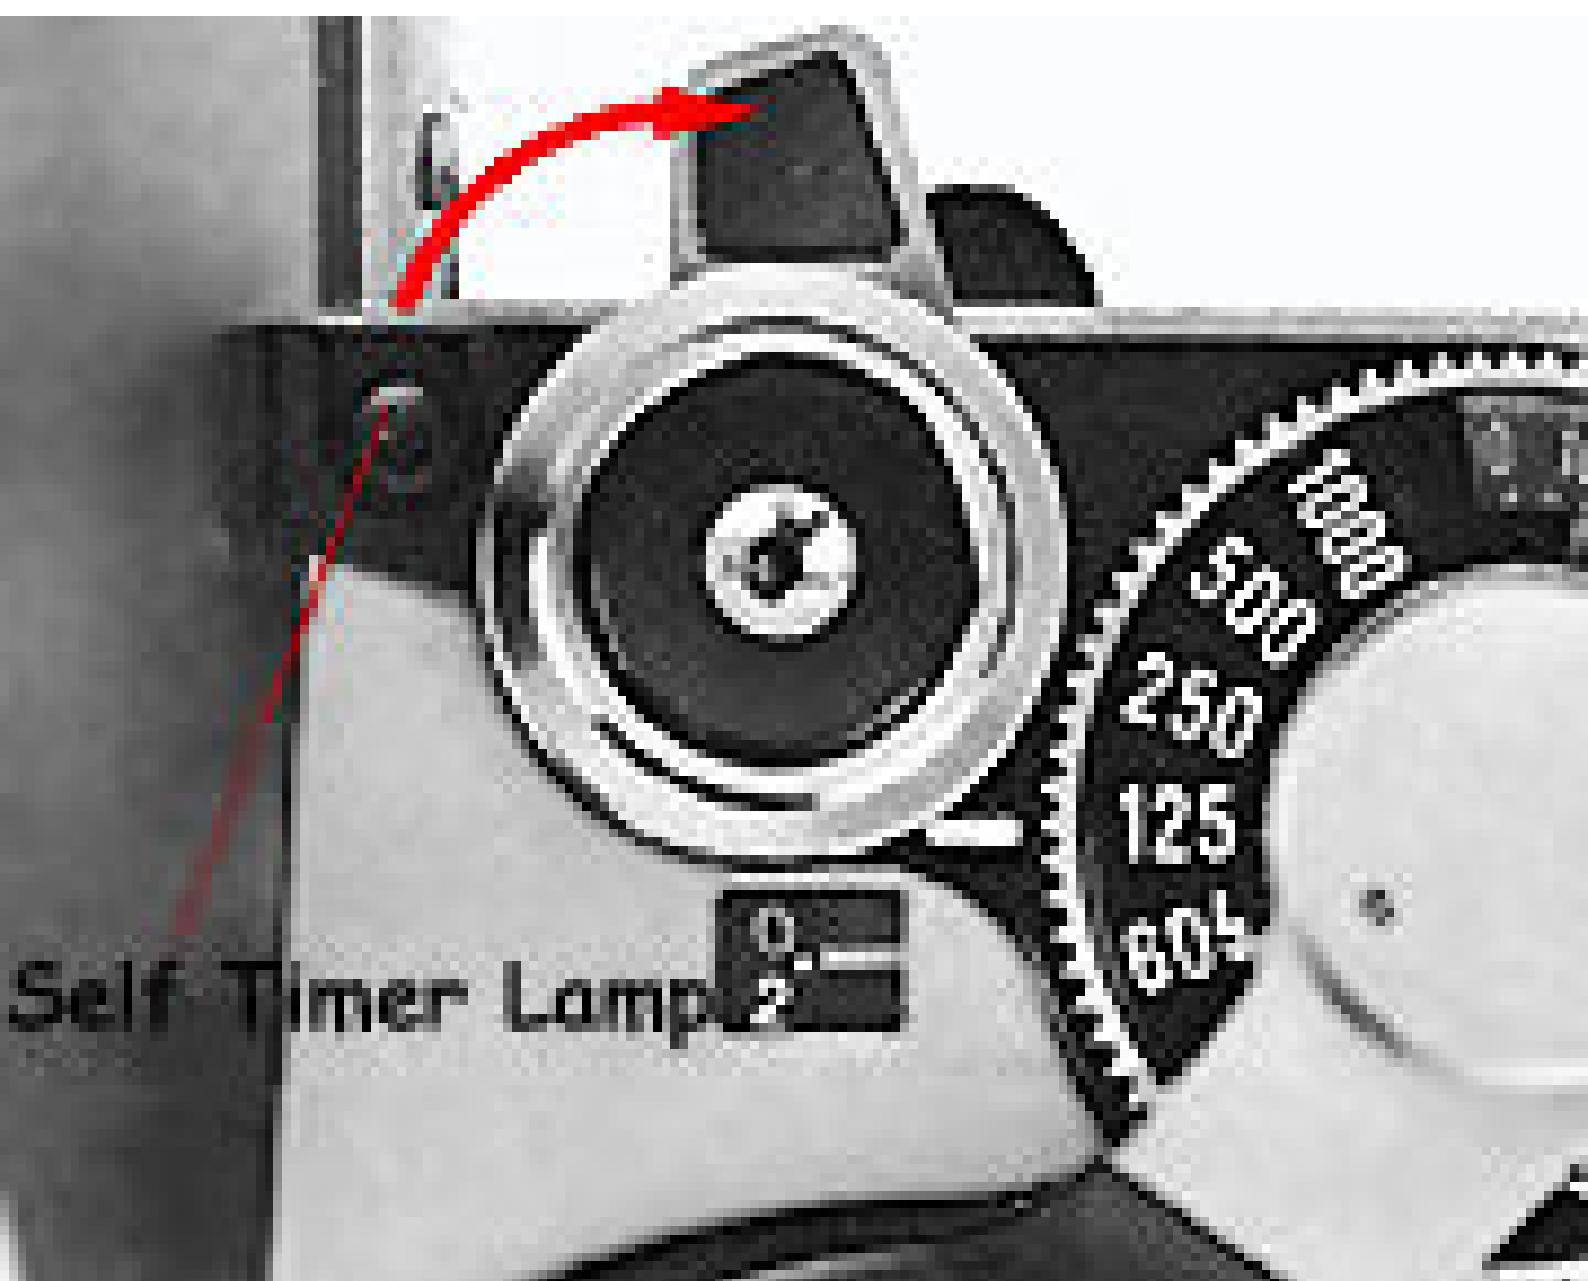

Self Timer Lamp

