

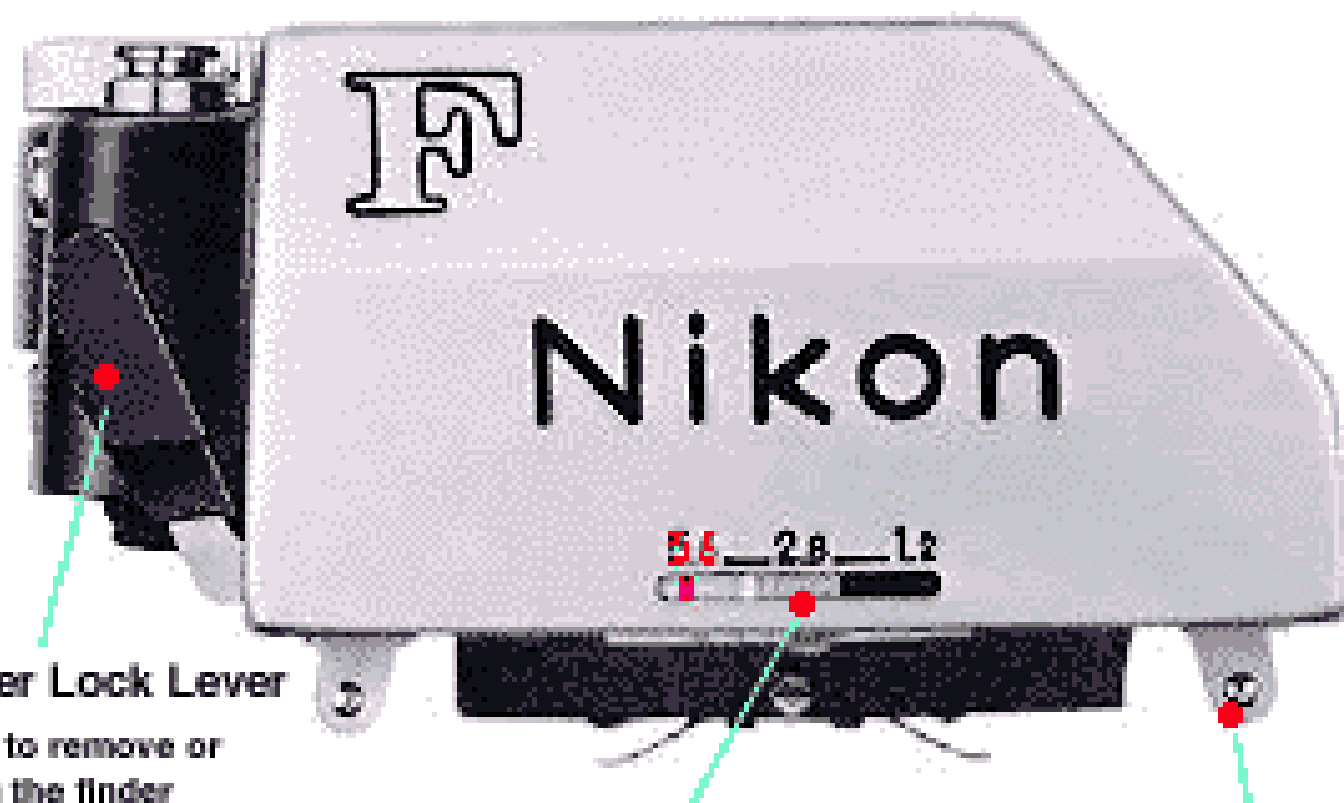 
Battery type	Min. recycling time (approx.)*	Min. number of flashes/ recycling time (approx.)*
Alkaline-manganese	6.0 sec.	130/6–30 sec.
Lithium	7.5 sec.	170/7.5–30 sec.
Nickel	6.0 sec.	140/6–30 sec.
NiCd (1000mAh) (rechargeable)	4.0 sec.	90/4–30 sec.
Ni-MH (2000mA) (rechargeable)	4.0 sec.	150/4–30 sec.











Finder Lock Lever
Press to remove or
attach the finder

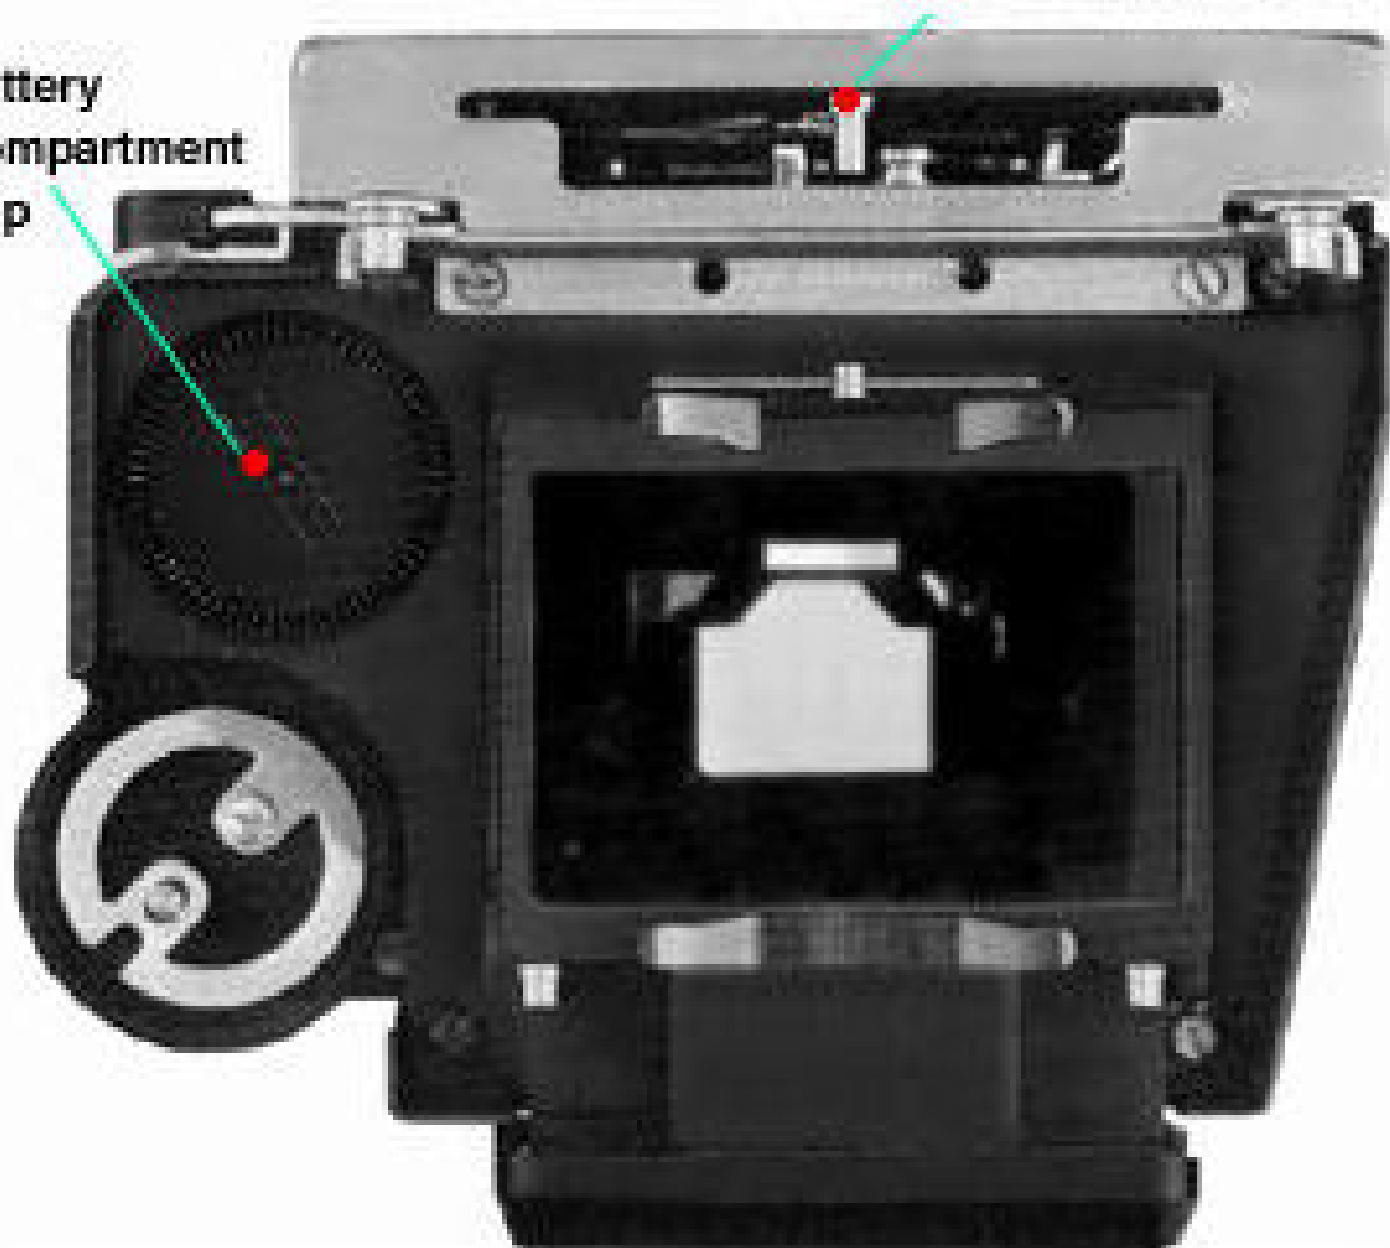 
Maximum Aperture Scale
Check to verify if the meter is set for the
maximum aperture of the lens used.

Clamps (Left & Right)
For positioning the finder
on the camera.

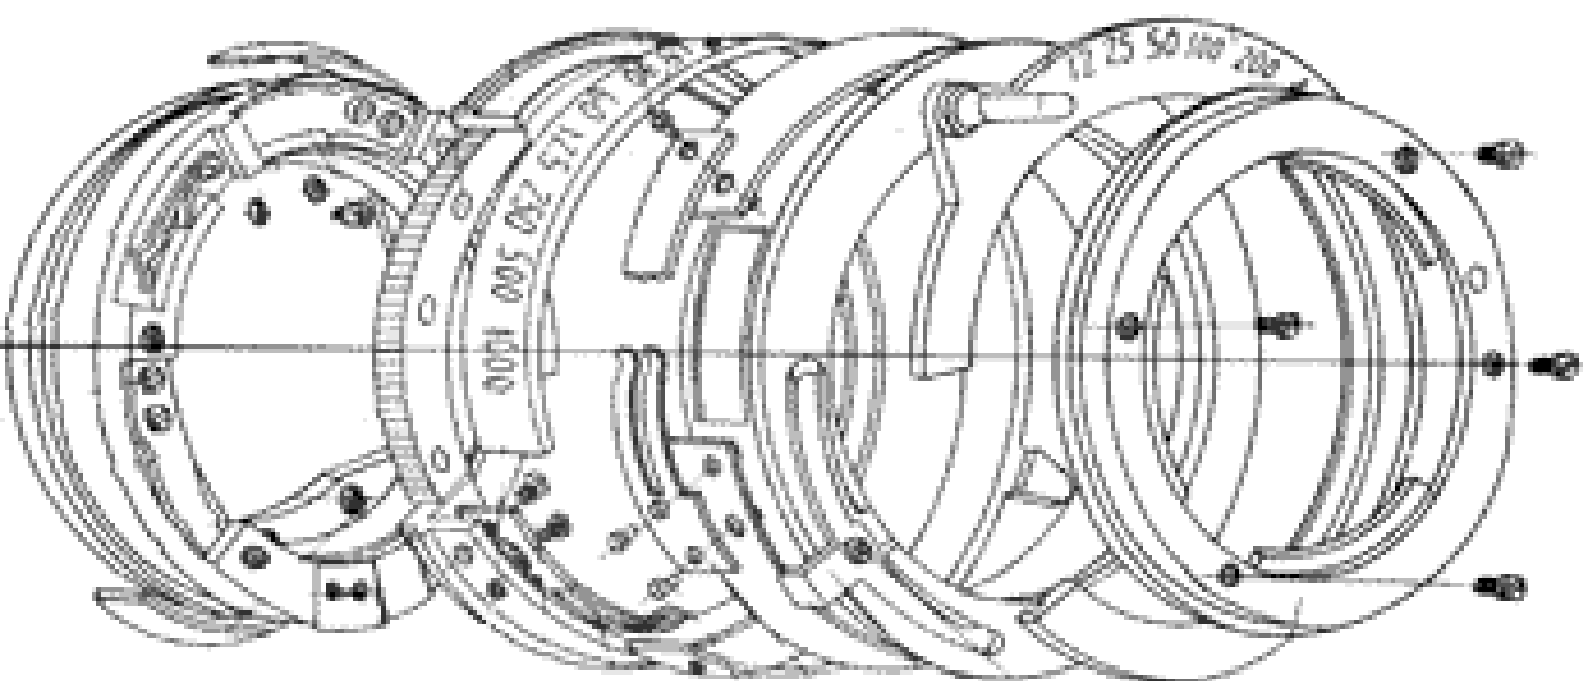 
Battery
Compartment
Cap

Coupling Pin

Connect the meter mechanism
to the lens diaphragm for full
aperture exposure measurement











Nikkormat

4


3

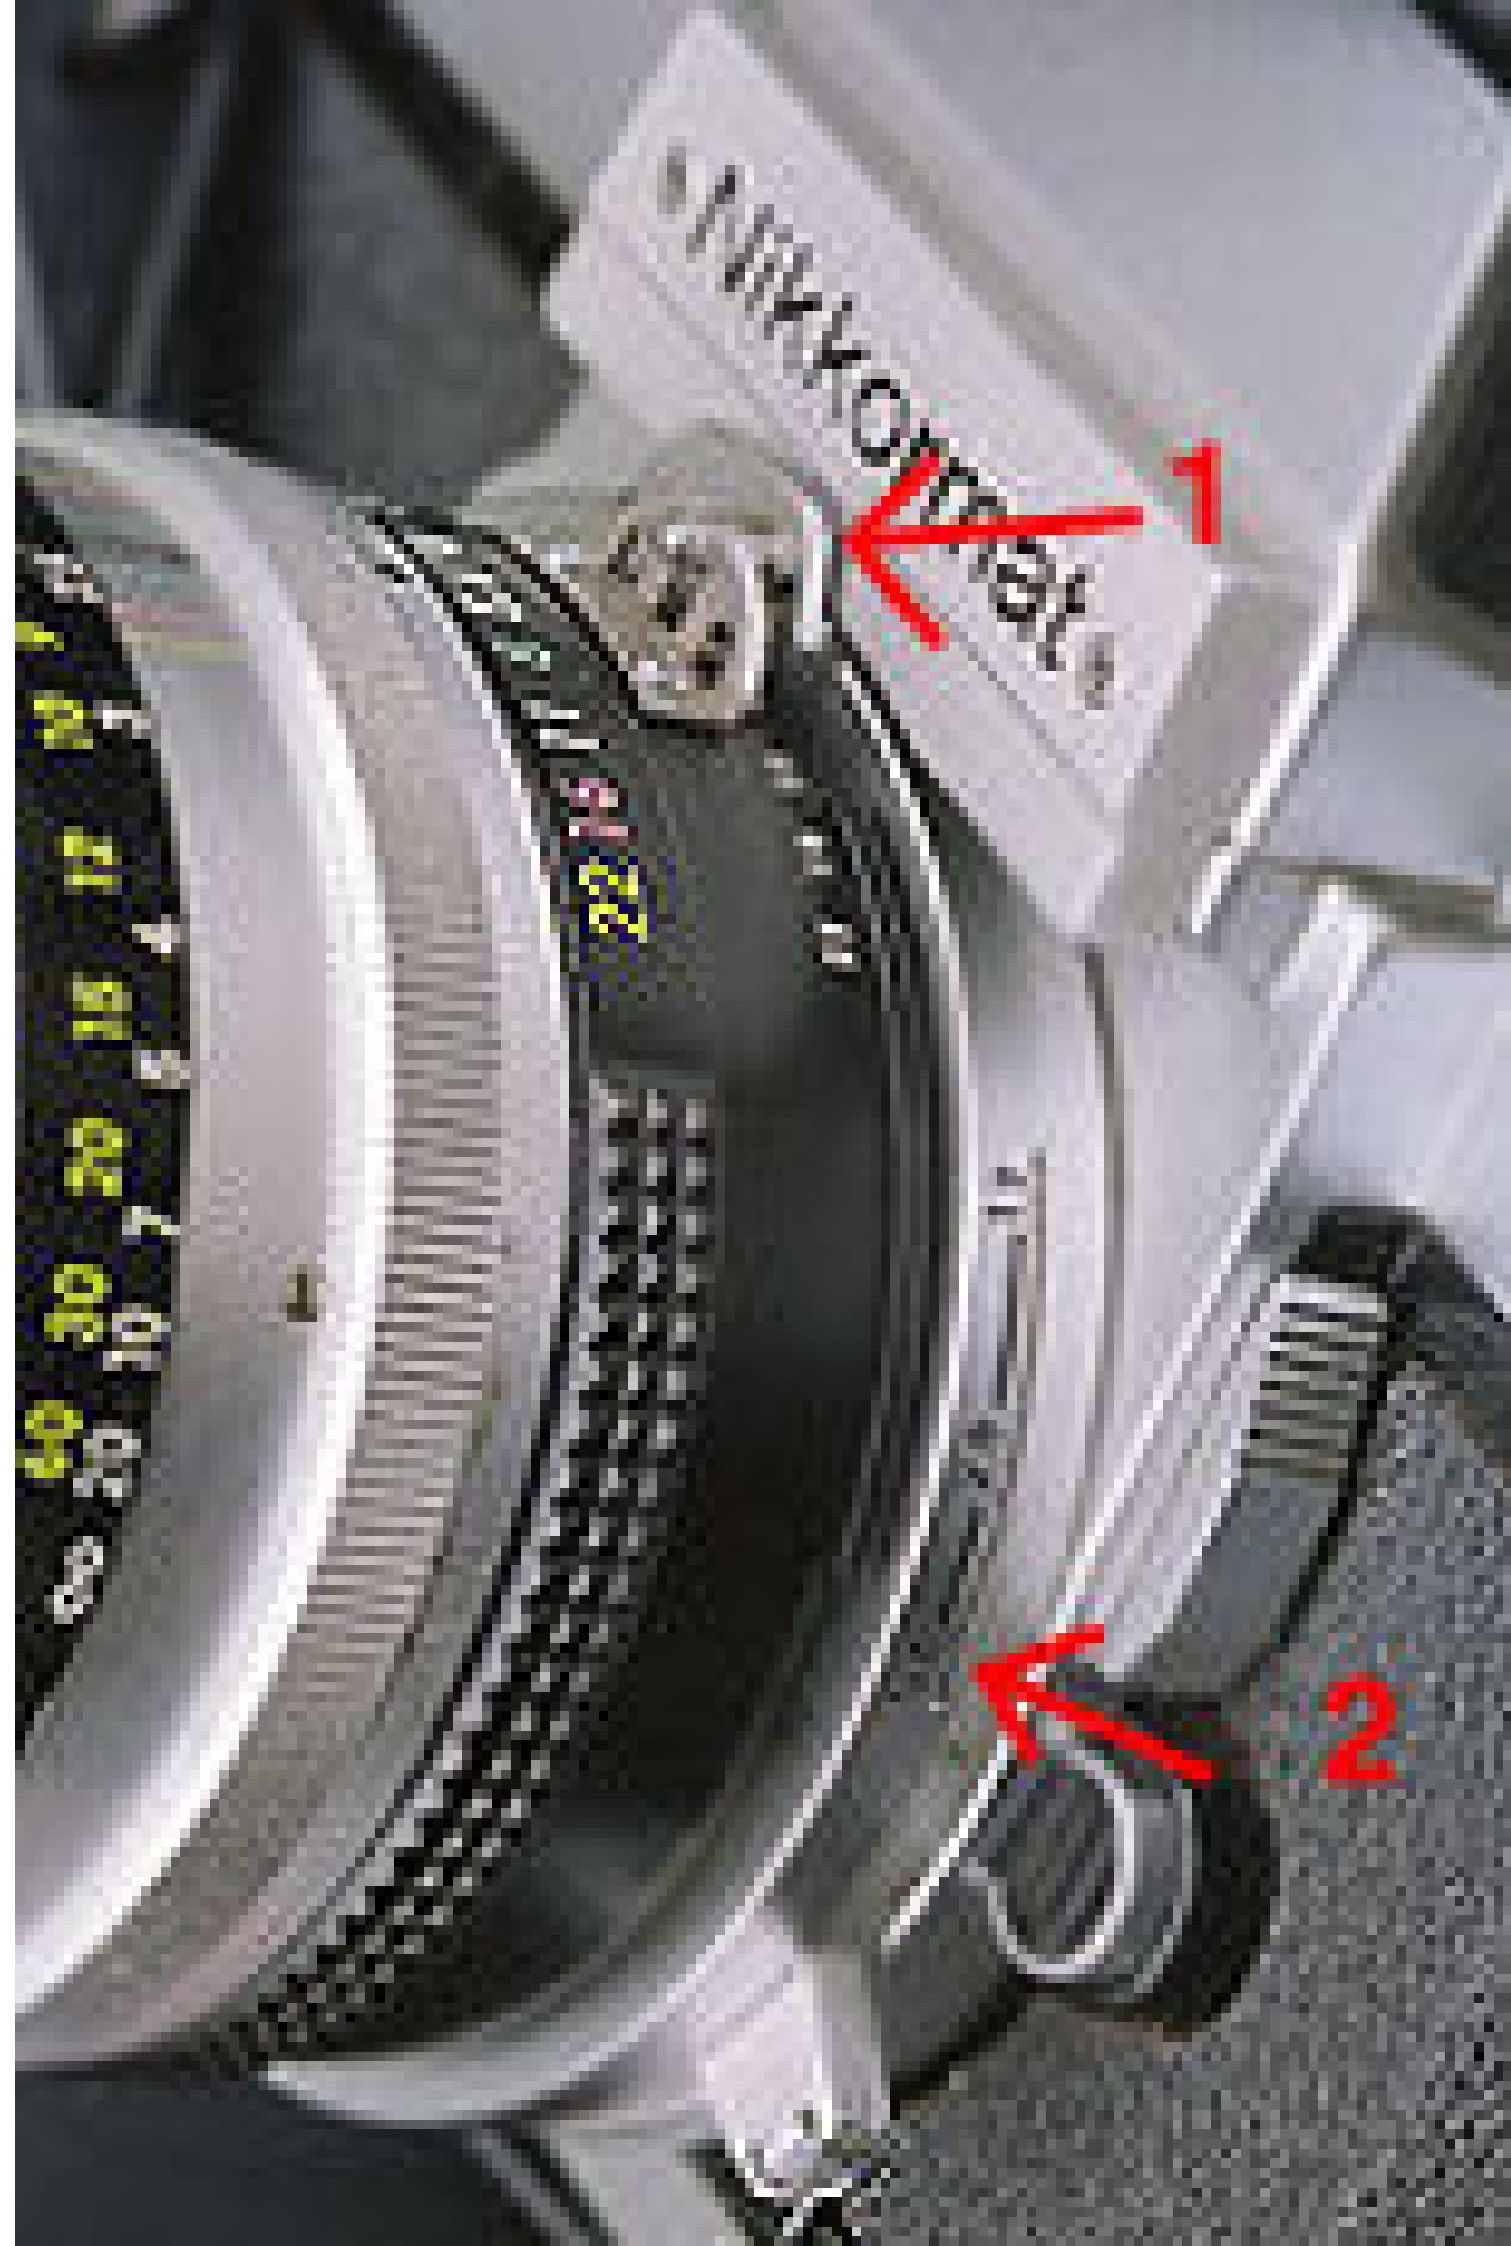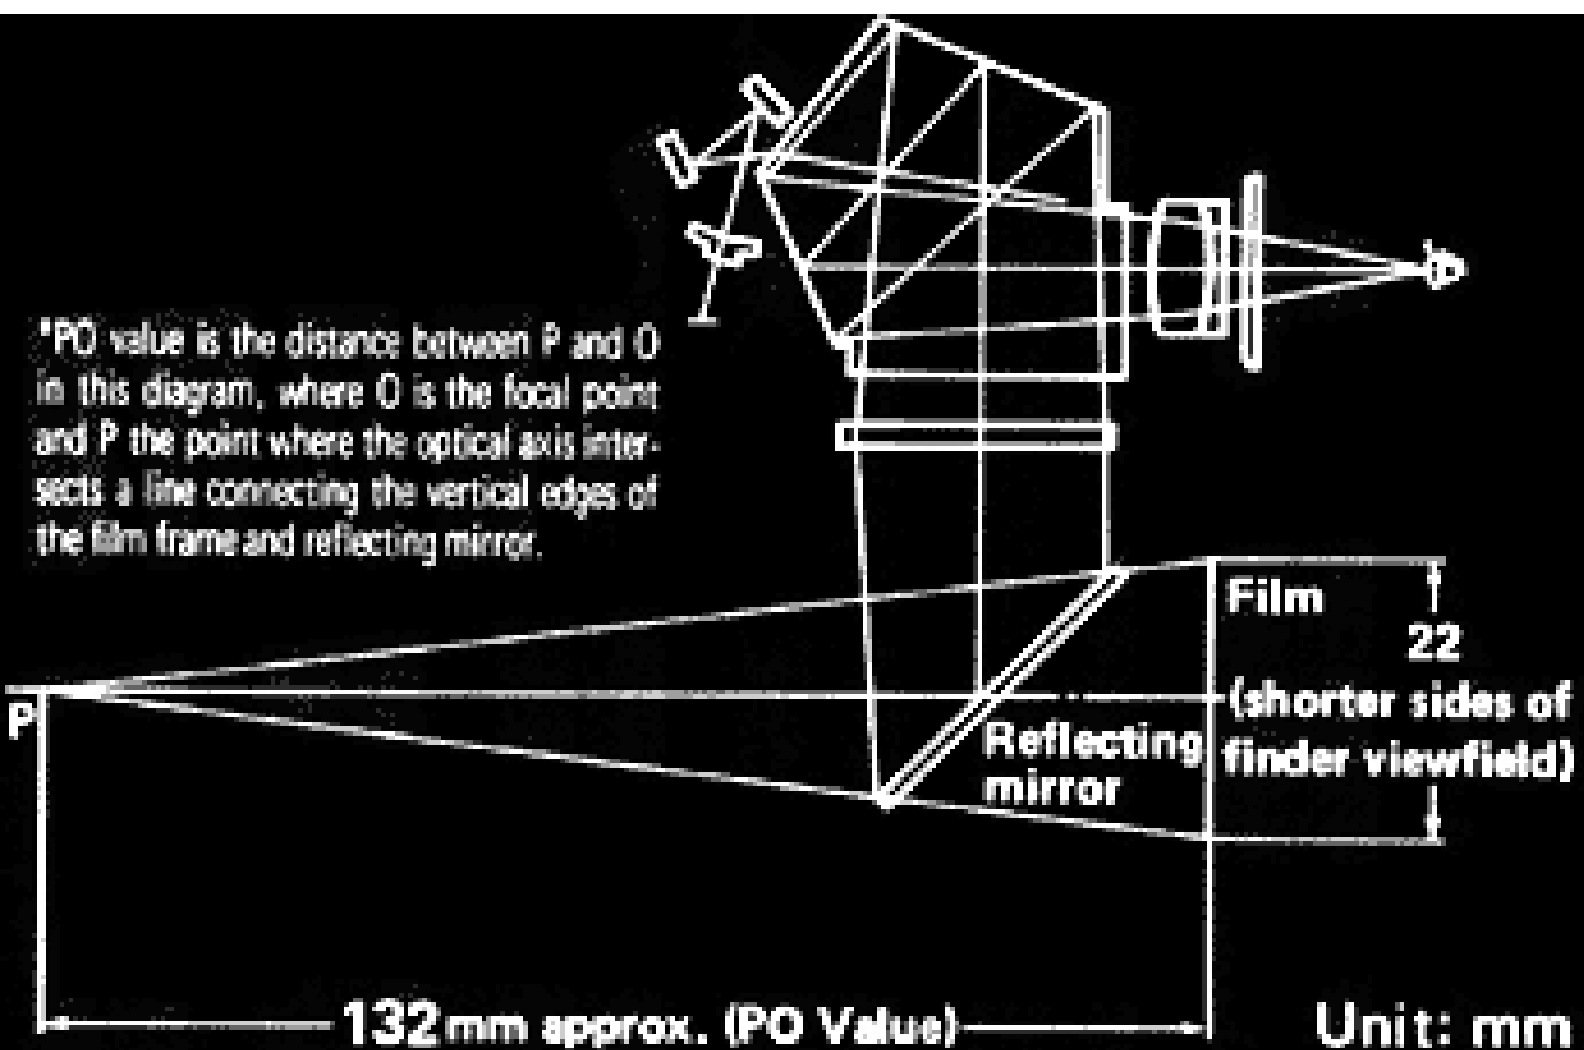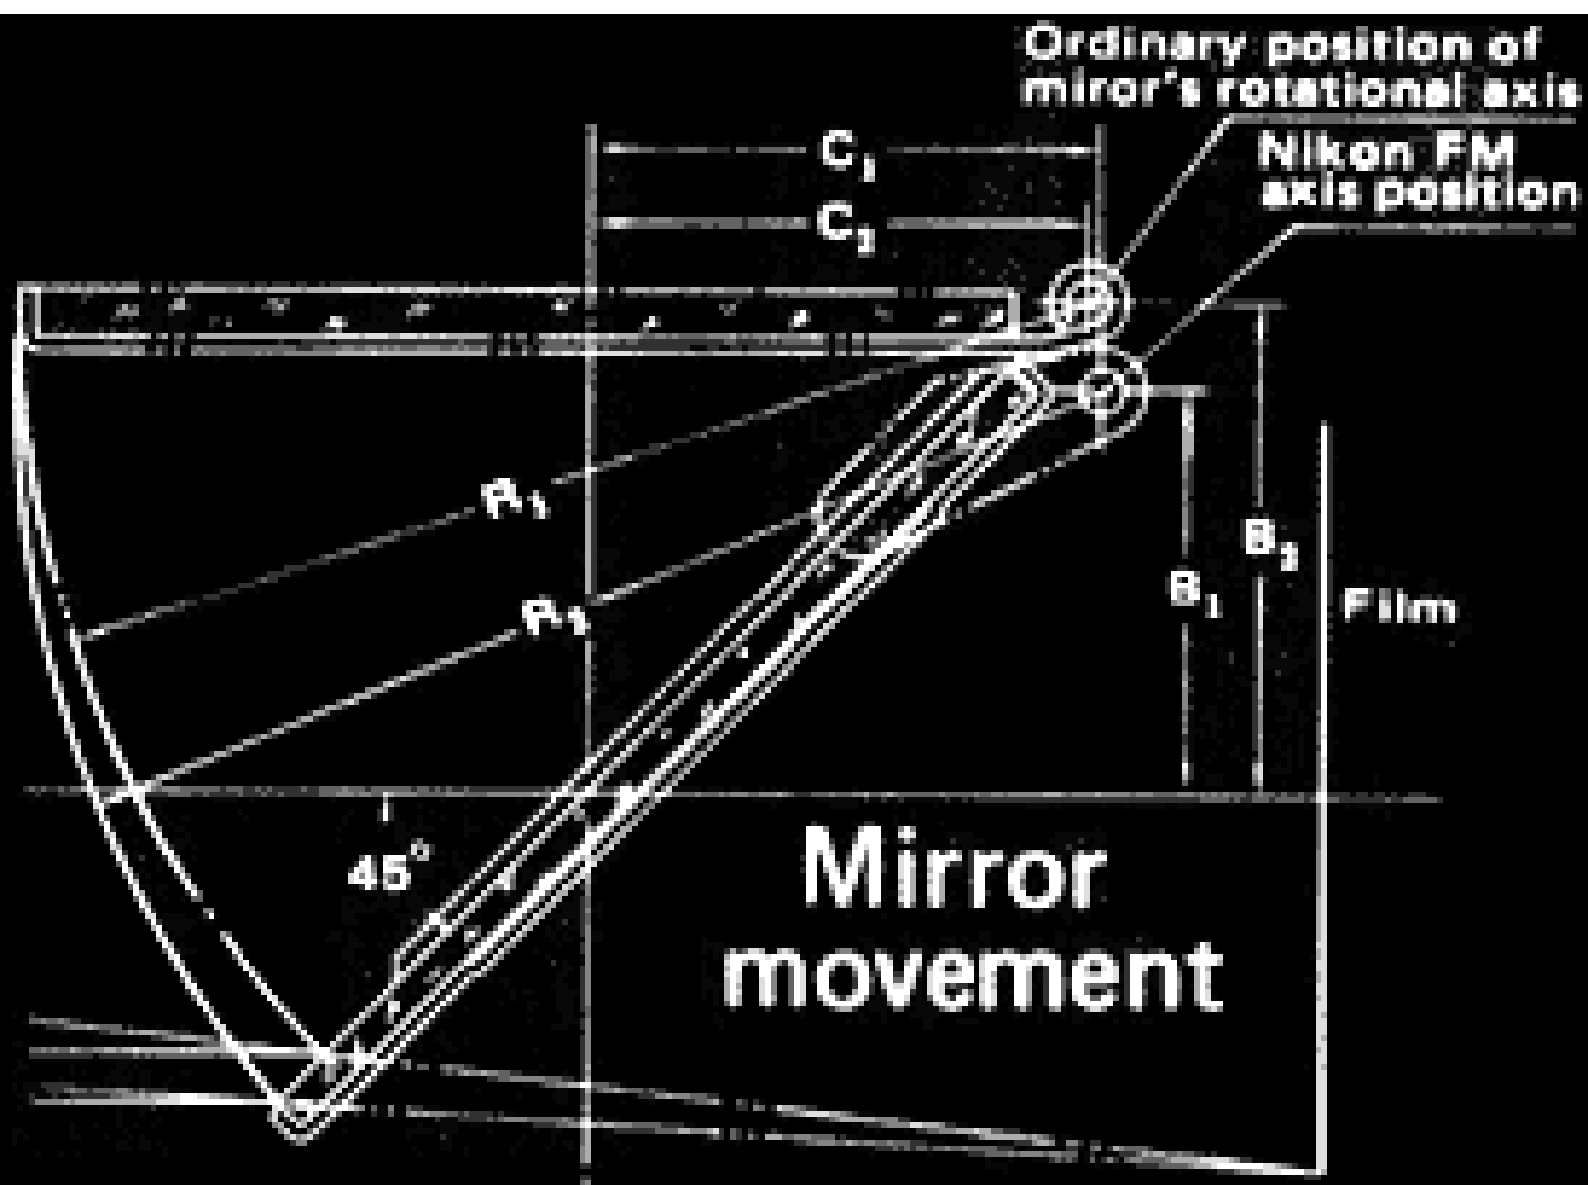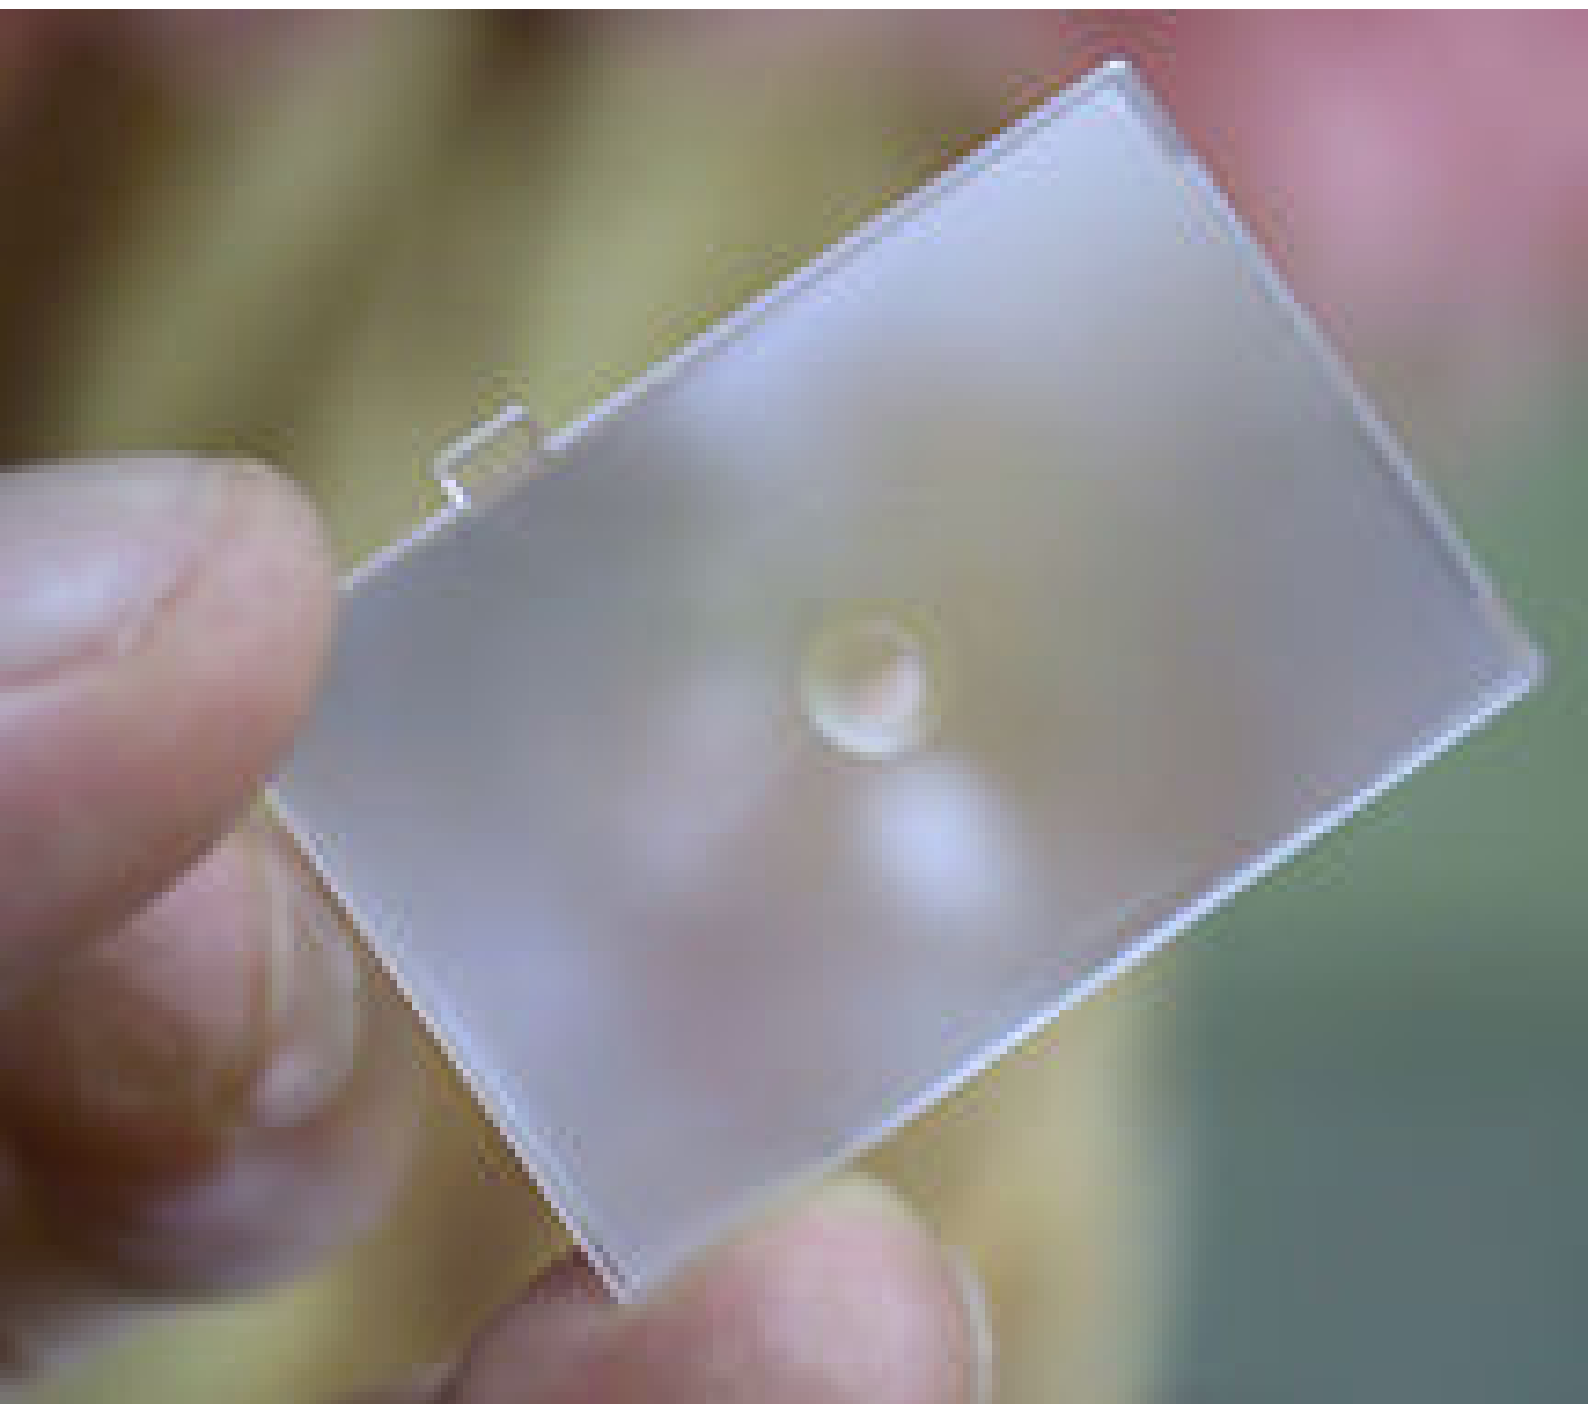    
5

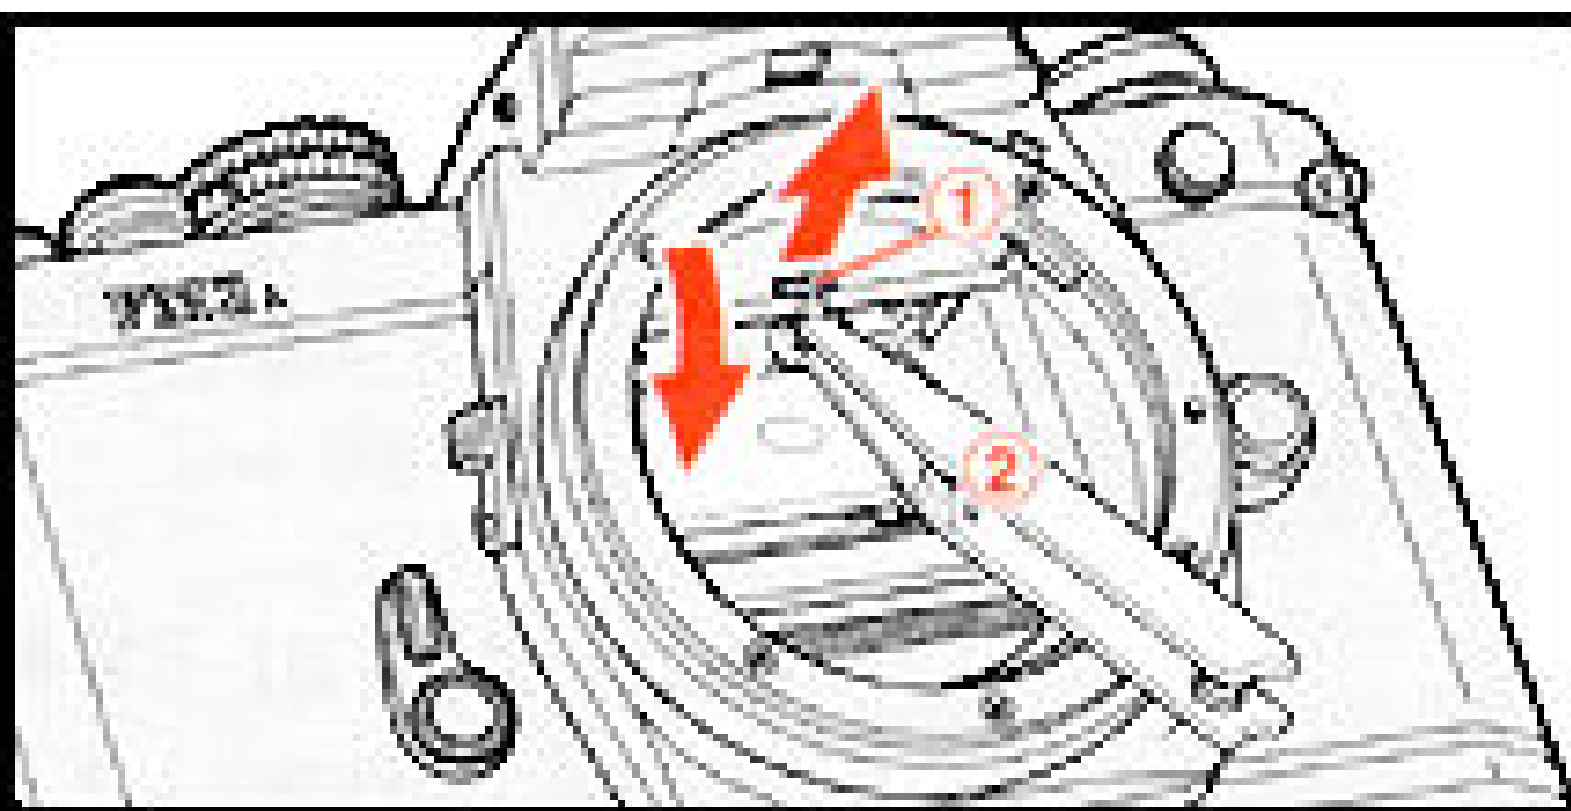 


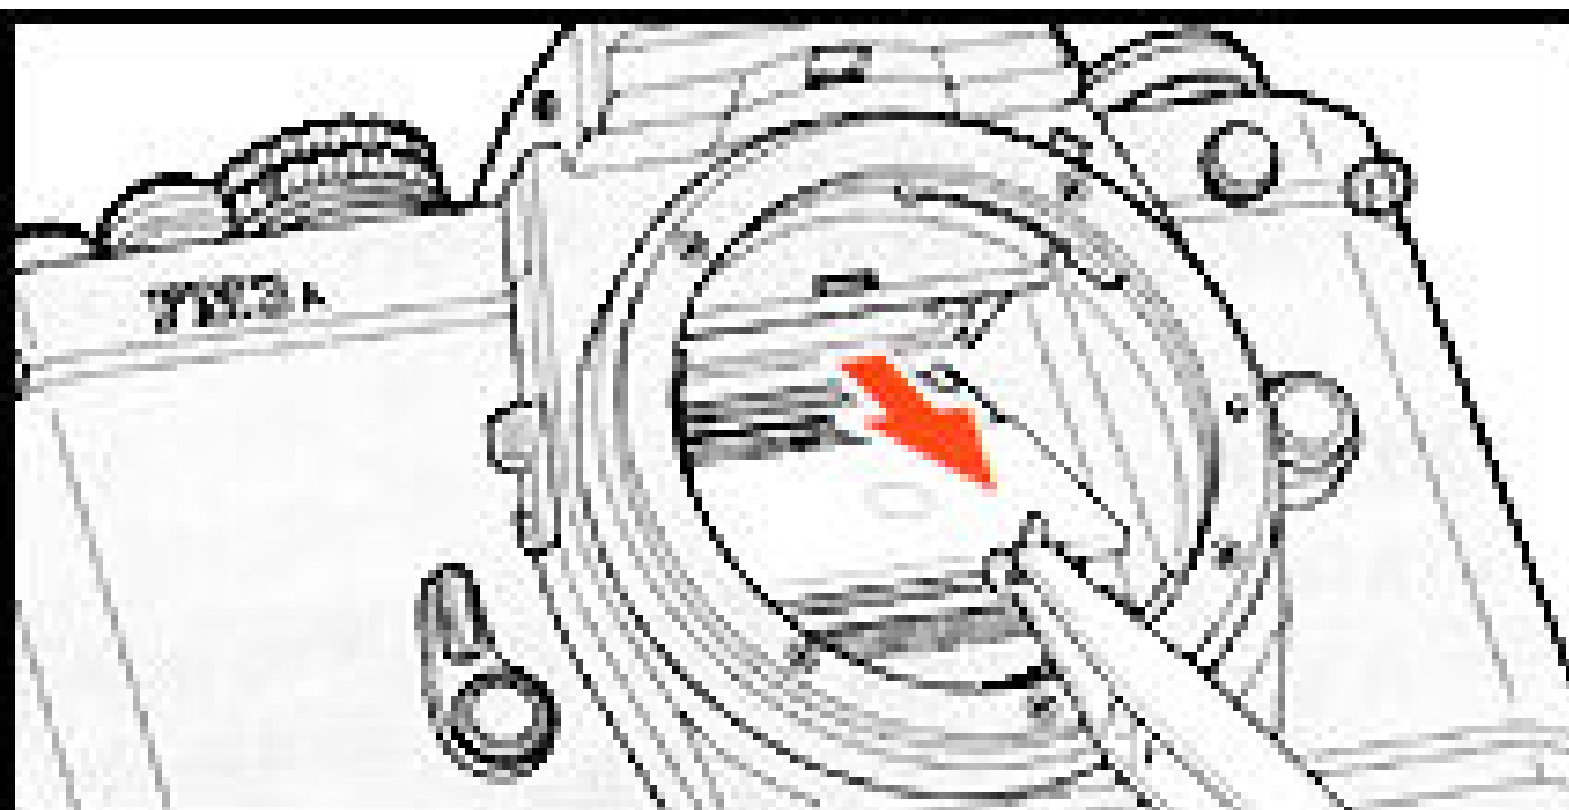 


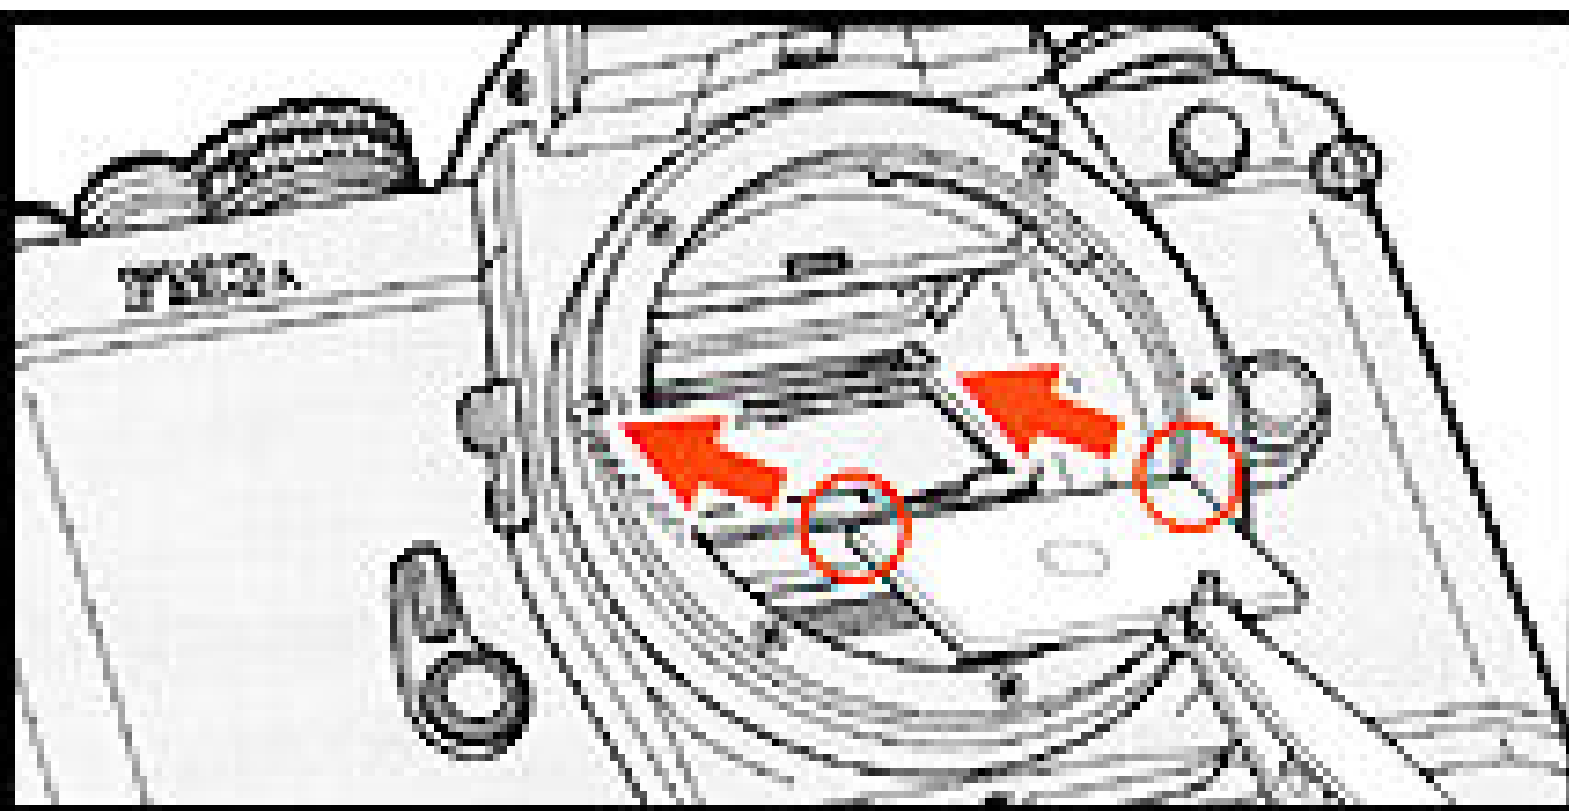 


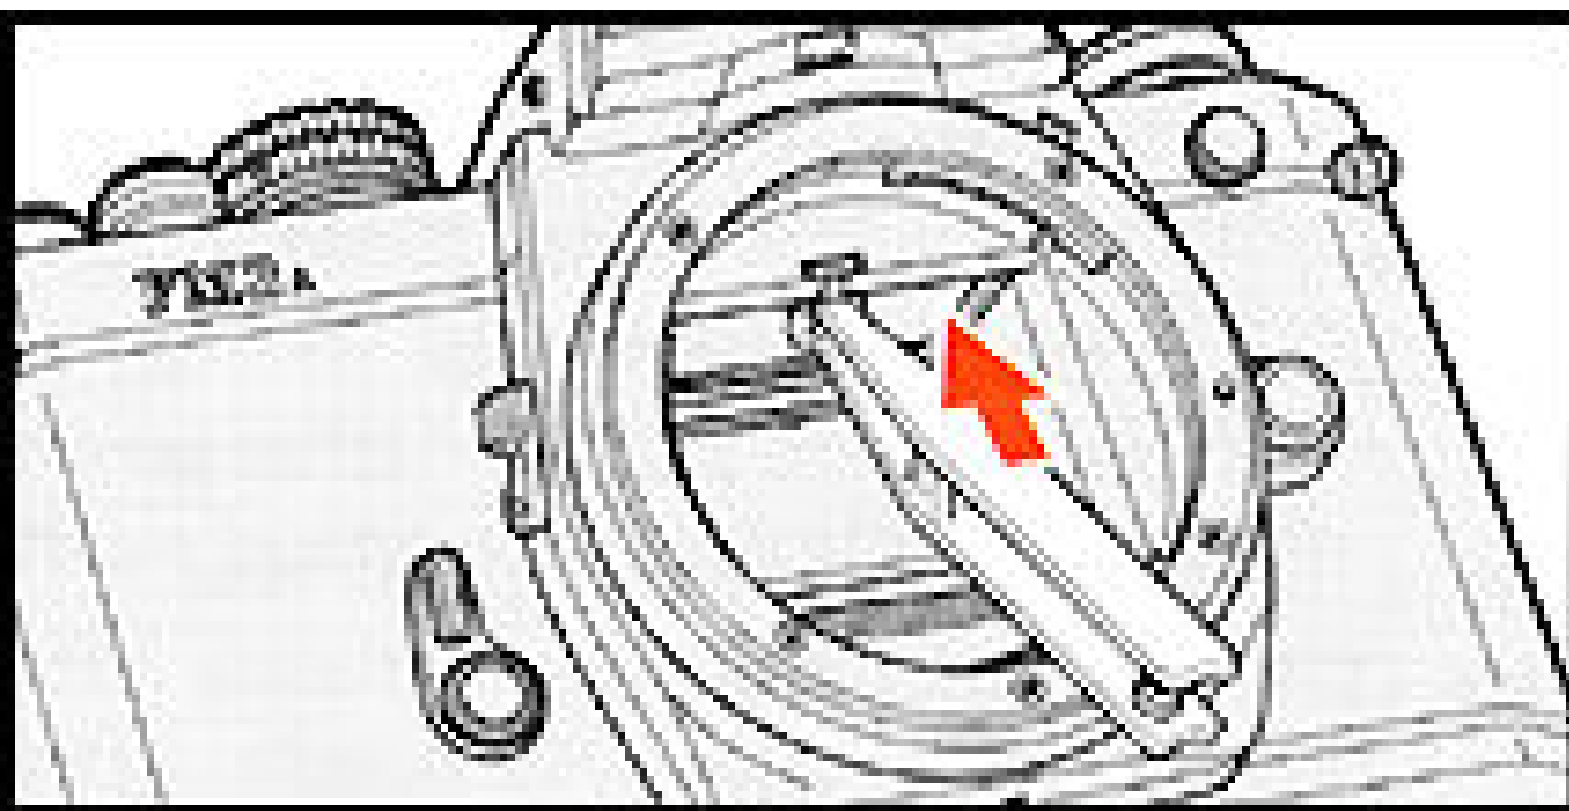 














Laser Matte

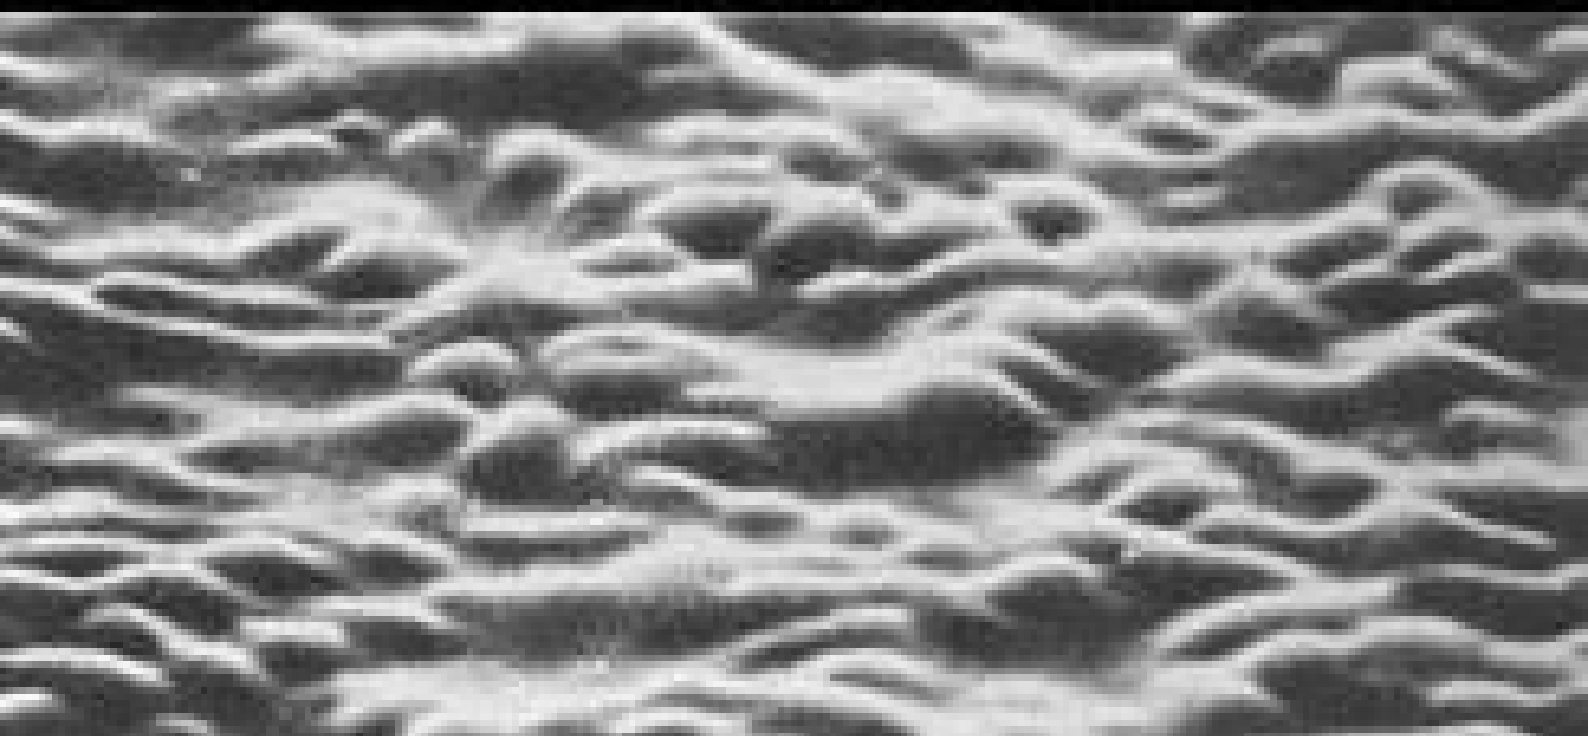 


Sandblasting

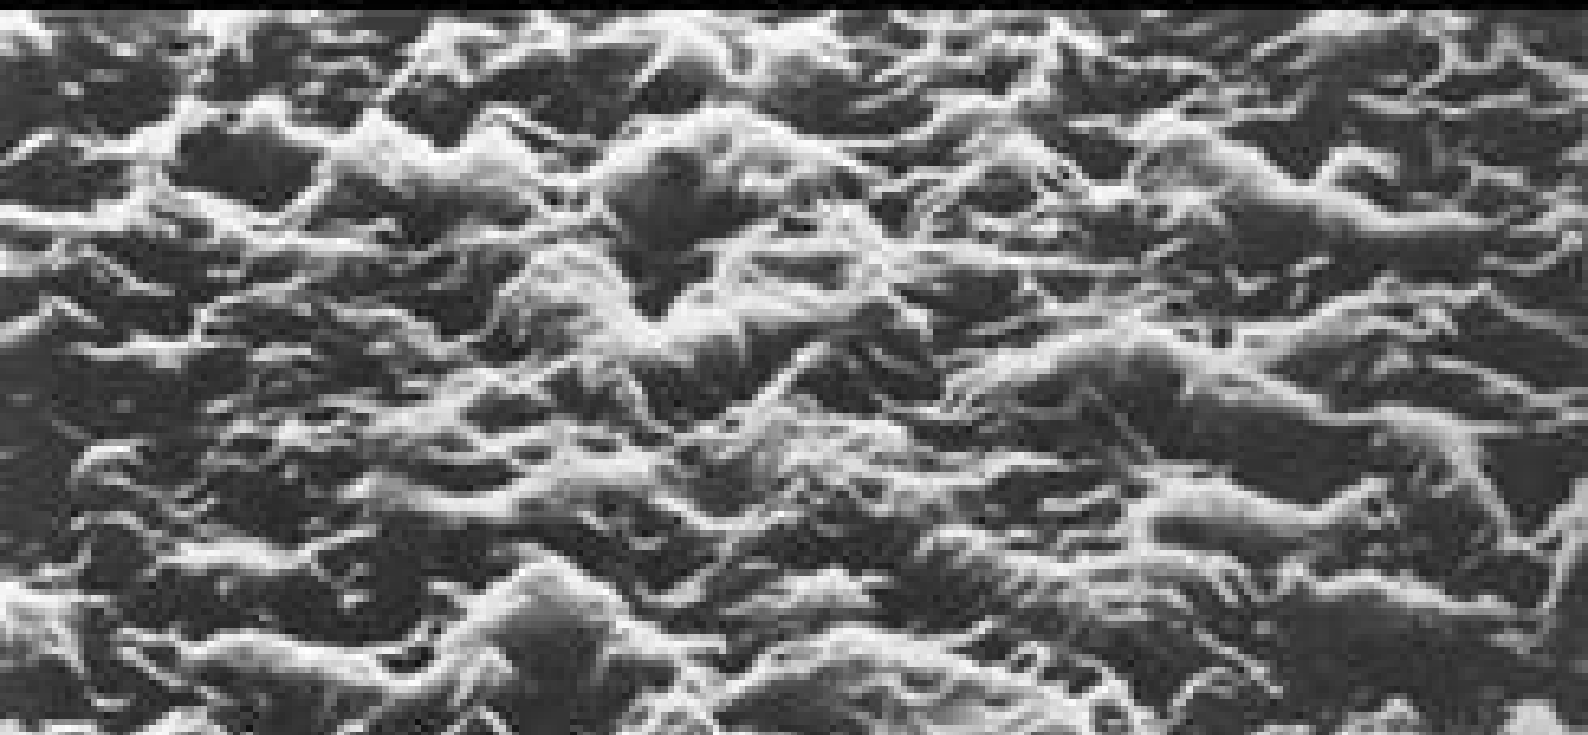 






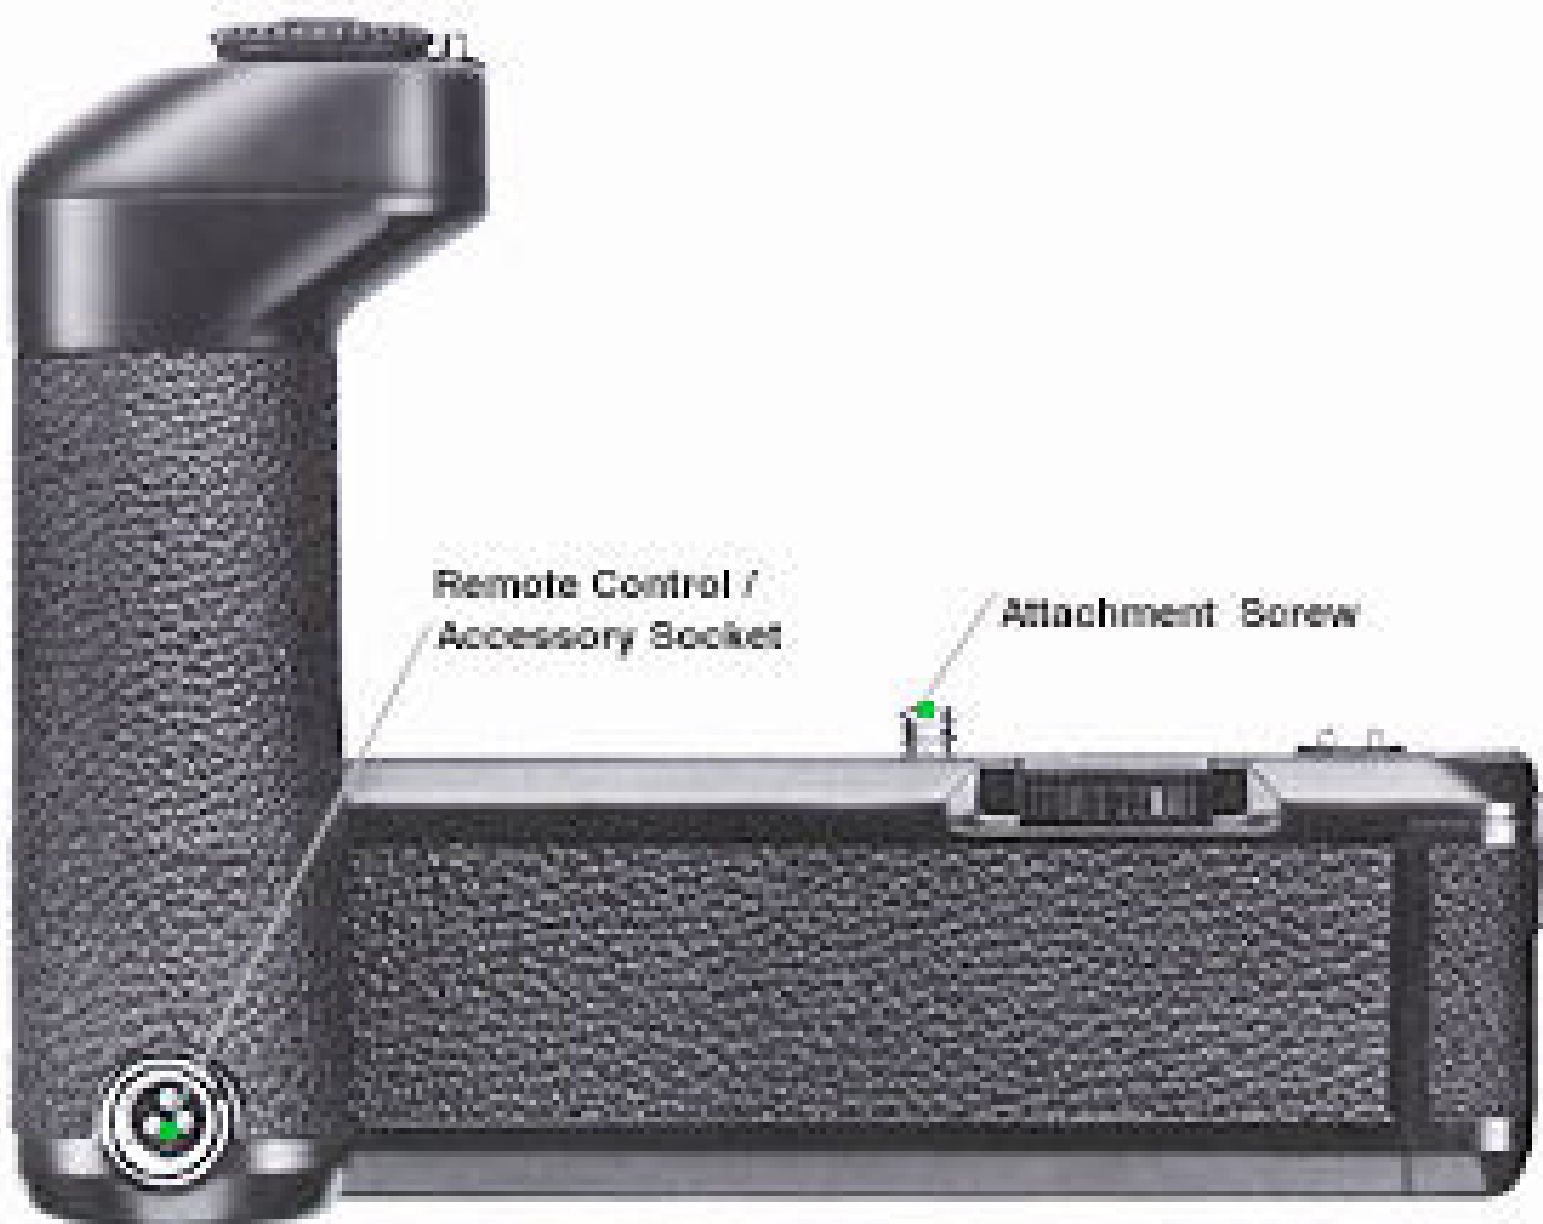 


Remote Control /
Accessory Socket

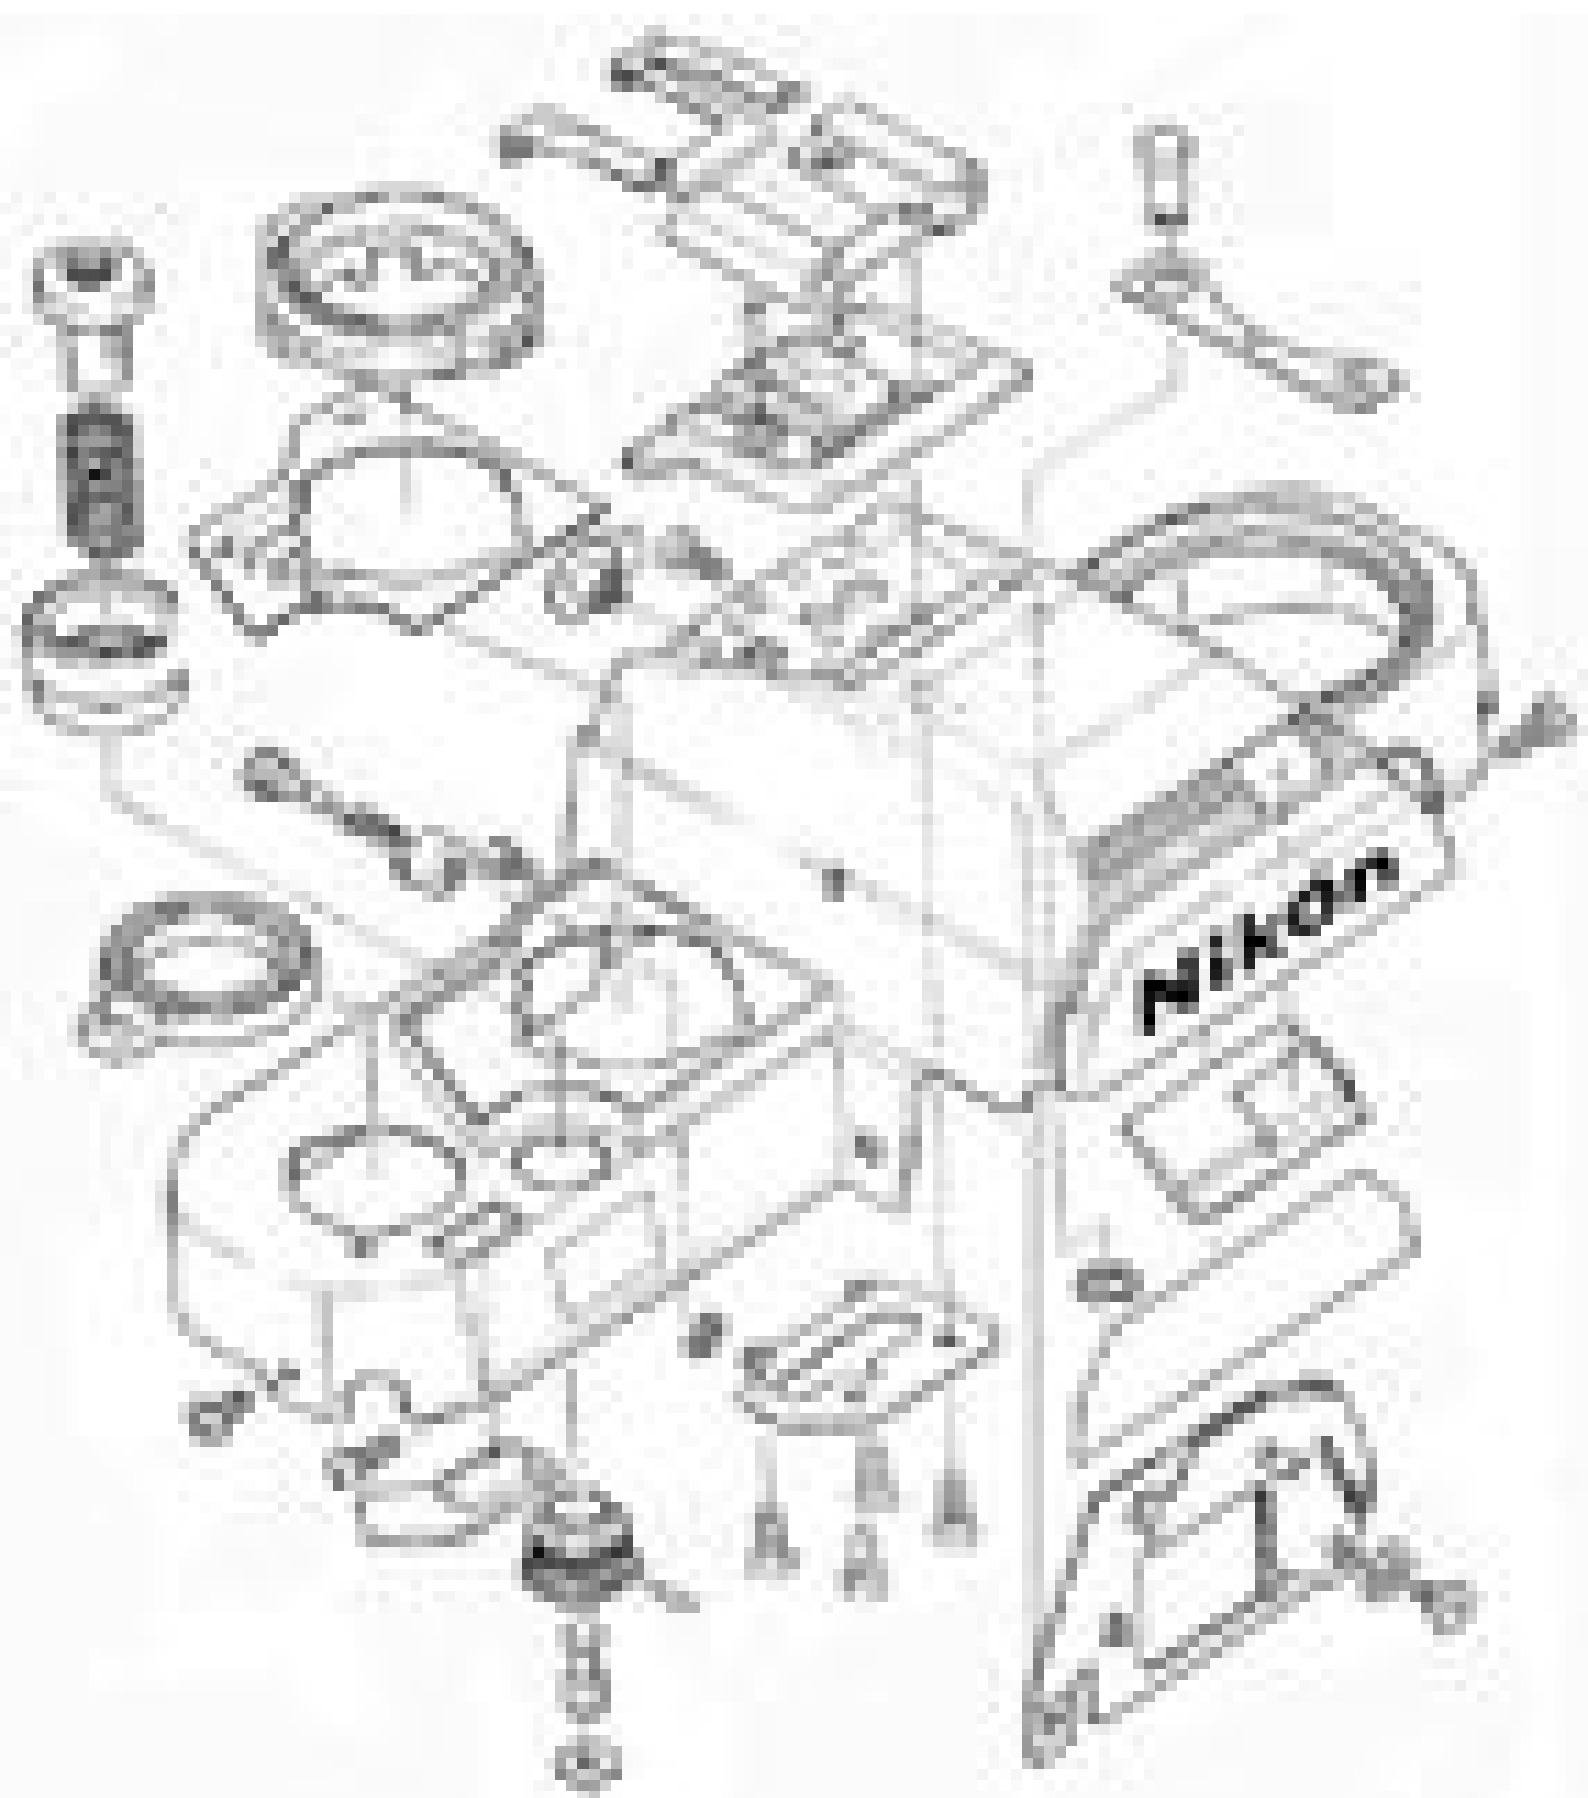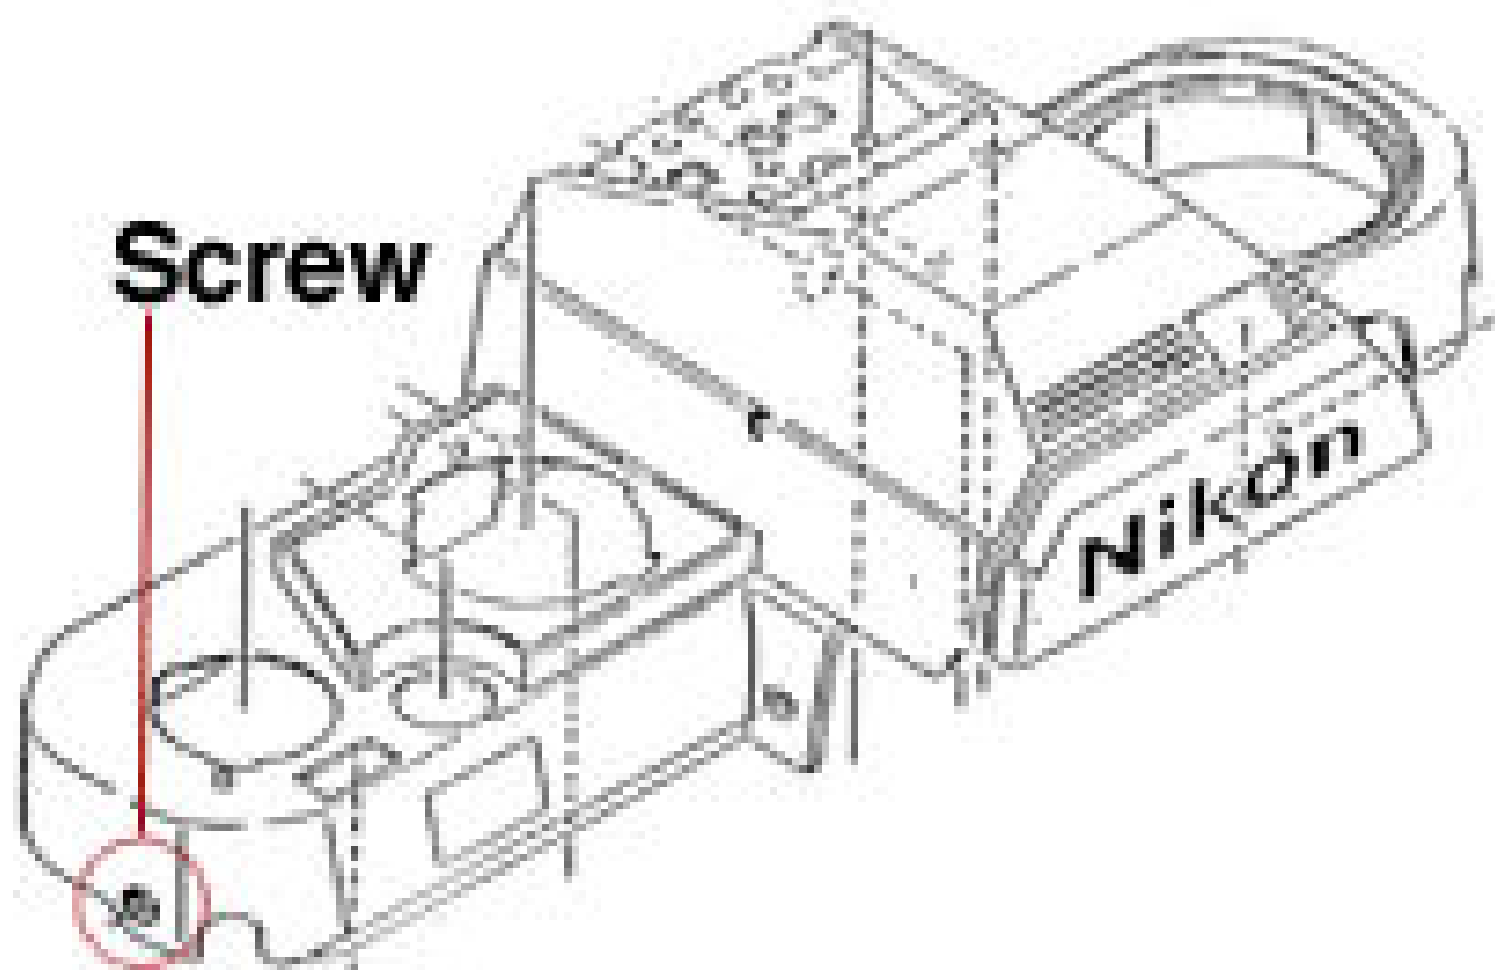  Attachment Screw










Screw










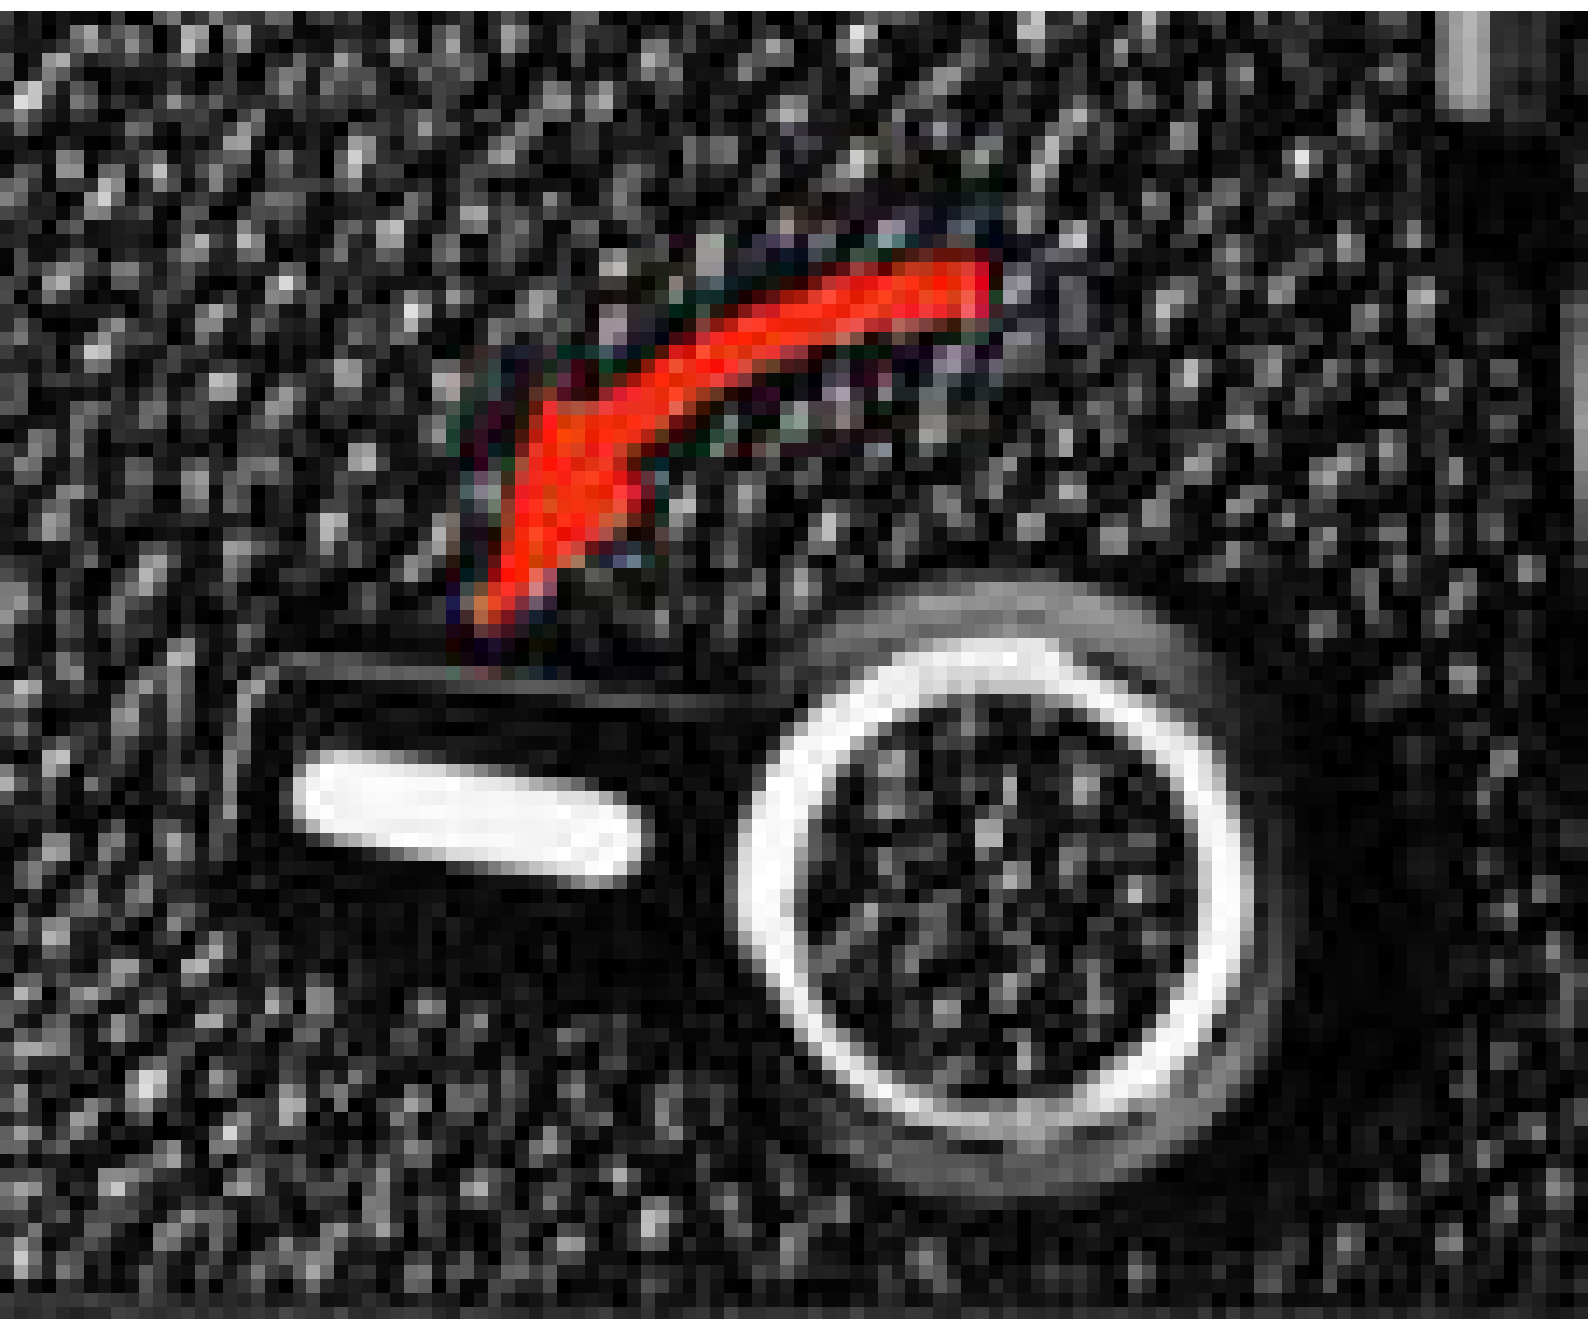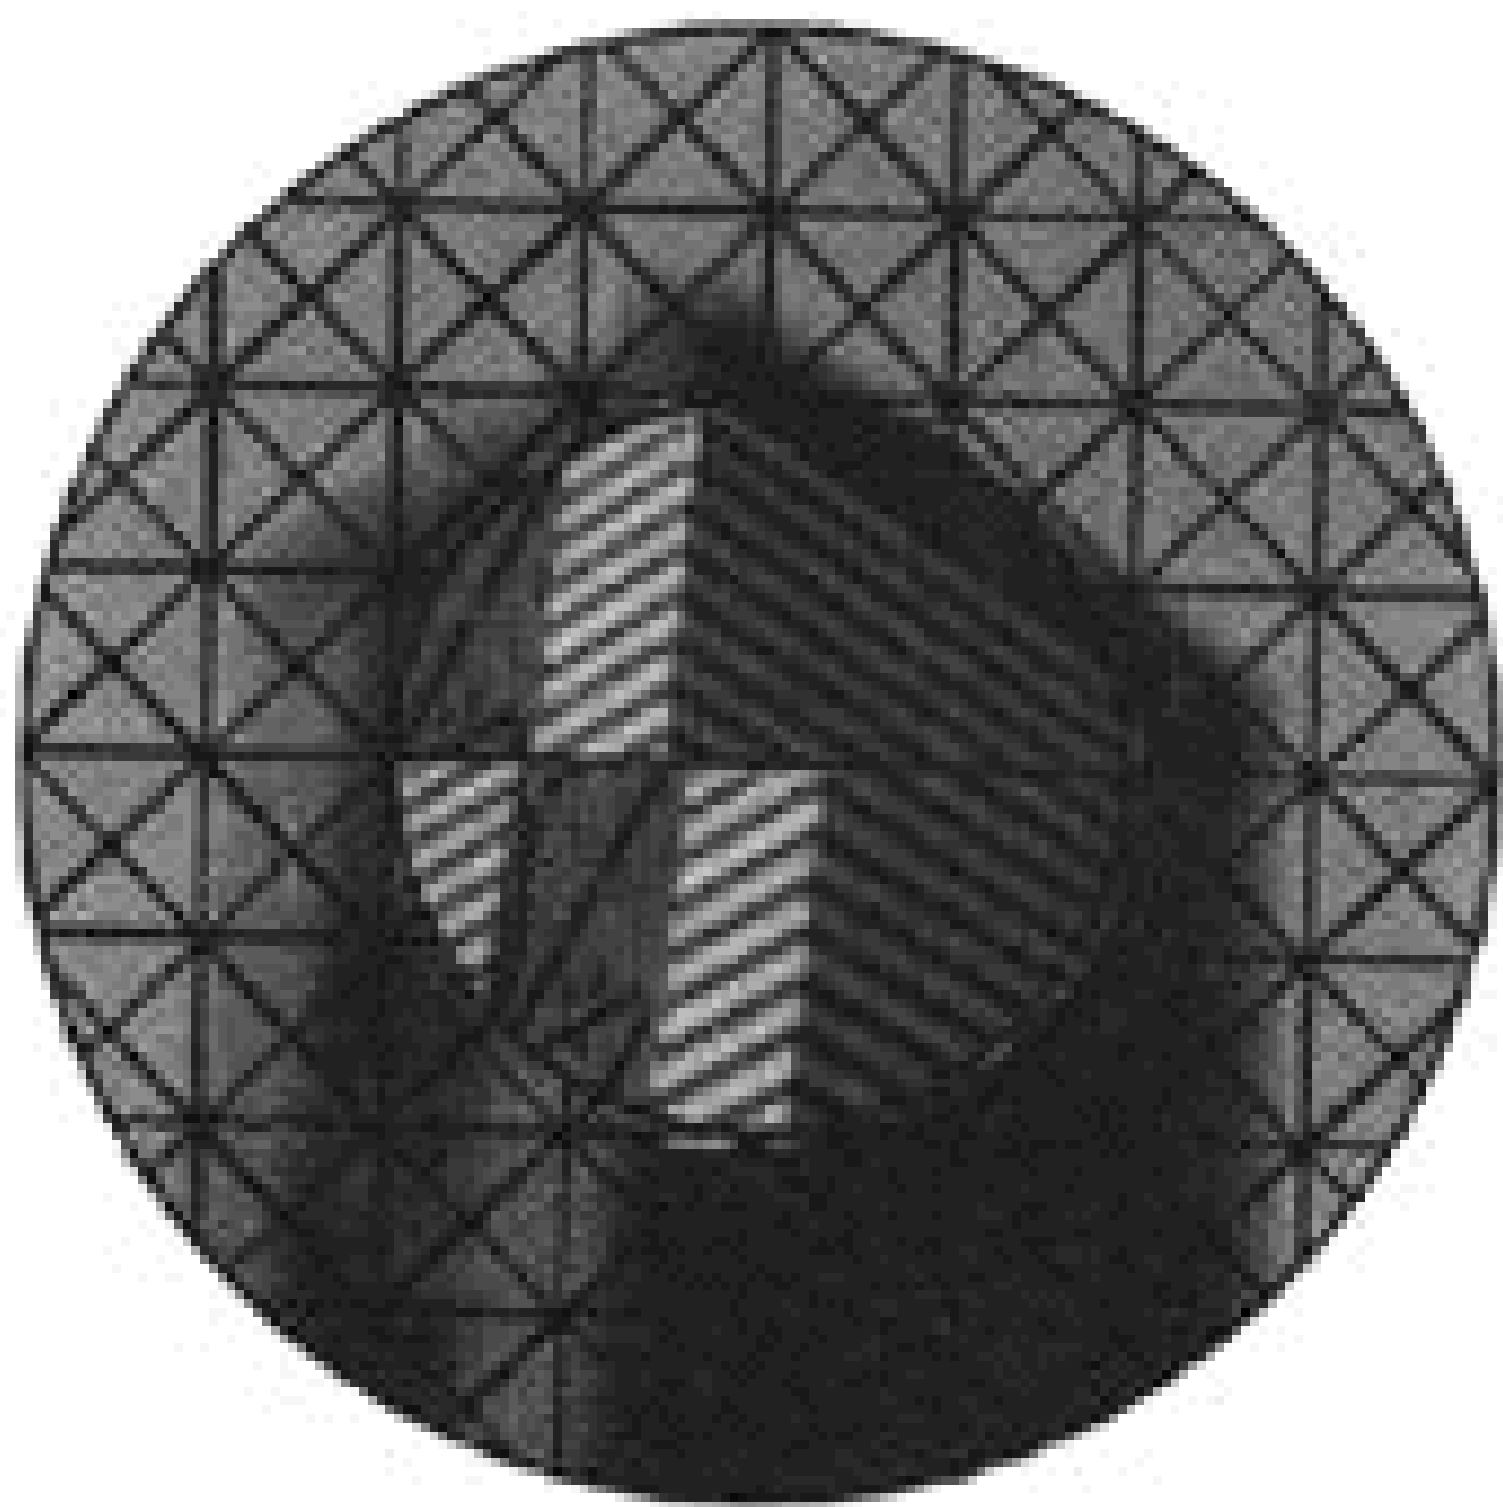  

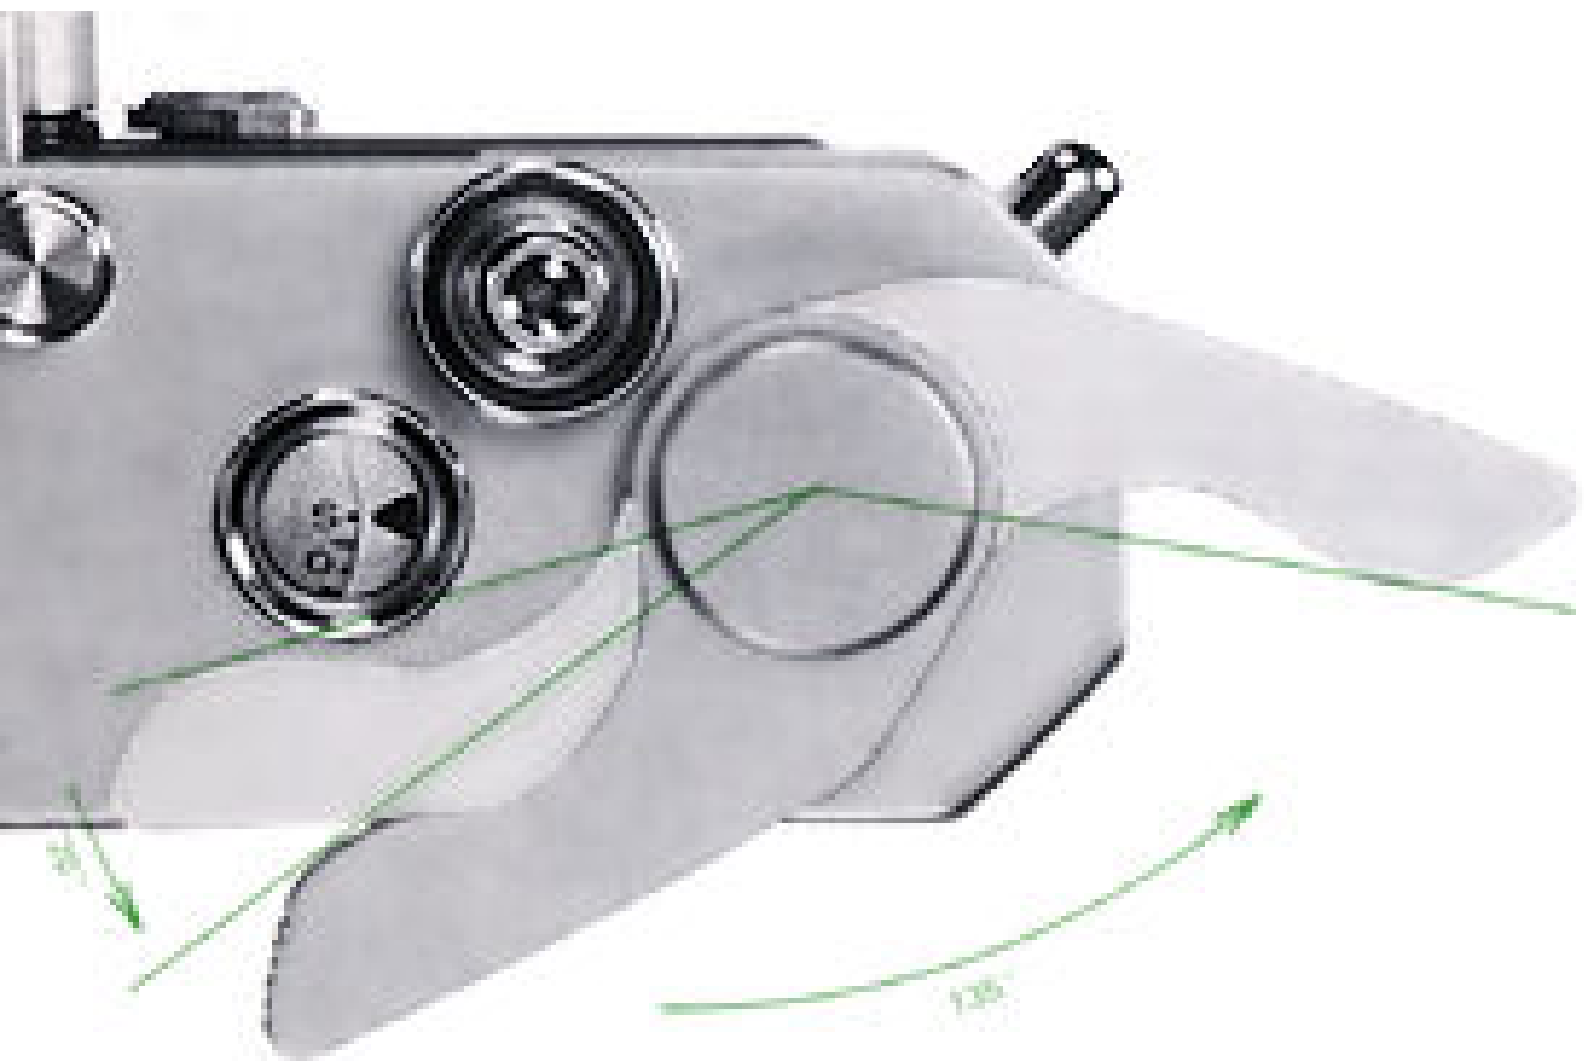 










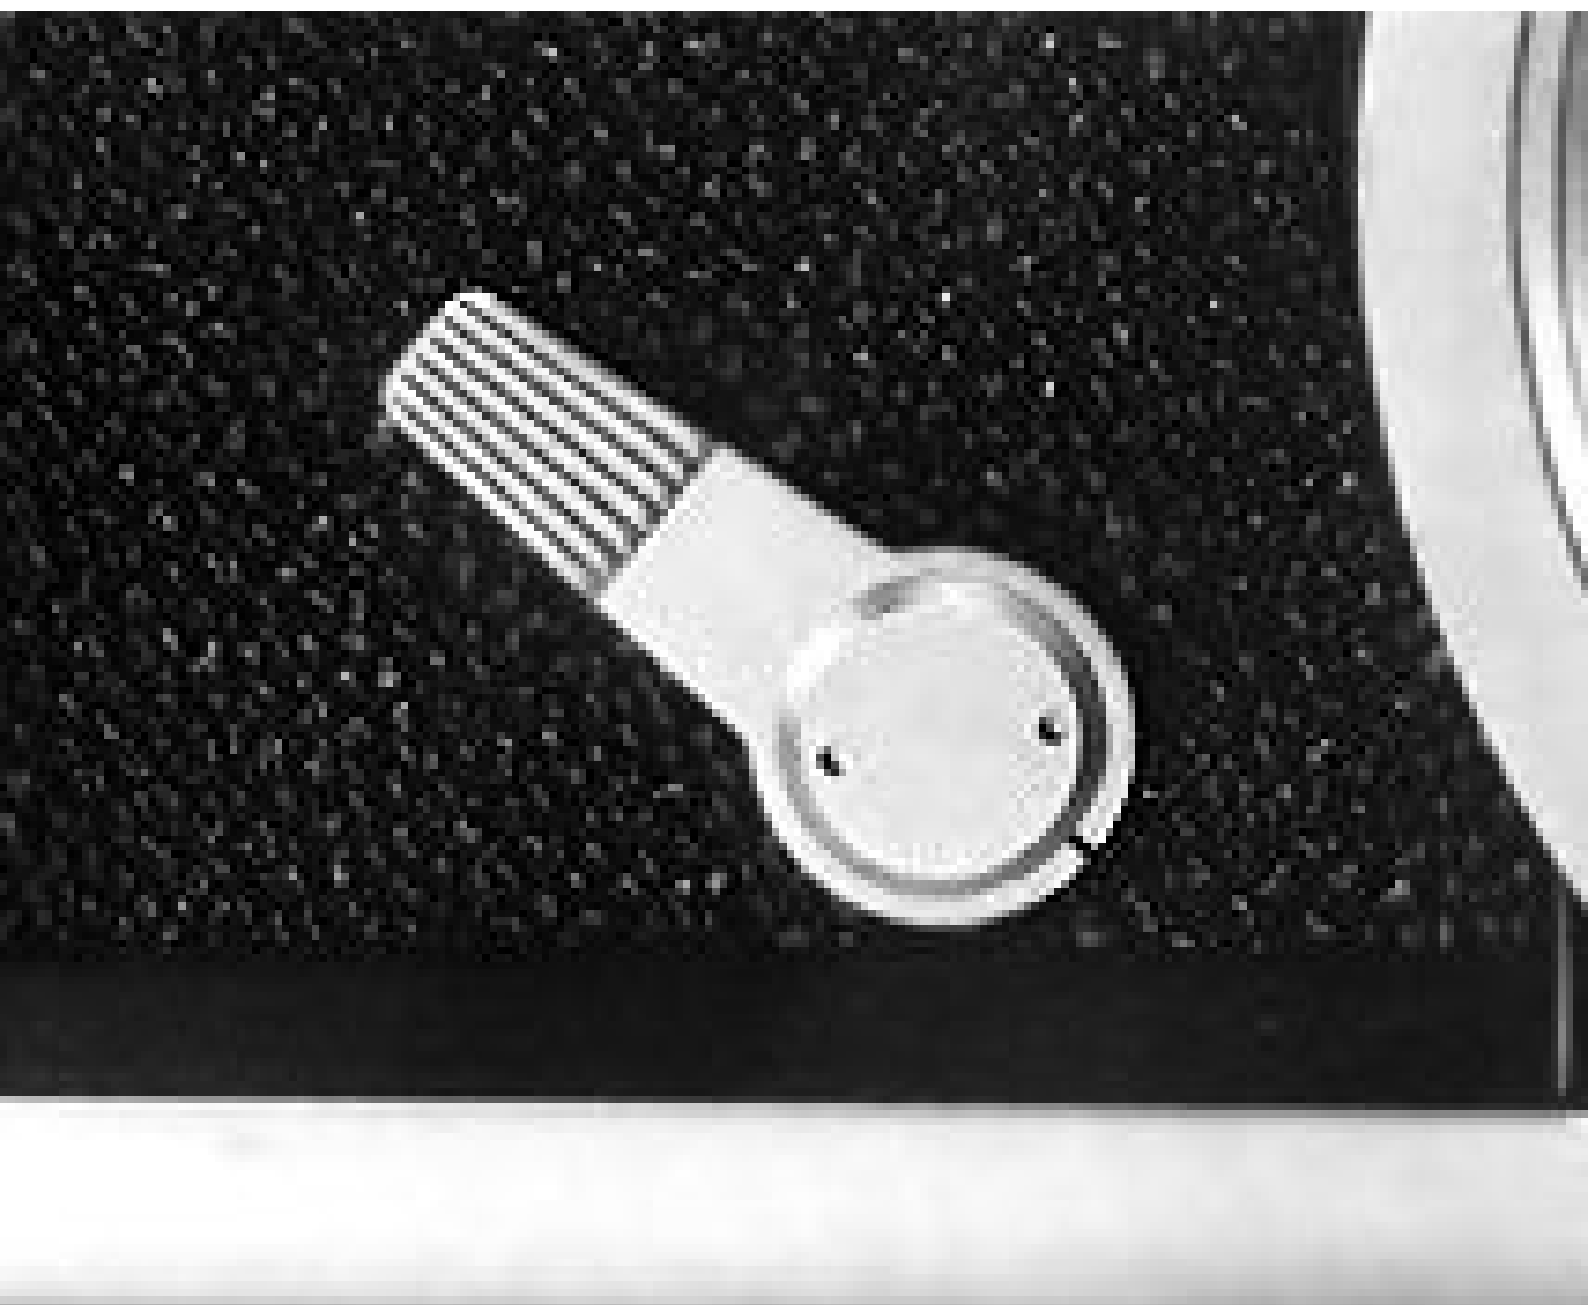 












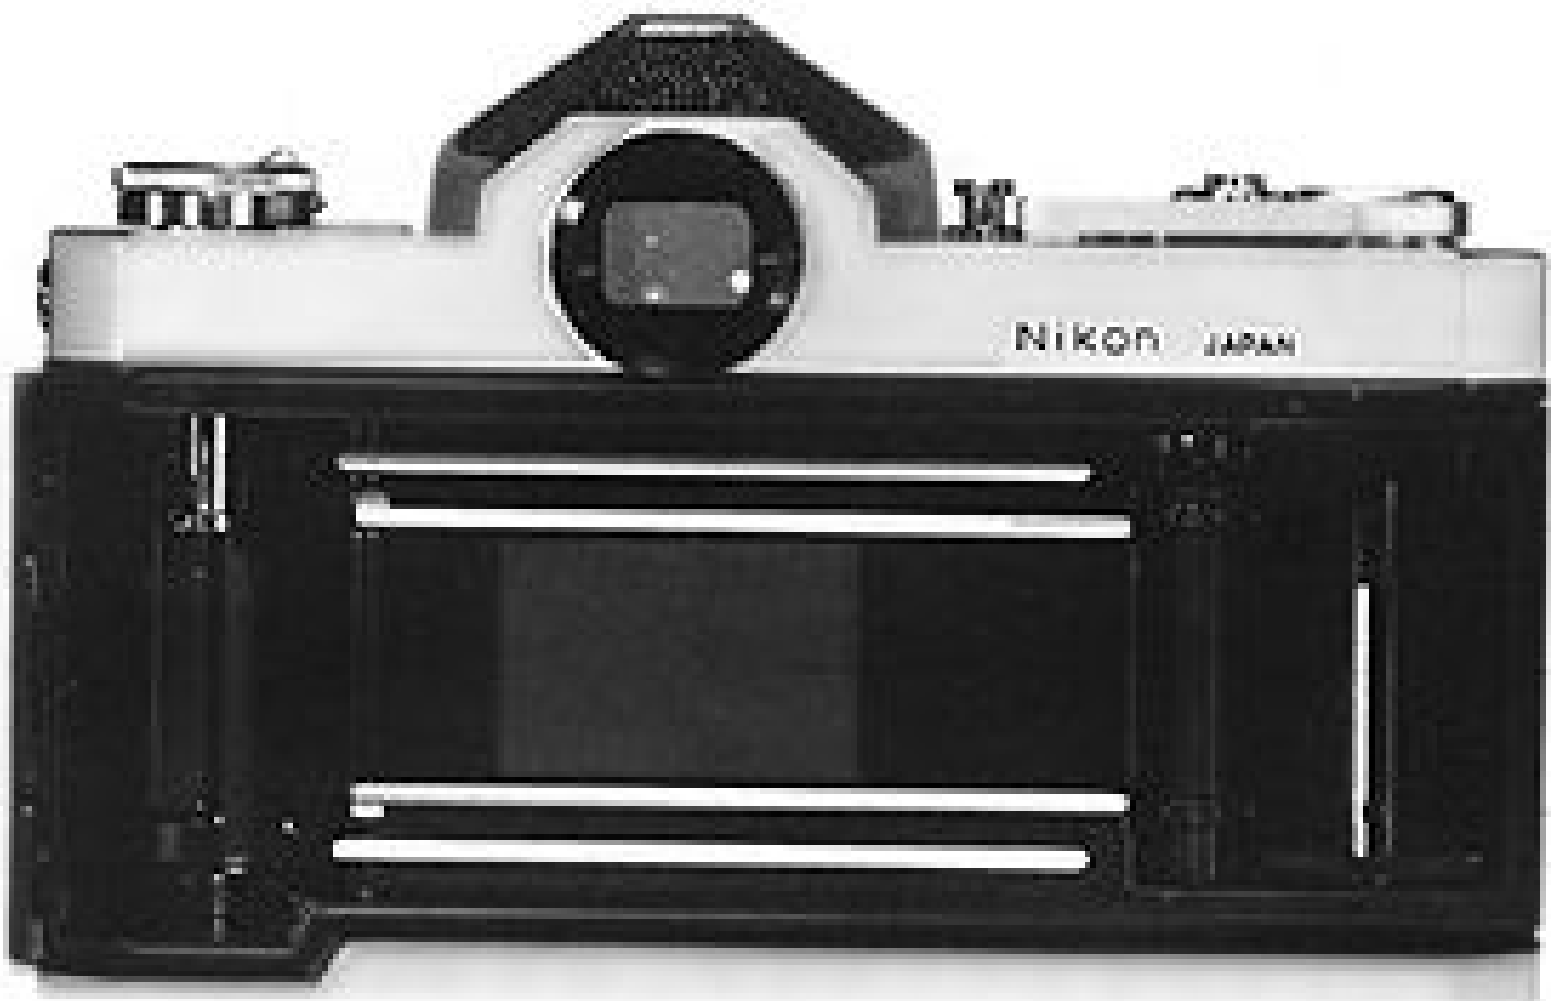 




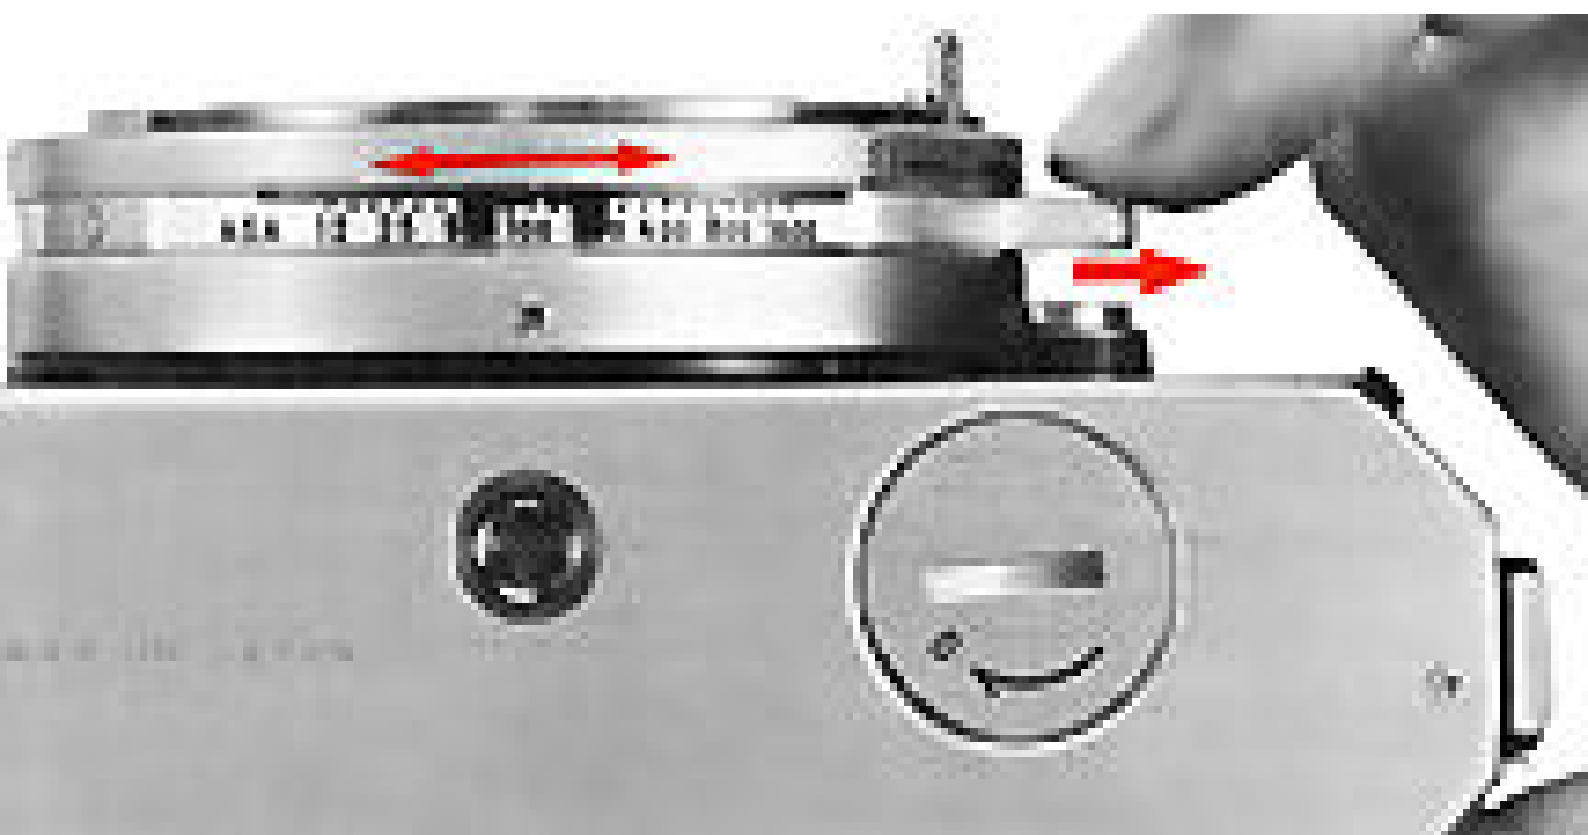 


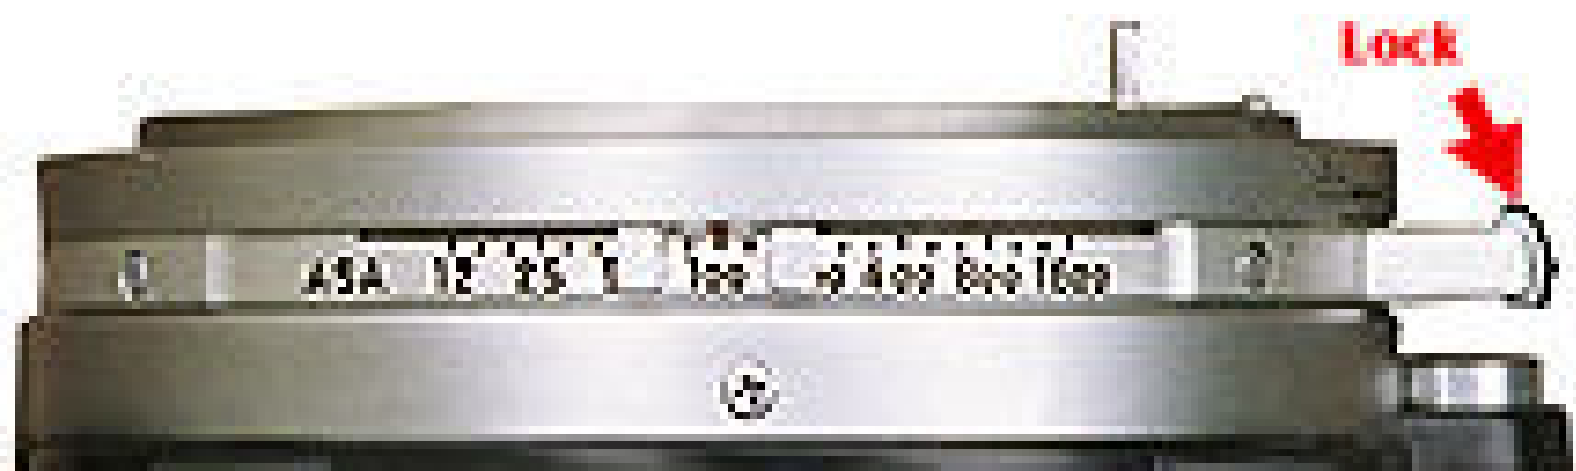 


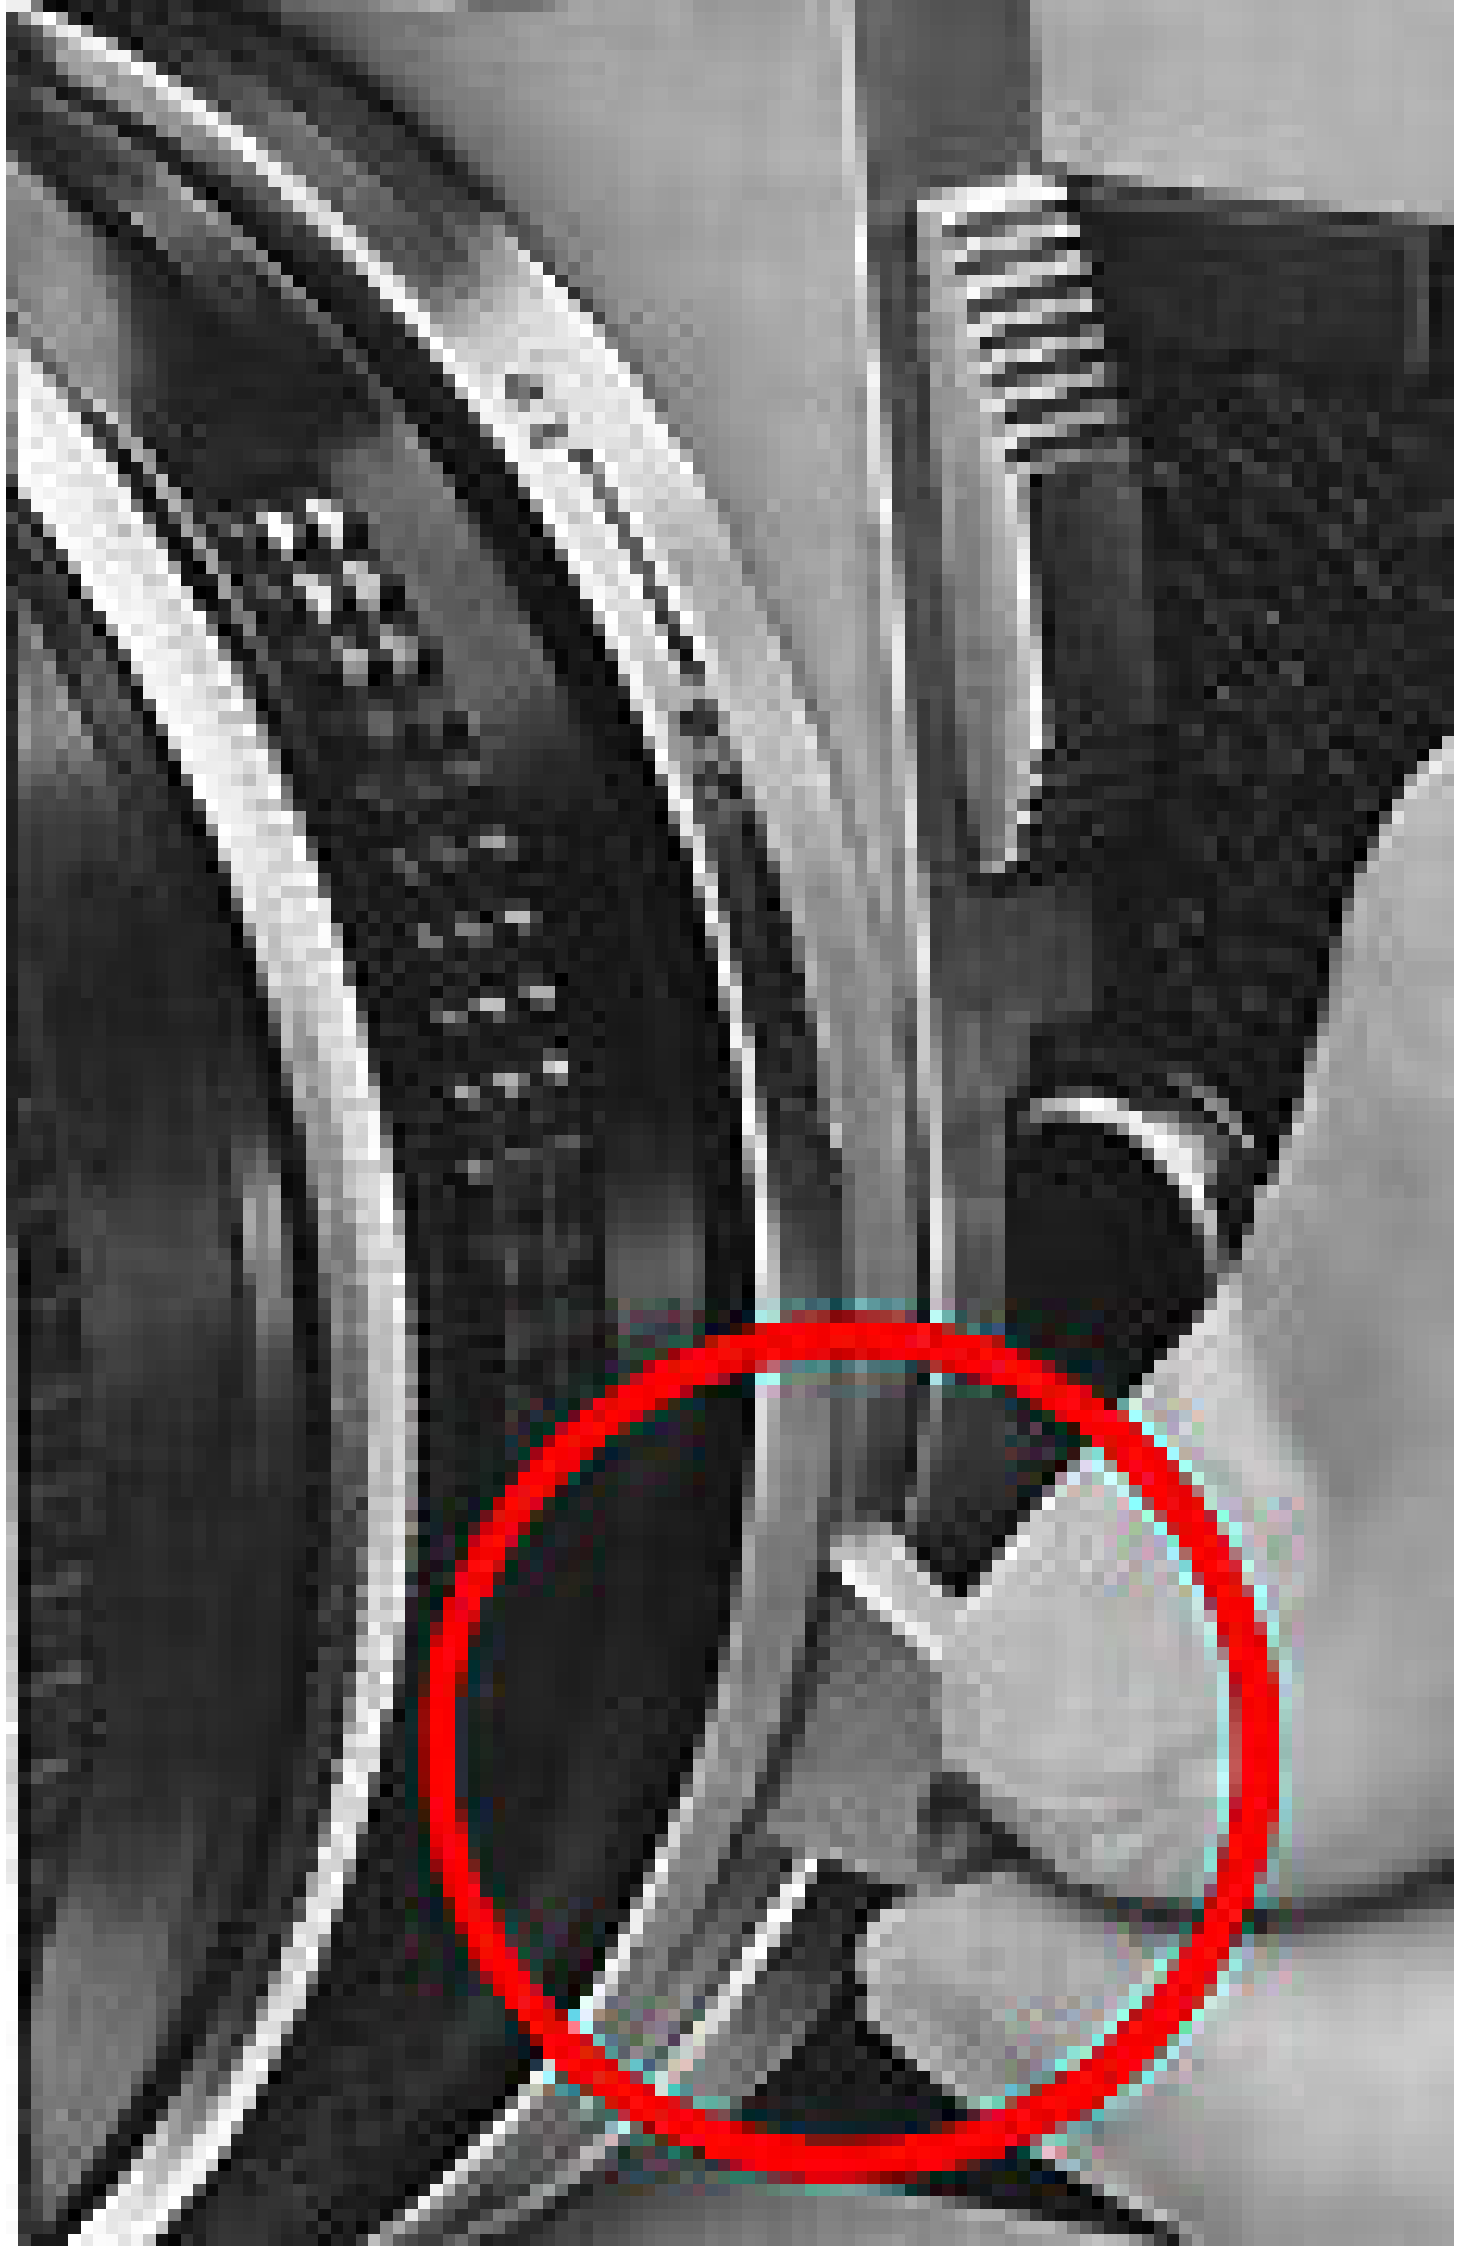 


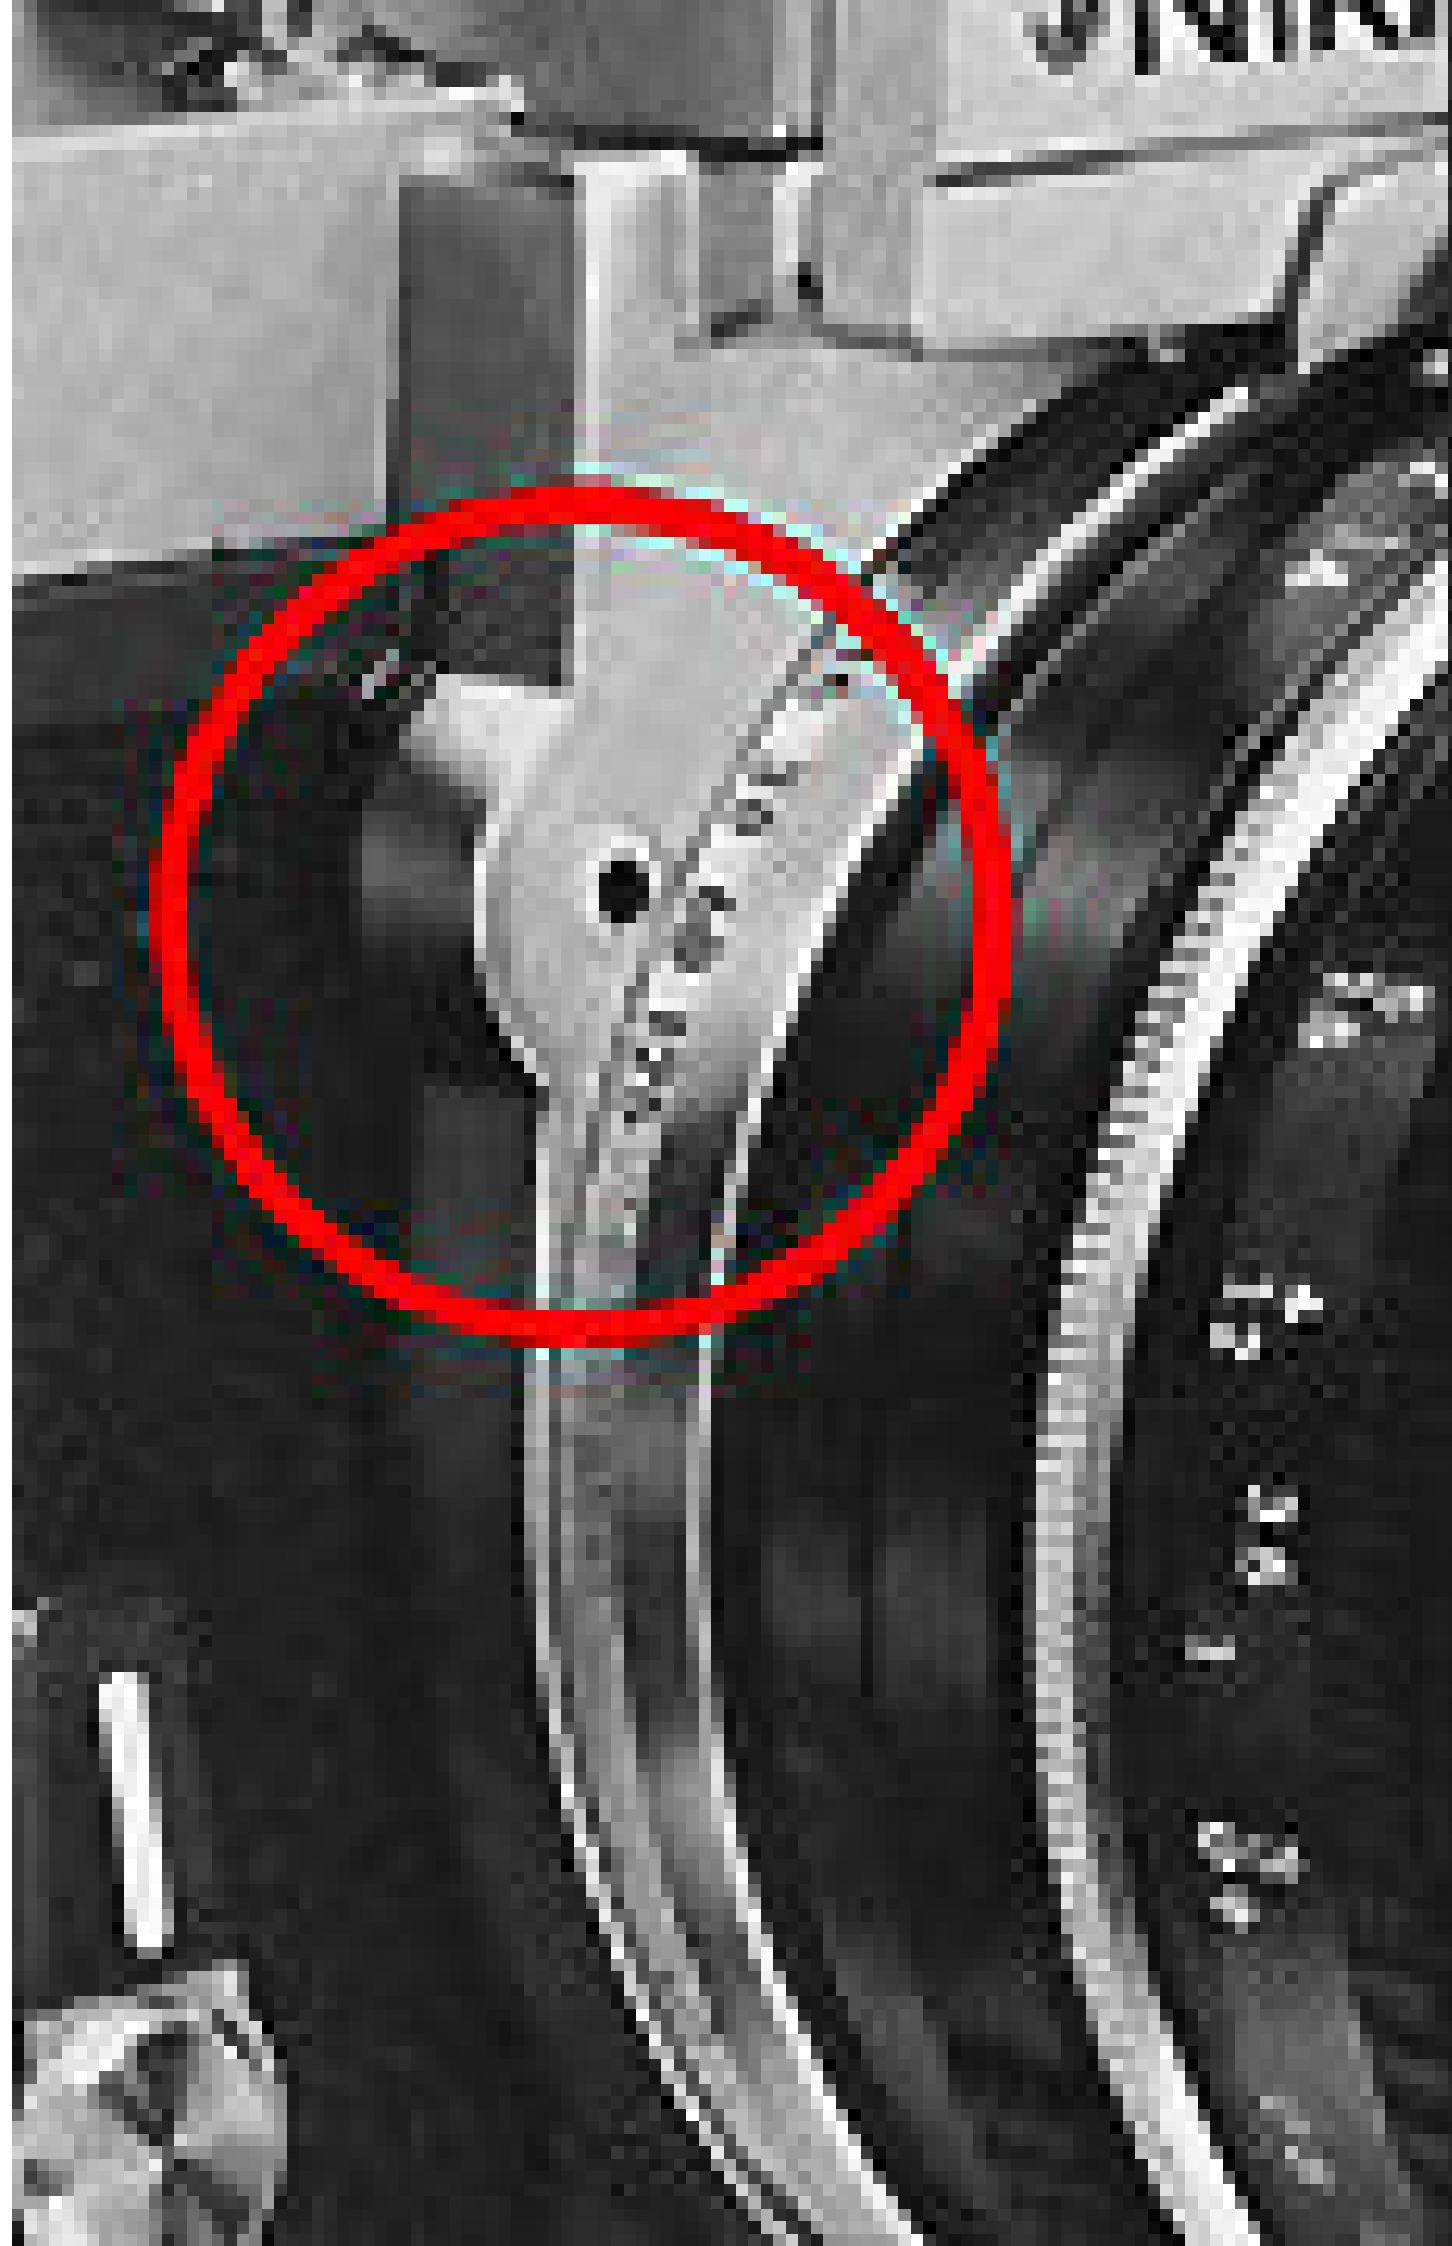 


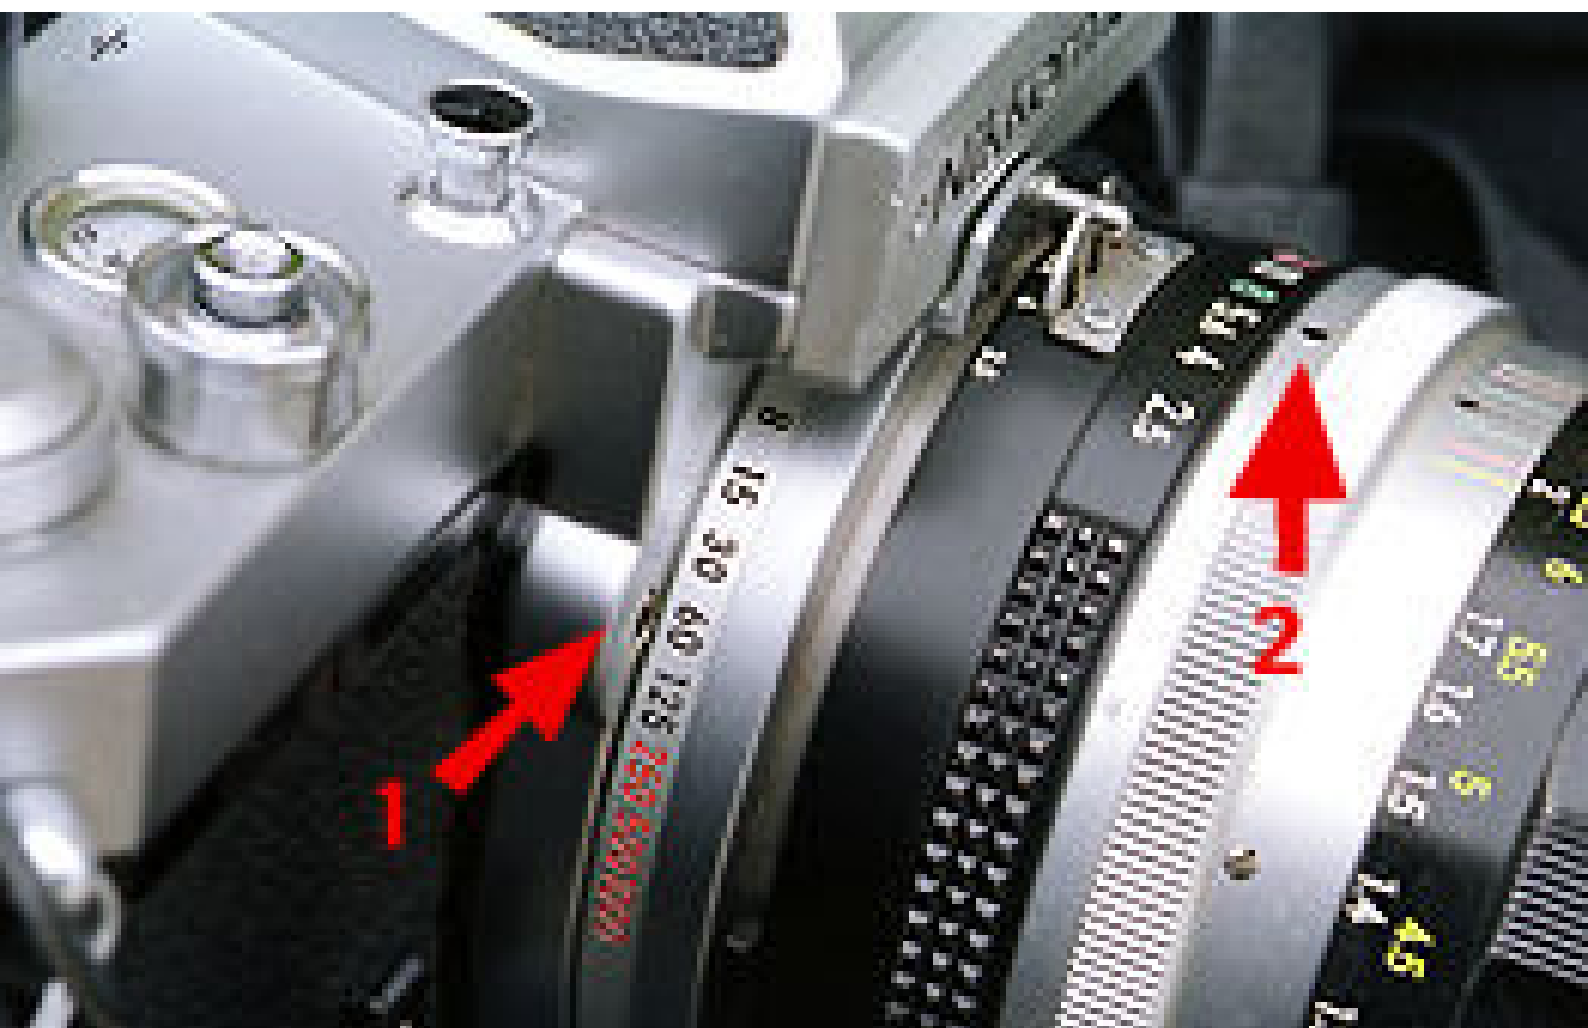 


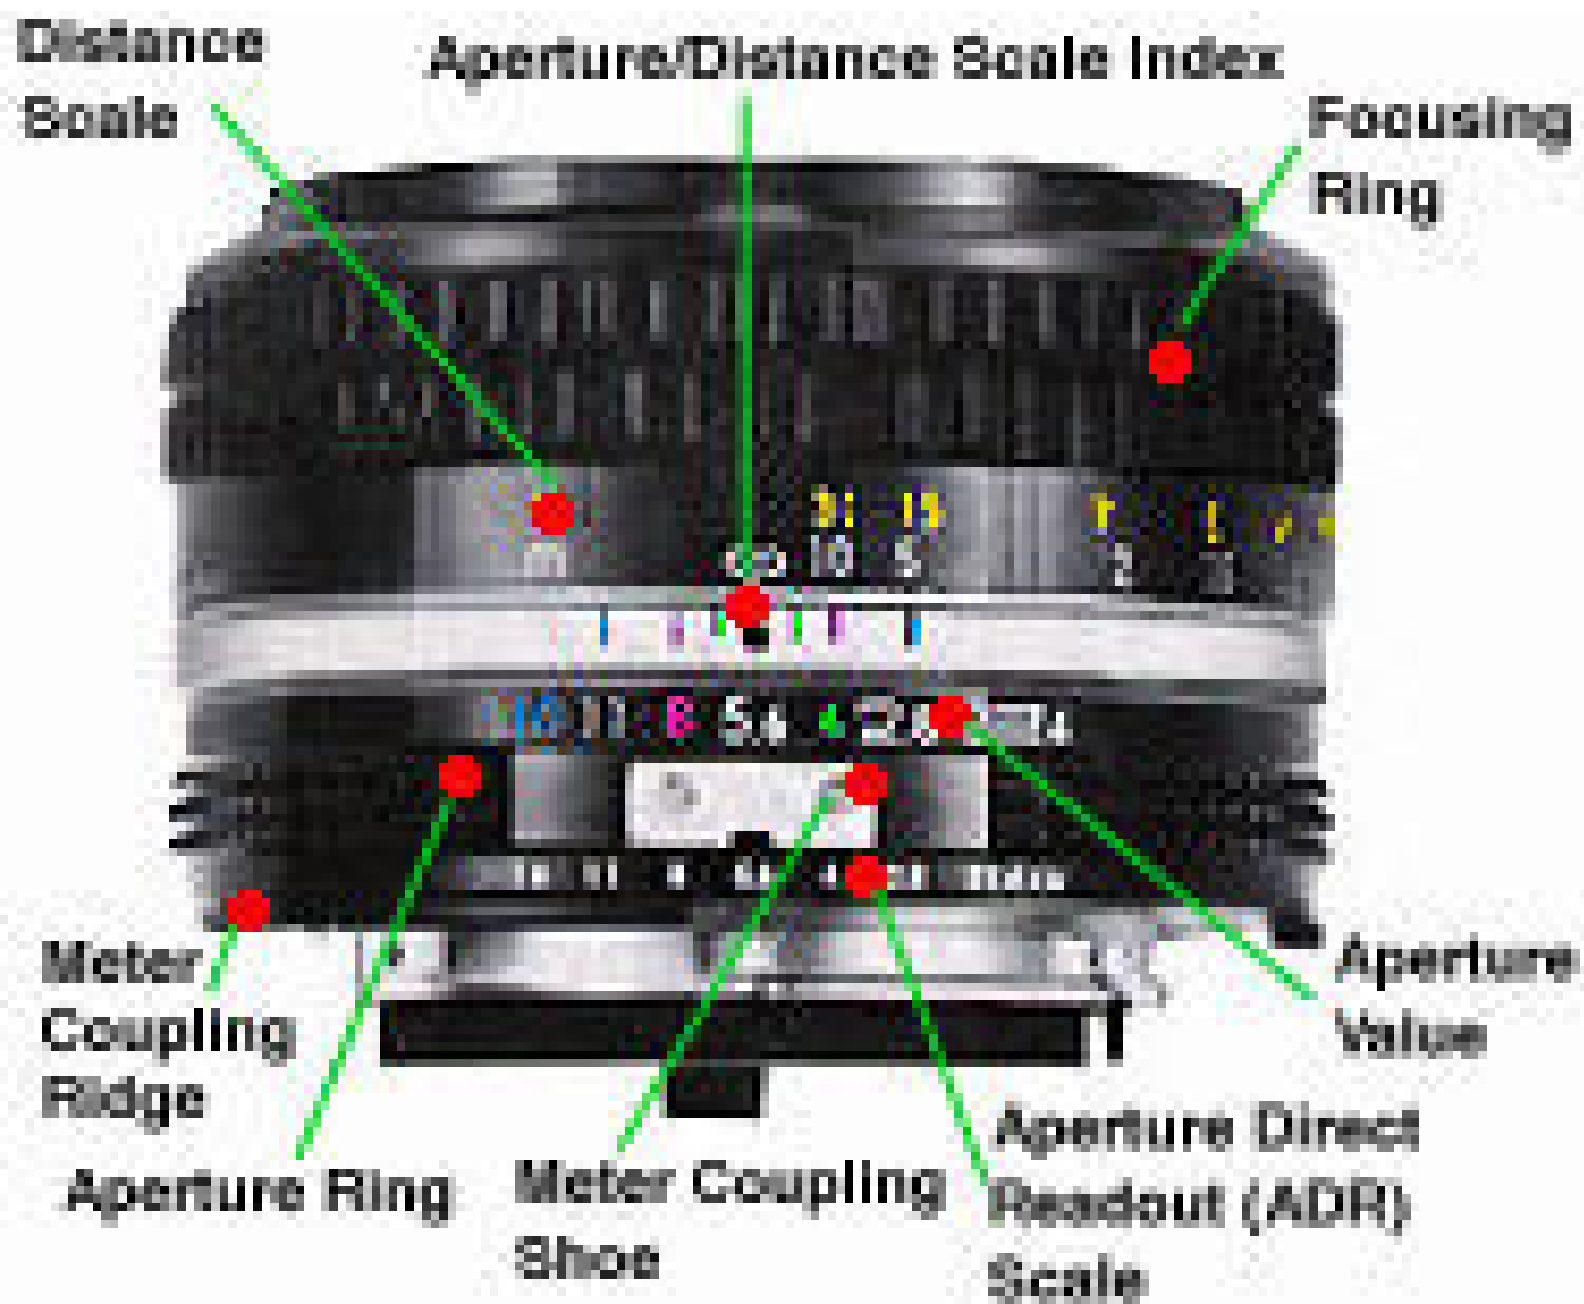 






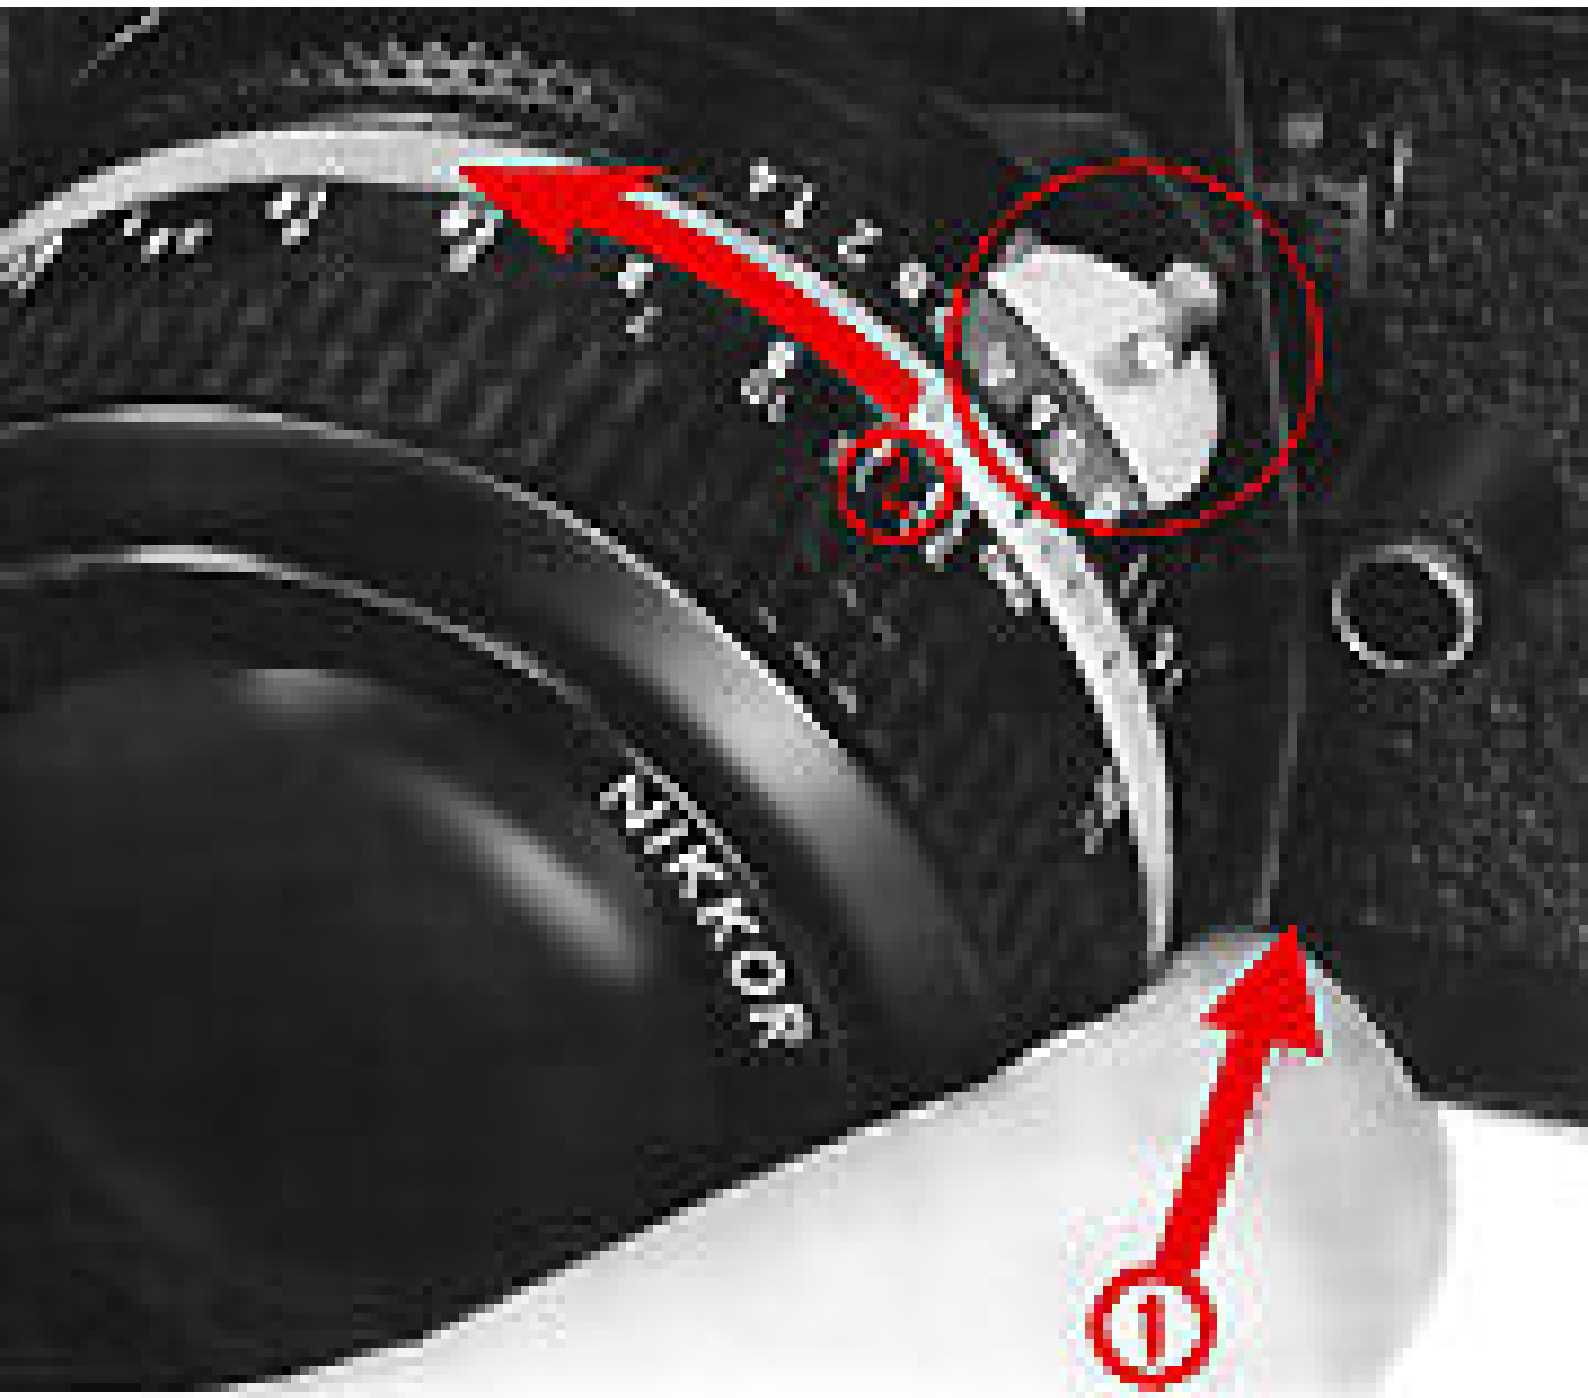 


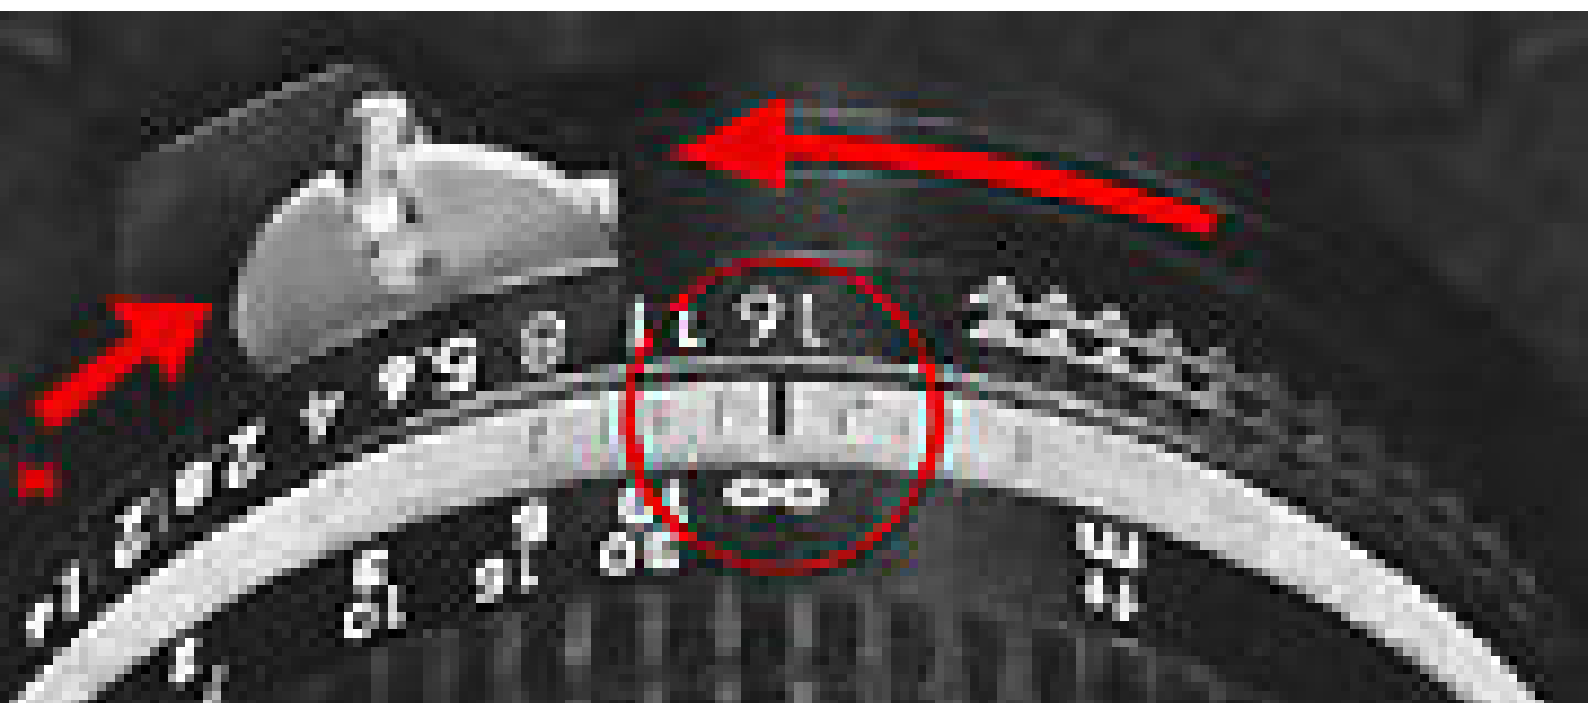 


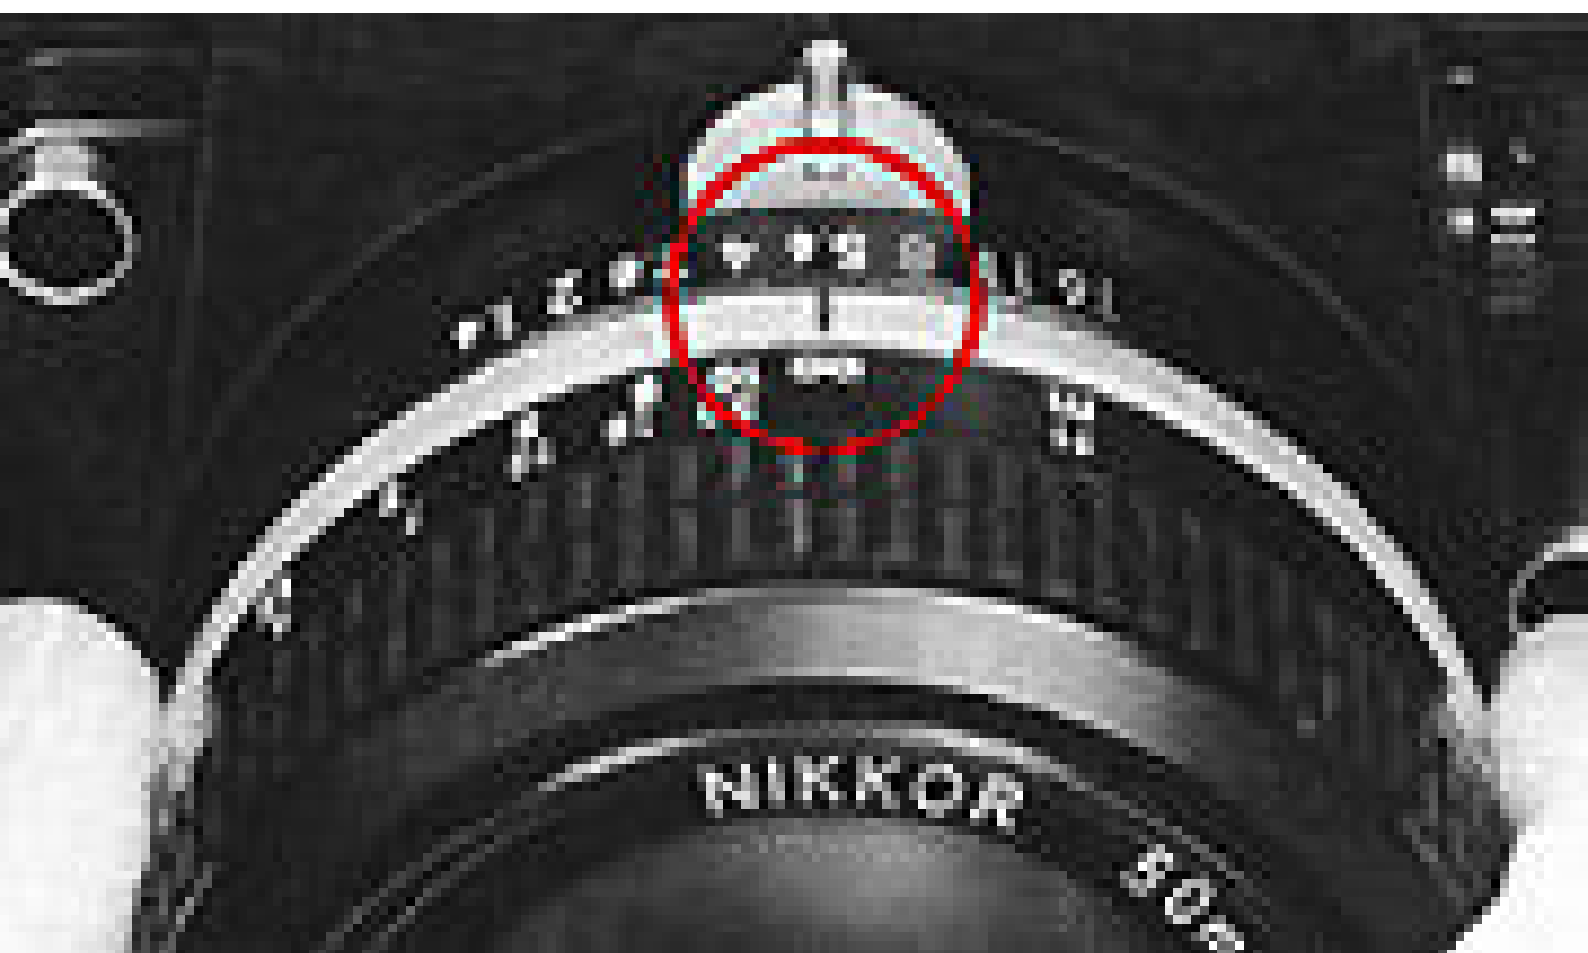 




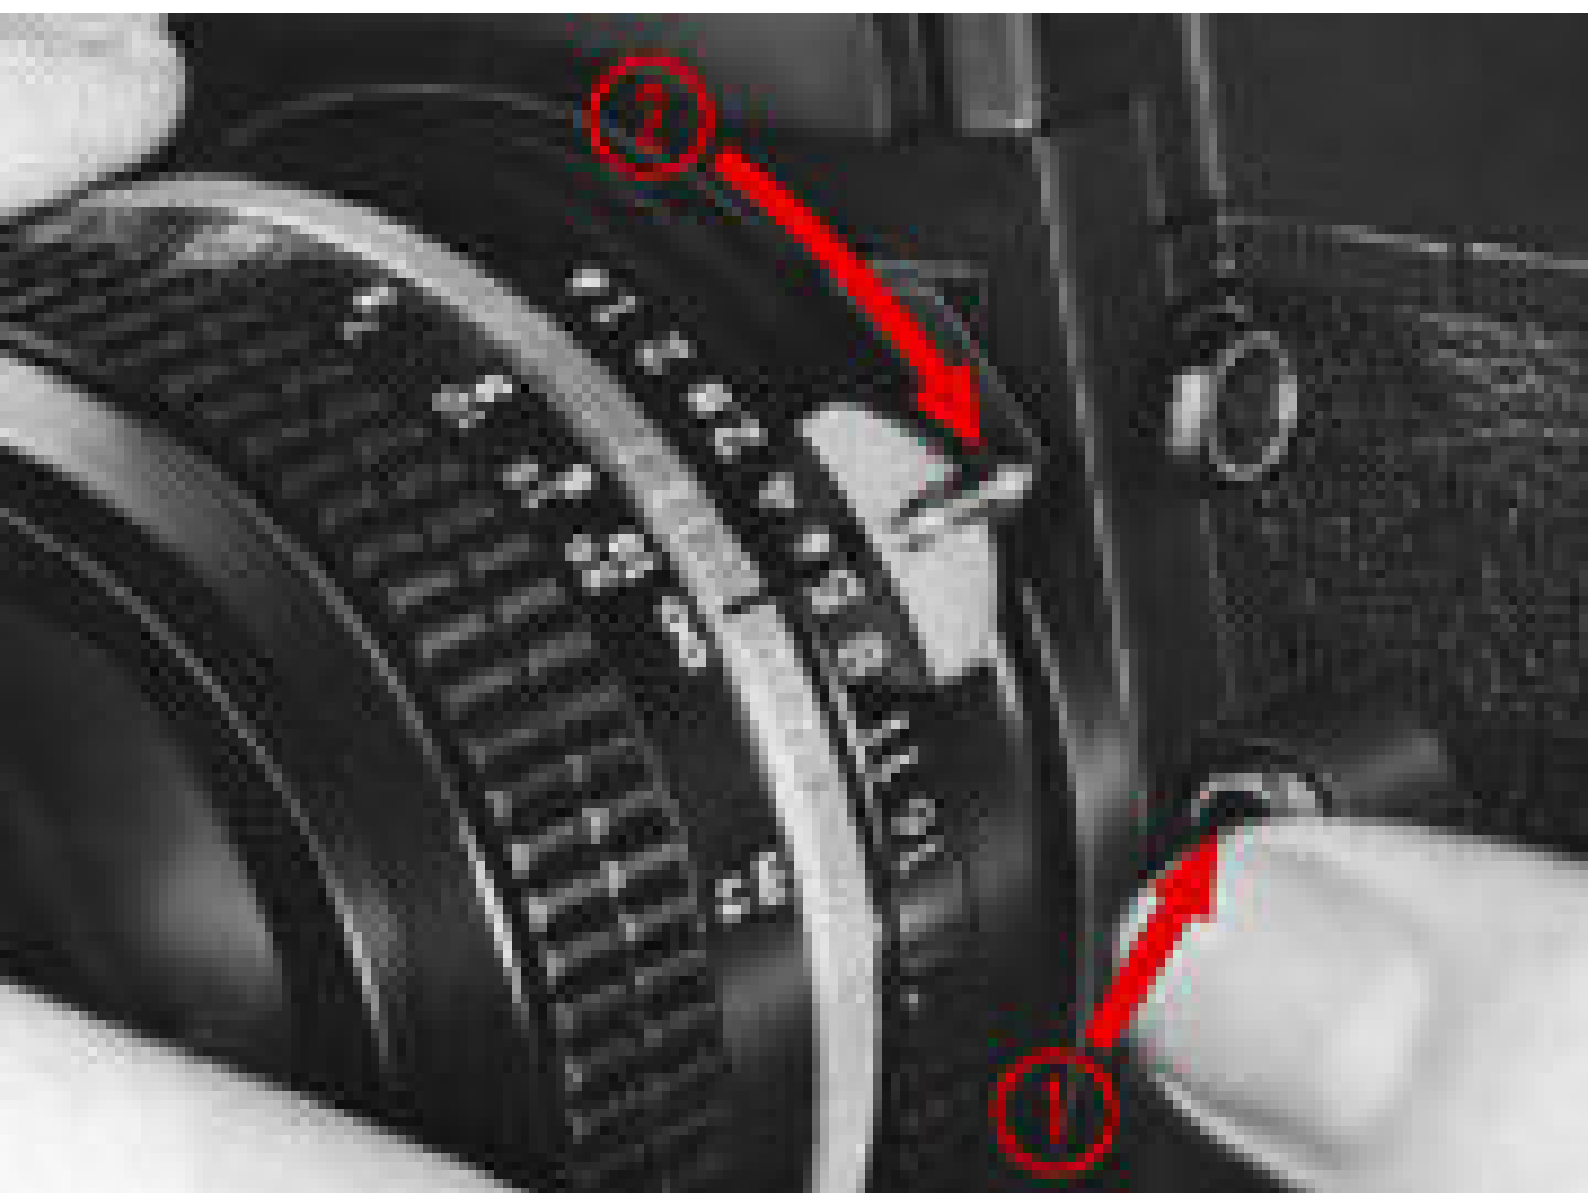 


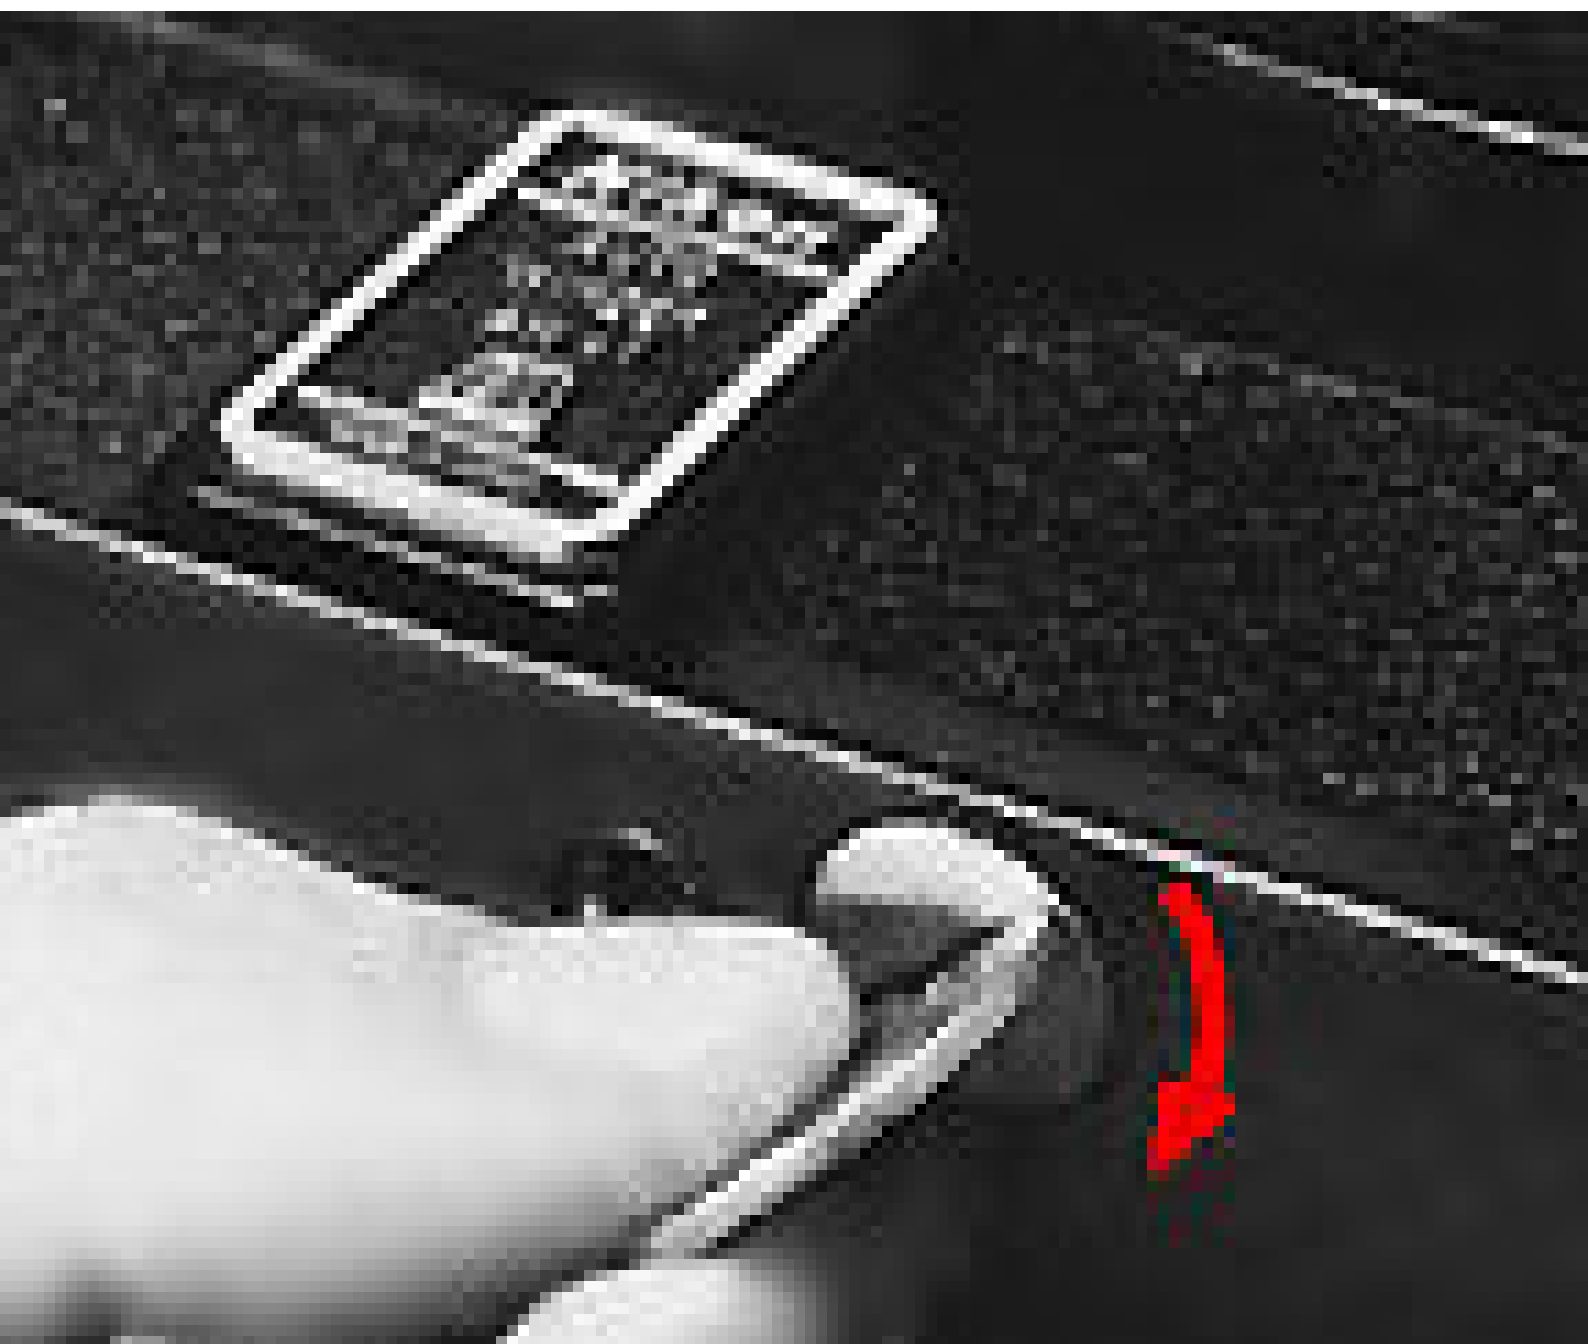 




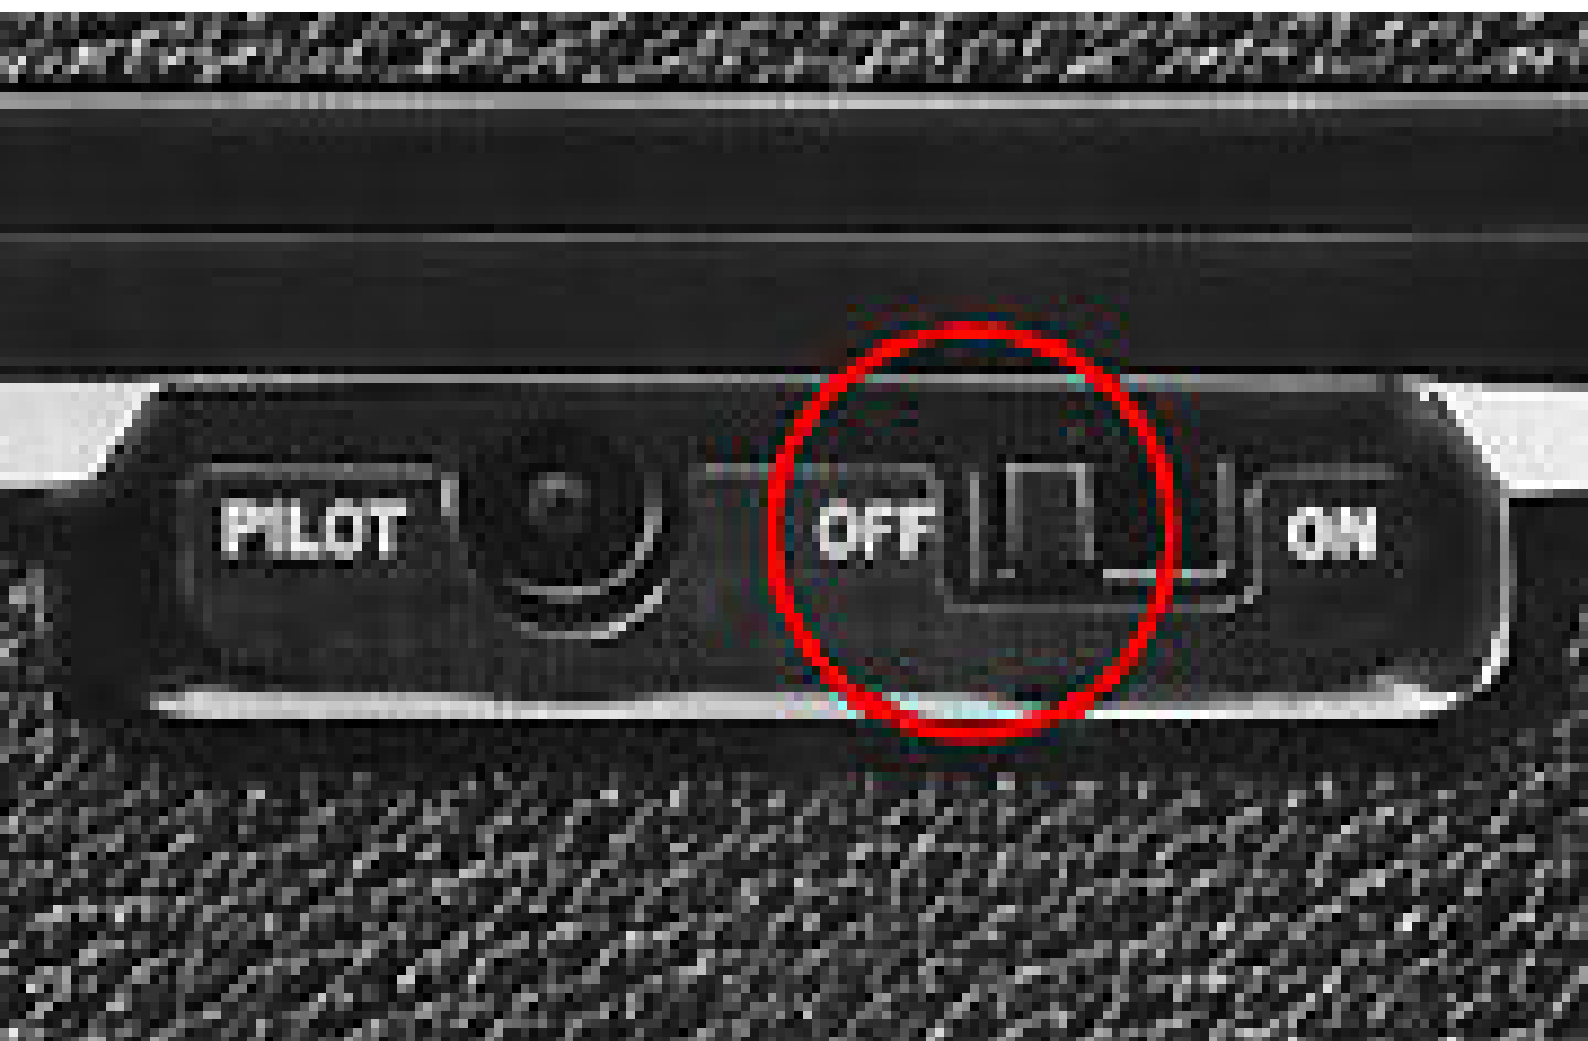 




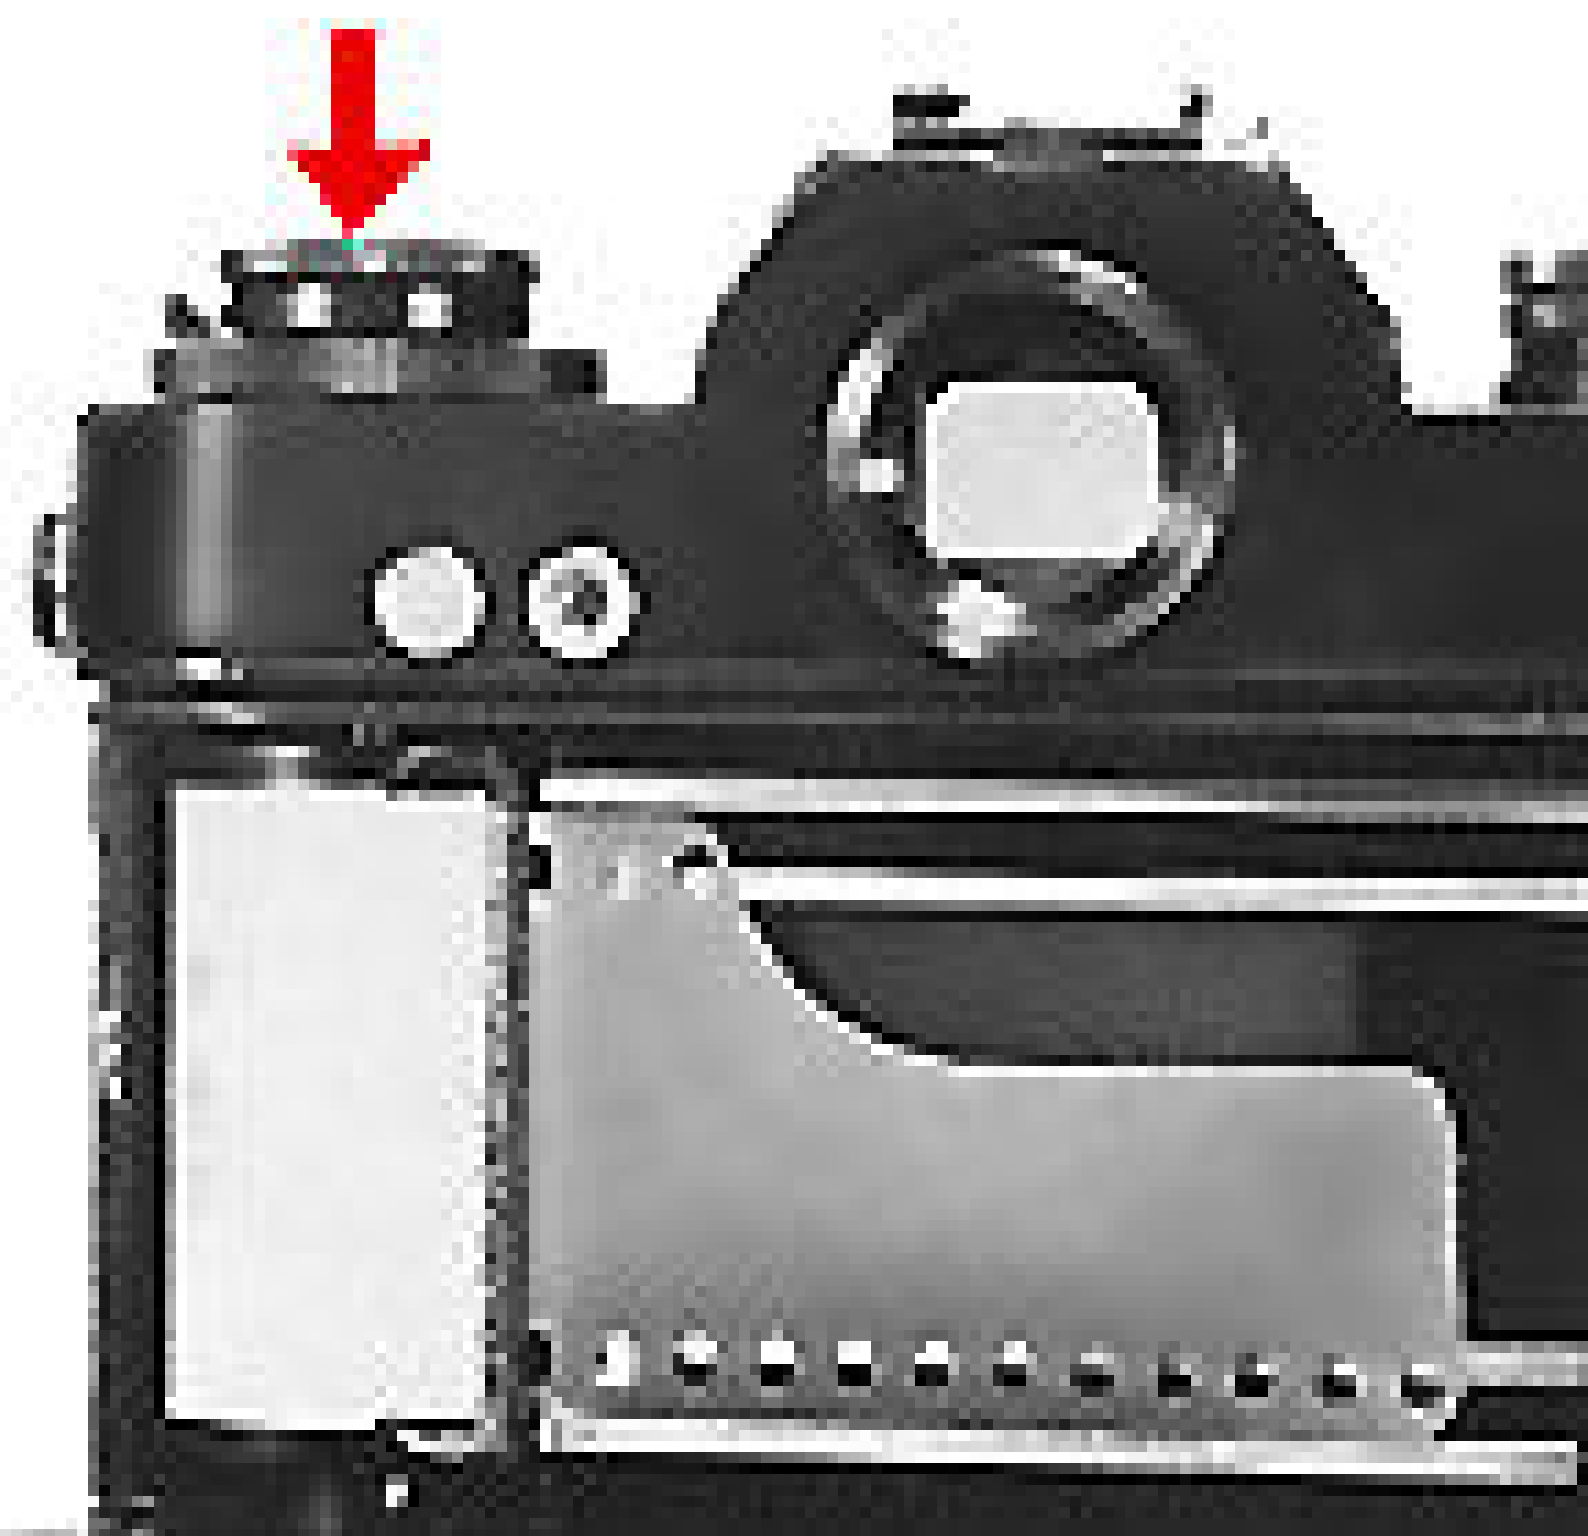 


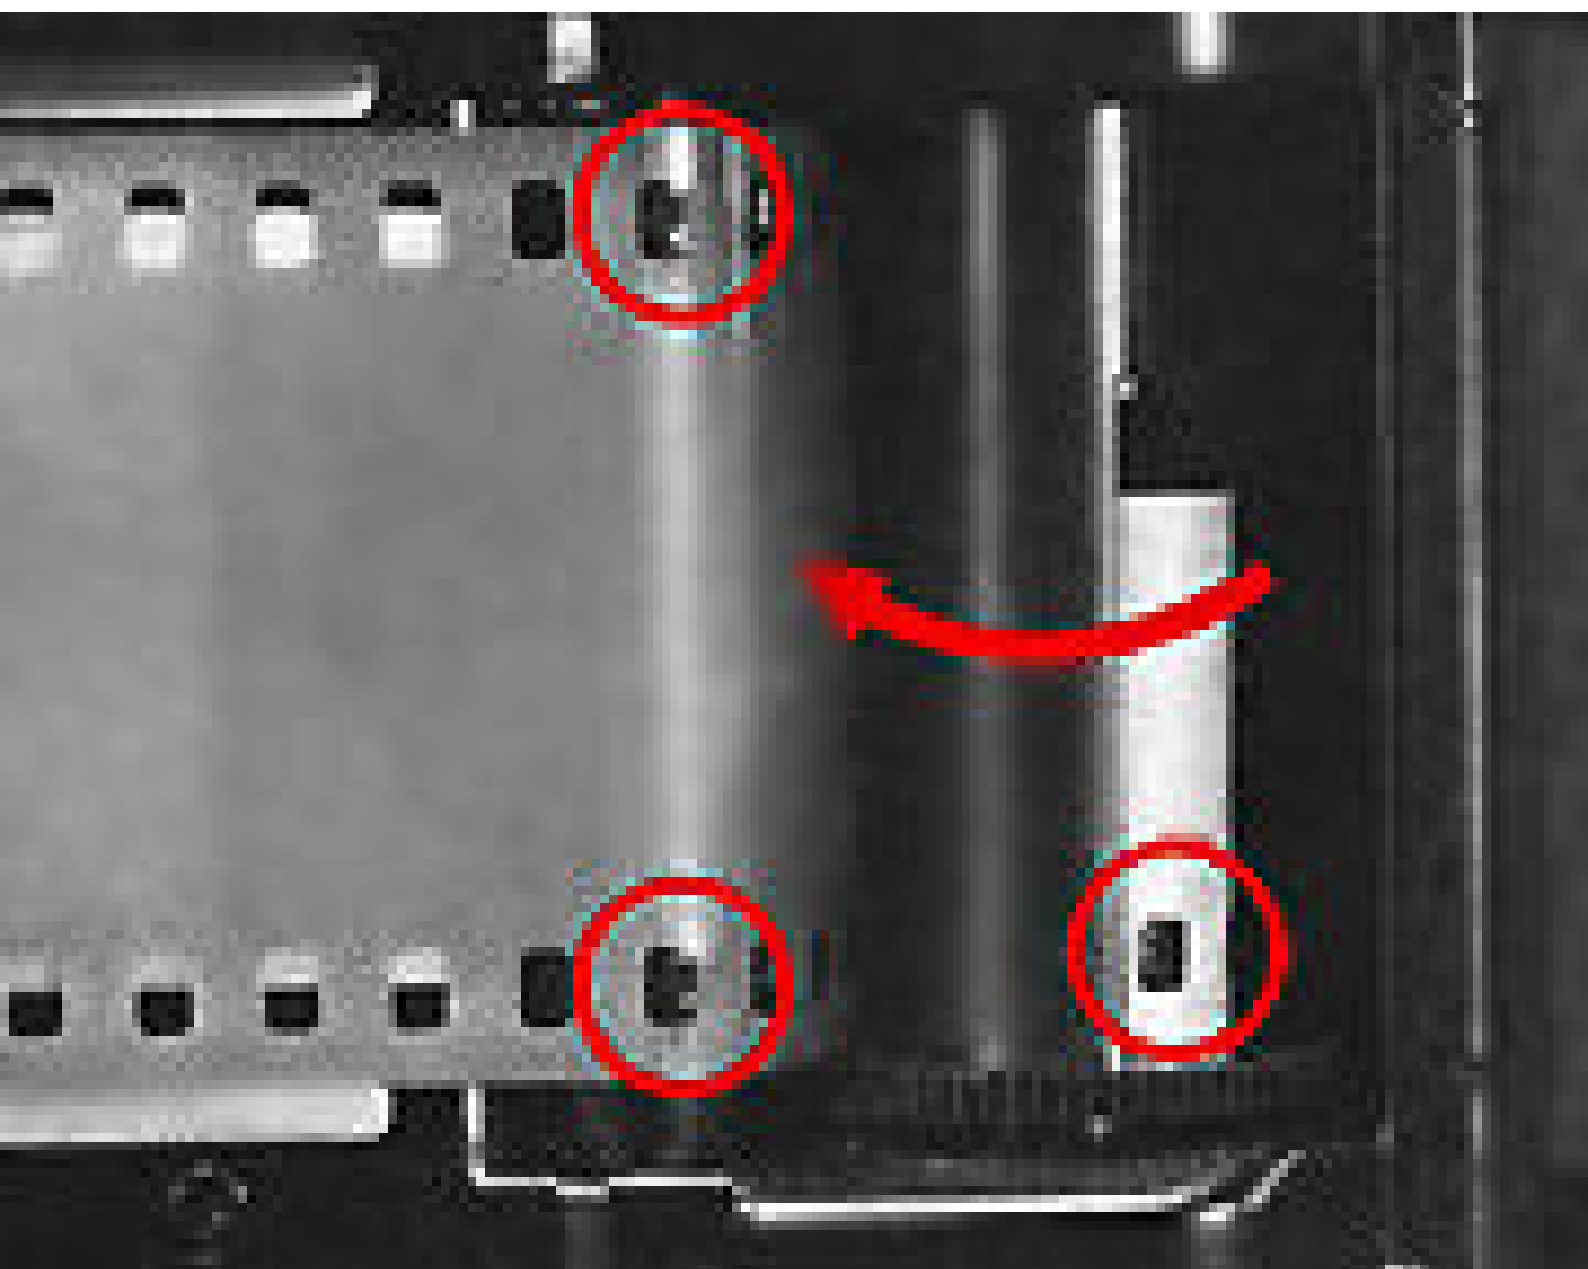 






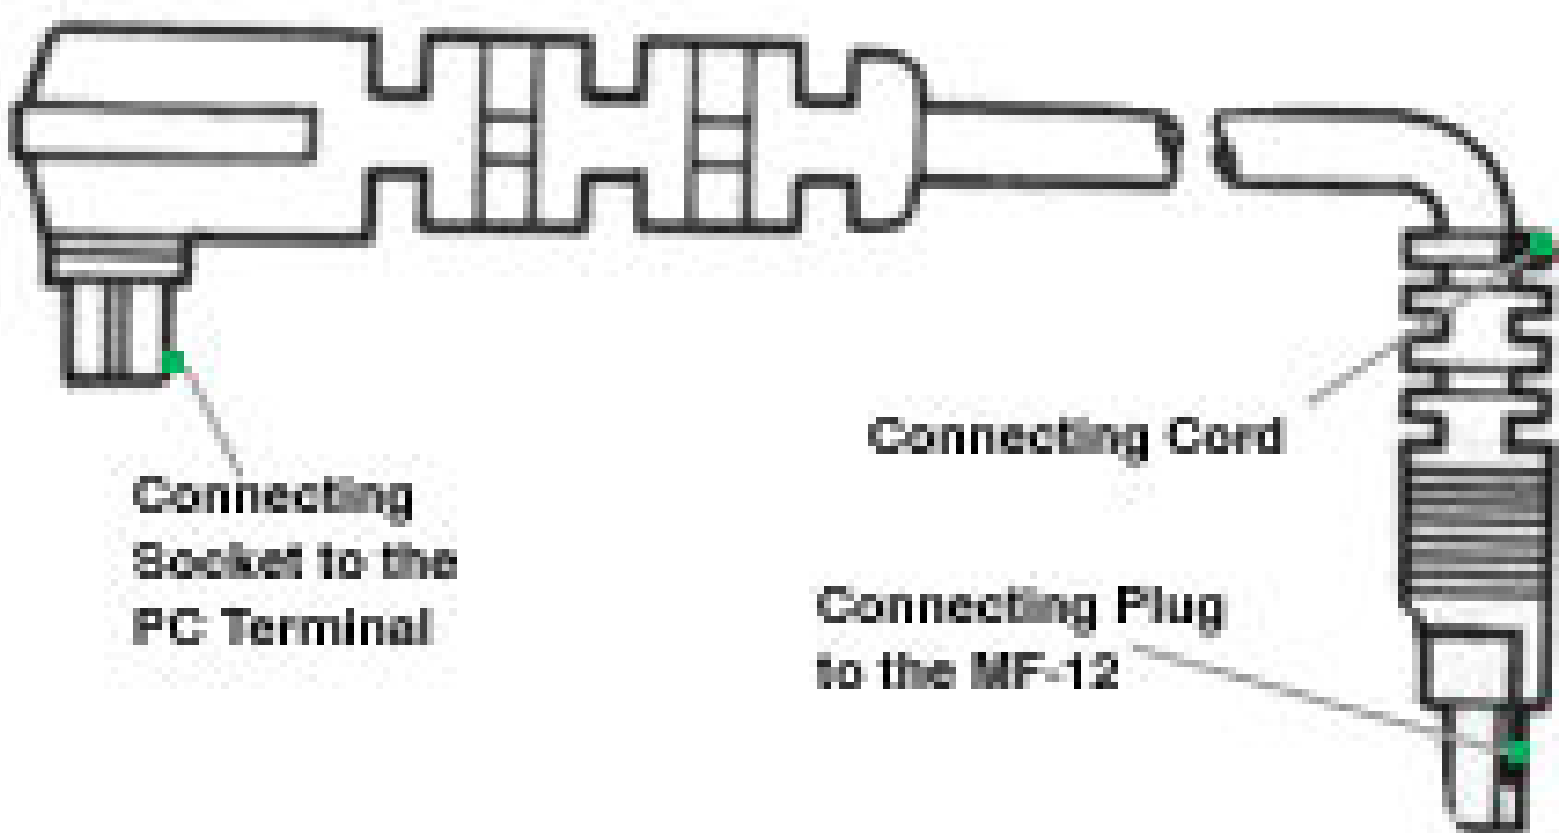 













Connecting
Socket to the
PC Terminal

Connecting Cord

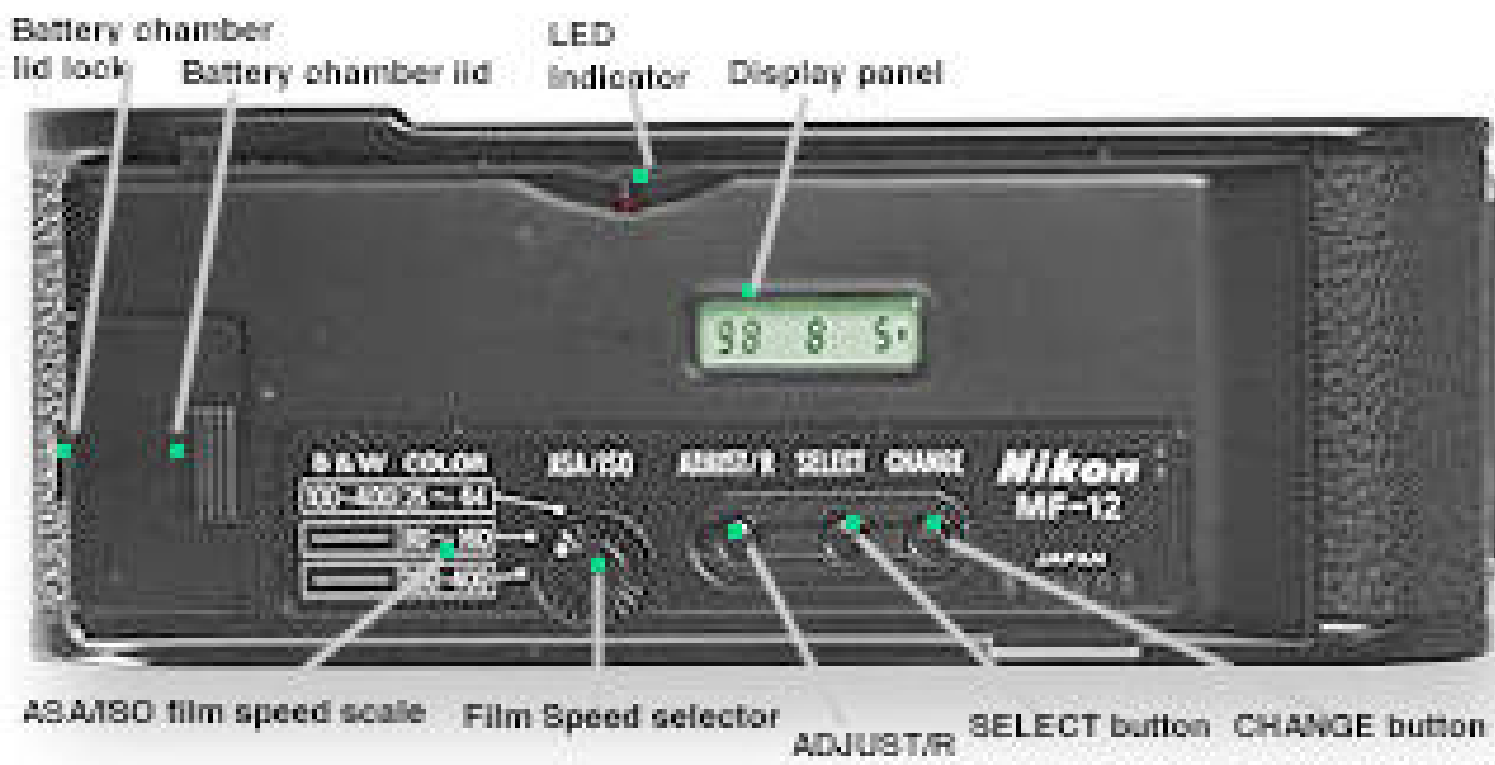 Connecting Plug
to the MF-12







Battery chamber

lid lock

Battery chamber lid

LED

indicator

Display panel

ASA/ISO

100 200 400 800

ASA/ISO

ADJUST/R

SELECT

CHANGE

Nikon

MF-12

JAPAN

ASA/ISO film speed scale

Film Speed selector

ADJUST/R

SELECT button

CHANGE button



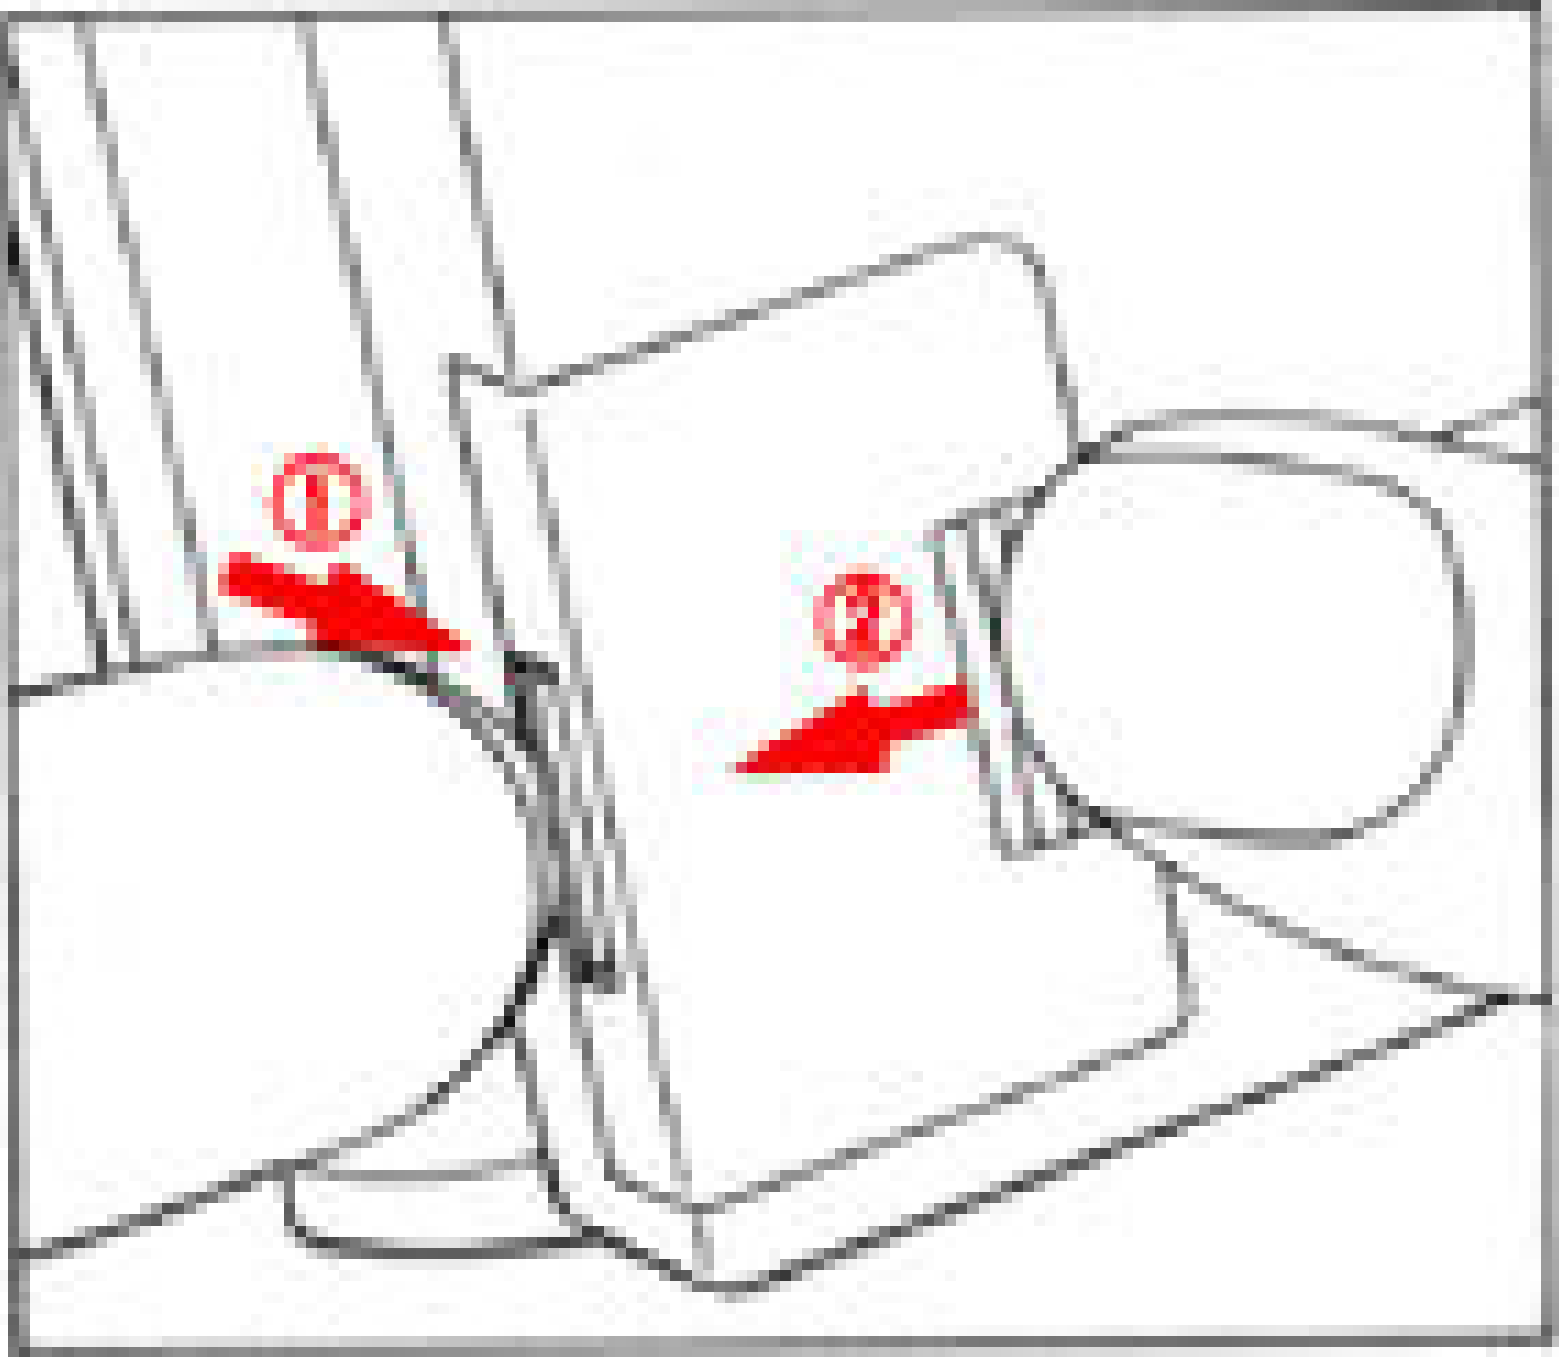 
Cable Socket

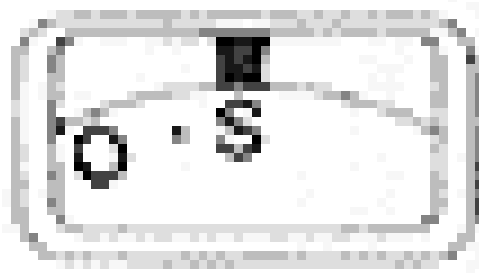 
Data Imprint

ON/Off Switch


LED

Locking Catch






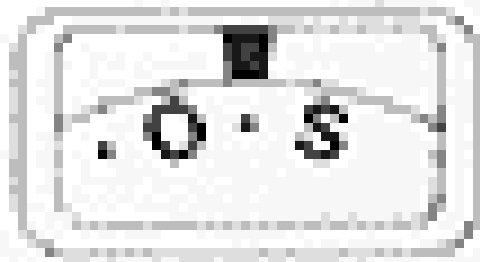 
when the back
cover is closed
after loading
the film



1st blank
exposure

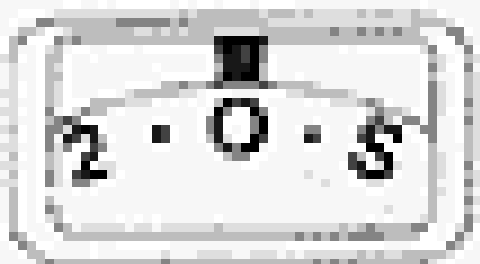 


2nd blank
exposure

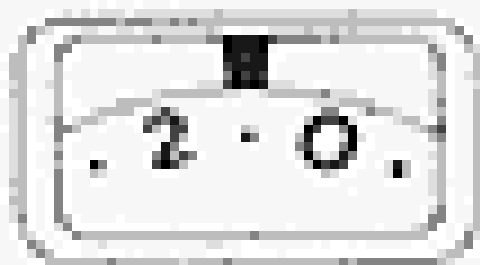 


for 1st shooting



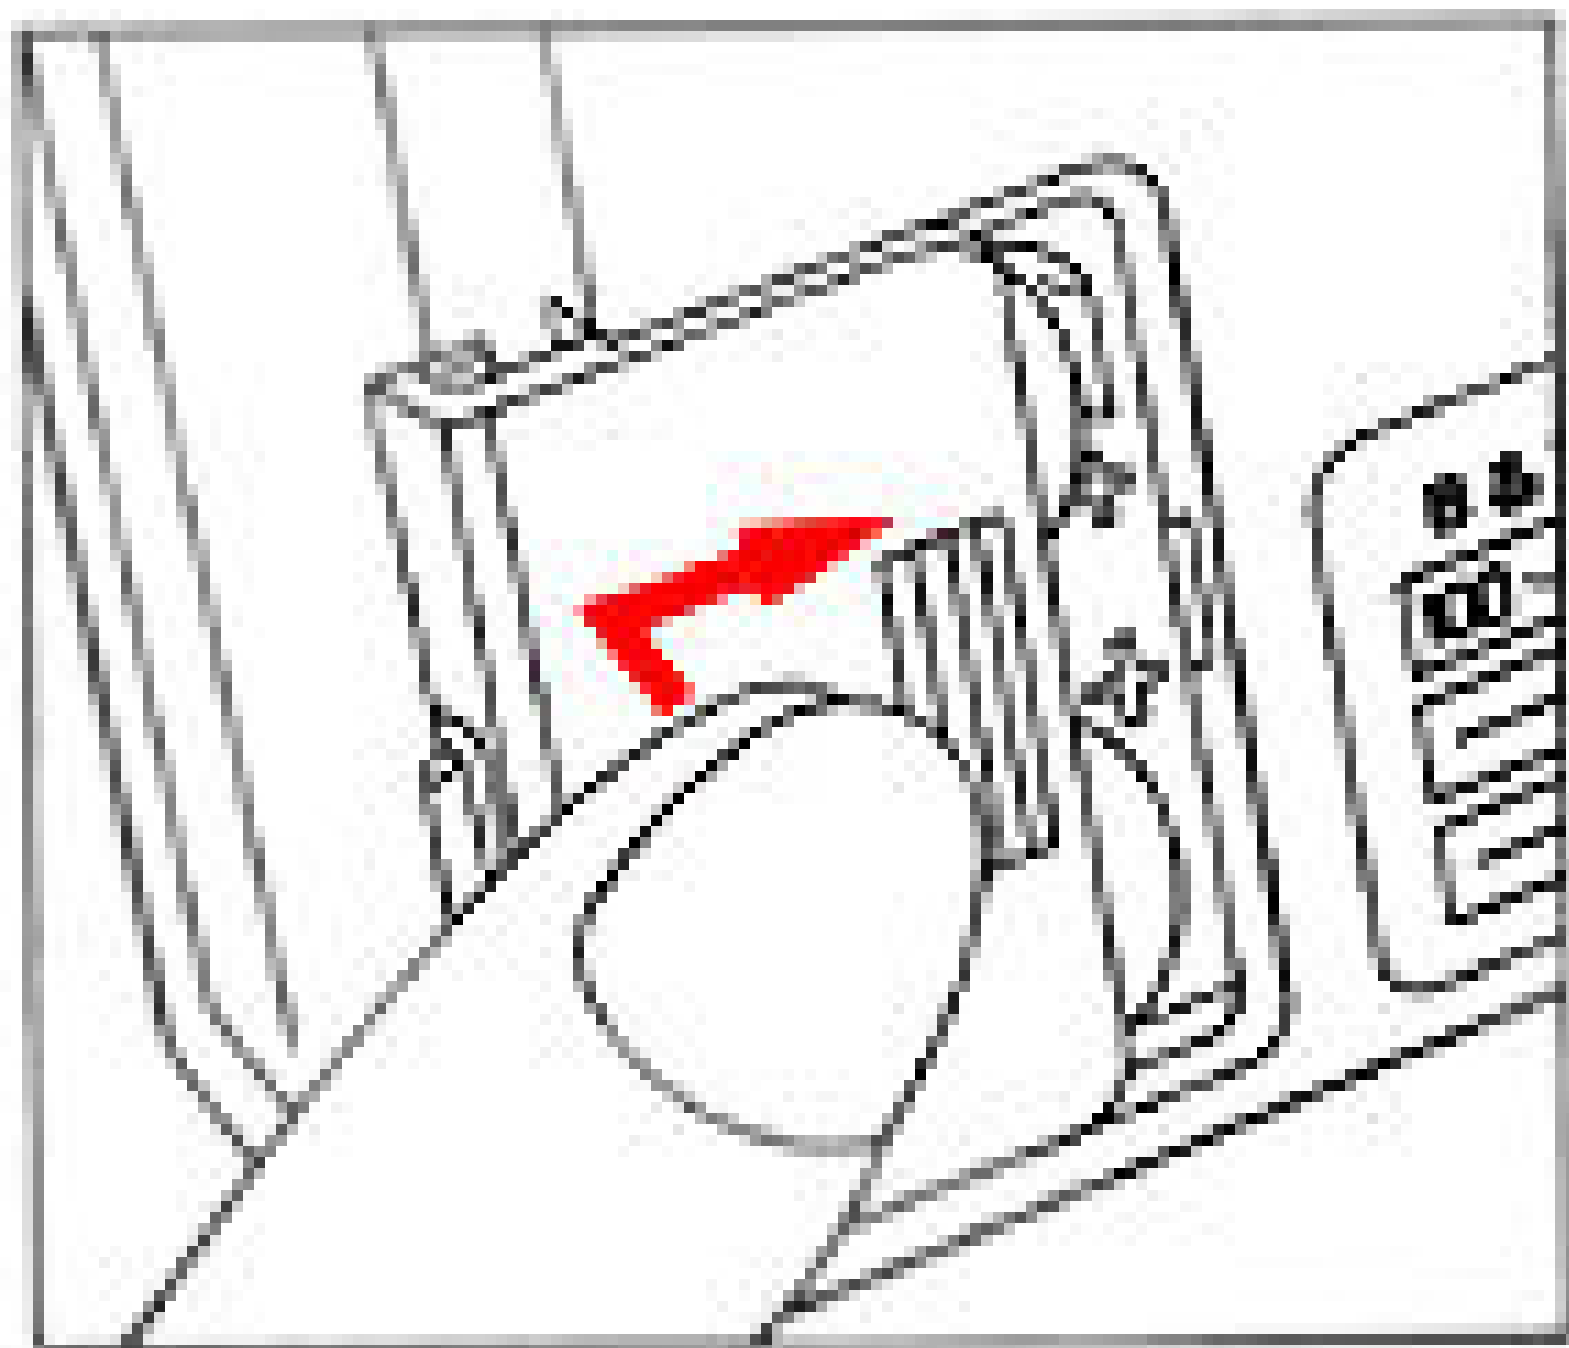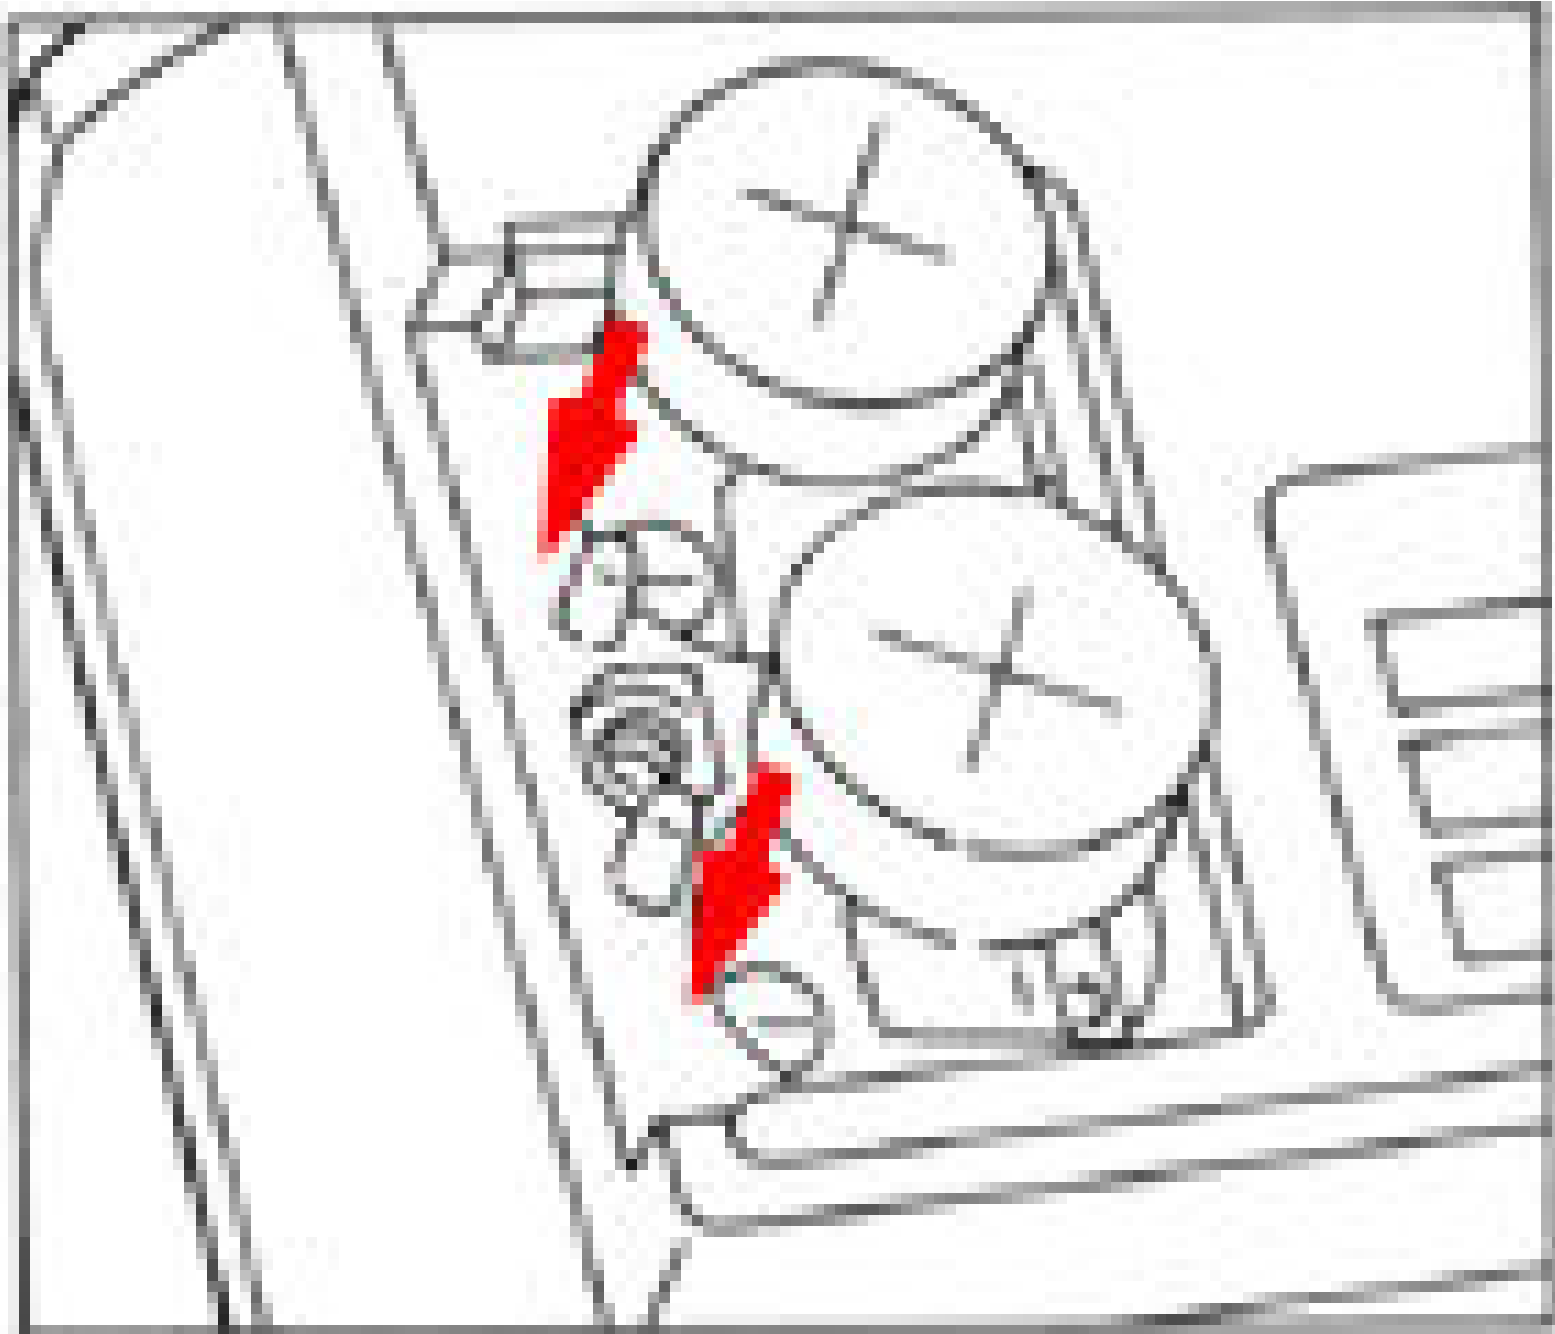  when the back
cover opened
after rewinding
the film

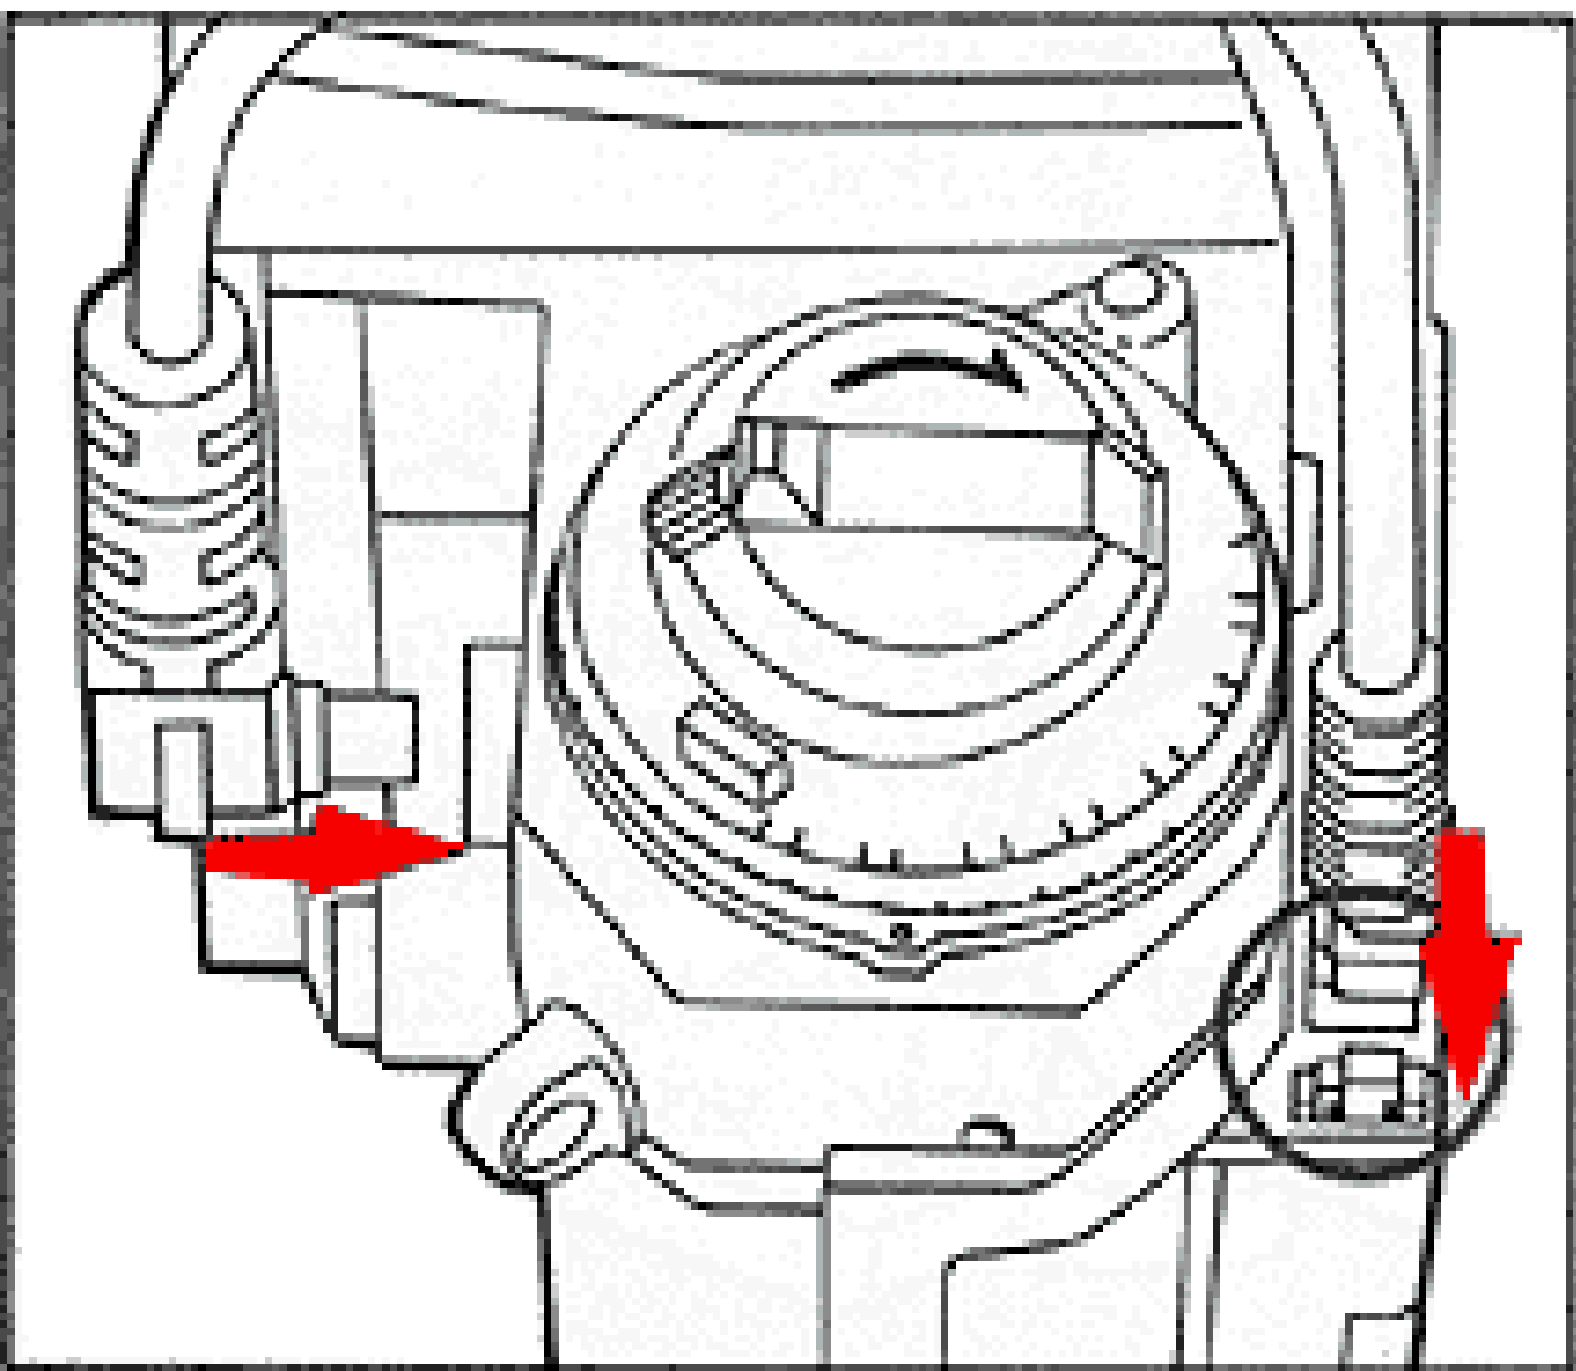 













**Set the shutter
dial at "A" (AUTO)**



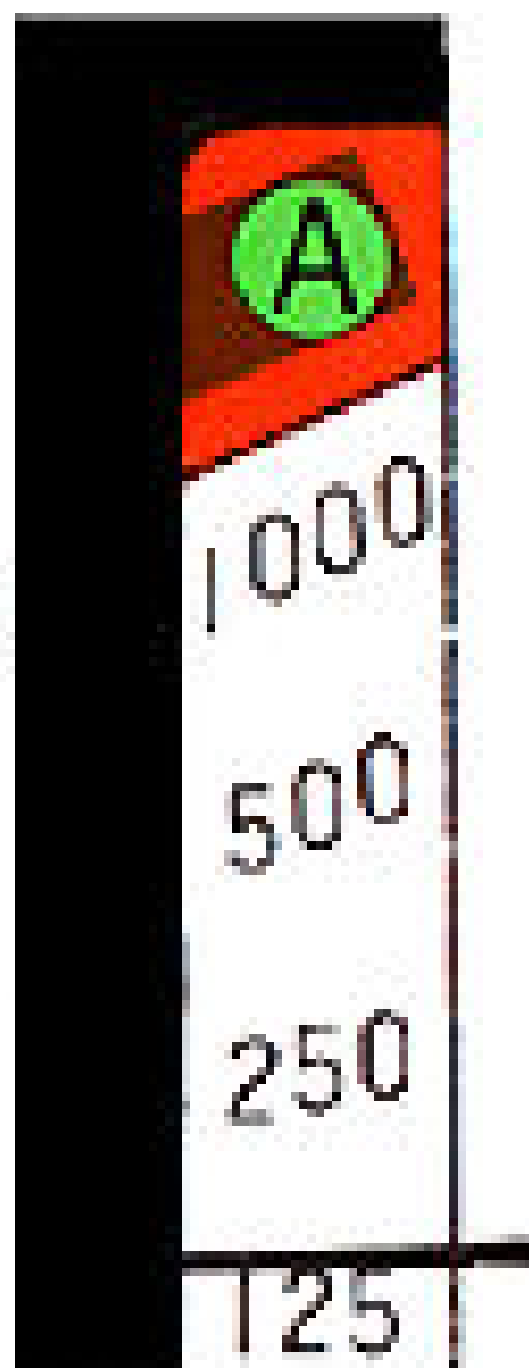 **Confirm the green
needle is rested at 'A'**




WARNING ZONE

The range of correct exposures

When the black needle is within this range secure the camera with a tripod to avoid blur.

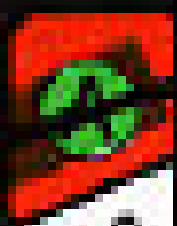 WARNING ZONE



1000
500
250
125
60
30
15



reduce the aperture

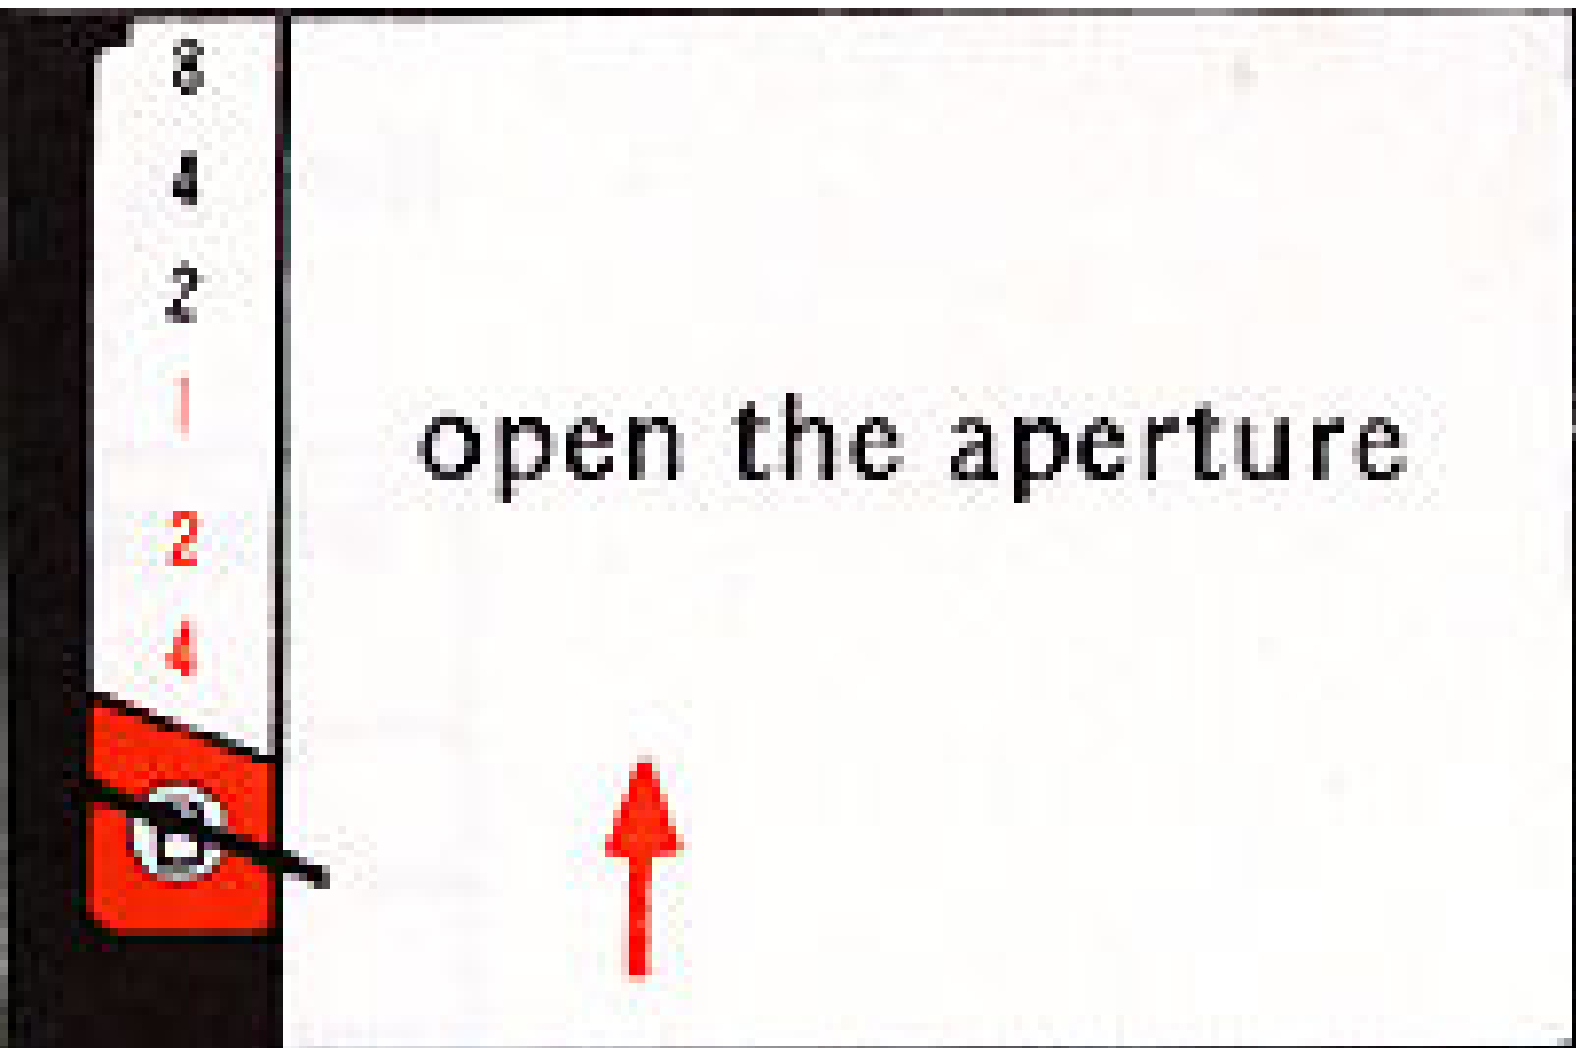 
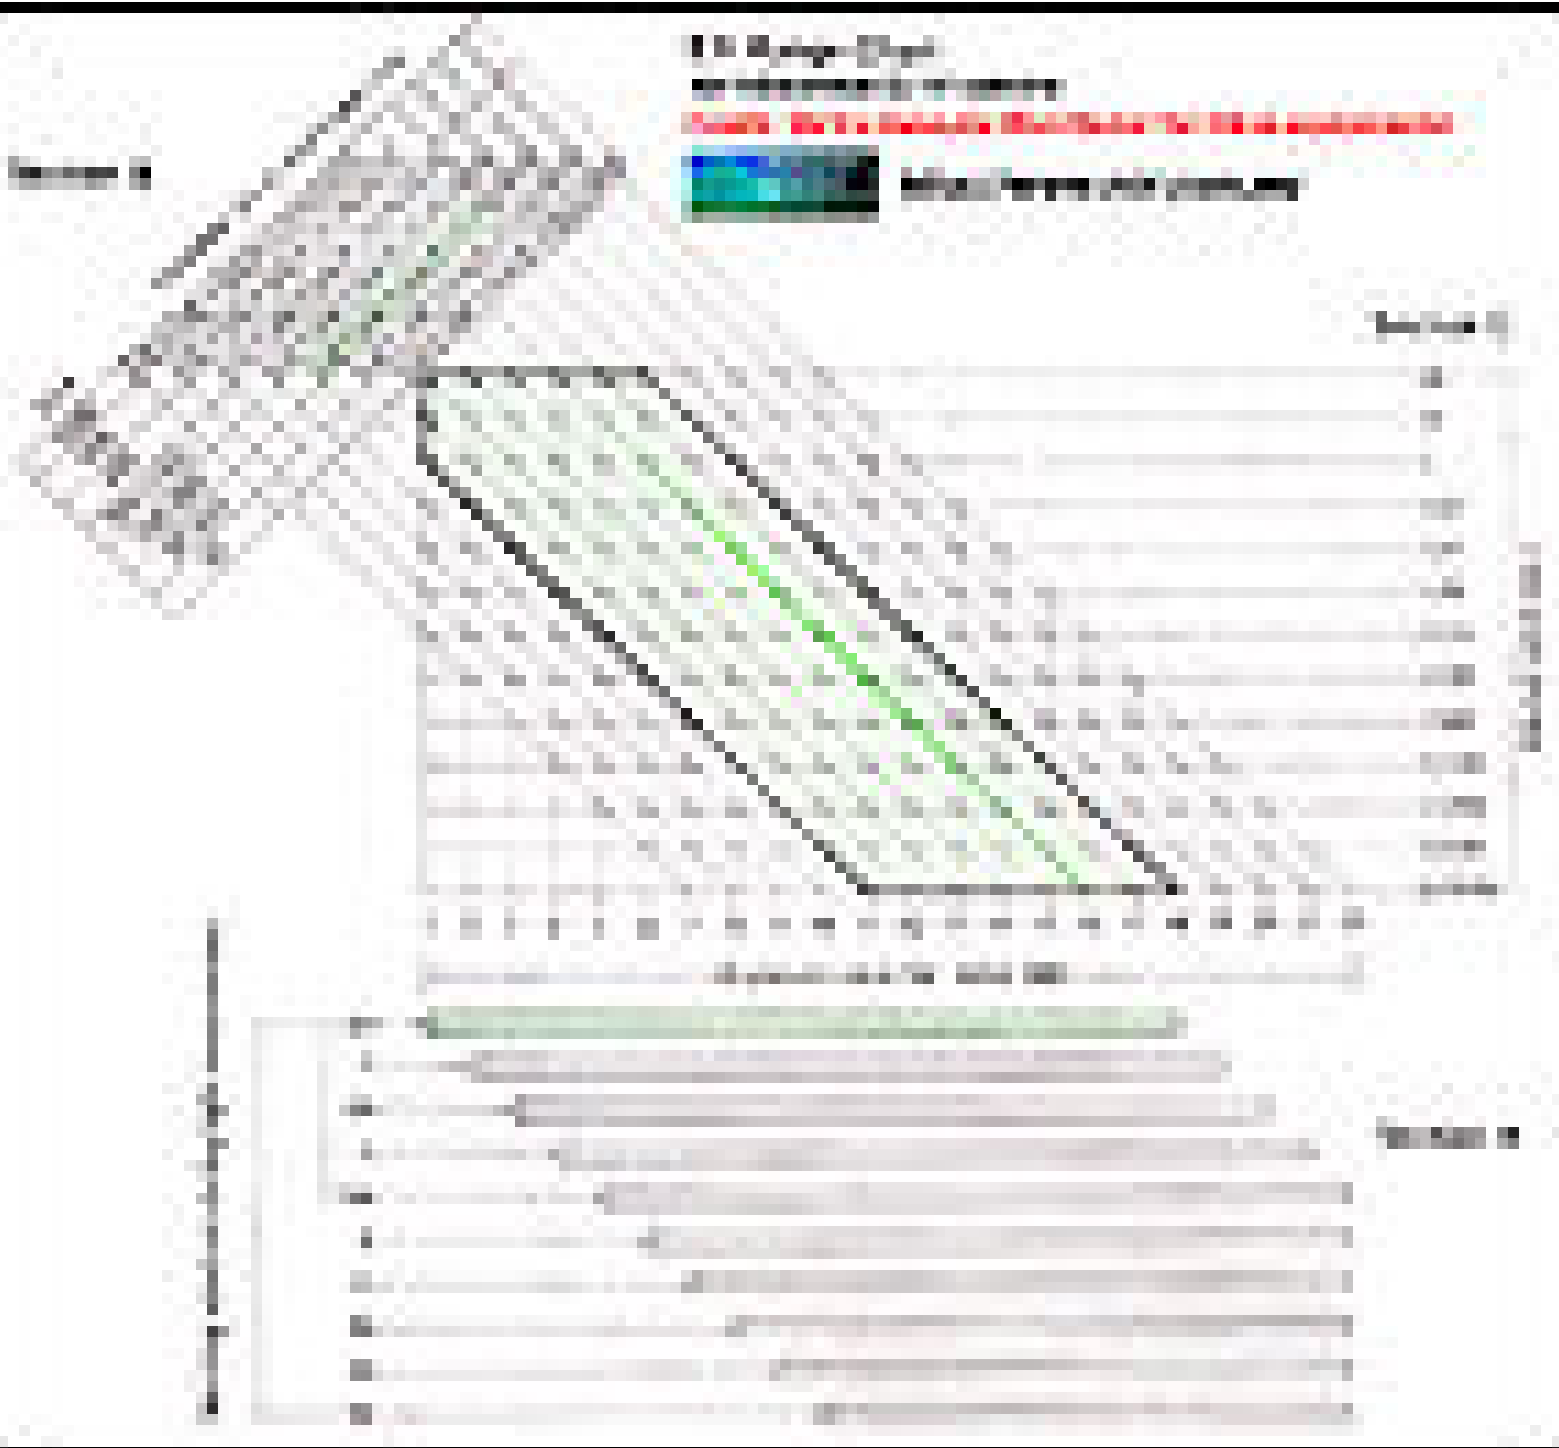 
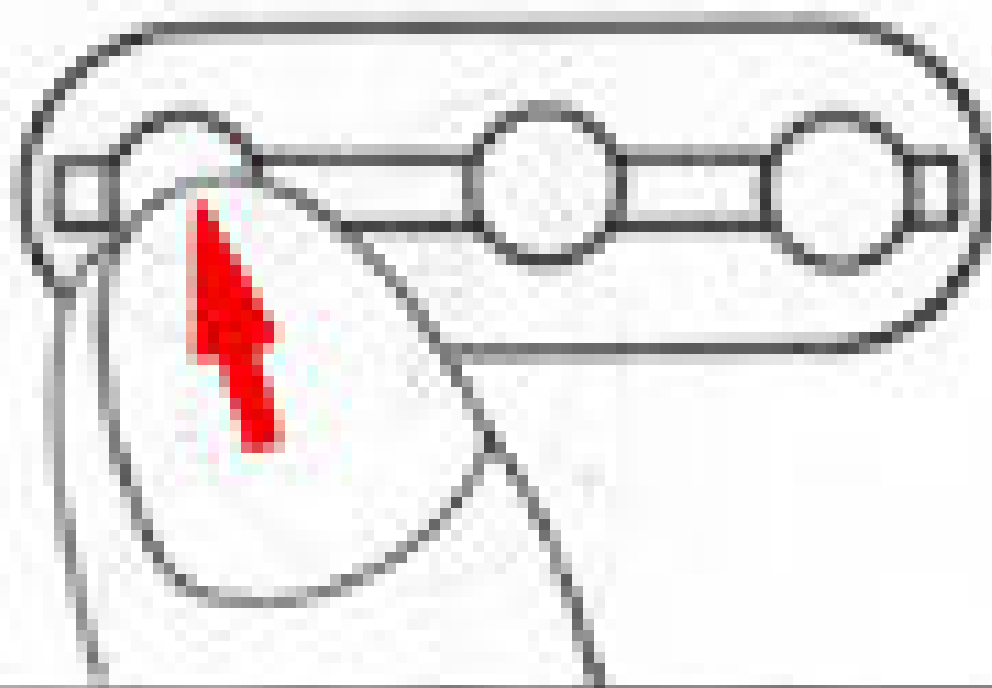 



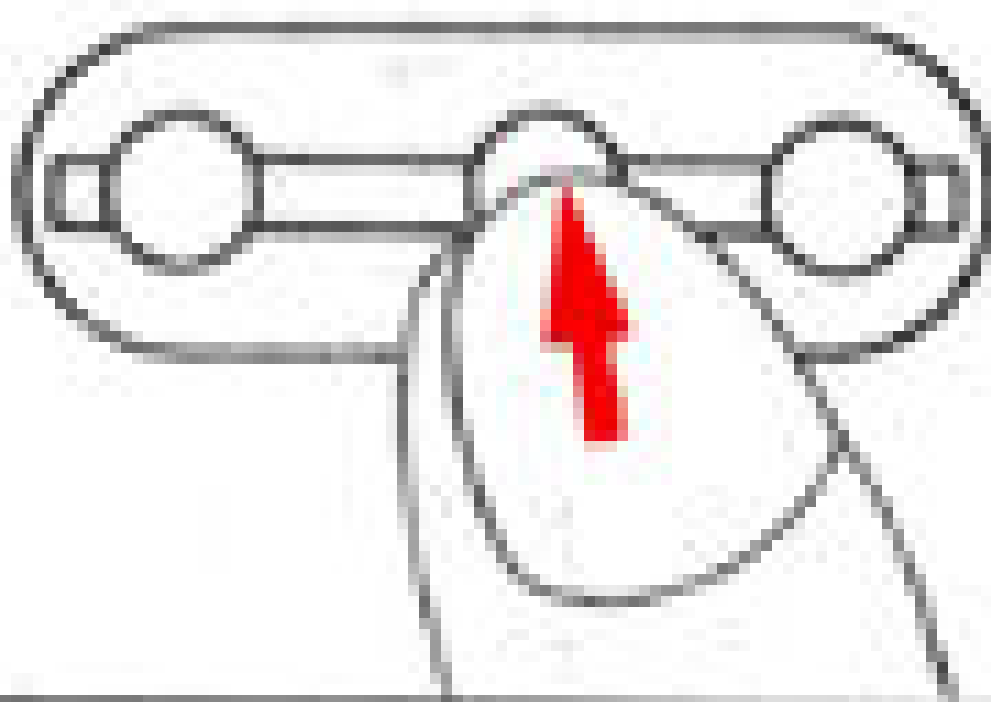 


Figure 10

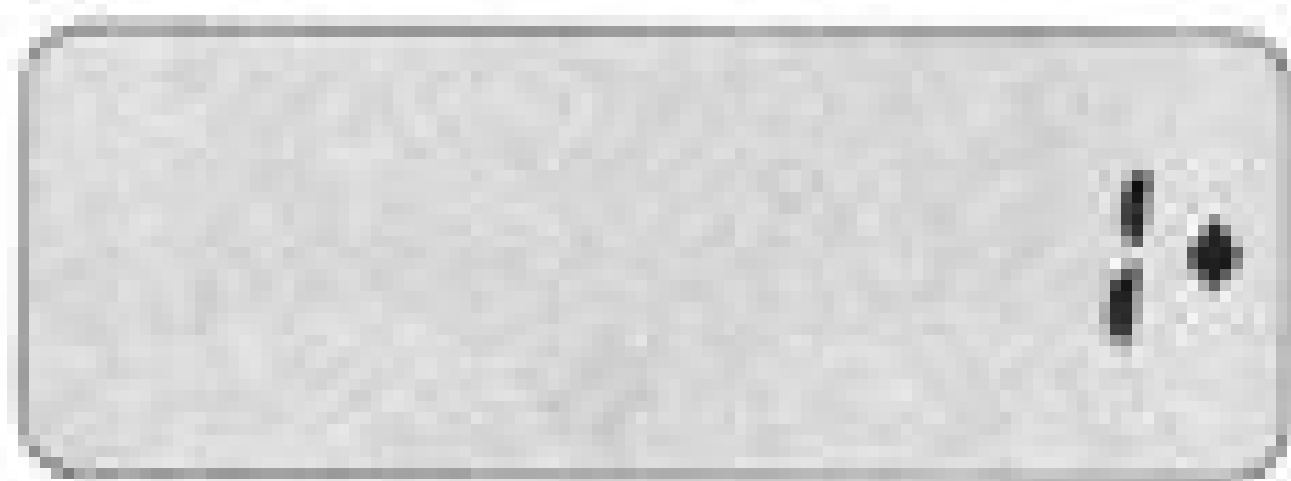 


82








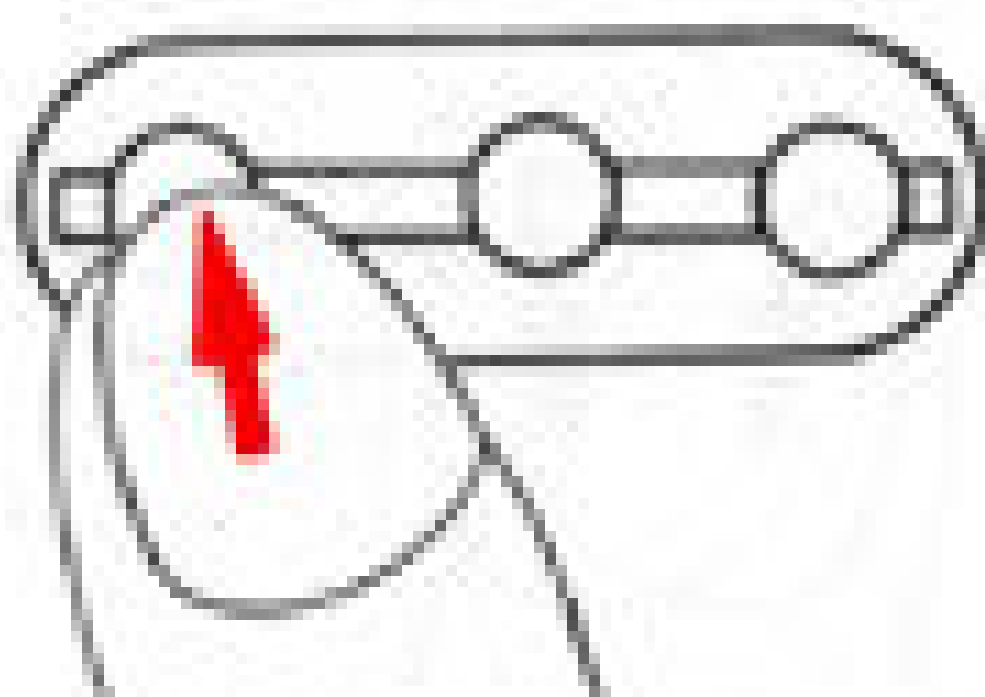 

82 4 25.

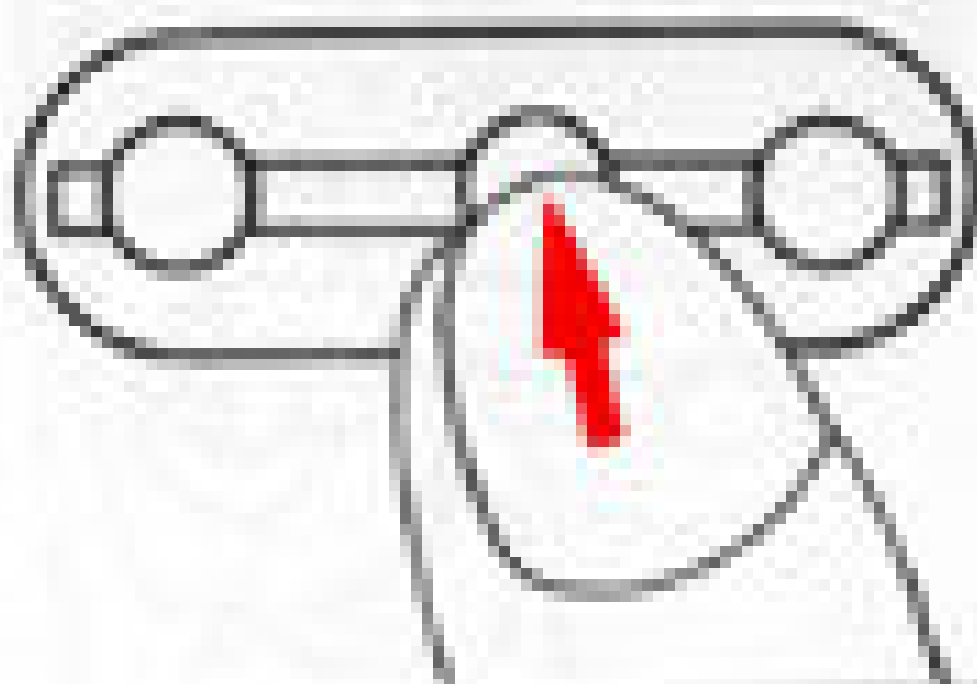 

25 0:00.

