

YASHICA

TWIN-LENS REFLEX CAMERA

MAT-124

INSTRUCTION BOOKLET

66

ORIGINAL YASHICA-MAT 124 SYSTEM ACCEPTS BOTH 120 (12 exposures)
& 220 (24 exposures) FILM.

YASHICA-MAT 124 permits use of either 120 or 220 film by simply adjusting the position of the pressure plate.

YASHICA-MAT 124 assures perfect exposure through a sure and simple needle-matching method. Combinations of shutter speed and lens aperture settings are visible during composition and focusing.

YASHICA-MAT 124 features an original meter switching system coupled to the viewfinder hood. This switch will prevent draining of the battery.



Your YASHICA MAT 124 features a magnifying lens for visible-from-above window settings of lens opening and shutter speed.

MAT-124



DESCRIPTION OF PARTS





LOADING THE MERCURY BATTERY



- ① Open the Battery Compartment Lid by using the edge of a coin.

Your YASHICA MAT 124 uses a 1.3 V mercury battery to power its exposure meter. Use either Mallory PX-13B, Eveready EPR-8 or equivalent.



- ② Place the mercury battery in the Battery Compartment, make sure the (-) side faces inside. The lid will fail to close if the polarity of the battery is reversed. One replacement of a mercury battery provides sufficient power to work the meter for a period of about two years under normal use. However, it is advisable to check the battery once or twice a year. Keep focusing hood fold down when camera is not in use.

FEATURES

- Type: Twin-lens reflex camera accepting either 120 (12 exposures) or 220 (24 exposures) film.
- Lens: YASHINON 80mm F3.5 lens composed of 4 elements in 3 groups.
- Shutter: COPAL-SV shutter with speeds from 1 to 1/500 sec. and B; built-in self-timer; MX flash synchronizer selector; shutter locking device.
- Finder: YASHINON 80mm F2.8 viewing lens; Fresnel field lens for corner-to-corner brightness; 3X magnifying lens for critical focusing; eye-level sports-finder frame incorporated in the viewfinder hood.
- Exposure meter: Built-in match-needle type CdS meter based on preselection of shutter speed; film speed range from ASA 25 to 400; meter switch coupled to viewfinder hood; warning signal on body section; operates on 1.3V mercury battery.
- Film advance: Crank-handle film advance with automatic film stop simultaneously charges the shutter for the next exposure; automatic resetting exposure counter registers the number of exposed frames.
- Focusing: Extra-large knob extends or retracts the front panel to secure focus on the subject; distance scale calibrated in both feet and meters (3.3 ft to infinity; 1m to infinity).
- Other features: Aperture scale from F3.5 to F32; adjustable film pressure plate usable with both 12 and 24 exposure load film; exposure load reminder window; threaded cable release socket; hinged back cover; ASA-DIN conversion table; bayonet-type filter mount accepting 30mm filters; 30mm ϕ filter mount (bayonet type).
- Dimensions: 77x148x101mm
- Weight: 1,100 grams

CORRECT EXPOSURE SETTING (1)



- 1 Turn the ASA Film Speed Setting Ring until the figure denoting the ASA rating of the film in use aligns with the red indicator in the ASA Film Speed Indicator Window.
(See Page 11 for more details on ASA Speed Rating)



- 2 Center the desired shutter speed in the Shutter Speed Indicator Window by turning the Shutter Speed Control Dial. The exposure meter pointer in the Exposure Indicator Window is coupled to the shutter mechanism and will shift in either direction when the shutter speed is adjusted.



- ③ The exposure meter begins to function when the focusing hood is set upright by lifting it up gently with your fingertip.



- When the camera is to be left unused, fold the focusing hood. This will switch off the meter and prevent draining of battery power.

CORRECT EXPOSURE SETTING (2)



- [4] Turn the Aperture Control Dial and coincide the yellow follower needle (coupled to the aperture mechanism) with the red meter pointer (coupled to the shutter mechanism), both visible in the Exposure Indicator Window.
- The correct combination of the shutter speed and lens aperture can be seen at a glance in the Shutter Speed and Aperture Indicator Windows.



- When the yellow follower needle (Y) perfectly coincided with the meter pointer (I), it signifies that your YASHICA MAT 124 is set for correct exposure. The proper combination of the shutter speed and aperture is shown in the Shutter Speed and Aperture Indicator Windows.



- If the yellow follower needle fails to align with the meter pointer, alter the shutter speed setting by turning the Shutter Speed Control Dial in either direction. If the two needles fail to match even when both the shutter speed and aperture settings are changed, it means that correct exposure cannot be obtained under the prevailing light condition. In such a case, the use of a flash unit is advised.

ASA FILM SPEED RATING

ASA rating indicates the sensitivity of the emulsion of the film and is clearly imprinted on the box or instructions which come with the film.

ASA FILM SPEED SCALE

25 | 32 | 40 | 50 | 64 | 80 | 100 | 125 | 160 | 200 | 250 | 320 | 400

SHUTTER SPEED

The following is a table of shutter speeds for beginners when shooting with ASA 100 film:

Light Condition	Average Subject
Bright sun	1/500 - 1/250 sec.
Cloudy bright	1/250 - 1/125 sec.
Heavy overcast or rain	1/60 - 1/30 sec.
Indoor	1/30 sec. or slower
Special conditions	1 sec. or B

Set desired shutter speed by turning shutter speed control dial. To determine Aperture control dial and align yellow follower needle with red meter pointer.

BRILLIANT, EASY-TO-USE FINDER



Set the Focusing Hood upright by lifting it up all the way. The Focusing Screen feature eight red lines which facilitate picture composition.



FOCUSING



Your YASHICA-MAT 124 features a magnifying lens for critical focusing which springs up into position when the sports-finder frame section of the Focusing Hood is pushed in slightly.



To focus, turn the Focusing Knob while observing the image of your subject produced on the Focusing Screen. After focusing, compose your picture.



In focus

Your YASHICA-MAT 124 is in focus when the image on the Focusing Screen appears clear and crisp.



Out of focus

Your subject will appear blurred on the Focusing Screen when it is out of focus.

LOADING THE FILM



- 1 The Back Cover will spring open when the Back Cover Locking Ring is turned in the direction of "O" (Open).

Note: The exposure counter resets automatically to "S" (Start) when the Back Cover is opened.



- 2 Pull out the Upper Spool Holder Knob and place the empty spool in the Take-Up Spool Chamber. After the Take-up Spool is set properly in the camera, return the Spool Holder Knob to its original position.

Adjust the position of the film pressure plate according to the type of film loaded in the camera.

12



- 8 When loading a 120 film (12 exposures), position the green  mark on the film pressure plate so that it aligns precisely with the green 12 EX indication. Set the pressure plate so that its hole  rests properly on the stud and slide it toward the smaller side of the twin hole to mount it in position.

24



- 9 When loading a 220 film (24 exposures), align the red  mark on the film pressure plate with the red 24 EX indication and mount it in position in the same manner as explained above.



④



- ④ Place the unexposed roll of film in the lower film chamber while pulling out the Lower Spool Holder Knob. Also make sure that the Lower Spool Holder is returned to its original position after loading the film.

 
- ⑤ Draw out the film leader gently and introduce its tip straight and amply into the slot on the spindle of the Take-up Spool.

The film may fail to advance if the film leader is not inserted properly into the slot.


⑥



- ⑥ After ascertaining that the trimmed edge of the film leader rests flush against the edge of the slot, turn the Film Wind Crank-handle gently in the direction of the arrow and check whether the film is advancing properly.



 
- 7 Continue winding the film until the "start" mark on the film leader paper lines up with the green triangular (▲) "start" mark for 120 film on the body side.



- 8 Continue winding the film until the "start" mark on the film leader paper lines up with the red triangular (▲) "start" mark 220 film on the body side.



 - 8 Then, close the Back Cover and turn the Back Cover Locking Ring toward "C" (Close) while pressing the cover. (When closing the Back Cover, see that the lug on the body rests properly in the slot on the Back Cover Latch.)



- 9 The letter "S" appears in the Exposure Counter during the film loading operation. After closing the Back Cover, wind the crank-handle until the figure "1" appears in the Exposure Counter window.

FILM WIND CRANK—HANDLE



- 1 First, turn the Crank-handle all the way in a clockwise motion (toward 1).
- 2 Then, wind it all the way in a counter-clockwise motion (toward 2) to charge the shutter.

CAUTION: In case of slow shutter speeds (1 sec. to 1/15 sec.), make sure the shutter mechanism completes its function before winding the film.

 
EXPOSURE LOAD REMINDER WINDOW

When the back cover is closed, the exposure load reminder window will show "12 EX" (green) in case of 120 film, and "24 EX" (red) in case of 220 film to enable checking of the exposure load of the film in use.

UNLOADING THE FILM



- I When the figure "12" appears in the exposure counter window, it signifies that the full length of the film has been exposed. Another wind of the crank-handle will set the exposure counter between "12" and "13", but continue winding until the crank-handle turns freely without tension.



- II When the figure "24" appears in the exposure counter window, it signifies that the full length of the film has been exposed. Another wind of the crank-handle will bring out the  mark in the window, but continue winding until the crank-handle turns freely without tension.



- 2 Open the Back Cover by turning the Back Cover Locking Ring in the direction of "O" (Open).



- 3 Pull out the Upper Spool Holder Knob and take out the exposed film from the film chamber. Paste the seal to prevent recoiling and wrap the film in light-proof paper.



- To minimize the trouble in loading your next film, it is advisable to take out the empty spool from the lower film chamber and to set it in the upper chamber immediately after unloading the exposed film.

The YASHICA-MAT 124 is the only twin-lens reflex camera which enables use of either 120 (12 exposures) or 220 (24 exposures) film without the aid of an adapter. Always see to it that the film pressure plate is adjusted properly and the appropriate "start" mark is used when loading the film. Make sure the film pressure plate is positioned precisely to "12 EX" marking when using a 120 film, and to "24 EX" marking when loading a 220 film.

The exposure load reminder window will instantly show whether or not proper adjustment has been made.

To prevent waste of film, see that the right "start" mark is used in film loading.

SHUTTER LOCKING LEVER



The Shutter Locking Lever located on the base of the Shutter Release Button offers an effective provision against accidental tripping of the shutter. To lock the shutter, shift the Shutter Locking Lever and align it with "L" (Lock).

SHOOTING POSTURES



Actual size of 6×6cm exposures.



TECHNICAL POINTERS

For tips on better picture-taking and details of other advantageous features incorporated in your YASHICA-MAT 124 read the following pages.

TIPS ON BETTER PICTURE-TAKING



Color Photography:

For best results in color photography, see that your subject receives the light directly from the front. The even distribution of light over the entire subject area will assure better color balance.



Shooting Open Scenes:

When shooting landscapes or other open scenes, the use of a lens hood is recommended to ward off extraneous reflected light.



Shooting Backlighted Subjects:

The CdS exposure meter built into your YASHICA-MAT 124 is designed to make automatic compensation for exposure when shooting against light; therefore, take the exposure reading in the normal way.

In case you wish to bring out your main subject brighter, approach your subject and set the exposure accordingly.

USE OF FILTER



When shooting under blazing sunlight or photographing snow or beach scenes, the use of a filter is recommended to assure better overall effect.

When using filter, make compensation for exposure according to the filter factor. (For instance, double the exposure when a Y2 filter is mounted over the taking lens.)



In case the correct combination of shutter speed and aperture is 1/250 sec. and F8, turn the Aperture Control Dial and set the lens aperture to F5.6 when using a Y2 filter.

FLASH EXPOSURE



When using a conventional flash gun or electronic flash, mount it directly on the accessory shoe or with a bracket attached to the Tripod Socket of the camera.

Plug the PC cord of the flash unit into the Flash Contact of the camera.

Correct exposure in flash photography is determined by referring to the guide number of the flash bulb or electronic flash in use. The correct aperture is obtained by dividing the guide number for a specific ASA film speed rating by the camera-to-subject distance.



Always set the Flash Synchronizer Selector to "M" with M-class bulbs.

Flash unit	Flash Contact	Shutter speeds
M-class bulbs	M	All speeds
F-class bulbs	X	1/30 sec. or slower
Electronic flash	X	All speeds

Switch the Flash Synchronizer Selector to "X" when using F-class flash bulbs or electronic flash.



The guide number is clearly indicated on the outer box or instructions which come with the flash bulbs or electronic flash.

SELF-TIMER



When using the self-timer, always see to it that the Flash Synchronizer Selector is switched to "X" position.

① Charge the shutter by winding the Crank-handle and then set the Self-Timer by shifting the lever on the bottom of the lens barrel section in the direction of the arrow.

② The Self-Timer is activated through depression of the Self-Timer Button and trips the shutter after a delay of 6 to 15 seconds.

When shooting with the aid of the self-timer, it is advisable to mount the camera on a tripod or to set it on a firm surface.

Caution: Avoid manipulating the Self-Timer Lever while the Flash Synchronizer Selector is set at "M" position, since it may cause damage to the Self-Timer mechanism.





B (BULB) EXPOSURE


At "B" (Bulb) setting, the shutter remains open over the duration the Shutter Release Button is depressed. This setting is used for long exposures under subdued light conditions or in shooting fireworks, etc.



CABLE RELEASE

When shooting at 1/30 sec. or slower shutter speeds or making B (bulb) exposures, it is advisable to mount the camera on a tripod and to use a cable release to prevent erratic movement of the camera during exposure. To mount the cable release, screw it into the Cable Release Socket on the Shutter Release Button.

DEPTH OF FIELD

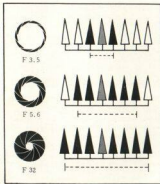


The depth of field is the range in the foreground and background over which all objects appear acceptably sharp when the camera is focused on a given subject. The extent of the depth of field varies with the aperture of the lens and the camera-to-subject distance.

This depth of field is employed either in obtaining almost identical sharpness of the main subject and the background, or in blurring out the background to emphasize the main subject.

The depth of field is more extensive . . .

- When the lens is stopped down to a smaller aperture.
- When the camera is focused on a distant subject rather than on a close subject.
- In the background than in the foreground.

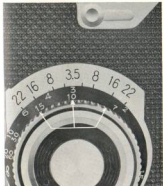

The depth of field for a given aperture and camera-to-subject distance can be read off the depth-of-field scale around the Focusing Knob. By checking this scale, you can easily determine before shooting the extent over which the objects will appear sharp and clear.

When your camera is focused on a subject at a distance of 16 feet, and the lens aperture is set at F16, the range indicated by figures "16" on both sides of the distance scale index is the extent of the depth of field. In other words, all objects from a distance of about 7 feet to 15 feet will appear sharp and clear on the film.

SPORTSFINDER



The Sportsfinder incorporated in the Focusing Hood comes in handy for snapshots or when shooting fast-moving subjects at eye-level.

To set the Sportsfinder for action, press the Sportsfinder Frame Cover all the way in until it clicks in place.



To close the Cover, push the Release Button on the back of the Focusing Hood.



YASHICA FILTERS

Filters for B&W photography (Y2, 02, UV)

with 30mm bayonet mount.

UV filter is also effective as protection of the lens surface against accidental scratching.

EXCLUSIVE LENS HOOD (with leather case)

30mm bayonet mount.

The use of a lens hood is recommended to ward off reflected light when shooting open scenes.

DEPTH OF FIELD TABLE

(Meters)

Aperture	f/2.8	f/3.5	f/4	f/5.6	f/8	f/11	f/16	f/22
1m	N F	0.97 1.03	0.97 1.04	0.96 1.05	0.94 1.07	0.91 1.10	0.88 1.16	0.84 1.23
1.2	N F	1.17 1.25	1.15 1.26	1.14 1.27	1.12 1.31	1.08 1.35	1.03 1.48	0.98 1.68
1.5	N F	1.44 1.57	1.43 1.58	1.40 1.62	1.36 1.67	1.32 1.75	1.25 1.89	1.17 2.09
2	N F	1.89 2.13	1.87 2.15	1.83 2.21	1.76 2.32	1.68 2.46	1.57 2.75	1.45 3.2
3	N F	2.6 3.3	2.7 3.4	2.6 3.5	2.5 3.8	2.3 4.2	2.2 5.1	1.9 5.9
4	N F	3.6 4.5	3.5 4.7	3.4 5.0	3.1 5.5	2.9 6.4	2.6 8.8	2.3 15.1
6	N F	5.0 7.3	4.9 7.6	4.7 8.4	4.3 10.2	3.8 13.8	3.3 19	2.8 29
10	N F	7.7 14.3	7.5 15.2	6.8 19.2	5.9 25	5.2 33	4.3 49	3.5 75
20	N F	12.5 29.8	11.9 30	10.3 35	8.5 42	6.8 54	5.4 72	4.2 100
∞	N F	∞ ∞	29.3 ∞	20.9 ∞	14.6 ∞	10.6 ∞	7.3 ∞	5.3 ∞

(Feet)

Aperture	f/2.8	f/3.5	f/4	f/5.6	f/8	f/11	f/16	f/22
3.3	N F	3.21 3.4	3.19 3.42	3.15 3.47	3.09 3.54	3.02 3.64	2.9 3.75	2.78 4.07
4	N F	3.88 4.15	3.84 4.17	3.78 4.25	3.69 4.36	3.59 4.52	3.48 4.8	3.26 5.19
5	N F	4.78 5.24	4.75 5.28	4.66 5.39	4.53 5.58	4.37 5.84	4.14 6.33	3.89 7.01
7	N F	6.58 7.48	6.52 7.55	6.35 7.8	6.11 8.2	5.83 8.76	5.42 10.88	5.05 11.68
10	N F	9.2 11.0	9.1 11.2	8.8 11.7	8.3 12.6	7.8 14.0	7.1 17.1	6.4 23.4
15	N F	14.2 17.4	13.9 17.8	12.3 19.2	11.4 21.8	10.5 26.3	9.2 40.0	8.1 ∞
20	N F	23.6 43.9	22.9 43.7	20.9 53.4	18.9 60.1	16.1 ∞	13.3 ∞	11.0 ∞
40	N F	38.8 ∞	36.9 ∞	32.0 ∞	26.7 ∞	22.1 ∞	17.2 ∞	13.5 ∞
∞	N F	∞ ∞	∞ ∞	68.5 ∞	48.0 ∞	34.9 ∞	24.0 ∞	17.5 ∞

MEMO

698K5Y15



YASHICA CO., LTD. Shinyokohama, Tokyo, Japan

■ YASHICA EUROPE GmbH, 2 Hamburg 28, Billrothstrasse 18, West Germany

■ YASHICA INC., 5017 Queens Blvd., Woodside, N.Y. 11377 U.S.A.

Printed in Japan