



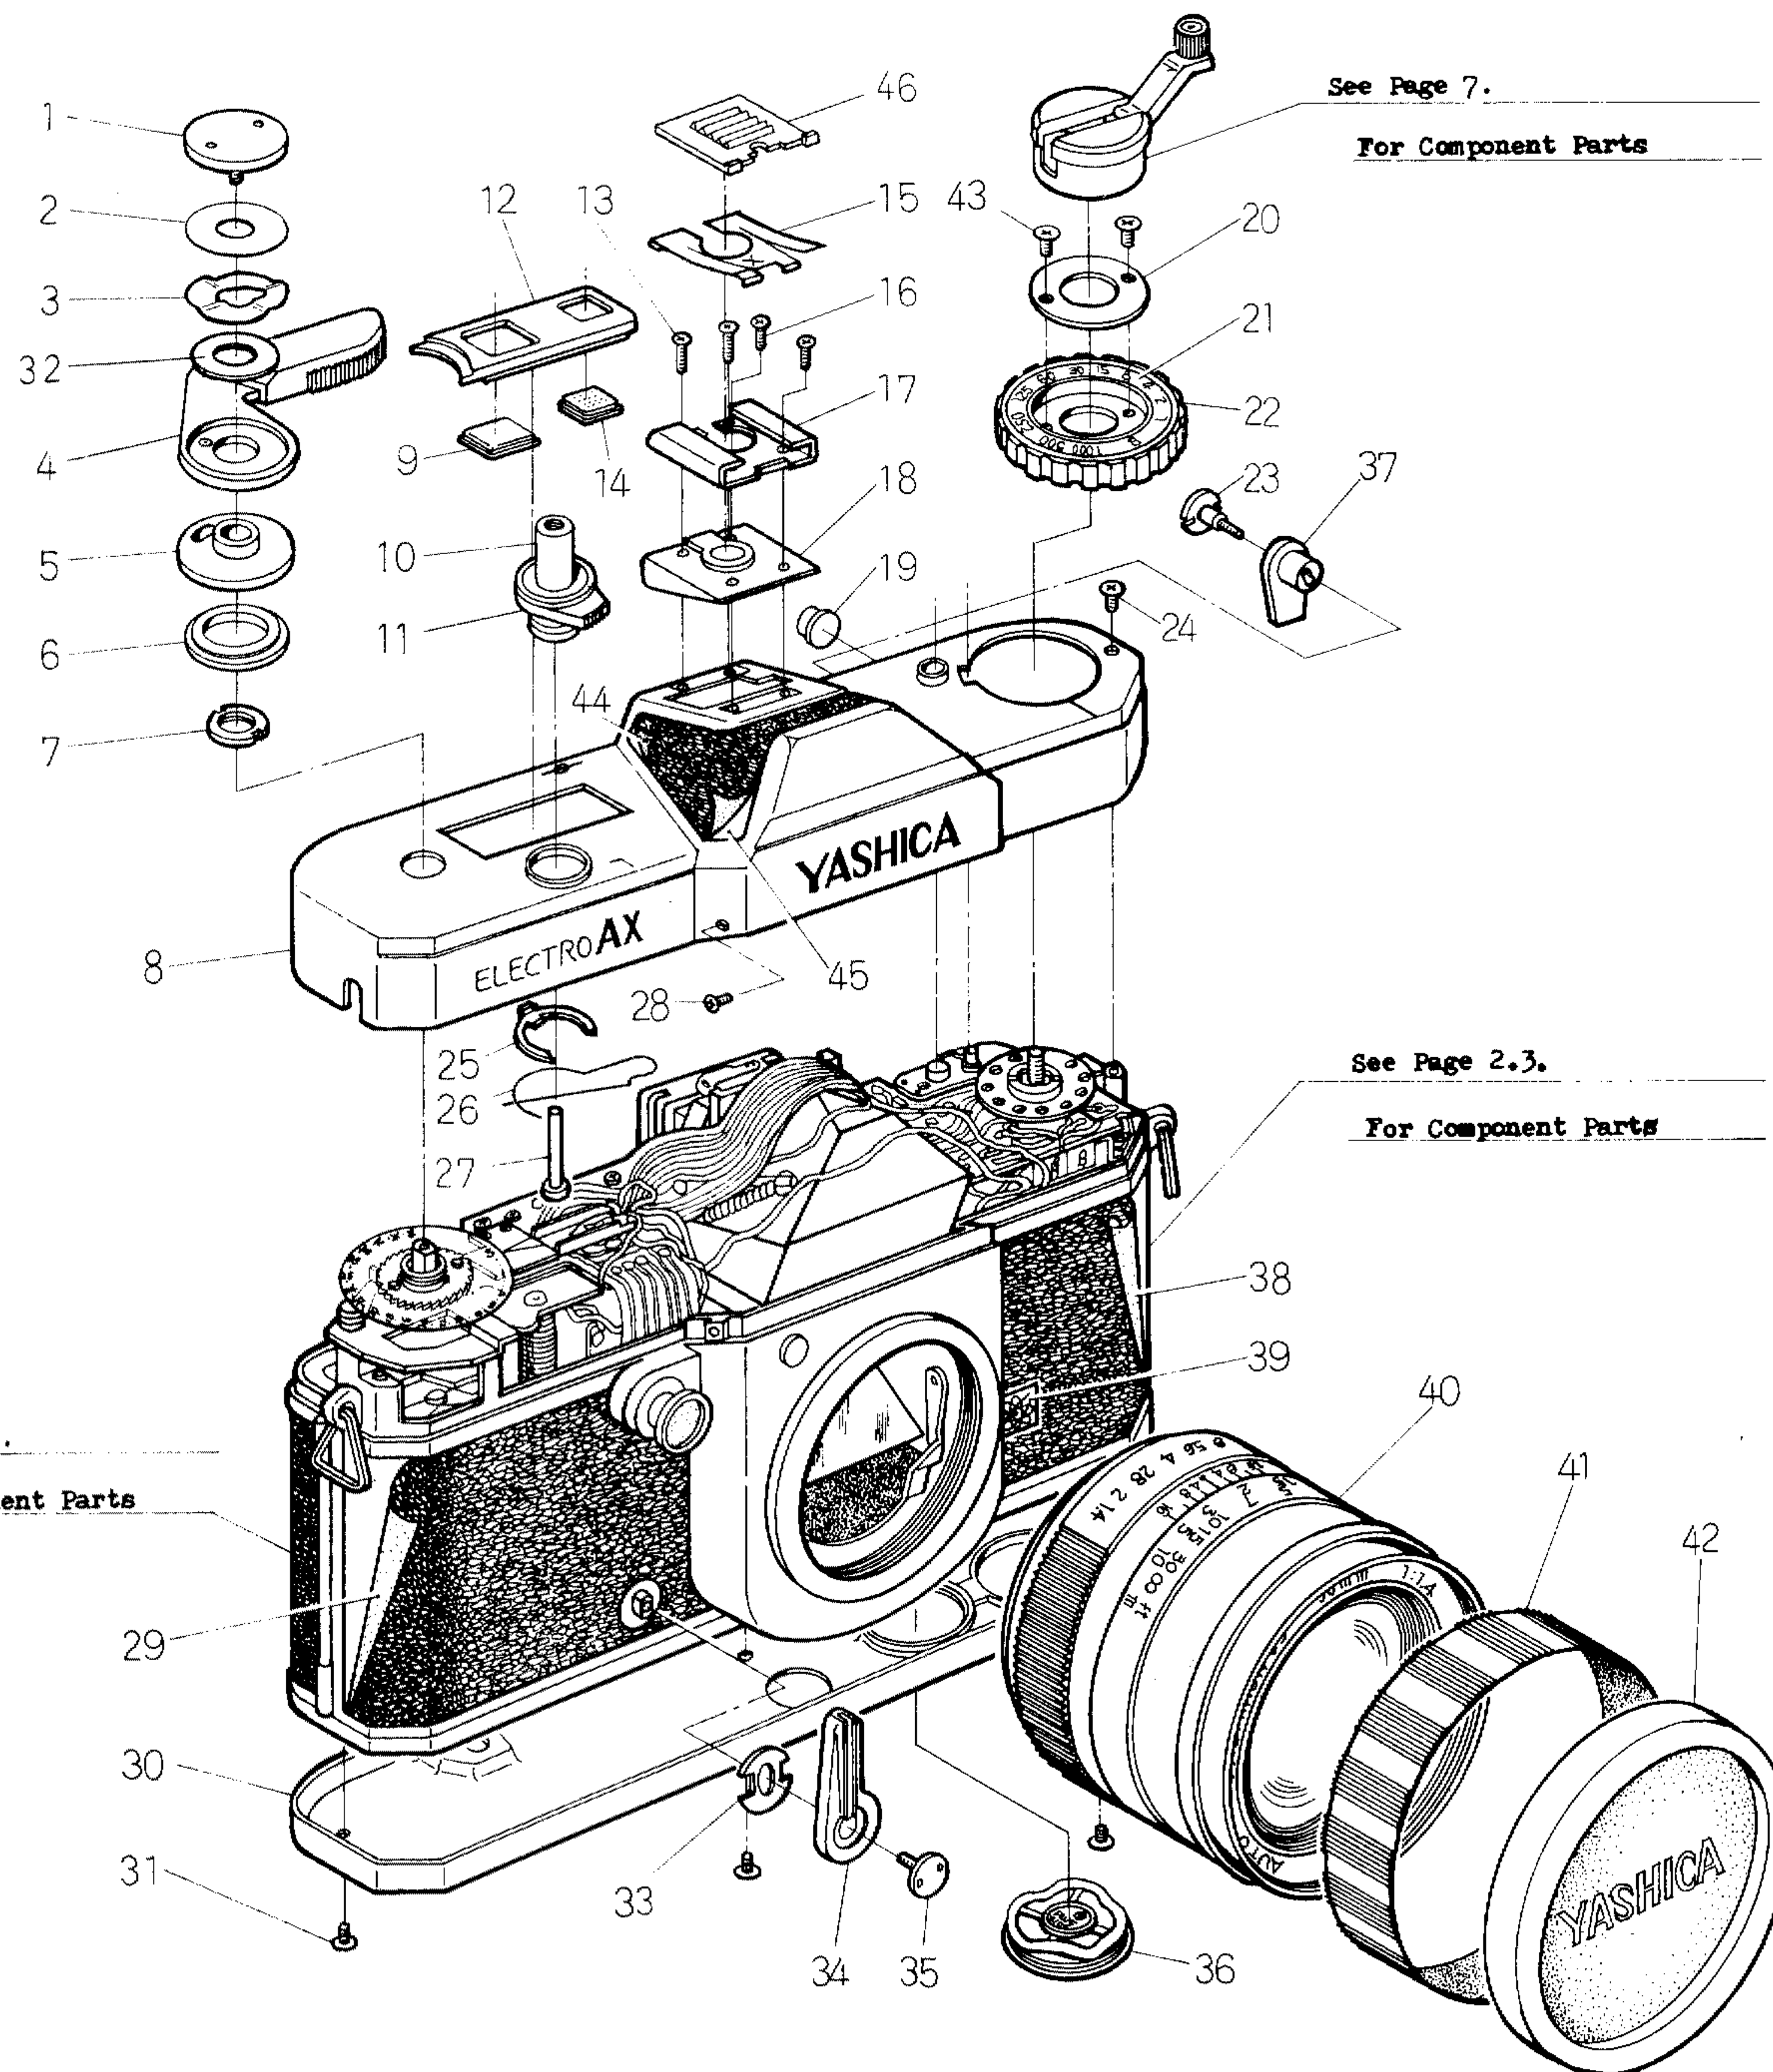

	PARTS NO	DESCRIPTION	QUANTITY
1	111-404	Winding Lever Screw	1
2	60327124	Washer	1
3	101-407	Winding Lever Friction Spring	1
4	109-06800	Winding Lever Ass'y	1
5	109-673	Winding Lever Base	1
6	109-693	Accessory Collar	1
7	109-672	Nut Fixed F Cover	1
8	109-06710	F Cover Ass'y	1
9	109-884	Counter Lamp Window	1
10	109-106	Release Button	1
11	109-06720	Lock Lever Ass'y	1
12	109-883	Counter Lamp Frame	1
13	61817022	Screw	2
14	109-885	Exposure Lamp Window	1
15	101-422	Shoe Dress Plate Spring	1
16	61814022	Screw	2
17	170-421	Accessory Shoe	1
18	109-06730	Contact Insulating Plate Ass'y	1
19	109-528	Battery Check Button	1
20	109-526	Manual Ring Cover	1
21	109-511	Shutter Dial Plate	1
22	109-510	Manual Ring	1
23	109-831	Eyepiece Lever Screw	1
24	61812521	Screw	1
25	109-108	Snap Ring	1
26	109-110	Release Button Spring	1
27	109-107	Release Button Shaft	1
28	170-004	Finder Cover Screw	1
29	109-179	Front Leather A	1
30	109-120	Bottom Cover	1
31	61812521	Screw	3
32	111-405	Winding Lever Washer	1
33	109-141	Self-timer Lever Base	1
34	109-155	Self-timer Lever	1
35	121-636	Self-timer Lever Screw	1
36	31208800	Battery Case Cap Ass'y	1
37	109-09400	Eyepiece Lever Ass'y	1
38	109-180	Front Leather B	1
39	101-171	Elron Mark	1
40	MQ-1000	Auto YASHINON-DS 50mm 1:1.4	1
41	99055	Focusing Band	1
42	31223202	Lens Cap 57mm	1
43	61813021	Screw	2
44	109-116	Finder Cover Leather	1
45	109-117	Plate Under Leather	2
46	170-091	Plastic Cover	1
47			
48			

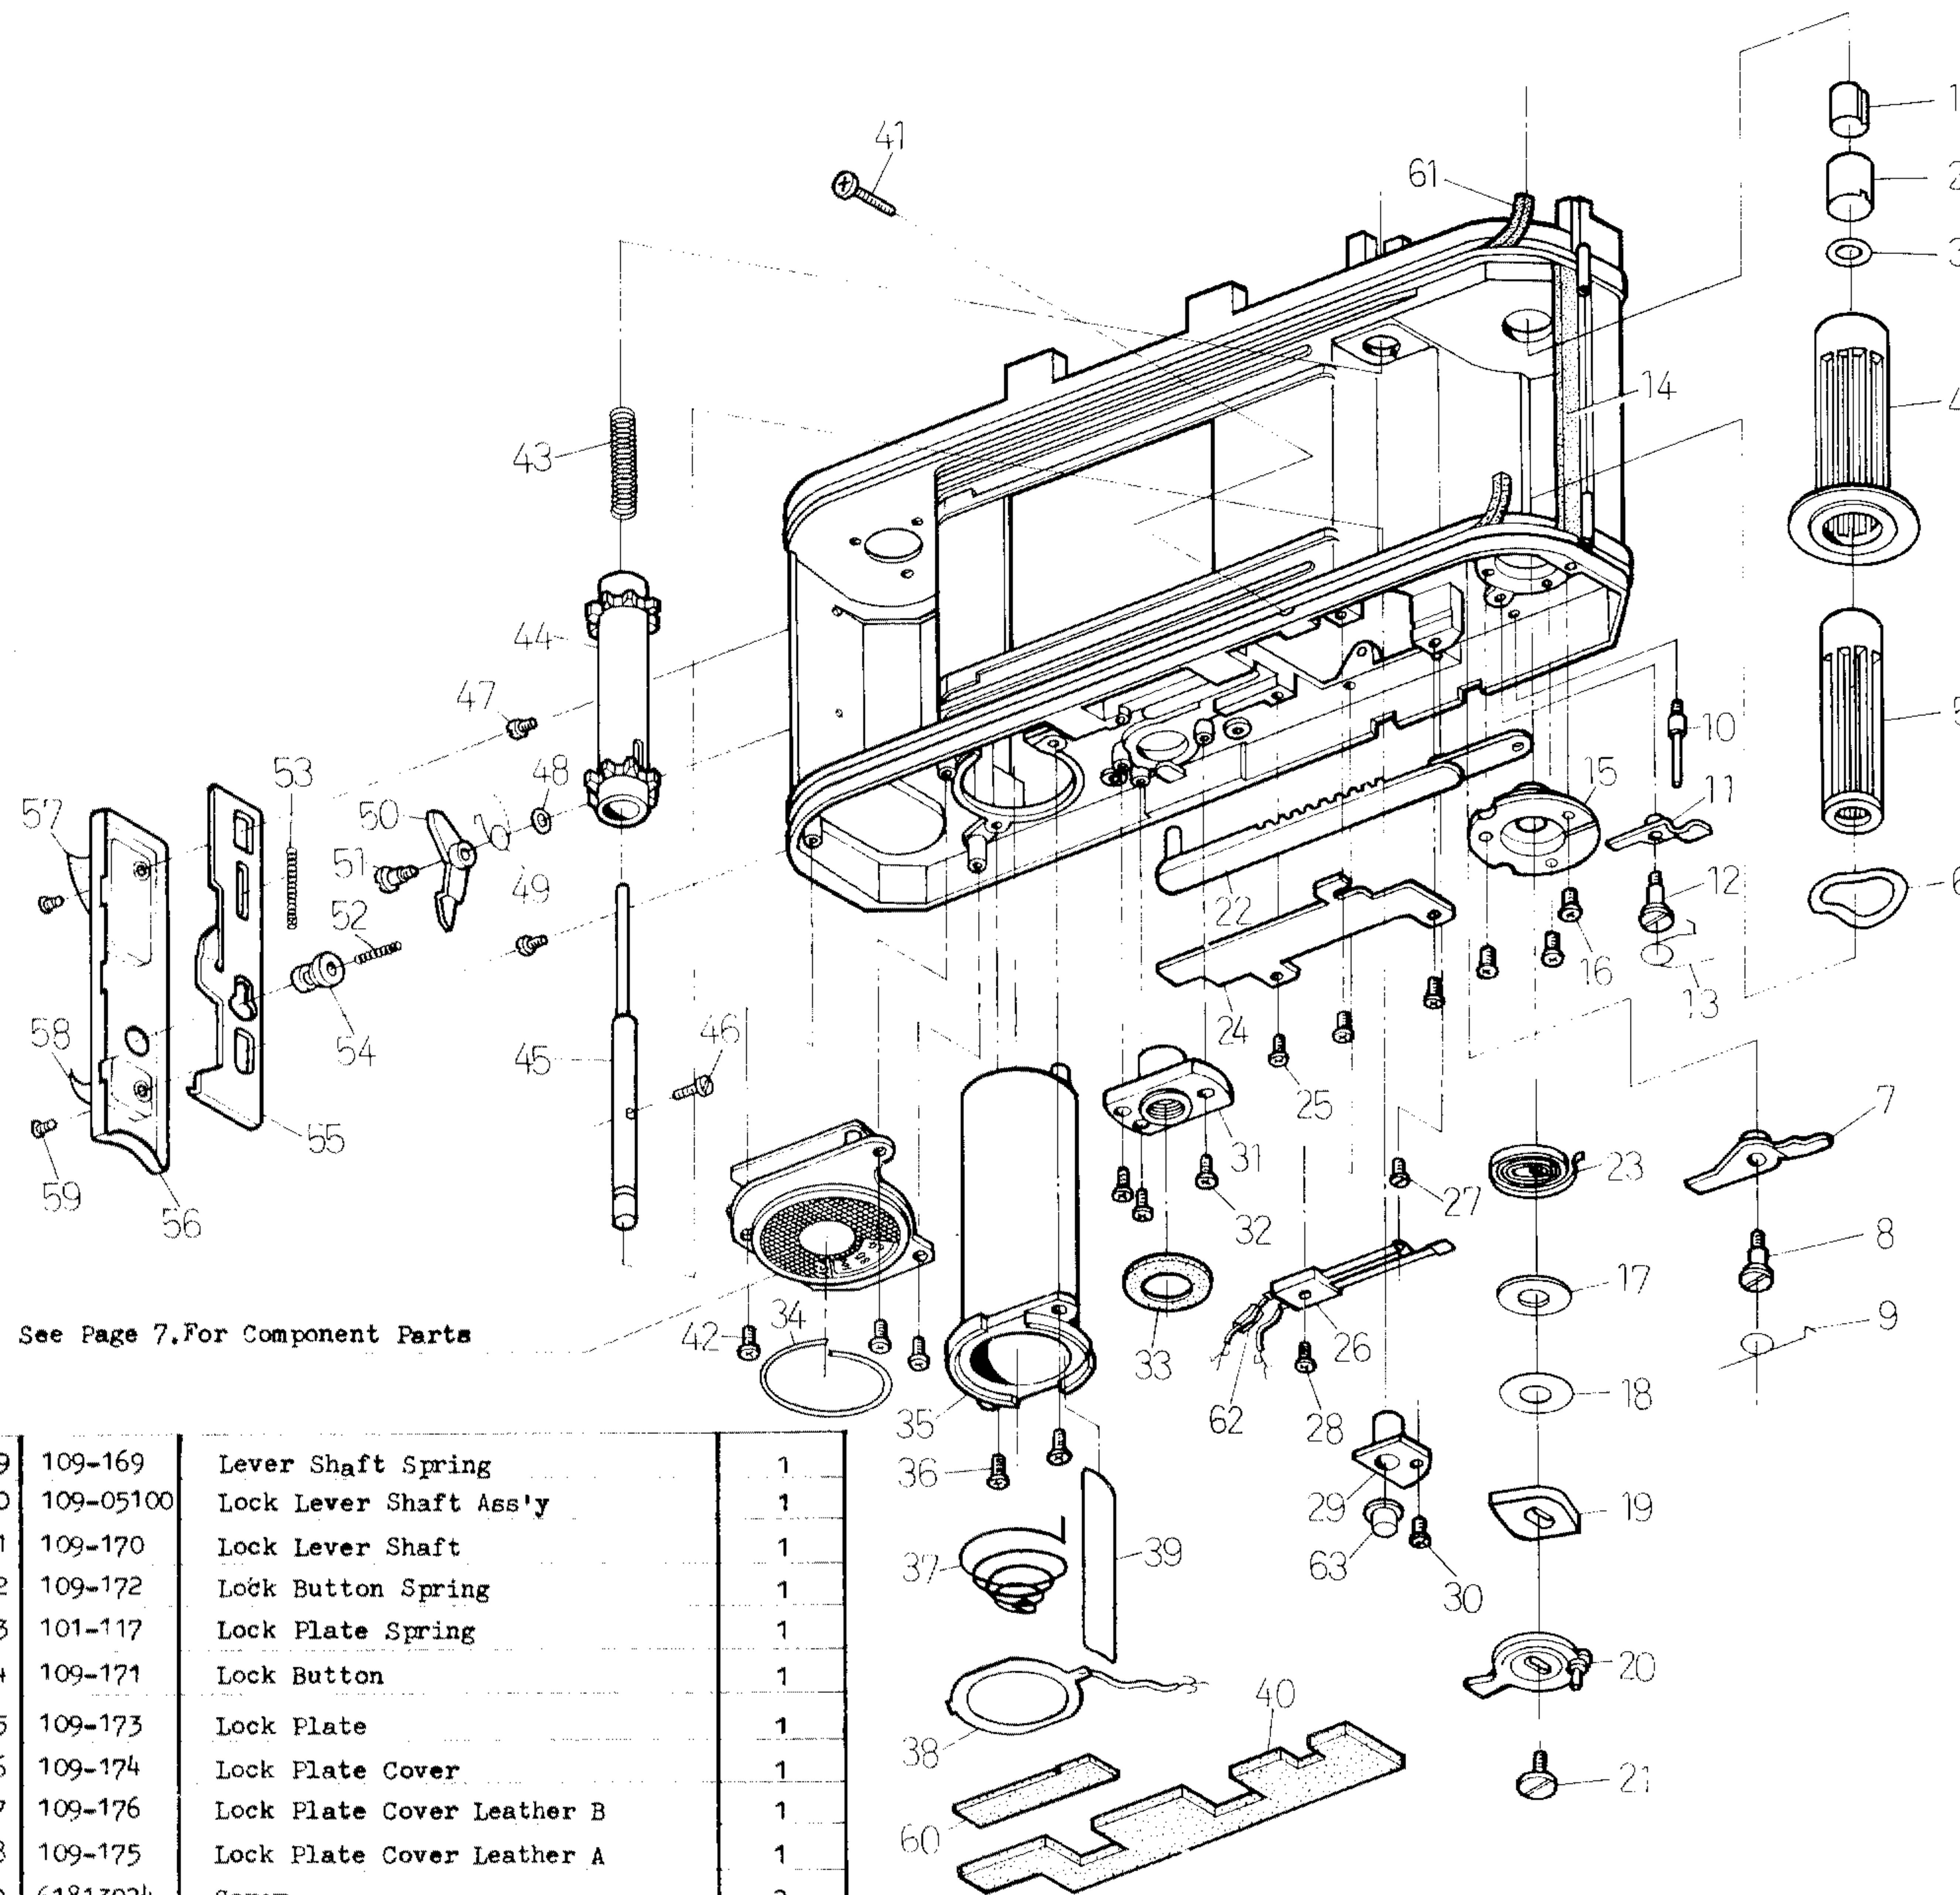


See Page 7. For Component Parts


49	109-169	Lever Shaft Spring	1
50	109-05100	Lock Lever Shaft Ass'y	1
51	109-170	Lock Lever Shaft	1
52	109-172	Lock Button Spring	1
53	101-117	Lock Plate Spring	1
54	109-171	Lock Button	1
55	109-173	Lock Plate	1
56	109-174	Lock Plate Cover	1
57	109-176	Lock Plate Cover Leather B	1
58	109-175	Lock Plate Cover Leather A	1
59	61813024	Screw	2
60	109-185	Moultplain	1
61	170-033	Body Light-proof Moultplain	2
62	109-592	Insulating Tube	1

63	101-482	Rewinding Button	1
----	---------	------------------	---

	PARTS NO	DESCRIPTION	QUANTITY
1	101-133	Friction Spring	1
2	101-190	Spool Collar	1
3	170-217	Washer	1
4	101-132	Outside Spool	1
5	101-131	Inside Spool	1
6	101-134	Outside Spool Spring	1
7	109-05200	Release Lever Ass'y	1
8	109-661	Sprocket Lever Shaft	2
9	109-662	Release Lever Spring	1
10	109-208	Shifting Shaft Guide	1
11	109-05700	Lock Lever Ass'y	1
12	109-661	See : 8	
13	109-211	Lock Lever Spring	1
14	109-183	Moultplain	1
15	101-614	Spool Shaft Holder	1
16	61912524	Screw	3
17	60474610	Washer	1
18	60414610	Adjusting Washer	
19	109-611	Sprocket Cam	1
20	101-609	Set Lever Ass'y	1
21	101-610	Set Lever Screw	1
22	109-05900	Set Rack Ass'y	1
23	101-616	Winding Spring	1
24	109-604	Rack Fixer	1
25	61923524	Screw	3
26	109-08570	Memory Switch Ass'y	1
27	OM 360	Adjusting Screw	1
28	61914024	Screw	1
29	101-174	Sprocket Shaft Holder(Lower)	1
30	61912524	Screw	1
31	101-118	Tripod Socket	1
32	61924024	Screw	3
33	101-178	Moultplain	1
34	109-593	ASA Cover	1
35	109-122	Battery Box	1
36	61913524	Screw	2
37	07606401	*Battery Box Spring	1
38	109-123	Battery Box Contact	1
39	08508800	Battery Box Plate	1
40	109-222	Moultplain	1
41	61924524	Screw	1
42	61913024	Screw	3
43	101-139	Sprocket Spring	1
44	109-651	Sprocket	1
45	109-650	Sprocket Shaft	1
46	101-137	Sprocket Screw	1
47	101-114	Slide Lock Shaft	2
48	60752210 60772210	Adjusting Washer	

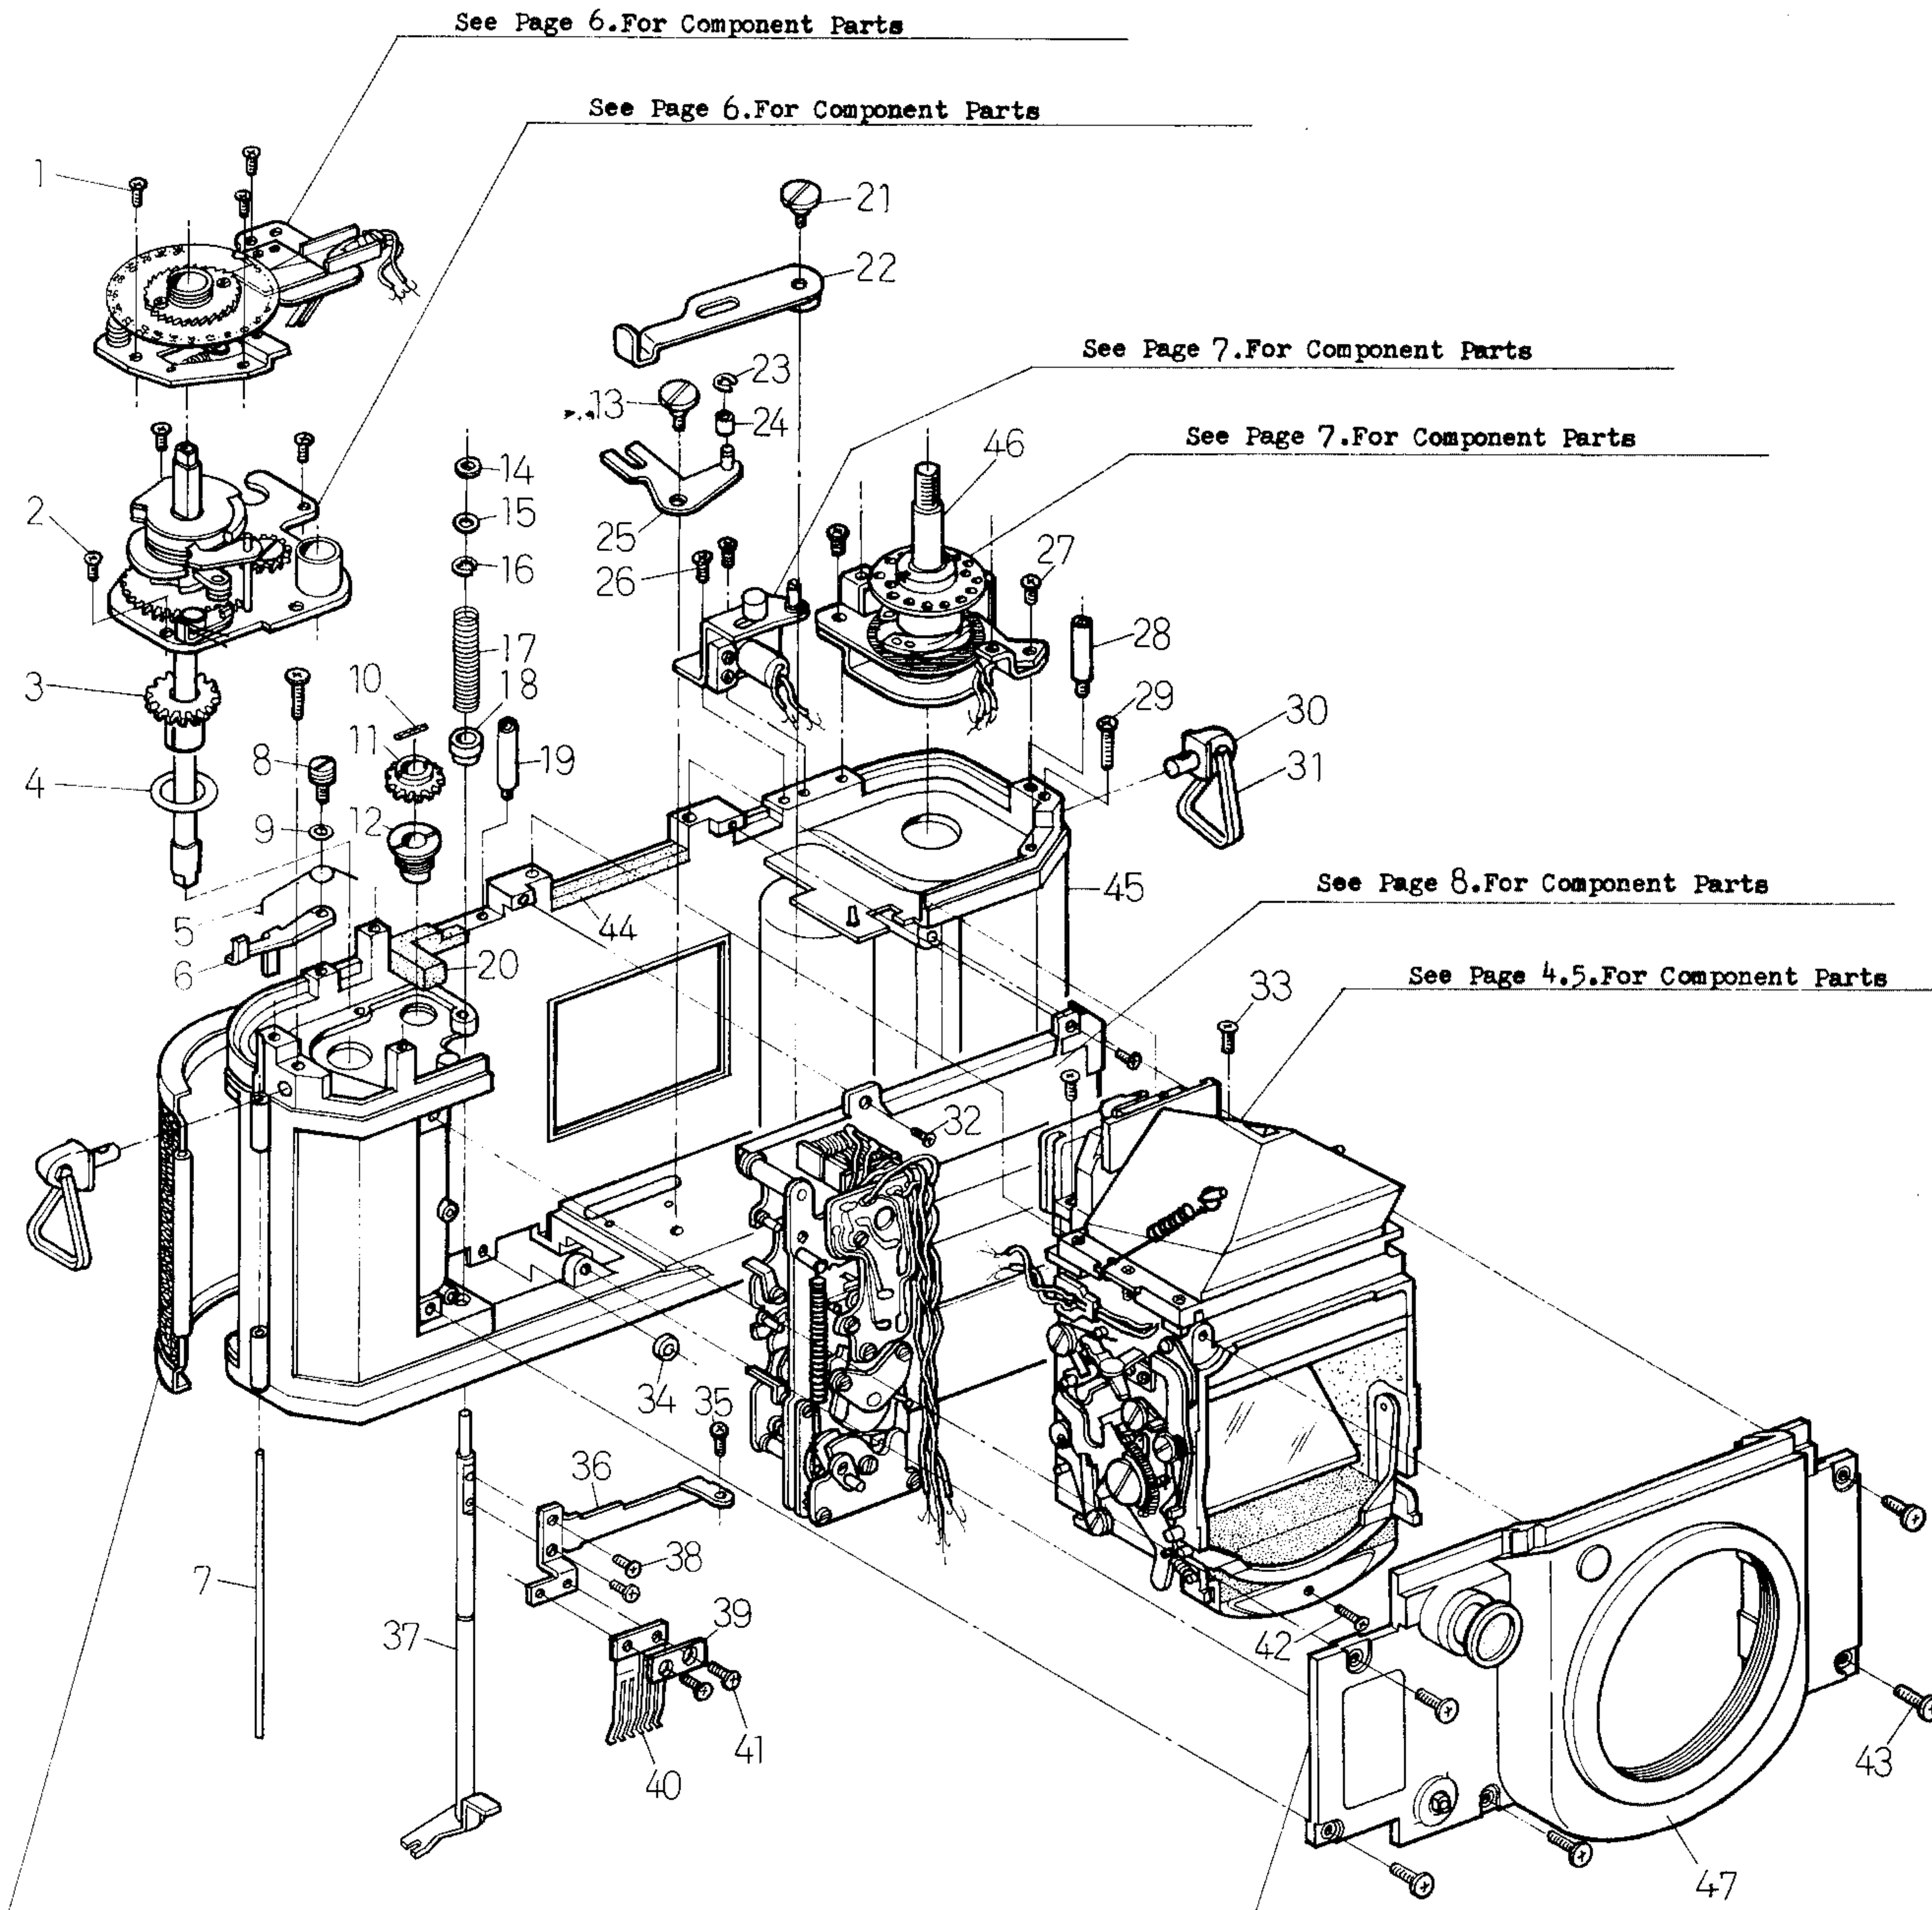


	PARTS NO	DESCRIPTION	QUANTITY
1	61912524	Screw	3
2	63913024	Screw	3
3	109-626	F Gear	1
4	60157610	F Gear Washer	1
5	109-879	Returning Lever Spring	1
6	109-877	Returning Lever	1
7	109-131	Back Cover Hinge Shaft	1
8	109-878	Returning Lever Shaft	1
9	60112110	Adjusting Washer	1
10	66660130	Spring Pin	1
11	101-624	D Gear	1
12	109-649	Sprocket Shaft Holder(Upper)	1
13	109-666	Charging Lever Shaft(I)	1
14	109-213	Shifting Shaft Cushion	1
15	60122110	Washer	1
16	66101525	Snap Ring	1
17	109-209	Shifting Shaft Spring	1
18	109-207	Shifting Shaft Holder(Lower)	1
19	109-115	Pillar(Supported F Cover)	2
20	101-180	Moultplain	1
21	109-669	Charging Lever Shaft(II)	1
22	109-06100	Charging Lever(II)Ass'y	1
23	66101525	Snap Ring	1
24	109-665	Charging Roller	1
25	109-06000	Charging Lever(I)Ass'y	1
26	61913024	Screw	2
27	61914024	Screw	2
28	109-115	See!19	
29	61927024	Screw	2
30	65005100	Strap Holder	2
31	65006100	Strap Holder Ring	2
32	61923522	Screw	2
33	61924024	Screw	2
34	101-159	Shutter Collar	1
35	61913524	Screw	1
36	109-221	Shifting Plate	1
37	109-205	Shifting Shaft	1
38	63913024	Screw	2
39	109-236	Sliding Switch Washer	1
40	109-220	Sliding Switch	1
41	61912524	Screw	2
42	61927024	Screw	1
43	109-194	Screw	5
44	109-181	Eyeiece Moultplain	1
45	109-101	Body	1
46	109-690	Rewinding Shaft	1
47	109-09200	Mount Base Ass'y	1
48			

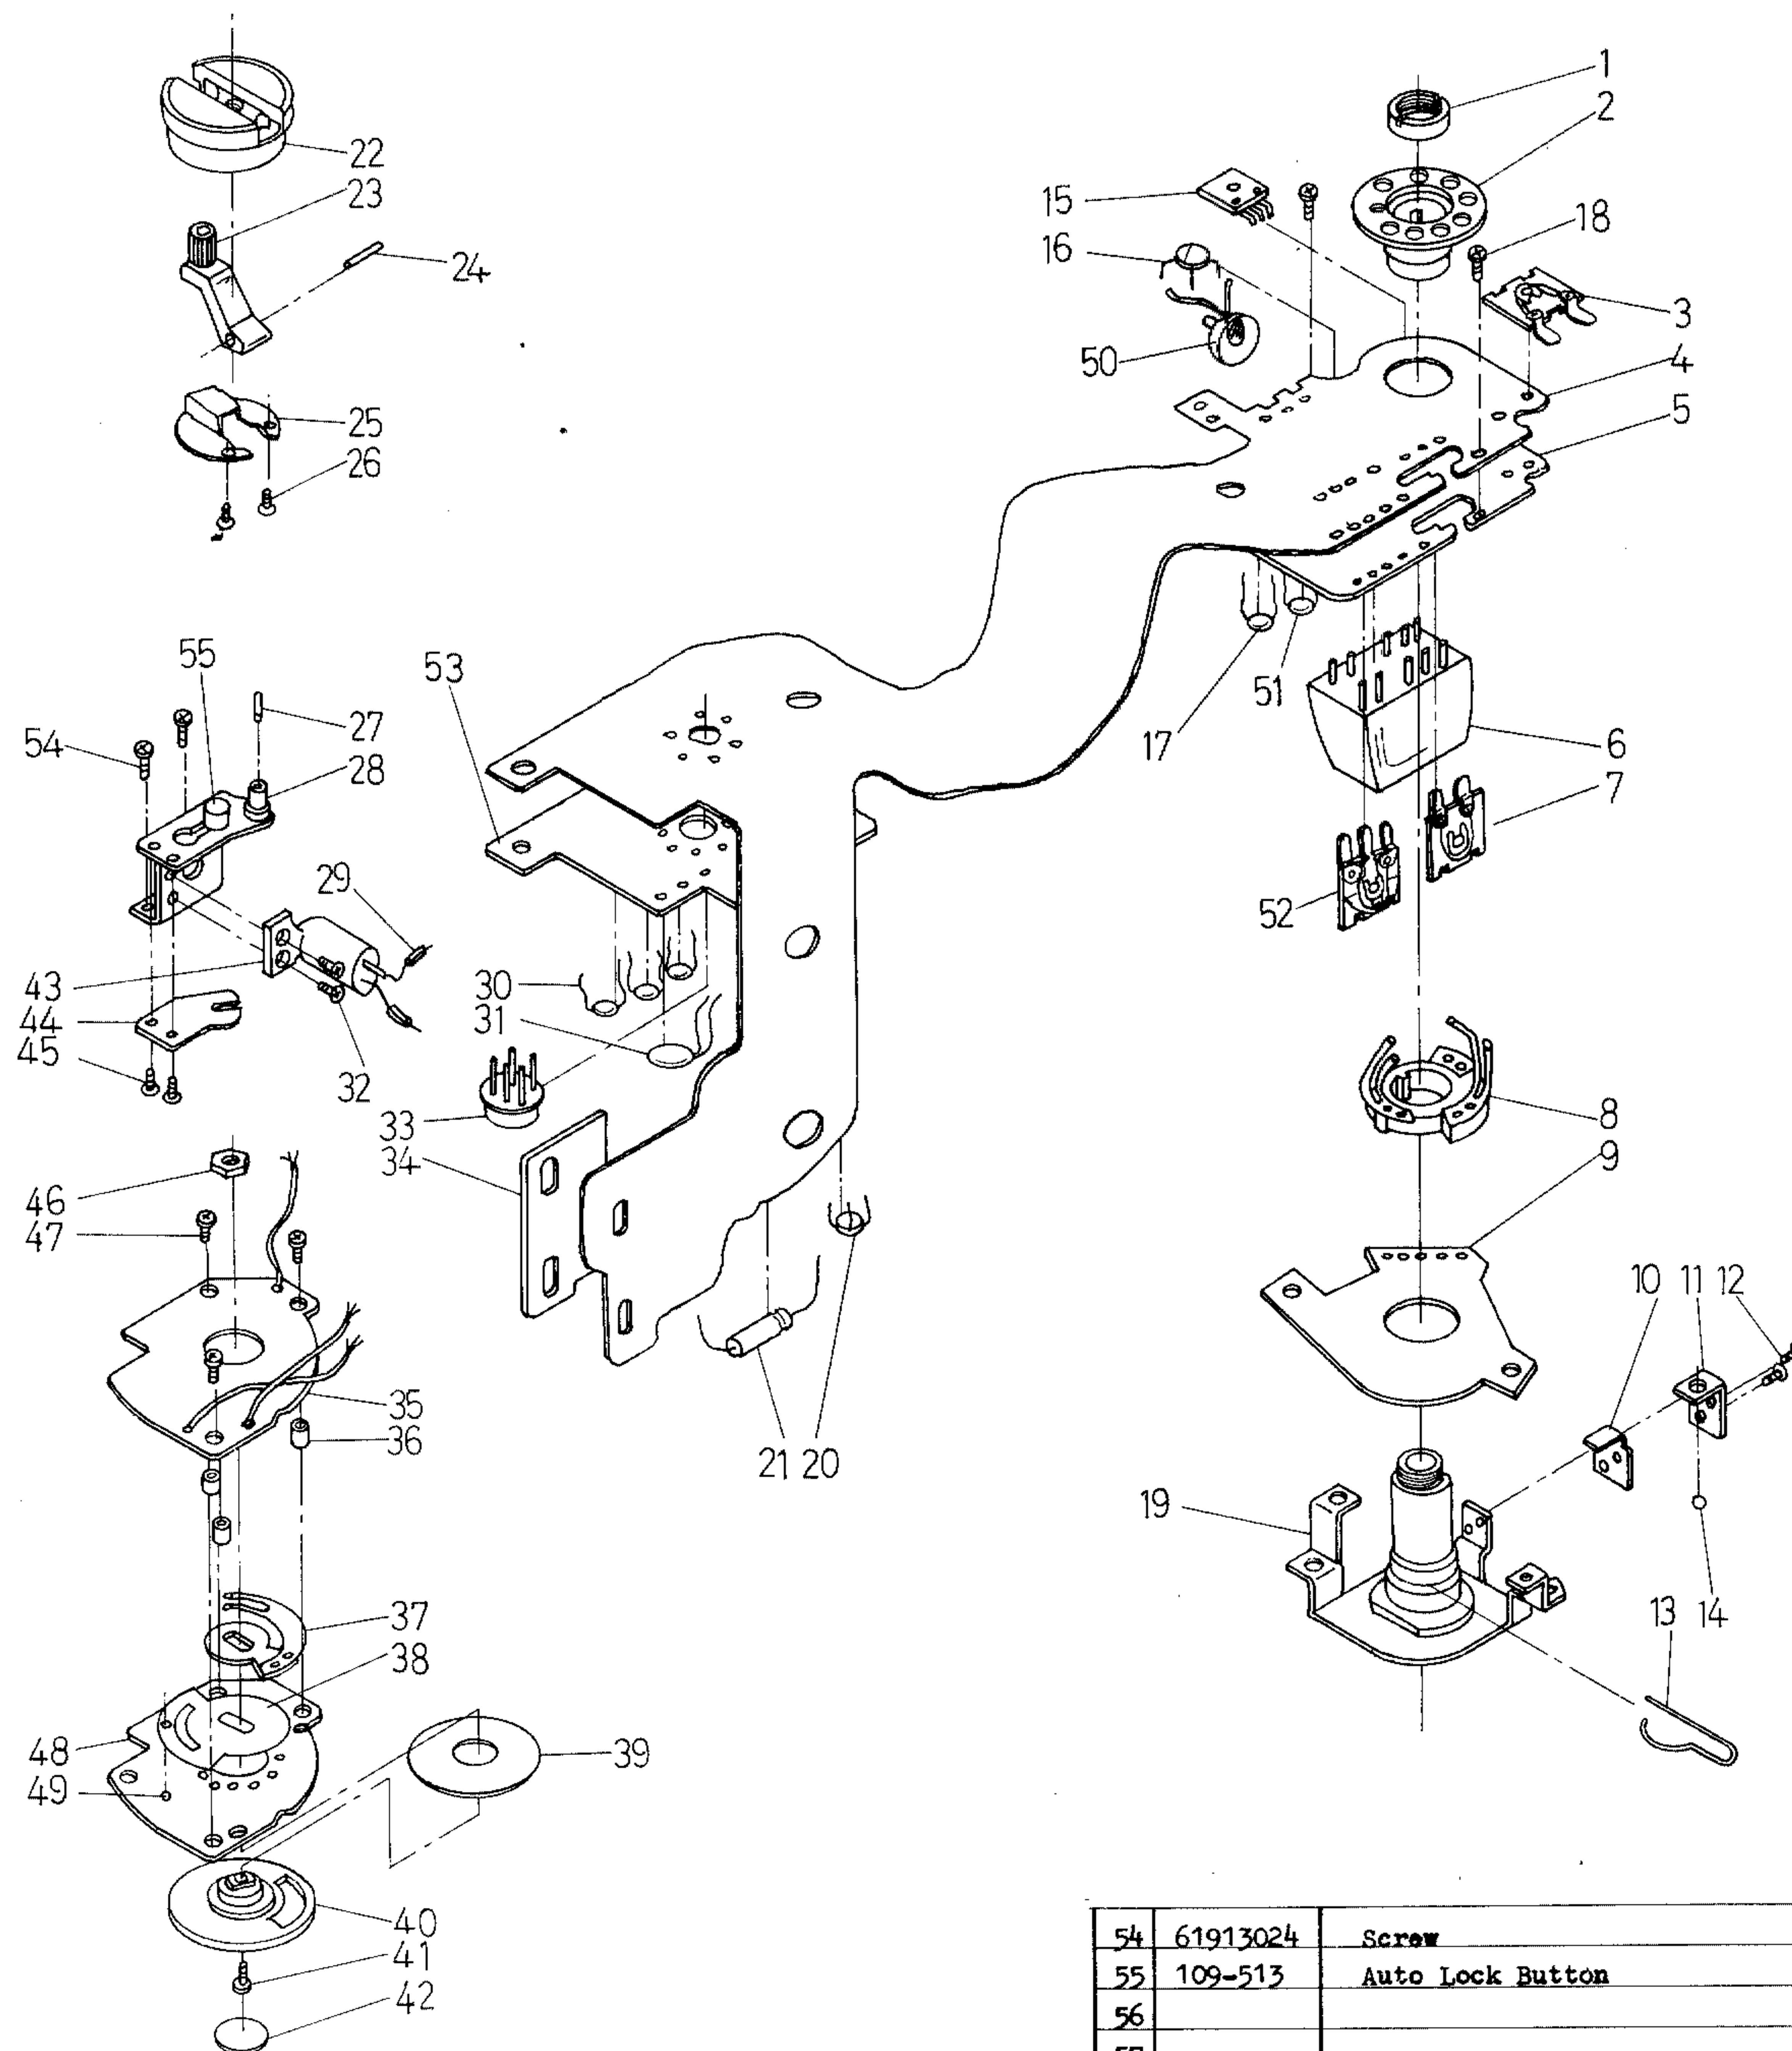


	PARTS NO	DESCRIPTION	QUANTITY
1	109-689	Nut	1
2	109-504	Manual Click Ring	1
3	109-549	Adjusting Resistor RV3	1
4	109-534	Flexible Printed Plate	1
5	109-538	MC 109 Base Plate	1
6	109-537	Hybrid I.C. MC 109	1
7	109-551	Voltage Regulating Vari Ohm RV1	1
8	109-08620	Sliding Plate Ass'y	1
9	109-535	Manual Setting Base Plate	1
10	109-502	Spring for Click	1
11	109-503	Steel Bowl Holder	1
12	61802024	Screw	2
13	SP 730	Rewind Shaft Spring	1
14	66702020	Steel Bowl	1
15	109-548	Adjusting Resistor RV4	1
16	109-547	Transistor T6	1
17	109-545	Resistor R11	1
18	61912224	Screw	2
19	109-08610	Change Over Switch Base Ass'y	1
20	109-547	Transistor T6 (See !16)	1
21	109-960	Timing Capacitor	1
22	109-681	Rewind Shaft Knob	1
23	109-09290	Rewind Crank Arm Ass'y	1
24	170-710	Rewind Crank Arm Shaft	1
25	109-687	Rewind Shaft Plate Spring	1
26	61912024	Screw	2
27	109-517	Auto Lock Pin	1
28	109-06310	Holder Base Ass'y	1
29	109-577	Insulating Tube	1
30	109-500	Resistor R8, R9, R10	1
31	109-589	Noise Filter Capacitor	1
32	61912224	Screw	2
33	109-532	Monolithic I.C. M31	1
34	109-531	Slide Plate	1
35	109-08700	ASA Setting Plate Ass'y	1
36	109-585	Base Plate Collar	3
37	109-09190	ASA Switch Plate Ass'y	1
38	109-521	ASA Friction Spring	1
39	109-520	ASA Dial Plate	1
40	109-519	ASA Dial	1
41	61924024	Screw	1
42	109-530	ASA Dial Cover	1
43	109-525	Check Switch	1
44	109-516	Lock Spring	1
45	61901524	Screw	2
46	109-586	ASA Dial Nut	1
47	61914024	Screw	3
48	109-584	ASA Base Plate	1
49	66701520	Steel Bowl	1
50	109-544	Thermistor 31D27	1
51	109-546	Resistor R12	1
52	109-550	Gate Adjusting Vari Ohm RV2	1
53	109-533	M31 Base Plate	1


54	61913024	Screw	2
55	109-513	Auto Lock Button	1
56			
57			
58			
59			

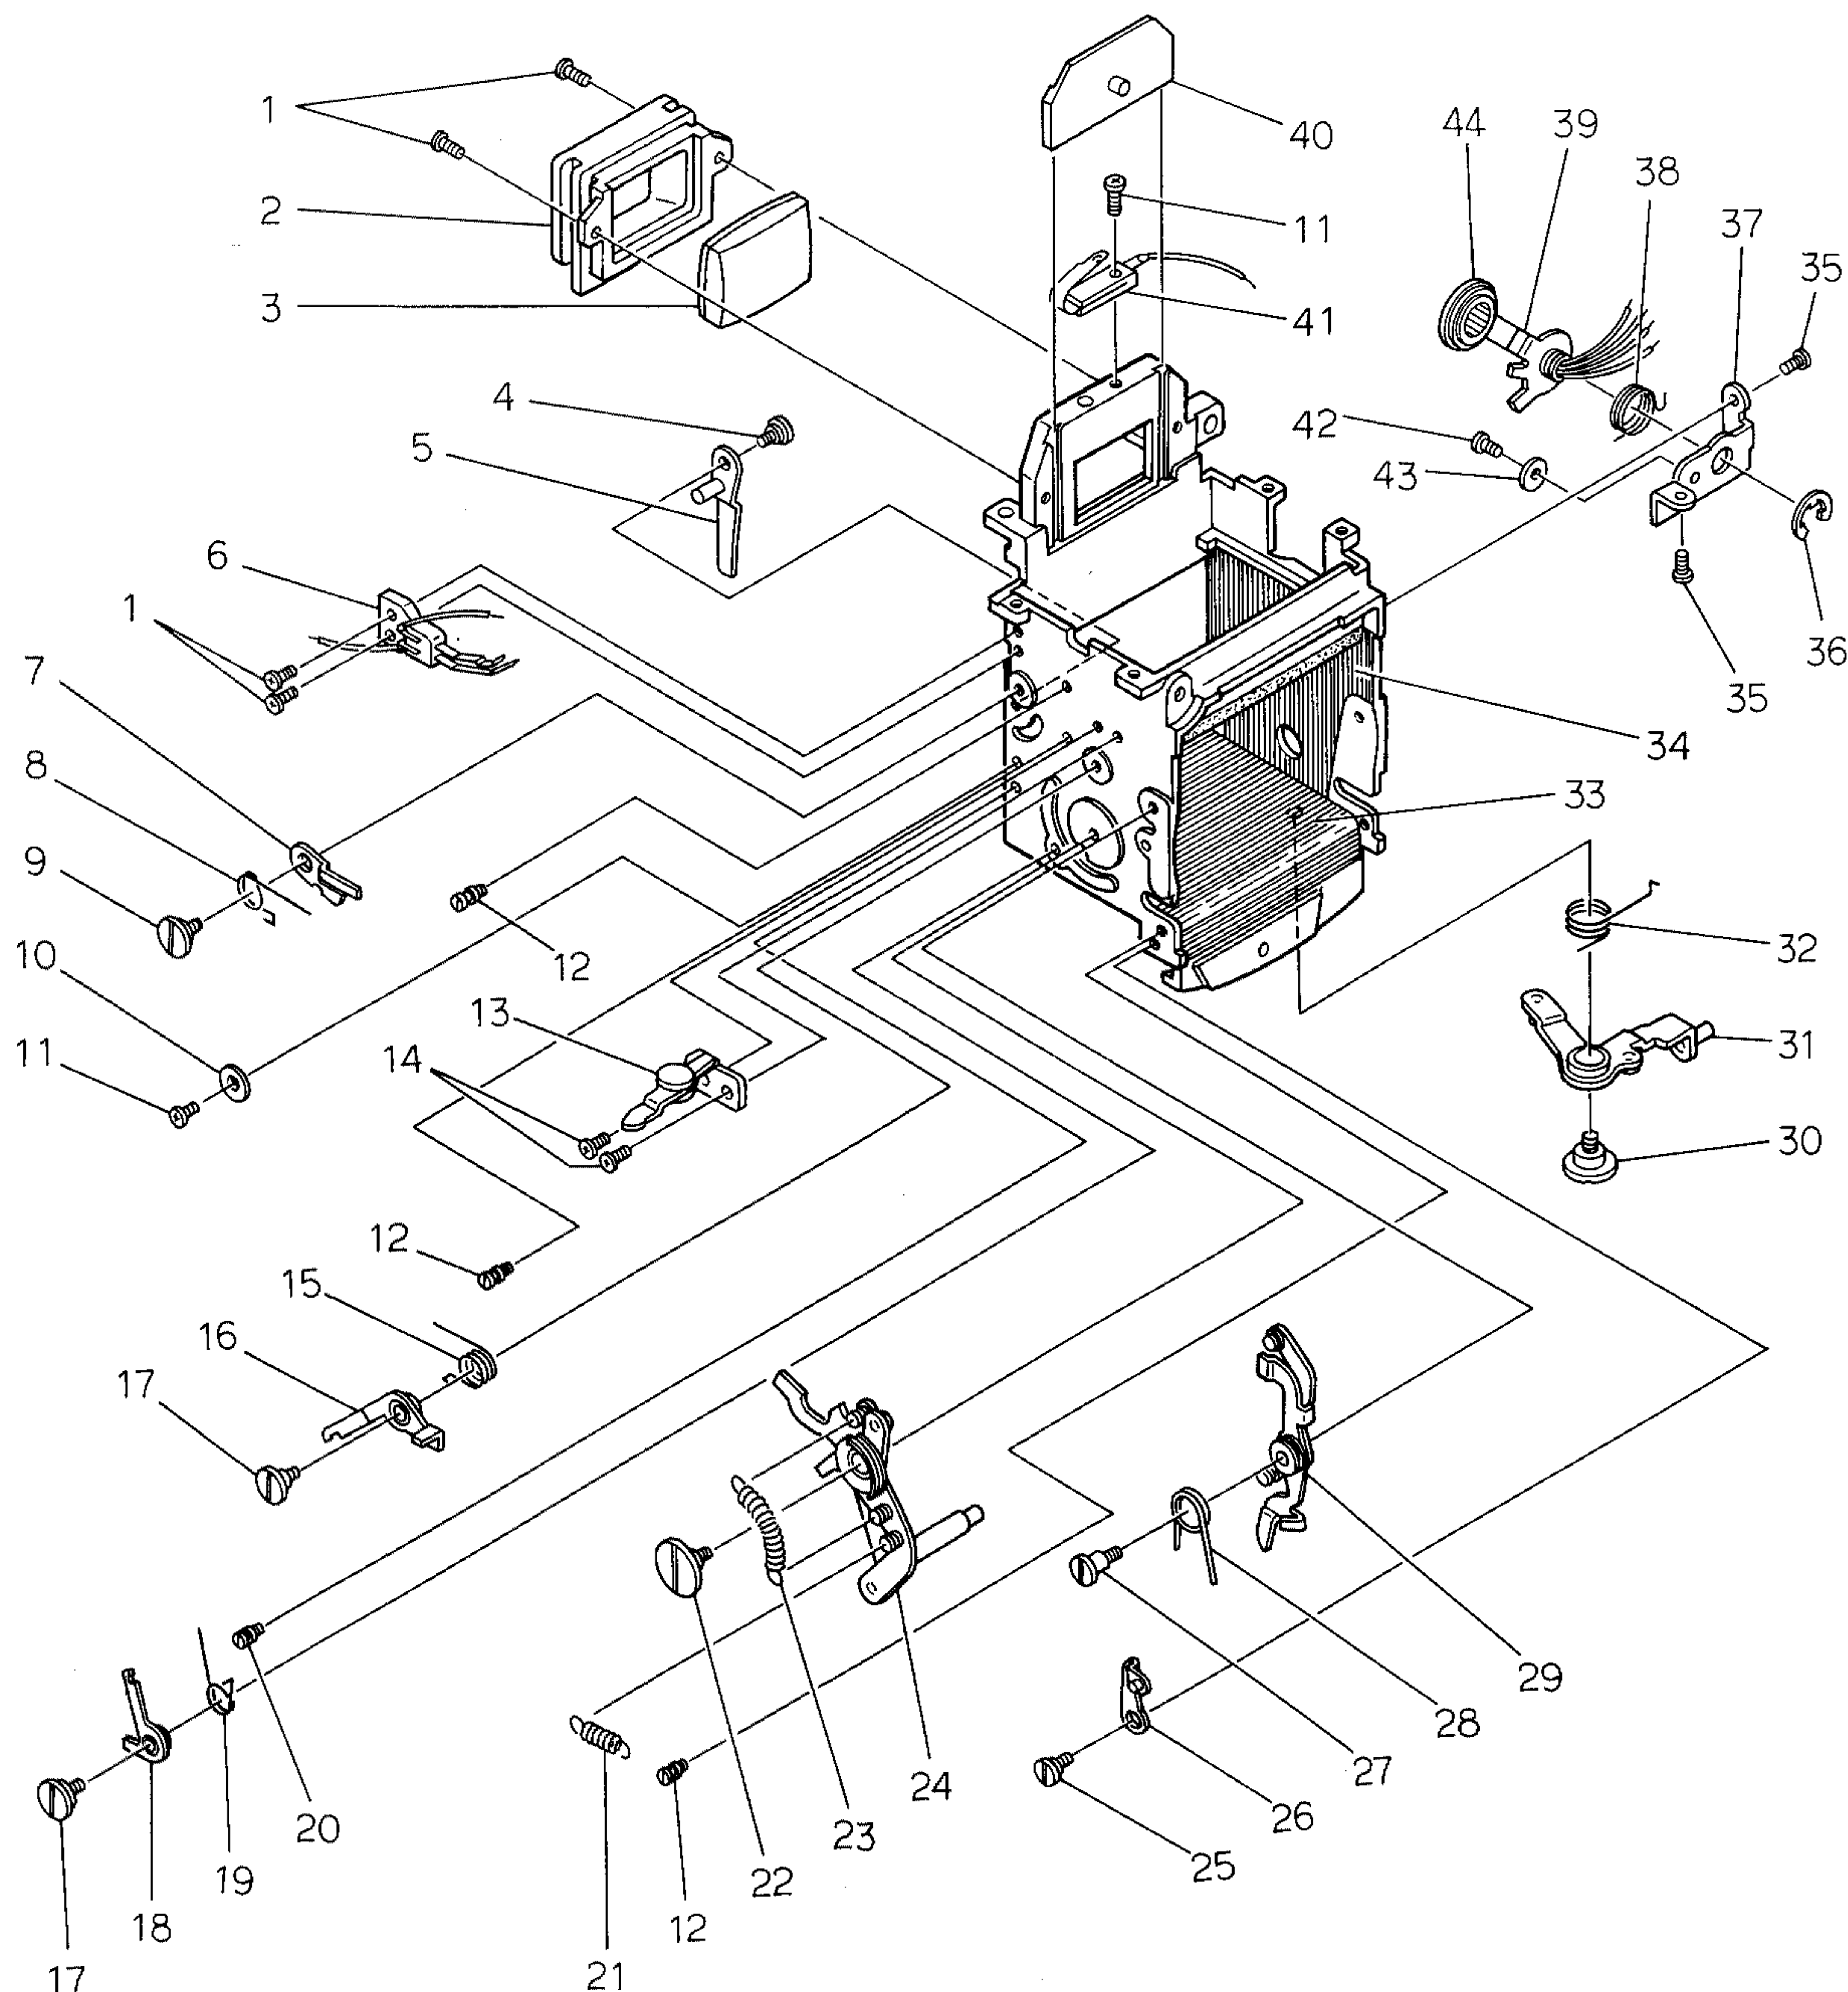


	PARTS NO	DESCRIPTION	QUANTITY
1	61913024	Screw	4
2	109-839	Eye-piece Lens Frame	1
3	109-820	Eye-piece Lens	1
4	109-787	Mirror Plate Cover Activating Lever Shaft	1
5	109-08491	Mirror Plate Cover Activating Lever Ass'y	1
6	109-08562	Main Switch Ass'y	1
7	109-736	Shutter Release Lever	1
8	109-737	Shutter Release Lever Spring	1
9	109-738	Shutter Release Lever Shaft	1
10	109-739	Mirror Activating Lever Stopper	1
11	61913524	Screw	2
12	109-798	Activating Lever Spring Shaft	3
13	109-08361	Opening Lever Ass'y	1
14	61912524	Screw	2
15	109-715	Hook Spring	1
16	109-08330	Hook Ass'y	1
17	109-716	Hook Shaft	2
18	109-08340	Lever Hook Ass'y	1
19	109-718	Lever Hook Spring	1
20	101-837	Mirror Plate Spring Shaft	1
21	109-712	Mirror Lever Spring	1
22	109-711	Activating Shaft Screw	1
23	109-710	Action Spring	1
24	109-08400	No.2 Mirror Lever Ass'y	1
25	109-744	No.3 Diaphragm Activating Lever Screw	1
26	109-08381	No.3 Diaphragm Activating Lever Ass'y	1
27	109-724	Diaphragm Action Lever Shaft	1
28	109-723	Diaphragm Action Lever Spring	1
29	109-08351	Diaphragm Action Lever Ass'y	1
30	109-753	No.3 Cds Removal Lever Shaft	1
31	109-08421	No.3 Cds Removal Lever Ass'y	1
32	109-757	No.3 Cds Removal Lever Spring	1
33	109-843	Mirror Box Leather(A)	1
34	109-845	Mirror Box Leather(C)	1
35	61912224	Screw	2
36	66103024	E Ring	1
37	109-761	Cds Lever Holder	1
38	109-763	Cds Lever Returning Spring	1
39	109-08440	No.1 Cds Lever Ass'y	1
40	109-832	Eye-piece Plate	1
41	109-836	Connecting Spring	1
42	61112217	Screw	1
43	109-762	Cds Lever Stopper	1
44	109-08431	Cds Ass'y	1

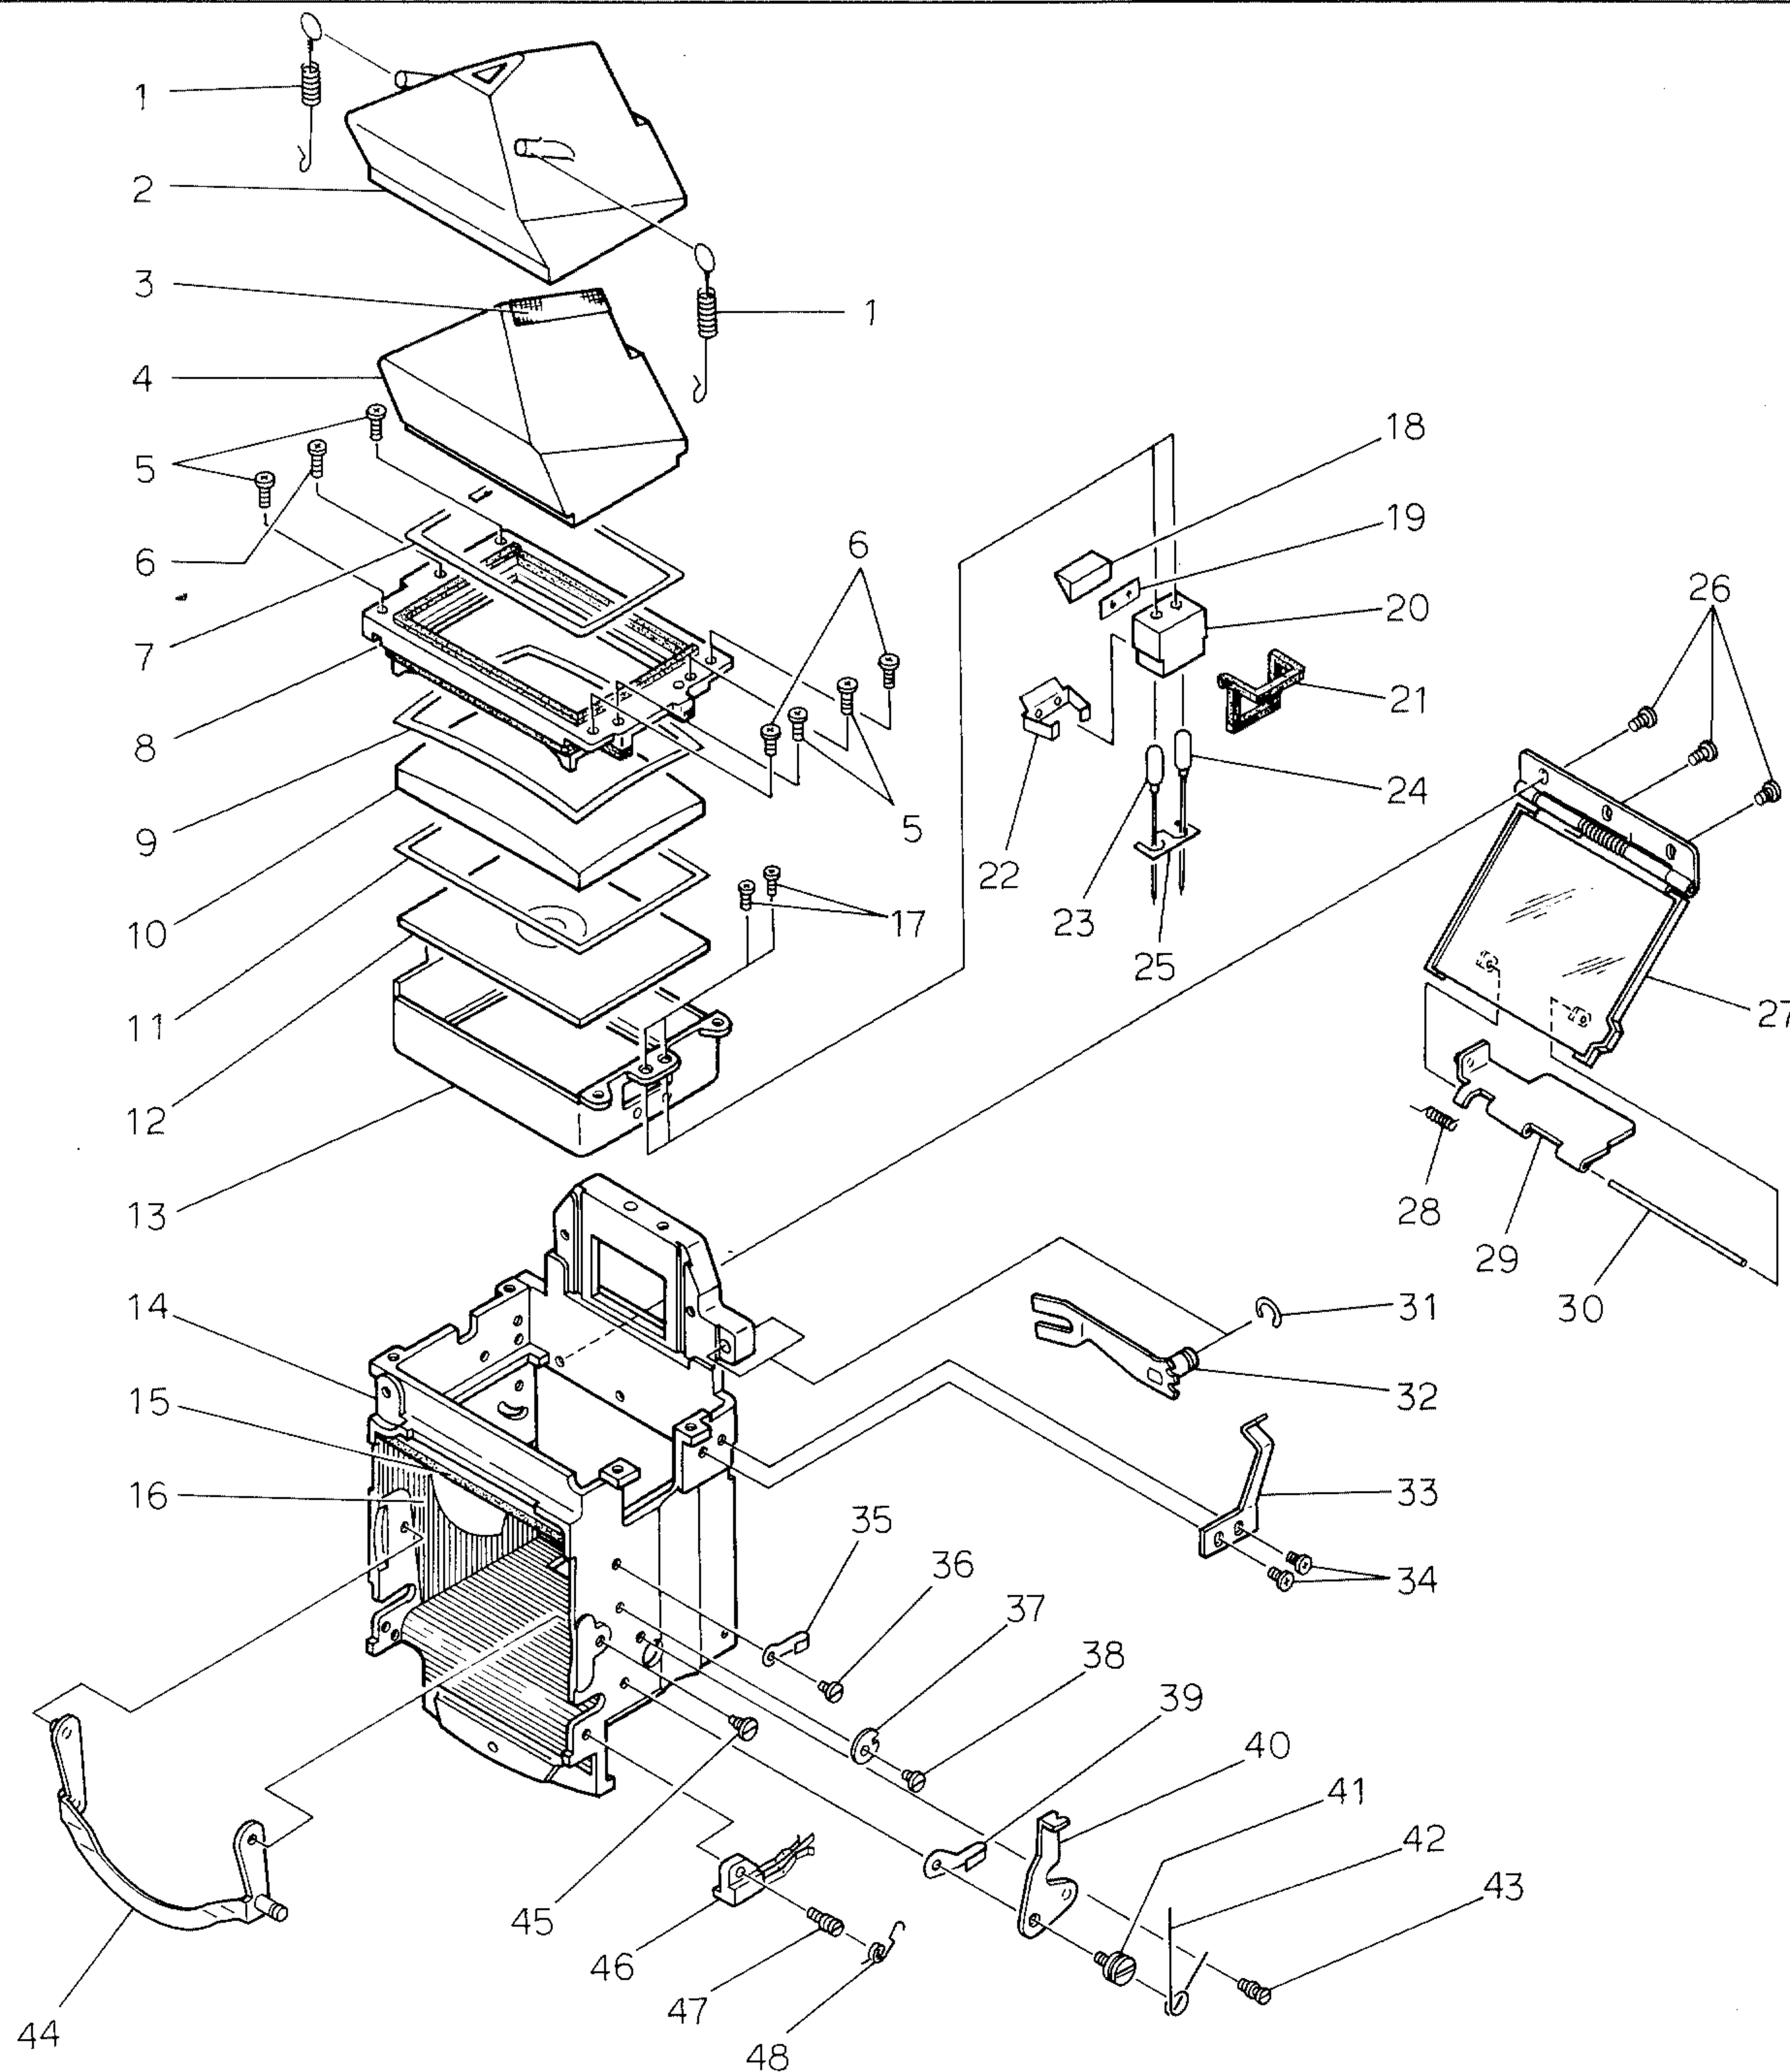

	PARTS NO	DESCRIPTION	QUANTITY
1	109-806	Pentaprism Pressure Spring	2
2	109-805	Pentaprism Roof Cap	1
3		Prism Tape	1
4	109-817	Pentaprism	1
5	61915024	Screw	4
6	61915022	Screw	3
7	109-823	Range Frame	1
8	109-06510	Pentaprism Holder Ass'y	1
9	109-804	Condenser Lens Pressure Spring	1
10	109-816	Condenser Lens	1
11	109-803	Condenser Washer	1
12	109-815	Fresnel Lens	1
13	109-802	Condenser Lens Holder	1
14	109-701	Mirror Box	1
15	109-780	Mirror Mouldplain	1
16	109-844	Mirror Box Leather(B)	1
17	61812024	Screw	2
18	109-810	Prism	1
19	109-808	Checker Lamp Plate	1
20	109-807	Checker Lamp Holder(I)	1
21	109-821	Lamp Holder Mouldplain	1
22	109-811	Prism Holder	1
23	109-540	Checker Lamp(Red)	1
24	109-541	Checker Lamp(Yellow)	1
25	109-842	Checker Lamp Holder(II)	1
26	61911524	Screw	3
27	109-08501	Mirror Plate Ass'y	1
28	109-777	Mirror Plate Cover Spring	1
29	109-08531	Mirror Plate Cover Ass'y	1
30	109-776	Mirror Plate Cover Hinge Shaft	1
31	109-828	CE Ring	1
32	109-08482	Eyepiece Connecting Lever Ass'y	1
33	109-825	Eyepiece Plate Click Spring	1
34	61912024	Screw	2
35	101-172	Cord Holder	1
36	61911524	Screw	1
37	170-841	Mirror Regulating Lever Stopper	1
38	61112217	Screw	1
39	109-741	Cord Holder	1
40	109-08390	Mirror Regulating Lever Ass'y	1
41	SC-7022	Mirror Regulating Lever Shaft	1
42	109-796	Mirror Regulating Lever Spring	1
43	109-798	Activating Lever Spring Shaft	1
44	109-08372	Diaphragm Lever Ass'y	1
45	109-765	Diaphragm Lever Screw	1
46	109-08581	Changing Switch Ass'y	1
47	109-793	Changing Switch Screw	1
48	109-766	Diaphragm Returning Spring	1

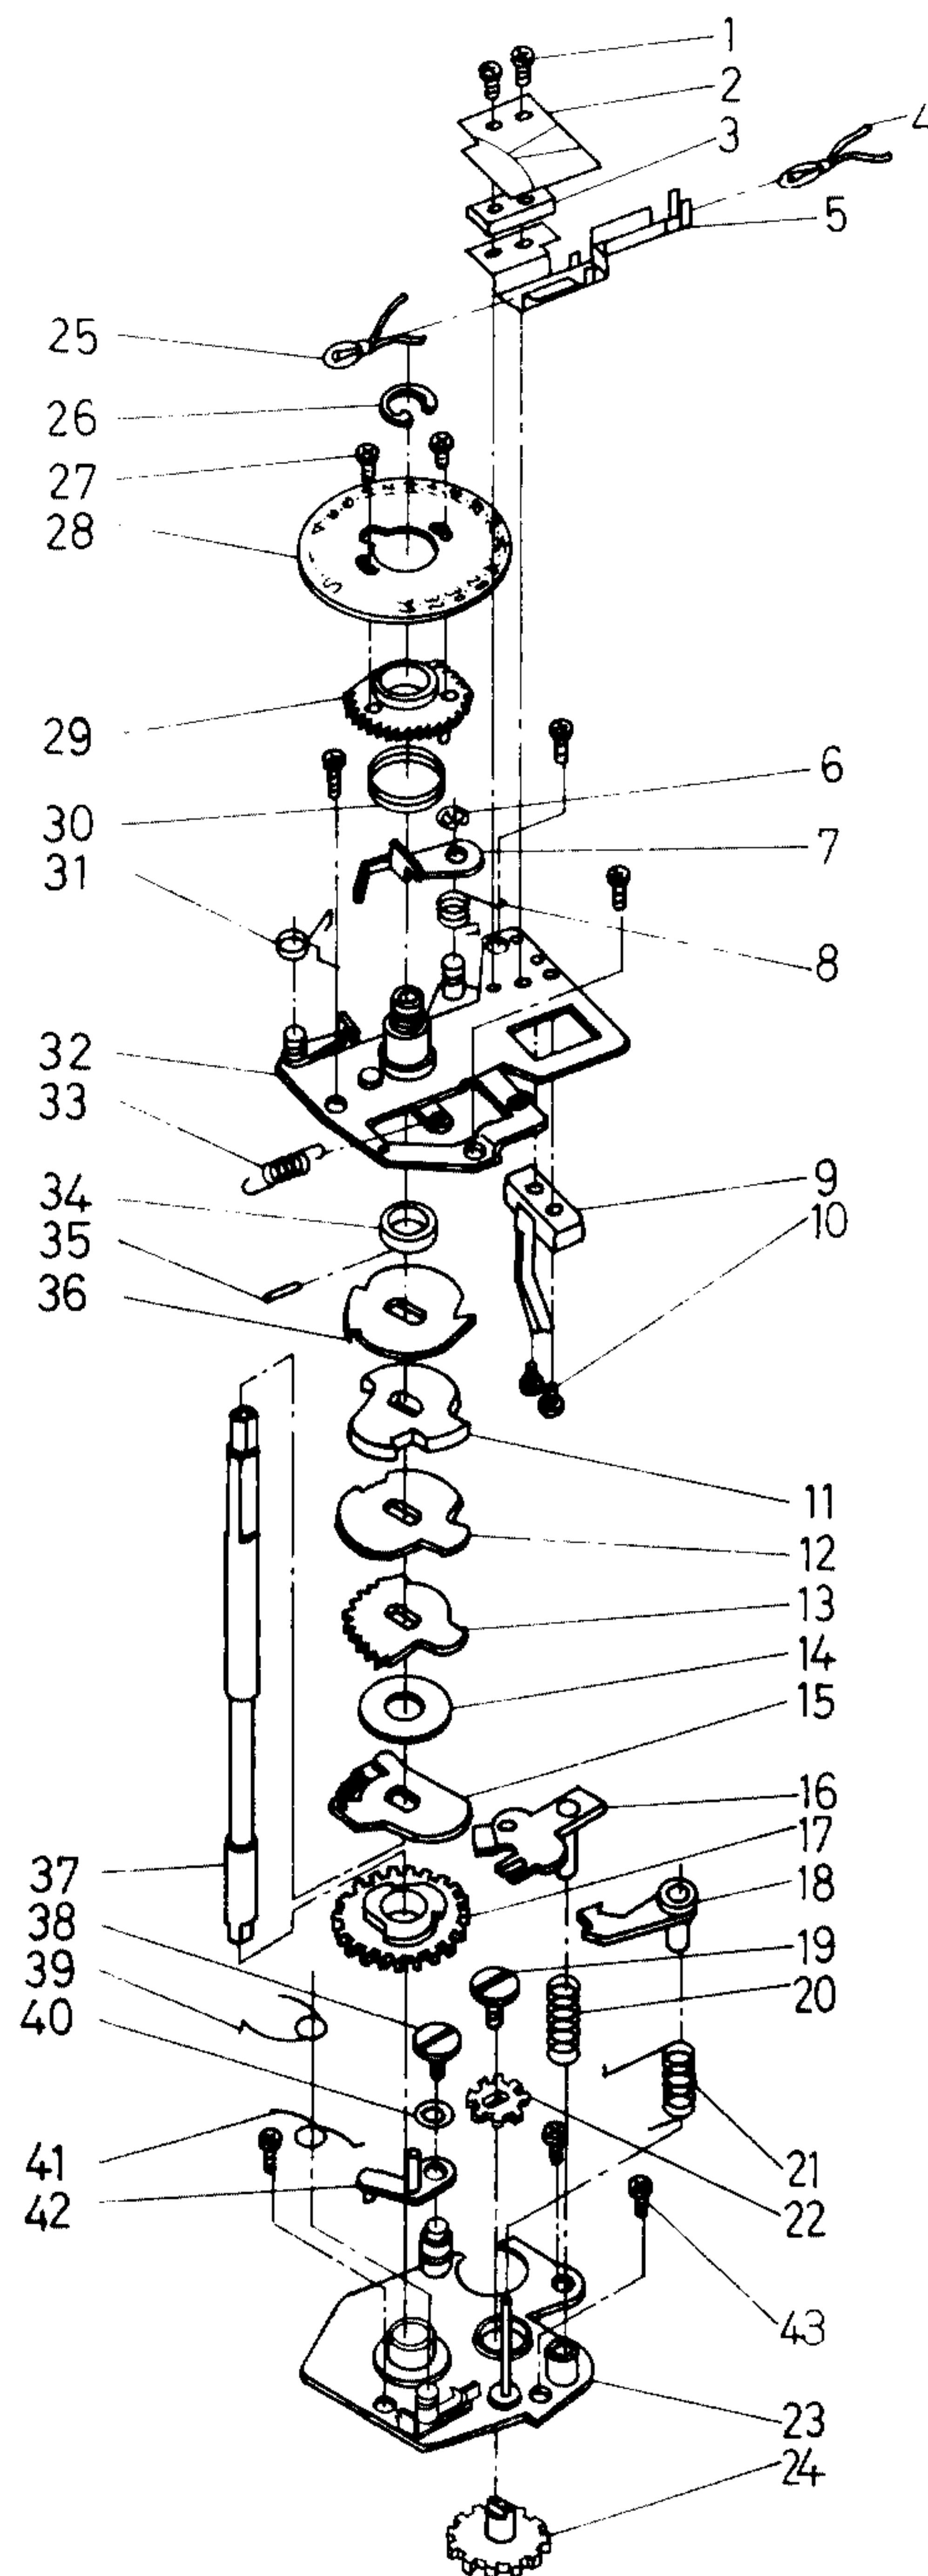

	PARTS NO	DESCRIPTION	QUANTITY
1	61904024	Screw	2
2	109-871	Counter Indicator	1
3	109-869	Counter Indicator Base	1
4	109-539	Indicator Lamp	1
5	109-868	Lamp Holder	1
6	66101525	Snap Ring	1
7	109-858	Feeding Claw	1
8	109-859	Feeding Claw Spring	1
9	109-232	B Switch Ass'y	1
10	61904024	Screw	2
11	101-638	Cam	1
12	101-637	Stopper Plate(Lower)	1
13	101-636	Ratchet	1
14	101-635	Winding Shaft Washer	1
15	109-05300	Winding Plate Ass'y	1
16	109-05610	Release Plate Ass'y	1
17	101-621	A Gear	1
18	109-05500	Ratchet Claw Ass'y	1
19	101-629	B Gear Screw	1
20	109-204	Release Plate Spring	1
21	101-644	Ratchet Claw Spring	1
22	101-622	B Gear	1
23	109-08120	Winding Base Plate Ass'y	1
24	101-623	C Gear	1
25	109-564	Battery Check Lamp	1
26	109-880	Counter Shaft Snap Ring	1
27	63901824	Screw	2
28	109-867	Counter Dial	1
29	109-864	Counter Gear	1
30	109-863	Counter Returning Spring	1
31	109-862	Stopper Claw Spring	1
32	109-08230	Counter Base Plate Ass'y	1
33	101-707	Counter Lever Spring	1
34	101-731	Stopper Pin Holder	1
35	101-640	Stopper Pin	1
36	101-639	Stopper Plate(Upper)	1
37	109-601	Winding Shaft	1
38	109-876	Feeding Lever Screw	1
39	109-694	Anti-stopper Claw(I)Spring	1
40	60421810	Washer	1
41	109-695	Anti-stopper Claw(II)Spring	1
42	109-05800	Feeding Lever Ass'y	1
43	63913024	Screw	3
44			
45			
46			
47			
48			

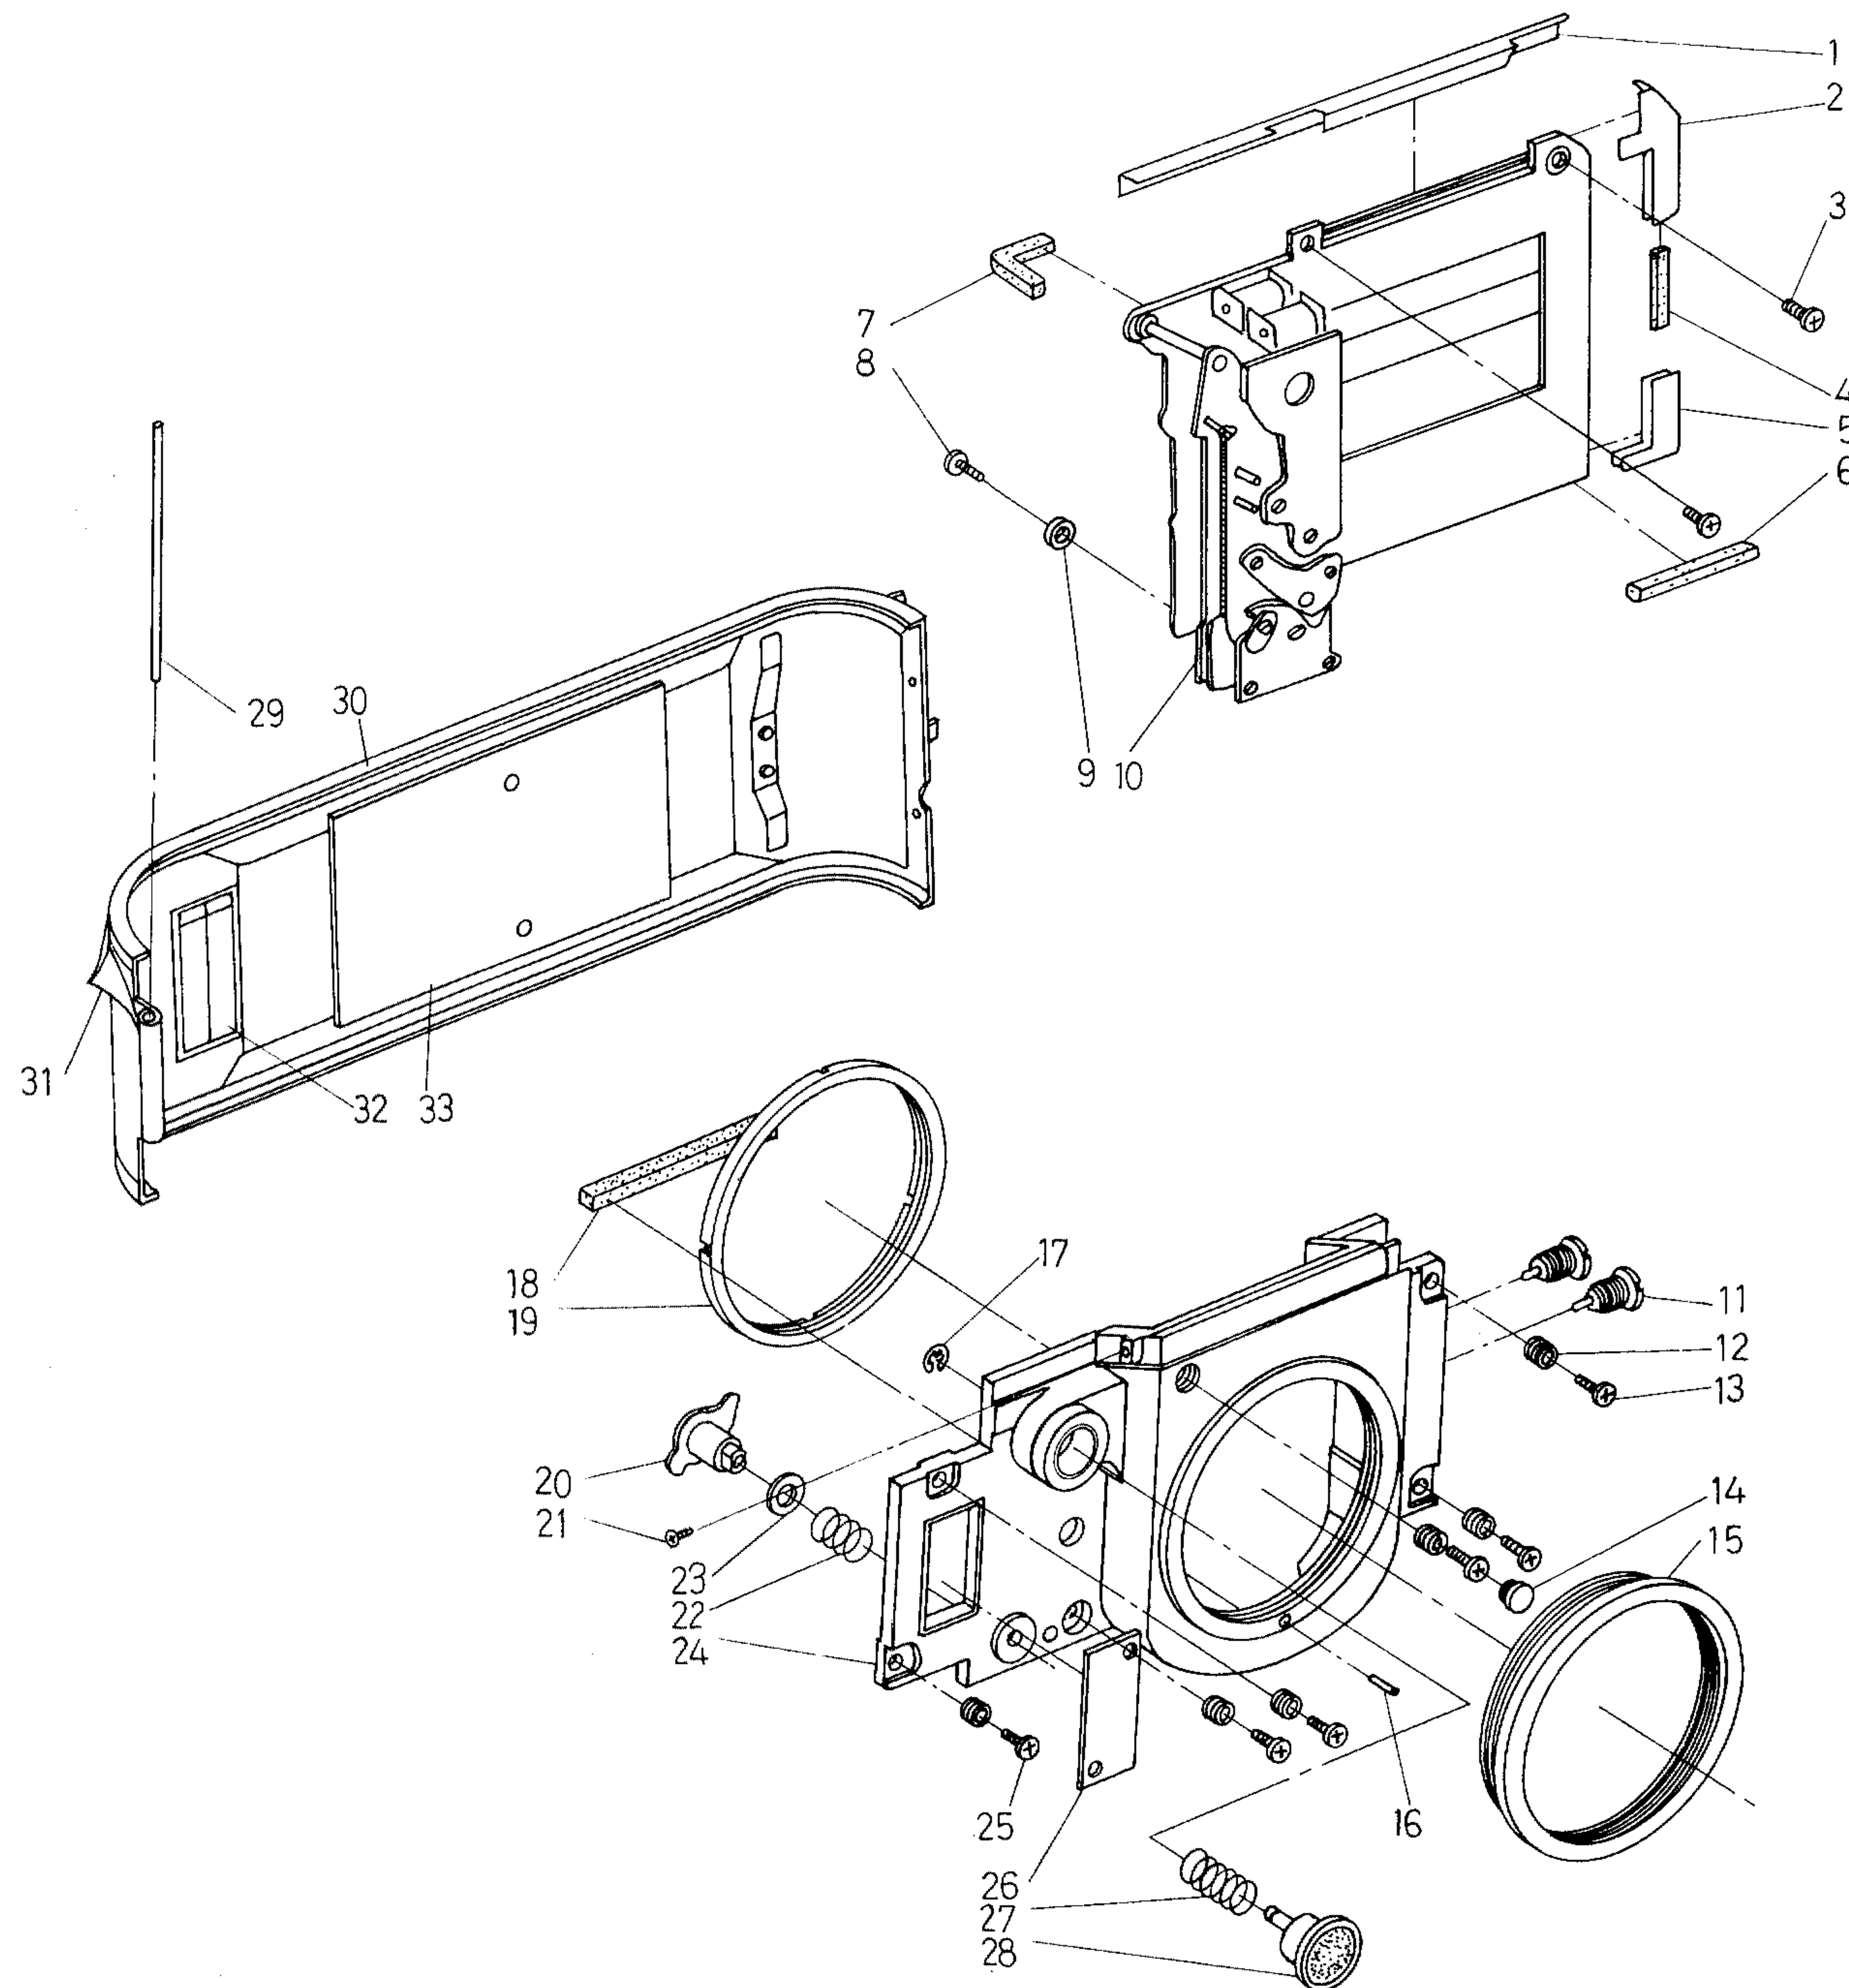

	PARTS NO	DESCRIPTION	QUANTITY
1	101-160	Light-proof Plate(Upper)	1
2	101-161	Light-proof Plate	1
3	61923522	Screw	1
4	101-162	Moultplain	1
5	109-227	Light-proof Plate(Lower)	1
6	109-181	Eye-piece Moultplain	1
7	101-180	Moultplain	1
8	61924524	Screw	1
9	101-159	Shutter Collar	1
10	109-223	Complete Shutter	1
11	650-08300	Synchro Terminal Ass'y	2
12	109-193	Adjusting Screw	6
13	109-194	Screw	5
14	109-196	Ornamental Screw	1
15	170-050	Lens Mount	1
16	170-053	Mount Setting Pin	1
17	66102025	E-Ring	1
18	170-070	Mount Base Light-proof Moultplain	1
19	170-051	Mount Setting Nut	1
20	109-09900	Self-timer Support Lever Ass'y	1
21	170-004	Cover Screw	1
22	109-166	Self-timer Shaft Spring	1
23	109-154	Washer	1
24	109-09110	Mount Base Sub Ass'y	1
25	109-195	Screw	1
26	109-147	No.1 Mount Base Cap	1
27	109-151	Opening Button Spring	1
28	109-149	Opening Button	1
29	109-131	Back Cover Hinge Shaft	1
30	109-09200	Back Cover Ass'y	1
31	109-134	Back Cover Leather	1
32	109-140	ASA DIN Plate	1
33	101-01300	Pressure Plate Ass'y	1
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			