

CAMERA-LITE

Instructions

FEATURES :

LENS: Single

SHUTTER SPEED: 1/50th Second


FILM: High speed 8mm. roll film loaded
in magazines - ready to use.

NUMBER OF EXPOSURES: 20 per magazine
(8 inch length of film)


NEGATIVE SIZE: 6mm. x 6mm. Easily
enlarged to wallet size print.

1. LOADING THE CAMERA.


- (a) Lift up cover stopper (3). Grasp windshield (2) and pull lighter out of case (9). Then remove camera (12) from case.

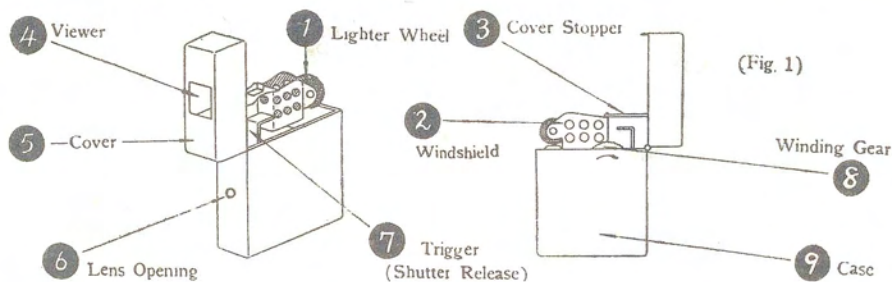

- (b) Remove the lid (10) and winding gear (8) and take out empty magazine (11) from camera (12).

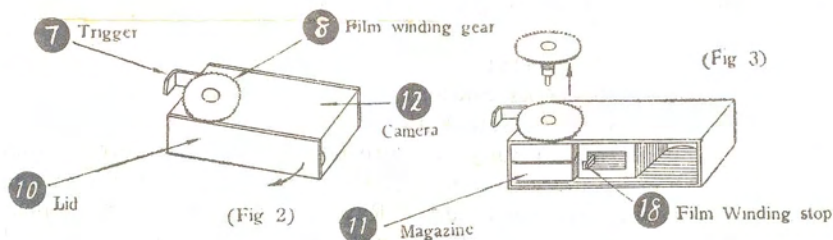


- (c) Take cover (13) off magazine (11). Fasten end of film (14) from loaded magazine (15) under removable brass sleeve (16) of empty spool (17). Plug on brass sleeve must fit into hole in spool. Replace spool in empty magazine, put cover on empty magazine and insert both magazines into camera. Film must be placed into magazine so that center of spool (19) fits perfectly into outside hole of magazine. Replace lid and insert camera into case (9). Return lighter to original position in case (9).

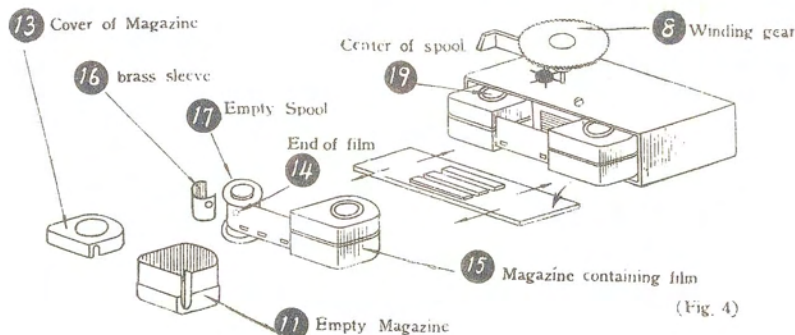

2. TAKING PICTURES.

- (a) Hold camera vertically, find subject through viewer (4).
- (b) Be careful not to cover the lens opening (6) with fingers. Press trigger (7) slowly all the way down.
- (c) Before taking next picture, turn winding gear (8) forward about $\frac{1}{4}$ turn until it is stopped by film winding stop (18).

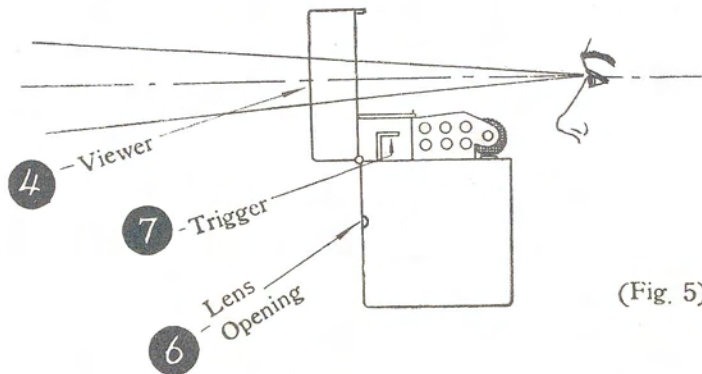

(Fig. 5)

3. DEVELOPING.

After 20 pictures have been snapped, carefully remove film magazine, which is now ready for developing. If there are no facilities near you, you may have your film expertly developed by sending it to:

Nash Photo Service
Box 288, Cooper Station
New York 3, New York

When mailing, wrap magazine carefully, be sure to mark return address plainly and enclose cost of developing and printing in cash or post office money order. If you want rapid return service, enclose 10¢ extra for first class mail. Rates for developing and printing are 90¢ for one magazine, \$ 1.70 for two, \$ 2.50 for three, \$ 3.00 for four. This includes developing the entire film strip and making enlarged prints, approximately $2\frac{1}{2} \times 2\frac{1}{2}$ inches, of each picture, on double weight matte.

4. EXTRA FILM.

This may be purchased at the rate of \$ 1.50 for a box of 4 magazines. If not available in your neighborhood, you may purchase them from Nash Photo Service by mail, enclosing remittance.

5. CIGARETTE LIGHTER.

Fluid and flint screws are at bottom of lighter part. Be careful not to overfill. Wipe off excess fluid. Replace flints as needed.