INSTRUCTION FOR LIGHTER

TO LIGHT

Depress the lever. When lever is released, valve closes automatically to extinguish flame.

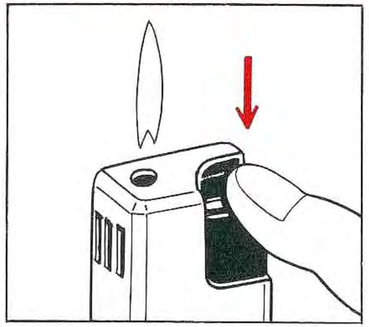

TO REMOVE LIGHTER FROM CAMERA

When butane gas is refueled into lighter, pull out lighter from camera body as per picture.

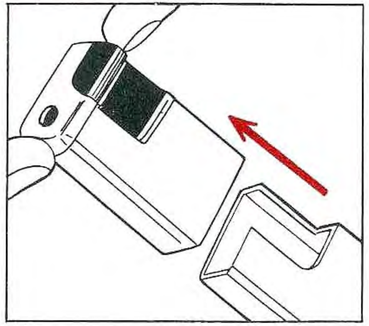

TO ADJUST FLAME

Turn the flame adjuster screw clockwise (in the direction of H) for lower flame, and counterwise (in the direction of L) for high flame.

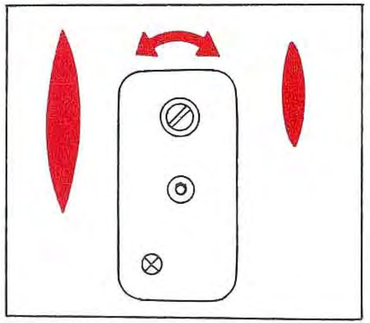

TO REFUEL

Turn lighter upside down and apply any universal butane gas refill to exposed filler valve. Press gas into valve for 3 seconds. Filling is almost instantaneous.

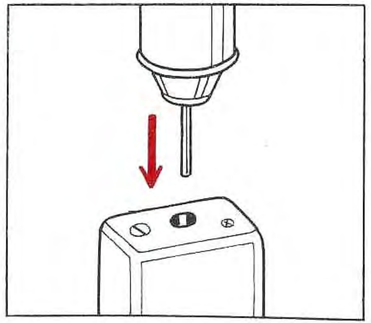

MINI-CAMERA WITH ELECTRONIC

mimigas-lite

EXPLANATORY NOTE

MINI-CAMERA WITH ELECTRONIC BUTANE GAS LIGHTER

This model is very convenient and unique mini-sized camera with electronic butane gas lighter built-in, and the size of this model is 8 X 11mm pocketable compact one. As the high-quality piezo electronic unit is equipped on the lighter, flame is obtainable with every ignition and no need of flint.

NIKOH CO., LTD. JAPAN

INSTRUCTION FOR CAMERA

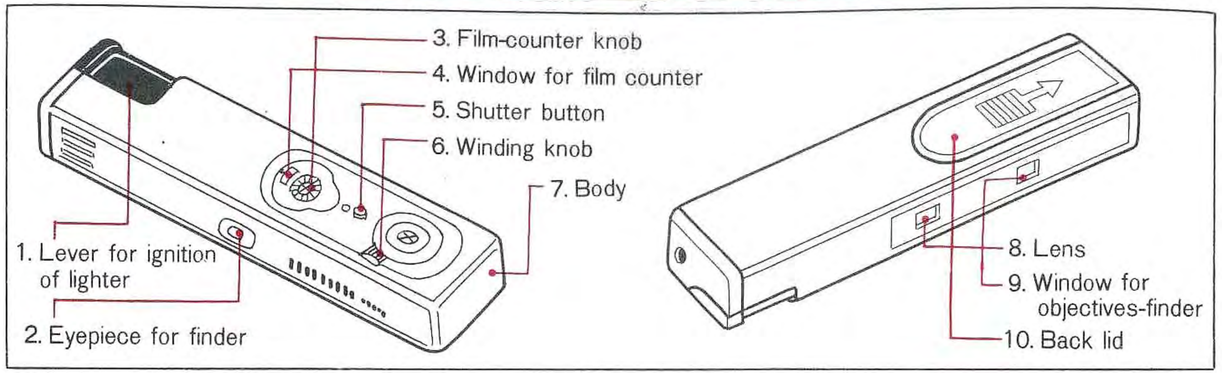

TO SET FILM

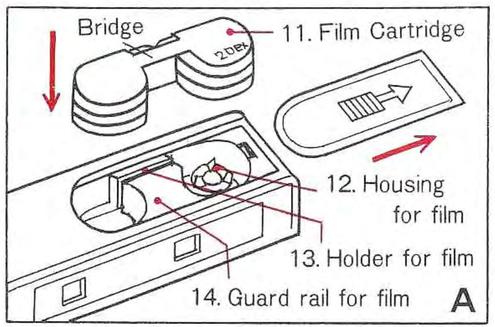

Slide out the lid to the direction of arrow, and put the film cartridge into the film housing, and then set the film between holder and guard rail firmly.

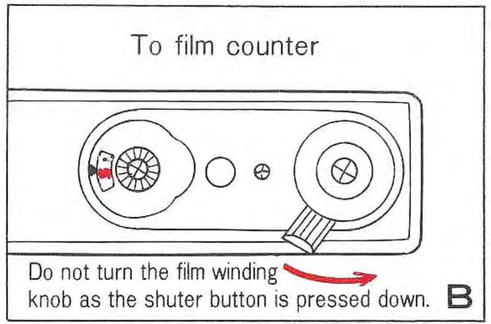

Turn film counter knob to the left direction with finger and set "S" to the mark of film counter window. Then turn the film winding knob to the left direction until the mark of 1 is appeared on the counter window and depress the shutter button. By the above operation it is ready for a shot.

TO HOLD CAMERA

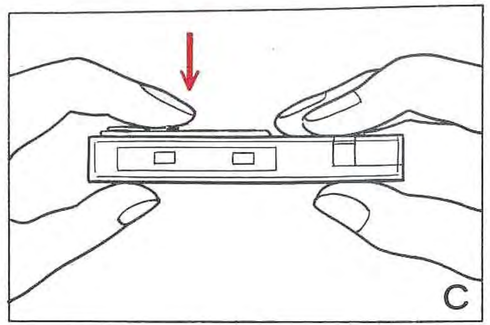

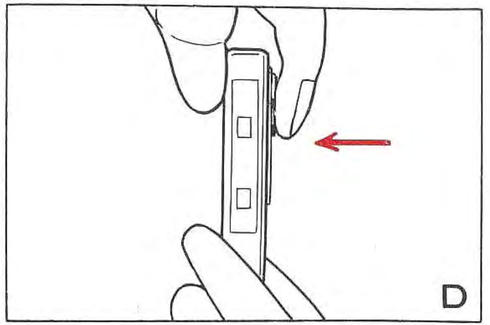

Put hands holding camera to the forehead to prevent shaking, as per picrures "C" and "D", and press the shutter button gently. Take care not to cover the lens with finger.

TO TAKE OUT FILM FROM CAMERA
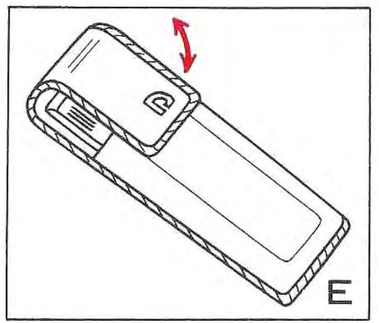
The film is a roll for 20 pictures. After all films is taken, remove the film cartridge out of housing with holding of bridge. The films of MINOX and YASHICA ATRON are available for this camera.