



Hasselblad 500C & 500C/M


Spare Parts Catalogue and Exploded Views

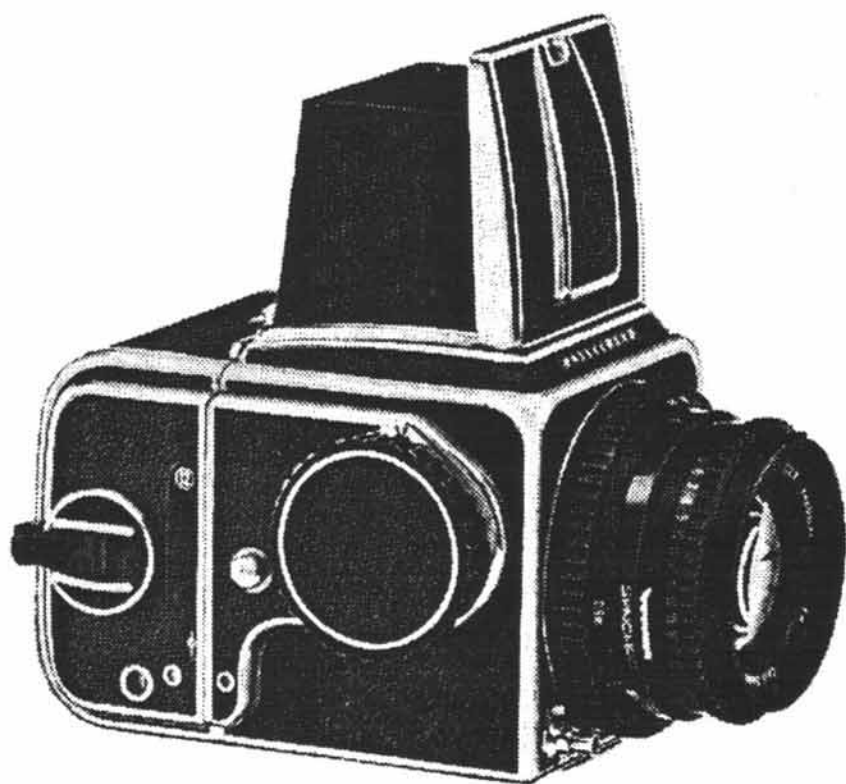


500C

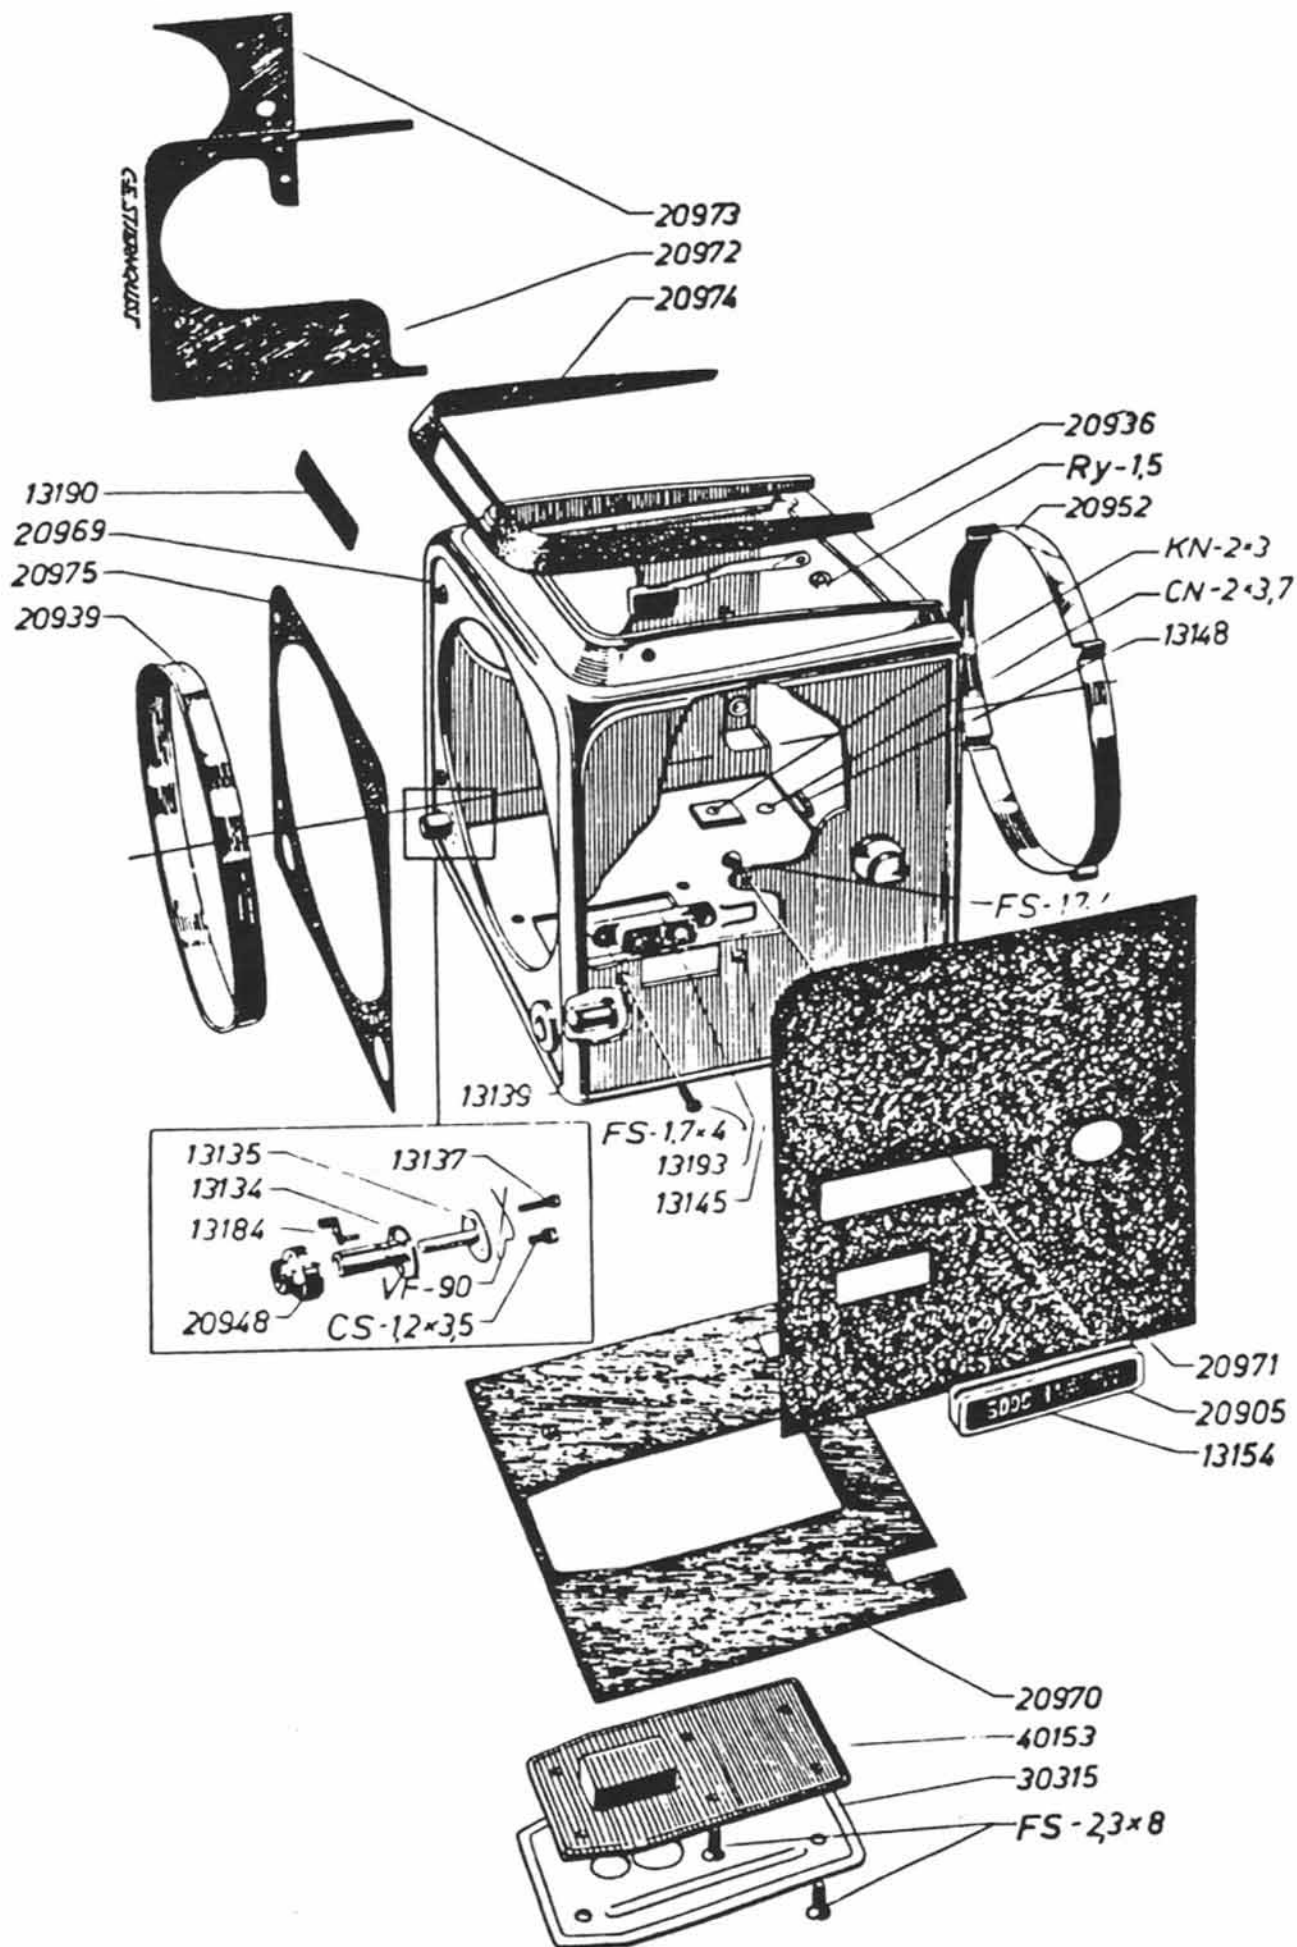



Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13134	Release button		30323	
1	13135	Buffer		30323	
1	13137	Screw		30323	
1	13139	Lens release button		40160	
1	13145	Nylon ring		30323	
2	13148	Magazine support		20969	SVL No. 7/63
1	13154	Name plate		13161	
1	13161	Accessory shoe, complete		30323	
1	13184	Arm		30323	
1	13190	Name plate		30323	
1	13193	Cable attachment, complete		30323	
1	20905	Accessory shoe		13161	
1	20936	Quick release lever		30323	
1	20939	Ring		30323	
1	20948	Socket		30323	
1	20952	Ring		30323	
1	20969	Shell	X	30323	
1	20970	Leather		30323	
1	20971	Leather		30323	
1	20972	Leather		30323	
1	20973	Leather		30323	
1	20974	Leather		30323	
1	20975	Leather		30323	SVL No. 7/64
1	30315	Slide		40160	
1	30323	Shell, complete		40160	SVL No. 7/64
1	40153	Tripod socket		40160	
1	40160	Camera body, complete	X	—	
2	CN-2×3,7	Rivet		20969	
1	CS-1,2×3,5	Screw		30323	
4	FS-1,7×4	Screw		30323	
6	FS-2,3×8	Screw		40160	
2	KN-2×3	Rivet		20969	
1	RY-1,5	Clip		30323	
1	VF-90	Torsion spring		30323	SVL No. 19/69

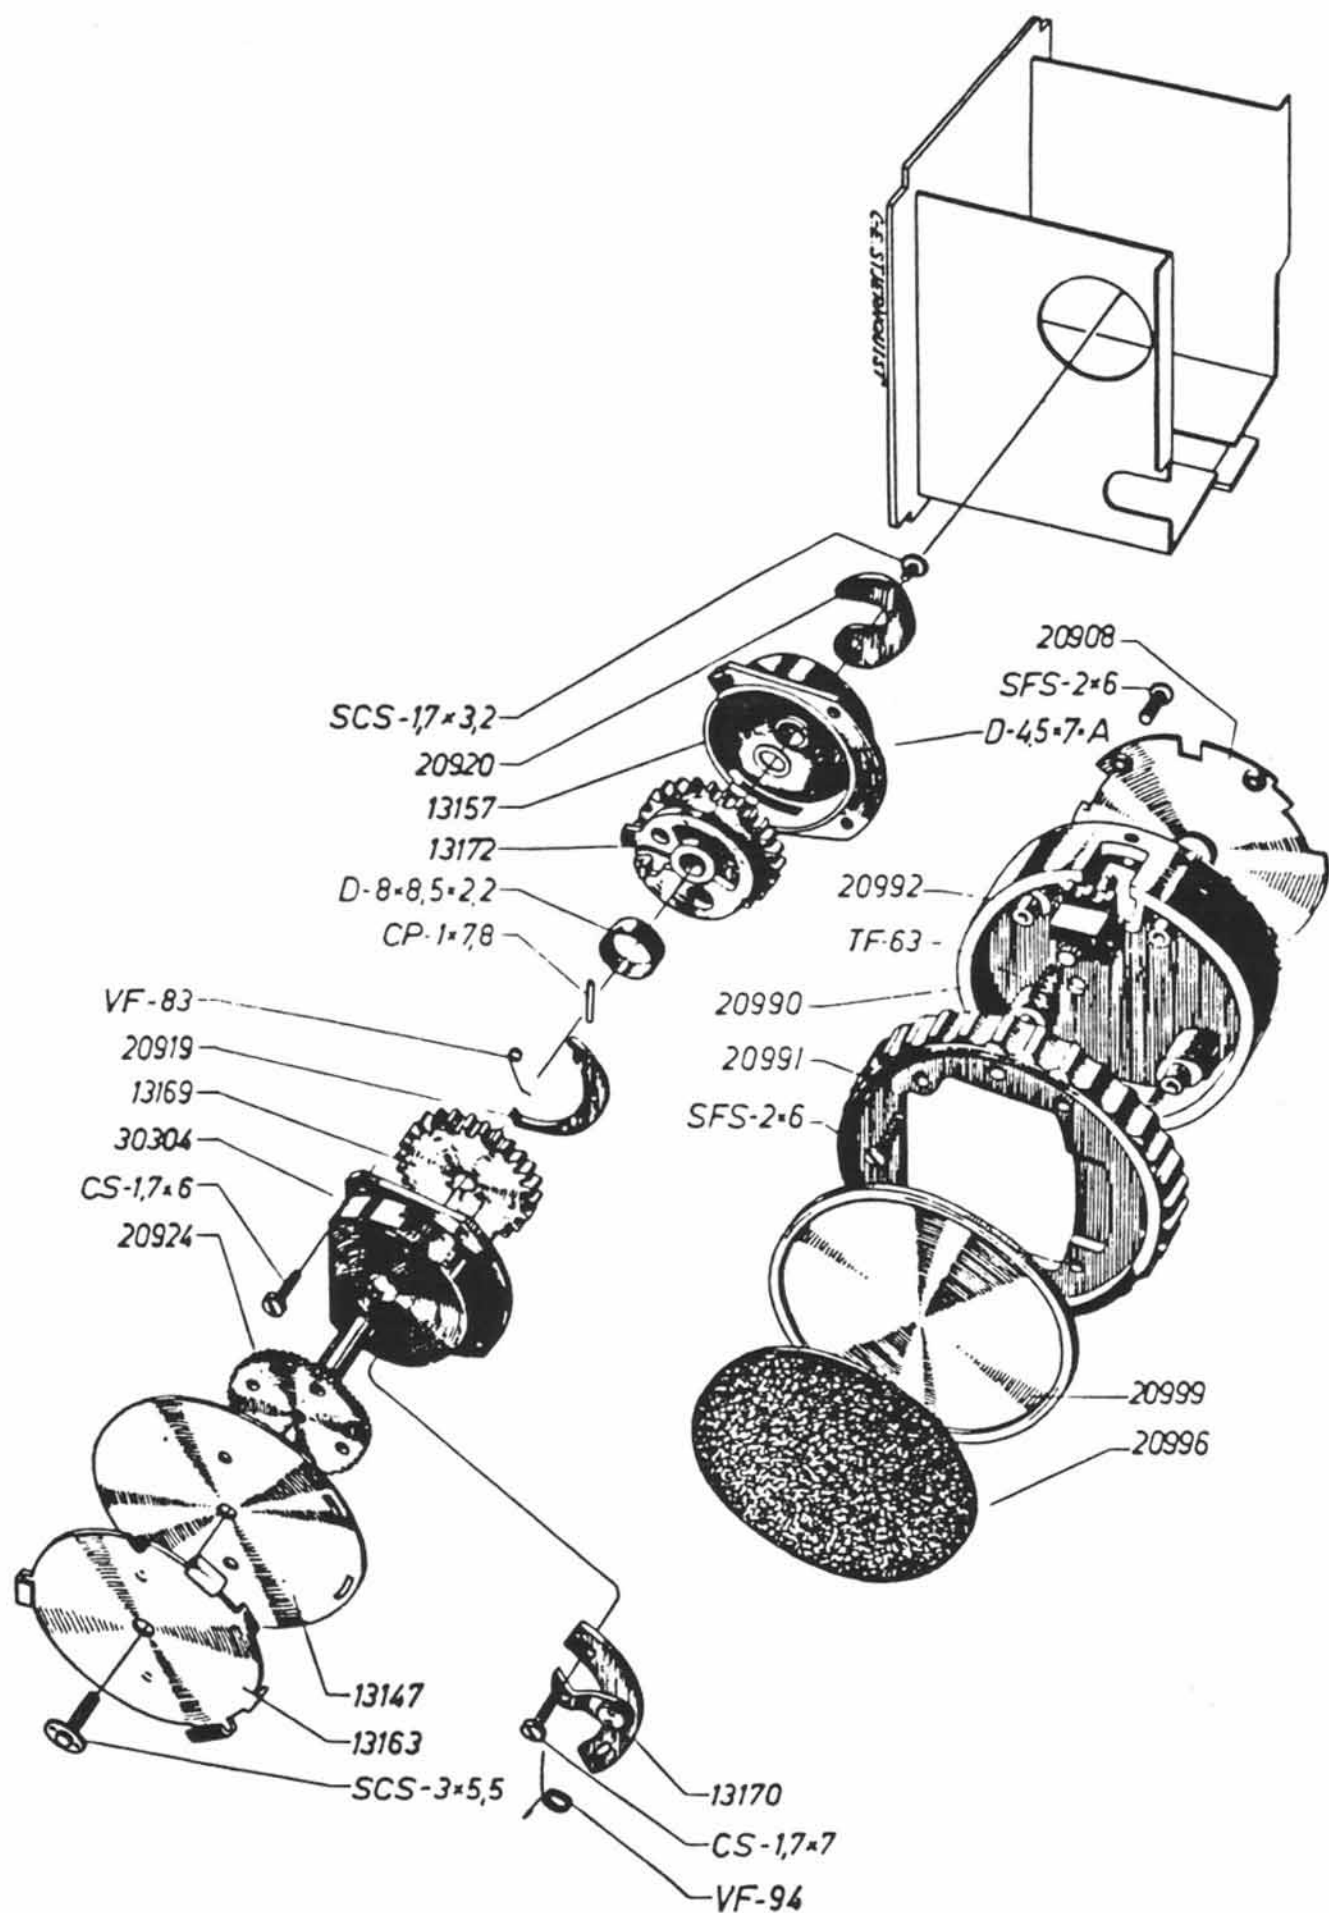


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13147	Shim		40160	SVL No. 2/60
1	13157	Gear housing, bottom		30324	
1	13163	Bayonet plate		40160	
1	13169	Gear		30324	
1	13170	Adjustable pawl		40160	
1	13172	Gear with spring stop		30324	SVL No. 4/63; 2/64
1	20908	Bayonet plate		30316	
1	20919	Hook		30324	
1	20920	Mirror cam		30324	
1	20924	Ratchet wheel		30324	
1	20990	Housing		30316	Order Code No. 44024
1	20991	Rim		30316	
1	20992	Catch		30316	
1	20996	Leather		30316	
1	20999	Lid		30316	
1	30304	Gear housing, top		30324	
1	30316	Knob, complete	▲	40160	
1	30324	Gear housing, complete		30326	
1	40160	Camera body, complete	×	—	
1	CP-1×7,8	Pin		30324	
1	CS-1,7×6	Screw		40160	A = 0,10; 0,20; 0,30 mm
2	CS-1,7×7	Screw		40160	
1	D-4,5×7×A	Washer		30324	
1	D-8×8,5×2,2	Washer		30324	
1	SCS-1,7×3,2	Screw		30324	
1	SCS-3×5,5	Screw		40160	
8	SFS-2×6	Screw		30316	
1	TF-63	Pressure spring		30316	
1	VF-83	Torsion spring		30324	
1	VF-94	Torsion spring		13170	

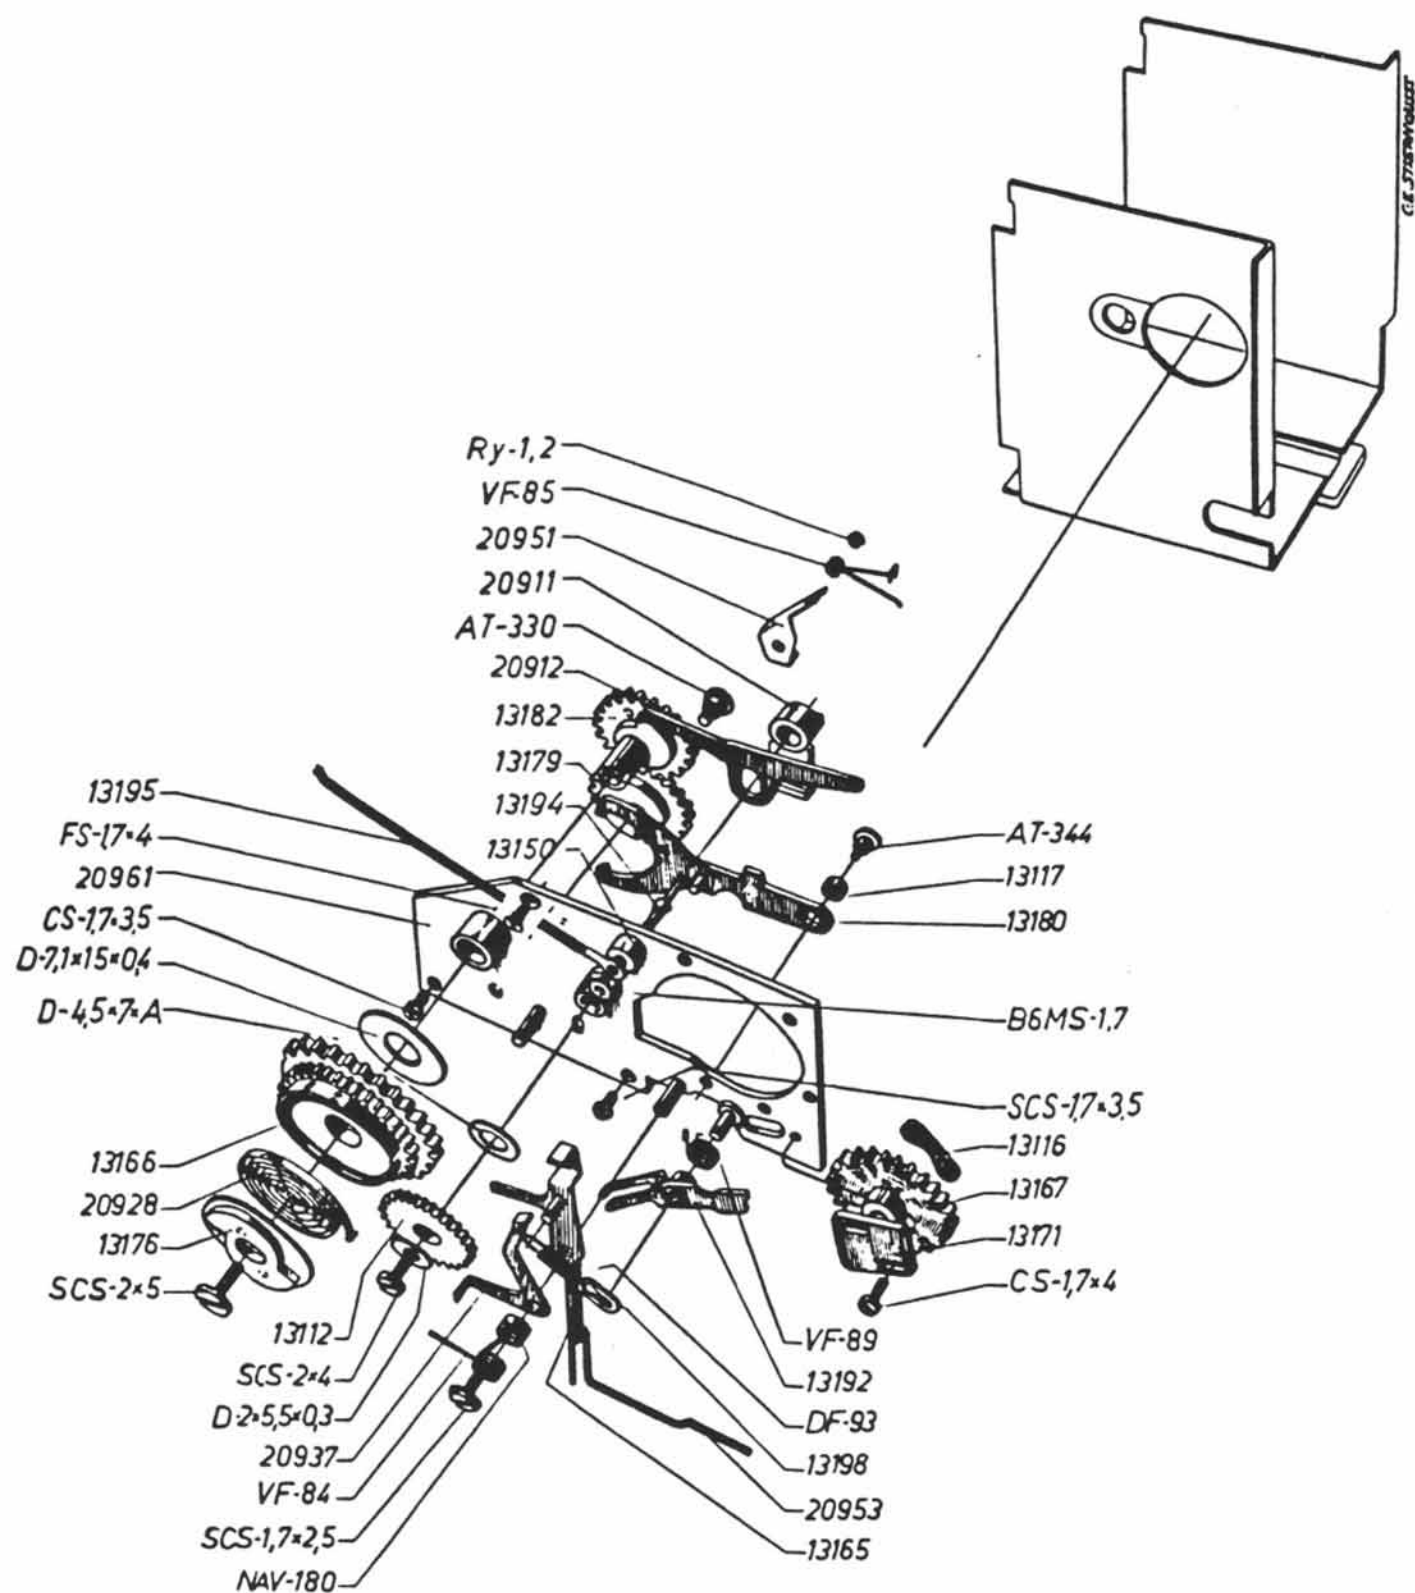




Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13112	Gear		40160	
1	13116	Nut		30327	
1	13117	Bushing	×	20967	
1	13150	Nylon insulator		20967	
1	13165	Arm		30327	
1	13166	Gear		30327	
1	13167	Gear		30327	
1	13171	Bearing bracket		30327	
1	13176	Cam		30327	SVL No. 4/60; 1/63
1	13179	Gear	×	20967	
1	13180	Coupling	×	20967	
1	13182	Gear with cam		30327	
1	13192	Arm		30327	
1	13194	Contact screw		20967	
1	13195	Cable		13193	
1	13198	Shim		30327	
1	20911	Stop		40160	
1	20912	Bar		30327	
1	20928	Coil-Spring		30327	SVL No. 4/60; 1/63; 11/63
1	20937	S-arm		30327	
1	20951	Contact spring		30327	
1	20953	Push rod		30327	
1	20961	Mechanism plate	×	20967	
1	20967	Mechanism plate, assy.		30327	SVL No. 14/64
1	30327	Mechanism plate, complete	×	40160	
1	40160	Camera body, complete	×	—	
1	AT-330	Pin	×	20967	
1	AT-344	Pin	×	20967	
1	B6MS-1,7	Nut		40160	
1	CS-1,7×3,5	Screw		40160	
2	CS-1,7×4	Screw		30327	
1	D-2×5,5×0,3	Washer		40160	
1	D-4,5×7×A	Washer		40160	A = 0,10; 0,20; 0,30 mm
1	D-7,1×15×0,4	Washer		30327	
1	DF-93	Draw spring		30327	
1	FS-1,7×4	Screw		40160	
1	NAV-180	Bushing		30327	
1	RY-1,2	Clip		30327	
1	SCS-1,7×2,5	Screw		30327	
1	SCS-1,7×3,5	Screw		40160	
1	SCS-2×4	Screw		40160	
1	SCS-2×5	Screw		30327	
1	VF-84	Torsion spring		30327	
1	VF-85	Torsion spring		30327	
1	VF-89	Torsion spring		30327	

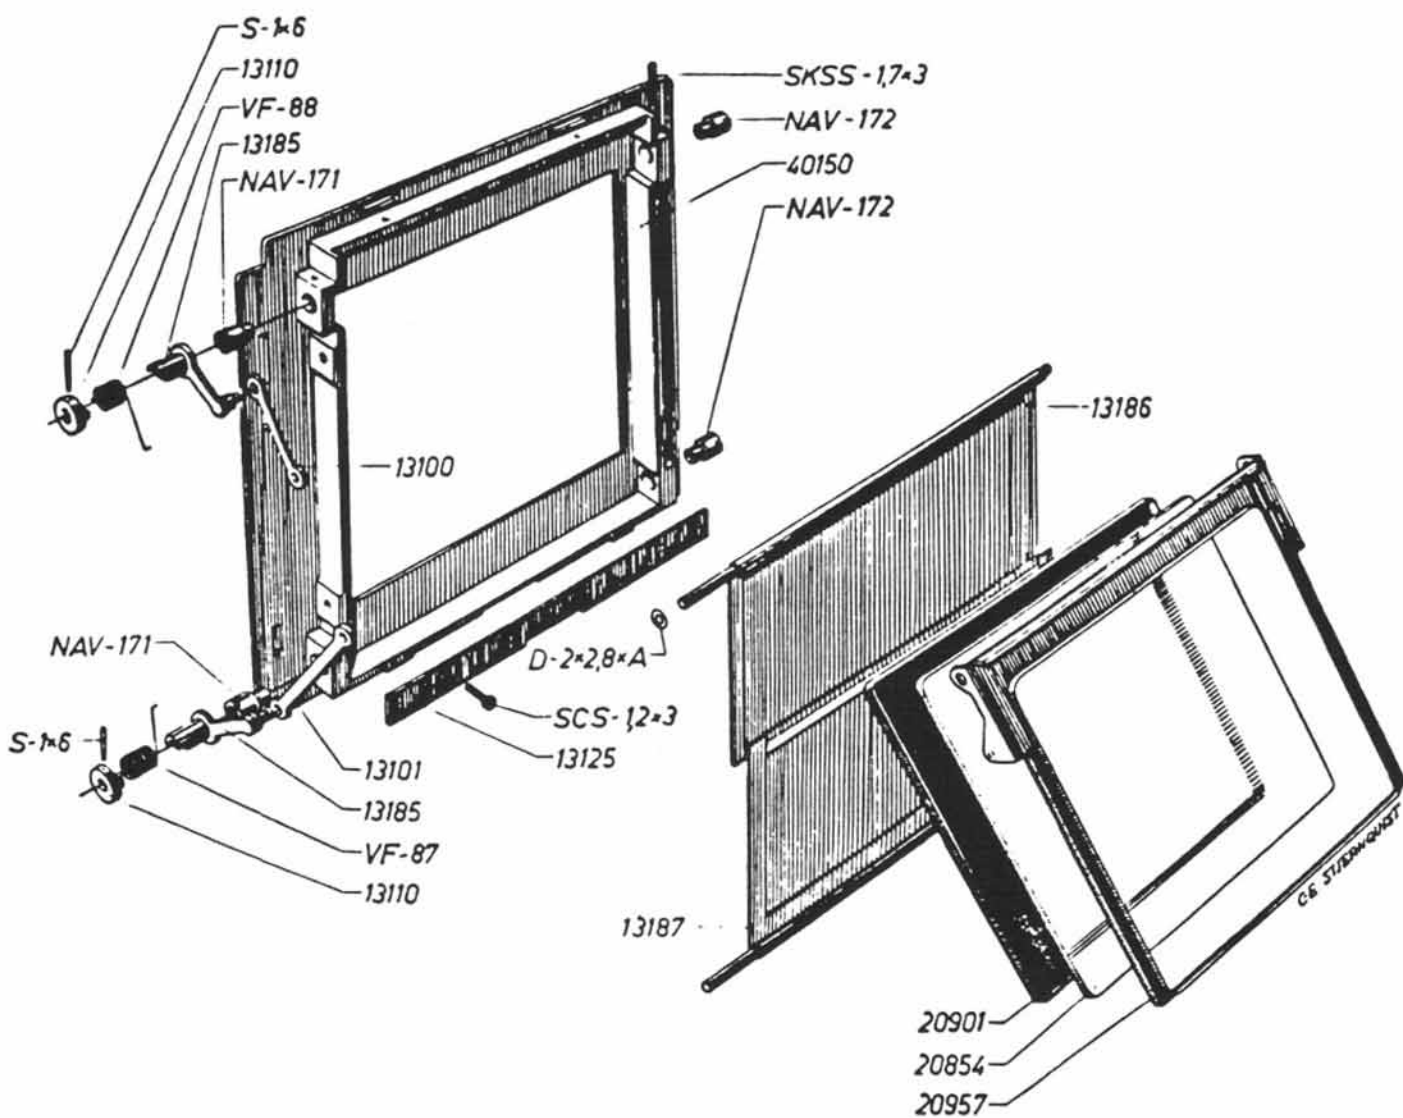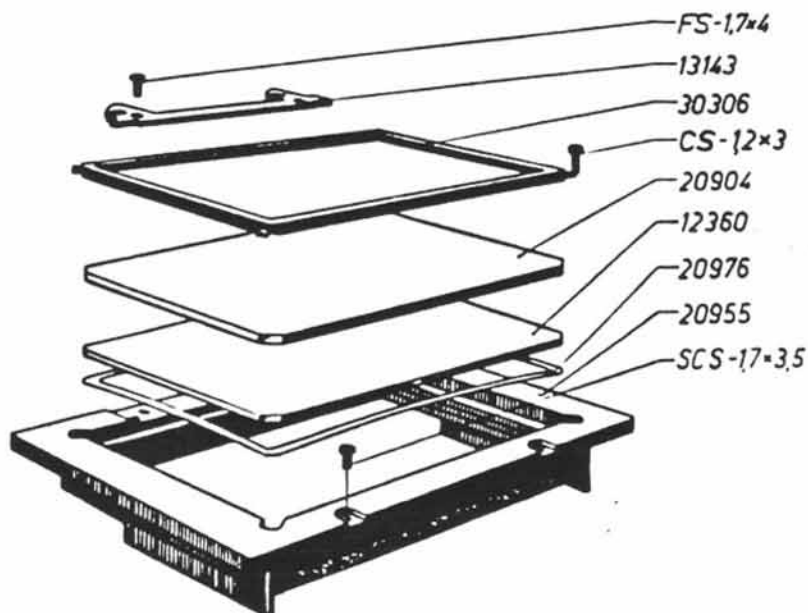


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	12360	0,8 mm Fresnellens		50109	SVL No. 10/61
1	13100	Connecting rod, upper		50109	
1	13101	Connecting rod, lower		50109	
2	13110	Driving disc		GR-30322	
1	13125	Light trap		GR-30322	
1	13143	Magazine hook		50109	
2	13185	Lever		GR-30322	
1	13186	Top flap	×	GR-30322	SVL No. 20/67
1	13187	Bottom flap	×	GR-30322	SVL No. 20/67
1	20854	Mirror		20958	
1	20901	Mirror protection		20958	
1	20904	Ground glass		50109	
1	20955	Frame, complete		50109	SVL No. 1/62
1	20957	Mirror frame		20958	
1	20958	Mirror, complete		GR-30322	
1	20976	Plate spring		50109	A = 0,15; 0,25 mm
1	30306	Ground glass holder		50109	
1	GR-30322	Rear plate, complete		50109	State serial No.
1	GR-40150	Rear plate		GR-30322	State serial No.
1	40160	Camera body, complete	×	—	
1	50109	Camera body, assy.	×	40160	
4	CS-1,2 × 3	Screw		50109	SVL No. 2/63; 2/67
2	D-2 × 2,8 × A	Washer		GR-30322	A = 0,10; 0,20 mm
2	FS-1,7 × 4	Screw		50109	
2	NAV-171	Bushing		GR-30322	
2	NAV-172	Bushing	×	GR-30322	SVL No. 4/66
2	S-1 × 6	Pin		GR-30322	
2	SCS-1,2 × 3	Screw		GR-30322	
2	SCS-1,7 × 3,5	Screw		50109	
4	SKSS-1,7 × 3	Screw		GR-30322	
1	VF-87	Torsion spring		GR-30322	
1	VF-88	Torsion spring		GR-30322	

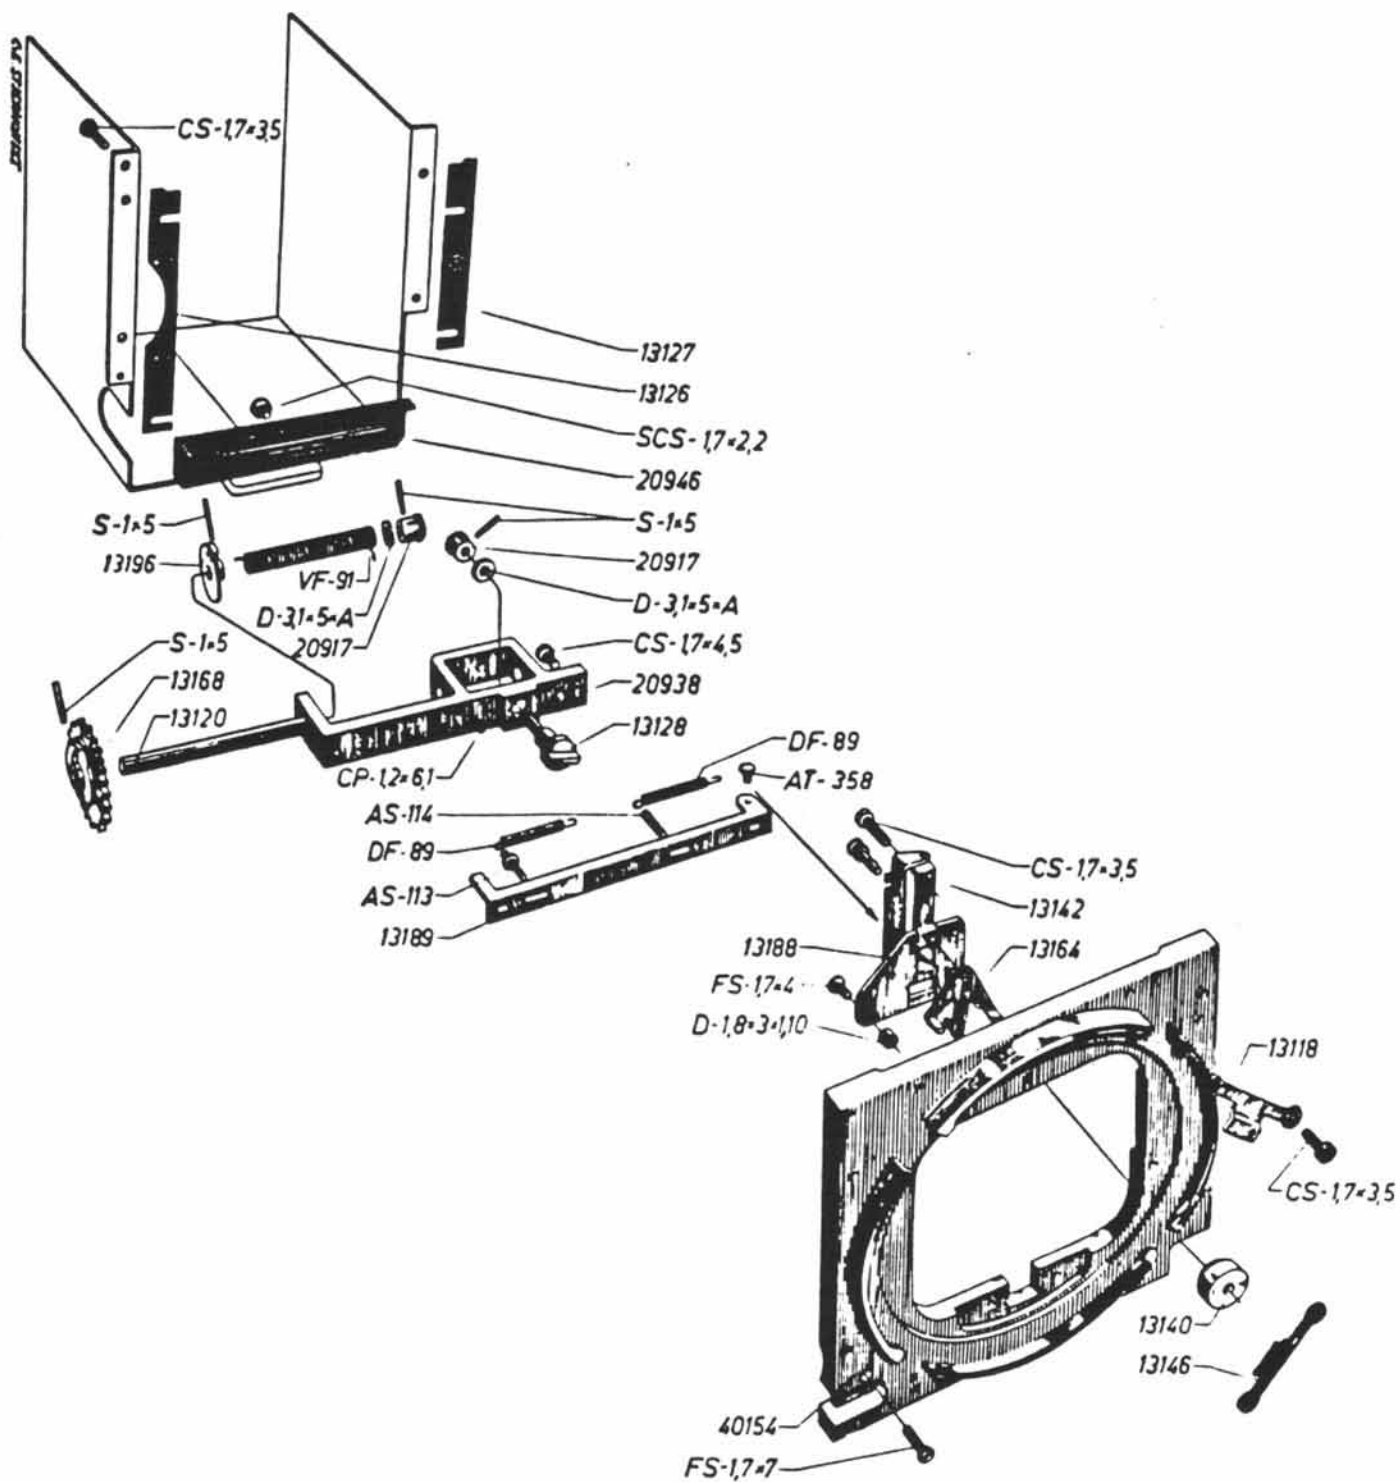


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
3	13118	Bayonet flange		30328	A = 0,15; 0,20; 0,25; 0,30 mm A = 0,15; 0,20; 0,25; 0,30 mm SVL No. 5/59
1	13120	Shaft	×	30329	
1	13126	Shim		50109	
1	13127	Shim		50109	
1	13128	Key	×	30329	
1	13140	Teflon button		50109	
1	13142	Locking pin		30328	
1	13146	Bayonet flange		30328	
1	13164	Lens catch		30328	
1	13168	Gear	×	30329	
1	13188	Plate		20962	
1	13189	Latch		20962	
1	13196	Plate	×	30329	
2	20917	Gear	×	30329	
1	20938	Bracket	×	30329	
1	20946	Cover		50109	SVL No. 2/58; 2/60; 2/64 SVL No. 2/58; 2/60; 2/64; 16/64 SVL No. 2/58; 2/60; 2/64
1	20962	Locking mechanism		30328	
1	30328	Front plate, complete	×	50109	
1	30329	Front gear mechanism	×	30328	
1	40154	Front plate	×	30328	
1	40160	Camera body, complete	×	—	
1	50109	Camera body, assy	×	40160	
1	AS-113	Screw		30328	
1	AS-114	Screw		30328	
1	AT-358	Rivet		20962	
1	CP-1,2×6,1	Cylinder pin		30326	
9	CS-1,7×3,5	Screw		30328	
4	CS-1,7×3,5	Screw		50109	
1	CS-1,7×4,5	Screw		30328	
2	D-1,8×3×1,10	Washer		30328	
2	D-3,1×5×A	Washer	×	30329	A = 0,05; 0,10; 0,20; 0,30 mm
2	DF-89	Draw spring		30328	
2	FS-1,7×4	Screw		30328	
1	FS-1,7×7	Screw		30328	
4	S-1×5	Pin	×	30329	
1	SCS-1,7×2,2	Screw		50109	
1	VF-91	Torsion spring	×	30329	
					See also page 6

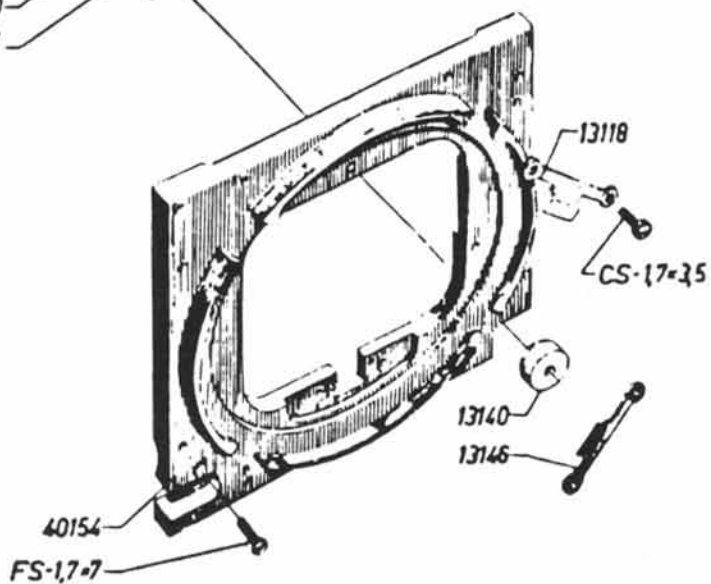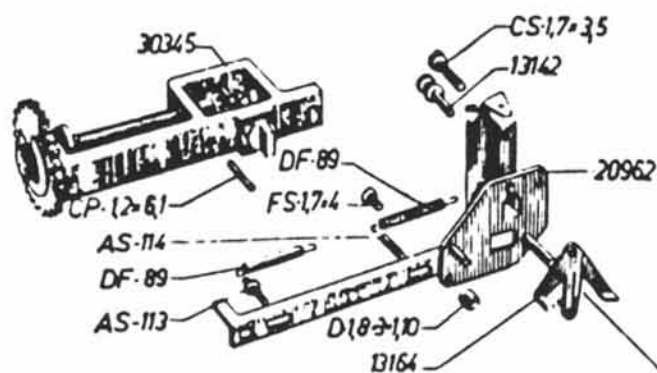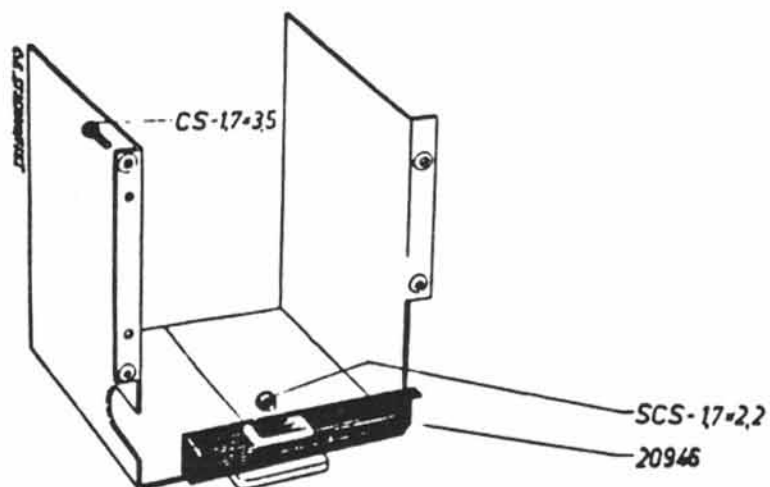


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
3	13118	Bayonet flange		30350	
1	13140	Teflon button		50109	
1	13142	Locking pin		30350	
1	13146	Bayonet flange		30350	
1	13164	Lens catch		30350	
1	20946	Cover		50109	
1	20962	Locking mechanism		30350	
1	30345	Front gear mechanism	×	30350	SVL No. 16/64
1	30350	Front plate, complete	×	50109	SVL No. 16/64
1	40154	Front plate	×	30350	SVL No. 2/60
1	40160	Camera body, complete	×	—	
1	50109	Camera body, assy.	×	40160	
1	AS-113	Screw		30350	
1	AS-114	Screw		30350	
1	CP-1,2×6,1	Cylinder pin		30345	
9	CS-1,7×3,5	Screw		30350	
4	CS-1,7×3,5	Screw		50109	
2	D-1,8×3×1,10	Washer		30350	
2	DF-89	Draw spring		30350	
2	FS-1,7×4	Screw		30350	
1	FS-1,7×7	Screw		30350	
1	SCS-1,7×2,2	Screw		50109	

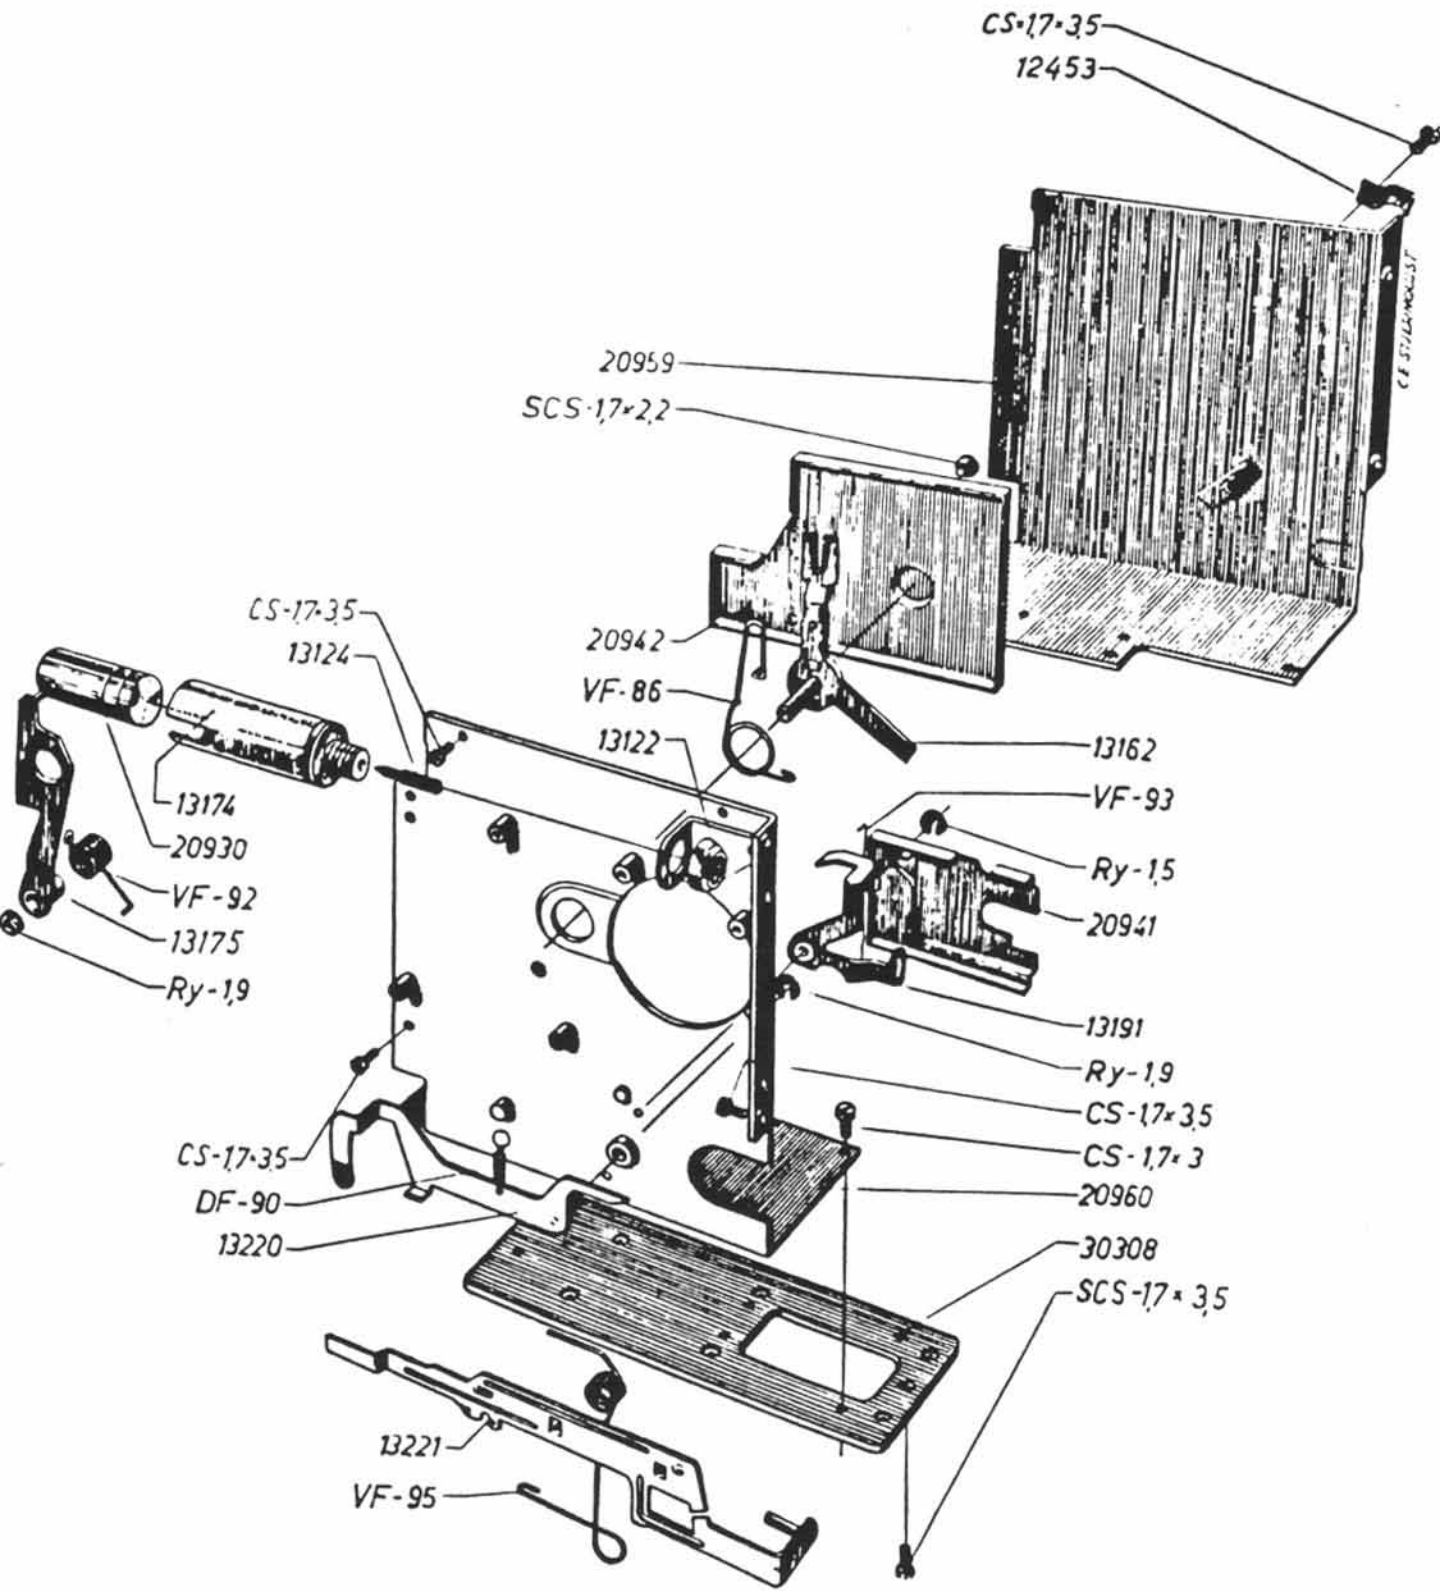

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	12453	Cable holder		50109	
1	13122	Nut		50109	SVL No. 4/60; 1/63
1	13124	Screw		13173	SVL No. 4/60; 1/63
1	13158	Signal		50109	
1	13159	Release arm		50109	
1	13162	Mirror actuating arm		50109	
1	13173	Pump, complete		50109	
1	13174	Pumphousing	×	13173	SVL No. 4/60; 1/63
1	13175	Pumparm		50109	SVL No. 4/60
1	13191	Mirror catch		50109	
1	20930	Piston	×	13173	SVL No. 4/60; 1/63
1	20941	Cover		50109	
1	20942	Cover		50109	
1	20959	Inner wall, left complete		50109	
1	20960	Inner wall, right		50109	
1	30308	Bottom plate		50109	
1	40160	Camera body, complete	×	—	
1	50109	Camera body, assy.	×	40160	
6	CS-1,7 × 3	Screw		50109	SVL No. 26/69
12	CS-1,7 × 3,5	Screw		50109	
1	DF-90	Draw spring		50109	
1	RY-1,5	Clip		50109	
2	RY-1,9	Clip		50109	
1	SCS-1,7 × 2,2	Screw		50109	
1	SCS-1,7 × 3,5	Screw		50109	
1	VF-86	Torsion spring		50109	
1	VF-92	Torsion spring		50109	SVL No. 4/60; 1/63
1	VF-93	Torsion spring		50109	
1	VF-95	Torsion spring		50109	
See also page 8					

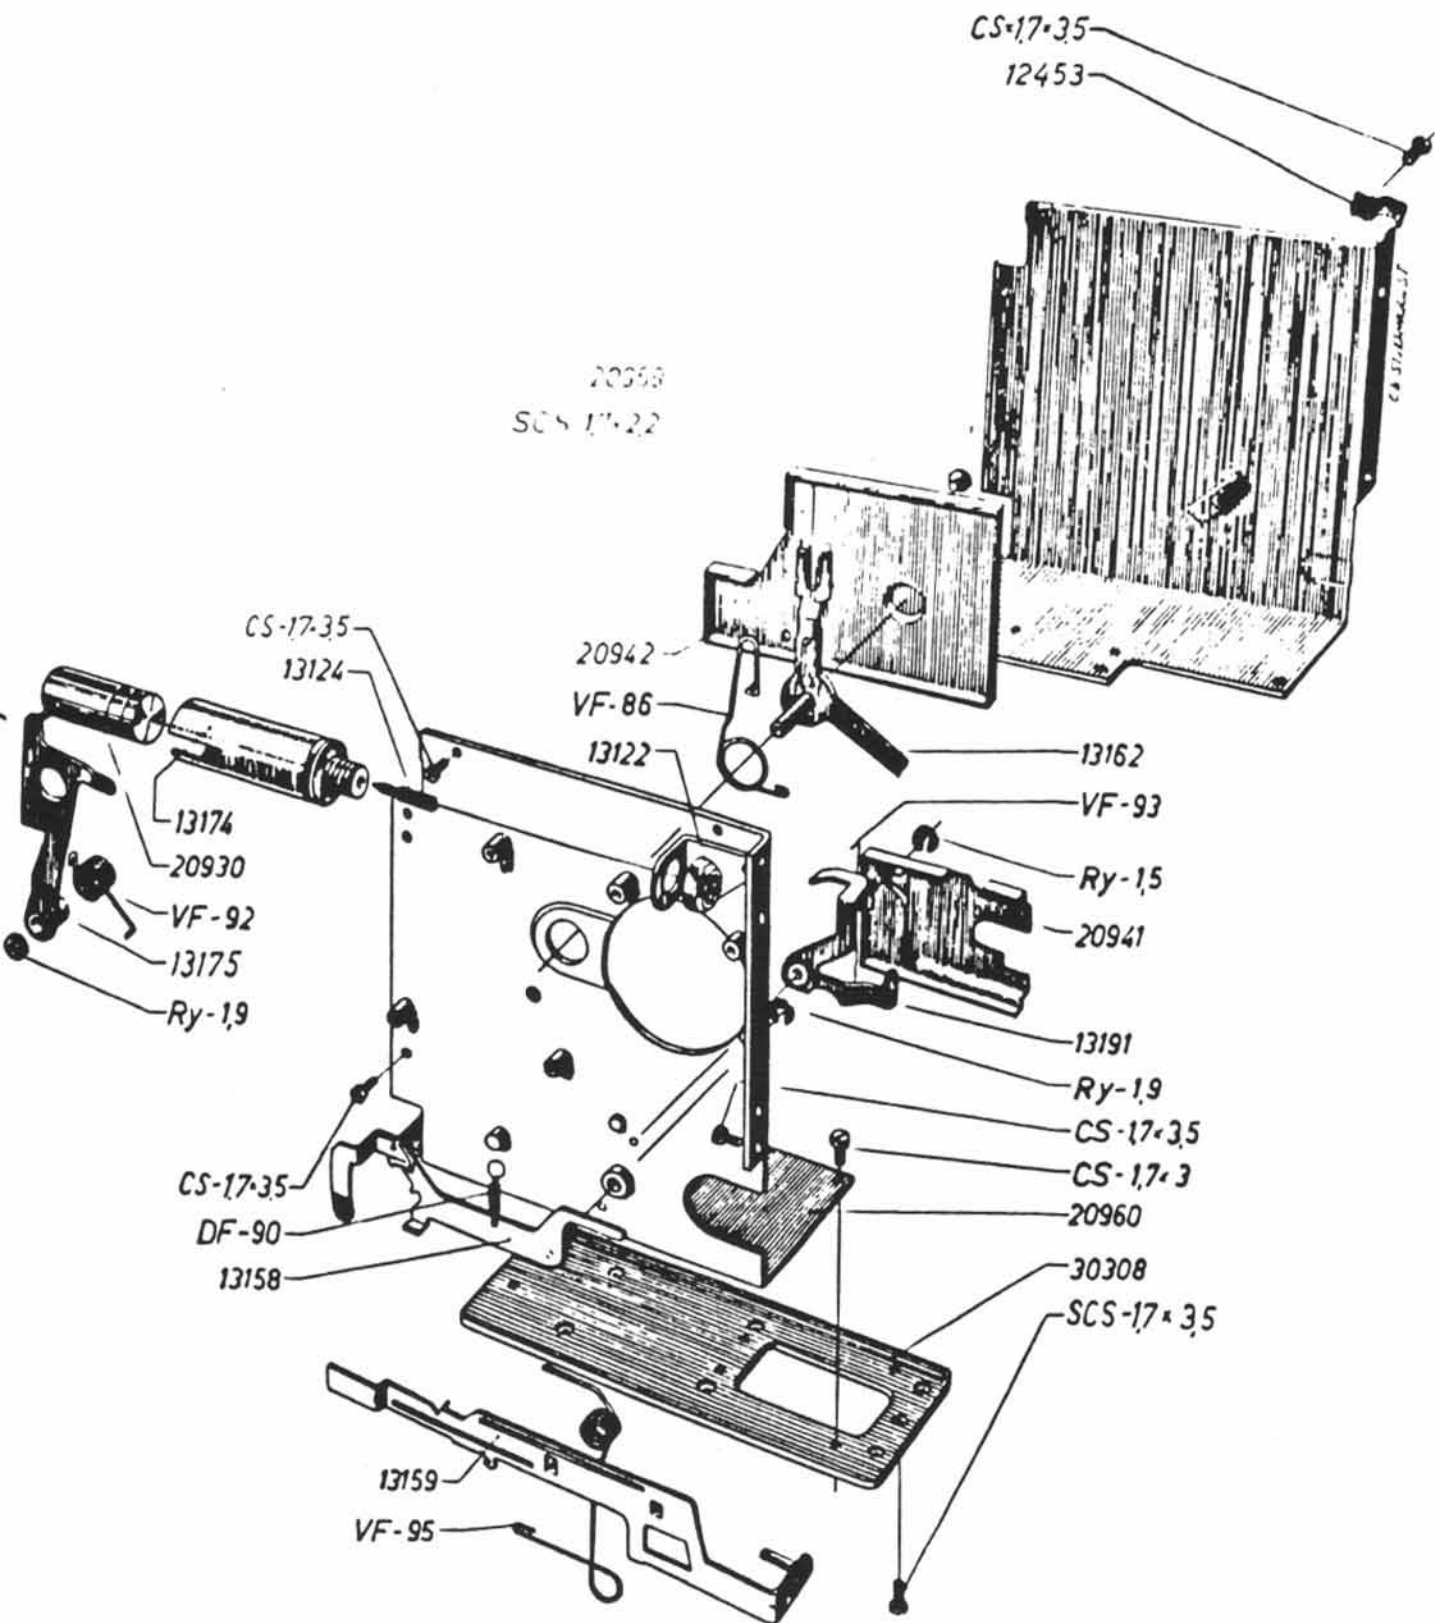

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	12453	Cable holder		50109	
1	13122	Nut		50109	SVL No. 4/60; 1/63
1	13124	Screw		13173	SVL No. 4/60; 1/63
1	13162	Mirror actuating arm		50109	
1	13173	Pump, complete		50109	
1	13174	Pumphousing	×	13173	SVL No. 4/60; 1/63
1	13175	Pump arm		50109	SVL No. 4/60
1	13191	Mirror catch		50109	
1	13220	Signal		50109	
1	13221	Release arm		50109	
1	20930	Piston	×	13173	SVL No. 4/60; 1/63
1	20941	Cover		50109	
1	20942	Cover		50109	
1	20959	Inner wall, left, complete		50109	
1	20960	Inner wall, right		50109	
1	30308	Bottom plate		50109	
1	40160	Camera body, complete	×	—	
1	50109	Camera body, assy.	×	40160	
6	CS-1,7×3	Screw		50109	
12	CS-1,7×3,5	Screw		50109	
1	DF-90	Draw spring		50109	
1	RY-1,5	Clip		50109	
2	RY-1,9	Clip		50109	
1	SCS-1,7×2,2	Screw		50109	
1	SCS-1,7×3,5	Screw		50109	
1	VF-86	Torsion spring		50109	
1	VF-92	Torsion spring		50109	SVL No. 4/60; 1/63
1	VF-93	Torsion spring		50109	
1	VF-95	Torsion spring		50109	

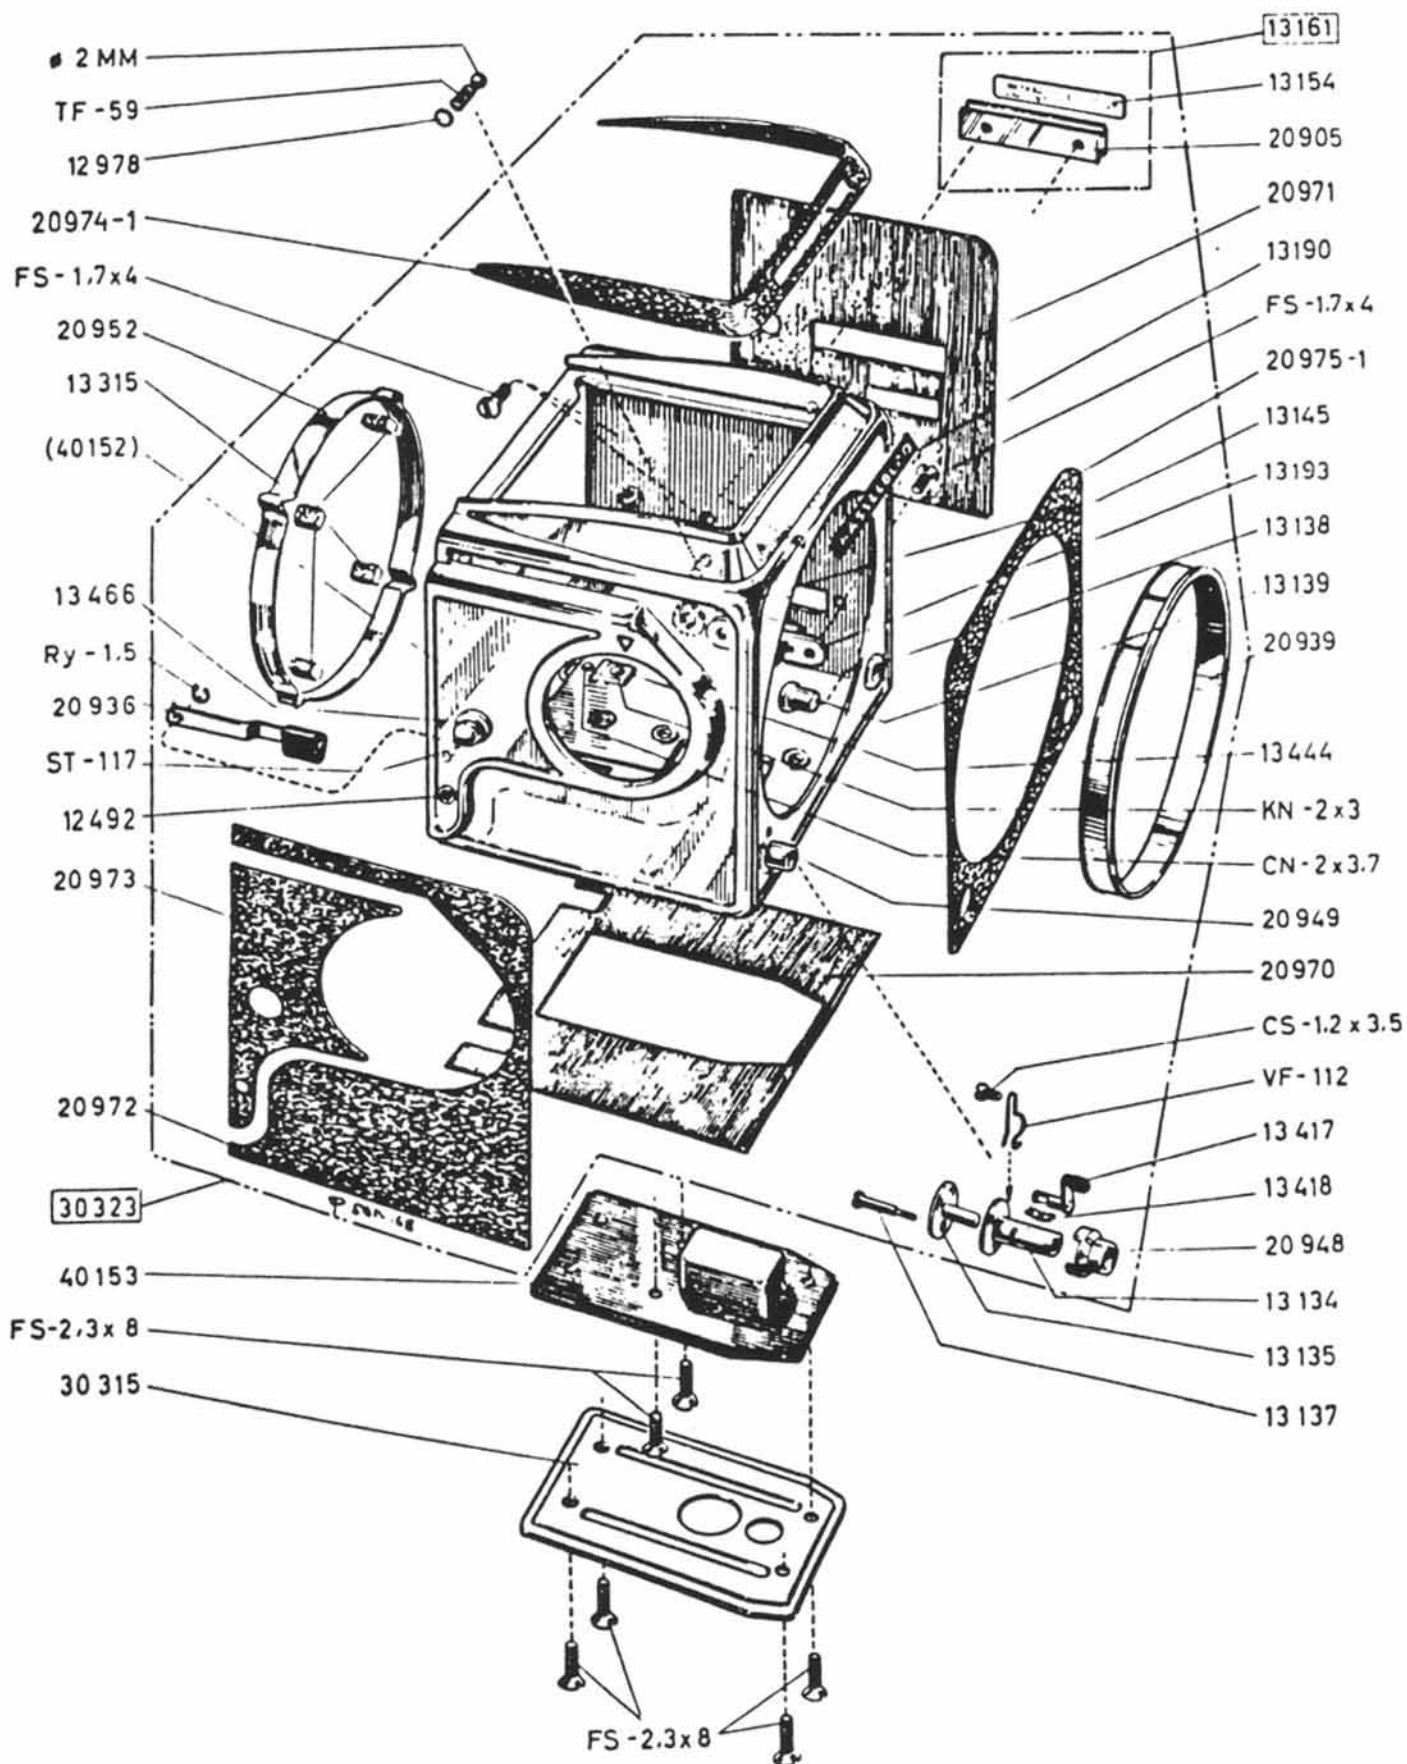

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	12492	Window		30323	
2	12978	Plate		30323	
1	13134	Release button		30323	
1	13135	Buffer		30323	
1	13137	Screw		30323	
1	13138	Bushing		30323	
1	13139	Lens release button		40180	
1	13145	Nylon ring		30323	
1	13154	Name plate		13161	
1	13161	Accessory shoe, complete		30323	
1	13190	Name plate		30323	
1	13193	Cable attachment, complete		30323	
4	13315	Foam plastic pad		30323	
1	13417	T-arm		30323	
1	13418	Plate spring		30323	
2	13444	Magazine support		30323	SVL No. 7/63; 19/71
2	13466	Strap button		30323	SVL No. 3/66
1	20905	Accessory shoe		13161	
1	20936	Quick release lever		30323	
1	20939	Front ring		30323	
1	20948	Socket		30323	
1	20949	Bushing		30323	
1	20952	Locking ring		30323	
1	20970	Leather		30323	
1	20971	Leather		30323	
1	20972	Leather		30323	
1	20973	Leather		30323	
1	20974-1	Leather		20323	
1	20975-1	Leather		30323	SVL No. 7/64
1	30315	Slide		40180	
1	30323	Shell, complete		40180	SVL No. 7/64
1	40152	Shell	×	30323	
1	40153	Tripod socket		40180	
1	40180	Camera body, complete	×	—	
2	CN-2×3,7	Rivet		30323	
1	CS-1,2×3,5	Screw		30323	
4	FS-1,7×4	Screw		30323	
6	FS-2,3×8	Screw		40180	
2	KN-2×3	Rivet		30323	
1	RY-1,5	Clip		30323	
1	ST-117	Rivet		30323	
2	TF-59	Pressure spring		30323	
1	VF-112	Torsion spring		30323	
2	Ø 2 mm	Steel ball		30323	

SCS - 1.7 x 3.2

20 920

13 157

D - 4.5 x 7 x A
A = 0.10 ; 0.20 ; 0.30

13 509

D - 8 x 8.5 x 2.2

D - 4.5 x 7 x 0.10

CP - 1 x 7.8

20 919

VF - 83

13 169

30 304

CS - 1.7 x 6

20 924

13 360

13 163

13 436

SCS - 3 x 5.5

20 992

TF - 63

SFS - 2 x 6

FS - 2 x 7

20 996

30 324

CS - 1.7 x 7

13 170

VF - 94

SFS - 2 x 6

20 908

20 990

20 991

SFS - 2 x 6

20 999


FS - 2 x 7

CODE NO. 44 024




Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13157	Gear housing, bottom		30324	
1	13163	Bayonet plate		40180	
1	13169	Gear		30324	
1	13170	Adjustable pawl		50111	
1	13360	Shim		40180	
1	13436	Locking washer		40180	SVL No. 6/64
1	13509	Stop gear		30324	SVL No. 4/63; 2/64
1	20908	Bayonet plate		30316	
1	20919	Hook		30324	
1	20920	Mirror cam		30324	
1	20924	Ratchet wheel		30324	
1	20990	Housing		30316	
1	20991	Rim		30316	
1	20992	Catch		30316	
1	20996	Leather		30316	
1	20999	Lid		30316	
1	30304	Gear housing, top		30324	
1	30316	Knob, complete	▲	40180	Order Code No. 44024
1	30324	Gear housing, complete		50111	
1	40180	Camera body, complete	×	—	
1	50111	Camera body, assy.	×	40180	
1	CP-1×7,8	Cylinder pin		30324	
1	CS-1,7×6	Screw		50111	
2	CS-1,7×7	Screw		50111	
1	D-4,5×7×0,10	Washer		30324	
1	D-4,5×7×A	Washer		20324	A = 0,10; 0,20; 0,30 mm
1	D-8×8,5×2,2	Washer		30324	
2	FS-2×7	Screw		30316	
1	SCS-1,7×3,2	Screw		30324	
1	SCS-3×5,5	Screw		40180	
6	SFS-2×6	Screw		30316	
1	TF-63	Pressure spring		30316	
1	VF-83	Torsion spring		30324	
1	VF-94	Torsion spring		13170	

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	SCS-1,7×2,5	Screw		50111	
1	SCS-1,7×3,5	Screw		50111	
1	SCS-2×4	Screw		50111	
1	SCS-2×5	Screw		50111	
1	ST-115	Rivet	×	20961	
1	ST-119	Rivet	×	20961	
1	VF-85	Torsion spring		50111	
1	VF-89	Torsion spring		50111	
1	VF-108	Torsion spring		50111	SVL No. 1/66

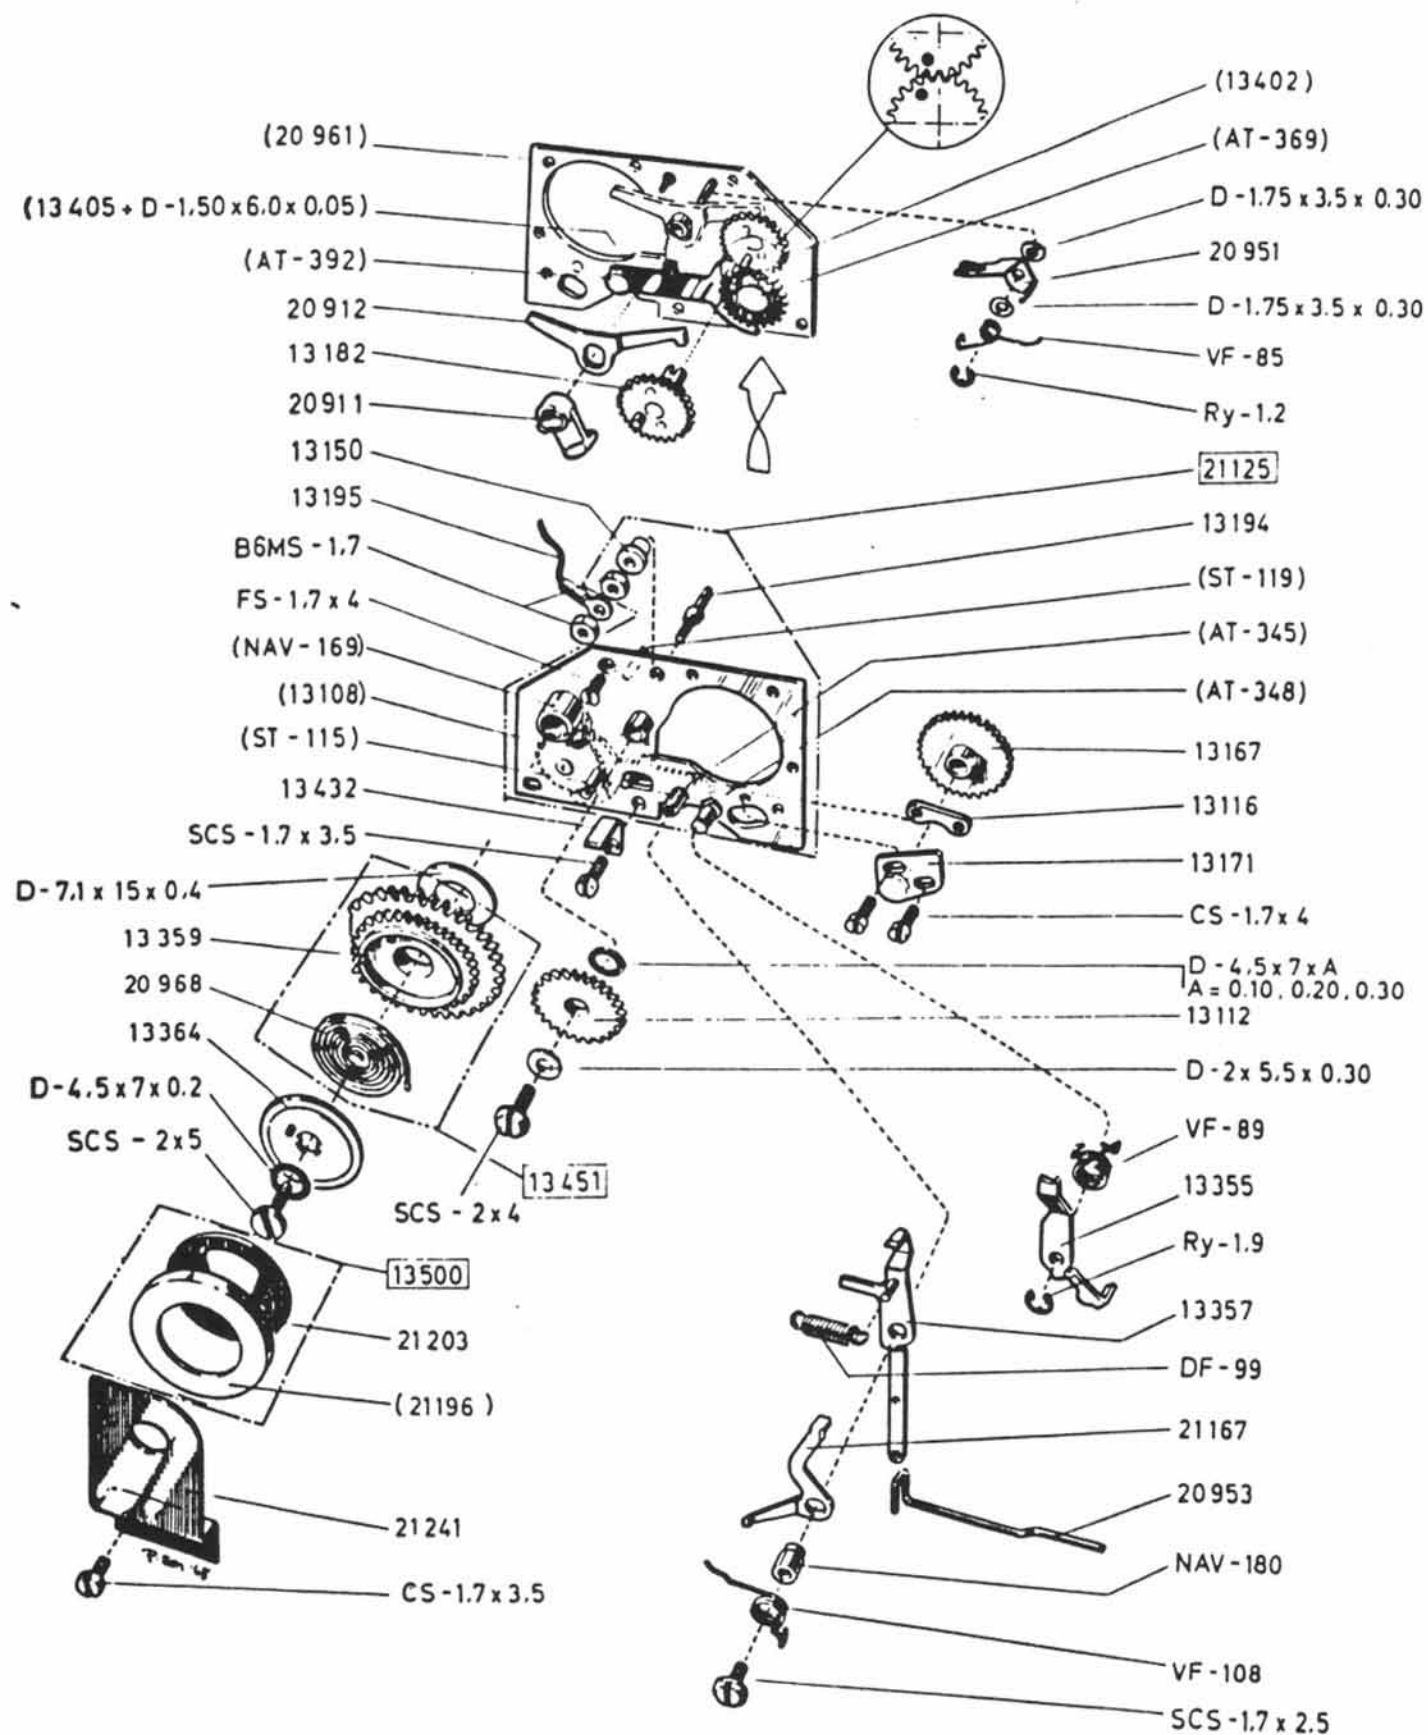


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13108	Hub	×	20961	
1	13112	Gear		50111	
1	13116	Nut		50111	
1	13150	Nylon insulator		21125	
1	13167	Gear		50111	
1	13171	Bearing bracket		50111	
1	13182	Gear with cam		50111	
1	13194	Contact screw		21125	
1	13195	Cable		13193	See page 9 (10)
1	13355	Stop lever		50111	SVL No. 17/67
1	13357	Release arm		50111	
1	13359	Gear		13451	
1	13364	Cover		50111	SVL No. 2/62
1	13402	Gear with cam	×	21125	
1	13405	Coupling	×	21125	SVL No. 1/66
1	13432	Stop angle		50111	
1	13451	Gear, assy.		50111	
1	13500	Damping ring		50111	SVL No. 1/63; 1/71
1	20911	Stop		50111	
1	20912	Bar		50111	
1	20951	Contact spring		50111	
1	20953	Push rod		50111	
1	20961	Mechanism plate	×	21125	
1	20968	Coil spring		13451	
1	21125	Mechanism plate, complete		50111	SVL No. 5/64; 1/66
1	21167	S-arm		50111	SVL No. 1/66
1	21196	Ring	×	13500	
1	21203	Rubber disk		13500	SVL No. 1/63; 1/71
1	21241	Cover		50111	SVL No. 1/63
1	40180	Camera body, complete	×	—	
1	50111	Camera body, assy.	×	40180	
1	AT-345	Pin	×	20961	
1	AT-348	Pin	×	20961	
1	AT-369	Pin	×	21125	
1	AT-392	Pin	×	21125	
2	B6MS-1,7	Nut		21125	SVL No. 5/64
1	CS-1,7×3,5	Screw		50111	
2	CS-1,7×4	Screw		50111	
1	D-1,50×6,0×0,05	Washer	×	21125	SVL No. 5/64
2	D-1,75×3,5×0,30	Washer		50111	
1	D-2×5,5×0,30	Washer		50111	
1	D-4,5×7×0,20	Washer		50111	
1	D-4,5×7×A	Washer		50111	A = 0,10; 0,20; 0,30 mm
1	D-7,1×15×0,4	Washer		50111	
1	DF-99	Draw spring		50111	SVL No. 1/66
1	FS-1,7×4	Screw		50111	
1	NAV-169	Hub	×	20961	
1	NAV-180	Hub		50111	
1	RY-1,2	Clip		50111	
1	RY-1,9	Clip		50111	

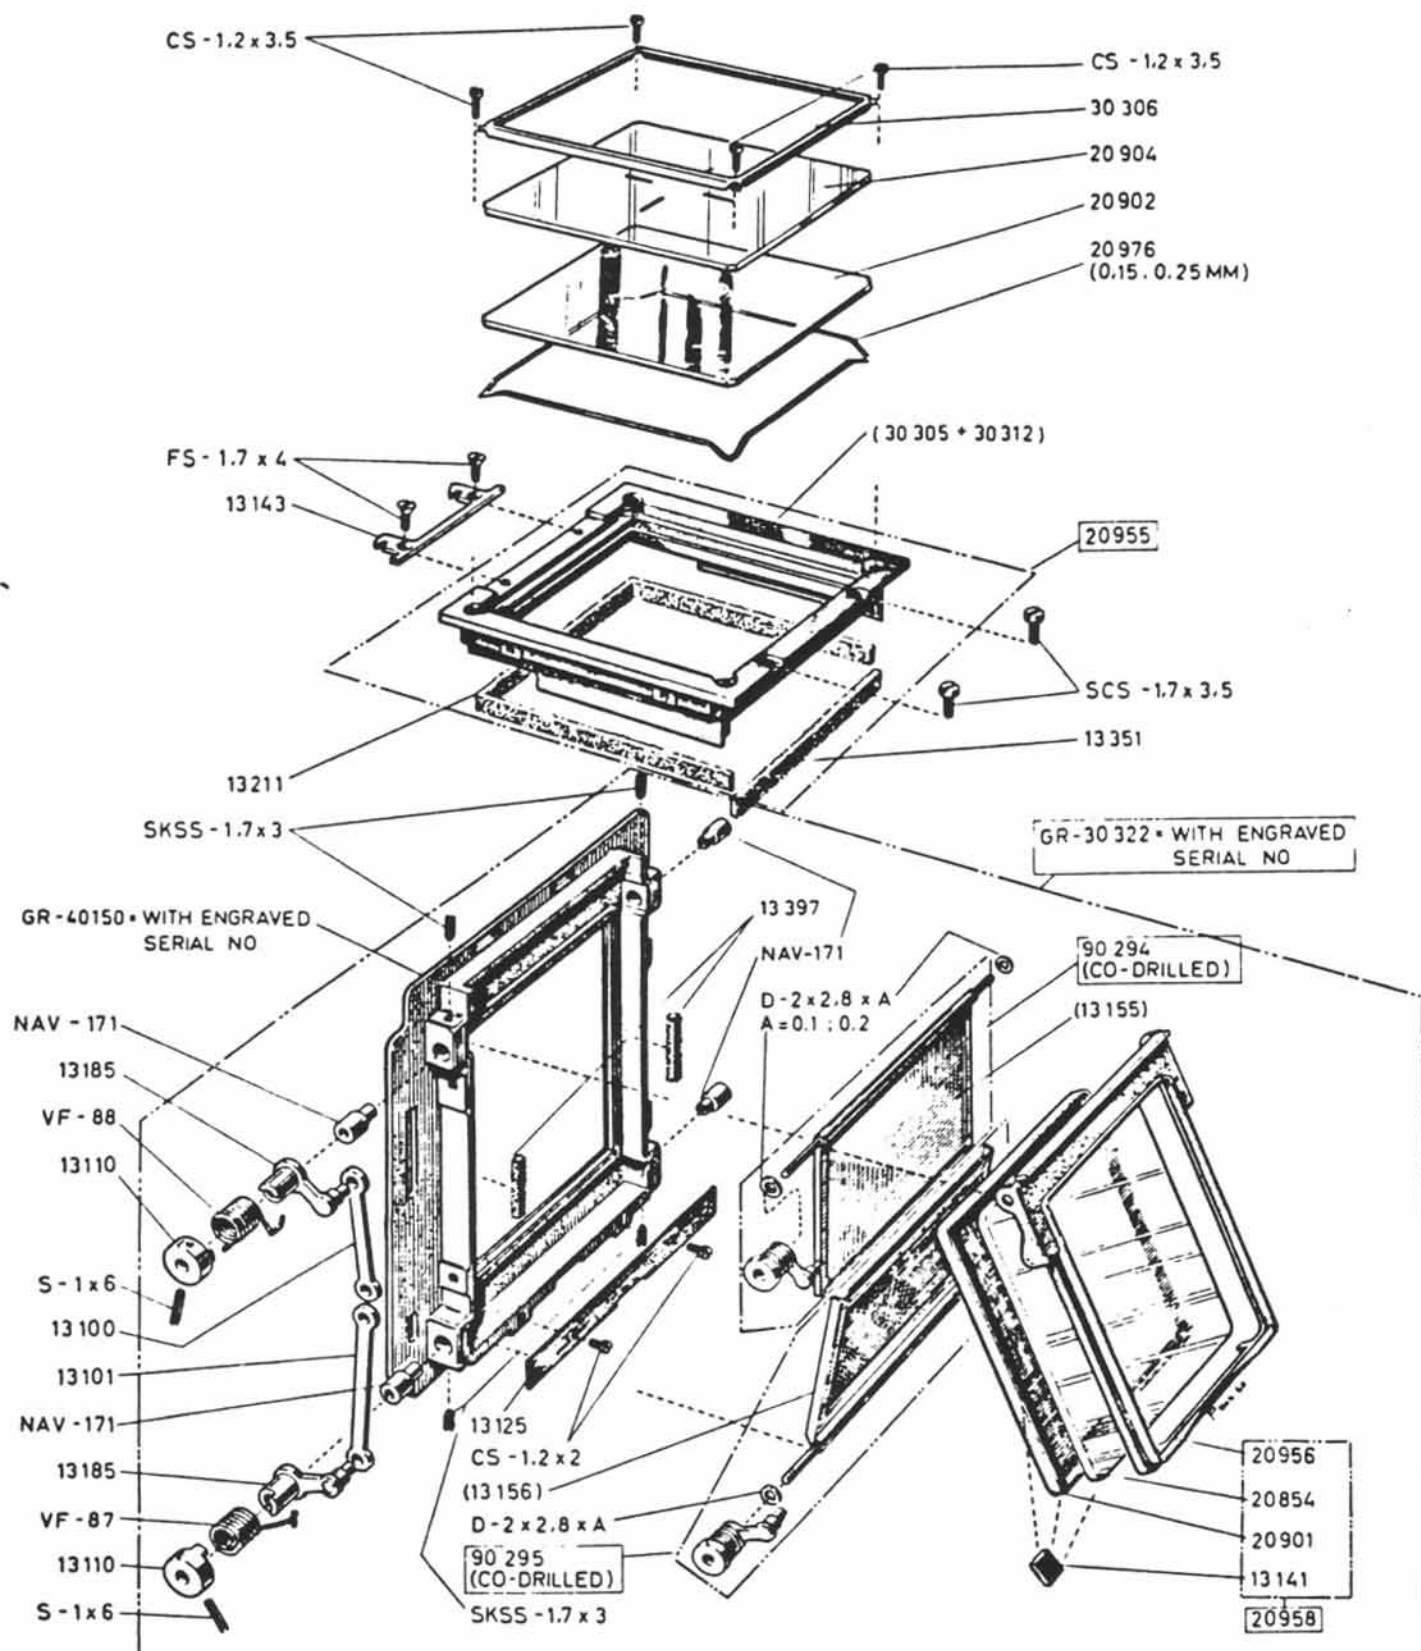


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13100	Connecting rod, upper		50111	
1	13101	Connecting rod, lower		50111	
2	13110	Driving disc		90294/295	
1	13125	Light trap		GR-30322	
3	13141	Foam plastic pad		20958	
1	13143	Magazine hook		50111	
1	13155	Top flap	×	90294	SVL No. 20/67
1	13156	Bottom flap	×	90295	SVL No. 20/67
2	13185	Lever		90294/295	
1	13211	Foam plastic strip		20955	
1	13351	Foam plastic strip		20955	
2	13397	Foam plastic strip		GR-30322	
1	20854	Mirror		20958	SVL No. 22/67
1	20901	Mirror protection		20958	
1	20902	Fresnellens		50111	SVL No. 10/61
1	20904	Ground glass		50111	
1	20955	Frame, complete		50111	SVL No. 1/62; 22/67
1	20956	Frame for mirror		20958	
1	20958	Mirror, complete		GR-30322	
1	20976	Plate spring		50111	A=0,15; 0,25 mm
1	30305	Frame, outer	×	20955	
1	30306	Ground glass holder		50111	
1	30312	Frame, inner	×	20955	
1	GR-30322	Rear plate, complete		50111	State serial No.
1	GR-40150	Rear plate		GR-30322	State serial No.
1	40180	Camera body, complete	×	—	
1	50111	Camera body, assy.	×	40180	
1	90294	Top flap		GR-30322	SVL No. 20/67
1	90295	Bottom flap		GR-30322	SVL No. 20/67
2	CS-1,2×2	Screw		GR-30322	SVL No. 7/69
4	CS-1,2×3,5	Screw		50111	SVL No. 2/67
2	D-2×2,8×A	Washer		GR-30322	A=0,1; 0,2 mm
2	FS-1,7×4	Screw		50111	
4	NAV-171	Hub		GR-30322	SVL No. 4/66
2	S-1×6	Pin		GR-30322	
2	SCS-1,7×3,5	Screw		50111	
4	SKSS-1,7×3	Screw		GR-30322	
1	VF-87	Torsion spring		90294/295	
1	VF-88	Torsion spring		90294/295	

CS-1,7 x 3,5

Serial number CE 38592 - US 106700

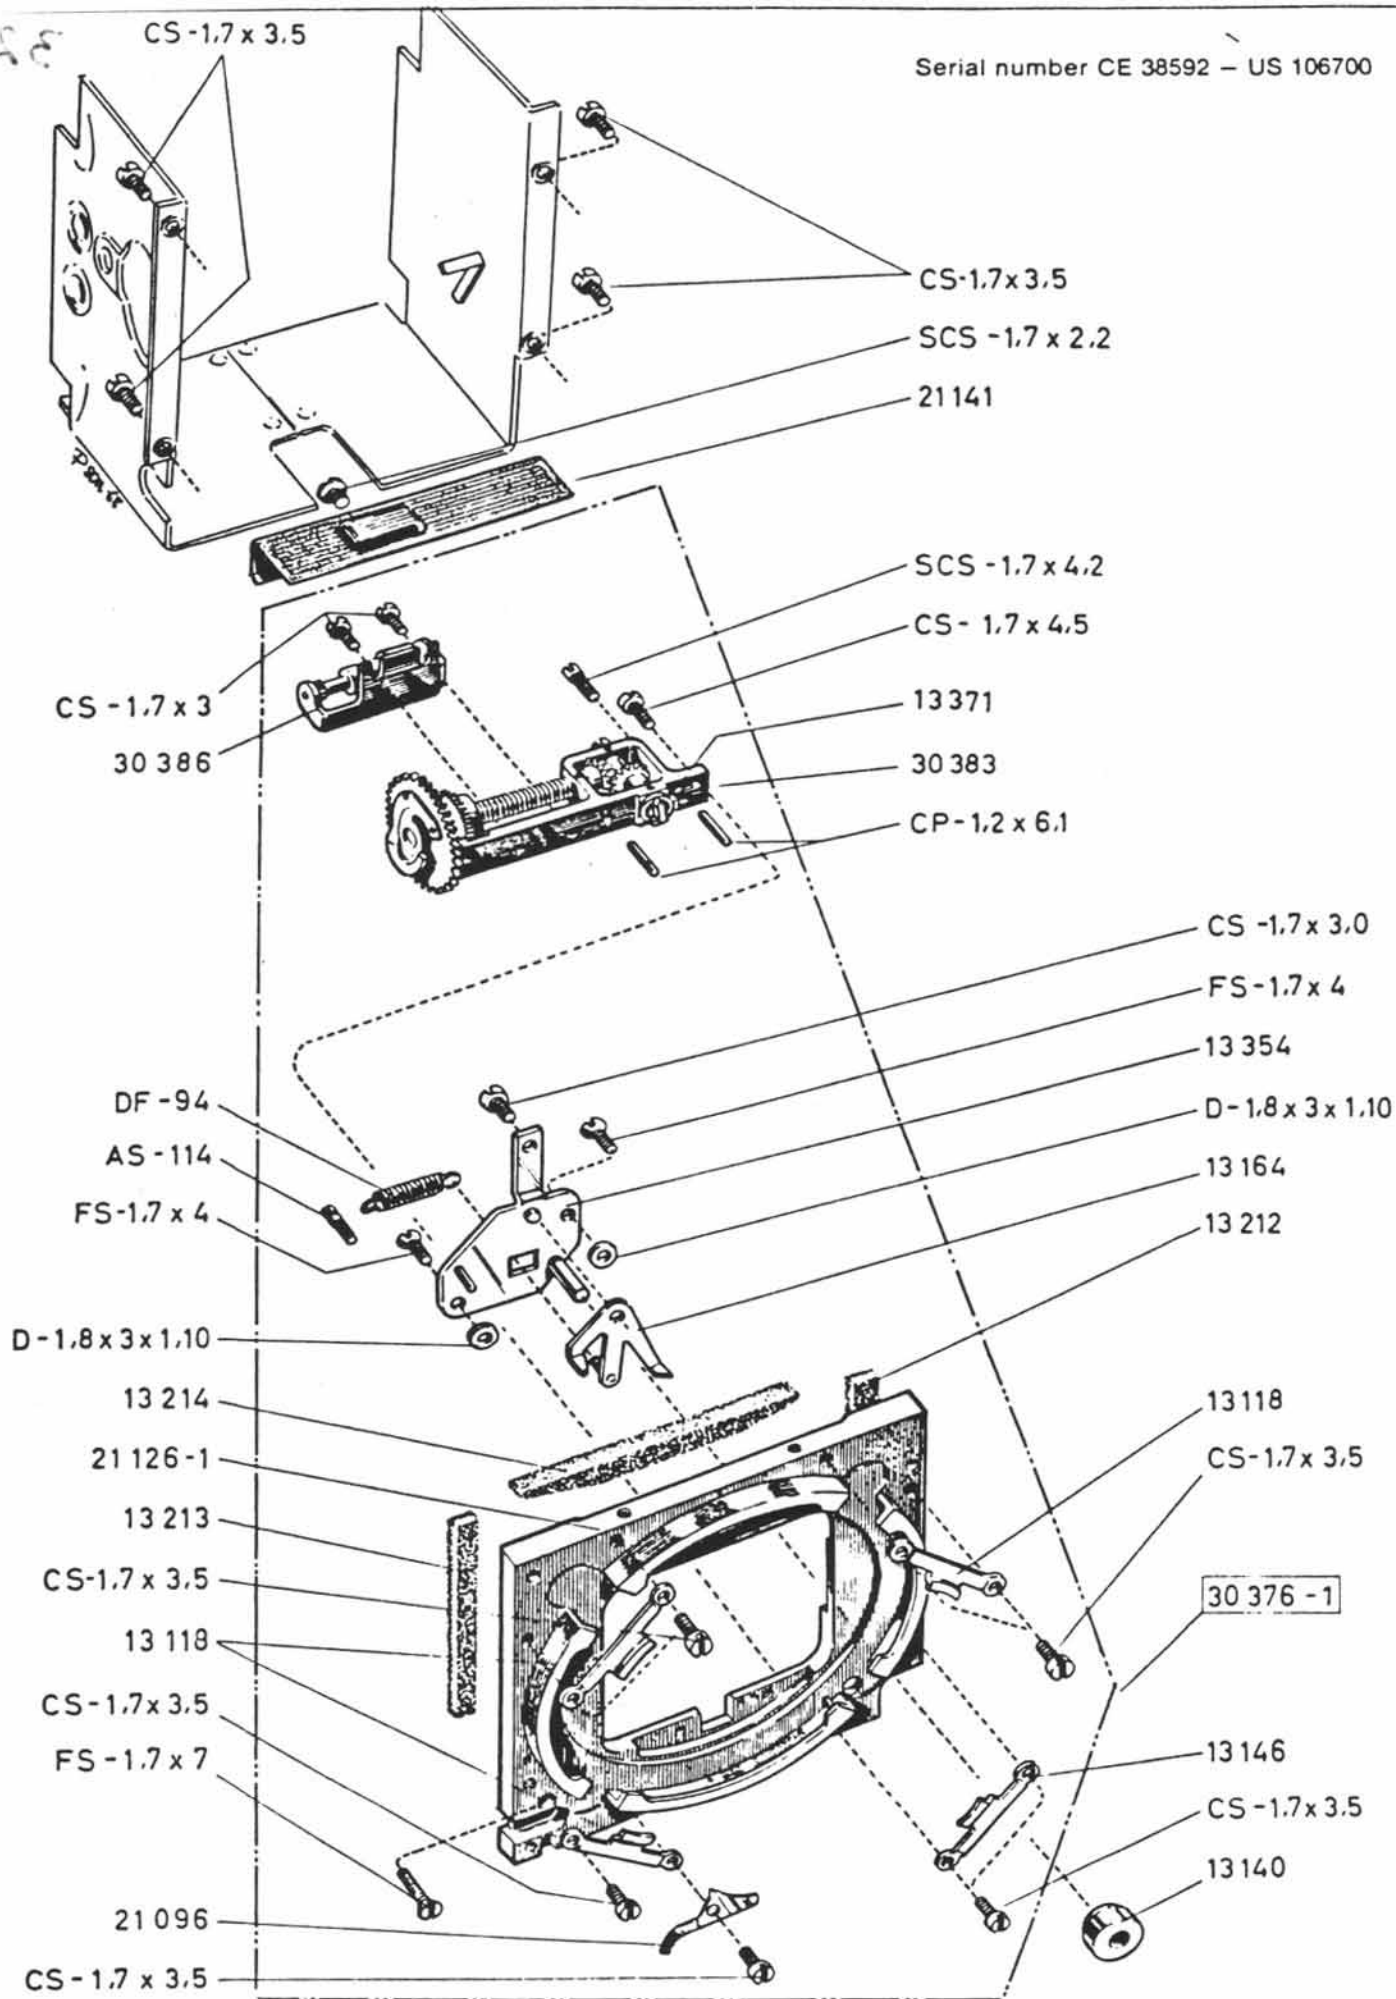

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
3	13118	Bayonet flange		30376-1	
1	13140	Teflon button		40180	
1	13146	Bayonet flange		30376-1	
1	13164	Lens catch		30376-1	
1	13212	Foam plastic strip		30376-1	
1	13213	Foam plastic strip		30376-1	
1	13214	Foam plastic strip		30376-1	
1	13354	Mounting plate		30376-1	
1	13371	Ring		30383	SVL No. 9/64
1	21096	Plate spring		30376-1	
1	21126-1	Bayonet front plate		30376-1	
1	21141	Cover		40180	
1	30376-1	Bayonet front plate, complete		50111	SVL No. 12/64; 21/67
1	30383	Front gear mechanism		30376-1	SVL No. 21/67; 27/69; 3/71
1	30386	Governor		30376-1	
1	40180	Camera body, complete	×	—	
1	50111	Camera body, assy.	×	40180	
1	AS-114	Screw		30376-1	
2	CP-1,2×6,1	Cylinder pin		30376-1	
2	CS-1,7×3,0	Screw		30376-1	SVL No. 7/69
8	CS-1,7×3,5	Screw		30376-1	
4	CS-1,7×3,5	Screw		50111	
1	CS-1,7×4,5	Screw		30376-1	
2	D-1,8×3×1,10	Washer		30376-1	
1	DF-94	Draw spring		30376-1	
2	FS-1,7×4	Screw		30376-1	
1	FS-1,7×7	Screw		30376-1	
1	SCS-1,7×2,2	Screw		40180	
1	SCS-1,7×4,2	Screw		30383	

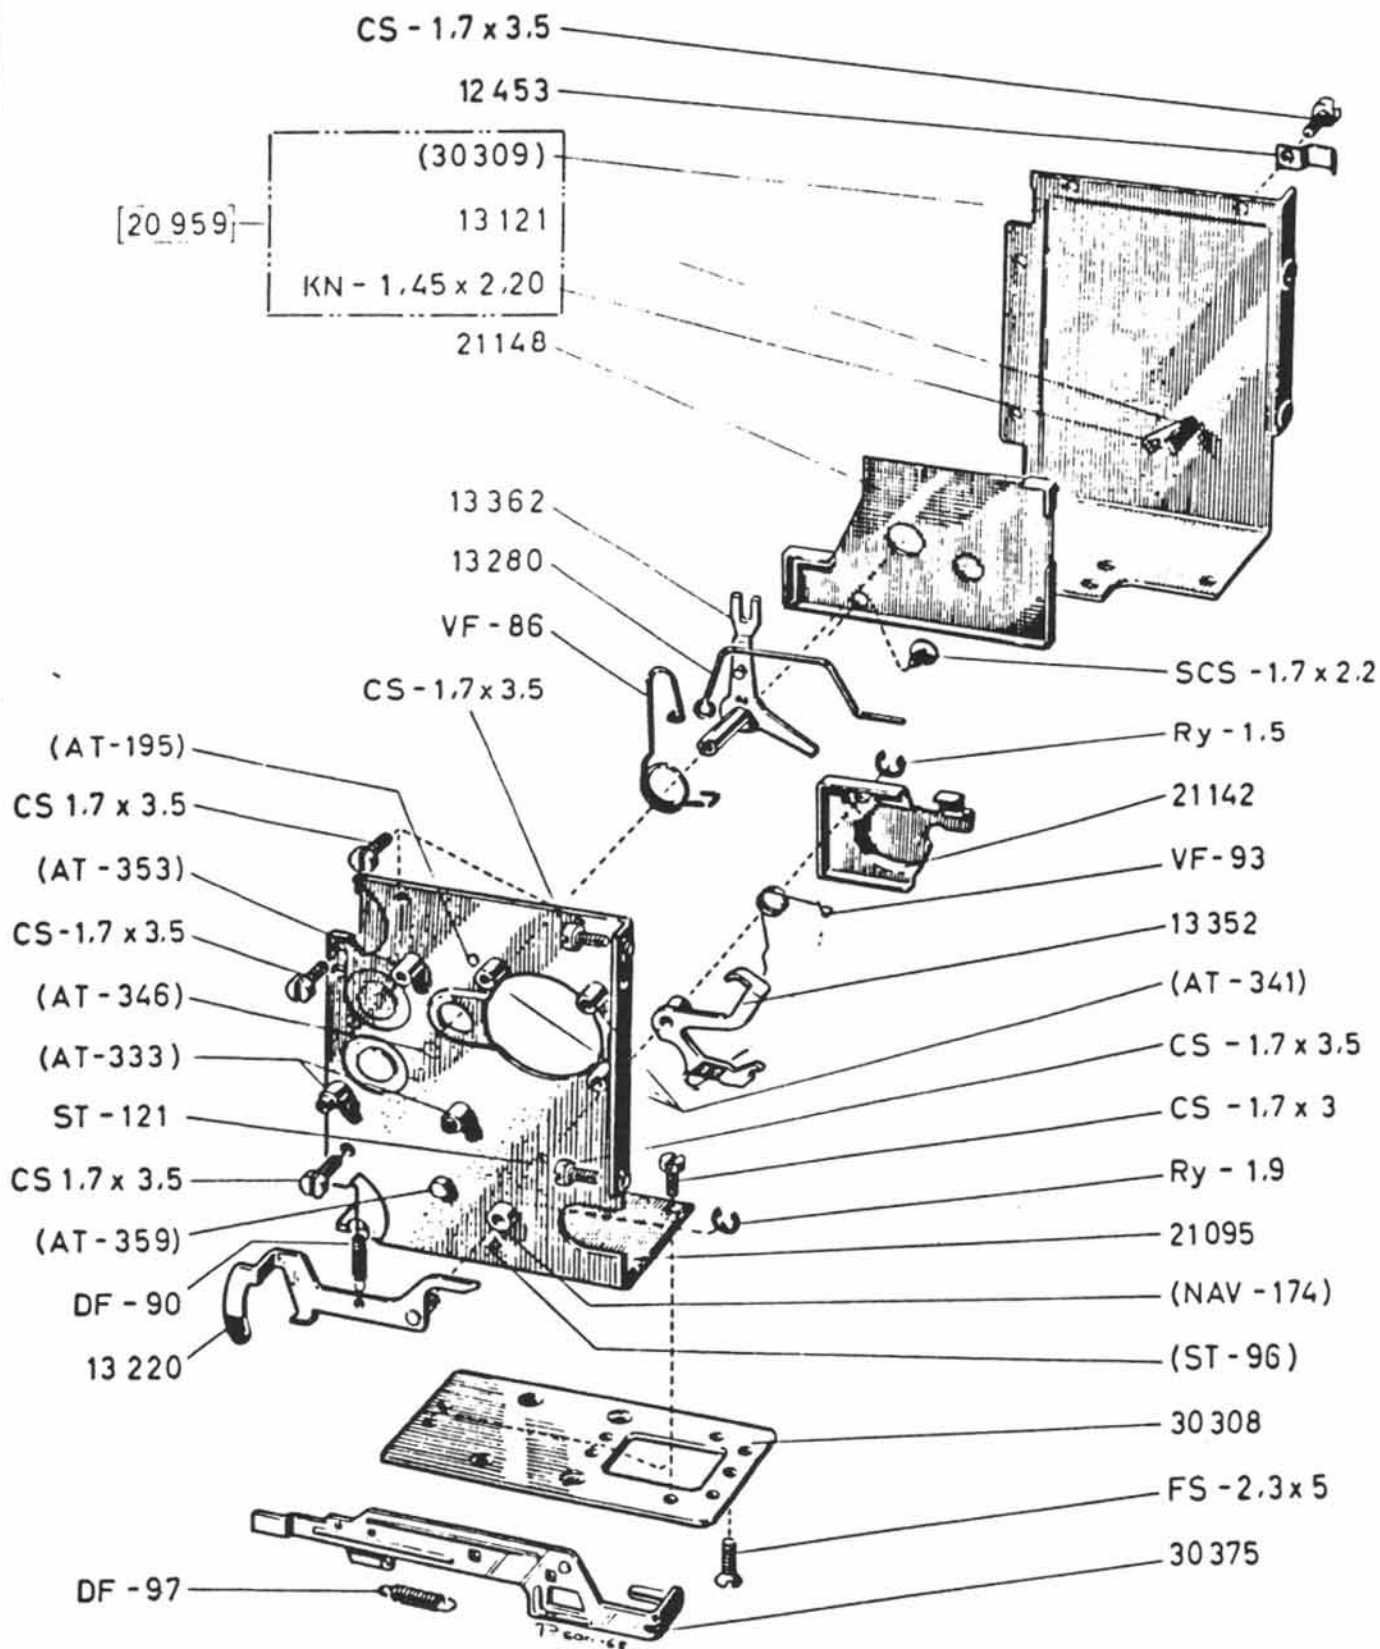


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	12453	Cable holder		50111	SVL No. 2/71
1	13121	Mirror rest		20959	
1	13220	Signal		50111	
1	13280	Lens lock		50111	
1	13352	Mirror catch		50111	
1	13362	Mirror actuating lever		50111	SVL No. 1/67 SVL No. 8/63; 2/71
1	20959	Inner wall, left, assy.		50111	
1	21095	Inner wall, right, assy.		50111	
1	21142	Cover		50111	
1	21148	Cover		40180	
1	30308	Bottom plate		50111	
1	30309	Inner wall, left	×	20959	
1	30375	Release arm		50111	
1	40180	Camera body, complete	×	—	
1	50111	Camera body, assy.	×	40180	
1	AT-195	Pin	×	21095	
2	AT-333	Pin	×	21095	
3	AT-341	Pin	×	21095	
1	AT-346	Pin	×	21095	
1	AT-353	Pin	×	21095	
1	AT-359	Pin	×	21095	SVL No. 26/69 4 screws to page No. 13
6	CS-1,7×3	Screw		50111	
12	CS-1,7×3,5	Screw		50111	
1	DF-90	Draw spring		50111	
1	DF-97	Draw spring		50111	
1	FS-2,3×5	Screw		50111	SVL No. 10/63
2	KN-1,45×2,20	Rivet		20959	
1	NAV-174	Hub	×	21095	
1	RY-1,5	Clip		50111	
1	RY-1,9	Clip		50111	
1	SCS-1,7×2,2	Screw		40180	SVL No. 12/64
1	ST-96	Rivet	×	21095	
1	ST-121	Rivet		21095	
1	VF-86	Torsion spring		50111	
1	VF-83	Torsion spring		50111	

Printed in Sweden

× = This part will not be supplied; A = assortment

▲ = This part should be ordered from the Sales Department.


500CM

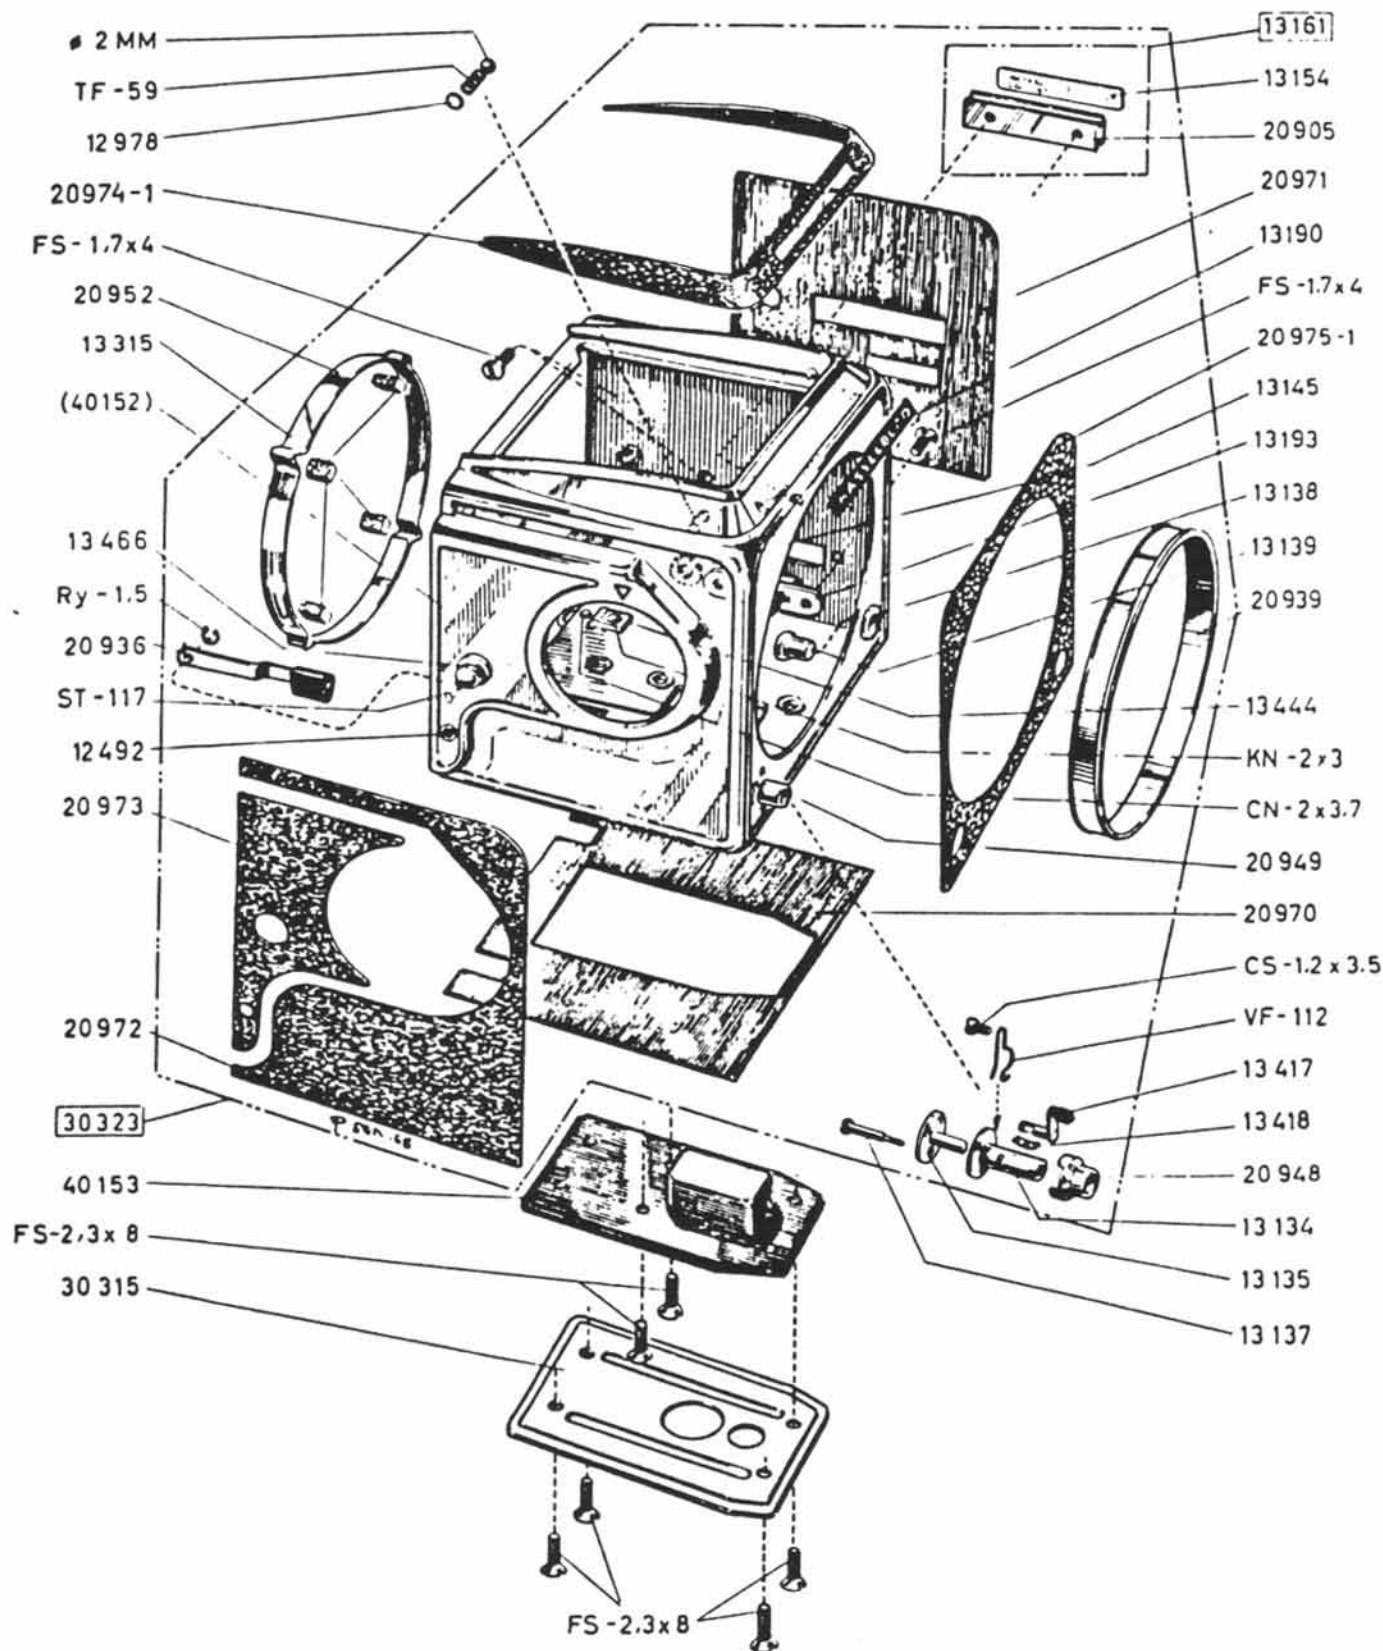

Pcs	Part No.	Description	Price (each)	assy. Next	Remark
1	12492	Window		30520	
2	12978	Plate		30520	
1	13134	Release button		30520	
1	13135	Buffer		30520	
1	13137	Screw		30520	
1	13138	Bushing		30520	
1	13139	Lens release button		40239	
1	13145	Nylon ring		30520	
2	13148	Magazine support		30520	SVL No. 19/71
1	13154	Name plate		13161	
1	13161	Accessory shoe, complete		30520	
1	13190	Name plate		30520	
1	13193	Cable attachment, complete		30520	
4	13315	Foam plastic pad		30520	
1	13417	T-arm		30520	
1	13418	Plate spring		30520	
2	13466	Strap button		30520	
2	13905	Pin		30520	SVL No. 17/71
1	13906	Holder, right		30520	SVL No. 17/71
1	13907	Holder, left		30520	SVL No. 17/71
1	20905	Accessory shoe		13161	
1	20936	Quick release lever		30520	
1	20939	Front ring		30520	
1	20948	Socket		30520	
1	20949	Bushing		30520	
1	20952	Locking ring		30520	
1	20970	Leather		30520	
1	20971	Leather		30520	
1	20972	Leather		30520	
1	20973	Leather		30520	
1	20974-1	Leather		30520	
1	20975-1	Leather		30520	
1	30315	Slide		40239	
1	30520	Shell, complete		40239	SVL No. 17/71
1	40153	Tripod socket		40239	
1	40238	Shell	×	30520	
1	40239	Camera body, complete	×	—	
2	AT-444	Pin		30520	SVL No. 17/71
2	CN-2×3,7	Rivet		30520	
1	CS-1,2×3,5	Screw		30520	
4	FS-1,7×4	Screw		30520	
6	FS-2,3×8	Screw		40239	
2	KN-2×3	Rivet		30520	
2	PSS-2,3×6	Screw		30520	SVL No. 17/71
1	RY-1,5	Clip		30520	
1	ST-117	Rivet		30520	
2	TF-59	Pressure spring		30520	
1	VF-112	Torsion spring		30520	
2	Ø 2 mm	Steel ball		30520	

Printed in Sweden

× = This part will not be supplied; A = assortment.
 ▲ = This part should be ordered from the Sales Department.

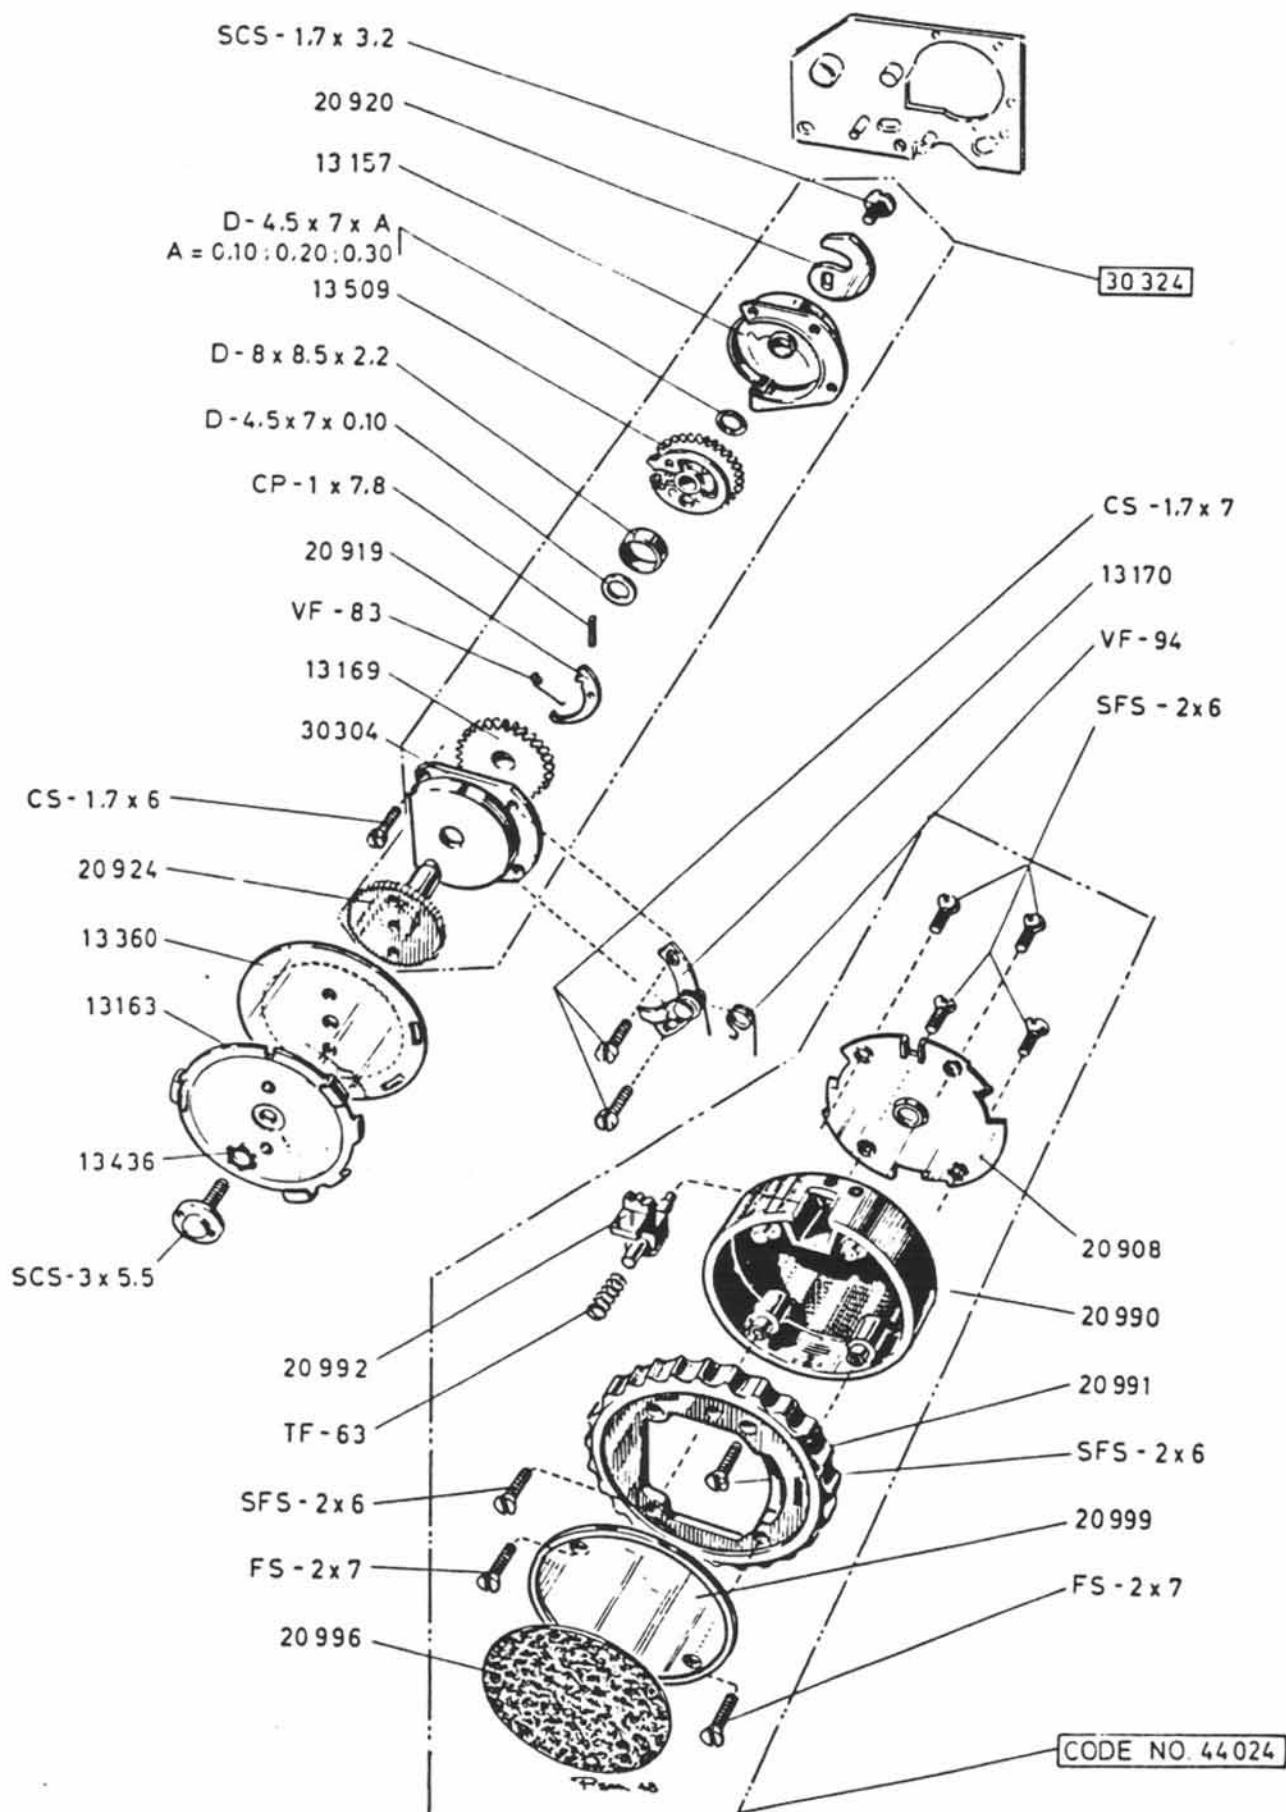


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13157	Gear housing, bottom		30324	
1	13163	Bayonet plate		40239	
1	13169	Gear		30324	
1	13170	Adjustable pawl		50129	
1	13360	Shim		40239	
1	13436	Locking washer		40239	
1	13509	Stop gear		30324	
1	20908	Bayonet plate		30316	
1	20919	Hook		30324	
1	20920	Mirror cam		30324	
1	20924	Ratchet wheel		30324	
1	20990	Housing		30316	
1	20991	Rim		30316	
1	20992	Catch		30316	
1	20996	Leather		30316	
1	20999	Lid		30316	
1	30304	Gear housing, top		30324	
1	30316	Knob, complete		40239	
1	30324	Gear housing, complete		50129	
1	40239	Camera body, complete	×	—	Order Code No. 44024
1	50129	Camera body, assy.	×	40239	
1	CP-1×7,8	Cylinder pin		30324	
1	CS-1,7×6	Screw		50129	
2	CS-1,7×7	Screw		50129	
1	D-4,5×7×0,10	Washer		30324	
1	D-4,5×7×A	Washer		30324	A = 0,10; 0,20; 0,30 mm
1	D-8×8,5×2,2	Washer		30324	
2	FS-2×7	Screw		30316	
1	SCS-1,7×3,2	Screw		30324	
1	SCS-3×5,5	Screw		40239	
6	SFS-2×6	Screw		30316	
1	TF-63	Pressure spring		30316	
1	VF-83	Torsion spring		30324	
1	VF-94	Torsion spring		13170	


Printed in Sweden

× = This part will not be supplied; A = assortment.


▲ = This part should be ordered from the Sales Department.

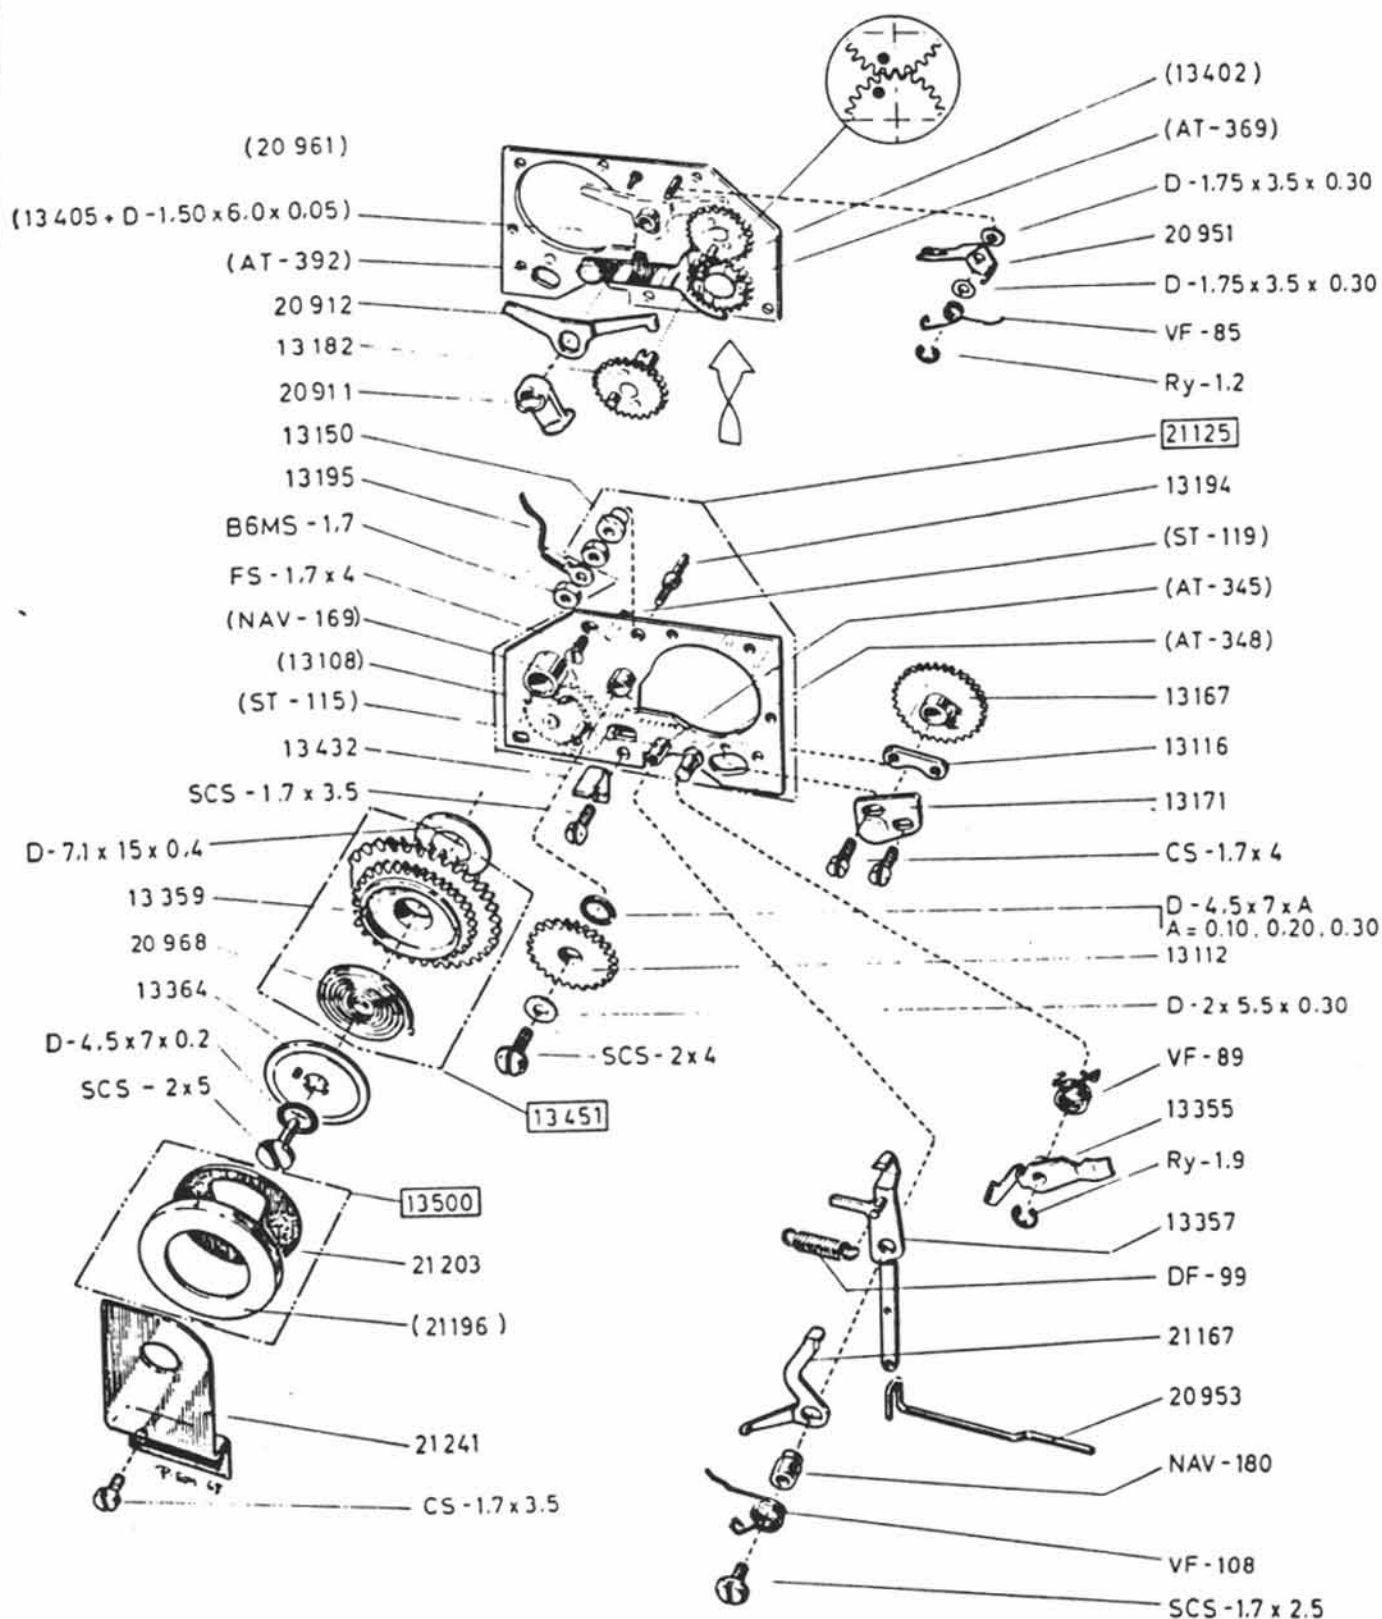


Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13108	Hub	×	20961	
1	13112	Gear		50129	
1	13116	Nut		50129	
1	13150	Nylon insulator		21125	
1	13167	Gear		50129	
1	13171	Bearing bracket		50129	
1	13182	Gear with cam		50129	
1	13194	Contact screw		21125	
1	13195	Cable		13193	
1	13355	Stop lever		50129	
1	13357	Release arm		50129	SVL No. 1/71
1	13359	Gear		13451	
1	13364	Cover		50129	
1	13402	Gear with cam	×	21125	
1	13405	Coupling	×	21125	
1	13432	Stop angle		50129	
1	13451	Gear, assy.		50129	
1	13500	Damping ring		50129	
1	20911	Stop		50129	
1	20912	Bar		50129	
1	20951	Contact spring		50129	SVL No. 1/71
1	20953	Push rod		50129	
1	20961	Mechanism plate	×	21125	
1	20968	Coil spring		13451	
1	21125	Mechanism plate, complete		50129	
1	21167	S-arm		50129	
1	21196	Ring	×	13500	
1	21203	Rubber disk		13500	
1	21241	Cover		50129	
1	40239	Camera body, complete	×	—	
1	50129	Camera body, assy.	×	40239	A = 0,10; 0,20; 0,30 mm
1	AT-345	Pin	×	20961	
1	AT-348	Pin	×	20961	
1	AT-369	Pin	×	21125	
1	AT-392	Pin	×	21125	
2	B6MS-1,7	Nut		21125	
1	CS-1,7×3,5	Screw		50129	
2	CS-1,7×4	Screw		50129	
1	D-1,50×6,0×0,05	Washer	×	21125	
2	D-1,75×3,5×0,30	Washer		50129	
1	D-2×5,5×0,30	Washer		50129	
1	D-4,5×7×0,20	Washer		50129	
1	D-4,5×7×A	Washer		50129	
1	D-7,1×15×0,4	Washer		50129	
1	DF-99	Draw spring		50129	
1	FS-1,7×4	Screw		50129	
1	NAV-169	Hub	×	20961	
1	NAV-180	Hub		50129	
1	RY-1,2	Clip		50129	
1	RY-1,9	Clip		50129	

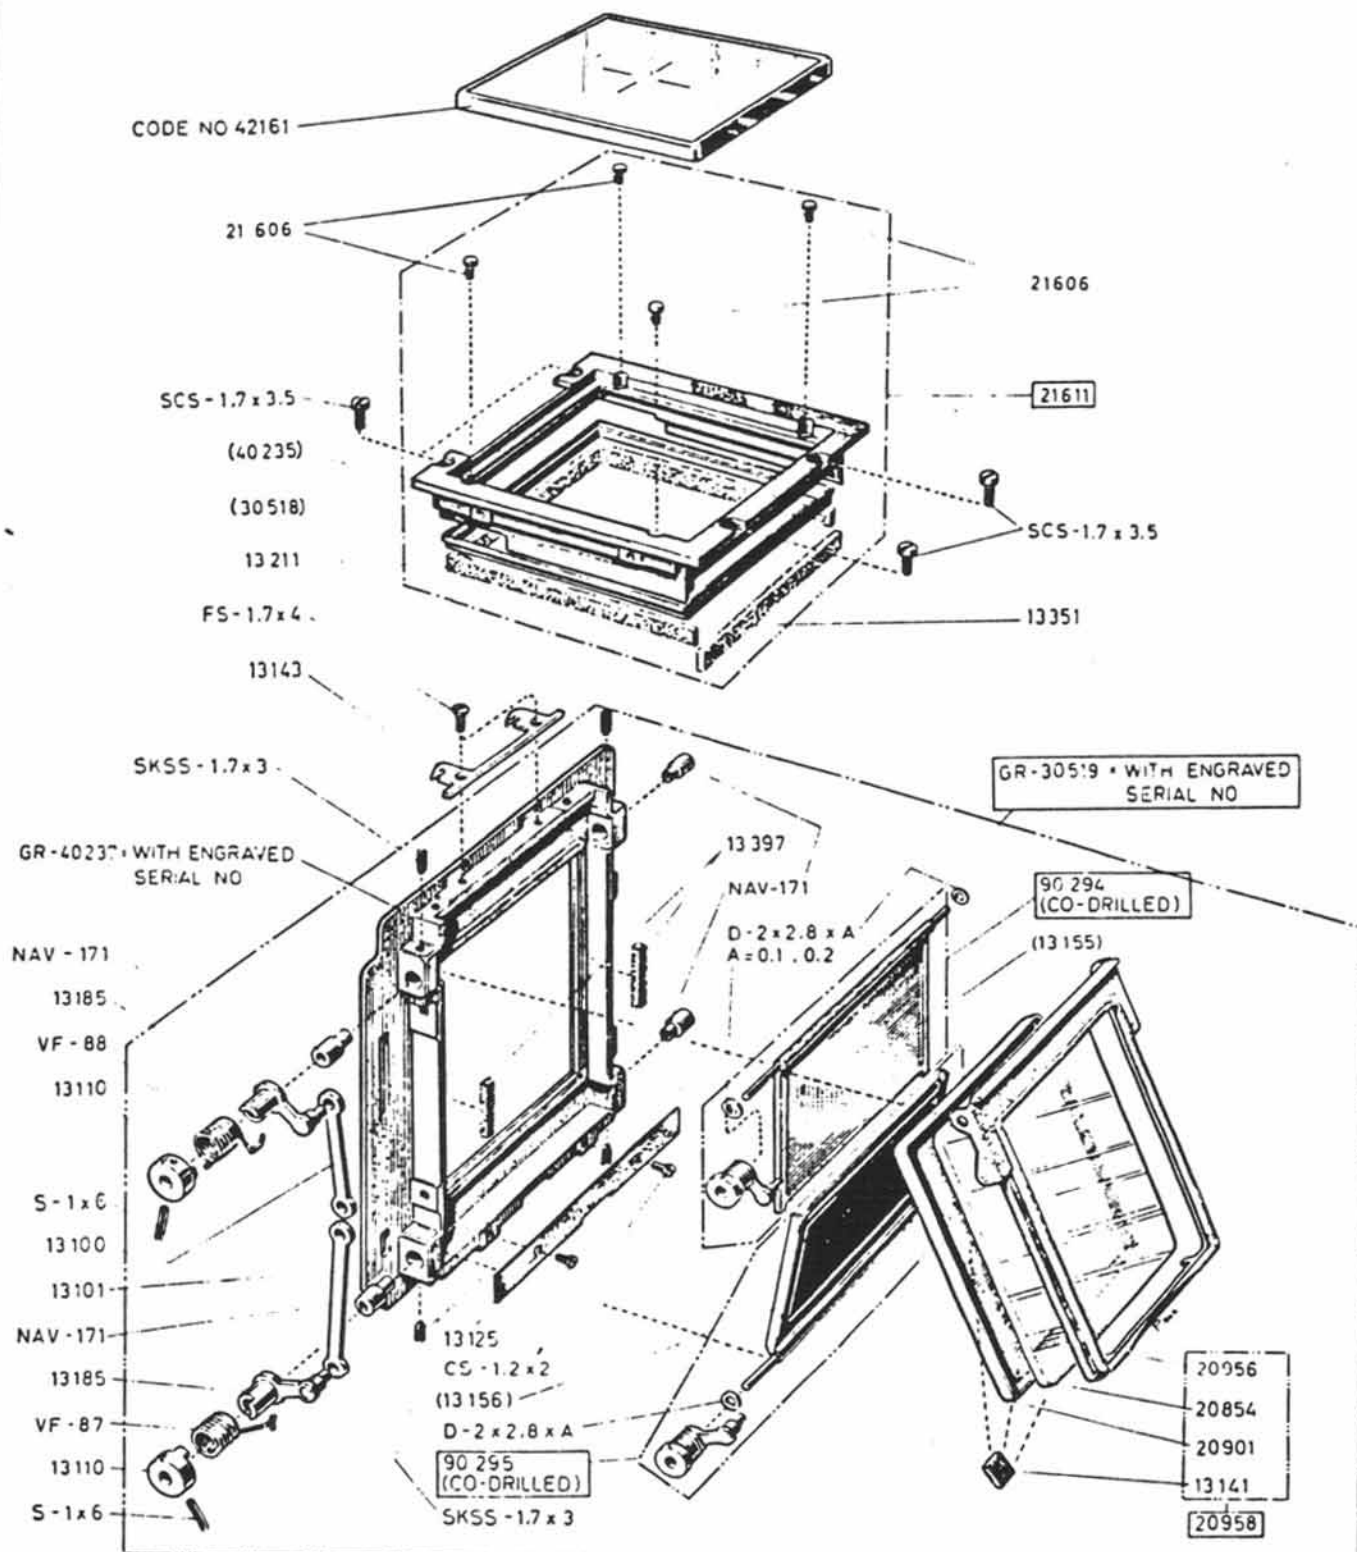

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	13100	Connecting rod, upper		50129	
1	13101	Connecting rod, lower		50129	
2	13110	Driving disc		90294/295	
1	13125	Light trap		GR-30519	
3	13141	Foam plastic pad		20958	
1	13143	Magazine hook		50129	
1	13155	Top flap	×	90294	
1	13156	Bottom flap	×	90295	
2	13185	Lever		90294/295	
1	13211	Foam plastic strip		21611	
1	13351	Foam plastic strip		21611	
1	13397	Foam plastic strip		GR-30519	
1	20854	Mirror		20958	
1	20901	Mirror protection		20958	
1	20956	Frame for mirror		20958	
1	20958	Mirror, complete		GR-30519	
4	21606	Screw		21611	SVL No. 17/71
1	21611	Frame, complete		50129	SVL No. 17/71
1	30518	Frame, inner	×	21611	
1	GR-30519	Rear plate, complete		50129	State serial No.
1	40235	Frame	×	21611	
1	GR-40237	Rear plate		GR-30519	State serial No.
1	40239	Camera body, complete	×	—	
1	50129	Camera body, assy.	×	40239	
1	90294	Top flap		GR-30519	
1	90295	Bottom flap		GR-30519	
2	CS-1,2×2	Screw		GR-30519	
2	D-2×2,8×A	Washer		GR-30519	A = 0,1; 0,2 mm
2	FS-1,7×4	Screw		50129	
4	NAV-171	Bushing		GR-30519	
2	S-1×6	Pin		GR-30519	
4	SCS-1,7×3,5	Screw		50129	
4	SKSS-1,7×3	Screw		GR-30519	
1	VF-87	Torsion spring		90294/295	
1	VF-88	Torsion spring		90294/295	
1		Standard focusing screen	▲	40239	Order Code No. 42161

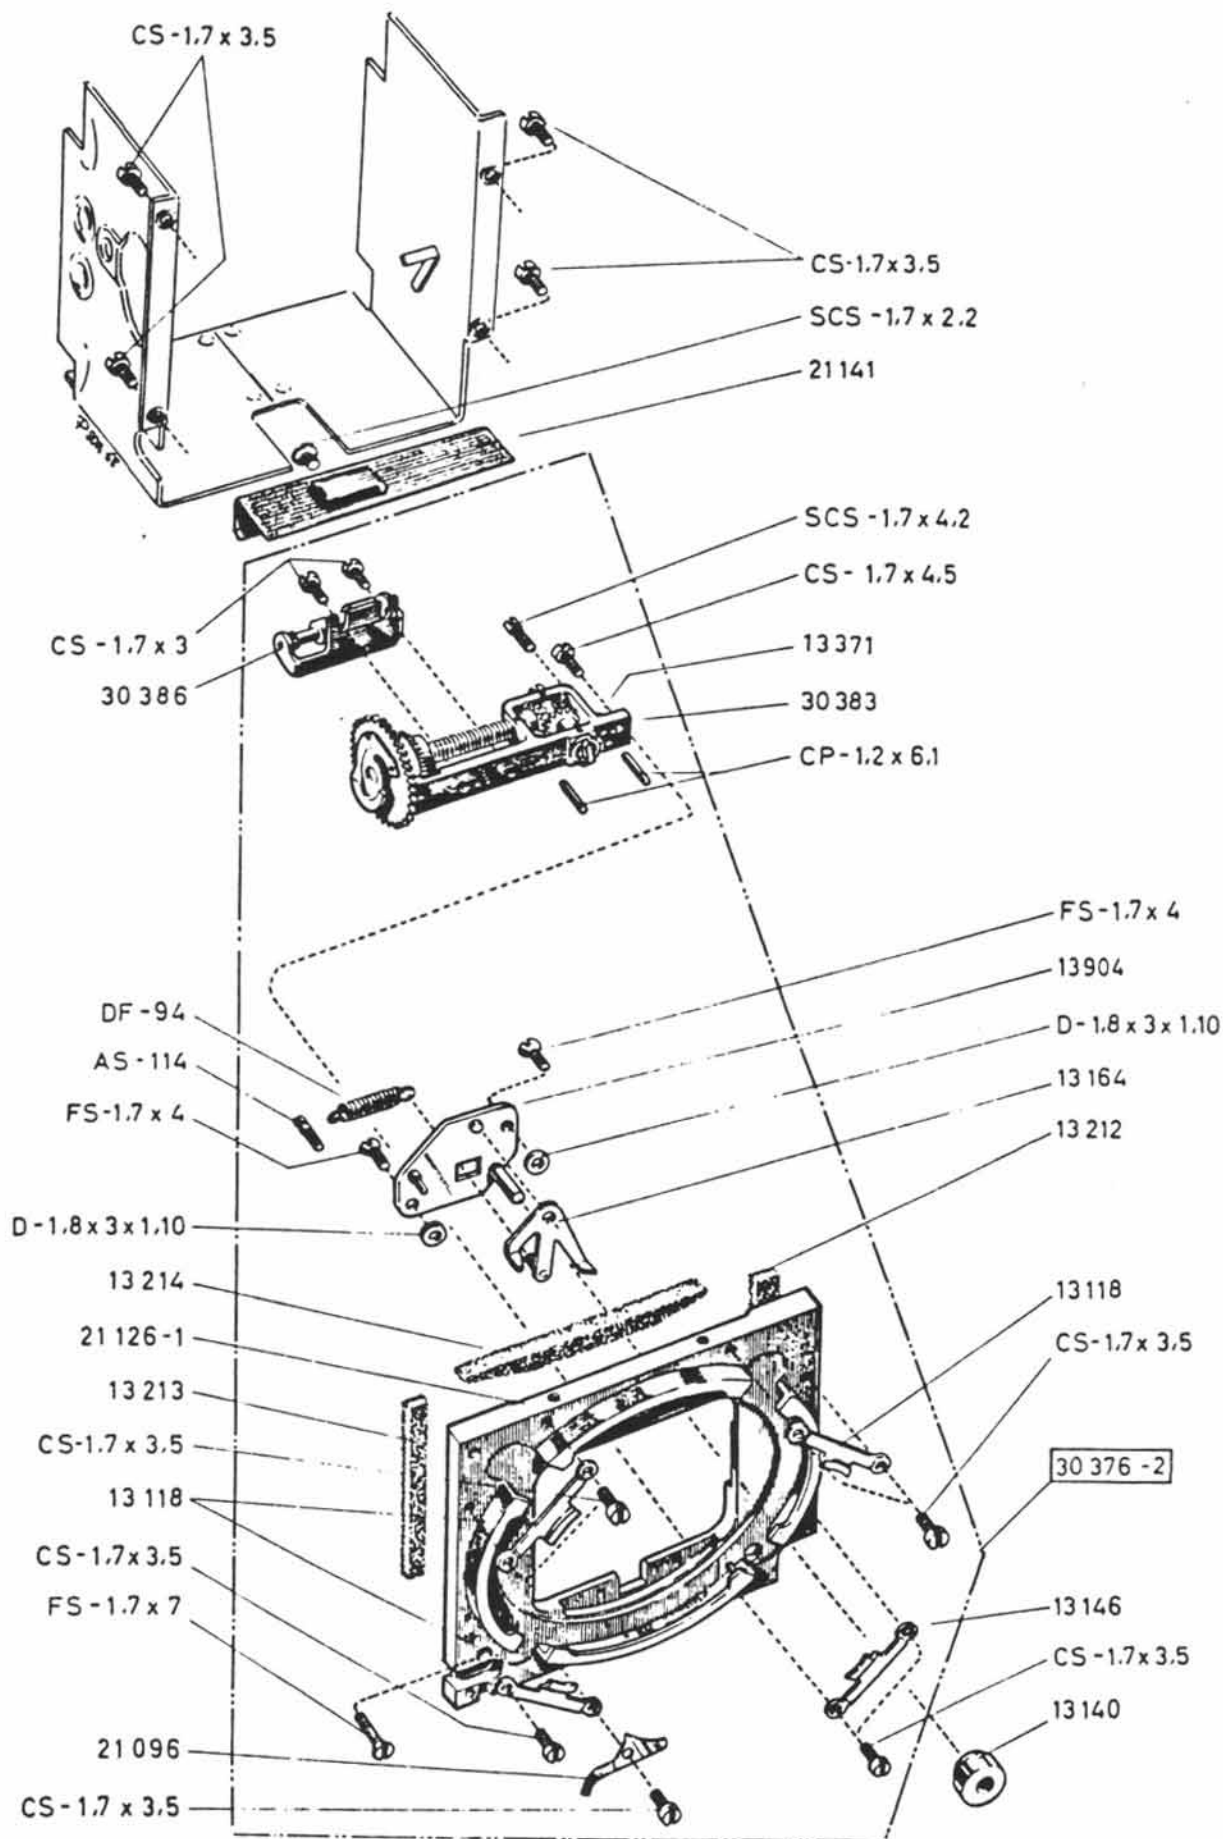

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
3	13118	Bayonet flange		30376-2	
1	13140	Teflon button		40239	
1	13146	Bayonet flange		30376-2	
1	13164	Lens catch		30376-2	
1	13212	Foam plastic strip		30376-2	
1	13213	Foam plastic strip		30376-2	
1	13214	Foam plastic strip		30376-2	
1	13371	Ring		30383	SVL No. 9/64
1	13904	Mounting plate		30376-2	SVL No. 17/71; 20/71
1	21096	Plate spring		30376-2	
1	21126-1	Bayonet front plate		30376-2	
1	21141	Cover		40239	
1	30376-2	Bayonet front plate, complete		50129	SVL No. 17/71; 20/71
1	30383	Front gear, complete		30376-2	SVL No. 27/69; 3/71
1	30386	Governor		30376-2	
1	40239	Camera body, complete	×	—	
1	50129	Camera body, assy.	×	40239	
1	AS-114	Screw		30376-2	
2	CP-1,2×6,1	Cylinder pin		30376-2	
2	CS-1,7×3,0	Screw		30376-2	
8	CS-1,7×3,5	Screw		30376-2	
4	CS-1,7×3,5	Screw		50129	
1	CS-1,7×4,5	Screw		30376-2	
2	D-1,8×3×1,10	Washer		30376-2	
1	DF-94	Draw spring		30376-2	
2	FS-1,7×4	Screw		30376-2	
1	FS-1,7×7	Screw		30376-2	
1	SCS-1,7×2,2	Screw		40239	
1	SCS-1,7×4,2	Screw		30383	

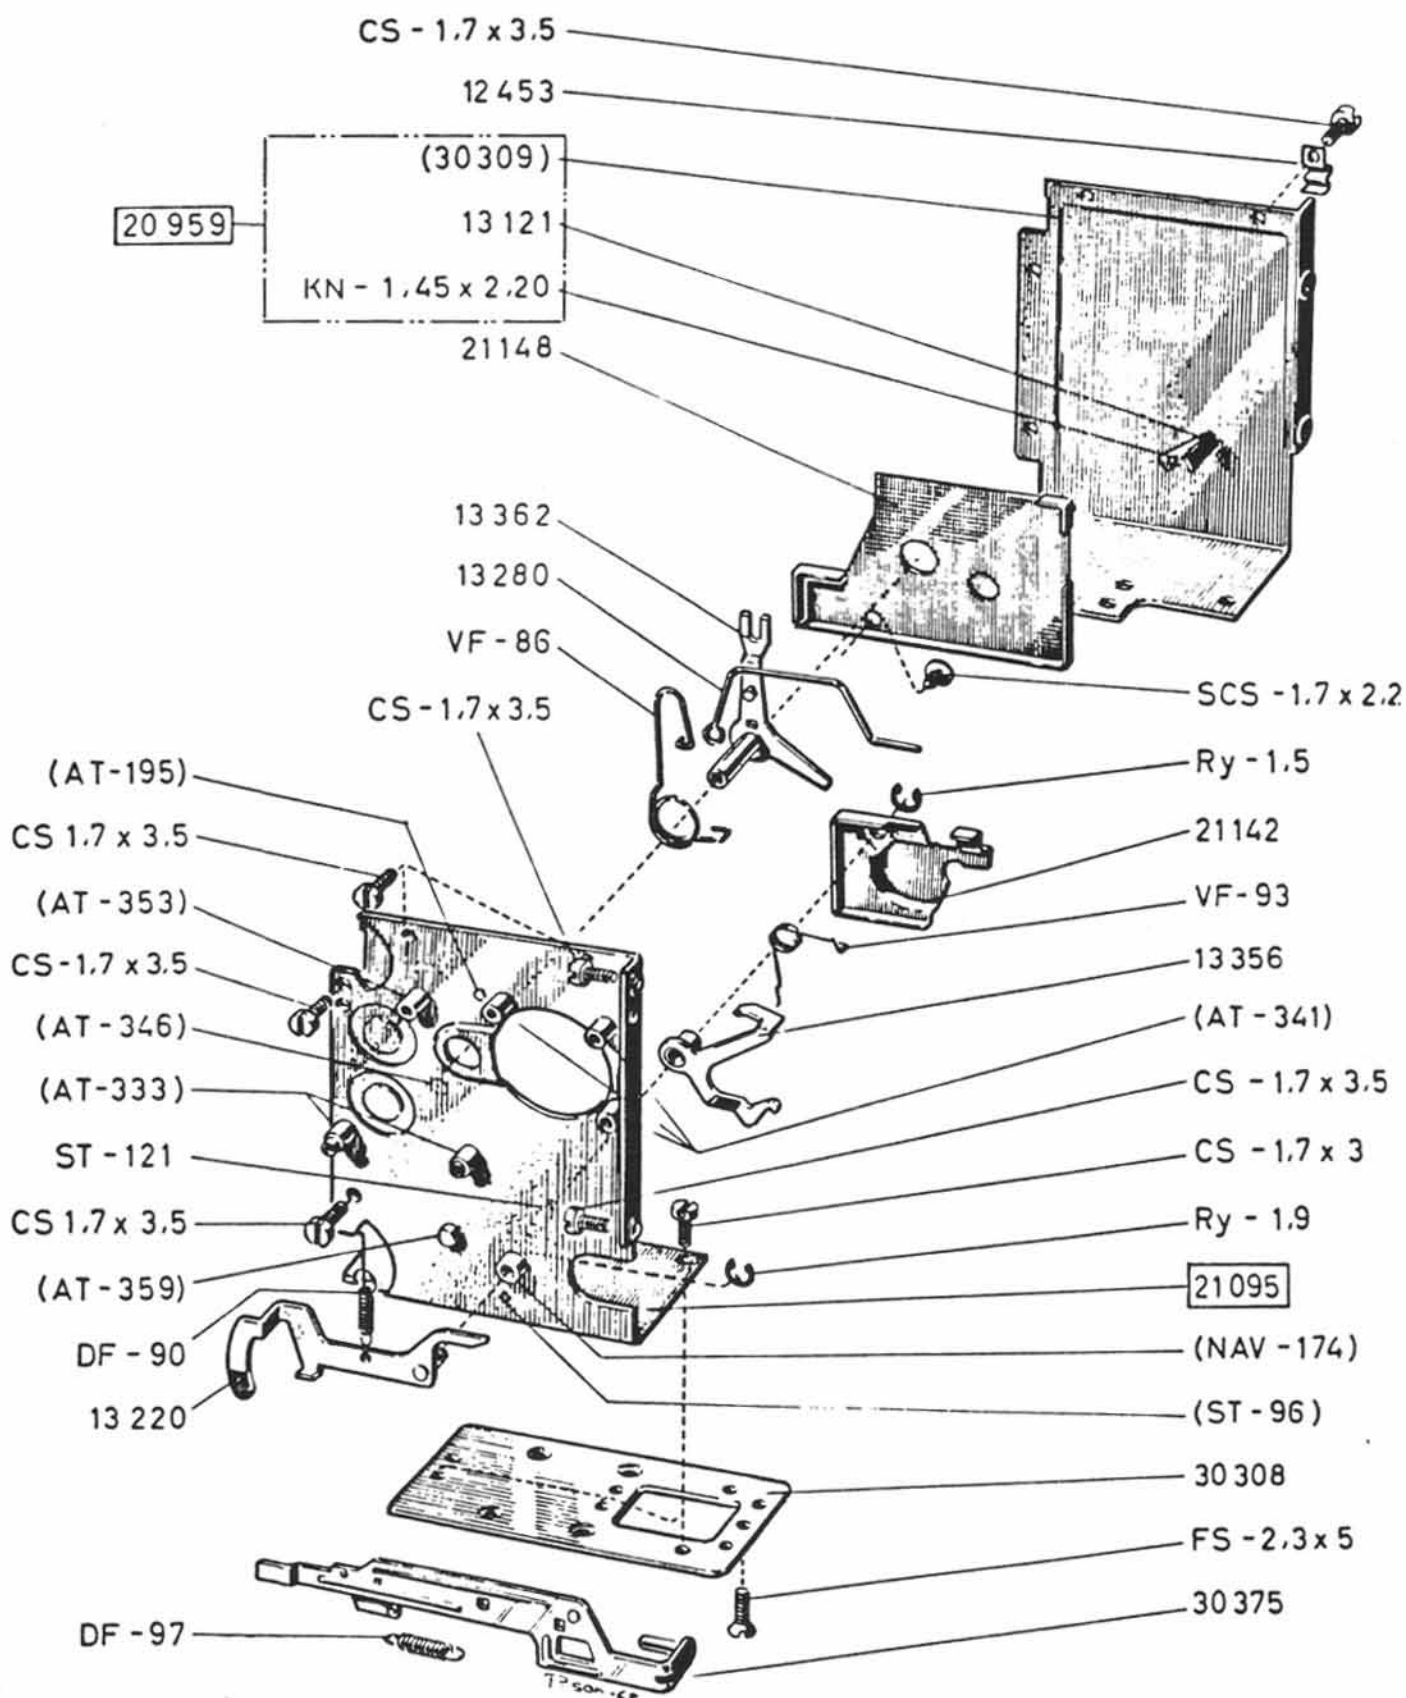

Pcs	Part No.	Description	Price (each)	Next assy.	Remark
1	12453	Cable holder		50129	SVL No. 2/71
1	13121	Mirror rest		20959	
1	13220	Signal		50129	
1	13280	Lens lock		50129	
1	13356	Mirror catch		50129	
1	13362	Mirror actuating lever		50129	SVL No. 2/71
1	20959	Inner wall, left, assy.		50129	
1	21095	Inner wall, right, assy.		50129	
1	21142	Cover		50129	
1	21148	Cover		40239	
1	30308	Bottom plate		50129	
1	30309	Inner wall, left	×	20959	
1	30375	Release arm		50129	
1	40239	Camera body, complete	×	—	
1	50129	Camera body, assy.	×	40239	
1	AT-195	Pin	×	21095	
2	AT-333	Pin	×	21095	
3	AT-341	Pin	×	21095	
1	AT-346	Pin	×	21095	
1	AT-353	Pin	×	21095	
1	AT-359	Pin	×	21095	
6	CS-1,7 × 3	Screw		50129	
12	CS-1,7 × 3,5	Screw		50129	
1	DF-90	Draw spring		50129	
1	DF-97	Draw spring		50129	
1	FS-2,3 × 5	Screw		50129	
2	KN-1,45 × 2,20	Rivet		20959	
1	NAV-174	Hub	×	21095	
1	RY-1,5	Clip		50129	
1	RY-1,9	Clip		50129	
1	SCS-1,7 × 2,2	Screw		40239	
1	ST-96	Rivet	×	21095	
1	ST-121	Rivet		21095	
1	VF-86	Torsion spring		50129	
1	VF-93	Torsion spring		50129	