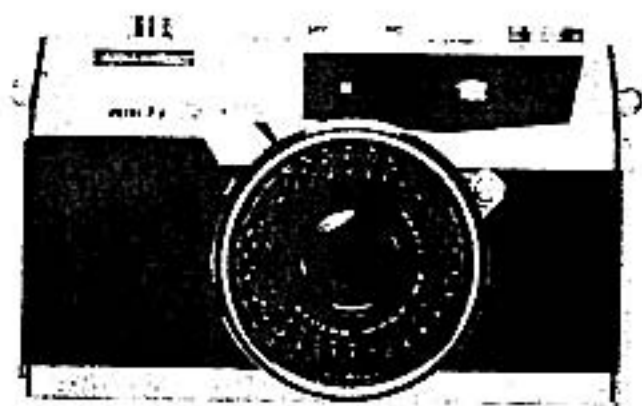


PETRI PARTS LIST

7 SEVEN S



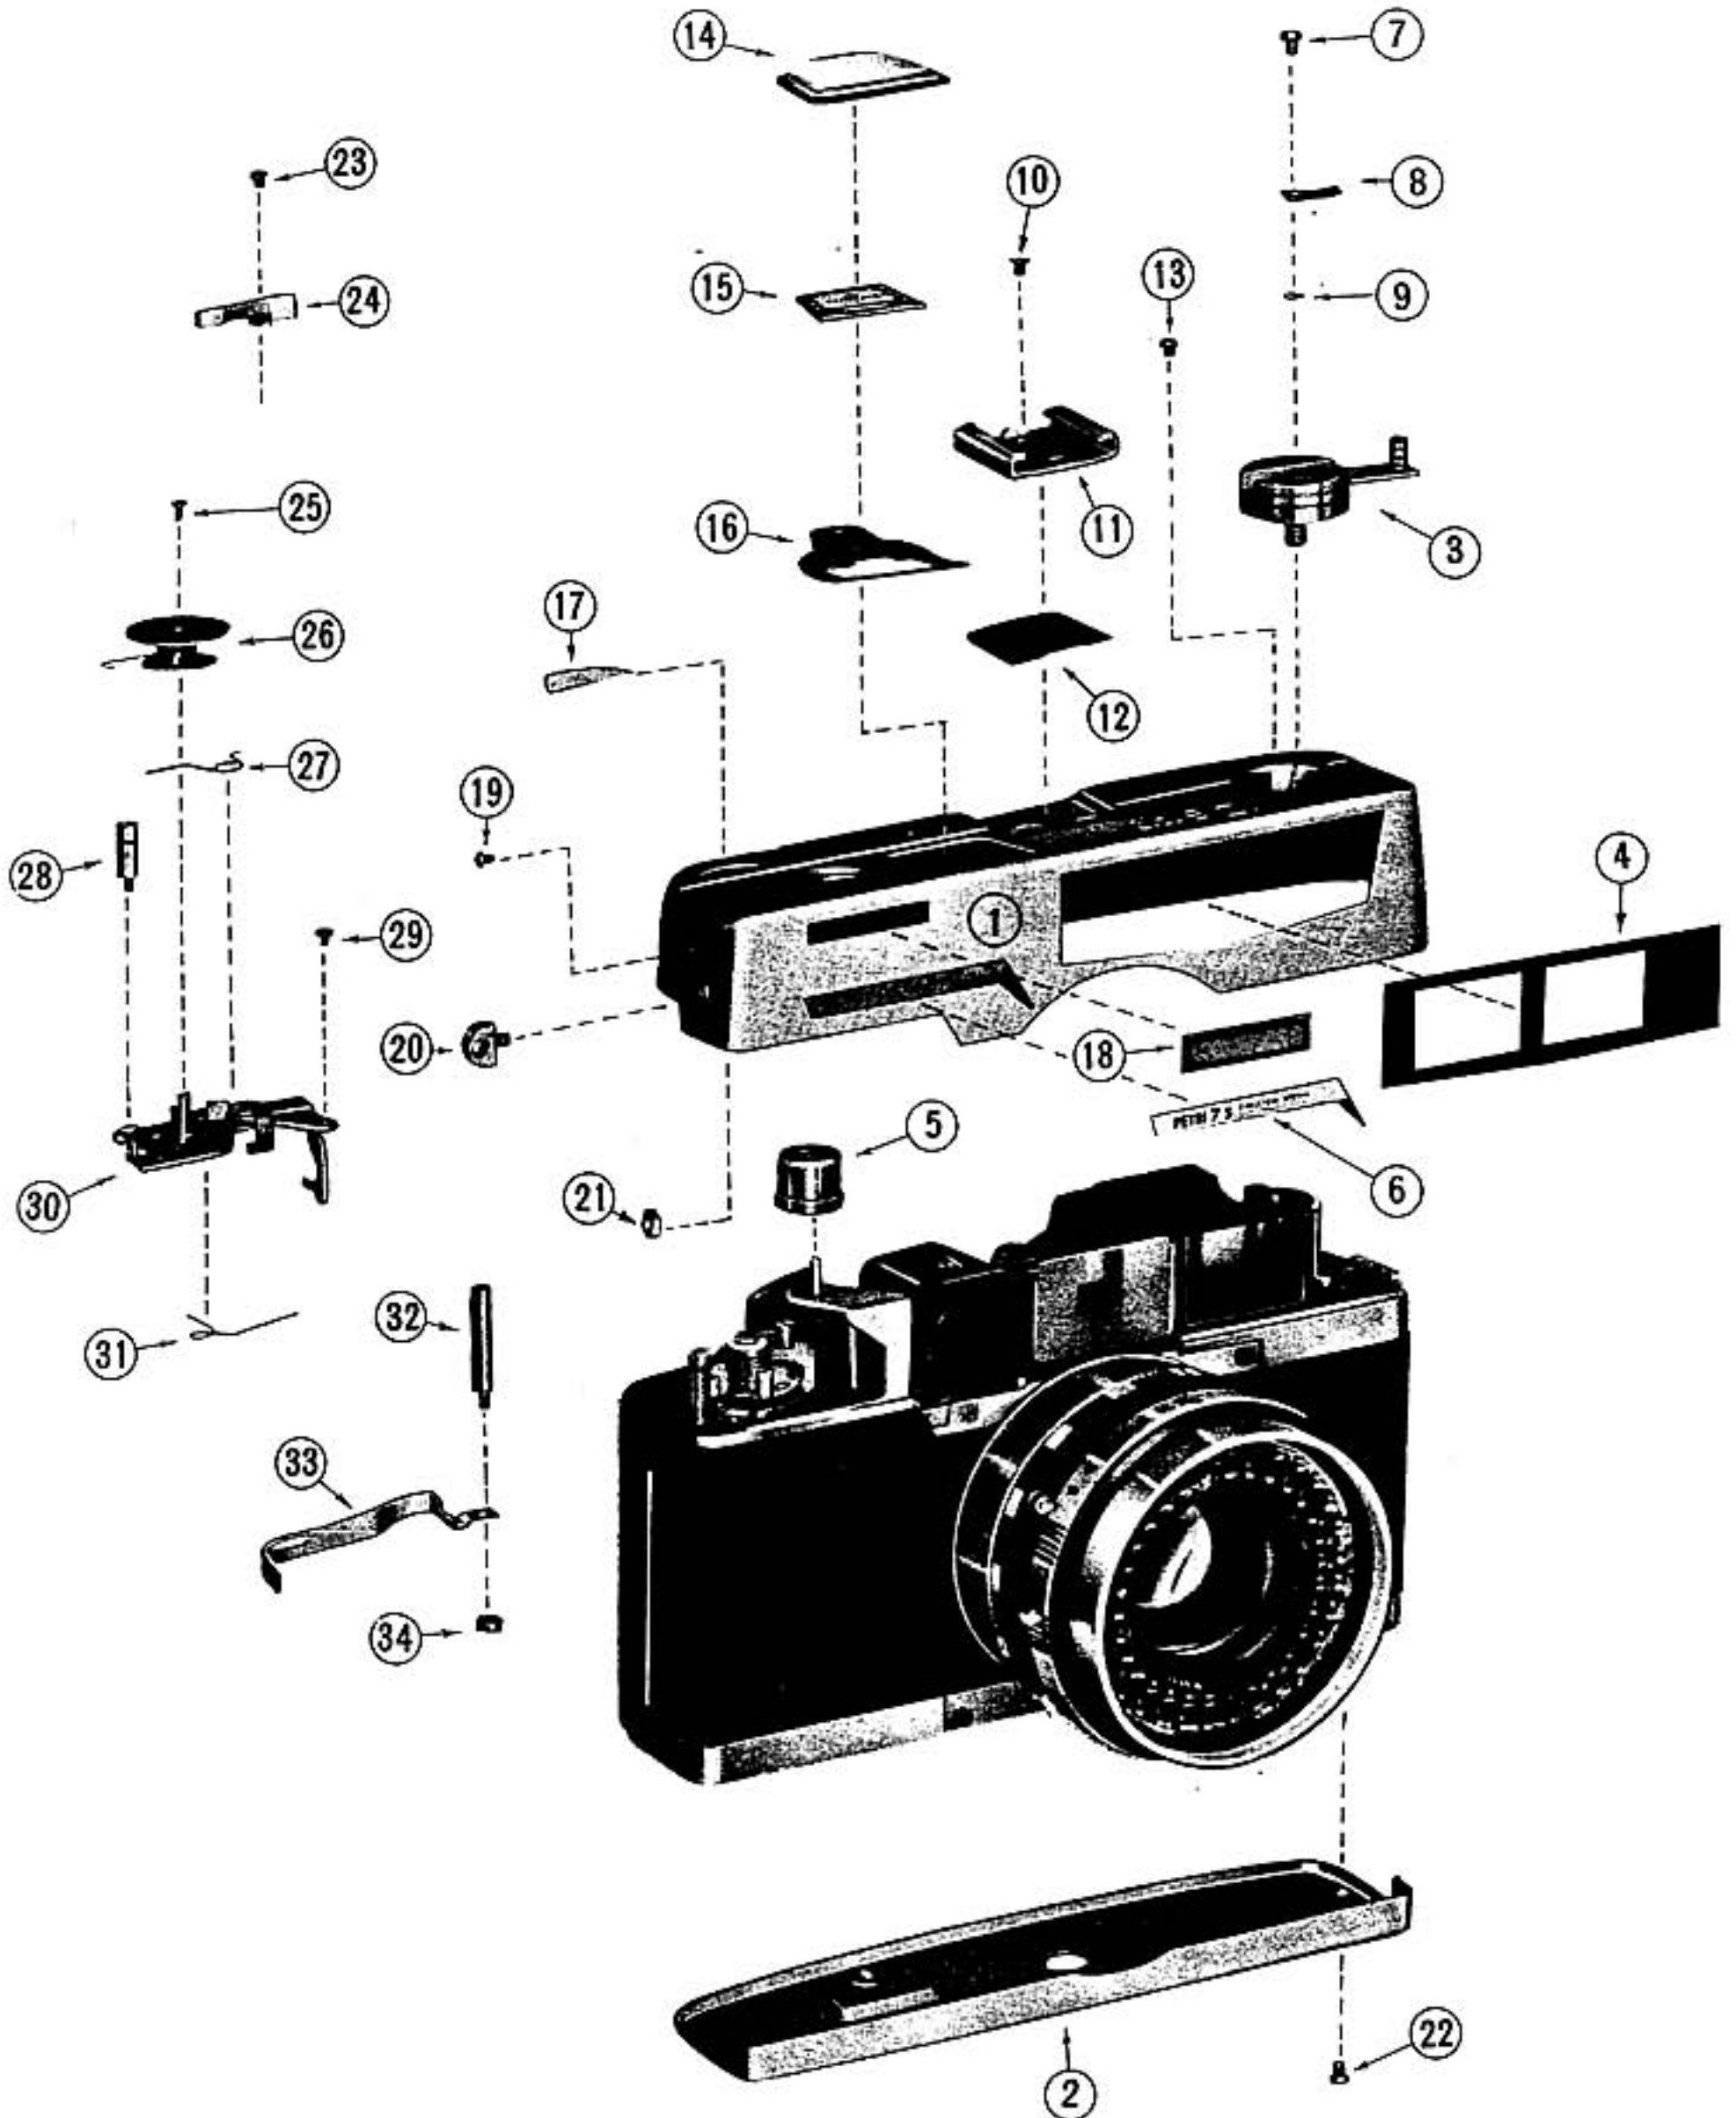


FIG.	PART NO.	DESCRIPTION	UNIT
1	L3P-1	Top cover (トップカバー)	1
2	L2P-2	Bottom cover assembly (底板一式)	1
3	SPB-108	Rewind knob assembly (捲戻しレバー一式)	1
4	L2P-26	Viewfinder front plate (ファインダーマスク)	1
5	L3B-11	Shutter release button (押釦)	1
6	L3P-40	Name plate (ネームプレート)	1
7	PDB-122	Friction spring screw (捲取レバーバネ取付)	1
8	SP-140	Friction spring (捲取レバーバネ)	1
9	SP-141	Friction spring spacer (捲取レバーバネ座金)	1
10	BPR-19	Accessory shoe screw (差込座取付)	2
11	L2P-25	Accessory shoe (差込座)	1
12	L3P-51	Light baffle paper (差込座遮光紙)	1
13	BPR-17	Rewinder-side top cover screw (カバー取付 'A')	2
14	L3P-30	Needle window (指針窓)	1
15	L3P-33	Needle window plate (指針ネーム板)	1
16	L3P-34	Back-up spring (指針ネーム支持バネ)	1
17	L3P-43	Counter window (指数窓)	1
18	L3P-42	Decorative nylon filling (カバー窓板)	1
19	PR-18	Top cover screw (カバー取付 'B')	1
20	NPM-1003	Strap loop (吊環)	2
21	NPM-1004	Strap loop nut (吊環ナット)	2
22	PM-19	Bottom cover screw (底板取付)	2
23	PDB-123	Counter pawl screw (止め爪取付)	1
24	L3P-29	Counter pawl (止め爪)	1
25	PHB-32	Counter dial screw (カウンターダイヤル取付)	1
26	L3P-27	Counter dial assembly (カウンターダイヤル一式)	1
27	L3W-9	Counter ratchet spring (送り爪スプリング)	1
28	L3B-17	Spring retaining post (カバー台)	1
29	SPB-146	Counter base screw (カウンターベース取付)	1
30	L3P-25	Counter base assembly (カウンターベース一式)	1
31	E2W-5	Counter reset bar spring (カウンターバースプリング)	1
32	L3B-34	Slot cover screw (レバーカバー取付)	1
33	E2P-3	Slot cover (捲取レバーカバー)	1
34	L3B-31	Slot cover spacer (捲取レバーカバー座金)	1

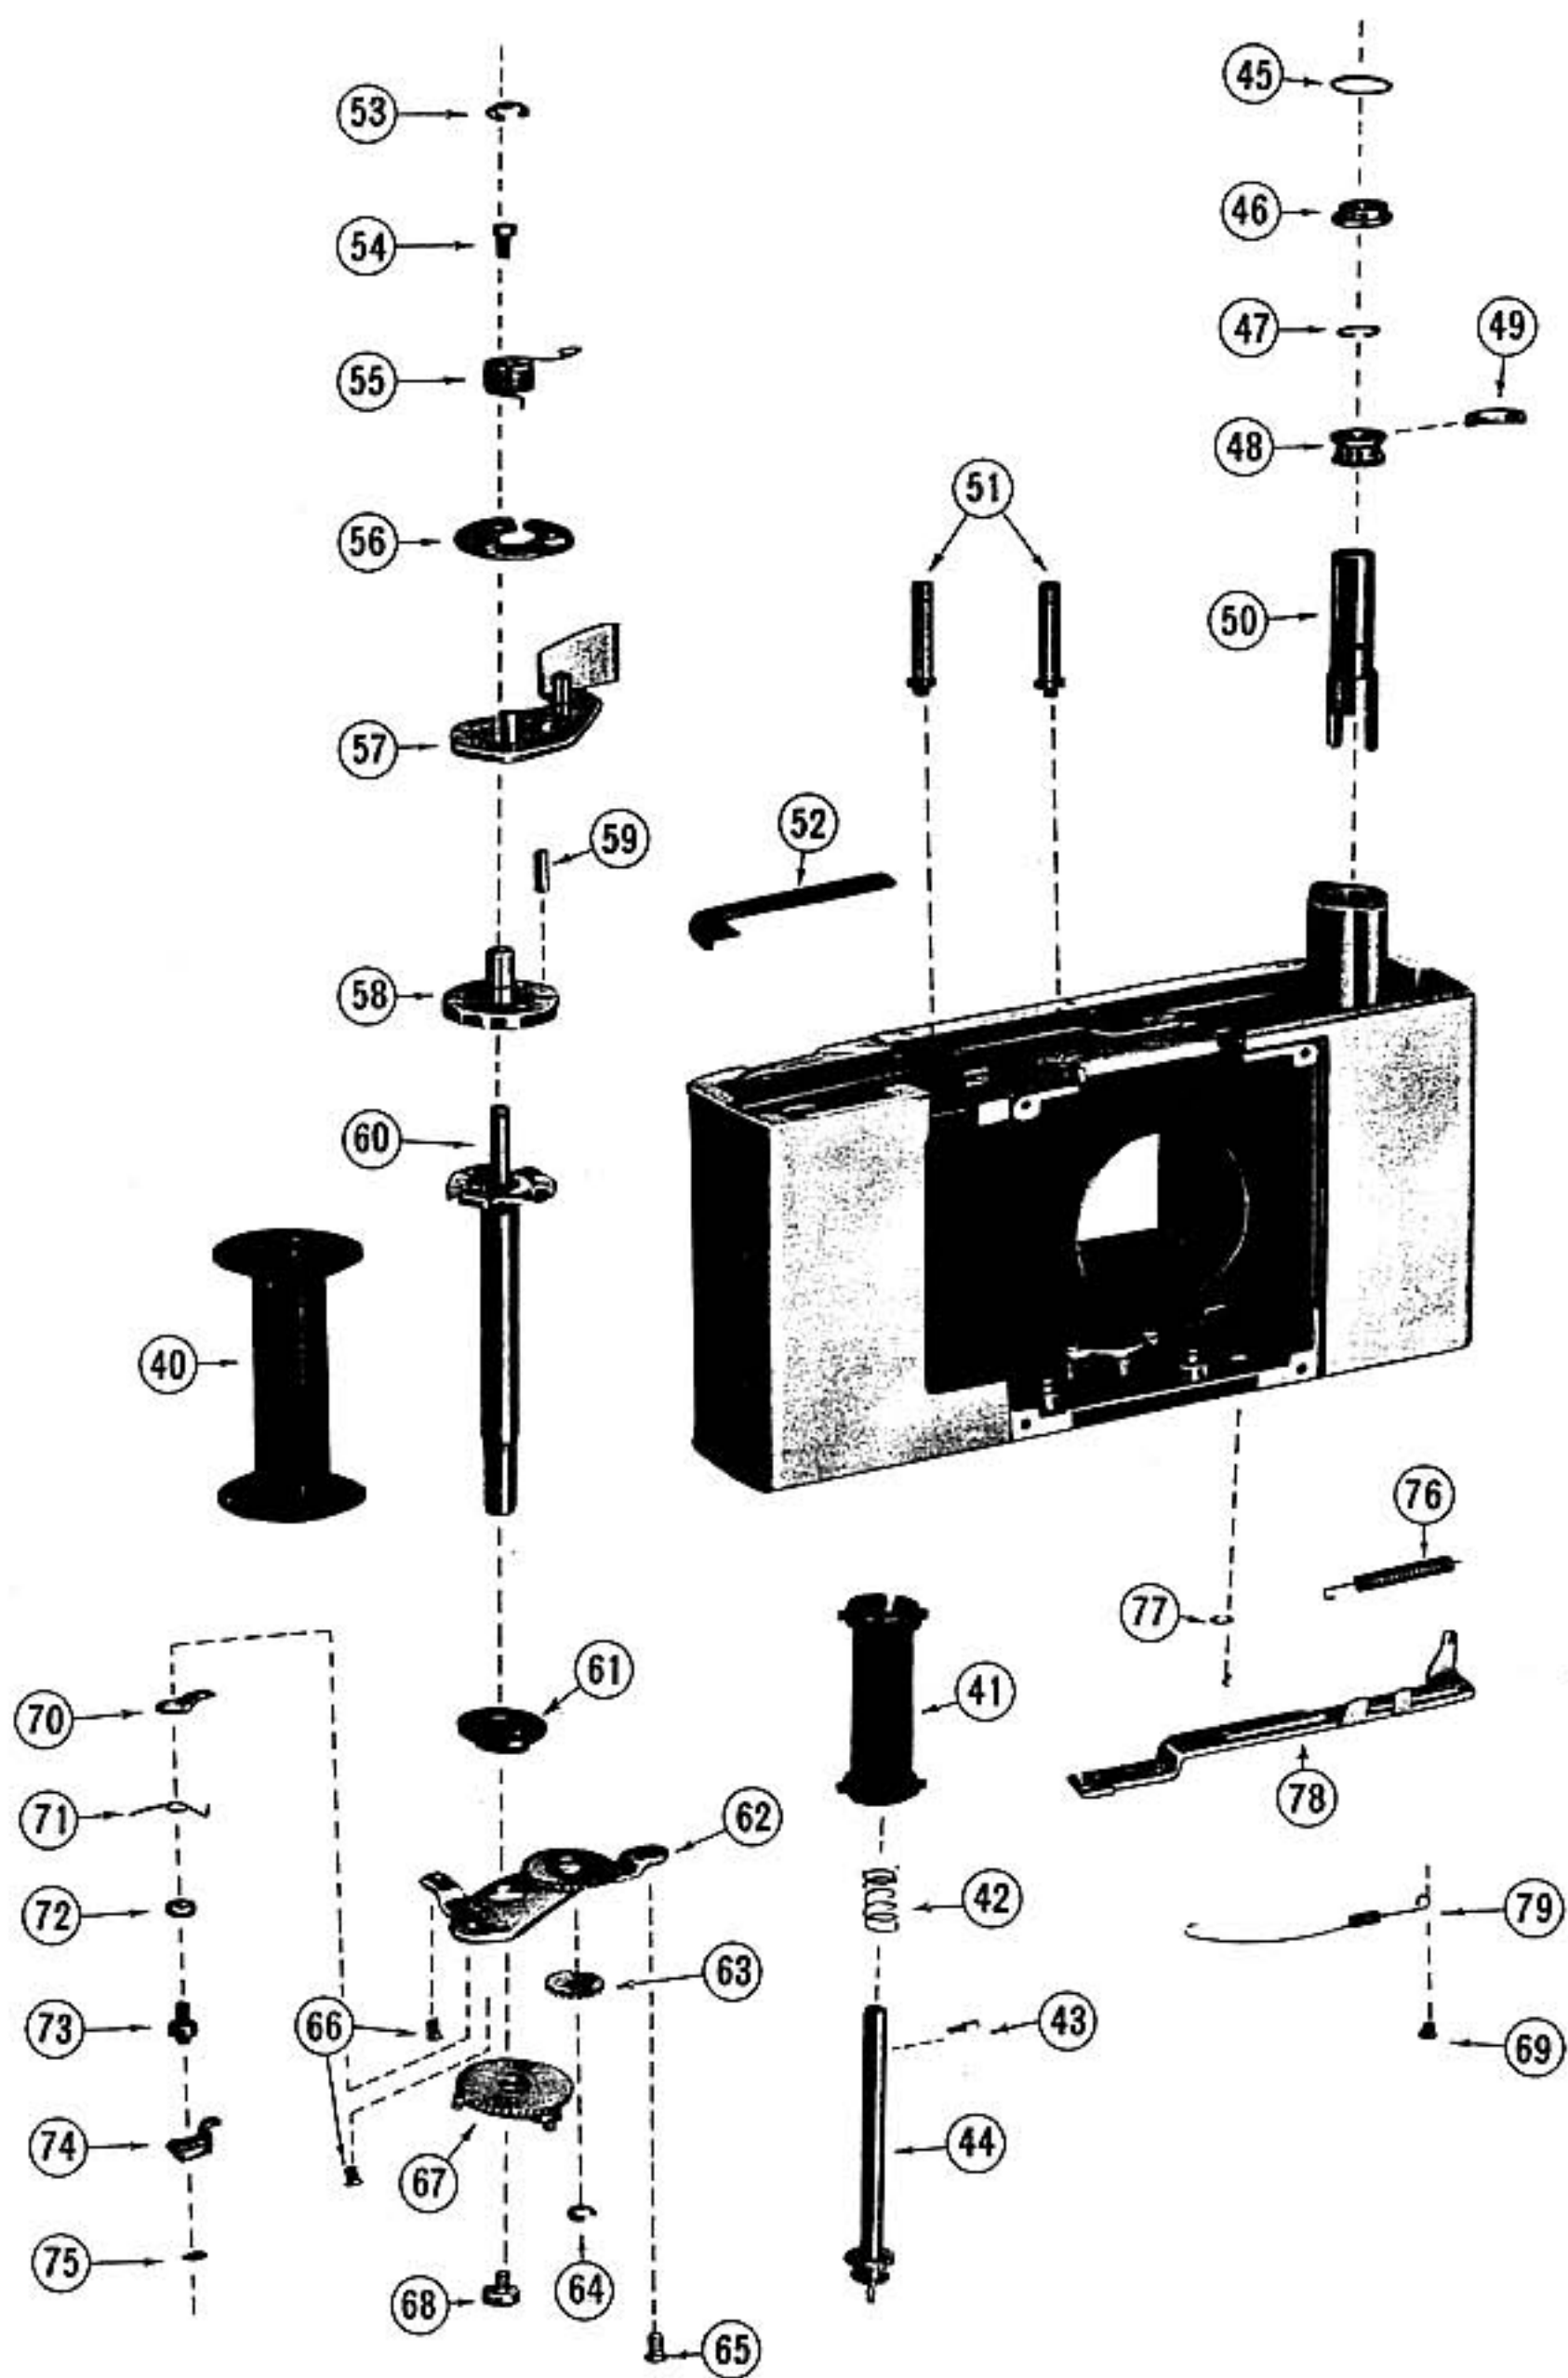


FIG.	PART NO.	DESCRIPTION	UNIT
40	PM-17	Film spool assembly (リール筒一式)	1
41	EB-61	Sprockets (スプロケット)	1
42	PW-4	Tension spring (スプロケットバネ)	1
43	EB-5	Drive pin (スプロケットノック)	1
44	L3B-25	Drive shaft assembly (スプロケット芯棒一式)	1
45	NO-37	Washer (座金)	1
46	L2B-15	Upper spool bearing (捲戻芯棒軸受)	1
47	L2W-2	Spool bearing retainer (捲戻芯棒カラー押え)	1
48	L2B-14	Spool bearing (捲戻芯棒カラー)	1
49	L2P-27	Spool friction spring (捲戻芯棒カラー スプリング)	1
50	L2B-13	Rewind shaft (捲戻芯棒)	1
51	L3B-8	Wind lever stopper (捲取レバーストッパー)	2
52	E2P-4	Slot cover base (捲取下カバー)	1
53	E-2.3	E-Ring (捲取筒用スナップリング)	1
54	L3B-54	Drive pin screw (捲取レバー取付)	3
55	L3W-1	Lever return spring (捲取レバースプリング)	1
56	L3P-13	Drive pin spring (捲取ノックバネ)	1
57	E2P-1	Wind lever assembly (捲取レバー一式)	1
58	L3B-1	Wind lever base (捲取筒)	1
59	L3B-2	Drive pin (捲取ノック)	1
60	L3B-4	Wind shaft assembly (捲取芯棒一式)	1
61	L3P-21	Spool clutch assembly (リール筒爪一式)	1
62	L3P-8	Gear plate assembly (ギヤプレート一式)	1
63	L3P-10	Intermediate gear (捲取中間ギヤ)	1
64	E-1.9	E-Ring (中間ギヤ用スナップリング)	1
65	L3B-15	Gear plate screw 'long' (ギヤプレート取付 '大')	1
66	SPB-146	Gear plate screw 'short' (ギヤプレート取付 '小')	2
67	L3P-6	Shutter set and wind gear (捲取ギヤ一式)	1
68	L3B-6	Screw for L3P-6(counter clock-wise)(捲取ギヤ取付)	1
69	BPR-8	Stopper spring screw (ストッパースプリング取付)	1
70	L3P-19	Wind gear pawl (逆転止)	1
71	L3W-4	Pawl spring (逆転止スプリング)	1
72	L3B-16	Eccentric washer (逆転止エキセン)	1
73	L3B-55	Pawl screw (逆転止取付)	1
74	L3P-50	Stopper (シャッターチャージ桿ストッパー)	1
75	E-1.5	E-Ring (スナップリング)	1
76	L3W-6	Shutter set bar spring (シャッターチャージ桿スプリング)	1
77	E-1.5	E-Ring (スナップリング)	2
78	L3P-14	Shutter set bar (シャッターチャージ桿)	1
79	L4W-2	Stopper spring (チャージ桿ストッパースプリング)	1

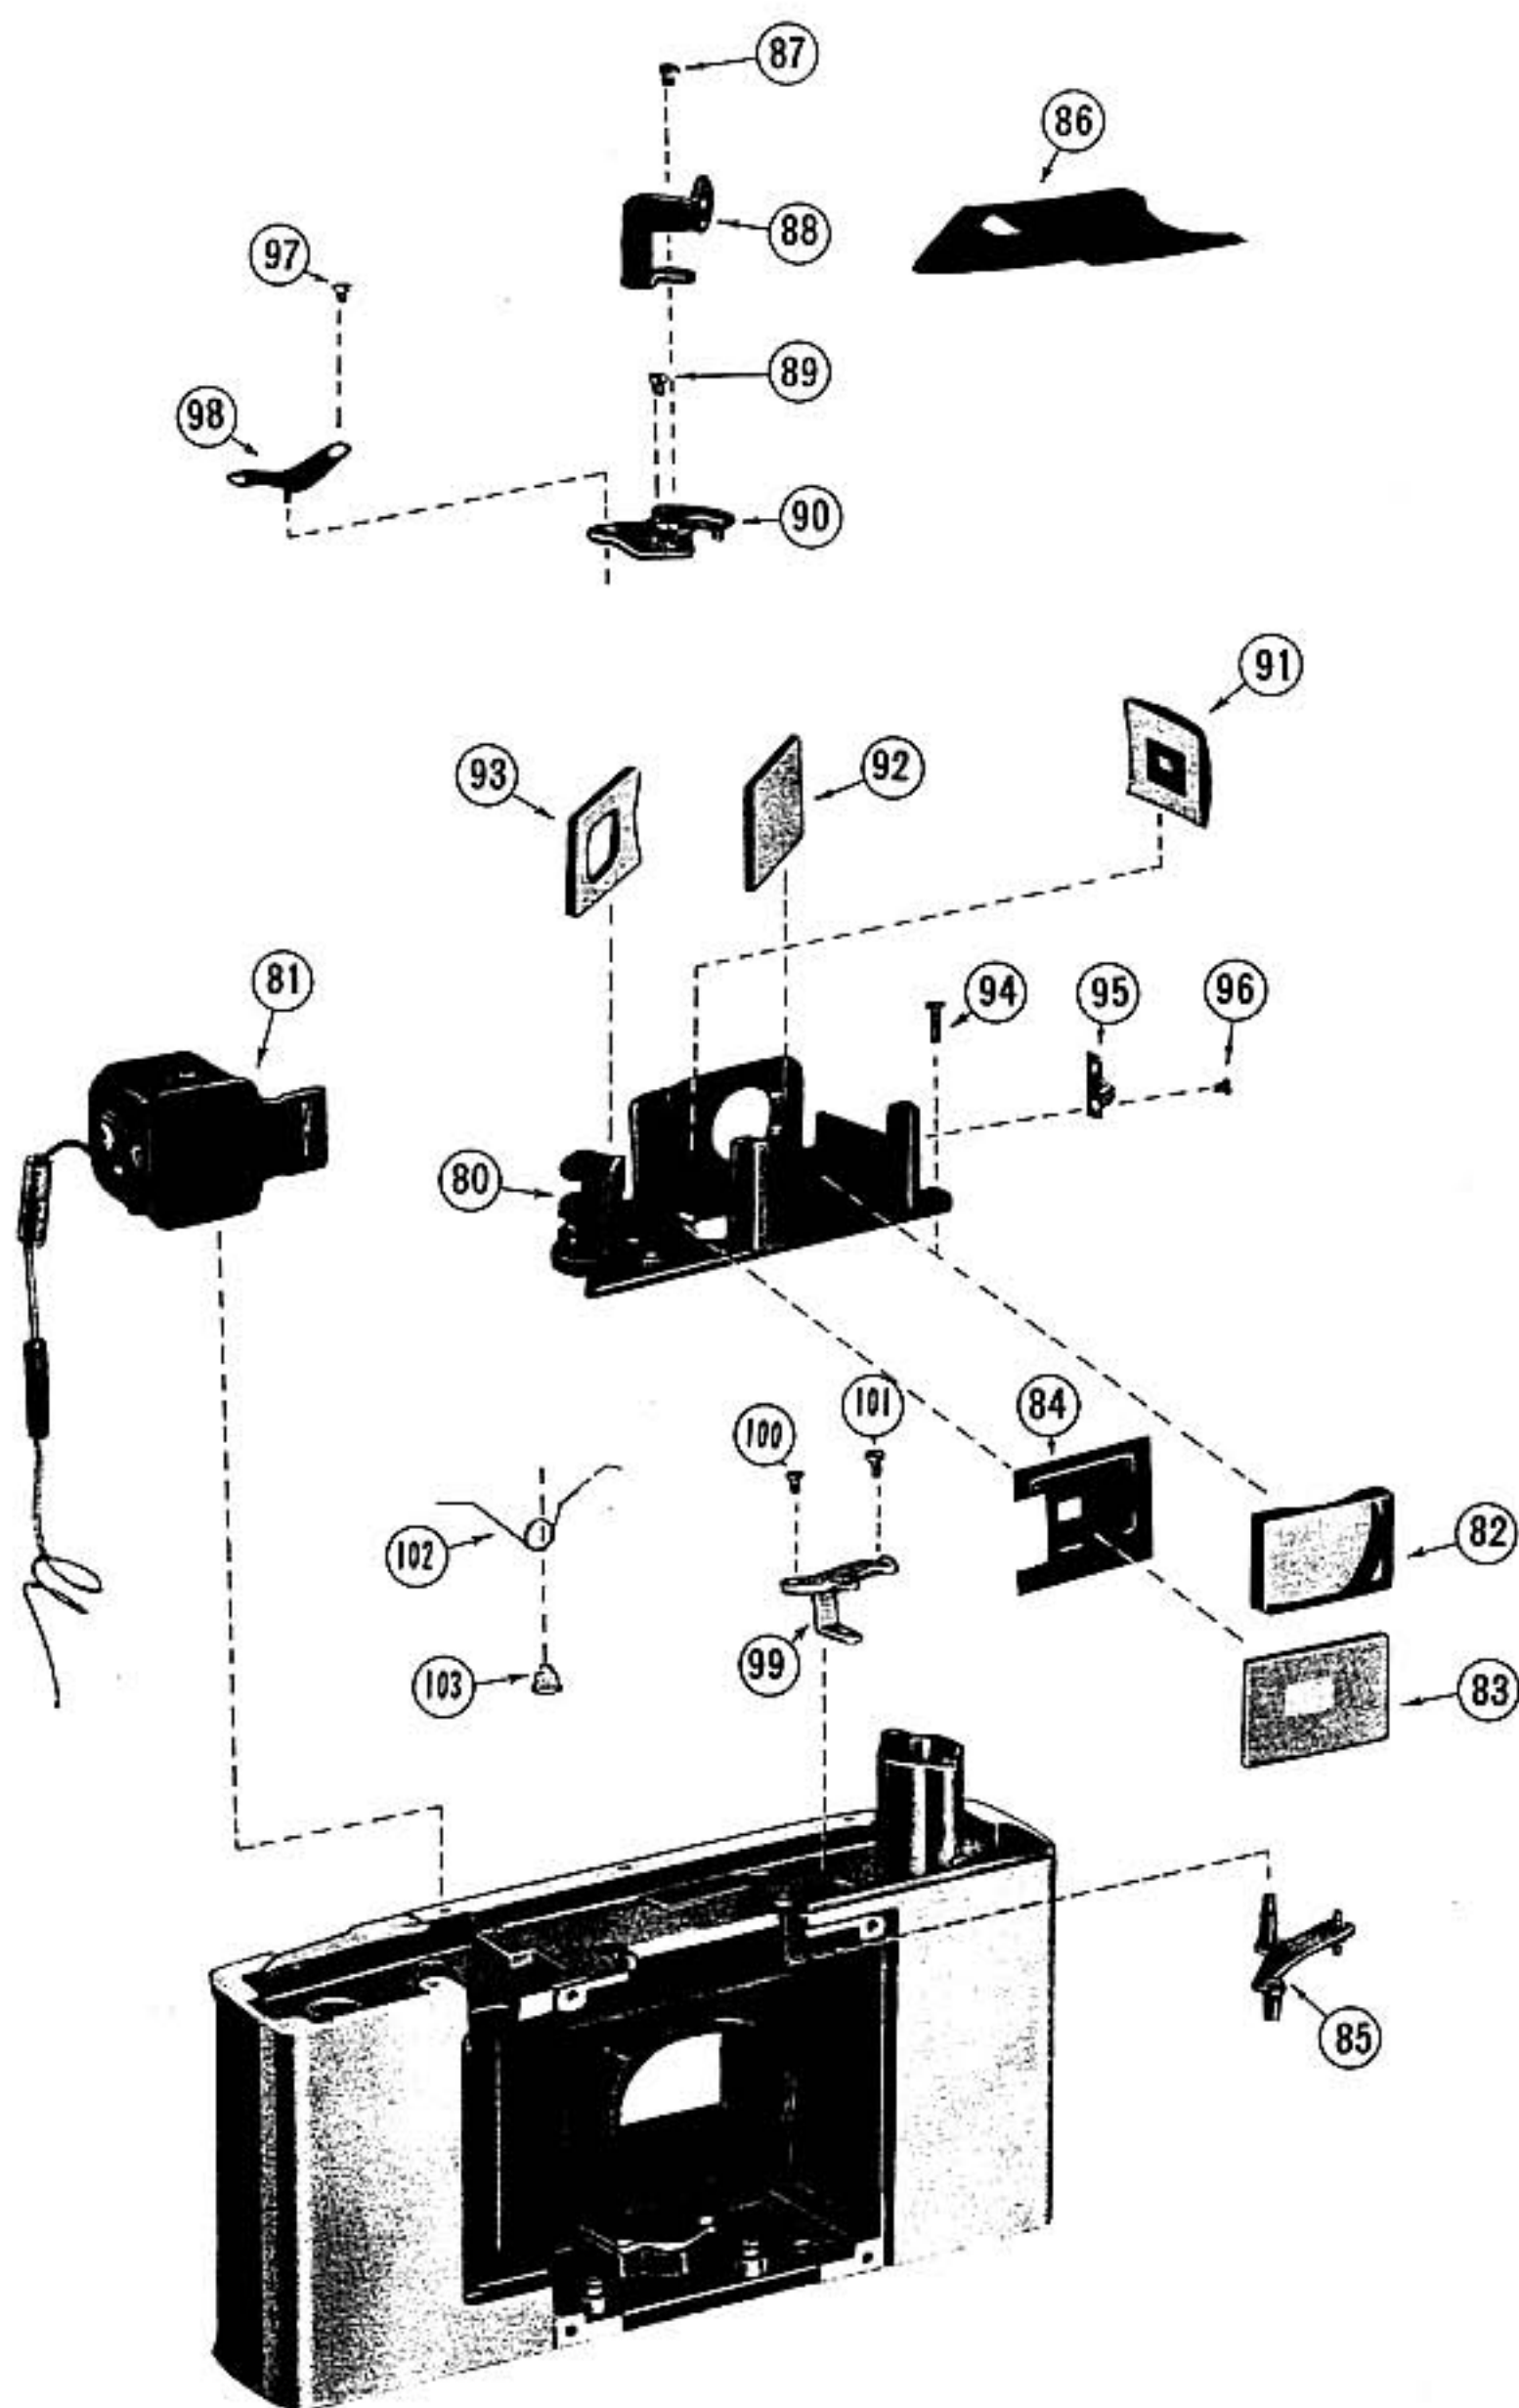


FIG.	PART NO.	DESCRIPTION	UNIT
80	L2DC-2	Rangefinder frame w/small mirror (地板)	1
81	L3P-36	Exposure meter (メーター)	1
82	L2L-1	Front field lens (対物レンズ)	1
83	L2L-7	Green ground glass (グリーンガラス)	1
84	L2P-24	Bright frame mask (チャート枠)	1
85	L2P-17	Cam follower (連動桿一式)	1
86	LP-26	Light baffle (距離計蓋)	1
87	PR-8	Negative lens screw (移動レンズ取付)	1
88	L2L-3	Negative lens assembly (移動レンズ一式)	1
89	PR-8	Negative lens bracket screw (調節板取付)	1
90	L2P-47	Negative lens bracket (調節板一式)	1
91	L2L-4	Large negative lens (中間レンズ)	1
92	L2L-5	Half mirror (半透明鏡)	1
93	L2L-6	Reflex mirror (チャート表面鏡)	1
94	BPM-43	Rangefinder frame screw (地板取付)	3
95	L2P-23	Mirror holder spring (半透明鏡押え)	1
96	PDB-123	Holder spring screw (半透明鏡押え取付)	2
97	PRB-123	Spring pivot screw (移動レンズ押え取付)	2
98	L2P-22	Spring pivot (移動レンズ押え)	1
99	L2P-18	Cam follower support (連動桿台)	1
100	BPU-6	Cam follower support screw (連動桿台取付 'A')	1
101	SPB-146	Adjuster screw (連動桿台取付 'B')	1
102	L2W-1	Cam follower spring (連動桿スプリング)	1
103	L2B-9	Screw for L2W-1 (連動桿スプリング掛)	1

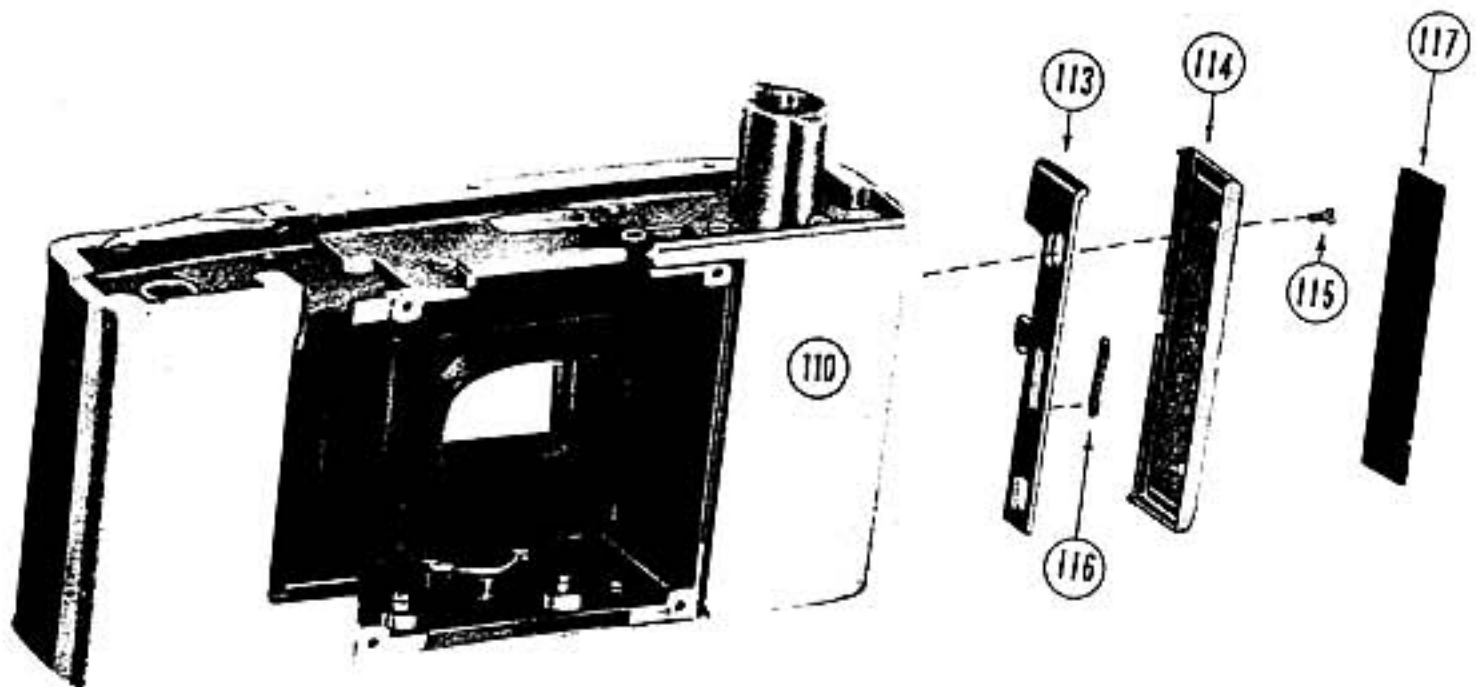
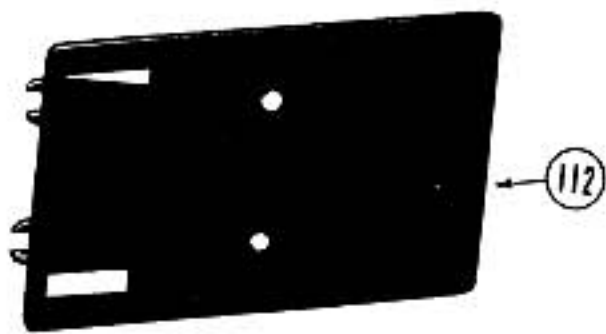
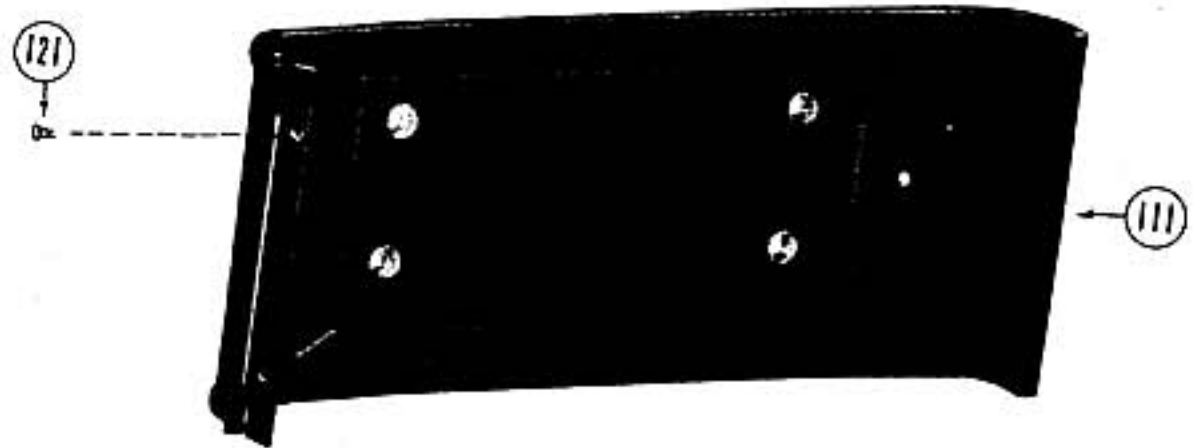


FIG.	PART NO.	DESCRIPTION	UNIT
110	L3DC-1	Body (ボディ)	1
111	L2-5	Back cover assembly (裏蓋一式)	1
112	PU-3	Pressure plate assembly (圧板一式)	1
113	L2P-4	Back cover latch (蓋止引出)	1
114	L2P-3	Latch cover (蓋止カバー)	1
115	PU-6	Latch cover screw (蓋止カバー取付)	2
116	PW-2	Latch spring (蓋止スプリング)	1
117	L2K-4	Leatherette-latch cover (蓋止皮)	1
118	L2K-1	Leatherette-front left (前皮一左)	1
119	L2K-2	Leatherette-front right (前皮一右)	1
120	L2K-3	Leatherette-back cover (後皮)	1
121	PU-1	Hinge screw (裏蓋一式取付)	2

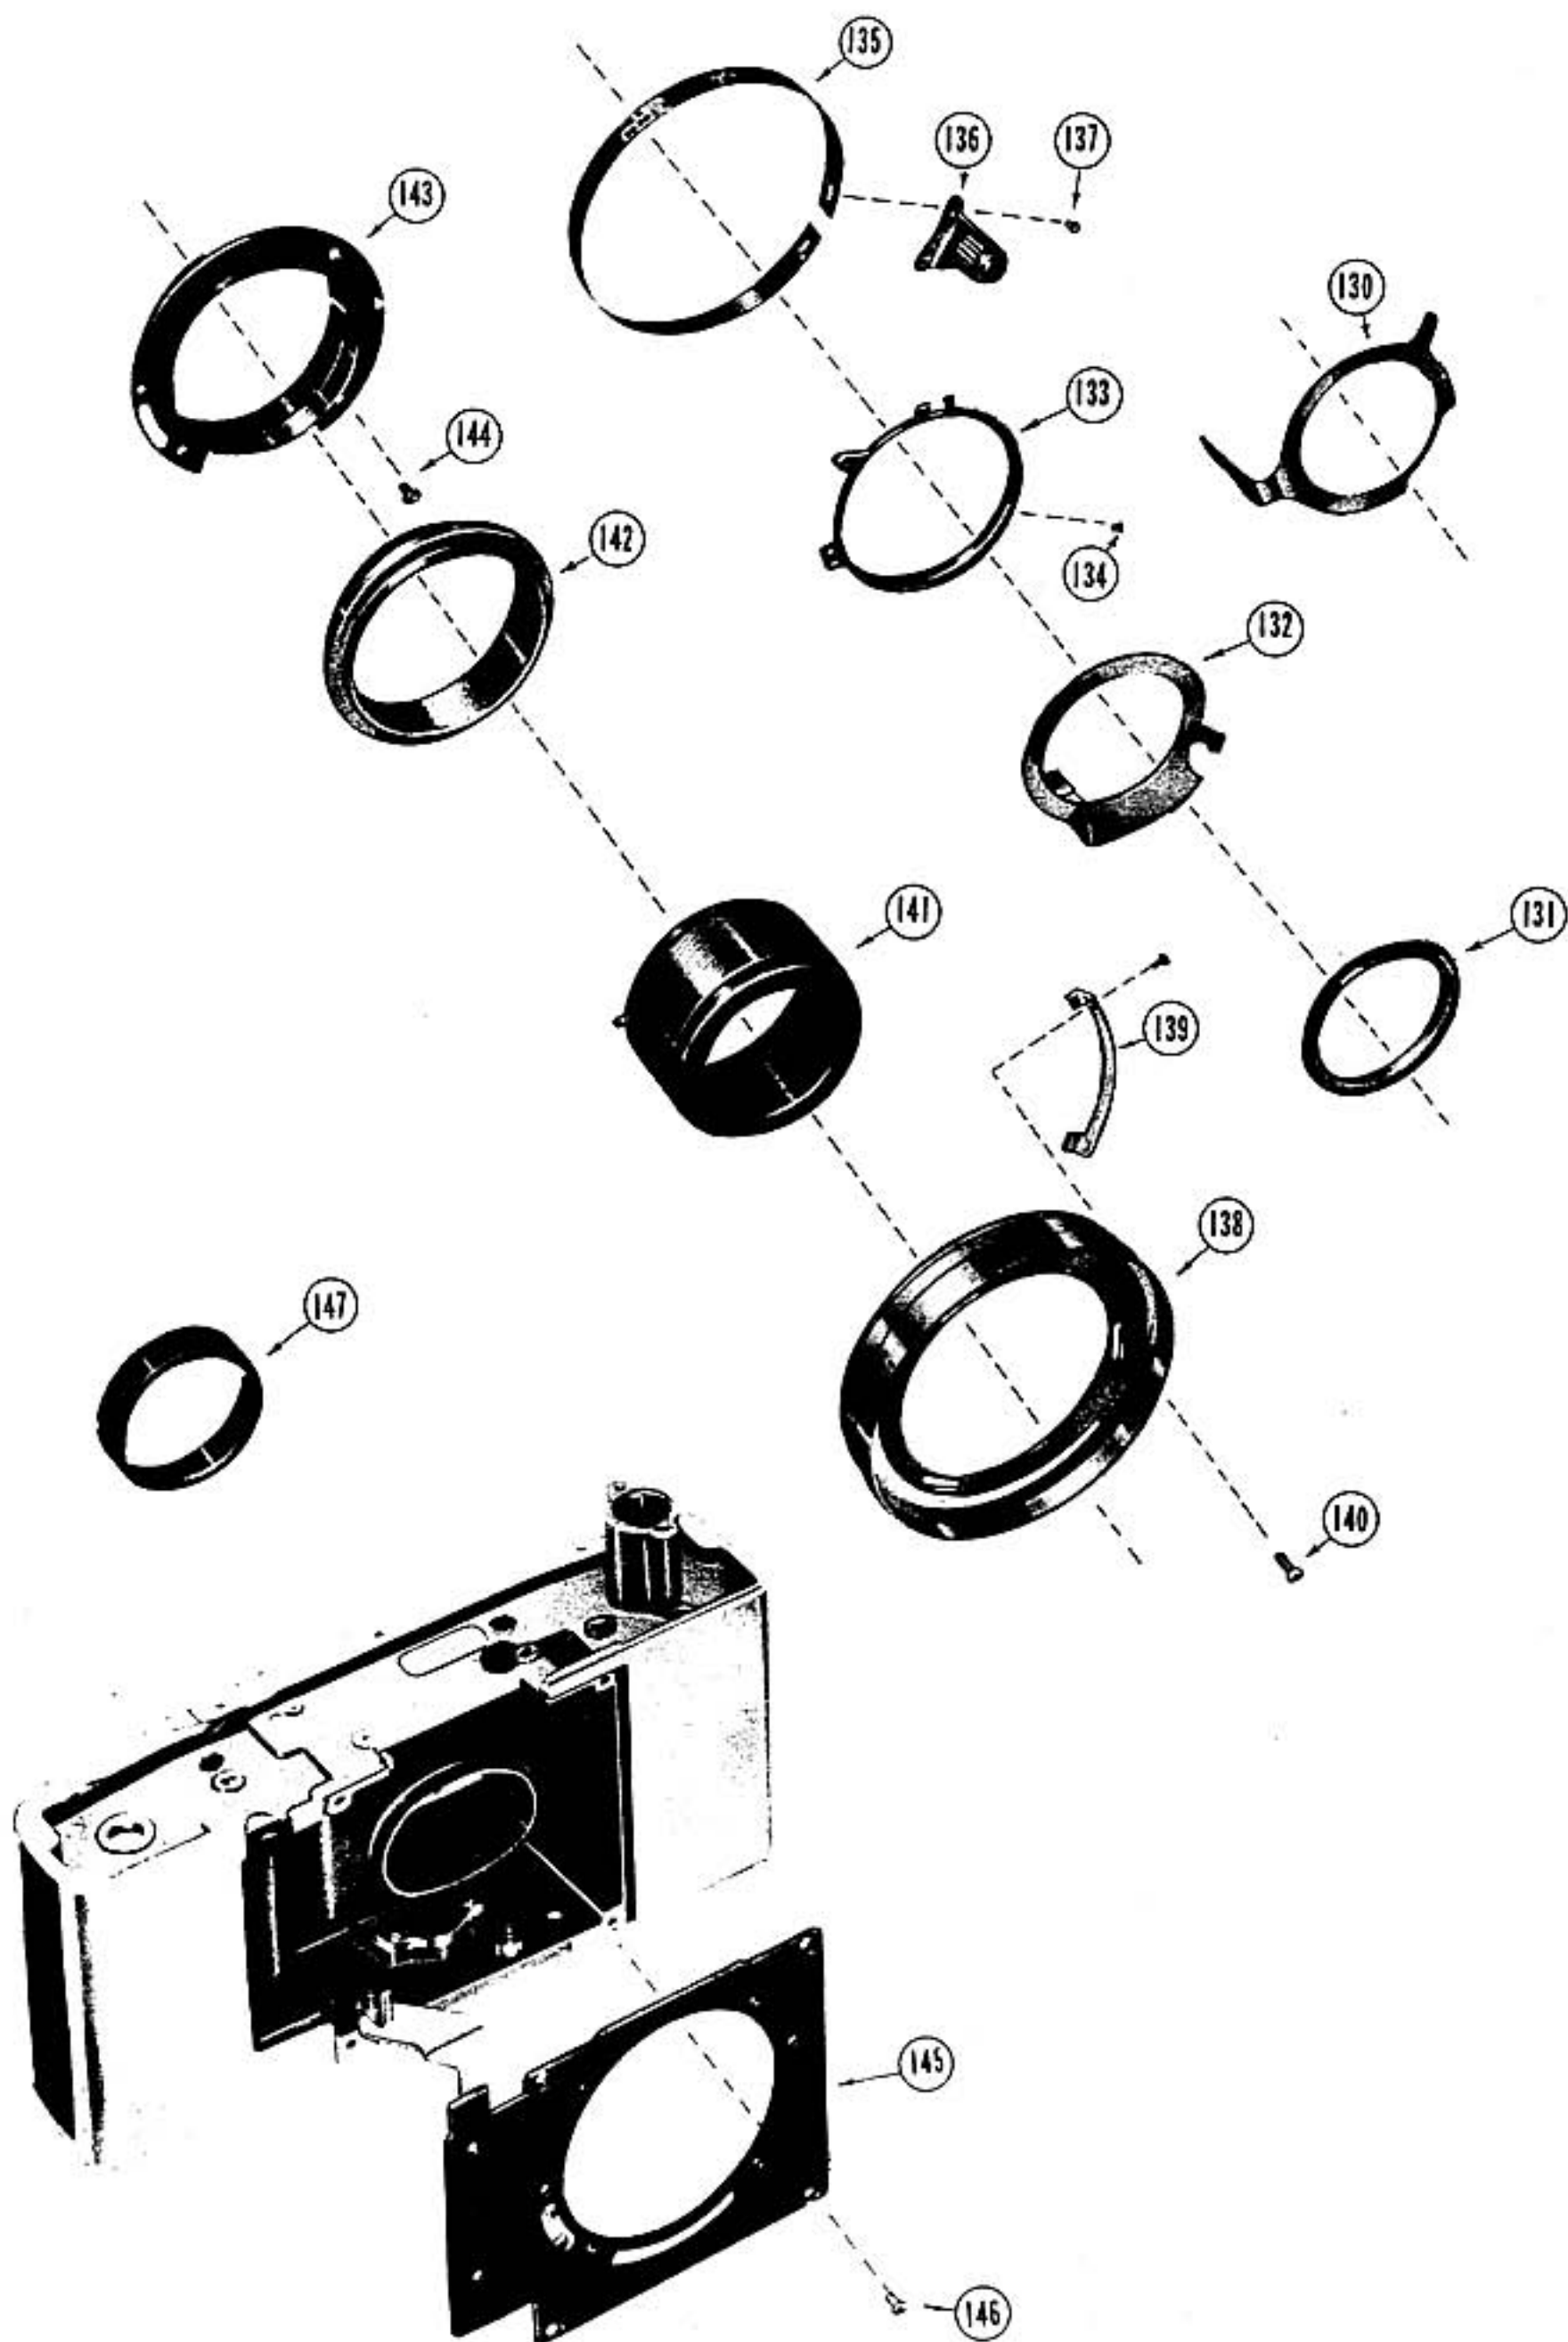


FIG.	PART NO.	DESCRIPTION	UNIT
130	L3P-17	Shutter release ring (シャッター レバー)	1
131	L2B-20	Spacer ring (座金)	1
132	L3P-12	Shutter set ring (シャッター セット リング)	1
133	L2P-40	Connector ring (接片台)	1
134	SPB-102	Connector ring screw (接片台取付)	2
135	L3P-41 (L3P-41B)	Focusing scale (距離目盛)	1
136	NPS-1003	Focusing knob assembly (焦点調節つまみ一式)	1
137	BPS-19	Focusing knob screw (焦点調節つまみ取付)	2
138	L3P-37	Cup (ヘリコイドスケール台一式)	1
139	L3P-44	Helical gear stopper (ヘリコイドストッパー)	1
140	PS-11	Cup screw (ヘリコイドスケール台取付)	3
141	LB-29	Helical drum assembly (ヘリコイド内筒一式)	1
142	NPS-1012	Helical ring (ヘリコイド中筒)	1
143	L2B-36	Mount ring assembly (ヘリコイド外筒一式)	1
144	BPS-19	Mount ring screw (ヘリコイド外筒取付)	4
145	L3P-13	Mount plate assembly (シャッター台一式)	1
146	BPS-17	Mount plate screw (シャッター台取付)	4
147	GLB-64	Jam nut (シャッター取付リング)	1
148	M-206	Stopper screw (ヘリコイドストッパー取付)	2

Note: Refer numbers in () for 7S f2.8 camera parts

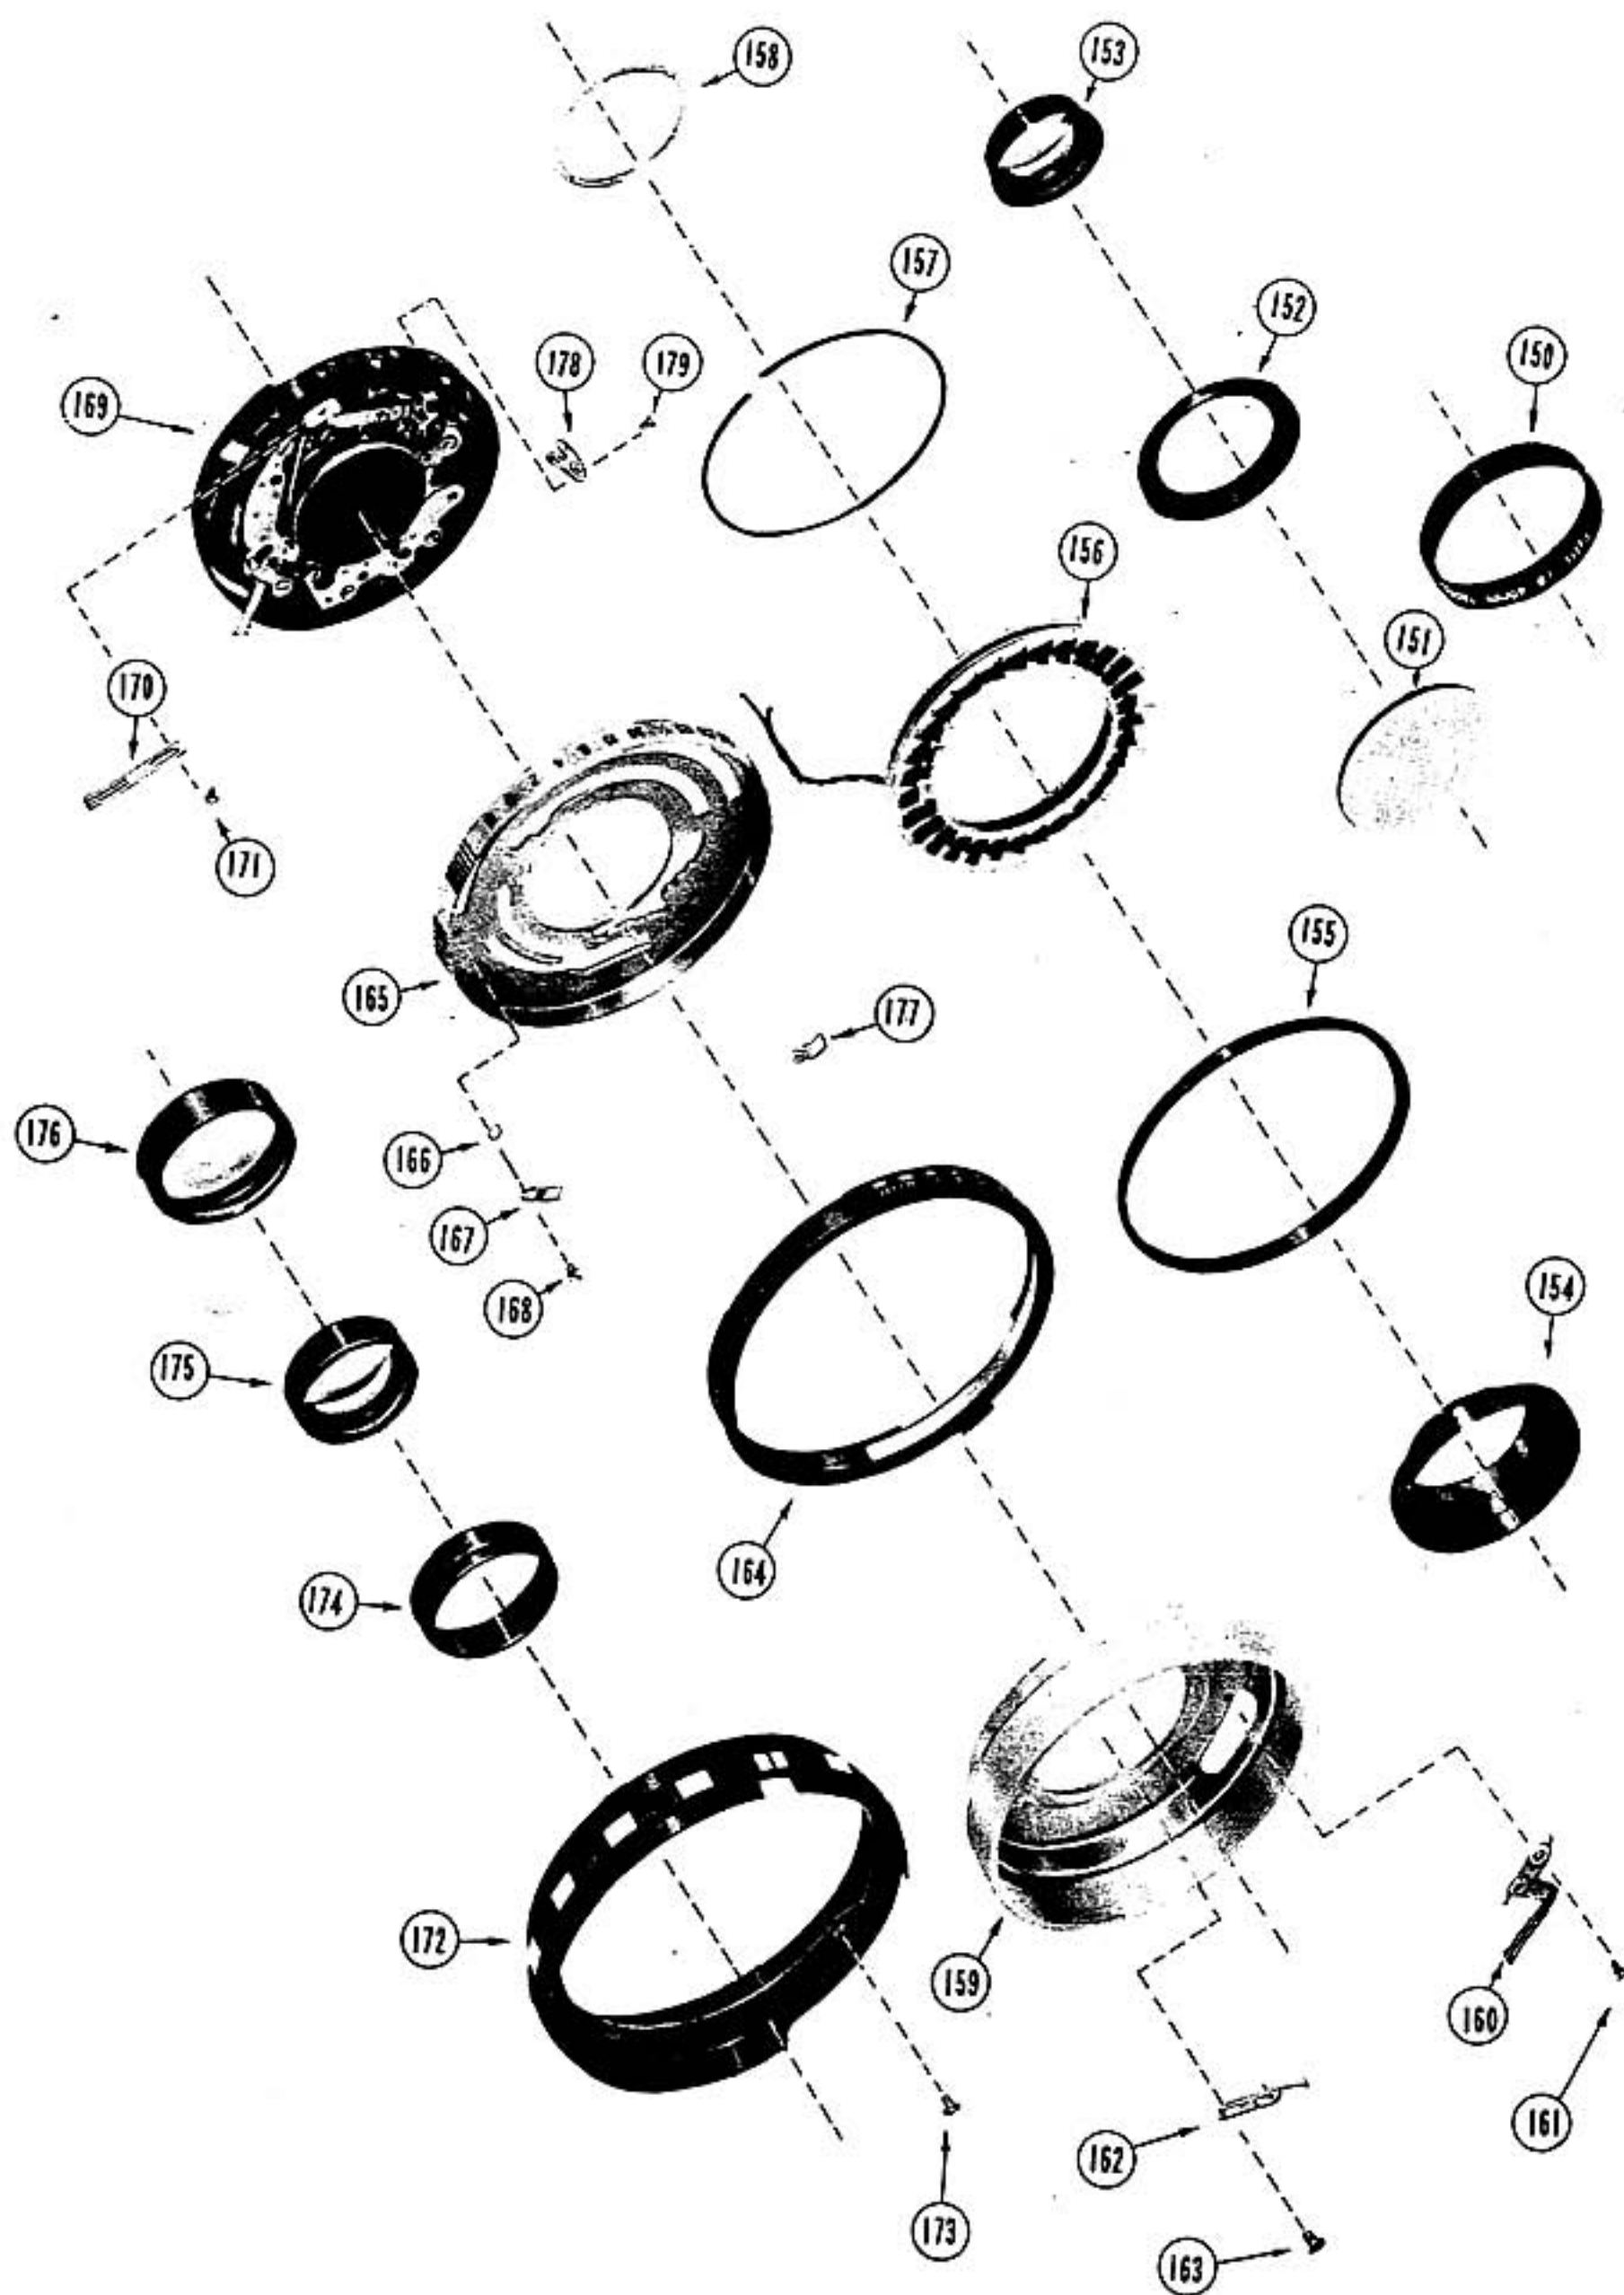


FIG.	PART NO.	DESCRIPTION	UNIT
150	L3B-50 (L3B-35)	Lens number ring (前枠)	1
151	NG-1 (AG-1)	No. 1 lens (front) (前玉)	1
152	L2B-56	No.2 & No.3 lens retainer (中枠座)	1
153	NG-2-3 (AG-2)	No.2 & No.3 cemented lens (中玉)	1
154	L2B-30 (L3B-36)	Front lens cell (中枠)	1
155	L2B-51	Photo-cell window retainer (光電池取付リング)	1
156	L3P-45	Photo-cell assembly (光電池)	1
157	L3B-52	Spacer (複眼レンズ台)	1
158	M-153	Shutter cam retainer (ネーム板取付)	1
159	VEP-251	Front assembly cup (ネーム板)	1
160	VEP-206	Fixed brush w/insulator (固定接片 'A')	1
161	VEB-7	Brush screw (固定接片取付)	2
162	VEP-8	Click spring (クリック板)	1
163	VEB-210	Click spring screw (クリック板取付)	2
164	VEB-231 (VEB-201)	ASA & DIN dial assembly (ASAリング)	1
165	VEP-233 (VEP-204)	Shutter speed cam (カム板)	1
166	0201-20	Washer (ワッシャー)	1
167	VEP-234	Supporter spring (ASAリング 押え 'B')	1
168	VEB-210	Supporter spring screw (ASAリング 押え取付)	2
169	MVB-204	Shutter & diaphragm assembly (シャッター一式)	1
170	VEP-209	Moving brush (移動接片)	1
171	VEB-8	Moving brush screw (移動接片取付)	1
172	VEB-251	Diaphragm control ring (絞り目盛環)	1
173	VEB-210	Fix screw (Diaphragm control ring) (絞り目盛環取付)	3
174	LB-5 (P3B-1)	Lens retainer (後枠)	1
175	NG-4-5 (AG-3-4)	No.4 & No.5 cemented lens (後玉)	1
176	NG-6 (P3B-2)	No.6 lens in spacer ring (後枠リング)	1
177	VEP-205	Supporter spring (ASAリング押え)	1
178	VEP-208	Connector (固定接片 'C')	1
179	VEB-7	Connector screw (固定接片取付)	2

Note: Refer numbers in () for 7S f2.8 camera parts.

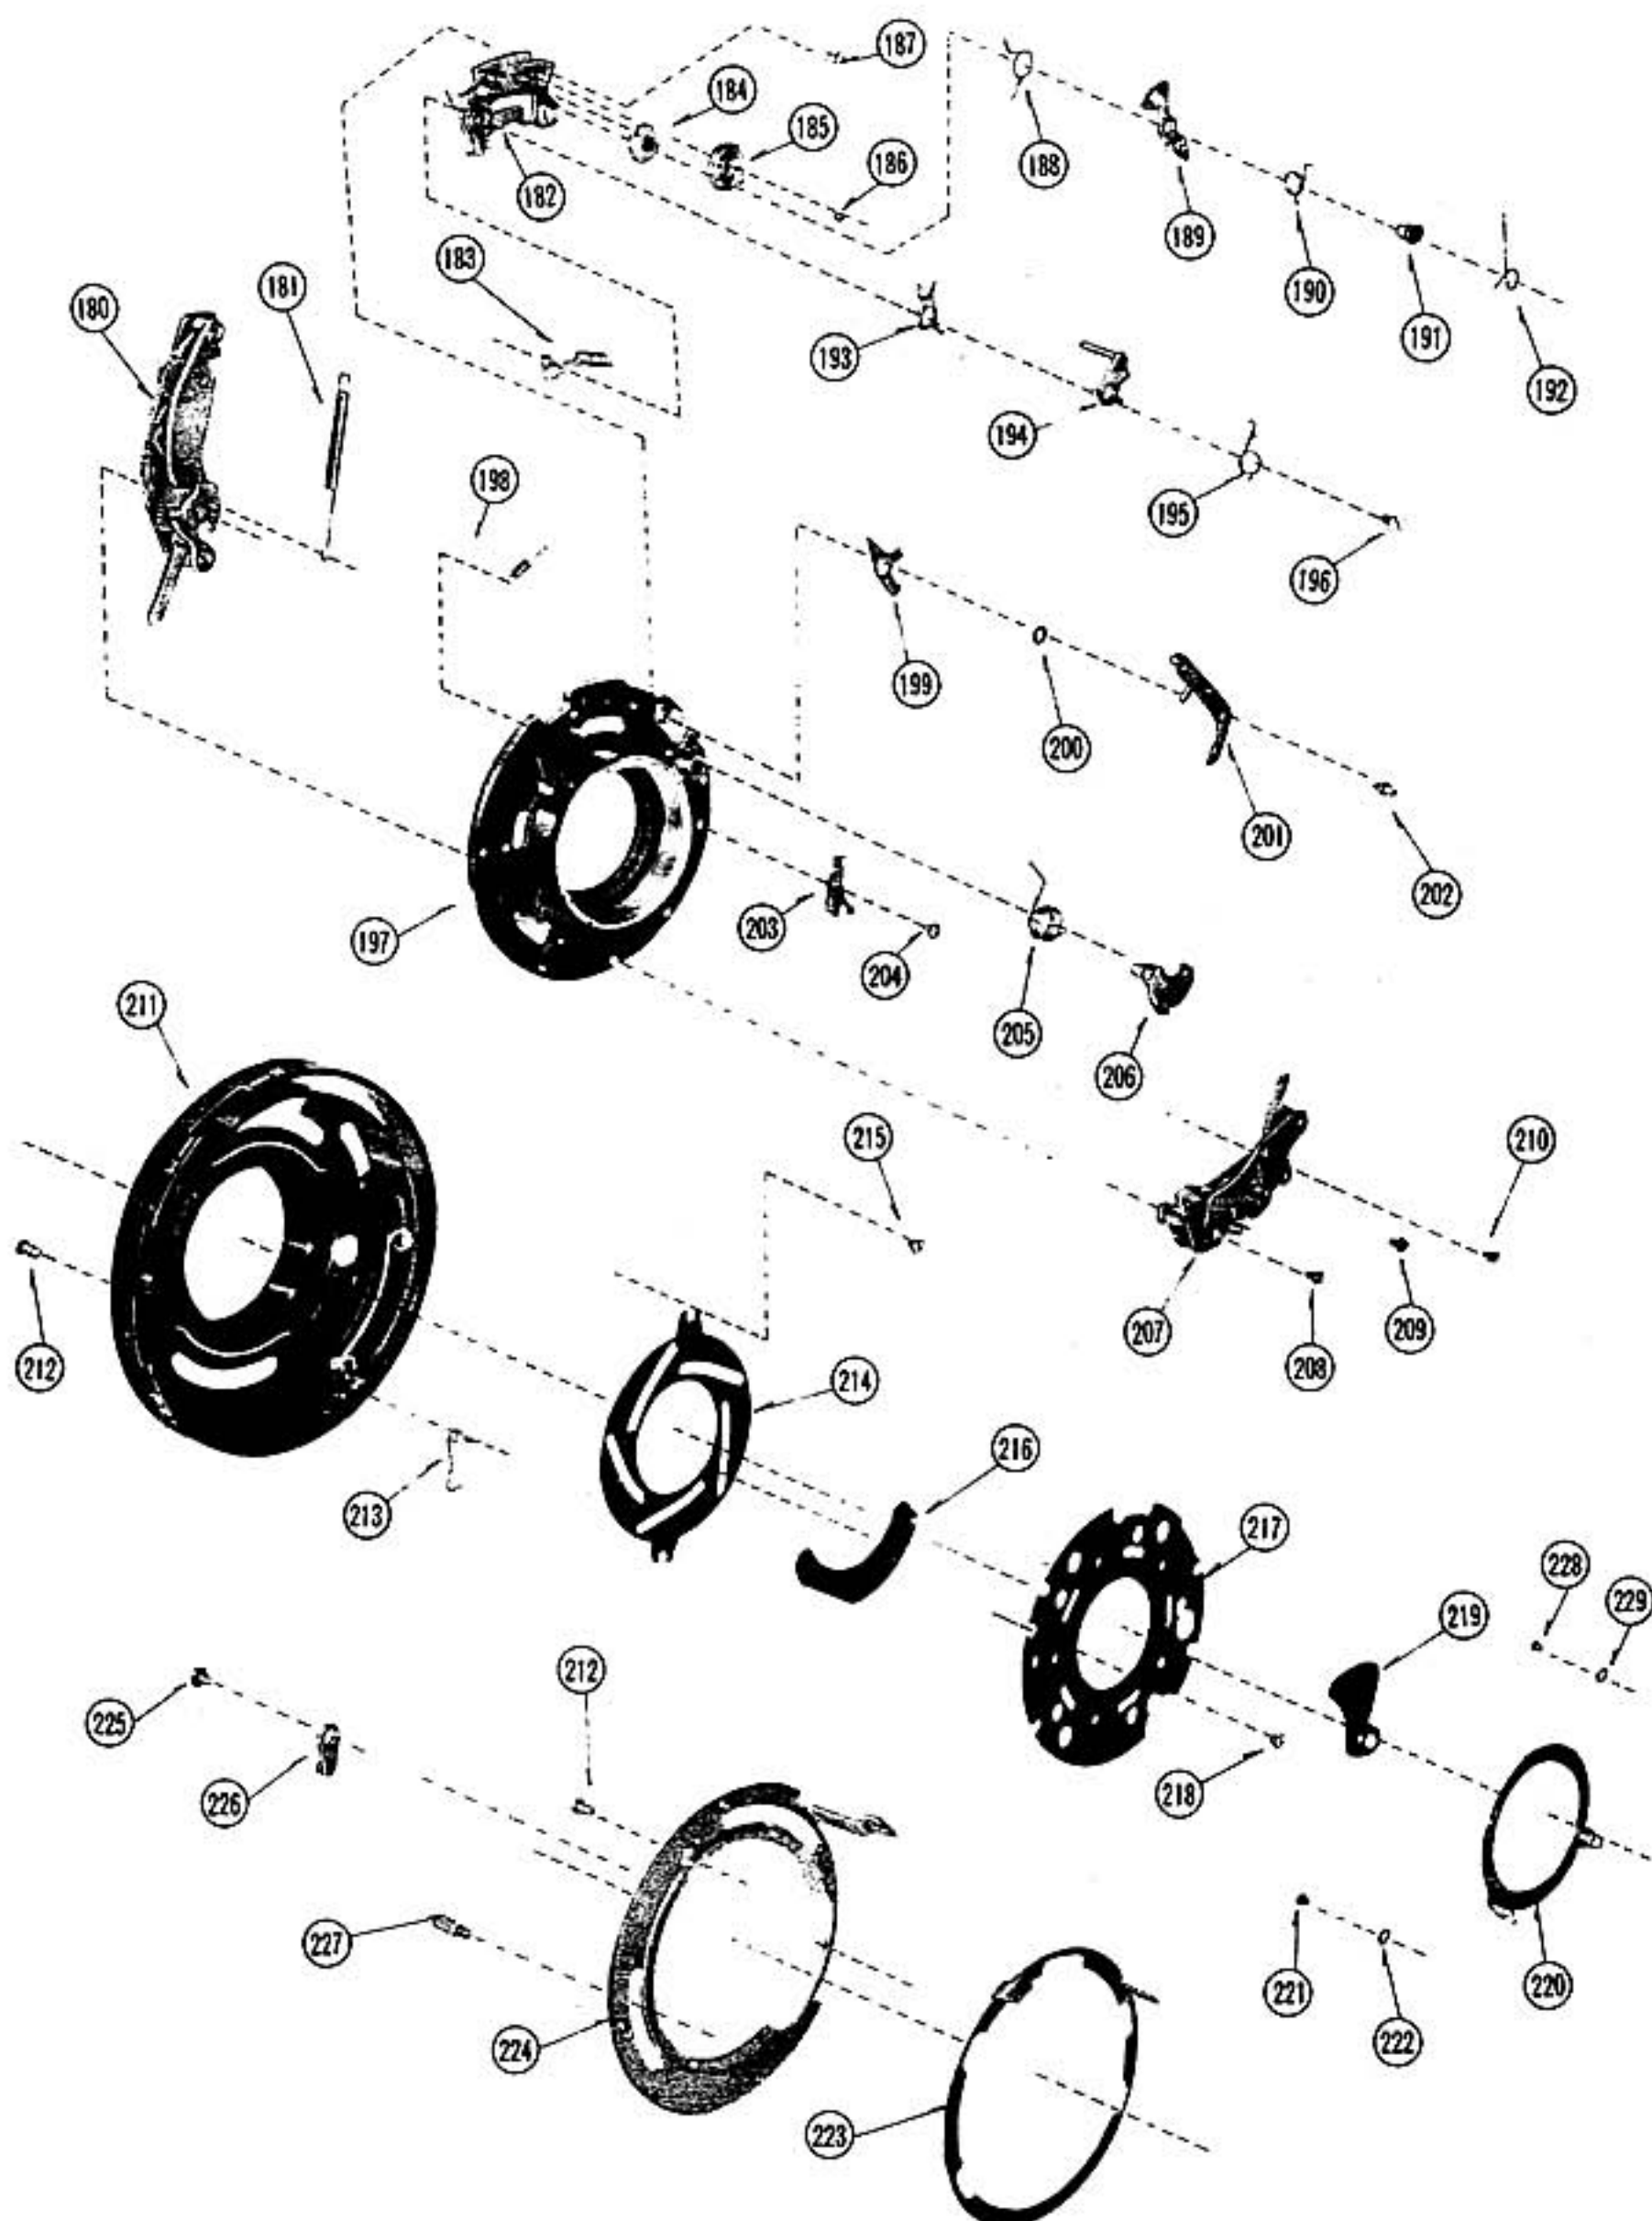


FIG.	PART NO.	DESCRIPTION	UNIT
180	VEB-261-6	Selftimer gear assembly (セルフタイマー一式)	1
181	PW-41	Selftimer spring (セルフタイマースプリング)	1
182	MV-1	Gear base (ハンドル台)	1
183	MV-8	Drive ring stopper (開閉板止め)	1
184	MV-11	MX Fly wheel (MCギヤー)	1
185	MVB-133	MX delay action gear (MBギヤー)	1
186	PW-61	Gear spring washer (Mギヤースプリングワッシャー)	1
187	MV-120	Gear base screw (ハンドル台取付)	2
188	PW-67	Drive ring stopper spring (開閉板止めスプリング)	1
189	MV-10	Sector gear (M扇形ギヤー)	1
190	PW-64	Sector gear spring (M扇形スプリング)	1
191	VEB-105	Sector gear screw (扇形取付)	1
192	PW-62	Bulb lever spring (バルブスプリング)	1
193	MV-9	Fly wheel stopper (Mギヤー止め)	1
194	MV-6	Release bar (レバーハンドル)	1
195	PW-63	Release bar spring (レバーハンドルスプリング)	1
196	MVB-106	Release bar screw (ハンドルめネジ)	1
197	MVB-204	Mount base assembly (中板)	1
198	PW-70	Fly wheel stopper spring (Mギヤー止めスプリング)	1
199	MV-14	M contact (M接点)	1
200	MV-15	M contact washer (M接点 Bワッシャー)	1
201	MV-7	Bulb lever (バルブ)	1
202	VEB-203	Bulb lever screw (バルブめネジ)	1
203	MP-11	X contact (X接点)	1
204	M-108	X contact screw (X接点取付)	1
205	PW-68	Cocking lever spring (Sレバースプリング)	1
206	MV-3	Cocking & drive lever (Sレバー)	1
207	MV-16-26	Slow speed escapement (秒ギヤー)	1
208	MVB-137	Escapement screw A (秒ギヤー取付 'A')	1
209	M-114	Escapement screw B (秒ギヤー取付 'B')	1
210	VEB-215	Escapement screw C (秒ギヤー取付 'C')	1
211	VEB-405	Shutter case (シャッターケース)	1
212	M-111	Shutter case screw (中身取付 'A')	3
213	PW-73	MX switch ring spring (切換クリックバネ)	1
214	VEP-2	Diaphragm disc (絞り押え 'B')	1
215	VEB-209	Diaphragm disc screw (絞り押え 'B' 取付)	2
216	VEP-3	Diaphragm blade (絞り羽根)	5
217	VEP-1	Diaphragm covering disc (絞り押え 'A')	1
218	M-117	Diaphragm covering disc screw (絞り押え取付)	1
219	MV-37	Shutter blade (五枚羽根)	5
220	MV-2	Shutter drive ring (開閉板)	1
221	M-107	Shutter blade screw (開き押え取付)	4
222	MP-3	Shutter blade screw washer (開閉板押え)	4
223	VEP-252	MX switch ring (切換レバー)	1
224	VEP-231	Diaphragm drive ring (絞りリング)	1
225	M-206	Cocking lever screw (Sレバー 'C' 取付)	1
226	MP-36	Cocking lever (Sレバー 'C')	1
227	VEB-208	Diaphragm drive ring stopper (中身取付)	1
228	VEB-141	Shutter blade screw (開き押え取付)	1
229	MV-44	Shutter blade screw washer (開閉板押え 'A')	1