

MINOLTA CAMERA...



MINOLTA "16"

Automatic, 16mm camera for black and white photos and color slides mounted to fit any 35 mm projector; speeds to 1/200 second; 25 mm, f:3.5 lens stops down to f:11.



MINOLTA SR-1

With completely automatic 7-element, 55 mm, f:2 lens. Supreme achievement in a top quality single lens reflex camera. Completely automatic diaphragm and instant return mirror, plus every feature you could want in a fine camera.



MINOLTA AUTOCORD

Fully automatic film advance & shutter cocking; 4-element Rokkor coated f:3.5, 75mm lens and matching f:3.2 viewing lens; shutter speeds from one sec. to 1/500 and bulb; helicoid focusing from 3 ft. to infinity; direct reading light value scale.

CHIYODA KOGAKU SEIKO K. K., OSAKA, JAPAN Printed in Japan

Minolta A5



Owner's Manual





C O N T E N T S

Five "Musts" for Picture Taking.....	4
1. Loading Film.....	6
2. Setting Shutter Speed and Lens Aperture	11
3. Advancing Film	13
4. Focusing and Composing	14
5. Pressing Shutter Release	17
Unloading Film	18
Using Self-timer	19
Taking Flash Pictures	20
Accessories	21

THIS IS ALL ABOUT MINOLTA A5

Your Minolta A-5 is a precision built, professional quality 35mm camera.

It takes 20 or 36 pictures on each 35 mm roll of film.

The world famous coated Rokkor F:2.8 lens delivers the needle sharp professional performance.

The Optiper-Citizen MLT shutter provides 12 speeds from a full second and bulb to a fast 1/1000 second . . . plus a light value scale and built in self-timer. And it's synchronized for both bulb and electronic flash at all speeds.



It is designed for fast sequence shooting. The single stroke film advance lever cocks the shutter, winds the film, counts the exposure and prevents the double exposure — all in one operation automatically.

The coupled, super imposed, lumi-framed rangefinder-viewfinder with automatic parallax correction is the ultimate in composing ease and speed.

For best results, make sure, you read this book carefully.

CHIYODA KOGAKU SEIKO K. K.

Leading camera manufacture since 1928.

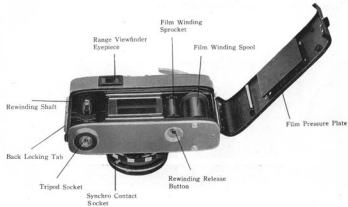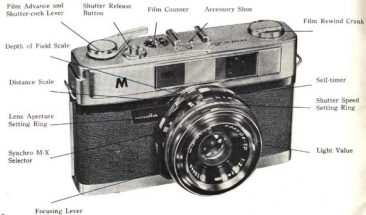

Five steps to Taking Perfect pictures

Each step is explained in detail on the following pages.



1 Load the film



2 Set the shutter and lens aperture.



3 Advance the film, using the rapid film advance lever.



4 Focus... and compose your picture.



5 Press the shutter release.

To take your next picture, start with step 3 advancing the film.

1. Loading films



1 Pull out back locking tab and swing camera back wide open.

2 Pull up rewind knob as far as it goes.

3 Insert a roll of film, then push back rewind knob.

4 Pull out enough film to insert it in slit.

5 Advance film lever 2 complete turns (Pressing shutter release each time). Make sure sprockets Project through film slots.

6 Close back cover, then push back locking tab.

7 Set the exposure counter to the red dot. (It can be turned to clockwise way).

8 Advance film lever three times pressing shutter release each time. You will see exposure counter is set to No. 1.

● Film Speed Indicator

On the back of the camera, there is a film indicator.

Set the film speed indicator to the film speed you have just loaded in your A-5. The picture in here shows it is set for ASA 32 (DIN 16). This way you will know, always what kind of film you have in your camera.

You can find the film speed from the information sheet which is included in every film box.



Photo by
Minolta A5



1/1000 second! Fast shutter speed stops the action.

f 5.6 1/1000 sec.

● A word about exposure

Ordinarily, whenever you take a picture, you must set the exposure. Exposure is based primarily on 2 factors: The size of the lens opening (F stop) and the shutter speed. Both are determined by existing lighting conditions.



If it is very bright out, you will require less light and, therefore, use a smaller lens opening. If it is cloudy, you will need more light and use a wider lens opening.

The smaller the "F" number, the larger the opening. F2.8 means a larger opening and more light than f4, f5.6, f8, . . . f22, etc. Size of lens opening doubles with each succeeding stop.

The shutter speed determines the length of time you will let light through the lens. The A5 shutter is timed from 1 to 1/1000 sec. There is also a B (Bulb) setting which will keep the shutter open while the shutter release button is depressed. The shutter speed numbers are not shown in fractions. 30 represents 1/30 of a second; 125 is 1/125 of a second, etc.

2. Set the shutter speed and the lens aperture



The shutter speed ring controls the length of time the shutter is open to pass light through the lens.

High speed settings are used to stop action. Lower speeds are for scenes and dim-light pictures.

The lens aperture ring is turned to control the amount of light passing through the lens. Small numbered openings are used for dim light and slow films . . . large numbered openings for bright light and fast films . . . as per your light meter readings, or suggested lens openings on the information sheet included with each roll of film.

● When You own a light value exposure meter

Setting exposure is this simple: you read the light value on the meter and set it to the light value indicator line. That is all. You can get a correct light value by turning either the shutter speed setting ring or the lens aperture setting ring separately until the selected light value appears on the line. If you turn the shutter speed setting ring, the figures on the light value scale move, while the pointer line moves as the lens aperture setting ring is turned.

Once you have set the correct exposure, you simply turn both the shutter speed setting ring and the lens aperture setting ring at the same time to select the shutter speed-F stop combination you want to use.

Light Value Line.



3. Advancing film



This single stroke film advance action automatically advances the film, cocks the shutter and counts the exposure, all at the same time.


You can turn the lever either at one full stroke (right) or in several strokes (left.) You may if you wish advance the film before setting the exposure. You will not experience any hard turning when setting the shutter at high speeds after the shutter is cocked.

4. Focusing and Composing



As you look through the combination range-viewfinder window you will note a yellow lumi-frame near the outer edge. The actual picture you take will be inside this frame. Make sure your picture will be composed inside the lumi-frame.

The Minolta A5 finder is specially designed to correct automatically parallax so that the lens takes what you see through the lumi-frame at all distances. Parallax is the difference between what the viewfinder "see" and what the lens "see" at close distances.

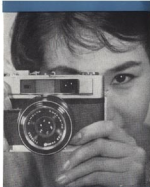

In the center of the frame is a rectangular color area. You will notice the part of your subject which appears in this color area is double. As you turn the focusing lever you will note the double image will become one and then double again. When your subject becomes one in this color area, you are properly focused.

In focus



Out of focus



● Pressing the shutter release.

Take a glance at the depth of field scale when you have focused on your subject. The indicating line in the center of the scale shows



the camera-to-object distance. Then read the F stop lines for the F stop you are using on each side of the indicating line and they will show you on the distance scale, the distance in front and behind your object which is also in sharp focus. The (2.8) indicates that you can get sharp pictures in the distance which is shown or formed by (2.8).

The depth of field table shows you the range of hypercritical focus for every F stop from f2.8 to f22.



At large aperture, only the subject (girl in front) is in sharp focus. (f2.8 1/1000 sec)



At small aperture, overall picture is comparatively sharp focus. (f22, 1/15 sec.)

Depth of Field Table

F	2.8	4	5.6	8	11	16	22
Dist (ft.)							
∞	71.3	50.0	35.6	25.0	18.2	12.5	9.1
	140	100	70	50	35	25	18
30	21.1	14.8	10.5	7.3	5.2	3.6	2.6
	51.3	34.0	24.0	17.0	12.0	8.0	6.0
15	12.4	8.5	6.0	4.3	3.1	2.2	1.6
	18.8	13.1	9.3	6.6	4.8	3.4	2.5
10	8.8	6.3	4.5	3.3	2.4	1.7	1.2
	11.5	8.3	5.9	4.3	3.1	2.2	1.6
7	6.4	4.6	3.3	2.4	1.7	1.2	.9
	7.6	5.4	3.9	2.8	2.0	1.4	1.0
5	4.6	3.3	2.4	1.7	1.2	.9	.6
	5.3	3.8	2.8	2.0	1.4	1.0	.7
4	3.8	2.8	2.0	1.4	1.0	.7	.5
	4.2	3.0	2.2	1.6	1.1	.8	.6
3.5	3.3	2.4	1.7	1.2	.9	.6	.4
	3.6	2.6	1.9	1.3	1.0	.7	.5
3	2.8	2.0	1.4	1.0	.7	.5	.4
	3.1	2.2	1.6	1.1	.8	.6	.4

Notice: upper of each column shows front and below shows behind.

5. Pressing shutter Release



There are basically two ways to hold your A5 while taking pictures: Vertical and horizontal. As long as you anchor the camera to your forehead and squeeze the trigger, not jerk it, you can use whichever grip or format is a most comfortable for you. It's always a good idea to brace your camera if you can. Even when you are shooting at faster than 1/30 of a second where you can safely handhold a camera, make use of any available support. It is advisable that you use a tripod when you shoot with the shutter speed less than 1/30 of a sec. At such slow speeds there is almost always some camera movement while the shutter is open which blurs your picture.

Unloading film



After you have taken your last picture, the film exposure counter will point to 20 or 36 depending on whether you are using a 20 or 36 exposure roll.




Depress the rewind release button. Keep depressing it until you have completely rewound the film.

Lift the crank on the rewind knob and turn crank clockwise until you feel all resistance gone and it turns freely.

Open the camera back and take the film magazine out of the camera.

Using the self-timer

Using the self-timer, you can take your own picture. First push the self-timer lever toward the V mark, and you will be able to delay the shutter operation approximately 9 seconds from the time you press the shutter release to the time the shutter is tripped. You can also arrange the length of delay according to the position that you position the lever.

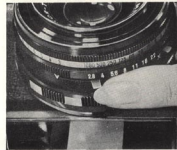

Taking flash pictures

Your Minolta A5 is internally synchronized for use with electronic flash and flash bulbs.

1. Insert a Minolta BC flash gun or electronic flash unit in the accessory shoe.
2. Insert the plug of the flash gun's cord in the terminal.
3. For Class M (foil filled) flash bulbs, slide the selector to the "M". For electronic flash, slide the selector to the "X".



1



2



3



Accessories

Minolta B.C. Flash

Extremely compact, pocket size unit with collapsible aluminum reflector. Folds neatly into a small vinyl zippered case for easy portability. Also features a BC capacitor that stores energy to greatly extend the life of your batteries. Works on regular flash light batteries.

Minolta Lens Shade

This is a particularly useful device to prevent extraneous light from entering the lens during exposure. This extraneous light from the sun or flash bulbs can cause glare spots or "light flare" and ruin your picture.

Minolta Filters

Filters are used to control color and haze to make sure you get the picture you actually see, outdoor color film to indoor use.

Yellow Filter: Increases outdoor scenes contrast. Renders "blues" slightly darker-brings out blue skies, water, clouds.

Other Filter: Haze filter for haze cut.

Minolta Mini 35

For color slide projection (35 mm, 16 mm)

