HONEYWELL PENTAX

SPOTMATIC II



OPERATING MANUAL

Index

Introduction	. 1
Major working parts of the Honeywell Pentax Spotmatic II	. 2
Specifications	. 4
Short operating course	. 6
How to hold your camera	. 8
Film loading	. 9
Film wind and rewind	10
Bright field focusing	11
Microprism	11
Automatic diaphragm	12
Shutter	13
Depth-of-field guide	13
Depth-of-field tables	14
Range of light measurement	15
Mercury battery	16
Flash synchronization	17
Important notes	18
Self-timer	20
Infra-red photography	20
How to make deliberate double exposure	20
Difference of angle of Takumar lenses	22
Takumar interchangeable lenses	23
Specifications of Takumar lenses	32
Complete system of Honeywell Pentax accessories for close-ups, macrophotography, photomicrography and other miscellaneous accessories	33
Spot exposure meter III	39
Honeywell Pentax warranty policy	40

HONEYWELL PENTAX

SPOTMATIC II


Your Honeywell Pentax Spotmatic II is the finest photographic instrument on the market. The "Super-Multi-Coating" on the Takumar lens, developed by Pentax and available only on Spotmatic II Takumars, reduces flare and boosts contrast to a degree far beyond what was previously possible in optical technology. It is a tougher coating than is available on any competitive lenses and results in pictures with more detail and richer colors than is possible with any other system at any price.

The Spotmatic II itself is an outgrowth and refinement of the original Spotmatic which introduced through-the-lens metering to the world of photography. Its stopped-down metering system is the most accurate method for perfect exposure determination. It also automatically gives you a depth-of-field preview. It is an averaging system for the easiest and most dependable exposures in typical picture-taking situations. This metering system has been refined and improved each year in the Spotmatic to a degree of accuracy unmatched in the industry.

The original Spotmatic was the most compact 35mm SLR made. The Spotmatic II retains that same traditional compactness and classic feel. It also is designed for use with the accessories from the Pentax system, including all of the superb Takumar lens ranging from the ultra-wide-angle 17mm Takumar up to the super-telephoto 1000mm Takumar. The Pentax system can grow with you as your interests develop in any direction.

We are very proud of the Pentax Spotmatic II. We are sure you will be, too.

Major working parts of the

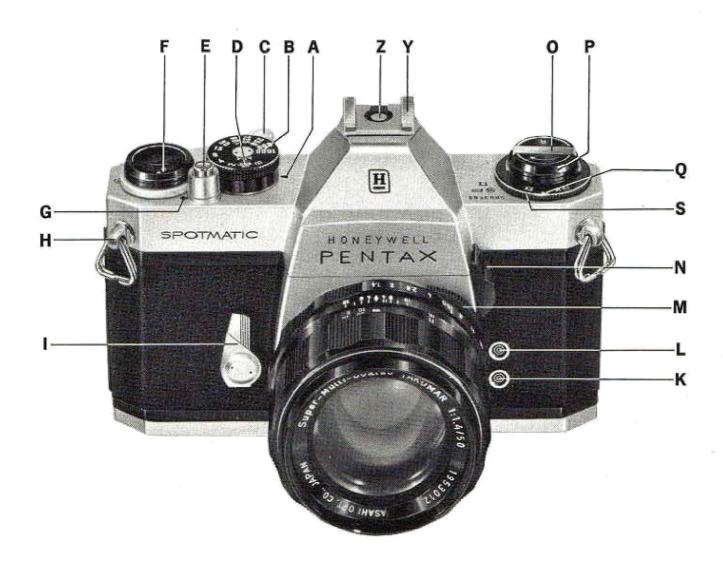

A - Shutter speed index

B - Shutter speed dial

C - Rapid wind lever

D - ASA film speed setting

E - Shutter release

F - Automatic reset exposure counter

G - 'Cocked' indicator

H - D-ring lug


I - Self-timer cocking lever

J - Focusing ring

K - X flash terminal

L-FP flash terminal

Honeywell Pentax Spotmatic II

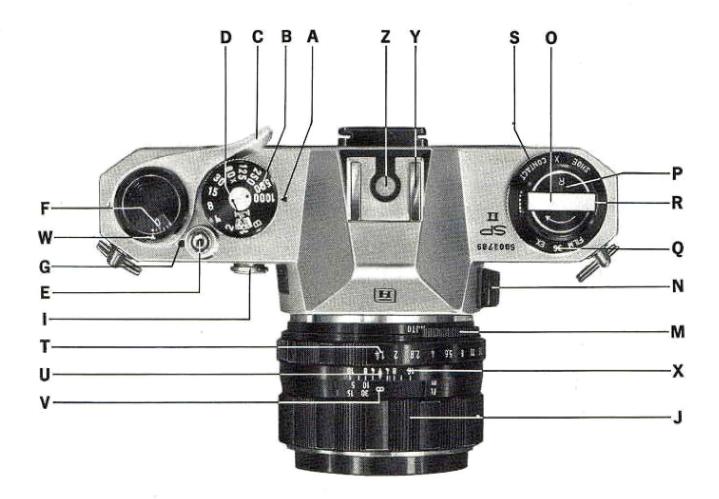

M - Preview lever

N - Exposure meter switch

O - Film rewind crank

P - Film rewind knob

Q - Film type reminder dial

R - Film type reminder dial setting lever

S - FP/X switch rim

T - Diaphragm ring

U - Diaphragm and distance index

V - Distance scale

W - Exposure counter index


X - Depth-of-field guide


Y - Hot shoe

Z - Hot shoe flash contact

OPERATING MANUAL THOROUGHLY



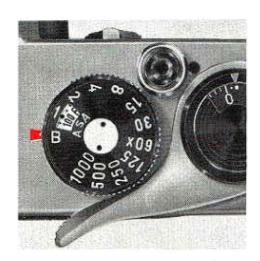

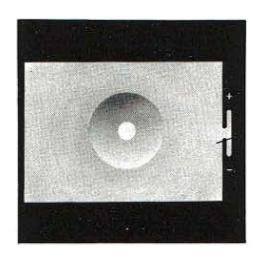

Specifications

Type

35mm single-lens reflex with built-in light meter.

Film and Picture Size

35mm film (20 or 36 exposures). 24mm x 36mm.

Standard Lenses

Super-Multi-Coated Takumar 50mm f/1.4 or 55mm f/1.8 with fully automatic diaphragm. Filters and lenshood size: 49mm. Equipped with diaphragm preview lever which affords visual check of depth of field. Distance scale: 45cm (18") to infinity.

Shutter

Focal plane shutter, with single non-rotating dial. Speeds: B, 1-1/1000 sec. Film speed (ASA) setting dial and window on shutter speed dial. Built-in self-timer releases shutter in 5-13 seconds. Shutter curtains of special rubberized silk.

Warning Signal

The index of shutter speeds turns to red when the shutter and film speed settings are off the meter's measurability range. Refer to page 16.

Finder

Pentaprism finder with microprism Fresnel lens for instant focusing; 0.88x magnification with 50mm lens and approximately life-size with 55mm lens.

Focusing

Turn the distance scale ring until the subject image on the ground glass comes into focus.

Reflex Mirror

Instant return type with special shock absorbers for minimum vibration.

Lens Mount

42mm threaded lens mount.

Film Advance

Ratchet-type rapid wind lever (for film advance and shutter cocking). 10° pre-advancing and 160° advancing angle.

"Cocked" Indicator

A red disk appears in a small window alongside the shutter release button when the shutter is cocked, and blacks out when it is released.

Film Exposure Counter

Automatic re-set type.

Flash Synchronization

Equipped with FP and X flash terminals. Electronic synchronization at 1/60 sec.

Exposure Meter

Built-in meter measures the brightness of the ground glass, and couples directly to shutter and film speed settings. Film speed (ASA) setting ranges from 20 to 3200 (LV1-18 for ASA-100 film with standard lens.) Meter is powered with a mercury battery.

Film Rewind

Rapid rewind crank for speedy film take-up. Film rewind release button on bottom of camera body rotates while film is being rewound.

Loaded Film Indicator


Loaded film reminder dial underneath film rewind knob is marked EMP. (empty), 20 and 36 (exposures) in green (for color; tungsten type), in white (black and white) and in orange (for color; daylight type).

Dimension


Width 5.6'' (143mm) \times height 3.66'' (93mm) \times thickness 3.4'' (88mm).

Weight

853 grams (1 lb. 11 oz.) with 50mm f/1.4 lens. Body alone: 622 grams (1 lb. 4 oz.)

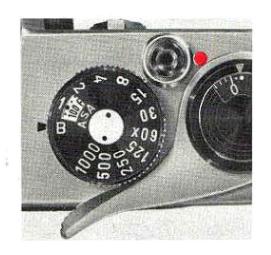



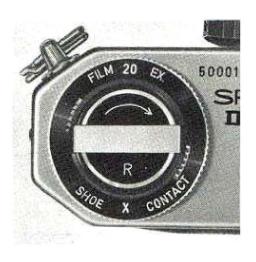


Short operating course

A mercury battery for the light meter is packed separately. Please be sure to insert it into the battery housing before operating the camera. For battery insertion, refer to page 16.



SET FILM SPEED

Lift the outer ring of the shutter speed dial, turn it around and set the same number as the ASA number of the loaded film to the small red index which appears alongside the figure 1. Then cock the rapid wind lever.

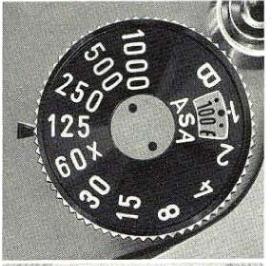


SET SHUTTER SPEED

Turn the shutter speed dial and set the speed you wish to use to the index. When outdoors, set the speed at 1/125 sec. or faster, depending upon the lighting. When indoors, set it at 1/30, or in its neighbourhood. Change the shutter speed later, when necessary. (Refer to second paragraph, page 7.)



COMPOSE AND FOCUS

While viewing through the viewfinder, turn the distance scale ring with your thumb and index finger until you get the sharpest image of your subject at the microprism center of the finder.

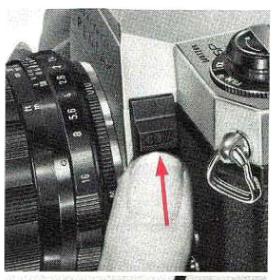


TURN ON LIGHT METER SWITCH

Push up the switch button with your thumb. Through the viewfinder, you will observe the movement of the meter's needle on the right side of the ground glass. Be sure to turn off the meter's switch when not actually taking readings.



ROTATE DIAPHRAGM RING

The needle moves up and down with the turn of the diaphragm ring. When the needle rests at the centre, you will get correct exposure. If the needle does not come to the center no matter how far you turn the diaphragm ring, change the shutter speed. When the needle is off center and close to the (+) mark, you will get over-exposure: change the shutter speed to a faster setting. If the needle is closer to the (-) mark, you will get under-exposure: change the shutter speed to a slower setting.

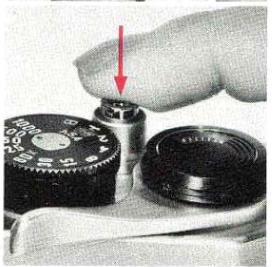

RELEASE SHUTTER

Hold your camera firmly and trip the shutter. When the shutter is released, the meter switch will automatically turn off, and the needle will remain fixed off and underneath the center. The diaphragm will reopen to its full aperture and the overall image will look brighter. Cock the rapid wind lever for the next picture. (When taking a series of pictures under the same lighting conditions, it is not necessary to repeat instructions 4 and 5.)

How to hold your camera



In horizontal position A. Hold the camera firmly with your left hand, and draw your arm close to your body.



In vertical position B. Hold your camera tightly to your forehead with your left hand, and draw your right arm close to your body.



In vertical position C. Hold your camera tightly to your forehead with your left hand, raise your right arm and draw your left arm to your body.



As a general rule, your camera should be held more firmly by the left hand which does not release the shutter. If you hold your camera with the right hand—the hand which releases the shutter—it may cause camera movement. Very often, pictures

which are not sharp are due to movement of the camera. When you focus with the camera held horizontally (Position A), hold the lens barrel as illustrated in photograph. Put the camera on your left hand thumb and little finger. Turn the distance scale ring with your thumb and index finger. When holding the camera vertically, some people release the shutter with the thumb (Position B), while others release it with the index finger (Position C). Position C is more desirable for fast focusing and shooting. With the Honeywell Pentax, whether held vertically or horizontally, you see your subject image through the taking lens, enabling you to compose, focus and shoot with a minimum of time and effort.

Film loading

Avoid direct sunlight when loading your film.

- Open the back by pulling out the rewind knob until back cover snaps open.
- Place the film cassette into the cassette chamber, and push back the rewind knob. Draw out the film leader and insert it into slot of the take-up spool.
- 3. Advance the film by alternately turning the rapid wind lever and releasing the shutter until both sprockets have properly engaged the film perforations. Close the back by pressing it firmly.
- **4.** If the film is properly loaded, the rewind knob will turn counter-clockwise when you advance the film by turning the rapid wind lever.







Film type reminder dial



Use the film type dial to show what type of film is in your camera.

When you

have pulled out the rewind knob to open the back when loading the film, turn the dial setting lever so that the type of film appears in the window. To check whether the camera is loaded, turn the film rewind knob clockwise. If it turns freely, the camera is not loaded.


Setting ASA film speed



The ASA film speed rating of all 35mm films is given in the data sheet packed with each roll of film. The higher the ASA number, the more sensitive the film. Lift the out-

er ring of the shutter speed dial and rotate it until the ASA number of your film is opposite the red index mark.

Be sure to set your film speed on the shutter speed dial because the dial is connected to the exposure meter system.

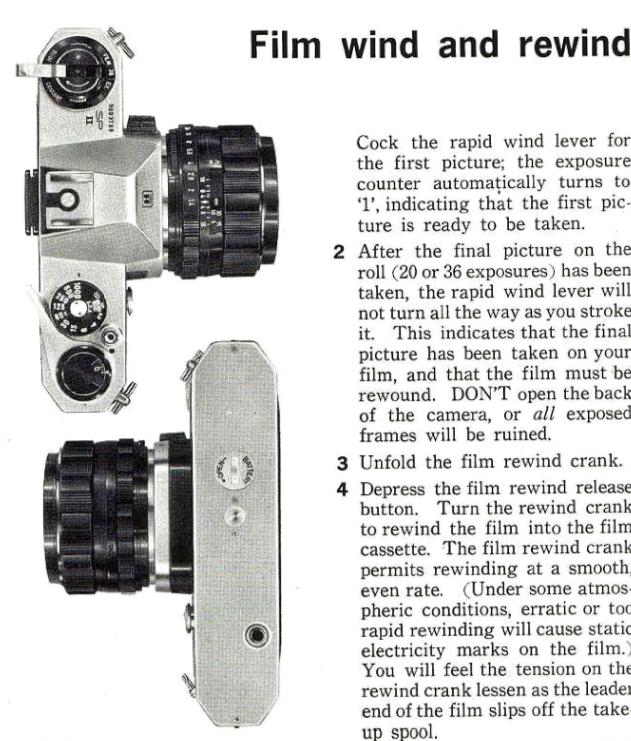

1 The first portions of the film cannot be used for picture taking as they have already been exposed to light. Generally, two blank exposures should be made before taking your first picture. Cock the rapid wind lever until it stops. Watch to see that the film rewind knob automatically turns counter-clockwise, indicating that the film is moving from cassette to take-up spool. Trip the shutter.

- Cock the rapid wind lever for the first picture; the exposure counter automatically turns to '1', indicating that the first picture is ready to be taken.
- 2 After the final picture on the roll (20 or 36 exposures) has been taken, the rapid wind lever will not turn all the way as you stroke This indicates that the final picture has been taken on your film, and that the film must be rewound. DON'T open the back of the camera, or all exposed frames will be ruined.
- 3 Unfold the film rewind crank.
- 4 Depress the film rewind release button. Turn the rewind crank to rewind the film into the film cassette. The film rewind crank permits rewinding at a smooth, even rate. (Under some atmospheric conditions, erratic or too rapid rewinding will cause static electricity marks on the film.) You will feel the tension on the rewind crank lessen as the leader end of the film slips off the takeup spool.

Stop rewinding when you feel this happen. AVOID DIRECT SUNLIGHT WHEN UNLOAD-ING YOUR FILM. (The rewind release button will return to normal position as you load your next film and turn the rapid wind lever.)

5 Pull out the film rewind knob (the back will open automatically), and remove the film cassette.

Bright field focusing

- 1 You can start viewing and focusing before and after cocking the rapid wind lever. When the preview lever is in "AUTO" (automatic) position, and the meter is at "OFF", the diaphragm is fully open except for the moment of exposure.
- 2 Turn the distance scale ring until your subject image is clearly in focus. It is not always necessary for you to view and focus with the diaphragm fully open. In bright sunlight, you can easily focus with diaphragm closed to f/5.6 or f/8 and still observe the depth of field. It is easier, however, to focus with the diaphragm fully open as your subject image is much brighter.

When the letters "MAN" appears beside the lever, the lens is in manual position; when "AUTO" appears, it is in automatic position.



Microprism

Honeywell Pentax cameras have a Fresnel lens with a microprism center underneath the ground glass. As you look through the finder, you will see that the Fresnel lens consists of many concentric rings which provide the brightest possible image on the ground glass.

The microprism is the center portion of this diaphragm. When your subject is in focus, the image in the microprism will be sharp and perfectly clear. If your subject is not in focus, the microprism will break the image up into many small dots, much like an engraver's screen. You can focus your subject on any portion of the ground glass.



Automatic diaphragm



OUT OF FOCUS



IN FOCUS

When the preview lever is in "AU-TO" (automatic) position, and the exposure meter is turned to "OFF", the fully automatic diaphragm is at its largest aperture at all times, except for the instant of exposure, no matter what aperture is set on the diaphragm ring. When you release the shutter, the diaphragm automatically stops down to the predetermined aperture and the shutter curtains start traveling instantly. When the exposure is completed, the diaphragm reopens to maximum aperture completely automatically and you are ready to compose, focus and shoot your next pictures. If you wish to visually check exact depth-of-field before making the exposure, move the preview lever to "MAN" (manual) position. This stops the diaphragm to the aperture selected and shows you exactly how much depth-of-field will appear in your picture. The preview lever may be moved back to "AUTO" (automatic) position before or after making your exposure, or, if you are making pictures in bright sunlight, it may be left in manual position, which permits a constant check of depth of field.

*When the exposure meter switch is turned to the "on" position, the lens diaphragm changes from the automatic to manual position even though the preview lever is in the "AUTO" (automatic) position. When the shutter is released, the lens diaphragm will automatically return to its automatic position if the lever is set on "AUTO".

Shutter

Turn the shutter speed dial clockwise or counter-clockwise to the shutter speed desired. The shutter



At slow speeds—slower than 1/30—support your camera rigidly or use a tripod to prevent movement of your camera.

speed may be set either before or after cocking the rapid wind lever. As you cock the shutter by turning the rapid wind lever, the "cocked" indicator turns to red showing that the shutter is cocked.

The indicator window blacks out as you trip the shutter button. For use of the X setting on the shutter speed dial, refer to page 17.

With the shutter speed dial set on B (bulb), the shutter will stay open as long as you depress the shutter button. As you release your finger from the shutter button, the shutter closes. When a long exposure is desired while using the B setting, attach a shutter release cable with a locking device to the shutter button. This will permit a "Time" exposure.

2 To protect the shutter mechanism, trip the shutter release before putting the camera out of use for any extended period.



If you want to know how great the depth of field is at a certain aperture, look at the depth-of-field guide. In the above photograph, the distance scale is set at 15 feet ... the lens is focused on a subject 15 feet away. The calibrations on each side of the distance index correspond to the diaphragm setting and indicate the range of in-focus distance for different lens apertures. For example, if the lens opening of f/8 is to be used,

Depth-of-field guide

the range on the distance scale ring covered within the figure 8 on the depth-of-field guide indicates the area in focus at the lens opening. You will note from the depth-of-field guide in the photograph that the range from approximately 10 to 25 feet is in focus. Note that as the lens apertures change, the effective depth of field also changes. For the depth of fields at different apertures and distances, refer to page 14.

Depth of field is the range between the nearest and farthest distances which are in focus at different lens apertures.

Depth-of-field table: Super-Multi-Coated Takumar 50mm lens

Distance Scale f Setting	1′6″	2′	3′	5′	10′	15′	30′	8
f/1.4	1' 6.12"	1'11.8"	2'11.5"	4'10.4"	9′ 5.6″	13′ 9.7″	25′ 6.6″	169′9.2″
	1' 6.13"	2' 0.2"	3' 0.6"	5' 1.7"	10′ 7.2″	16′ 4.9″	36′ 4.2″	∞
f/2	1′ 5.9″	1'11.6"	2'11.3"	4' 9.8"	9′ 3.1″	13′ 4.3″	24′ 0.2″	118′ 3.5″
	1′ 6.1″	2' 0.4"	3' 0.8"	5' 2.4"	10′10.6″	17′ 1.2″	39′11.8″	∞
f/2.8	1′ 5.8″	1'11.5"	2'10.9"	4′ 9″	8'11.9"	12' 9.6"	22′ 3″	84′11.6″
	1′ 6.2″	2' 0.5"	3' 1.1"	5′ 3.4″	11' 3.2"	18' 1.4"	46′ 1.4″	∞
f/4	1′ 5.6″	1'11.4"	2'10.6"	4' 7.7"	8′ 7.4″	12′ 0.6″	20′ 0.4″	59′ 6.4″
	1′ 6.4″	2' 0.6"	3' 1.7"	5' 5"	11′11.2″	19′11″	59′11.6″	∞
f/5.6	1′ 5.5″	1'11.2"	2'10"	4' 6.2"	8′ 1.9″	11′2″	17′ 8.3″	42′ 6.8″
	1′ 6.5″	2' 1"	3' 2.3"	5' 7.2"	12′11.2″	22′10.7″	100′ 1.3″	,∞
f/8	1′ 5.4″	1′10.8″	2' 9.1"	4′ 4.1″	7′ 6.8″	10′ 1″	15′ 0.7″	29′10.2″
	1′ 6.6″	2′ 1.3″	3' 3.4"	5′10.9″	14′ 9.5″	29′ 7.2″	∞	∞
f/11	1′ 5.2″	1'10.4"	2′ 8.2″	4' 1.6"	6′11.3″	8′11.8″	12′ 8.4″	21′ 9″
	1′ 7″	2' 1.9"	3′ 4.8″	6' 4.2"	18′ 0.6″	46′ 9.7″	∞	∞
f/16	1′ 4.8″	1′ 9.7″	2' 6.7"	3'10"	6′ 1.2″	7′ 7.2″	10′ 1″	15′
	1′ 7.3″	2′ 2.9″	3' 7.6"	7' 3"	28′ 7.6″	∞	∞	∞

Depth-of-field table: Super-Multi-Coated Takumar 55mm lens

Distance Scale f Setting	1′6″	2′	3′	5′	10′	15′	30′	8
f/1.8	1′ 5.9″	1'11.8"	2'11.5"	4'10.4"	9′ 5.6″	13′ 9.7″	25′ 6.4″	168′ 2.4″
	1′ 6.1″	2' 0.2"	3' 0.6"	5' 1.7"	10′ 7.2″	16′ 5″	36′ 4.7″	∞
f/2	1′ 5.9″	1'11.8"	2'11.4"	4'10.3"	9' 4.9"	13′ 8.3″	25′ 1.3″	151′ 4.8″
	1′ 6.1″	2' 0.2"	3' 0.6"	5' 1.8"	10' 8"	16′ 7.1″	37′ 3.2″	∞
f/2.8	1′ 5.9″	1′11.6″	2'11.2"	4′ 9.6″	9′ 2.3″	13′ 2.8″	23′ 7″	108′ 2.3″
	1′ 6.1″	2′ 0.4″	3' 0.8"	5′ 2.6″	10′11.5″	17′ 4″	41′ 3.4″	∞
f/4	1′ 5.8″	1'11.5"	2'10.8"	4′ 8.6″	8'10.7"	12′ 7.1″	21′ 7.2″	75′ 9.5″
	1′ 6.2″	2' 0.5"	3' 1.2"	5′ 3.8″	11' 5.3"	18′ 6.7″	49′ 2.8″	∞
f/5.6	1′ 5.6″	1'11.4"	2'10.4"	4' 7.4"	8′ 6.1″	11'10.1"	19' 5.2"	54′ 2.3″
	1′ 6.4″	2' 0.7"	3' 1.8"	5' 5.4"	12′ 1.7″	20' 6.2"	66' 3.4"	∞
f/8	1′ 5.5″	1'11"	2′ 9.8″	4′ 5.6″	8'	10'10.3"	16′10.7″	37′11.9″
	1′ 6.5″	2' 1"	3′ 2.5″	5′ 8.2″	13' 4.4"	24' 4.6"	138′ 2.8″	∞
f/11	1′ 5.4″	1'10.8"	2′ 9″	4′ 3.6″	7′ 5.4″	9′10.1″	14′ 6.2″	27′ 8.2″
	1′ 6.7″	2' 1.3"	3′ 3.6″	5′11.8″	15′ 3.7″	31′10.8″	∞	∞
f/16	1′ 5.2″	1′10.3″	2′ 7.8″	4' 0.6"	6′ 8.2″	8' 6.2"	11′ 9.4″	19′ 1″
	1′ 7″	2′ 2″	3′ 5.5″	6' 6.8"	20′ 3″	66' 9.2"	∞	∞

Range of light measurement


The exposure meter of the Spotmatic measures the brightness of the ground glass. Therefore, the meter should be turned on *after* you have focused your subject on the ground glass. The following table shows the range of the meter's light measurement, and should not be interpreted as the camera's total range of f/stop-shutter speed combinations. As you will note from the table below, with an ASA100 film, you may use any shutter speed from 1 sec. to 1/1000 sec. in combination with any aperture that will bring the meter needle to the midpoint in the viewfinder. The total range of the aperture settings is, of course, determined by the minimum and maximum apertures of the lens being used. For example, with the 50mm f/1.4 lens and ASA100 film, an aperture from f/1.4 (the maximum aperture of this lens) to f/16 (the minimum aperture) may be used with any shutter speed from 1 sec. to 1/1000 sec. that will bring the meter needle to midpoint.


HC.												k
ASA	В	1	1 2	1 4	1 8	1 15	<u>1</u> 30	1 60	1 125	1 250	1 500	1 1000
20												
• 25												
32		- 4.							100			
• 40											4	u u
• 50												
64		-					25.5	100			100	
• 80									7			
100												
• 125												
• 160				1-1							200	
200						1100				10	3.45	3.11
• 250							A					
• 320												
400												
• 500					11/2							
• 640		li li			100							
800						1						-
• 1000							- 1					
• 1250												
1600		0)										
• 2000		D)										
• 2500												
3200												


The area A indicates the reading range of the meter. The area B indicates that although the shutter speed index is black and the meter needle moves, the meter is NOT operating properly.

When the meter needle is centered with the shutter speed dial set at B using ASA 20~50 films, this indicates that the exact shutter speed required is 2 seconds. Please expose your picture for 2 seconds.

Mercury battery

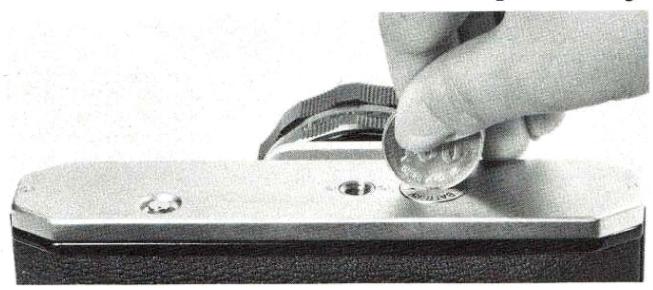

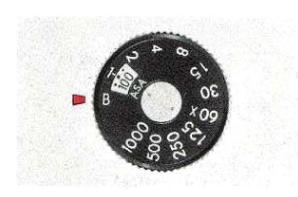

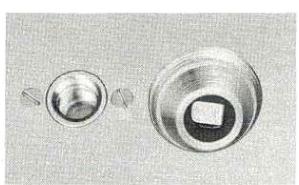



How to check it

- Set the shutter speed dial to B (bulb) position.
- 2. Turn the ASA dial to ASA 100.
- **3.** Push the meter switch to "on" position.

Look at the meter's needle through the viewfinder. If the needle rapidly drops, the meter battery has sufficient capacity; if it does not, replace the mercury battery.

How to replace it

Open the battery housing cover on the bottom cover plate with a coin. Remove old battery and insert new battery with (+) side toward the top of the camera. For replacement, use Mallory PX-400 or RM-400-R or equivalent.

CAUTION: The mercury battery is like a phonograph record. It can be damaged by skin acids. Handle by the edges with a dry cloth only. Be sure the battery is cleaned with the cloth before insertion into the camera. The battery is <u>not</u> rechargeable.

DANGER! A serious accident has been reported of a small child who has put a mercury battery into his mouth and has been hospitalized for serious gripes and stomach inflammation. Please always keep a mercury battery from the reach of small children.

Flash synchronization

The Spotmatic II has FP and X terminals at the front of the camera body, and a separate flash contact on the built-in hot shoe. The table below shows which flash contact, which shutter speed and which flash bulb may be combined for maximum lamp efficiency. Unless these combinations are rigidly followed, there will be a failure in flash synchronization. Note the "X" setting is exactly at the 60 marked on the speed dial. This indicates the highest shutter speed at which electronic flash units may be used.

Use the hot shoe flash contact only when using the STROBONAR 100, TILT-A-MITE II or any other electronic flash or flash gun that fits the built-in hot shoe of the Spotmatic II. To select FP or X, just turn the FP/X switch rim so that either one of the marks appears in the window.






When not using these terminals, keep the plugs inserted in the terminals.

SHUTTER SPEED FLASH TERMINAL	1 1000	<u>1</u> 500	1 250	1 125	1 60 x	1 30	<u>1</u> 15	1 8	1/4	1 2	1
FP			s (Scre yonet l) = "				-		
Χ							Elect			MF CI	ass

Important notes

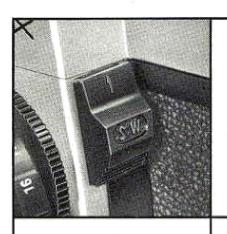


Always keep the meter switched off when not actually taking readings. Leaving the meter switched on will rapidly exhaust the battery. It is also necessary to keep the meter switched off when mounting a Super-Takumar lens on the Spotmatic II camera body. If it is switched on, the tip of the automatic diaphragm release pin of the lens will hit the pin release plate inside the camera body and it may get damaged.

2



When removing the Super-Multi-Coated Takumar 50mm f/1.4 lens from the camera body, do not place it on its threaded end without the rear mount cap in place, or you will scratch its rear element lens.

3

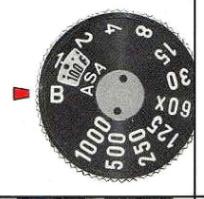


When the index of the shutter speeds turns to red, it indicates that the shutter and film speed settings are off the meter's measurability range. Change the shutter speed setting to a faster or slower setting. Refer to page 15.

4



When the meter is switched on, the lens (any Super-Takumar lens) is in its manual position even when the diaphragm preview lever is in "AUTO" (automatic) position. When the meter is switched off manually, or automatically after shutter release, the lens returns to its automatic position when it is set in "AUTO" position.

No!	Exposure factor ×1.63 ×1.96 ×3.20 ×4.80 ×5.46	Exposure increase factors which apply when taking pictures with filters, close-ups, macro- and micro-photos, do not apply to the Spotmatic.
	No.440	Primarily made for use with the Spotmatic II, the Super-Multi-Coated Takumars can also be used with the original Spotmatic, the models SL and SP 500. Further, they can be used with only two other cameras: Honeywell Pentax H3v and H1a with an orange-colored R marking on the film rewind knob. Use with any other camera will damage the rear element lens.
		The length of the tripod's screw should not exceed the normal length of 3/16" (4.5mm). Do not extend it longer than this length when mounting your camera on tripod. Forcing longer screws into the tripod socket of the camera will damage the mechanism.
N	o!	We do not guarantee the quality of photographs when brands other than Takumar lenses and Pentax accessories, such as lens extenders, are used.

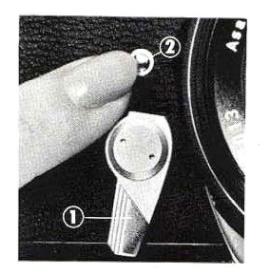

Self-timer

Depending upon how far down you turn the self-timer cocking lever ①, it will release the shutter in 5-13 seconds. When operating the self-timer, always depress the self-timer release button ② to release the shutter. Do not depress the shutter button . . . it will immediately release the shutter without delayed action. The self-timer cocking lever should be turned down at least 90° or the release button will not operate.



Infra-red photography

If you intend to take infra-red photographs, remember to use the small "R" index marked on the depth-of-field guide. Some of the Takumar lenses, however, like the above picture of Super-Takumar 50mm f/1.4, do not have the "R" mark. The index is just a short orange line.

First, focus your lens on your subject. Determine the lens to subject distance from the distance scale. Then match your lens to subject distance to the "R" mark by turning the distance scale accordingly. For instance, if your subject is in focus at infinity, turn the distance ring and move the infinity (∞) mark to the "R" index.

The "R" index marking on the Takumar lenses is based on the lens setting at infinity.

How to make deliberate double exposure





For deliberate double exposures, make the first exposure in the normal way. Then tighten the film by turning the rewind knob ①, and keep hold of the rewind knob. Depress the film rewind release button ② and cock the rapid wind lever. This tensions the shutter without advancing the film. Finally, release the shutter to make the second exposure. Then make one blank exposure, before taking the next picture, to avoid overlapping.

INTERCHANGEABLE LENSES

The Honeywell Pentax offers many interchangeable lenses in a wide variety of focal lengths, all of which are highly respected by both professional and amateur photographers for their fine resolution. The photographic coverage of the various Takumar lenses is illustrated on page 22. With focal length longer than 55mm, the subject image is seen through the viewfinder larger than its life size.

Regardless of the lens selected for your Honeywell Pentax, there is never need for an accessory viewfinder, ordinarily required for rangefinder type cameras.

When interchanging lenses, hold the lens by the distance scale ring. When attaching a lens, filter, or lenshood, do not screw it too tightly, as you may find it difficult to remove.

FIXED FOCUSING SETTING

Because of the considerable depth of field of wide-angle lenses, you can use them as fixed focus lens if the diaphragm and distance scales are set properly. For your convenience, the Super-Takumar lenses shown on page 23 have a fixed fo-


cus mark. Just align with the index the orange-colored figures of the diaphragm and distance scales, and the lens will be in fixed focus from foreground to infinity. You'll find this extremely convenient for fast shooting.

RESOLVING POWER OF TAKUMAR LENSES

Resolving power of all Takumar lenses is factory-tested by skilled optical engineers. There are three types of tests: microscopic aerial test, projection test and photographed film test. Resolving power of a lens shown by lpm (lines per mm) varies depending upon the method of resolution test. Takumar lenses have been tested for resolving power to conform to Asahi Optical Company standards which are higher than those set by JIS (Japan Industrial Standards), All Takumar lenses bear the seal of the Japan Camera Inspection Institute which insures the highest standards of performance.


When testing your lens performance... Use a slow-speed fine grain film. Generally, high speed films are grainy and are not suitable for resolution test. Support your camera on a good tripod. Use a shutter release cable to prevent camera movement. The definition of the picture on the negative film may decrease if exposure and developing time are not proper. Time your exposure and development correctly.

If you do your own developing and enlarging, see that your enlarger uses a fine quality enlarger lens. If it is not of a fine quality, your pictures can never be sharp no matter what superb lenses are mounted on your camera. Usually, the diaphragm of the enlarger should be closed down to f/8 or f/11.

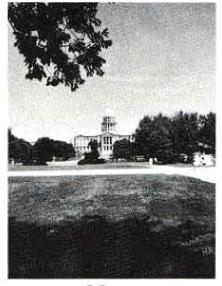

DIFFERENCE OF ANGLE OF TAKUMAR LENSES



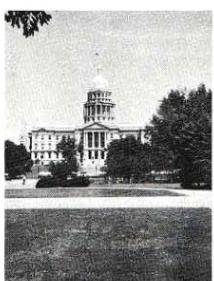







50~55mm

85mm

135mm

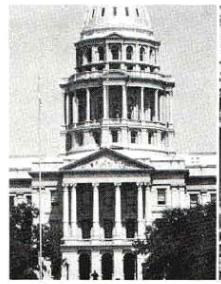



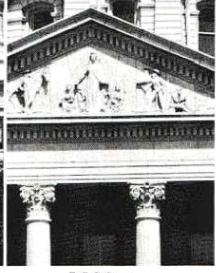

200mm

400mm

1000mm


All photographs were taken from the same location and distance from the subject.

Super-Takumar Fish-Eye 17mm f/4*

The world's most efficient fish-eye lens with maximum brightness of f/4. Covers an angle of vision of about 180° . Enables you to view and focus through the viewfinder without keeping the reflex mirror flipped up.

Lens element	11 (including 3 filters)
Minimum aperture	f/22
Minimum distance	
Angle of view	180° (diagonal)
Weight	7.98 ozs. (288 gr.)



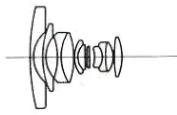


Super-Takumar 20mm f/4.5*

The new Super-Takumar 20mm F4.5 — the widest of the Takumar wide-angle family—lets you view and focus at a 94° angle of vision without keeping the reflex mirror flipped up. Superb perspective effect and a minimum focusing distance of 20cm also make it one of the most exciting lenses of the whol range.

Lens element 11
Minimum aperture f/16
Minimum distance 0.65 ft. (0.2 m)
Angle of view 94°
Weight 8.79 ozs. (251 gr.)



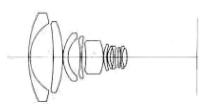


Super-Takumar 24mm f/3.5*

The Super-Takumar 24mm f/3.5 is an ultrawide-angle lens that increases even further the versatility of your Honeywell Pentax. Compact in size and light in weight, it enables you to view and focus at an 84° angle of vision. A wonderful lens to create pictures with dramatic impact.

Lens element 9
Minimum aperture f/16
Minimum distance 0.8 ft. (0.25m)
Angle of view 84°
Weight 8.7 ozs. (247 gr.)



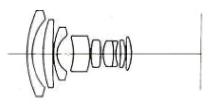



Super-Takumar 28mm f/3.5

A new super-wide-angle lens of 7 elements, designed and produced to meet the most exacting of the professional requirements, this is *the* lens you professionals and advanced amateurs need to shoot more artistic photographs. Equipped with fully automatic diaphragm; ideal for architecture, fast-action and *artistic* photography.

Lens element
Minimum aperture f/16
Minimum distance 1.3 ft. (40 cm)
Angle of view
Weight




Super-Takumar 35mm f/2

One of the fastest wide-angle lenses for 35mm single-lens reflex cameras. Edge-to-edge sharp resolution at full aperture; unique lens design without distortion; perfect for pictures of large groups, buildings, sports events, and other large spectacles.

Lens element 8
Minimum aperture f/16
Minimum distance 1.25 ft. (0.4 m)
Angle of view 62°
Weight 8.53 ozs. (242 gr.)



Super-Takumar 35mm f/3.5

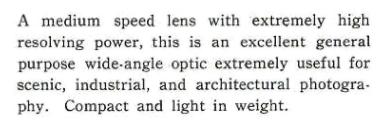

Lens element 5
Minimum aperture f/16
Minimum distance 1.5 ft. (45 cm)
Angle of view
Weight 5.4 ozs. (152 gr.)



Super-Multi-Coated Takumar 50mm f/1.4

Newest high-speed 7-element standard lens for Spotmatic II. Super-multi-coated for higher light transmission, it has become a much brighter lens. You get improved contrast and richer colors. No irritating "ghost" images or flare when shooting directly against the light. An ideal all-around lens for color photography.

Lens element	7
Minimum aperture	f/16
Minimum distance 1.5 ft. (45	cm)
Angle of view	46°
Weight 8.8 ozs. (250	gr.)



Also super-multi-coated standard lens for Spotmatic II, it reduces flare and boosts contrast to a degree far beyond what was previously possible in optical technology. You can get pictures with more detail and richer colors than is possible with any other system at any price. It also features a tougher coating which means the super-multi-coated lenses are more scratch-resistant and durable.


Lens element 6
Minimum aperture f/16
Minimum distance 1.5 ft. (45 cm)
Angle of view 43°
Weight 8.4 ozs. (239 gr.)

Super-Takumar 85mm f/1.9


A new, ultra-fast 5-element lens which produces an image slightly larger than the standard lens. Perfect for available light portraiture, nature studies, and sport coverage. Used as a standard, general purpose lens by many photographers. Equipped with fully automatic diaphragm; supplied with special lenshood.

Lens element5
Minimum aperture f/16
Minimum distance 2.75 ft. (85 cm)
Angle of view 28°
Weight 12.3 ozs. (350 gr.)




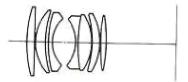



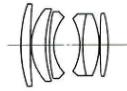



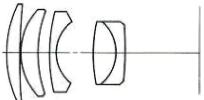






Super-Takumar 105mm f/2.8

A quality medium telephoto lens of 5 elements, with well corrected aberrations. Light-weight design for portability and easy handling. Recommended for scenery, portrait, news photos, other moderate telephoto effects. Equipped with fully automatic diaphragm; supplied with special lenshood.

Lens element	
Minimum aperture	f/22
	4 ft. (1.2 m)
Angle of view	23°
Weight	10.2 ozs. (290 gr.)



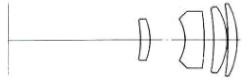


Super-Takumar 135mm f/3.5

Produces a brilliant image in all corners of the picture even with the diaphragm fully open. Indispensable for distant subject matter and for portrait. Ideal for close-ups of animals or plants even at a distance. Recommended as the ideal long telephoto lens for handheld camera operation. Equipped with fully automatic diaphragm; supplied with special lenshood.

Lens element4
Minimum aperture f/22
Minimum distance 5 ft. (1.5 m)
Angle of view 18°
Weight 12.1 ozs. (343 gr.)



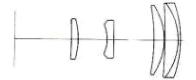


Super-Takumar 135mm f/2.5

A faster f/2.5 lens has joined the superb Takumar 135mm lens family. Well balanced, its total length is rather short so it is light in weight. Most suitable for shooting night scenes, stage, indoors, sports and snap portraits. An excellent lens also for colour photography.

Lens eleme	ent 5
Minimum	aperture f/22
	distance 5 ft. (1.5 m)
Angle of	view 18°
Weight	15.5 ozs. (444 gr.)

Super-Takumar 150mm f/4



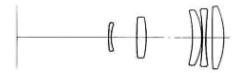


This new fully automatic 150mm Super-Takumar with a focal length three times as long as the standard lens has been designed and produced to suit the purpose of photographing subjects requiring an intermediate angle between the 135mm and 200mm lenses. So compact, so light-weight, it looks like a 135mm lens, yet it is only 7mm longer. New-type, all-purpose telephoto lens... for telephoto snaps, sceneries, sports, news events, stage photographs, nature life, etc.

Lens element	5
Minimum aperture	f/22
Minimum distance 6 ft. (1.8 m)
Angle of view	. 16.5°
Weight 11.3 ozs. (3	24 gr.)

Super-Takumar 200mm f/4



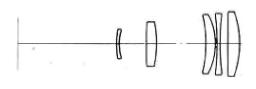


A new member to the superb Takumar telephoto lens family. Equipped with a fully automatic diaphragm. Compact, light, and elegantly designed for fast handleability.

Lens element	. 5
Minimum aperture f	22
Minimum distance 8.2 ft. (2.5	m)
Angle of view 12	.5°
Weight 19.3 ozs. (550 g	

Tele-Takumar 200mm f/5.6



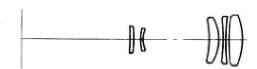

Small, compact and light-weight...that's the new Tele-Takumar 200mm f/5.6 lens. It weighs only slightly more than Super-Takumar 135mm. Still it produces professional quality resolution in hand-held telephotography. Equipped with pre-set

diaphragm; supplied with special lenshood.

Lens element	5
Minimum aperture	. f/22
Minimum distance 9 ft. (2.5 m)
Angle of view	12°
Weight 13.1 ozs. (37	70 gr.)


Super-Takumar 300mm f/4



Light enough for hand-held picture taking, this lens is the most ideal for spectacular telephotographic effects. Even with the diaphragm fully open, the aberrations are corrected to the greatest extent possible. Gives needle-sharp resolution to every corner of the picture. Equipped with fully automatic diaphragm; supplied

with special lenshood.

Lens element 5
Minimum aperture f/22
Minimum distance 18 ft. (5.5m)
Angle of view 8°
Weight 33.1 ozs. (946 gr.)

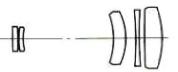


Tele-Takumar 300mm f/6.3



More compact and much lighter than the f/4, this lens is extremely suitable for hand-held outdoor telephotography. Features smooth helicoidal focusing and built-on lenshood. Also represents an exceptional value in long-focus lenses and is the choice of many professionals and advanced amateurs who require an extremely versa-

tile telephoto lens. Equipped with pre-set diaphragm.

Lens elem	ent5
Minimum	aperture f/22
Minimum	distance 18 ft. (5.5 m)
Angle of vi	ew 8°
Weight	25.7 ozs. (729 gr.)

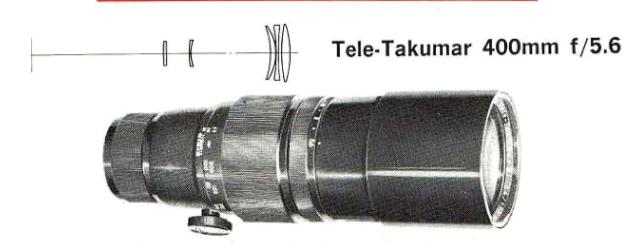

Especially designed for those professionals who specialize in outdoor sports, news and nature-life photography. Because of its f/5.6 aperture, this tele-lens is extremely compact and light for its focal length of 400mm. Also because of its portability, it can be easily hand-held for fast and successive shooting, depending upon the shutter speed to be used. Equipped with click-

stop manual diaphragm; supplied with special lenshood.

Lens elen	nent 5
Minimum	aperture f/45
Minimum	distance 27 ft. (8 m)
Angle of vi	iew 6°
Weight	45 ozs. (1300 gr.)

Takumar 500mm f/4.5





Comparatively light and small for its performance, this powerful long-focus lens brings the inaccessible within reach. Its bright f/4.5 image simplifies composition and focusing, and it produces edge-to-edge coverage of high resolution. Equipped with manual diaphragm; supplied with

special lenshood.

Lens	elen	nent					4
Minir	num	apert	ure			f/4	45
Minir	num	distan	ce		. 32.8 f	ft. (10 m	1)
Angle	e of v	iew					5°
Weigl	nt			. 122.5	ozs. ((3500 gr.	.)



Tele-Takumar 1000mm f/8




Photographs subjects which are too far away to be seen by the naked eye. The ultimate in fine optics for the photographer who specializes in news, sports, scientific or wildlife photography. Fast, accurate focusing with manual diaphragm. Furnished with built-on lenshood, rigid

Super-Takumar-Zoom 70mm - 150mm f/4.5

Proven by an impartial and authoritative test to be the best zoom lens for 35mm single-lens reflex. Extremely versatile zooming range from 70mm to 150mm for fast action shooting.

Lens eleme	ent 14
Minimum	aperture f/22
Minimum	distance 11.5 ft. (3.5 m)
Angle of v	iew 35° – 16.5°
Weight	42.6 ozs. (1209 gr.)

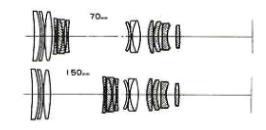




Super-Macro-Takumar 50mm f/4

The new Super-Macro-Takumar 50mm f/4 lens is equipped with a fully automatic diaphragm to further increase its high performance. The magnification range is from 1/2 to infinity, but by applying the Auto Extension Tubes, you can shoot from life size to infinity. The automatic diaphagm enables you to shoot such difficult subjects as moving insects, while holding your camera and looking through the viewfinder.

Lens element 4
Minimum aperture f/22
Minimum distance 0.77 ft. (0.234 m)
Angle of view 46°
Weight 8.74 ozs. (248 gr.)

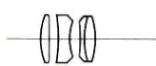




Bellows-Takumar 100mm f/4

Used with the standard Bellows Unit, this shortbarrel lens enables you to photograph from life size to infinity. Extremely convenient for closeups from a distance.

Lens element	5
Minimum aperture	f/22
Angle of view	24°
Weight	4.9 ozs. (139 gr.)

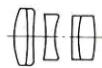



SPECIFICATIONS OF TAKUMAR LENSES

NAME OF LENSES	FOCAL LENGTH & MAXIMUM APERTURE	MINIMUM	LENS	DIAPHRAGM	MINIMUM FOCUSING DISTANCE		ANGLE OF VIEW	WEIGHT		FILTER SIZE	LENSHOOD SIZE	LENS CAP SIZE
2 2 27	72 - 210				m.	ft.	degrees	gr.	ozs.	mm	mm	mm
Super-Takumar Fish-Eye	17mm f/4	22	11	FA	0.2	0.66	180®	228	7.98	ВІ	-	60
Super-Takumar	20mm f/4.5	16	11	FA	0.2	0.65	94	251	8.79	77	58*	60
Super-Takumar	24mm f/3.5	16	9	FA	0.25	0.8	84	247	8.71	58	60*	60
Super-Takumar	28mm f/3.5	16	7	FA	0.4	1.3	75	218	7.6	49	51*	51
Super-Takumar	35mm f/2	16	8	FA	0.4	1.25	62	242	8.53	49	49*	51
Super-Takumar	35mm f/3.5	16	5	FA	0.45	1.5	62	152	5.4	49	49	51
Super-Multi-Coated Takumar	50mm f/1.4 ^②	16	7	FA	0.45	1.5	46	250	8.8	49	49	51
Macro-Takumar	50mm f/4	22	4	PS	0.208	0.68	46	265	9.3	49	_	51
Super-Macro-Takumar	50mm f/4	22	4	FA	0.234	0.77	46	248	8.74	49	_	51
Super-Takumar	55mm f/2 [®]	16	6	FA	0.45	1.5	43	215	7.5	49	49	51
Super-Multi-Coated Takumar	55mm f/1.8 ^②	16	6	FA	0.45	1.5	43	239	8.4	49	49	51
Super-Takumar-Zoom	70~150mm f/4.5	22	14	FA	3.5	11.5	16~35	1209	42.6	67	67*	70
Super-Takumar	85mm f/1.9	16	5	FA	0.85	2.75	28	350	12.3	58	58*	60
Bellows-Takumar	100mm f/4	22	5	PS	_	-	24	139	4.9	49	49*	51
Super-Takumar	105mm f/2.8	22	5	FA	1.2	4	23	290	10.2	49	49*	51
Super-Takumar	135mm f/3.5	22	4	FA	1.5	5	18	343	12.1	49	49*	51
Super-Takumar	135mm f/2.5	22	5	FA	1.5	5	18	444	15.5	58	58*	60
Super-Takumar	150mm f/4	22	5	FA	1.8	6	16.5	324	11.3	49	49*	51
Super-Takumar	200mm f/4	22	5	FA	2.5	8.2	12.5	550	19.3	58	58*	60
Tele-Takumar	200mm f/5.6	22	5	PS	2.5	8.2	12	370	13.1	49	49*	51
Tele-Takumar	300mm f/6.3	22	5	PS	5.5	18	8	729	25.7	58	58*	60
Super-Takumar	300mm f/4	22	5	FA	5.5	18	8	946	33.1	77	*	85
Tele-Takumar	400mm f/5.6	45	5	М	8	27	6	1300	45	77	水	85
Takumar	500mm f/4.5	45	4	М	10	32.8	5	3500	122.5	49	*	127
Tele-Takumar	1000mm f/8 ⁴	45	5	М	30	98	2.5	5500	192.5	49	*	143

All these lenses fit any Pentax model which has a 42mm threaded lens mount. BI=3 filters built-in. M=Manual. FA=Fully Automatic. PS=Preset. ①=Diagonal coverage. ②=Standard lens for Spotmatic II. ③=Standard lens for SP 500 ④=Supplied with wooden tripod and carrying cases. All lenses, including standard lenses purchased separately, are supplied with leather case, straps, front and rear caps. All filters and lenshoods are screw-in type unless otherwise indicated.

(*Lenshood supplied with lens. *Clip-on type)

Complete System of Honeywell Pentax Accessories for Close-Ups, Macrophotography, Photomicrography, and other Miscellaneous Accessories

EXTENSION TUBE SET

A set of 3 rings, #1, #2 and #3 of 9.5mm, 19mm and 28.5mm respectively. They may be used singly or in combination as desired. When all three are used simultaneously with the 55mm Super-Takumar lens, the subject is enlarged on film to a magnification of 1.17 life size.



AUTO-EXTENSION TUBE SET

New extension tube set of 3 rings, 9.5mm (#1), 19mm (#2) and 28.5mm (#3), with coupled automatic diaphragm release pins. Mounted singly or in combination between an Honeywell Pentax and a 55mm automatic diaphragm lens, this set of Auto-Extension Tubes permits focusing at magnification from 1.17× to 0.17 and operation of the automatic diaphragm.



HELICOID EXTENSION TUBE

Like the lens helicoid, the new Honeywell Pentax Helicoid Extension Tube extends from 16.8mm to 30.6mm. It serves the purposes of the Honeywell Pentax Extension Tubes $\sharp 2$ and $\sharp 3$. Mounted between an Honeywell Pentax and a 55mm lens, it permits photography at magnification from $0.30\times$ to $0.7\times$. It is extremely versatile variable extension ring.




BELLOWS UNIT I

Extremely flexible for ultra-close-up photography, the Bellows Unit I permits use of the camera's own lens. Provided with a special precision-calibrated gear shaft for reading continuous magnification from 0.62 to 2.45 with the standard 55mm Super-Takumar lens.



AUTO-BELLOWS & SLIDE COPIER

The Honeywell Pentax Auto-Bellows is a highly flexible close-up and macro-photographic instrument. The bellows extension is longer than the extension of the standard Bellows Unit. The Auto-Bellows is more versatile. With the double cable release supplied with the Auto-Bellows, you release the shutter and activate the automatic diaphragm simultaneously if you use a fully-automatic diaphragm lens. With its lens reverse system, you can use a lens in reversed position for higher macro resolution.

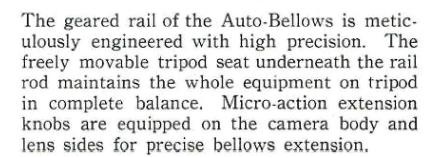

The Slide Copier attaches to the front end of the Auto-Bellows for easy duplication of color films.

With the Bellows-Takumar 100mm f/4 lens, you can photograph from $1.32\times$ magnification to infinity (∞) . You easily obtain high magnification with a 28mm to 35mm lens. By adding the standard Bellows Unit or Extension Tubes to the front or back of the Auto-Bellows, you can reach $10\times$ to $20\times$ magnification.



The Honeywell Pentax Auto-Bellows is a precisely designed close-up and macro equipment for professional photographers, research workers, scientists and specialists in close-up and macro works.



REVERSE ADAPTER

This allows 50mm or 55mm Takumar lenses to be used on bellows or extension tubes in reverse position for better macrophotographic results.

MICROSCOPE ADAPTER

Fitting between the Honeywell Pentax camera body and the microscope tube, this adapter permits utilization of the microscope's optics in place of the camera's lens. It may be used with any microscope which has a tube of 25mm diameter. Complete set consists of an adapter tube, fastening knob, and light sealing tube.

COPIPOD

Light-weight, but extremely rigid and sturdy. This portable copying stand fits all models of the Honeywell Pentax and can be used anywhere for copying documents, artwork, stamps, etc. Consists of a lens board complete with adapter rings for 46mm and 49mm lenses, and four calibrated telescoping legs. Sets up easily in seconds and is quickly disassembled. Supplied in small black pouch for storage or carrying convenience.

COPY STAND



CLIP-ON MAGNIFIER

For added convenience in critical focusing for close-ups, copying, macro-photography, etc. This can be easily attached to the slotted frame of the viewfinder of your Honeywell Pentax and enlarges your viewing image 2×.



CLOSE-UP LENS

Ground and polished to the superb Takumar lens standards and has screw-in mount for lenses of 49mm thread. Magnification of 0.32 to 0.15 with the 55mm Super-Takumar lens.



RIGHT ANGLE FINDER

Attaches quickly and easily to the viewfinder of all Honeywell Pentax models. Designed for added convenience in low angle and close-up photography, photomicrography, etc.



MIRROR ADAPTER

An interesting adapter for detective photographers, this allows you to take photographs by NOT pointing your camera and lens to your subjects. Fits the Takumar 200mm f/3.5, Super-Takumar 200mm f/4 and Tele-Takumar 300mm f/6.3 lenses only.



FILTERS AND LENSHOODS

Honeywell Pentax lenshoods are recommended for use whenever possible to guard against off-angle light which will cause flare in your pictures. (Most Takumar lenses including standard lenses purchased separately, are supplied with special lenshood.) Improve your picture quality by using the Honeywell Pentax filters that are precision-ground, polished and coated for your Honeywell Pentax.



HONEYWELL REPRONAR

An extremely versatile accessory for the Honeywell Pentax owner who specializes in color transparencies, the Repronar incorporates a specially modified Honeywell Pentax camera with a precision 50mm f/4 Takumar lens and a Strobonar electronic flash light source. It enables the user to duplicate original transparencies, correct for exposure errors and color balance, crop and enlarge portions of original transparencies, create special effects, and perform many other processes in color or black and white. Focusing and composition are quick and easy, and a built-in exposure scale takes the guesswork out of camera settings. Complete with filters, slide holders, lens cap and dust cover.



The Stereo Adapter consists of a stereo adapter and a viewer. The adapter is for taking stereo pictures (reversal color pictures) and the viewer is for viewing stereo color slides. The Stereo Adapter fits the front frame of the Takumar 55mm lens. The screw of the Stereo Adapter fastens itself onto the front frame of the lens after it is positioned in parallel with the camera body. Since the Stereo Adapter reduces the amount of light coming through the taking lens aperture, the diaphragm should be opened by a half f/stop for optimum exposure.

The Stereo Adapter is valuable accessory for making stereo pictures of "ikebana," hair dressing, architecture, sculpture, etc.

FILM MAGAZINE

For bulk film loading.









SOFT CASE JUMBO FRONT

Jumbo-size front for the soft camera case to contain an Honeywell Pentax with a 135mm, 105mm or 85mm telephoto lens.



LEATHER CASE FOR STANDARD LENSES

When the standard Takumar lens is removed from your Honeywell Pentax camera body, protect it in this leather case, available as a separate accessory.



CABLE RELEASE

With floating collar, thread mounting and locking screw for time exposure.



MISCELLANEOUS CAPS

Front and rear lens caps, and Honeywell Pentax body mount cap are also available.



Spotmeter III



Selective exposure photography ... the most advanced concept in reflected light meters. The Spotmeter III utilizes an optical reflect system which gives a 21° angle of view on the ground glass screen. In the centre of this viewing screen is a 1° circle which represents the angle covered by the meter's CdS sensing element. For this reason, it is extremely selective, permitting precise exposure reading at longer distances, and gives greater control over exposure problems. Light intensity is read directly from engraved scales on the viewing lens. For dark area reading, a scale illuminator glows when the button is depressed. Exposure is calculated easily by turning movable scales on the side of the meter. The Spotmeter III is also equipped with an IRE (Institute of Radio Engineers) scale, which is especially useful for television filming and other special readings.



All Honeywell Pentax camera equipment and accessories sold in the United States and Mexico are unconditionally guaranteed against defects of material or workmanship for a period of twelve months from date of purchase. Service will be rendered and defective parts will be replaced without cost to you within that period, provided the equipment has not been abused, altered, or operated contrary to instructions. Because the tolerances, quality, and design compatibility of lenses other than Pentax-Takumar lenses are beyond our control, damage caused by use of such lenses will not be covered by this warranty policy. Honeywell shall not be liable for any repair or alterations except those made with its written consent and shall not be liable for damages from delay or loss of use or from other indirect or consequential damages of any kind, whether caused by defective material or workmanship or otherwise; and it is expressly agreed that Honeywell's liability under all guarantees or warranties, whether expressed or implied, is strictly limited to the replacement of parts as hereinbefore provided. In order to validate your warranty, the warranty card must be filled in COMPLETELY and mailed to the factory within ten days of purchase.

PROCEDURE DURING 12-MONTH WARRANTY PERIOD

Any equipment which proves defective during the 12-month warranty period should be returned to your Honeywell Pentax dealer. The dealer will forward the equipment to the Honeywell factory or nearest Honeywell repair station. If the equipment is covered by warranty, repairs will be made and parts replaced free of charge, and the equipment returned prepaid to your dealer. If the equipment is not covered by warranty, Honeywell's regular charges will apply. All models, prices and specifications are subject to change without notice.

PENTAX INTERNATIONAL WARRANTY

If you intend taking your Pentax abroad during the warranty period, you may obtain a Honeywell Pentax international warranty card by writing to us. With your request, include your name, address, camera and lens serial numbers, dealer's name and address, and date purchased.



- **CAUTION** -Mercury Battery

The mercury battery should be kept dry. Don't touch it with your finger unnecessarily. Before inserting it into its housing, wipe its surface completely with a dry piece of cloth. Don't try to measure the short current or to charge the battery, to prevent rapid deterioration. Don't throw a used battery into fire ... it may explode. Keep the battery out of the camera's battery housing when you do not intend to use it for a lengthy period of time. See page 16.

Should you need additional information about your Honeywell Pentax, address your questions to: Customer Service at the address below:

Honeywell

P.O. Box 1010 Littleton, Colorado 80120



Honeywell PHOTOGRAPHIC

Printed in Japan 06466